

SANTOSH KUMAR GARG



KHANNA PUBLISHERS

By

SANTOSH KUMAR GARG

B.Sc. Engg. (Civil)

Topper (1969 Batch), Delhi University

Life Member—Indian Water Resources Society

Visiting Examiner & Freelance Consultant Engineer

Formerly

Superintending Engineer

Flood Control and Irrigation Department

Govt. of NCT of Delhi

and

RAJESHWARI GARG

(Associated Junior Coauthor)



KHANNA PUBLISHERS

4575/15, ONKAR HOUSE, OPP. HAPPY SCHOOL

DARYAGANJ, NEW DELHI-110002

Phone : 2324 30 42 ; Fax : 2324 30 43

Published by :
Vineet Khanna
for KHANNA PUBLISHERS
2-B, Nath Market, Nai Sarak
Delhi-110006.

© 1979 and onward.

*This book or part thereof cannot be reproduced in any form
without the written permission of the Authors and the
Publishers. The right to translation is, however,
reserved with the Authors alone.*

ISBN No. : 978-81-7408-230-4

First Edition : March, 1978
Twenty Fourth Edition : July, 2012 (Revised and Recomposed)

Price : Rs. 285.00

Typesetted at : Goswami Printers, Delhi-110063.

Dedication

*Dedicated to those,
who are continuing making efforts,
inspite of several odds,
for the upliftment of our beloved
and beautiful India.*

PREFACE TO THE REVISED TWENTY FOURTH EDITION

The first edition of this highly acclaimed book was published in March 1979, and contained hardly 350 pages. During the intervening period exceeding 33 years, about 1,80,000 copies have been sold through its twenty three editions and reprints. Additional 5500 copies are being printed for this revised 24th edition.

Due to the continuous and progressive revision and updation of the book, edition after edition, the size of the book has virtually tripled, since its first edition.

In order to reduce the number of pages and to control the continuously increasing thickness of the book, we have, in its present 24th revised edition, got the entire book recomposed into a new size of 24 cm × 16 cm, as against the previous size of 20 cm × 13 cm. This has helped in reducing the thickness of the book by about 20%, thereby making the book easier to handle and carry. All the drawings have also been redrawn on computer to make them of better quality.

The present edition has also been thoroughly revised and updated, by incorporating changes and amendments at several places.

We are hopeful that the students as well as the teaching community and field engineers and consultants, shall certainly find this edition much more useful.

The authors are delighted to know about the growing popularity of the book, not only among the average students but also among the toppers of the various engineering colleges of the country and abroad. It is also a matter of great pleasure to the authors as well as to the students to find questions being directly set from this book year after year, in the prestigious "Civil Services" and "Engineering Services" Exams. *The authors express their gratitude to all such learned Professors, Examiners and Paper-setters, who have valued this book worthy of such a high acclaim.*

Acknowledgements. In going through the twenty four editions of this book, the authors have accumulated enormous amount of debts from students and teachers over the years, who had written about their satisfaction with the book, and extended suggestions for the improvement of its various editions. *If the book today is so strikingly popular, they all deserve much of the credit. The authors certainly want them to know of their gratitude and openness to further suggestions, and are hence enlisting their names below :*

Sh. Satish Kumar Aggarwal—a student of M.R. Engineering College Jaipur, Rajasthan ; Sh. Rajesh Gupta and Sh. Ajay Gupta, students of Jabalpur Engineering College ; Sh. Ashfaq Ahmed of Shri Ram Rayons Kota.

Mr. Bismarop Ghosh—an ex student of Bengal Engineering College, Calcutta (who handsomely contributed to the objective section); Sh. H.S. Bhatia—Professor Delhi College of Engineering; Sh. A.M. Malek—the then Lecturer S.S. College of Engineering Sidsar, Bhavnagar, Gujarat; Sh. Pramod Kumar Tomar of Maharaja Surajmal Institute, New Delhi; Sh. A.P. Thankavel—lecturer A.K. College of Engg. Krishnakovil, Tamilnadu; Sh. Shri Ram—lecturer Madan Mohan Malviya Engg. College Gorakhpur, U.P.; Sh. Pawan Goyal—a student of MBM Engineering College, Jodhpur, Rajasthan; Sh. Krishan Mohan Kansal—a student of Delhi College of Engineering; Mr. Ganesh Sawleshwarkar of Victoria Jubilee Technical Institute Bombay; Mr. Pradeep Sharma—a student of I.I.T. Delhi; Mr. Azmal Kamal—a student of Jamia Millia Islamia, New Delhi; Mr. Ashok Kumar—a student of BIT Sindri Dhanbad; Mr. R.D. Punia—Dy Director Technical Education at Regional Engineering College, Kurukshetra, Haryana. Dr. V.S. Prasad—Professor at Regional Engg. College, Calicut; Mr. A.M. Malek—Asstt. Professor at L.D. College of Engg. Ahmedabad, Mr. B.J. Bhaskar Reddy from Hyderabad; Mr. Santhanam Krishnan—an M. Tech. student of IIT Delhi, Mr. Bibek Bastola of Nepal; etc., etc.

The authors also want to thank and acknowledge the receipt of numerous sms's, showering praises on the books of Env. Engg. Vol. I and II both, from several students and teachers, like Ms Rumpa, Mr. Dilip G. Patil, Mr. Sandip Kr. Das (Lecturer), Mr. Manish Kr., Mr. Noopur, etc. etc.

The authors further desire to record their special gratitudes and thanks to Prof. Kapil Gupta of IIT, Bombay, due to whose help, we were able to include photographs of aerated grit chambers and aerated lagoons as existing in Mumbai, along with giving details of the disposal of sewage into the Mumbai sea.

The authors also record their thanks to the Publishers and Printers for promptly printing this revised edition. The senior author also wants to record his unforgettable sincere gratitudes towards one of his old professor, Prof. R. Naryanan, who infact provided the inspiration to the author to start writing books, when he was highly depressed in his life at its prime stage due to medical problems.

Since the entire book in this edition has been recomposed afresh and all the drawings and sketches have been redrawn, it is very much possible that some new typing errors might have crept in. The authors will certainly be grateful if all such misprints are brought to their notice for making amends in the future editions of the book.

July 11, 2012

Santosh Kr Garg
With

Rajeshwari Garg
Res.: 3A/2 WEA, Sat Nagar
Karol Bagh, New Delhi-110005
Mobile for sms: (+91) 9810079973

Contents:

Interconversion of fps, cgs, MKS and S.I. Units	(xix)
CHAPTER	
1. Introduction to the Subject	1
1.1 Systems of Sanitation	1
1.2 Types of Sewage and Types of Sewerage Systems	2
1.3 Components of a Sewerage System	4
1.4 Design and Planning of a Sewerage System	4
1.5 Financing the Sewerage Projects	5
1.6 Liability for Damages Caused by Insufficient or Inefficient Sewerage Works	5
2. Estimating the Design Sewage Discharge	7
2.1 Estimating the Sewage Discharge	7
Design Periods and Future Forecasts	
2.2 Design Periods for Different Components of a Sewerage Scheme	8
2.3 Future Forecasts and Estimating Design Sewage Discharge	9
2.4 Variations in Sewage Flow and their Effects on the Design on the Design of Various Components of a Sewerage Scheme	10
3. Estimating the Peak Drainage Discharge	13
3.1 Introduction	13
3.2 The Runoff Process and Peak Runoff Rate	13
3.3 Estimating the Peak Runoff	14
4. Hydraulic Design of Sewers and S.W. Drain Sections	36
4.1 General Introduction	36
4.2 Difference in the Design of Water Supply Pipes and Sewer Pipes	36
4.3 Provision of Free board in Sewers and S.W. Drains	37
4.4 Hydraulic Formulas for Determining Flow Velocities in Sewers and Drains	38
4.5 Maximum and Minimum Velocities to be generated in Sewers	41
4.6 Effect of Flow Variation on Velocity in a Sewer	46
4.7 Hydraulic Characteristics of Circular Sewer Sections Running Full or Partially Full	47
4.8 Use of Tables and Nomograms for Hydraulic Computations for the Design of Sewers	67
4.9 Limitations on Depth of Flow due to Ventilation Considerations	71
4.10 Egg-shaped Sewers and Hydraulically Equivalent Sections	71
4.11 Design of Storm Water (SW) Drains	71

CHAPTERS	PAGES
5. Sewers, Their Construction, Maintenance and Required Appurtenances	85
5.1 Introduction	85
5.2 Shapes of Sewer Pipes	85
5.3 Forces Acting on Sewer Pipes	85
5.4 Sewer Materials	92
5.5 Laying and Testing of Sewer Pipes	102
Sewer Appurtenances	
5.6 Man holes	110
5.7 Drop Man holes	114
5.8 Lamp Holes	1116
5.9 Clean Outs	116
5.10 Street Inlets, Called Gullies	116
5.11 Catch Basins or Catch Pits	117
5.12 Flushing Tanks	117
5.13 Grease and Oil Traps	119
5.14 Inverted Siphons	121
5.15 Storm Water Regulators or Storm Relief Works	125
Maintenance, Cleaning and Ventillation of Sewers	
5.16 Maintenance of Sewers	127
5.17 Cleaning of Sewers	128
5.18 Ventillation of Sewers	130
6. Pumps For Lifting Sewage	134
6.1 Necessity of Pumping Sewage	134
6.2 Types of Pumps	135
6.3 Pumping Stations	141
7. Quality and Characteristics of Sewage	147
7.1 Importance of Study	147
7.2 Decay or Decomposition of Sewage	147
Characteristics of Sewage	
7.3 Physical Characteristics of Sewage and their Testing	153
7.4 Chemical Characteristics of Sewage and their Testing	154
7.5 Population Equivalent	171
7.6 Relative Stability	172
7.7 Collection of Sewage Samples for Physical and Chemical Testing	173
7.8 Bacteriological Characteristics and Testing	173
8. Disposing of the Sewage Effluents	185
Disposal by Dilution	
8.1 Conditions Favouring Disposal by Dilution	188
8.2 Standards of Dilution for Discharge of Wastewaters into Rivers	189
8.3 Disposal of Wastewaters in Rivers and Self Purification of Natural Streams	193

CHAPTERS	PAGES
8.4 Disposal of Wastewaters in Lakes and Management of Lake Waters	212
8.5 Disposal of Wastewaters in Sea	217
Disposal on Land	
8.6 Disposal of Sewage Effluents on Land for Irrigation	219
8.7 Quality Standards for Wastewater Effluents to be Discharged on Land for Irrigation	222
8.8 'Effluent Irrigation' and 'Sewage Farming'—Difference Thereof	224
8.9 Methods of Applying Sewage Effluents to Farms	224
8.10 Sewage Sickness	225
8.11 Crops grown in Sewage Farms and Their Hygienic Aspects	226
8.12 Dilution Method Vs Land Disposal Method for Disposal of Sewage	226
9. Treatment of Sewage	230
9.1 Classification of Treatment Processes	230
Screening	
9.2 Types of Screens, Their Designs and Cleaning	235
9.3 Comminutors	241
9.4 Disposal of Screenings	242
Grit Removal Basins	
9.5 Settling of Discrete Particles (Type I Sedimentation) in Waste Waters	243
9.6 Grit Chambers	249
9.7 Constant Velocity Horizontal Flow Grit Channels	250
9.8 Aerated Grit Channels	250
9.9 Detritus Tanks	253
Tanks for Removing Oils and Grease	
9.10 Skimming Tanks	254
9.11 Vacuators	255
9.12 Disposal of Skimmings	255
9.13 Necessity and Use of Skimming Tanks in India	256
Sedimentation	
9.14 Necessity of Sedimentation in Treatment of Waste Water	256
9.15 Sedimentation Tanks (Types and Designs)	256
Sedimentation Aided with Coagulation	
9.16 Chemical Precipitation and Coagulation	275
9.17 Merits and Demerits of Coagulation Process in Sewage Treatment	275
Secondary Treatment through Biological Filtration of Sewage	
9.18 Introduction to Sewage Filtration	278
9.19 Contact Beds for Biological Filtration of Sewage	279
9.20 Intermittent Sand Filters for Biological Filtration of Sewage	281
9.21 Trickling Filters for Biological Filtration of Sewage	283

CHAPTERS	PAGES
9.22 Recirculation of Treated Sewage and its Use in High Rate Trickling Filters	299
9.23 Other Miscellaneous Types of Filters	313
Secondary Sedimentation	
9.24 Secondary Settling Tanks or Humus Tanks	314
Digestion and Disposal of Primary and Secondary Sludge	
9.25 Sludge and its Moisture Content	316
9.26 Sludge Digestion Process	318
9.27 Stages in the Sludge Digestion Process	319
9.28 Factors affecting Sludge Digestion and their Control	320
9.29 Sludge Digestion Tanks or Digestors	322
9.30 Disposal of Digested Sludge	333
9.31 Use of Lagoons for Disposal of Raw Sludge	345
Secondary Treatment through Activated Sludge Process	
9.32 Definition of Activated Sludge Process	346
9.33 Various Operations and Units of an Activated Sludge Plant	347
9.34 Bulking and Foaming Sludge in an Activated Sludge Treatment Plant	355
<i>Design Considerations Involved in an Activated Sludge Plant</i>	
9.35 Aeration Tank Loadings	356
9.36 Sludge Volume Index	362
9.37 Sludge Recycle and Rate of Return Sludge	363
9.38 Wasting of Excess Sludge	364
9.39 Modifications of the Basic Activated Sludge Process	364
9.40 Size and Volume of the Aeration Tank	369
9.41 Oxygen requirement of the Aeration Tank	371
9.42 Advantages and Disadvantages of an Activated Sludge Plant	377
9.43 Activated Sludge Process Vs Trickling Filter Process, and the Choice of One	377
Secondary Treatment through Rotating Biological Contractors	
9.44 Rotating Biological Contractors (RBC)	379
Oxidation Ponds and Aeration Lagoons	
9.45 Oxidation Ponds and Stabilisation Ponds	380
9.46 Oxidation Ditches (Pasveer Type) or Extended Aeration Lagoons	386
9.47 Mechanically Aeriated Lagoons	388
Anaerobic Stabilisation Units	
9.48 Anaerobic and Facultative Stabilisation Ponds	390
9.49 Septic Tanks	390
9.50 Imhoff Tanks	408
9.51 Clarigesters	415
9.52 High Rate Anaerobic Systems	416
Chlorination of Sewage	
9.53 Disinfection of Sewage by using Chlorine	422

CHAPTERS	PAGES
(xiii)	
10. Process Design of a Complete Sewage Treatment Plant	427
10.1 Hydraulic Design and Detailing of a Complete Sewage Treatment Plant of 1.5 MLD (Av. Annual Flow) to be constructed at Block I of Dalhausie Township	427
11. Treatment of Industrial Wastewaters	436
11.1 Introduction	436
11.2 Methods of Treating Industrial Wastewaters	436
Pollution Characteristics of Certain Typical Indian Industries	
11.3 Thermal Pollution	441
12. Excreta Disposal in Unsewered and Rural Areas	456
12.1 General Introduction	457
12.2 Privies of a Conservancy System of Sanitation	458
13. Sewage Collection from Houses and Buildings	466
13.1 General Introduction	466
13.2 General Principles Governing the Design of a Sanitary Plumbing System	466
13.3 Functions and Types of Traps being used in Sanitary Plumbing Systems	467
13.4 Systems of Plumbing	471
13.5 Sewerage Plans of Buildings and Design of Sewer Pipes	474
13.6 Testing of House Sewers	477
13.7 Sanitary Fittings and Other Accessories	477
13.8 Ventillation of House Drains	486
13.9 Minimum Sanitary Fixtures Required for Different Types of Buildings	487
13.10 Waste Water Recycling in Buildings	494
14. Disposal of Municipal and Industrial Solid Wastes	498
14.1 Definition, Introduction, and Necessity of Safe Disposal of Solid Wastes	498
Municipal Solid Waste (MSW)	
14.2 Composition and Quantity of the Generated Municipal Solid Waste (MSW) or Refuse	499
14.3 Collection and Transportation of Municipal Solid Waste (MSW)	502
14.4 Separation for Recycling and Reuse of Plastics, Paper, and Glass from the Municipal Solid Waste (MSW)	503
14.5 Disposal of Municipal Solid Waste (MSW)	506
Industrial Solid Wastes	
14.6 Classification of Industrial Solid Wastes, and Extent of Generation of these Wastes in India	526
14.7 Storage, Transportation, and Disposal of Industrial Solid Wastes	528

Existing Legislation to Manage Solid Wastes	
14.8 Existing Laws to Regulate and Control the Disposal of Municipal and Industrial Solid Wastes in India	529
International Treaty on Imports and Exports of Hazardous Wastes	
14.9 Basel Convention	541
Environmental Impacts of Solid Wastes	
14.10 Impacts of Improper Disposal of Solid Wastes on Human Health and Environment	546
15. Disposal of Environmentally Hazardous Biomedical, Radioactive and E-Wastes	549
Biomedical Wastes	
15.1 Biomedical Wastes and Their Impacts on Human Health and Environment	549
15.2 Legislative Laws on Management of Biomedical Wastes in India	549
Collection and Treatment of Biomedical Wastes	
15.3 Colour Coding of Biomedical Wastes and Their Collection in Different Coloured Bins or Bags	550
15.4 Collection of Sharp Wastes	552
15.5 Labelling and Identification of Biomedical Wastes	552
15.6 Storage of Biomedical Wastes	552
15.7 Transportation of Biomedical Wastes to the Treatment and Disposal Sites	553
15.8 Treatment and Disposal of Biomedical Wastes	553
Radioactive Wastes	
15.9 Radioactive Isotopes or Radionuclides	562
15.10 Nuclear Fission and Generation of Nuclear Power	565
15.11 Radioactive Disintegration and Radioactive Radiations	566
15.12 Impact of Radioactivity on Biological Environment	568
15.13 Sources of Radioactivity in the Environment	575
15.14 Classification of Radioactive Wastes and Their Disposal	580
E-Wastes	
15.15 Definition of E-Waste	587
15.16 Classification of E-Waste	587
15.17 Adverse Health Environmental Impacts of E-Waste and Its Improper Disposal	587
15.18 Menace of E-Waste in India	589
16. Ventilation of Buildings for Controlling Indoor Air Pollution	594
16.1 Sources, Effects and Status of Indoor Air Pollution	594
16.2 Definition of Ventilation	594

16.4 Purpose of Ventilation	597
16.5 Extent of Ventilation Required and Ventilation Standards	597
16.6 Systems of Ventilation	599
17. The Environment, its Pollution and Present Status	608
17.1 Biosphere and Environment	608
17.2 Physical and Biological Environment	608
17.3 Ecosystem and Ecological Balance of Nature	609
17.4 Impact of Man on Biosphere	610
17.5 Pollution and Conservation of Environment	610
17.6 Status of Administrative Control on Environment in India	612
17.7 Status of Water Pollution-Monitoring and Control in India	614
17.8 Status of Air Pollution-Monitoring and Control in India	619
18. Engineering of Air Pollution, Its Control, and Monitoring	631
• 18.1 Definition of Air Pollution	631
• 18.2 Natural and Man-made Air Pollution	631
• 18.3 History and Causes of Air Pollution	632
• 18.4 Various Pollutants Causing Pollution of Air	633
• 18.5 Effects of Air Pollution	641
Predicting Concentrations of Air Pollutants	
18.6 Dispersion of Air Pollutants into the Atmosphere	646
18.7 Predicting Pollutant's Concentrations Through Dispersion Models and Equations	659
Air Pollution Control	
18.8 The Natural Self-Cleansing Properties of the Environment	670
18.9 Dilution Method for Controlling Air Pollution from Stationary Sources (Factories)	672
18.10 Controlling Air Pollution From Stationary Sources by Installing Engineering Devices	672
18.11 Controlling Air Pollution from Automobiles	684
19. Global Environmental Issues	690
• 19.1 Acid Rain—A Regional Environmental Challenge	690
• 19.2 Ozone Depletion—The most dreaded aspect of air pollution	693
• 19.3 Global Warming and Climate Change—A Global Environmental Challenge	702
20. Noise Pollution	713
• 20.1 Definition and Introduction	713
• 20.2 The Effects of Noise	713
20.3 Characteristics of Sound and its Measurement	715
• 20.4 Levels of Noise	717
20.5 Noise Rating Systems	723
• 20.6 Noise Level Standards	728
20.7 Sources of Noise and their Noise Levels	730
• 20.8 Noise Abatement and Control	730
21. Environmental Impacts of Thermal Power Plants, Mining and Water Resources Projects	733

CHAPTERS	PAGES
21.2 Environmental Impacts of Thermal Power Plants	733
21.3 Environmental Impacts of Mining	734
21.4 Environmental Impacts of River Valley Projects	737
Environmental Impacts of Sardar Sarovar Dam Project—A Case Study	
21.5 Salient Features of the Narmada Sagar and Sardar Sarovar Dam Projects	740
21.6 Environmental Impacts of Sardar Sarovar Project	749
21.7 Assessment of Environmental Losses and Economic Viability of Sardar Sarovar and Narmada Sagar Projects	761
21.8 World Bank's Views on Environmental Impacts of Sardar Sarovar Project	762
22. Preparing Environmental Impact Assessments of Polluting Industrial Projects	766
22.1 Environment Impact Assessment (EIA) of Polluting Development Projects in India	766
22.2 India's Environmental Impact Assessment Notification, 1994	766
22.3 India's Environmental Impact Assessment Notification, 2006	768
22.4 Details Constituting an Environmental Impact Assessment	796
22.5 Methodology for Preparing Environmental Impact Assessment	800
22.6 Role of an Environmental Engineering/Consulting Firm in Obtaining Environmental Clearance for a Project	802
22.7 Role of Regulatory Agencies and Control Boards in Obtaining Environmental Clearance for a Project	803
22.8 Role of General Public in Environmental Clearance	805
23. Chapterwise Objective Multiple Choice Questions (For Chapter 1 to 22 ; 403 Questions, with Answers and Hints for Solving Starred Questions)	806
24. Test Paper on Objective Questions (Objective Questions with Answers and Hints for Solving Starred Questions)	852
25. Objective Questions of the Combined Engineering Services Competitive Exams (From Year 1993 to year 2006, with Answers and Hints for Solving Starred Questions)	860
26. Objective Questions of the AMIE (Section B) Exams (From Year 1993 to 2004-with Answers and Hints for Solving Starred Questions)	912
27. Conventional Questions of the Civil Services (IAS) Exams for the Past Years (From Year 1979 to 2009-with Solutions to Numerical Exams)	929
28. Conventional Questions of Engineering Services Exams for the Past Years	961

CHAPTERS	(xvii)	PAGES
APPENDIX TABLES		
Table A-1. Density of Dry Air at Different Temperatures and Different Pressures	...	988
Table A-2. Viscosity of Dry Air at 100 kPa (About 1 Atm. Pressure)	...	988
Table A-3. Saturation Values of D.O. in Fresh Waters at different Temperatures and 1 Atmospheric Pressure	...	992
Table A-4. Saturation Values of D.O. for Different Types of Waters—at different temperatures and 1 Atmospheric pressure	...	993
Table A-5. Properties of Air at Standard Conditions (i.e. 1 Atm. Pressure and 298°K Temp.)	...	993
Table A-6. Important Properties of Water	...	994
Table A-7. Frequently used Constants	...	995
Table A-8. Periodic Table	...	996
Table A-9. Basic Units used in Radiation and Radioactivity	...	997
Table A-10. List of Countries Who have Signed the Montreal Protocol	...	998
Table A-11. Useful Conversion Factors	...	1000
Bibliography	...	1002—1010
Index	...	1011—1020

Conversion of f.p.s., c.g.s., and S.I. Units into M.K.S. Units

Conversion of f.p.s. Units into M.K.S.	Conversion of c.g.s. Units into M.K.S.	Conversion of S.I. Units into M.K.S.
$1 \text{ ft} = 0.3048 \text{ m}$ $1 \text{ mile} = 1.609 \text{ km}$ $\quad = 1609 \text{ m}$ $1 \text{ inch} = 0.0254 \text{ m}$	For Length $1 \text{ cm} = 0.01 \text{ m}$ $1 \text{ micron } (\mu) = 10^{-6} \text{ m}$	S.I. unit is same i.e. m
$1 \text{ ft}^2 = 0.093 \text{ m}^2$ $1 \text{ mile}^2 = 2.59 \text{ km}^2$ $\quad = 259 \text{ ha}^\dagger$ $1 \text{ acre} = 0.4347 \text{ ha}$	For Area $1 \text{ cm}^2 = 10^{-4} \text{ m}^2$	S.I. unit is same i.e. m^2 .
$1 \text{ ft}^3 = 0.0283 \text{ m}^3$ $1 \text{ acre ft} = 1233.6 \text{ m}^3$ $\quad = 0.123 \text{ ha. m}$ $\quad = \frac{1}{2} \text{ cusec. day}$ $1 \text{ gallon (i.e. imp. gallon)} = 4.546 \text{ litres}$ $1 \text{ U.S. gallon} = 3.785 \text{ litres}$ $1 \text{ ft}^3/\text{sec (cusec)} = 0.0283 \text{ m}^3/\text{sec (cumec)}$ $1 \text{ cusec} = 2.447 \text{ MLD (Million litres per day)}$ $1 \text{ cusec} = 0.538 \text{ MGD (Million gallon per day)}$	For Volume and Discharge $1 \text{ cm}^3 = 10^{-6} \text{ m}^3$ $1 \text{ cm}^3/\text{sec} = 10^{-6} \text{ m}^3/\text{sec}$	S.I. unit of volume is also same i.e. m^3 . S.I. unit of discharge is also same i.e. m^3/s (cumecs)
$1 \text{ lb}^* = 0.454 \text{ kg}^*$ $1 \text{ poundal} = 0.031 \text{ lb}^*$ $\quad = 0.0141 \text{ kg}^*$ $1 \text{ lb/in}^2 (\text{psi}) = 703 \text{ kg}^*/\text{m}^2$ $1 \text{ lb/ft}^2 = 4.882 \text{ kg}^*/\text{m}^2$	For Force $1 \text{ dyne} = \frac{1}{981} \text{ gm}^*$ $\quad = 1.02 \times 10^{-6} \text{ kg}^*$ For Pressure $1 \text{ kg}^*/\text{cm}^2 = 10^4 \text{ kg}^*/\text{m}^2$ $\quad = 10 \text{ m of water head}$	$1 \text{ Newton (N)} = \frac{1}{9.81} \text{ kg}^*$ $\quad = 0.102 \text{ kg}^*$ $\quad = 10^5 \text{ dynes}$ $1 \text{ Pascal (P)} = 1 \text{ N/m}^2$ $\quad = 0.102 \text{ kg}^*/\text{m}^2$ $1 \text{ kPa} = 1000 \text{ Pa}$ $\quad = 102 \text{ kg}^*/\text{m}^2$ $\quad = 0.102 \text{ m of water head}$ $100 \text{ kPa} = 10.2 \text{ m of water head}$

† ha stands for hectares ; $1 \text{ ha} = 10^4 \text{ m}^2$

*lb here is lb wt., gm here is gm wt., and kg here is kg wt.

Conversion of f.p.s. Units into M.K.S.	Conversion of c.g.s. Units into M.K.S.	Conversion of S.I. Units into M.K.S.
1 lb/cft = 16.02 kg/m ³	For Density (ρ) 1 gm/cm ³ = 1000 kg/m ³	S.I. unit of density is same i.e. kg/m ³ .
1 lb/cft = 16.02 kg ³ /m ³	For unit wt. or specific wt. (γ or $w = \rho \cdot g$) 1 gm ³ /cm ³ = 1000 kg ³ /m ³	1 N/m ³ = 0.102 kg ³ /m ³ 1 kN/m ³ = 102 kg ³ /m ³
1 ft lb ³ = 1.356 kg ³ /m ³ = 1.356 Joule (J)	For Energy 1 Erg or 1 g-cm ² /sec ² 10 ⁷ Ergs = 1 kg m ² /sec ² = 1 Joule	S.I. unit is Joule where 1 Joule = 1 N.m = 1 kg-m ² /sec ²
1 Btu or BTU = 0.252 k.cal = 1.055 kJ	For Heat Energy 1 cal = 10 ⁻³ k.cal	1 kJ = 0.239 k.cal
1 ft lb ³ /sec = 0.138 kg ³ m/sec 1 H.P. (f.p.s.) = 550 ft ³ lb/sec = 75.9 kg ³ m/sec = 746 watts	For Power 1 gm ³ cm/sec = 10 ⁻⁵ kg ³ m/sec 1 H.P. (metric) = 75 kg m/sec = 735 watts	S.I. unit is watt, where 1 Watt (W) = 1 J/s = 1 Nm/s = 0.102 ³ kg ³ m/sec = $\frac{1}{735}$ H.P. (metric)
f.p.s. unit is lb ³ sec/ft ² , where 1 lb ³ sec/ft ² = 4.887 kg ³ sec/m ² (mks)	For Dynamic Viscosity (η or μ) (c.g.s. unit is dyne. sec/cm ² or Poise 1 Poise = 0.0102 kg sec/m ² 1 centi poise (cP) = 10 ⁻² P	S.I. unit is N.s/m ² or Pa.s 1 N.s/m ² = 1 Pa.s = 10 Poise = 0.102 kg ³ sec/m ²
1 ft ² /sec = 0.093 m ² /sec	For Kinematic Viscosity $\left(\nu = \frac{\mu}{\rho} \text{ or } \frac{\eta}{\rho} \right)$ 1 cm ² /sec (Stoke) = 10 ⁻⁴ m ² /sec 1 centi stock = 10 ⁻² Stock	S.I. unit is same as in M.K.S. : i.e. m ² /s 1 m ² /s = 10 ⁴ Stoke (St)

[Note. w for water = 1000 kg/m³ = 9.81 kN/m³ = 0.010 N/m³]

Introduction

1.1. Systems of Sanitation

The waste products of a society including the human excreta had been collected, carried and disposed of manually to a safe point of disposal, by the sweepers, since time immemorial. This primitive method of collecting and disposing of the society's wastes, has now been modernised and replaced by a system, in which these wastes are mixed with sufficient quantity of water and carried through closed conduits under the conditions of gravity flow. This mixture of water and waste products, popularly called **sewage**, thus automatically flows up to a place, from where it is disposed of, after giving it suitable treatments; thus avoiding the carriage of wastes on heads or carts. The treated sewage effluents may be disposed of either in a running body of water, such as a stream, or may be used for irrigating crops.

This modern water-carried sewerage* system has completely replaced the old conservancy system of sanitation in the developed countries like U.S.A. However, India being a developing country, still uses the old conservancy system at various places, particularly in her villages and smaller towns. The metropolitan cities and a few bigger towns of our country, no doubt, have generally been equipped with the facilities of this modern water carriage sewerage system; and attempts are being made to equip the remaining cities and towns with this system, as soon as funds become available.

The modern water-carried sewerage system is preferred to the old conservancy system, because of its following advantages:

(i) The water carriage system is more hygienic, because in this system, the society's wastes have not to be collected and carried in buckets or carts, as is required to be done in the conservancy system.

The free carriage of night soil in carts or as head load, which is required in the conservancy system, may pose health hazards to sweepers and other residents, because of the possibilities of flies and insects transmitting disease germs from these accessible carts to the resident's foods and eatables; whereas, in modern sewerage system, no such danger exists, because the polluted sewage is carried in closed conduits, as soon as it is produced.

(ii) In the conservancy system, the waste products are generally buried underground, which may sometimes pollute the city's water supplies, if the water supply pipes happen to pass through such areas or the wells happen to draw water through such areas.

*The term sewerage is applied to the art of collecting, treating and finally disposing of the sewage.

(iii) In the conservancy system of sanitation, the entire day's human feces are collected and then disposed of in the morning, once a day. Thus, from this type of latrines, pungent smells may continue to pollute the surroundings for the entire day. But since in the water carried system, the human excreta is washed away as soon as it is produced, no such bad smells are produced. Moreover, in the conservancy system of sanitation, the waste waters from bath rooms, wash basins, kitchen sinks, etc.; is carried through open road side drains, as this is supposed to be not so foul, since it does not contain human excreta. But these road side drains are generally abused by children or adults for passing their stools, particularly at night hours, thus creating foul and more unhygienic conditions. No such problems exist in the water carriage system.

(iv) In water carriage system, the sewage is carried through underground pipes (popularly called sewers) which owing to their being underground, do not occupy floor area on road sides or impair the beauty of the surroundings. The road side drains carrying foul liquid in the conservancy system, will no doubt pose such problems.

(v) The water-carried system may allow the construction of latrines and bath-rooms together [popularly called water-closets (W.C.)], thus occupying lesser space with their compact designs. This system is also very helpful for multistoreyed buildings, where the toilets, one above the other, can be easily constructed, and connected to a single vertical pipe.

In spite of these advantages of the modern water-carried system, it has not been possible to completely replace the old conservancy system, mainly because huge capital funds (of the order of ₹ 10,000 to 15,000 per person) are required for the construction of such a system. Besides the huge initial investments, the RMO expenses are also high, which make it difficult to replace the simpler and cheaper conservancy system. Moreover, for the functioning of sewerage system, ample amount of water must be made available to the people, and hence, reliable and assured water supply system must, first, be installed, before installing the sewerage system.

1.2. Types of Sewage, and Types of Sewerage Systems

This modern water carriage sewerage system not only helps in removing the domestic* and industrial** wastewaters, but also helps in removing storm water drainage***. The run off resulting from the storms is also sometimes

*Domestic sewage consists of liquid wastes originating from urinals, latrines, bath-rooms, kitchen sinks, wash basins, etc. of the residential, commercial or institutional buildings. This sewage is generally extremely foul, because of the presence of human excreta in it.

**Industrial sewage consists of liquid wastes originating from the industrial processes of various industries, such as Dyeing, Paper making, Brewing, etc. The quality of the industrial sewage depends largely upon the type of industry and the chemicals used in their process waters. Sometimes, they may be very foul and may require extensive treatment before being disposed of in public sewers.

The sum total of domestic and industrial sewage, may be termed as sanitary sewage or simply sewage.

***The run-off resulting from the rain storms was used to be called storm sewage, but the modern approach is to call it storm drainage or simply drainage, so as to differentiate it from sewage, which is much more foul as compared to the drainage, and requires treatment before disposal.

carried through the sewers of the sewerage system, or more generally is carried through separate set of drains (open or closed) directly discharging their drainage waters into a body of water, such as a lake or a river. Since the rain run-off is not so foul as the sewage is, no treatment is generally required to be given to the drainage discharge. When the drainage is taken along with sewage, it is called a combined system and when the drainage and sewage are taken independently of each other through two different sets of conduits, it is called a separate system. Sometimes, a part of drainage water, especially that originating from the roofs or paved courtyards of buildings, is allowed to be admitted into the sewers; and similarly sometimes, the domestic sewage coming out from the residences or institutions, etc., is allowed to be admitted into the drains, the resulting system is called a partially separate system.

Strictly speaking, it is generally advantageous and economical to construct a 'separate system' at least in the bigger cities and towns. But in practice, it is generally not possible to attain a 'truly separate system' because some rain water may always find its way into the sewers either through wrong house sewer connections or through open manhole covers. Similarly, wherever the authorities find insufficient sewer capacities, they divert part of the sewage into the storm water drains, thus making most of our existing systems as 'partially separate' only.

In the modern days, a 'separate system' is generally preferred to a 'combined system', although each individual case should be decided separately on merits, keeping the following points into consideration:

(i) A separate system will require laying two sets of conduits, whereas, a combined system requires laying only one set of bigger sized conduits, thus making the former system costlier. Moreover, the separate conduits cannot be laid in congested streets and localities, making it physically unfeasible.

(ii) The sewer pipes in the combined system are liable to frequent silting during the non-monsoon season (when the flows in them are quite less*) unless they are laid at sufficiently steeper slopes, which, in turn, will make them deeper, requiring more excavation and pumping, thereby making them costlier.

(iii) In a combined system, the less-foul drainage water gets mixed with the highly foul sewage water, thus necessitating the treatment of the entire flow, needing more capacity for the treatment plant, thereby making it costlier. Whereas, in the separate system, only the sewage discharge is treated and the drainage discharge is disposed of without any treatment.

(iv) In case, flooding and backing up of sewers or drains occur due to excessive rains, more foul and insanitary conditions will prevail in the case of combined sewage than in the case of storm drainage alone.

(v) Since the sewer lines are generally laid deep and at steeper slopes, as compared to the storm water surface drains, pumping of sewage and often no

*Since heavy rain storms concentrated for a period of 3 months or so do occur, and there are poor water supplies here in India, the ratio of the 'drainage' to 'sewage' works out to be as high as 20 to 30. Thus, during non-monsoon periods, only 1/20th to 1/30th of the designed discharge will be passing through the sewers, if the combined system

pumping of drainage is required in a separate system. Whereas, the entire discharge will have to be pumped, if the sewage and drainage discharges are mixed together; thereby making the combined system more costly.

(vi) The economy of the two systems must be worked out for each individual project, and the economical system be adopted, if physically feasible.

1.3. Components of a Sewerage System

A sewerage system consists of a network of sewer pipes laid in order to carry the sewage from individual homes to the sewage treatment plant. This network of sewers may consist of *house sewers* (or individual house connections); *lateral sewers*; *branch sewers* (or submains); *main sewers* (generally called *trunk sewers*); *outfall sewer* (i.e. the sewer which transports sewage to the point of treatment); etc. *Manholes* are provided in every sewer pipe at suitable intervals, so as to facilitate their cleaning and inspection. In the sewers, which carry the drainage discharge either solely or in combination with sewage, *inlets* called *catch basins* are provided to permit entrance of storm water from street gutters.

In order to avoid the large scale pollution of the water sources and to keep them usable for the downstream people, the original contaminated sewage is not allowed to be discharged directly into the water sources. A complete treatment including *screening*, *sedimentation*, *biological filtration* (or *activated sludge treatment*), *sludge digestion*, etc. is therefore, given to this extremely foul sewage, so as to bring down its BOD and concentrations of other constituents to safer values, before discharging it into a national river resource. However, a recent use of sewage is being made for irrigating crops. For this use also, the sewage has to be treated, so as to bring down its constituents to permissible values, as per the requirements of I.S. 3307—1965.

All these aspects are explained in details in subsequent chapters.

1.4. Design and Planning of a Sewerage System

The sewerage system must be properly and skilfully planned and designed, so as to remove the entire sewage effectively and efficiently from the houses, and up to the point of disposal. The sewers must be of adequate size, so as to avoid their overflow and subsequent damages to properties, and health hazards. In order to provide economically adequate sized sewers, it is necessary that the likely sewage discharge be estimated as correctly as possible. The sewer pipes should then be designed to be laid on a slope that will permit reasonable velocity of flow. The flow velocity should neither be so large, as to require heavy excavation and high lift pumping; nor should it be so small, as to cause the deposition of solids in the sewer, bottoms.

The sewers are generally designed to carry the water from the basements, and should therefore, be atleast 2 to 3 m deep. As far as possible, they should be designed to flow under gravity with $\frac{1}{4}$ or $\frac{3}{4}$ th full. Owing to the requirements of seeking gravity flow, the sewage treatment plant should generally be located in a low lying area. The design of the treatment units also requires good engineering skill. In order to

produced in the particular project, and also the quality and other characteristics of the body of water that will receive the sewage. The permissible standards for effluents, and the possible uses of water downstream, should also be studied. The legal bindings, if any, will also have to be taken into consideration, while deciding upon the quantum of treatment required to be given. No fixed standards can be laid for fixing this required treatment, as everything depends upon the exigencies of a particular project.

Since the treatment plant will have to be located at low level; the flood protection devices both during construction and thereafter, should also have to be taken care of, by the design engineers.

All these design requirements shall be thoroughly discussed in this volume.

1.5. Financing the Sewerage Projects

The full fledged development and functioning of a sewerage system requires enormous capital investments and large amounts of recurring RMO expenses.

The initial money has, of course, to be provided by the Government, but the interest on the capital investments and the depreciation charges as well as the RMO (i.e. Running, Maintenance and Operation) expenses must be recovered from the users of these facilities by properly taxing them. However, there cannot be a very rational system of taxing the users of sewerage facilities, because it is not feasible to estimate the quantity of sewage removed from an individual house, and hence cannot be as rationally taxed as can be done for water supplies, which can be measured and taxed according to the volume of water consumed. Consequently, the sewerage services may be financed by adding a certain surcharge, usually a percentage to the water bill. This is somewhat rational in the sense that sewage produced by the house will be directly proportional to the water consumed. Sometimes, charges for sewerage facilities are added, as certain percentage of the annual valuation of the house property, to the property/house tax bills. Nevertheless, the planning engineer must also develop the suitable and logical financing programme, indicating the sources of income and balancing them against depreciation, interest and RMO charges.

1.6. Liability for Damages Caused by Insufficient or Inefficient Sewerage Works

In case of certain damages, the process of claiming compensations through law courts is largely adopted in developed countries like U.S.A. However, Indian people, striving hard for their bread and butter, find it very difficult and almost impossible to go to the long process of redressal through law courts. Moreover, generally, when certain authorities or officials are sued in the court for damages, normally a certain percentage of the claimed amount has to be deposited, making it almost impossible for an ordinary Indian to go to the courts for claiming damages. Nevertheless, we will state here, a few possible chances, when compensations can be successfully claimed, in case certain damages have been caused by insufficient or inefficient sewerage works:

No city governments or public municipalities can be held responsible for not

certain extent for any damages caused to the health or properties of the citizens, due to its insufficient or inefficient provisions or operations.

If the sewerage system has been constructed, as designed by a competent engineer, normally nothing can be claimed by the sufferers due to inadequate size of sewers. Still, however, damages can always be claimed, if there is some established negligence on the part of the authorities in the maintenance or operation of sewerage works. For example, if the blockage of a sewer is reported to the authorities, who do not take prompt action, then the consequent damages caused by the backing up and overflowing of the sewers, can always be claimed. Similarly, if the leaking sewers happen to pollute water supplies, damages can be claimed for affecting public health, but only if it can be established that the sewerage authorities had a preknowledge of the situation, and they failed to remedy the same. Similarly, if certain manhole cover is left open due to poor maintenance, and if a child happens to fall in it, damages can always be claimed. But again negligence, will have to be established. Even without any negligence, the damages can always be claimed by the property owners for depreciation of their properties, if sewage treatment plant has been established near their properties, which gives off obnoxious smells. Similarly, throwing away of untreated or partially treated sewage in a river resource, may pollute the river water, and pose health hazards to the people utilising such waters, downstream. In such a case also, the affected people can claim compensations.

PROBLEMS

1. Describe conservancy and water-carriage systems. What are the relative advantages and disadvantages of the two system?
2. Discuss briefly the necessity of replacing the conservancy system by the water carriage system of sanitation.
3. Discuss the relative merits of the separate and the combined systems of sewage, and give the conditions favourable for the adoption of each one of them.
4. Differentiate between :
 - (i) Domestic sewage, industrial sewage and sanitary sewage ;
 - (ii) Combined and separate systems of sewage ; and
 - (iii) Sewage and drainage.
5. Write short notes on :
 - (i) Financing the sewage projects ;
 - (ii) Liability for damages for insufficient or inefficient sewerage facilities ;
 - (iii) Types of sewages ; and
 - (iv) Systems of sewerage.

Estimating the Design Sewage Discharge

2.1. Estimating Sewage Discharge

The sewage* discharge which has to pass through a sewer must be estimated as correctly as possible ; otherwise the sewers may either prove to be inadequate, resulting in their overflow, or may prove to be of too much of size, resulting in unnecessary wasteful investments. Theoretically speaking, the quantity of sewage (i.e., domestic sewage + industrial sewage) that is likely to enter the municipal sewers under design, should be equal to the quantity of water supplied to the contributing area, from the water-works. But in actual practice, this is not the precise quantity which appears as sewage, but certain additions and subtractions do take place from it, as explained below :

(i) **Additions due to unaccounted private water supplies.** The accounted water supplied to the public through the public distribution system (the records of which are easily available from the water-works office), is not necessarily the only water consumed by the public. Some private wells and tubewells may sometimes be used by the public for their domestic needs ; and similarly, certain industries may utilise their own sources of water. This extra quantity of water used by the town is generally small, unless there are large industrial private water uses. This quantity can, however, be estimated by actual field observations.

(ii) **Additions due to infiltration.** Whenever, the sewer pipes are laid below the ground water-table, certain amount of ground water generally seeps into them, through their faulty leaky joints or cracks formed in the pipes due to bad materials or poor construction. The quantity of the ground water entering these sewer pipes depends mainly upon the height of the water-table above the sewer invert level, and the nature and extent of faults and fissures present in the sewer pipes. However, if the ground water-table is well below the sewer, the infiltration can occur only after rain, when water is moving down through the soil. In that case, the infiltration quantity will depend upon the permeability of the ground soil. Since these factors cannot be precisely computed, the exact quantity of ground water infiltrating into the sewer pipes cannot be estimated precisely. Only certain nominal allowance, based upon some experimental results, may be made on account of this factor. In U.S.A., an allowance varying from 11,000 to 2,25,000 (average value = 1,14,000) litres per day per kilometre length of sewer pipe, is generally made in high water-table areas.

No allowance for infiltration should, however, be made when sewers are provided with under-drains which have free outlets.

Sometimes, the storm water drainage may also infiltrate into the sewers. This inflow cannot be computed easily and generally left unaccounted without making any extra provision for it. This additional water, if happens to enter the sewers, can be accommodated in the extra empty space left at the top in the sewers, which are generally designed as running $3/4$ th full at maximum designed discharge.

(iii) **Subtractions due to water losses.** The water lost, due to leakage in the distribution system and house connections of the water supply scheme, does not reach the consumers, and hence, never appears as sewage.

(iv) **Subtractions due to water not entering the sewerage system.** Certain amount of water may be used by the public and industries for such uses which may not produce any sewage at all. For example, the water used in boilers for steam generation; the water sprinkled over the roads, streets, lawns and gardens; the water used for automobile washings; the water consumed in industrial products, such as beverages, etc., the water used in air cooling etc., does not normally produce any sewage.

Net Quantity of Sewage Produced. The net quantity of sewage produced will be equal to the accounted quantity of water supplied from the water-works plus the additions due to factors (i) and (ii) minus the subtractions due to factors (iii) and (iv), described above. *This net value may vary between 70 to 130 per cent of the accounted water supplied from the water-works. In India, however, this value is generally taken as equal to 75 to 80% of the accounted water supplied from the water works.*

DESIGN PERIODS AND FUTURE FORECASTS

2.2. Design Periods for Different Components of a Sewerage Scheme

A sewerage scheme involves the laying of underground sewer pipes and construction of costly treatment units, which cannot be replaced or increased in their capacities easily or conveniently at a later date. For example, addition of sewer pipes at a future date cannot be accomplished without digging the roads and disrupting the traffic. In order to avoid such future complications, and to take care of the future expansions of the city and consequent increase in the quantity of sewage produced, it is necessary to design the various components of the scheme larger than their present day requirements and of such sizes, as to serve the community, satisfactorily, for a reasonable number of years to come. *This future period for which the provision is made in designing the capacities of the various components of the sewerage scheme is known as the design period.*

The design period should neither be too long nor it should be too short, and moreover, it should not exceed the useful life of the component structures. The design period is generally guided by the following considerations:

(i) **Useful life of component structures,** and the chances of their becoming old and obsolete. Design period should not exceed these values.

(ii) **Ease and difficulty,** that is likely to be faced in expansion, if undertaken at future dates. For example, more difficult expansions mean choosing a higher value of the design period.

(iii) **Amount and availability of additional investment,** likely to be incurred for additional provisions. For example if funds are not easily available, then one has to keep a smaller design period.

(iv) **The rate of interest on the borrowings and the additional money invested.** For example, if the interest rate is small, a higher value of the design period may be economically justified, and therefore, adopted.

(v) **Anticipated rate of population growth,** including possible shifts in communities, industries and commercial investments. For example, if the rate of increase of population is less, a higher figure for the design period may be chosen.

The following design periods are often used in designing the different components of a sewerage scheme.

Table 2.1. Design Periods for Different Components of a Sewerage Scheme

S. No. (1)	Type and name of the component structure (2)	Special characteristics and reasons for the selected design period (3)	Design period in years (4)
1.	Lateral sewers, less than 15 cm in dia.	Requirements may change faster in limited area.	Full development
2.	Branches, mains and Trunk sewers	Difficult and costly to enlarge.	40—50
3.	Treatment units	Growth and interest rates being high to moderate.	15—20
4.	Pumping plant	The additional pumps can be installed in future, very easily and also within a short notice.	5—10

2.3. Future Forecasts and Estimating Design Sewage Discharge

The quantity of sewage that is likely to pass through a sewer (Q') at the end of the design period, can be easily computed by multiplying the *per capita production of sewage (q')* by the *expected population at the end of the design period*.

The per capita sewage which is produced (q') in a community can be easily estimated by assuming it as 75 to 80 per cent of the per capita water supplied to the public (q). However, it should also be kept in mind that the future increase in population may also increase the per capita water demand, and consequently increasing the per capita production of sewage. The increase in per capita water supply or sewage production with the increase in population, obviously occurs due to improved economical conditions in the city, implying higher standards of living and greater consumption of water. In U.S.A., this increase in per capita water demand and sewage production is generally

assumed to be 5% of the percentage increase in population. However, for normal Indian conditions, the following norms may be adopted :

Table 2.2. Variations in Per Capita Water Demand and Sewage Production with Population, in India

S. No.	Population	Per capita water demand in litres/day/person (q)	Per capita sewage production in litres/day/person $q' = 80\%$ of col. (3)
(1)	(2)	(3)	(4)
1.	Less than 20,000	110	90
2.	20,000—50,000	110—150	90—120
3.	50,000—2 lakhs	150—180	120—150
4.	2 lakhs—5 lakhs	180—210	150—170
5.	5 lakhs—10 lakhs	210—240	170—190
6.	Over 10 lakhs	240—270	190—200

* The expected population at the end of the design period can be estimated by collecting the data of the past populations of several decades from the Census Department, and then by extrapolating the future population by using any one of the different methods, such as :

- (i) Arithmetical increase method ;
- (ii) Geometrical increase method ;
- (iii) Incremental increase method ;
- (iv) Decreasing rate method ;
- (v) Simple graphical method ;
- (vi) Comparative graphical method ;
- (vii) Master plan method ;
- (viii) The apportionment method ; and
- (ix) The logistic curve method.

These methods for forecasting future populations have been described in details in article 2.10 in Vol. I—"Water Supply Engineering", and may again be referred to.

After determining the expected population as well as the per capita sewage contribution of the town, by the end of the design period, the average* quantity of sewage produced in litres/day (then converted to cumecs) can be easily determined by multiplying both these figures.

2.4. Variations in Sewage Flow and their Effects on the Design of Various Components of a Sewerage Scheme

The per capita demand of water (q) and the corresponding per capita sewage production (q') so far discussed, are based upon annual flows, and are, therefore, defined as *annual average daily flows per person*. This average value is not sufficient, although very useful, for the design of various

components of a sewerage scheme ; because there are wide variations in the actual flows that take place through the sewers at a given time.

The flows in these sanitary sewers, though fluctuate seasonally, monthly, daily, as well as hourly, with the water consumption*, yet they are sometimes delayed and less pronounced (Fig. 2.1) as they are damped because of the storage space in the sewers and because of the time required for the sewage to reach the point of gauging. In other words, the peaks are flattened, because it requires considerable sewage to fill the sewers to the high flow point, and the high flows from various sections will reach the gauging point after various times of flow. Thus, the time as to when the peak flow occurs will depend upon the flow time in sewers and the type of district served. Hence, if the sewage is gauged near its origin, the peak flow will be quite pronounced ; whereas, if the sewage must travel a long distance before being gauged, the peak will be deferred. It, therefore, follows that the peak flows (expressed as number of times of their average values) will be much greater for smaller lateral sewers, as compared to these for larger trunk sewers.

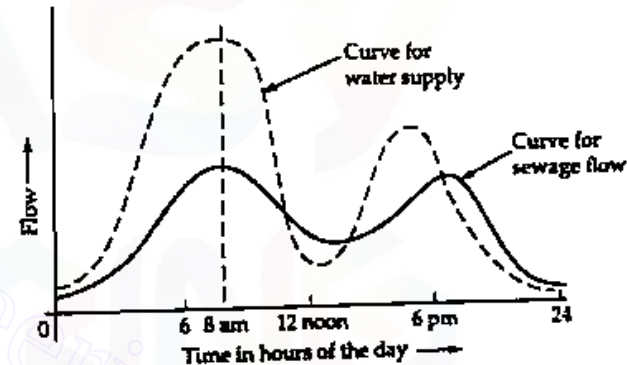


Fig. 2.1. Hourly variation of sewage flow compared to that of water supply.

For areas of moderate sizes, such as involved for branch sewers, the maximum daily or hourly sewage flows, can be expressed as :

$$\text{Maximum daily flow} = 2 \text{ times the average daily flow} \quad \dots(2.1)$$

$$\text{Maximum hourly flow} = 1.5 \text{ times the maximum daily} \quad \dots(2.2)$$

$$= 3 \text{ times the average daily.}$$

However, as pointed out earlier, the peak hourly flows will decrease, as the tributary area increases. Therefore, the peak flow at the outfall of a city sewer system will be much less, usually, about 1.5 times the average. The estimation of maximum hourly flows for different types of sewers, within the city's sewerage system, are given below in table 2.3.

*Please refer article 2.6 on "Variations in Demand", in Vol. I "Water Supply

Table 2.3. Hourly Variations in Sewage Flow

S. No.	Type of Sewer	Ratio of maximum flow to average flow
1.	Trunk mains above 1.25 m in dia.	1.5
2.	Mains upto 1 m in dia.	2.0
3.	Branches upto 0.5 m in dia.	3.0
4.	Laterals and small sewers upto 0.25 m in dia.	4.0

The sizes of the sewers* can then be easily designed for carrying the computed maximum hourly flows, with sewers running 3/4th full.

This peak sewage flow has been connected with the population by certain investigators by the formula

$$Q_{\max} = \frac{18 + \sqrt{P}}{4 + \sqrt{P}} Q_{av} \quad \dots(2.3)$$

where P = Population in thousands.

The minimum flow passing through a sewer is also an important factor in the design of the particular sewer; because at low flow, the velocity will be reduced considerably, which may cause silting. Hence, the slope at which the sewer is to be laid has to be decided in accordance with the requirement of minimum permissible velocity at the minimum flow.

The minimum flows occurring through the sewers during night hours will affect the laterals to a maximum extent, and will affect the mains to a lesser extent. Thus, the minimum flows through laterals, may be even lesser than 25 per cent of the average; while in the mains, they can be 50 to 70 per cent of the average. For moderate areas, such as involved for branch sewers, the following minimum flows may be assumed:

$$\text{Minimum daily flow} = \frac{2}{3} \times \text{Average daily} \quad \dots(2.4)$$

$$\begin{aligned} \text{Minimum hourly flow} &= \frac{1}{3} \text{ Minimum daily flow} \\ &= \frac{1}{3} \text{ Average daily} \quad \dots(2.5) \end{aligned}$$

The sewers must, therefore, be checked for minimum velocities at their minimum hourly flows (i.e. $\frac{1}{3}$ Average daily).

PROBLEMS

- Briefly discuss the method you will adopt for working out the design capacities of various laterals, branch sewers, and main sewers of a sewerage system.
- Indicate the ratios of max. flow to average flow, to be adopted in the design of laterals, branches, mains and trunk sewers. How will these calculated maximum flows affect their designs? Also discuss as to how the minimum flow in the sewers, affects their designs.
- Write short notes on:
 - Estimating the design sewage discharge;
 - Design periods for different components of a sewerage scheme;
 - Per-capita sewage; and
 - Time variations in sewage flow, and their effects on the design of sewer capacities.
- What do you mean by variation in flow of sewage? Explain average flow, dry weather flow, and maximum flow.

*Sewer pipes are made only in standard sizes, and where there is a doubt about the

Estimating the Peak Drainage Discharge

3.1. Introduction

The sewers and the drains of a separate sewerage system should be designed to carry the maximum sewage discharge and the maximum rain run off, respectively. Whereas, the sewers of a combined sewerage system should be designed to carry the sewage discharge plus the rain runoff. The sewers of a combined system should, therefore, in addition to passing this combined maximum flow, should also be capable of passing the low sewage discharge during non-monsoon periods, as dry weather flow*, with minimum permissible velocities. The partially separate sewers may be designed for carrying the sewage discharge plus part of the storm drainage, particularly that coming from the roofs and courtyards.

In order to design the sewers and the drains properly, it is absolutely necessary to estimate the sewage discharge and the urban storm drainage discharge that are likely to enter the sewers or drains. The methods of estimating the maximum sewage discharge were discussed in the previous chapter; and here we will discuss the methods of estimating the maximum rate of storm run-off, popularly called peak drainage discharge.

3.2. The Run-off Process and Peak Run-off Rate

When a rain, falls on a certain area, a part of it is intercepted by the soil, a part of it is evaporated, and the remaining water flows overland towards the valleys, as storm run-off. Since the storm runoff has to be removed through drains or through combined sewers, the drainage engineer must evaluate the peak rate of run off, which can be produced from a certain catchment by the given rain, at any moment. Further, the more intense is the rain, the more will be the peak run-off rate. Hence, a proper and economical value of rain frequency (or recurrence interval**) must be chosen, for which the drains must be designed. The frequency of rainfall to be adopted in design should neither be so large, as to cause too heavy investments, nor should it be so small, as to cause very frequent overflowing of the drains. For Delhi, the experts have recommended a 2 years rain frequency for designing smaller link drains, and 5 years frequency for designing all the major drains.

*The rain run-off, i.e. drainage discharge, which is produced during monsoon season is generally very high, say 20 to 25 times that of the sewage discharge, called dry weather flow (D.W.F.).

**Please refer "Hydrology and Water Resources Engg." by the same author.

3.3. Estimating Peak Run-off

The peak rate of run-off that is produced from a particular catchment depends upon numerous factors; such as, the type of precipitation, the intensity and duration of rainfall, the rainfall distribution, the soil moisture deficiency, the direction of the prevailing storm, the climatic conditions, the shape, size and type of catchment basin, etc. etc. Due to these 15 to 20 variables* involved in evaluating the run-off, it is not possible to precisely determine it, even with the help of the most complicated mathematics, as all these variables are interdependent, and run off cannot be easily expressed by an exact equation. Hence, upto about 40 years ago, the peak run-off rate was used to be estimated by empirical formulas only, even in the developed countries like U.S.A. Different empirical formulas were, therefore, developed for different regions, by the investigators, depending upon their actual experimental works. In recent years, however, a rational method has been evolved to estimate the peak drainage discharge. This method, though called rational, is not rational in the sense that the results given by this formula for larger areas (more than 400 hectares or so) are generally erroneous and misleading. This method can be applied most precisely to smaller areas (preferably less than 50 hectares or so). For large areas, empirical formulas, are, however, continued to be used, although the most modern method for computing urban storm drainage is by digital computer simulations. This is an advanced topic dealt under the subject of "Water Resources Systems Planning" and is beyond the scope of the Undergraduate Courses. The rational formula and other empirical formulas for determining peak drainage discharge are discussed here:

3.3.1. Computing the Peak Drainage Discharge by the Use of Rational Formula. If a rainfall is applied to an impervious surface at a constant rate, the resultant runoff from the surface would finally reach a rate equal to the rainfall. In the beginning, only a certain amount of water will reach the outlet, but after some time, the water will start reaching the outlet from the entire area; and in this case, the run off rate would become equal to the rate of rainfall. The period after which the entire area will start contributing to the runoff is called the time of concentration**. The runoff resulting from a rain having a duration lesser than the time of concentration will not be maximum, as the entire area will not contribute to the run-off in this case. Further, it has been established that the runoff is not maximum, even when the duration of the rain is more than the time of concentration, because in such a case, the intensity of rain reduces with the increase in its duration. In other words, it has been established that the maximum runoff will be obtained from the rain having a duration equal to the time of concentration, and this is called the critical rainfall duration.

*Please refer chapter 8 in "Hydrology and Water Resources Engineering" by the same author.

Based upon these basic principles, the rational formula was evolved, due to the efforts of Fruhling of Germany, Kuichling of America, and later Lloyd Davis of England. This formula states that

$$Q_p = \left(\frac{1}{36} \right) K \cdot p_c \cdot A \quad \dots(3.1)$$

where Q_p = Peak rate of runoff in cumecs.

K = Coefficient of runoff.

A = The catchment area contributing to runoff at the considered point, in hectares.

p_c = Critical rainfall intensity of the design frequency i.e. the rainfall intensity during the critical rainfall duration equal to the time of concentration, in cm/hr.

Coefficient of Runoff

The coefficient of runoff (K), is in fact, the impervious factor of runoff, representing, the ratio of precipitation to runoff. The value of K increases as the imperviousness of the area increases*, thus tending to make $K = 1$ for perfectly impervious areas. It is generally taken as equal to 0.9 for paved areas and 0.15 for lawns and gardens. The values of K can also be worked out for different localities having different population densities. Various values of K which can be of use in designing storm water drains, are given in Tables 3.1 and 3.2.

Table 3.1. Values of Run-off Coefficient (K) for Various Surfaces

S. No.	Type of surface	Value of K
1.	Water-tight roof surface	0.70—0.95
2.	Asphalt pavement in good order	0.85—0.90
3.	Stones, brick, wood-block pavement with cemented joints	0.75—0.85
4.	Same as above with uncemented joints	0.50—0.70
5.	Water bond macadam roads	0.25—0.60
6.	Gravel roads and walks	0.15—0.30
7.	Unpaved streets and vacant lands	0.10—0.30
8.	Parks, lawns, gardens, meadows, etc.	0.05—0.25
9.	Wooden lands	0.01—0.20

*Greater is the imperviousness of an area, lesser will be the infiltration, and hence greater will be the runoff.

**Table 3.2. Values of Run-off Coefficient (K)
for Different Types of Localities**

S. No. (1)	Type of locality (2)	Average approximate population density in persons/hectare (3)	Value of K (4)
1.	Extreme suburban areas with 20 to 40 per cent parking and widely detached houses.	75—125	0.35
2.	Suburban areas with widely detached houses.	125—150	0.45—0.55
3.	Areas with 50 per cent attached houses and 50 per cent detached houses.	375—500	0.65
4.	Areas closely built up.	500—625	0.75
5.	Business areas.	more than 625	0.85

Intensity of Rainfall

A rainfall at a place can be completely described if its intensity, duration and frequency is known. The intensity of a rain is the rate at which it is falling, the duration is the time for which it falls with that given intensity, and frequency is the number of times it falls.

The intensity of a rain is expressed in cm/hr; but this rate at which the rain falls, changes continuously throughout the storm period. It may rain 5 cm in a particular one hour giving an average rainfall rate of 5 cm/hr during that particular hour. However, during this particular hour, sometimes the rainfall rate will exceed 5 cm/hr, and sometimes it may be much less than 5 cm/hr.

The intensity of rainfall can be determined with the help of automatic rain gauges*, such as shown in Fig. 3.1 (a) and (b). Such gauges automatically



Fig. 3.1. (a) Photographic view of an Automatic Rain Gauge (Floating Type), popularly used in India.

*The other type of gauges i.e., non-recording gauges collect the falling rain to manually record the mm of rain fallen during the last 24 hours. They are not of much use in calculating the amount of storm runoff from an area.

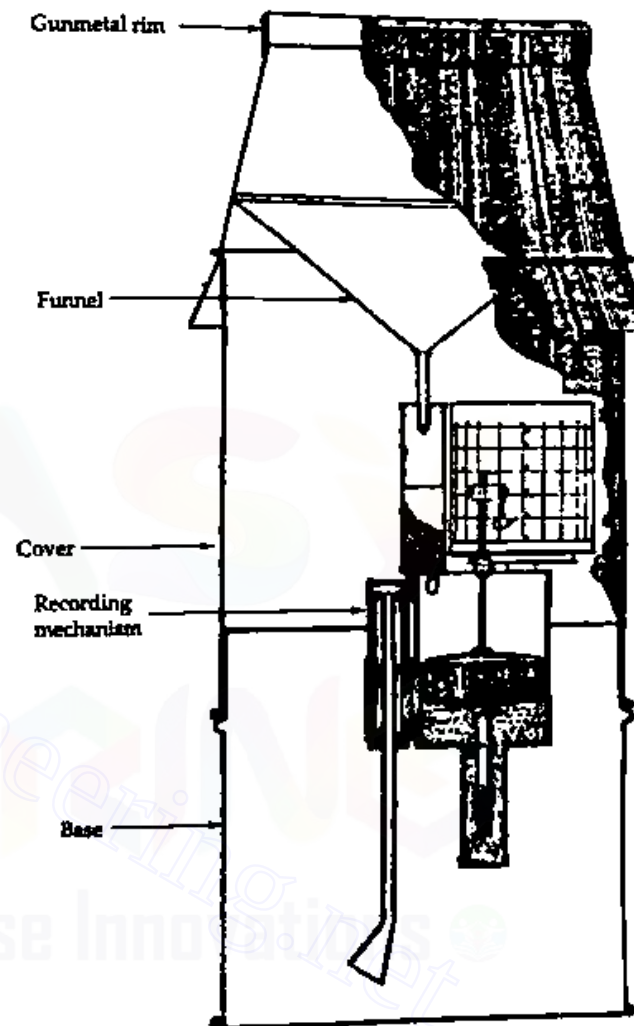


Fig. 3.1. (b) Section Through an Automatic Rain Gauge (Floating Type).

record the cumulative amount of water with time on a graph paper. An original chart obtained from such a gauge is shown in Fig. 3.2.

Note. It is evident from this graph, that after the gauge has recorded 10 mm of rain, the bottle gets empty and the line representing cumulative rainfall vertically falls down. Hence, while estimating the amount of rain fallen during any time interval, this fact must be kept in view.

It is found from this graph that between 5 hour of 5.8.75 and 6 hour of 5.8.75, the rainfall during the four intervals of 15 minutes each are about $6.25 + 1.25 = 7.5$ mm, $8.75 + 1 = 9.75$ mm, $9 + 0.75 = 9.75$ mm, and 9.25 mm, respectively; thus giving a total of 36.25 mm of rainfall in this particular hour.

The average rainfall during this hour will be 3.625 cm/hr and maximum, will be

$$= \frac{9.75}{15/60} = 37.1 \text{ mm/hr or } 3.71 \text{ cm/hr.}$$

Such records of automatic rain gauges are collected over a period of 15 to 20 years. They are then analysed so as to pick up the storm, giving intensities greater than 1 cm/hr or so. The rains fallen during different time intervals such as 5 minutes, 10 minutes, 15 minutes, 20 minutes, 60 minutes, 120 minutes, etc. are worked out for each of the chosen storms. They are then analysed and converted into intensity duration curves, such as shown in Fig. 3.3. The method of analysing and drawing such curves, has been thoroughly explained in "Hydrology and Water Resources Engineering" by the same author. The students may please refer to that book to fully understand the hydrological concepts.

This job of data collection and analysis is being done in India by Indian Meteorological Department (I.M.D.) and readymade Standard Depth-Duration Curves (Fig. 3.4)* of a particular rain gauge station, representing different frequencies, are provided by them to us. These curves can be used to work out the intensity of rainfall having a duration equal to the time of concentration, for the given design frequency.

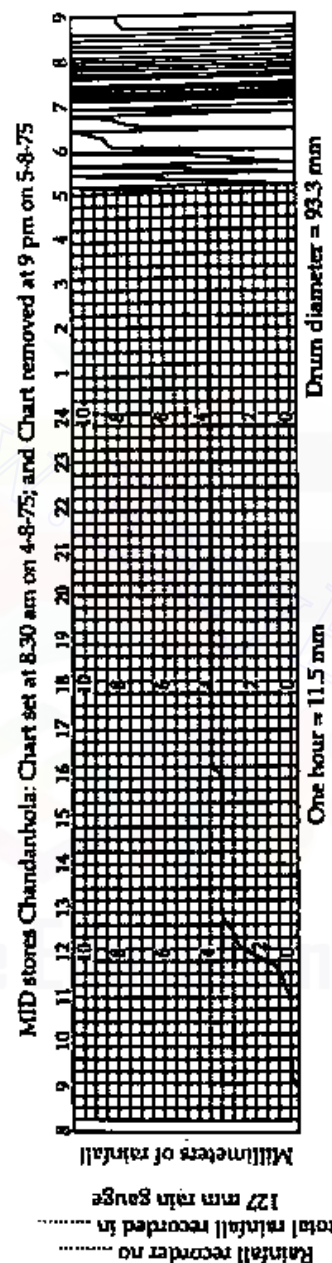


Fig. 3.2

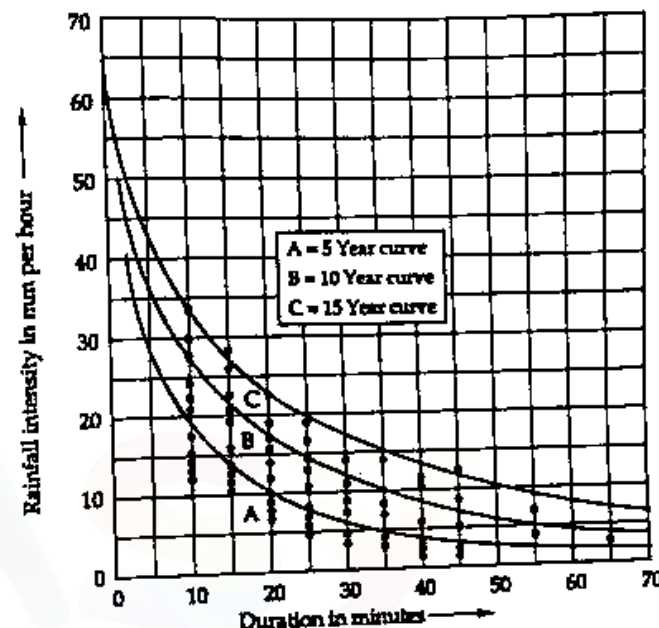


Fig. 3.3. Typical Intensity Duration Curves.

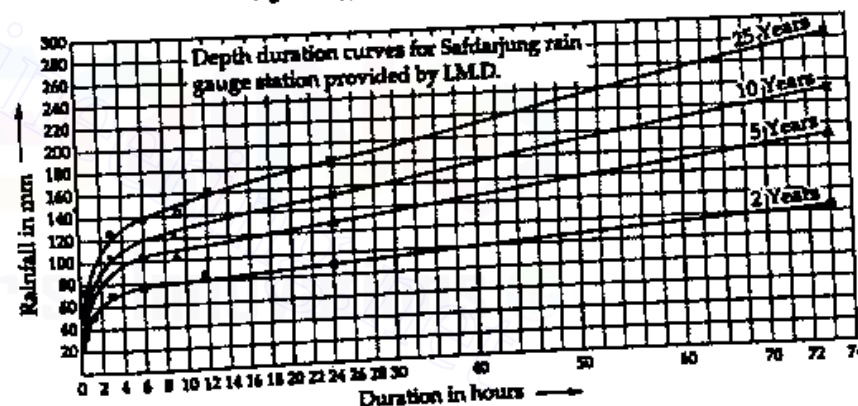


Fig. 3.4. Typical Standard Depth Duration Curves.

The time of concentration

The time of concentration for a given storm water drain generally consists of two parts; viz.,

- (i) The inlet time or overland flow time or time of equilibrium (T_1), i.e. the time taken by the water to flow overland from the critical point upto the point where it enters the drain mouth. It may be estimated by using Eq. (3.2) given below:

*The curves of Figs. 3.3 and 3.4 differ only in the sense that in Fig. 3.3, y-axis represents rainfall intensity (mm per hour) whereas in Fig. 3.4, the y-axis represents rainfall depth (mm).

$$T_i = \left(0.885 \frac{L^3}{H} \right)^{0.385} \quad \dots(3.2)$$

where T_i = Inlet time in hours.

L = Length of overland flow in kilo-metres from the critical point to the mouth of the drain.

H = Total fall of level from the critical point to the mouth of the drain in metres.

L and H can be found from the survey plan of the area, and T_i can be easily calculated.

(ii) The channel flow time or gutter flow time (T_f), i.e. the time taken by the water to flow in the drain channel from the mouth to the considered point. This may be obtained by dividing the length of the drain by the flow velocity in the drain.

$$\therefore T_f = \frac{\text{Length of the drain}}{\text{Velocity in the drain}} \quad \dots(3.3)$$

The total time of concentration at a given point in the drain, for working out the discharge at that point, can be easily obtained as

$$T_c = T_i + T_f \quad \dots(3.4)$$

The intensity of rainfall during this much of time (for the given design frequency, of course) can be easily obtained from the standard intensity duration curves or DAD curves.

The value of intensity so obtained is still the rainfall intensity at the rain gauge station, and is called the point rainfall intensity. In order to make it effective over the entire catchment area (in which this rain gauge station lies), it is necessary to multiply it by a factor called *dispersion factor* or *areal distribution factor*. The resultant value will be nothing but p_c to be used in Eq. (3.1).

The areal distribution factor

It is a well established fact that the intensity of rainfall recorded at a particular rain gauge station in a catchment is not the same throughout the catchment. As the size of the catchment increases, the average intensity of rainfall over the catchment as a whole goes on decreasing compared to the point intensity recorded at a particular station. Therefore, the areal distribution factor, also called, the dispersion factor, is always applied to the point rainfall for working out the design rainfall intensity. In case of Delhi, it is seen that the intensity of rainfall varies considerably from one part to another, and as such, the *dispersion factor* reduces considerably with the increase in the catchment area, as shown in Table 3.3.

Table 3.3. Values of Dispersion Factor for Delhi

Area in hectares	Dispersion or Areal Distribution factor
0	1.0
200	0.997
400	0.994
800	0.989
1,200	0.984
1,600	0.979
2,000	0.974
2,400	0.972
2,800	0.967
3,200	0.962
3,600	0.958
4,000	0.951
6,000	0.926
8,000	0.903
12,100	0.855
16,200	0.807

In the absence of standard intensity-duration curves, the value of p_c can also be determined in the following two ways :

(i) The value of "one hour rainfall" of a given frequency at a given place can be found from the charts, shown in Fig. 3.5 (a), (b) and (c).

This value of "one hour rainfall" is multiplied by the areal distribution factor, so as to obtain p_o . The value of p_o is further multiplied by factor

$$\frac{2}{1 + T_c} \text{ so as to obtain } p_c; \text{ viz.,}$$

$$p_c = p_o \left(\frac{2}{1 + T_c} \right) \quad \dots(3.5)$$

where T_c = Time of concentration in hours.

(ii) Since the intensity of a rain is inversely proportional to the duration of the rain, an intensity duration curve can be represented by a generalised equation of the form

$$p = \frac{a}{T + b} \quad \dots(3.6)$$

where p = Rain intensity in cm/hr.

T = Time in minutes

a and b = constants.

The values of a and b have been found out by the Health Ministry of Britain as 75 and 10 respectively for T varying between 5 to 20 minutes ; and as 100

the derivation of this formula is given in article 7.17.1.2 of "Water Resources Engg. the same author.

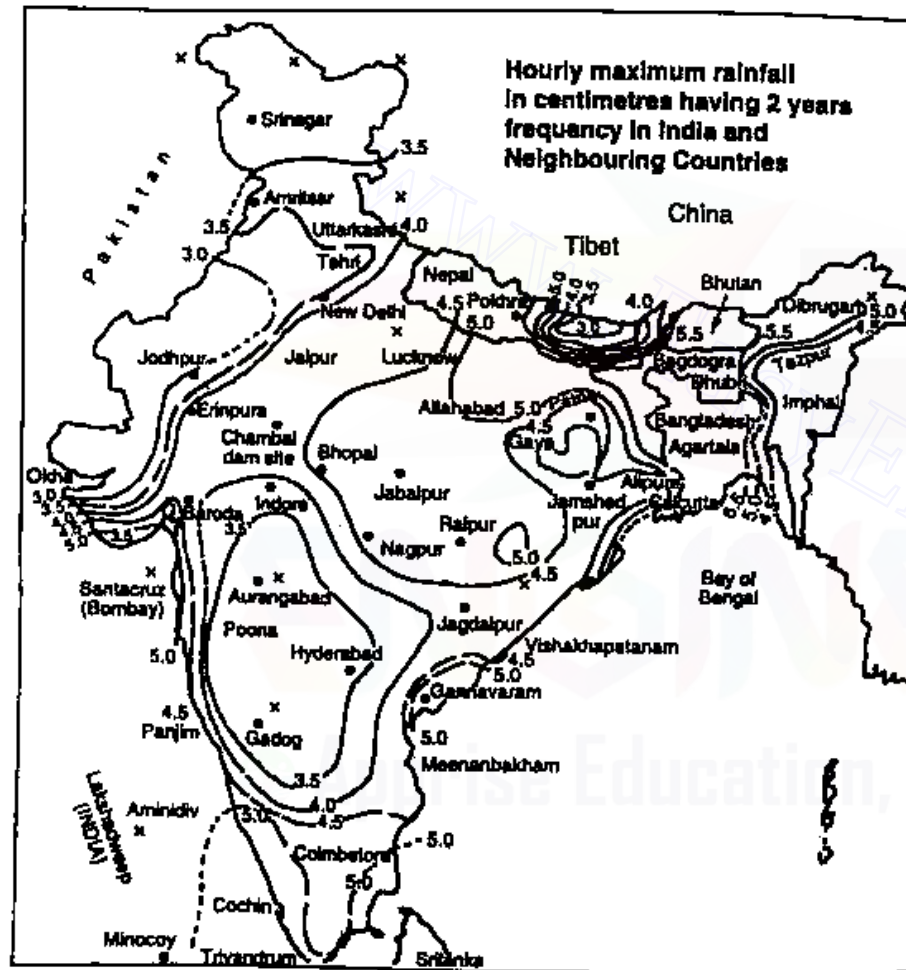


Fig. 3.5(a)

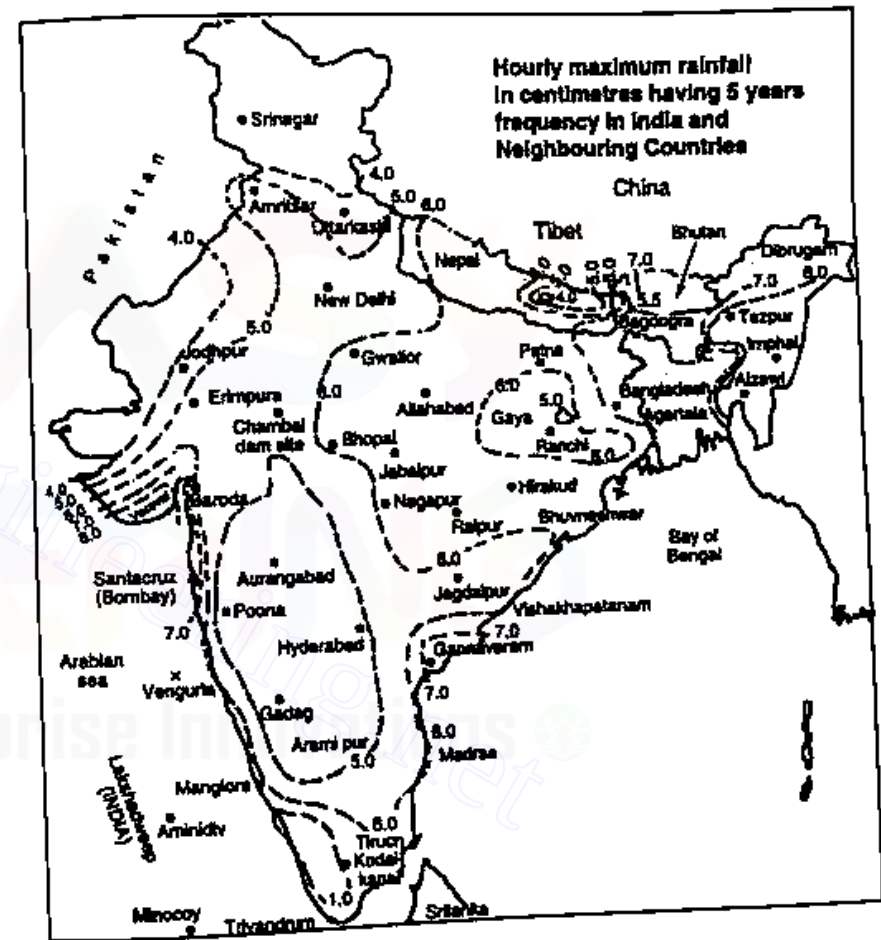


Fig. 3.5(b)

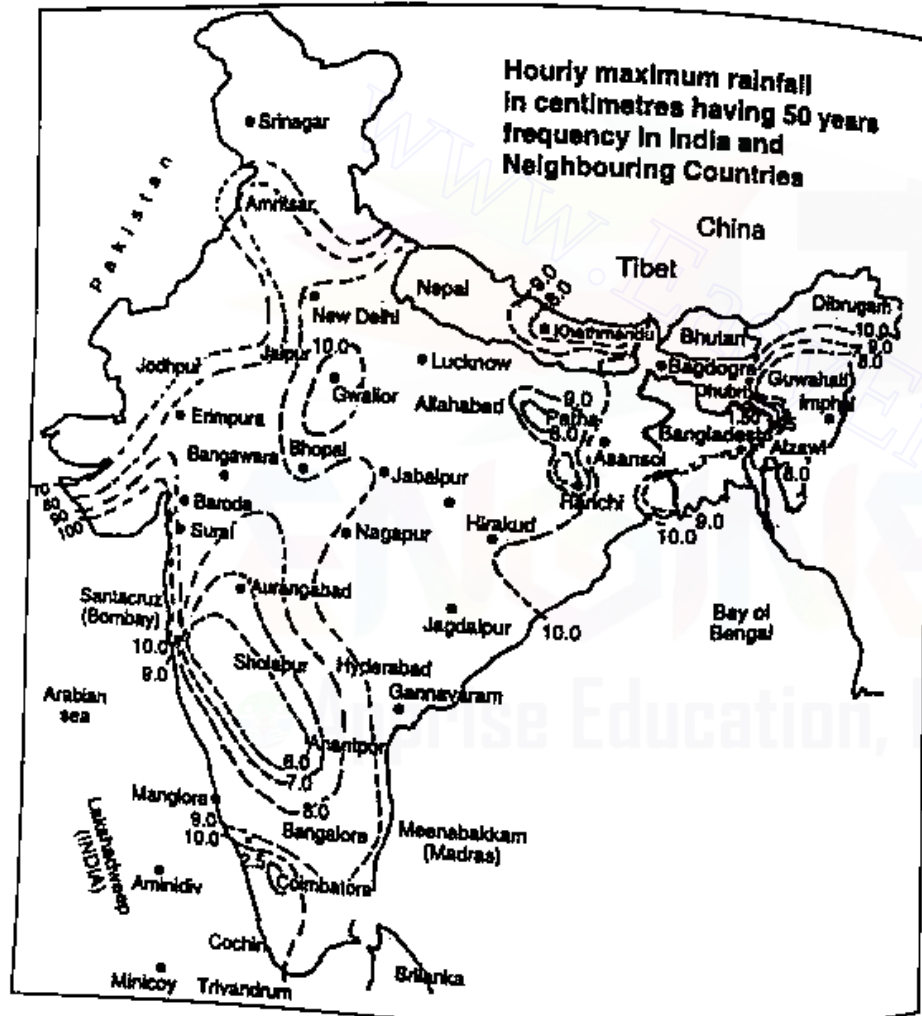


Fig. 3.5(c)

and 20 respectively for T varying between 20 to 100 minutes respectively. The formulas given by them, and generally applicable in England, are, therefore, given as below :

$$P = \frac{75}{T + 10} \quad \dots(3.7)$$

(for T varying between 5 to 20 minutes)

and
$$p = \frac{100}{T + 20} \quad \dots(3.8)$$

(for T varying between 20 to 100 minutes)

Using T_c in minutes in place of T in Eqs. (3.7) and (3.8), the values of p , i.e. p_c can be evaluated.

Besides the above generalised equations, certain other empirical equations have been suggested for determining rainfall intensity, as given below :

(a) For localities where rainfall is frequent.

$$p = \frac{343}{T + 18} \quad \dots(3.9)$$

This formula is applicable for places where heavy and frequent rains occur, and gives an intensity for 5 years frequency.

(b) For rains having frequency of 10 years, the equation suggested is

$$P = \frac{38}{\sqrt{T}} \quad \dots(3.10)$$

(c) For rains having frequency of 1 year, the equation suggested is

$$p = \frac{16}{7^{0.620}} \quad \dots(3.11)$$

(d) Kuichling's formula

$$P = \frac{267}{T + 20}$$

(for storms having 10 years frequency)

$$p = \frac{305}{T + 20}$$

(for storms having 15 years frequency)

The equations from (3.7) to (3.13) can, though be used for finding the value of p_c , yet they are very very empirical equations, and are not very reliable. They are, therefore, generally avoided in designing storm water drains in modern days. They may, however, be used when absolutely no rainfall records are available.

3.3.2. Computing the Peak Drainage Discharge by the Use of Empirical Formulas. The rational formula described above is also quite empirical in the sense that the value of K considerably depends upon the judgement of the designer. Moreover, this method gives reliable results only for smaller areas, and hence used only for the design of drains having catchments less than 400 hectares or so. For the design of drains having larger catchments (more than 400 ha), it is generally advisable to use the suggested

Various empirical formulas for calculating storm water run-off have been suggested by various investigators. Some of these formulas are based on local conditions only, and can be adopted only when certain specific requirements are specified. The other formulas are based on experimental studies and results obtained over wide areas, and they can, therefore, be adopted for many localities. Some of the leading empirical formulas are given below :

(i) **Burkli-Ziegler formula.** This formula is the oldest empirical formula used for determining the peak run off rate. It was devised by a Swiss engineer for local conditions, but was soon followed in the entire U.S.A. In M.K.S. units, it states that

$$Q_p = \left(\frac{1}{455} \right) K \cdot p \cdot A \cdot \sqrt{\frac{S_0}{A}} \quad \dots(3.14)$$

where Q_p = The peak runoff in cumecs.

K = Run off coefficient depending upon the permeability of the surface, and having an average value of 0.7.

p = The maximum rainfall intensity over the entire area, and is usually taken as 2.5 to 7.5 cm/hr.

A = The drainage area in hectares.

S_0 = The slope of the ground surface in metres per thousand metres.

(ii) **Dicken's formula.** This formula is generally useful for Indian catchments, (and particularly for North India) and states that

$$Q_p = CM^{3/4} \quad \dots(3.15)$$

where Q_p = Peak discharge in cumecs

M = Catchment area in sq. km

C = a constant depending upon all those fifteen to twenty factors which affect the run off.

The value of C must be ascertained for each catchment, and depends upon the nature of the catchment and the intensity of rainfall. An average value of C equal to 11.5 is generally used, and it should be increased for hilly catchments and *vice versa*. Secondly, for the same type of catchment, greater is the rainfall, greater will be the value of C and *vice versa*. The value of C for different zones of India are shown in Fig. 3.6.

(iii) **Ryve's formula.** This formula is almost similar to that of Dicken's ; the only difference is in the values of constants. It is generally applicable to South Indian catchments, and states that

$$Q_p = C_1 M^{2/3} \quad \dots(3.16)$$

where Q_p , M and C_1 have the same meaning as in Dicken's formula.

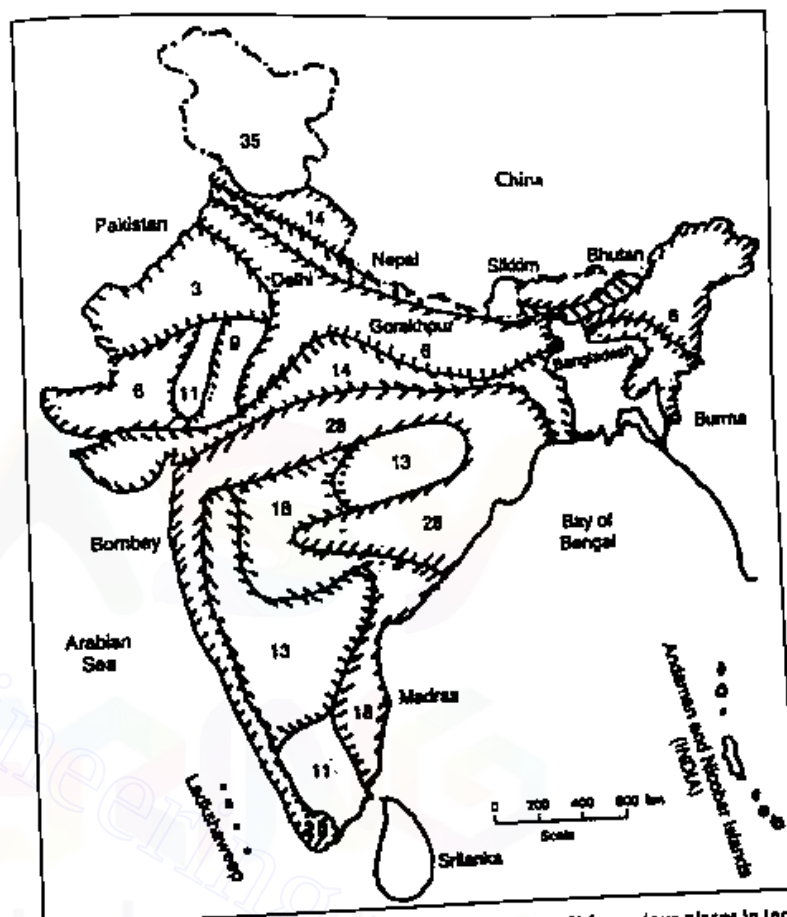


Fig. 3.6. Chart showing values of C in Dicken's formula (Eq. 3.15) for various places in India.

The average value of C , to be used is 6.8, with less value for flat catchments and more value for hilly catchments. Different values of C , must be ascertained for different catchments, as suggested in Table 3.4.

Table 3.4. Value of C , in Ryve's formula

Location of Catchment	Value of C , in Ryve's formula
Areas within 24 km from the coast	6.8
Areas within 24—16 km from the coast	8.8
Limited areas near hills	10.1

(iv) **Inglis formula.** This formula is applicable to the fan shaped catchments in the Western State of India. It states that

$$Q_p = \frac{123 M}{\sqrt{M + 10.4}} = 123 \sqrt{M} \quad \dots(3.17)$$

where Q_p and M have the same meaning as given in Dicken's formula.

(v) Nawab Jung Bahadur formula. This formula has been derived for Hyderabad Deccan catchments. It states that

$$Q_p = C_2 M^{[0.93 - (\frac{1}{14}) \log M']} \quad \dots(3.18)$$

The value of constant C_2 varies between 48 to 60. M' is the catchment area in acres.

(vi) Dredge or Burge's formula. This formula is based upon Indian records and states that

$$Q_p = 19.6 \frac{M}{L^{2/3}} \quad \dots(3.19)$$

where Q_p and M have the same meaning as given earlier.

L is the length of the drainage basin in kilometres.

Example 3.1. Assuming that the surface on which the rain falls in a district is classified as follows :

20% of the area consists of roof for which the runoff ratio is 0.9, 20% of the area consists of pavements for which the runoff ratio is 0.85, 5% of the area consists of paved yards of houses for which run off ratio is 0.80, 15% of area consists of macadam roads for which run off ratio is 0.40, 35% of the area consists of lawns, gardens and vegetable plants for which the runoff ratio is 0.10, and the remaining 5% of the area is wooded for which the runoff ratio is 0.05 ; determine the coefficient of runoff for the area.

If the total area of the district is 36 hectares and the maximum rain intensity is taken as 5 cm/hr ; what is the total runoff for the district ?

Solution. The total area A of the district can be considered to be made up of smaller areas $A_1, A_2, A_3, \dots, A_n$, having runoff ratios as $K_1, K_2, K_3, \dots, K_n$, respectively. Then the runoff ratio (i.e., coefficient of runoff) K for the entire area may be computed by using

$$K = \frac{K_1 A_1 + K_2 A_2 + K_3 A_3 + \dots + K_n A_n}{A_1 + A_2 + A_3 + \dots + A_n} \quad \dots(3.20)$$

$$= \frac{\Sigma K A}{\Sigma A} = \frac{\Sigma K A}{A}$$

In this example, we have

$$K_1 A_1 = \frac{20}{100} A(0.90) = 0.18 A$$

$$K_2 A_2 = \frac{20}{100} A(0.85) = 0.17 A$$

$$\frac{5}{100} A(0.05) = 0.0025 A$$

$$K_4 A_4 = \frac{15}{100} A(0.4) = 0.06 A$$

$$K_5 A_5 = \frac{35}{100} A(0.1) = 0.035 A$$

$$K_6 A_6 = \frac{5}{100} A(0.05) = 0.0025 A.$$

$$\therefore K = \frac{K_1 A_1 + K_2 A_2 + K_3 A_3 + K_4 A_4 + K_5 A_5 + K_6 A_6}{A}$$

$$= \frac{0.18 A + 0.17 A + 0.04 A + 0.06 A + 0.035 A + 0.0025 A}{A}$$

$$= 0.4875.$$

Hence, the runoff factor for the entire area

$$= 0.4875. \text{ Ans.}$$

The peak discharge from the area may be computed by using the rational formula given by Eq. (3.1) as

$$Q_p = \frac{1}{36} \cdot K p_c A$$

Here, we have

$$K = 0.4875$$

$$p_c = \text{Critical rain intensity} = 5.0 \text{ cm/hr (given)}$$

$$A = 36 \text{ hectares}$$

$$\therefore Q_p = \frac{1}{36} (0.4875)(5.0)(36.0) = 2.4375 \text{ cumecs.}$$

$$\text{Say } 2.44 \text{ cumecs. Ans.}$$

Example 3.2. If in the above example, the density of population is 250 per hectare, and the quota of water supply per day is 225 litres ; calculate the quantity of

(a) Sewage for which the sewers of a separate system, should be designed.

(b) Storm water for which the sewers of a partially separate system should be designed.

Solution. Area of district

$$= 36 \text{ hectares.}$$

$$\text{Population density} = 250 \text{ persons per hectare}$$

$$\therefore \text{Population} = 36 \times 250 = 9000.$$

$$\text{Average water supply per day}$$

$$= 225 \text{ litres/person}$$

$$\therefore \text{Average quantity of water supplied to the district per day}$$

$$= 225 \times 9000 \text{ litres} = 20,25,000 \text{ litres} = 2,025 \text{ cu. m.}$$

$$\therefore \text{Rate of water supplied}$$

$$= \frac{2025}{24 \times 60 \times 60} \text{ cumecs} = 0.0234 \text{ cumecs.}$$

Assuming the sewage discharge as 0.8 times the water supplied, we have

Average rate of sewage produced

$$= 0.8 \times 0.0234 = 0.0187 \text{ cumecs.}$$

Now assuming the peak rate of sewage as three times the average, we have

The peak rate of sewage flow

$$= 3 \times 0.0187 = 0.056 \text{ cumecs. Ans.}$$

Case. (b) In case of partially separate system, the storm water from roofs and paved yards of houses will be allowed to enter the sewers. Now, from the previous example, we have

$$\text{Area of roofs} = \frac{20}{100} \times 36 \text{ hectares} = 7.2 \text{ hectares.}$$

Coefficient of runoff for roofs = 0.90

$$\text{Area of pavements} = \frac{6}{100} \times 36 = 1.8 \text{ hectares}$$

Coefficient of runoff for pavements = 0.80.

∴ The discharge from roofs and pavements, as given by rational formula, using $p_c = 5 \text{ cm/hr.}$ is

$$= \left[\frac{1}{36} \times 0.90 \times 5.0 \times 7.2 + \frac{1}{36} \times 0.80 \times 5.0 \times 1.8 \right] \text{ cumecs}$$

$$= 1.1 \text{ cumecs.}$$

Hence, the storm water which must pass through the sewers of a partially separate system = 1.1 cumecs. Ans.

Note. This is about 20 times the peak rate of sewage produced (i.e. 0.056 cumecs). Moreover, strictly speaking, the sewers of the partially separate system should be designed for carrying this storm water plus the sewage, i.e. for a discharge = 1.1 + 0.056 = 1.156 cumecs.

Example 3.3. The drainage area of one sector of a town is 12 hectares. The classification of the surface of this area is as follows :

Percent of total surface area	Type of surface	Coefficient of runoff
20%	Hard pavement	0.85
20%	Roof surface	0.80
15%	Unpaved street	0.20
30%	Garden and Lawn	0.20
15%	Wooded area	0.15

If the time of concentration for the area is 30 minutes, find the maximum runoff.

Use the formula

$$R = \frac{900}{t + 60}$$

$$K_2 A_2 = 0.80 \times 0.20 A = 0.16 A$$

$$K_3 A_3 = 0.20 \times 0.15 A = 0.03 A$$

$$K_4 A_4 = 0.20 \times 0.30 A = 0.06 A$$

$$K_5 A_5 = 0.15 \times 0.15 A = 0.0225 A$$

$$\Sigma = 0.4425 A$$

$$K = \frac{\Sigma K A}{A} = \frac{0.4425 A}{A}$$

or $K = 0.4425$

Now, in the formula of the type

$$R = \frac{900}{t + 60}$$

R is the rainfall intensity, generally expressed in mm/hr and t is the concentration time in minutes.

∴ $R = \text{rainfall intensity in mm/hr}$

$$= \frac{900}{30 + 60} = 10 \text{ mm/hr.} = 1 \text{ cm/hr.}$$

∴ P_c to be used in our Rational formula (Eq. 3.1)

$$= 1 \text{ cm/hr.}$$

Using Rational formula, we have

$$Q_p = \frac{1}{36} K P_c A$$

$$= \frac{1}{36} \times 0.4425 \times 1 \times 12 \text{ cumecs.}$$

$$= 0.1475 \text{ cumecs ; say } 0.148 \text{ cumecs.}$$

∴ Maximum rate of runoff expected from the area

$$= 0.148 \text{ cumecs. Ans.}$$

Example 3.4. A population of 30,000 is residing in a town having an area of 60 hectares. If the average coefficient of runoff for this area is 0.60, and the time of concentration of the design rain is 30 minutes, calculate the discharge for which the sewers of a proposed combined system will be designed for the town in question. Make suitable assumptions where needed.

Solution. Let us first assume that the town is provided with a planned water supply from the water-works at an average per capita rate equal to 120 litres/day/person*. Also assume that 80% of this water supply will be reaching the sewers as sanitary sewage.

∴ Quantity of sanitary sewage produced per day

$$= \left(\frac{80}{100} \right) 120 \times 30,000 \text{ litres}$$

$$= 0.8 \times 120 \times 30 \text{ cu. m} = 2880 \text{ cu. m}$$

Quantity of sanitary sewage produced per second

$$= \frac{2880}{24 \times 60 \times 60} \text{ cumecs} = 0.033 \text{ cumecs}$$

∴ Average sewage discharge = 0.033 cumecs.

Assuming the maximum sewage discharge to be three times the average, we have

Max. sewage discharge

$$= 3 \times 0.033 = 0.1 \text{ cumecs.}$$

The storm water discharge can be computed by using Rational formula ; i.e.

$$Q_p = \frac{1}{36} K \cdot P_c \cdot A$$

$$\text{Using } P_c = \frac{100}{T + 20} \quad (\text{i.e. Eq. 3.8})$$

$$\text{We have } P_c = \frac{100}{30 + 20} = 2 \text{ cm/hr.}$$

$$\therefore Q_p = \frac{1}{36} \times 0.60 \times 2 \times 60 \text{ cumecs} = 2 \text{ cumecs.}$$

Hence, the total peak discharge for which the sewers of the combined system should be designed

$$= \text{Max. sewage discharge} + \text{Max. storm runoff}$$

$$= 0.1 + 2.0 = 2.1 \text{ cumecs. Ans.}$$

Example 3.5. A separate sewerage system has to be designed for a suburb near Delhi for a rainfall frequency of 2 years. This town is already provided with adequate water supply from water-works at per capita rate of 200 l/day/person. Compute the maximum storm drainage discharge for which the S.W. drain of a pocket draining an area of 20 hectares will be designed. Also compute the peak design discharge for which the sewers of this pocket will be designed. Make use of hourly rainfall charts (Fig. 3.5) and assume the concentration time (or inlet time) as 20 minutes. The population of the pocket discharging sewage is 9000. Make any other assumption if needed and not given.

Solution. From Fig. 3.5 (a), the maximum one hour rainfall having 2 years frequency near Delhi, = 4 cm ; and from table 3.3, the dispersion factor for an area of 20 hectares = 1.0.

$$\therefore p_o = 4.0 \times 1.0 = 4 \text{ cm/hr.}$$

Using Eq. (3.5), we have

$$P_c = p_o \cdot \left(\frac{2}{1 + T_c} \right); \text{ where } T_c \text{ is in hours.}$$

$$= 4 \cdot \left(\frac{2}{1 + \frac{20}{60}} \right) = 4 \cdot \left(\frac{2}{1 + 0.33} \right)$$

Further, assuming the coefficient of discharge for this residential pocket as equal to 0.55, we have

The peak run off rate

$$= Q_p = \frac{1}{36} \cdot K \cdot P_c \cdot A$$

$$= \frac{1}{36} \times 0.55 \times 6 \times 20 \text{ cumecs} = 1.83 \text{ cumecs.}$$

Hence, the drainage discharge for which the storm water drain of the pocket shall be designed

$$= 1.83 \text{ cumecs. Ans.}$$

Now, the town has been provided with a water supply from the water-works at a per capita rate of 200 litres/day/person (given).

∴ Water supplied per day

$$= 200 \times 9000 \text{ litres/day} = 1800 \text{ cu.m/day}$$

Assuming that 80% of the water supplied appears as sewage, we have

The sewage produced per day

$$= 0.8 \times 1800 \text{ cu.m/day} = 1440 \text{ cu.m/day}$$

∴ Average sewage discharge per second

$$= \frac{1440}{24 \times 60 \times 60} \text{ cumecs} = 0.0167 \text{ cumecs}$$

Assuming the peak sewage discharge as three times the average, we have

Maximum sewage discharge

$$= 3 \times 0.0167 = 0.05 \text{ cumecs}$$

Hence, the sewer of the locality will be designed for a discharge of 0.05 cumecs. Ans.

Example 3.6. The surface water from airport road is drained to the longitudinal side drain from across one half of a bituminous pavement surface of total width 7.0 m, shoulder and adjoining land of width 8.0 m on one side of the drain. On the other side of the drain, water flows across from reserve land with average turf and 2% cross slope towards the side drain, the width of this strip of land being 25 m. The inlet time may be assumed to be 10 min for these conditions. The runoff coefficients of the pavement, shoulder and reserve land with turf are 0.8, 0.25 and 0.35, respectively. The length of the stretch of land parallel to the road from where the water is expected to flow to the side drain is 400 m. Estimate the quantity of runoff flowing in the drain assuming 10 year frequency. The side drain will pass through clayey soil with allowable velocity of flow as 1.33 m/s. Intensity-duration chart for 10 year frequency is

Duration (mins)	5	10	15	20	30
Intensity (mm / hour)	160	150	125	110	95

(Engineering Services, 1997)

Solution. The given conditions are shown in the figure 3.6.

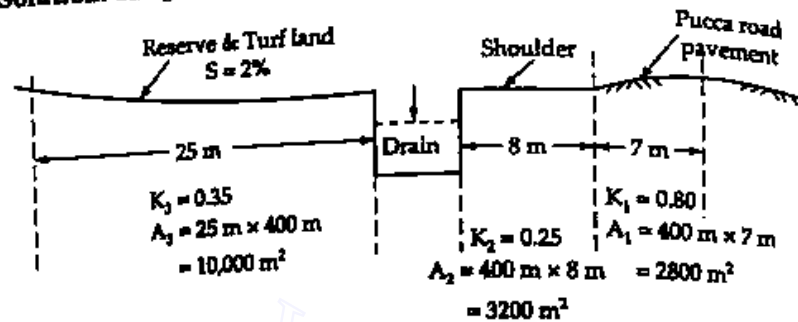


Fig. 3.6

Runoff factor K for the entire area contributing discharge in drain

$$\begin{aligned}
 K &= \frac{K_1 A_1 + K_2 A_2 + K_3 A_3}{A_1 + A_2 + A_3} \\
 &= \frac{2800 \times 0.8 + 3200 \times 0.25 + 10000 \times 0.35}{2800 + 3200 + 10000} = \frac{16000}{16000} \\
 &= 0.40875
 \end{aligned}$$

Now, Time of conc.

$$T_c = T_i + T_f$$

where, $T_i = 10$ min (given)

T_f = channel flow time in drain in 400 m length =

$$\begin{aligned}
 &\frac{400 \text{ m}}{1.33 \text{ m/s}} \\
 &= 300 \text{ secs} = 5 \text{ min.}
 \end{aligned}$$

$$\therefore T_c = 15 \text{ min}$$

Corresponding rain intensity (for 15 min duration rain)

$$= 125 \text{ mm/hr}$$

$$= 12.5 \text{ cm/hr}$$

$$Q = \frac{1}{36} \cdot K \cdot p_c \cdot A$$

where A = Area in ha

p_c = is in cm/hr

$$\begin{aligned}
 &= \frac{1}{36} \times 0.40875 \times 12.5 \times \left(\frac{16000}{10^4} \right) \\
 &= 0.227 \text{ m}^3/\text{s. Ans.}
 \end{aligned}$$

PROBLEMS

1. Differentiate between 'Sewage' and 'Drainage'. Discuss the Rational formula for calculating the peak drainage discharge from a given catchment and reaching a particular storm water drain up to a particular point.

Indicate the off-hand drainage coefficients (per unit of catchment) adopted in Delhi* for the design of separate storm water sewers.

3. (a) Discuss the use of Rational formula for the design of drains draining Indian catchments. Up to how much hectares of catchments, it can be safely used ?
(b) Also discuss the use of Dicken's formula for the Indian catchments, larger than the safe limit up to which Rational formula can be used.
4. Write notes on :
(i) Time of concentration and its significance ;
(ii) Records of automatic rain gauges ;
(iii) Dicken's, Ryve's and Burge's formulas for estimating drainage discharge of Indian catchments.
5. Define and explain the following terms :
(i) Inlet time and Channel flow time ;
(ii) One hour rainfall values ;
(iii) Areal distribution factor ;
(iv) Critical rainfall duration and Critical rainfall intensity.

Hydraulic Designs of Sewers and S.W. Drain Sections

4.1. General Introduction

In a separate sewerage system, which is mostly adopted in modern days, the circular sewer pipes are laid below the ground level, sloping continuously at sufficiently steeper gradients towards the outfall point; and the storm water drains (S.W. drains) are the separately constructed rectangular or trapezoidal surface drains constructed at suitable gradients, and may be covered or kept open. The sewer pipes are designed to carry the maximum quantity of sanitary sewage likely to be produced from the area contributing to the particular sewer; and the S.W. drains are designed to carry the maximum drainage discharge (i.e. the storm run-off that is likely to be produced by the contributing catchment from a rain of design frequency and of a duration equal to the time of concentration, as explained in the previous chapter). The combined sewers are designed to carry the sewage as well as the drainage.

4.2. Difference in the Design of Water Supply Pipes and Sewer Pipes

The hydraulic design of sewers and drains, which means finding out their sections and gradients, is generally carried out on the same lines as that of the water supply pipes. However, there are two major differences between the characteristics of flows in sewers and water supply pipes. These differences are:

(i) The water supply pipes carry pure water without containing any kind of solid particles, either organic or inorganic in nature. The sewage, on the other hand, does contain such particles in suspension; and the heavier of these particles may settle down at the bottom of the sewers, as and when the flow velocity reduces, thus ultimately resulting in the clogging of the sewers. In order to avoid such clogging or silting of sewers, it is necessary that the sewer pipes be of such a size and laid at such a gradient, as to generate self-cleansing velocities at different possible discharges. The sewer materials must also be capable of resisting the wear and tear caused due to abrasion of the solid particles present in the sewage, with the interior of the pipe.

(ii) The water supply pipes carry water under pressure, and hence, within certain limits, they may be carried up and down the hills and the valleys; whereas, the sewer pipes carry sewage as gravity conduits (or open channels)*, and they must, therefore, be laid at a continuous gradient in the

*If sewage has to be carried under pressure, it will require elaborate arrangement at each house which so ever is connected to the sewerage system, making it an impractical and impossible proposition.

downward direction up to the outfall point, from where the sewage will be lifted up, treated and disposed of.

4.3. Provision of Freeboard in Sewers and S.W. Drains

The sanitary sewers, as pointed out earlier, are designed large enough to carry the maximum sewage discharge while flowing half or three-fourth or two-third full. Generally, the sewer pipes of sizes less than 0.4 m dia are designed as running half full at maximum discharge, and the sewer pipes greater than 0.4 m in dia are designed as running $\frac{2}{3}$ rd or $\frac{3}{4}$ th full at maximum discharge.

The extra space, thus left, above the designed full supply line, will leave an ample margin, as to act as a factor of safety to counter-act against the factors, such as:

- (i) low estimates of the average and maximum flows, made due to some wrong data obtained regarding the private water consumption by industries, or public, or about the quantity to be supplied from the water-works at the end of the design period.
- (ii) large scale infiltration of storm water due to wrong or illegal connections, and that of underground water through cracks or open joints in the sewers.
- (iii) unforeseen increase in population or water consumption and the consequent increase in sewage production.

The storm water drains, on the other hand, are generally not provided with so much margins above their FSLs, because the over-flowing of drains is not so much harmful, as is the overflowing of sewers, mainly because sewage is highly polluted as compared to the storm water. The storm water drains are, therefore, provided with nominal provisions of freeboard* above their designed full supply lines, as given in Table 4.1.

Table 4.1. Values of Freeboard to be adopted for the design of S.W. Drains

Peak discharge in the drain for which designed, in cumecs	Freeboard to be left in metres
Below 0.3	0.3
0.3—1.0	0.4
1—5	0.5
5—10	0.6
10—30	0.75
30—150	0.90
more than 150	1.0

*In case of covered drains, the roof slab should be laid at a level above the drain's FSL by an amount equal to the freeboard; and in case of open drains, the embankments constructed on both sides of the drain must have a level greater than the full supply level by an amount equal to the freeboard.

4.4. Hydraulic Formulas for determining Flow Velocities in Sewers and Drains

The sewers and drains are generally designed as open channels except when it is especially required to design them as flowing under pressure, as is the case of inverted siphons* ; and discharge lines from sewage pumping stations, which always flow under pressure. Various empirical formulas, which have been suggested for determining the gradients necessary to obtain design velocities of flow in sewers or drains are given below :

4.4.1. Chezy's Formula. This formula was evolved by Chezy in 1775, and states that

$$V = c\sqrt{rs} \quad \dots(4.1)$$

where V = velocity of flow in the channel in m/sec.

r = hydraulic mean radius of channel, i.e. hydraulic mean depth of channel

$$= \frac{a}{p}$$

where a is the area of channel and p is the wetted perimeter of the channel.

For a circular sewer running full, r is given by

$$r = \frac{\pi D^2}{4\pi D} = \frac{D}{4}$$

where D is the diameter of the sewer.

s = hydraulic gradient, equal to the ground slope for uniform flows, i.e. the head drop between the two points divided by the length.

c = a constant, called Chezy's constant.

The Chezy's constant c depends upon various factors, such as the size and the shape of the channel, roughness of the channel surface, the hydraulic characteristics of the channel, etc. The value of c can be obtained by using either the Kutter's formula or the Bazin's formula, as given below. The channel section may then be designed by using

$$Q = A.V$$

where A is the flow area of cross-section of the channel, and V is the flow velocity in the channel.

(a) Kutter's formula. According to this formula, the value of c to be used in eq. (4.1) is given by

$$c = \frac{\left(23 + \frac{0.00155}{s}\right) + \frac{1}{n}}{1 + \left(23 + \frac{0.00155}{s}\right) \cdot \frac{n}{\sqrt{r}}} \quad \dots(4.2)$$

where n = Rugosity coefficient depending upon the type of the channel surface. Various values of n are given for different surfaces in Table 4.2.

s = Bed slope of the sewer (for uniform flows, of course)

$$r = \text{Hydraulic mean depth} = \frac{a}{p}$$

Table 4.2. Mannings or Kutter's Rugosity Coefficients (n)

S. No.	Pipe Material	Values of n at full depth for	
		Good interior surface condition	Fair interior surface condition*
(1)	(2)	(3)	(4)
1.	Salt glazed stoneware pipes	0.012	0.014
2.	Cement concrete pipes	0.013	0.015
3.	Cast iron pipes	0.012	0.013
4.	Brick, unglazed sewers/drains	0.013	0.015
5.	Asbestos cement	0.011	0.012
6.	Plastic (smooth) pipes	0.011	0.011

This formula may be simplified by omitting the term $\frac{0.00155}{s}$ from the numerator as well as the denominator, since this will affect the results much less than an increase of 0.001 in the value of n .

(b) Bazin's formula. According to this formula, the value of c to be used in Chezy's formula is given by

$$c = \frac{149}{1 + \frac{K}{\sqrt{r}}} \quad \dots(4.3)$$

where r = Hydraulic mean depth of channel

$$= \frac{a}{p}$$

K = Bazin's constant as given by Table 4.3.

*Described in chapter 5.

*Usually, the values corresponding to the fair condition of the interior surface are used in the designs.

Table 4.3. Bazin's Constant (K)

S. No. (1)	Type of the inside surface of the sewer or drain (2)	Value of K (3)
1.	Very smooth surfaces.	0.11
2.	Smooth brick and concrete surfaces.	0.29
3.	Rough brick and concrete surfaces.	0.50
4.	Smooth rubble and masonry surfaces.	0.83
5.	Good earthen channels.	1.54
6.	Rough earthen channels.	3.17

4.4.2. Manning's Formula. This formula was evolved by Manning in 1890, and is the most popular formula used for designing sewers and drains in U.S.A. as well as in India.

This formula has fully satisfied the experimental results and states that

$$V = \frac{1}{n} \cdot r^{2/3} \cdot s^{1/2} \quad \dots(4.4)$$

where n , r and s have the same meaning as given earlier. The values of rugosity coefficient (n) are the same as were given by Kutter, and represented in Table 4.2.

4.4.3. Crimp and Burge's Formula. This formula is very simple and is commonly used in England. It states that

$$V = 83.5 \cdot r^{2/3} \cdot s^{1/2} \quad \dots(4.5)$$

This formula is comparable to Manning's formula, having

$$\frac{1}{n} = 83.5; \quad \text{or } n = 0.012$$

Hence, this formula is identical to Manning's formula for all those sewer materials for which n is taken as 0.012.

4.4.4. William-Hazen's Formula. This formula is generally used for flows under pressure for designing water supply pipes, and is seldom used for designing sewers. It states that

$$V = 0.85 C_H \cdot r^{0.83} \cdot s^{0.54} \quad \dots(4.6)$$

The values of coefficient C_H may be taken as shown in Table 4.4.

Table 4.4. Values of C_H for William Hazen's formula

S. No. (1)	Type of pipe material (2)	Value of C_H for	
		New pipes (3)	Design purposes (4)
1.	Concrete and R.C.C. pipes	140	110
2.	Cast iron pipes	130	100
3.	Galvanised iron pipes	120	100
4.	Steel pipes with welded joints	110	100

(1)	(2)	(3)	(4)
5.	Steel pipes with rivetted joints	110	95
6.	Steel pipes with welded joints lined with cement for bituminous enamel	140	110
7.	Asbestos cement pipes	150	120
8.	Plastic pipes	150	120

4.5. Maximum and Minimum Velocities to be generated in Sewers

It was pointed out in the earlier paragraphs that the flow velocities in the sewers should be such that neither the suspended materials in sewage get *silted up* nor the sewage pipe material gets *scoured out*. The first limitation, limits the minimum velocity; and the second limitation, limits the maximum velocity.

4.5.1. Minimum Velocities. The silting of sewers can be avoided by generating such high velocities that would not permit the solids to settle down; i.e., the velocity should be such as to cause automatic self-cleansing effect. Such a self-cleansing velocity, i.e. the velocity which will even scour the deposited particles of a given size, must be developed in the sewers, at least once a day, so as not to allow any deposition in the sewers. The generation of such a *minimum self-cleansing velocity in the sewer, atleast once a day*, is important, because if certain deposition takes place and is not removed, it will obstruct free flow, causing further deposition and finally leading to the complete blocking of the sewer.

Shield's expression for self-cleansing velocity. Self cleansing velocity, which is necessary to cause scouring and suspension of solid particles (heavier than water), can be determined as follows:

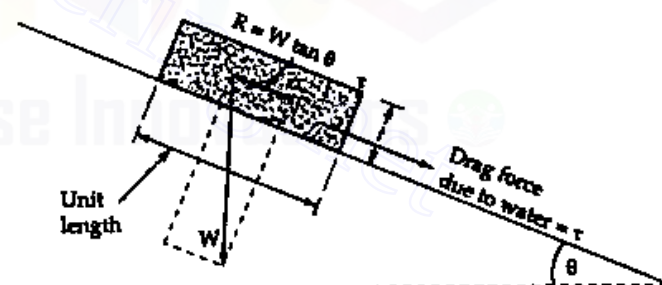


Fig. 4.1

Consider a layer of sediment of unit width and unit length and of thickness t deposited at the invert of a sewer of gradient θ . Let γ_{sub} is the submerged unit weight of the sediment.

Then, the weight of the sediment considered

$$= W = \gamma_{sub} (1 \times 1) t$$

$$\text{But } \gamma_{sub} = \gamma_w \left(\frac{G-1}{1+e} \right)$$

where γ_w = unit weight of the water.

G = specific gravity of the sediment.

e = void ratio of sediment.

But the porosity of sediment

$$n = \left(\frac{e}{1+e} \right), \text{ where } n = \text{porosity of sediment}$$

$$\therefore 1-n = \frac{1}{1+e}$$

$$\therefore \gamma_{sub} = \gamma_w (G-1)(1-n)$$

$$\therefore W = \gamma_w (G-1)(1-n)t$$

...(i)

Now, in order to scour the deposited sediment, and for just causing it to slide down the inclined plane, it is necessary that the drag force (τ) exerted by the flowing water on the surface of the channel equals the frictional resistance R , i.e. $\tau = R$;

$$\text{But } R = W \tan \theta$$

and for smaller values of θ , $\tan \theta = \sin \theta$

$$\therefore R = W \sin \theta$$

$$\text{or } \tau = R = W \sin \theta$$

...(ii)

$$\text{or } \tau = \gamma_w (G-1)(1-n)t \sin \theta$$

...(4.7)

But we know that the drag force or the intensity of tractive force (τ) which is exerted by the flowing water on a channel of hydraulic mean depth r is given by

$$\tau = \gamma_w r s \quad \dots(4.8)$$

where τ = drag force

r = hydraulic mean depth of the channel

s = bed slope of the channel.

γ_w = unit wt. of water.

Equating Eq. (4.7) and (4.8), we have

$$\gamma_w (G-1)(1-n)t \sin \theta = \gamma_w r s$$

Using $(1-n) \sin \theta = k'$ (a constant), we get

$$(G-1) k' t = r s$$

$$\text{or } s = \frac{k'}{r} (G-1) t$$

For single grains, the volume per unit area (i.e. t) becomes a function of the diameter of the grain d' as an inverse measure of the surface area of the individual grains exposed to drag or friction.

*Please see equation (4.17) and (4.6) in "Soil Mechanics and Foundation Engineering" by the same author.

$$\therefore s \propto \frac{k'}{r} (G-1) d' \quad (\text{for self cleansing})$$

$$\text{or } s = \frac{k}{r} (G-1) d'$$

Hence, the self cleansing invert slope(s) is given as:

$$s = \frac{k}{r} (G-1) d' \quad \dots(4.9)$$

where k is a dimensional constant, indicating an important characteristic of sediment (solids) present in sewage. Its value usually varies from 0.04 (minimum)-applicable to start of scouring of clean grit, to about 0.8 - applicable for full removal of sticky grit. For relatively clean inorganic and organic matters present in sewage, its values are taken at 0.04 and 0.06, respectively. The actual value of k , should, however be determined only by experiments for removal of different materials.

Hence, the invert slope at which the sewer will be self-cleansing is given by the Eq. (4.9).

Now, from Chezy's formula, the velocity

$$V = c \sqrt{rs}$$

$\therefore$ Self-cleansing velocity (V_s) is, hence, given as:

$$V_s = c \sqrt{r \frac{k}{r} (G-1) d'} \quad \text{or } V_s = c \sqrt{k d' (G-1)} \quad \dots(4.10)$$

The Chezy's constant (c) in the above equation can be equated to $\sqrt{\frac{8g}{f'}}$ by comparing Chezy's formula and Darcy-Weisbach formula*. Therefore, Eq. (4.9) becomes,

*From Darcy-Weisbach formula,

$$H_L = \frac{f' L V^2}{2gD}$$

(where D is the pipe dia)

$$\text{or } \frac{H_L}{L} = s = \frac{f' V^2}{2gD} \quad \text{or } V = \sqrt{\frac{2gDs}{f'}} \quad \dots(i)$$

By Chezy's formula,

$$V = c \sqrt{rs}$$

...(ii)

Comparing (i) and (ii), we get

$$\text{or } c \sqrt{r} = \sqrt{\frac{2gD}{f'}}$$

$$\text{But } r = \frac{D}{4} \quad (\text{for circular pipes running full})$$

$$\therefore \frac{D}{4} = \frac{2gD}{f'} \quad \text{or } c = \sqrt{\frac{8g}{f'}}$$

Self cleansing velocity

$$V_s = \sqrt{\frac{8g}{f'} k d^3 (G-1)} \quad \dots(4.11)$$

The usual value of f' for sewer pipes is 0.03.

Similarly, by equating Chezy's formula with Manning's formula

(i.e., $V = \frac{1}{n} R^{2/3} \sqrt{s}$), we can get $c = \frac{1}{n} R^{1/6}$. The Eq. (4.10) then becomes

$$V_s = \frac{1}{n} R^{1/6} \sqrt{k d^3 (G-1)} \quad \dots(4.12)$$

(The usual value of n for sewer pipes is 0.013.)

From the above equations, it can be computed that the inorganic sand particles of diameter 1 mm and specific gravity 2.65, can be removed with a minimum velocity of about 0.45 m/sec, and similarly for removing organic particles of 5 mm diameter and sp. gravity 1.2, a minimum velocity of about 0.45 m/sec is required to be generated. Hence for removing the impurities mostly present in sewage (i.e. sand upto 1 mm diameter and organic particles upto 5 mm dia), it is necessary that a minimum velocity of about 0.45 m/sec and an average velocity of about 0.9 m/sec is developed in sewers. With this provision, the inorganic solids larger than 1 mm in size and organic solids larger than 5 mm in size, will of course settle down on the invert of the sewer pipe, and will have to be removed by the maintenance crew during regular desilting operations, to be carried out at suitable intervals.

Hence, while finalising the sizes and gradients of the sewers, they must be checked for the minimum velocity that would be generated at minimum hourly discharge (i.e. about $\frac{1}{3}$ rd of the average daily discharge).

Such a self-cleansing velocity (0.45 m/sec) at minimum discharge can also be ensured by keeping the minimum design velocity to a value as high as 0.8 m/sec.

Hence, while designing sewers, the flow velocity at full design depth, is generally kept at about 0.8 m/sec or so. And since sewers are generally designed for $\frac{1}{3}$ — $\frac{2}{3}$ th full, the velocity at 'running full condition' will even be more than that; say about 1 m/sec, or so.

The minimum velocity generated in the sewers will not only ensure the adequate transportation of the suspended solids, but will also help in

- (i) keeping the sewer size under control;
- (ii) preventing the sewage from getting stale and decomposed by moving it faster, thereby preventing evolution of foul gases.

Since the velocity of flow developed in a sewer of a particular material depends only upon the hydraulic mean depth of the sewer and the slope on

which the sewer has been laid*, values of slopes which are required for generating self-cleansing velocities (0.8 to 1 m/s) in different sized pipes can be easily worked out by using any of the equations from 4.1 to 4.5.

The values of gradients required to generate velocities of 0.75, 0.90 and 1.05 m/sec. for different dia. pipes running full, have been worked out and shown in Table 4.5.

Table 4.5. Sewer Gradient required to generate Self-cleansing Velocities in different sized Pipes (running full)

Dia. of sewer mm	Gradients 1 in.....for developing velocity of		
	0.75 m/sec	0.90 m/sec	1.05 m/sec
100	90	75	60
150	150	105	78
225	265	180	135
300	385	270	195
375	520	355	265
450	660	460	340
525	820	570	415
600	970	680	500
675	1,100	790	580
750	1,300	910	670
900	1,700	1,200	850
1,050	2,100	1,450	1,050
1,200	2,500	1,700	1,250

National Building Organisation (N.B.O.) of India has suggested the following gradients as being sufficient for preventing interference of sewage solids with the flow, for small sized sewers :

Table 4.6. N.B.O. Recommendations for Small Sewers

Dia. of the sewer in mm	Gradient required to generate self cleansing velocity	Velocity generated in the sewer when running half full, for which depth, small sewers are usually designed
(1)	(2)	(3)
100	1 in 60	0.58 m/sec**
150	1 in 100	0.81 m/sec**
225	1 in 120	0.79 m/sec**

4.5.2. Maximum Velocities. The smooth interior surface of a sewer pipe gets scoured due to the continuous abrasion caused by the suspended solids present in sewage. This scouring and wear and tear of the pipe interior is

*Provided the increase in the value of n (Manning's roughness coefficient) at reduced depths, are ignored.

**These values have been worked out by considering the variations in value of n at lower depths.

much more pronounced at velocities higher than what can be tolerated by the pipe materials. This wear and tear of the sewer pipes will not only reduce their life spans but will also reduce their carrying capacities. In order to avoid these complications, it is, therefore, necessary to limit the maximum velocity that will be produced in the sewer pipe at any time.

This limiting or non-scouring velocity will mainly depend upon the material of the sewer, and its values are given in Table 4.7 for different commonly used sewer materials.

Table 4.7. Non-scouring Limiting Velocities in Sewers and Drains

S. No.	Sewer Material	Limiting velocity in m/sec
1.	Vitrified tiles and glazed bricks*	4.5–5.5
2.	Cast iron sewers	3.5–4.5
3.	Stone ware sewers	3.0–4.0
4.	Cement concrete sewers	2.5–3.0
5.	Ordinary brick-lined sewers	1.5–2.5
6.	Earthen channels	0.6–1.2

The problem of controlling the high velocities generated in the sewers, mainly arises in hilly areas, where the available ground slopes may be very steep. In such places, it may, therefore, be required to limit the design gradient and to adjust the balance available head by constructing drops through manholes, at suitable places along the length of the sewer.

4.6. Effects of Flow Variation on Velocity in a Sewer

The sewage discharge flowing through a sewer does not remain constant all the time, but varies considerably from time to time. Due to this variation in discharge, the depth of flow varies, and hence the hydraulic mean depth (H.M.D. i.e. r) varies. Due to the change in hydraulic mean depth, the flow velocity [which directly depends on $(\text{H.M.D.})^{2/3}$] gets affected from time to time.

Since the velocity developed in a sewer of a given section and grade will be less as and when the flow reduces (and the sewer becomes less than half full**), it is necessary to check the sewer for maintaining a minimum velocity of about 0.45 m/sec at the time of minimum (hourly) flow (assumed at about $\frac{1}{3}$ rd of average (daily) flow). The designer should also ensure that a velocity of about 0.9 m/sec is developed at least at the time of the maximum flow (assumed as given by Table 2.3) and preferably during the average flow periods also. Moreover, care should be taken to see that at the time of maximum flow, the velocity generated does not exceed the scouring value

**Vitrified tiles and glazed bricks are much more resistant to wear as compared to ordinary bricks or concrete. Therefore, the ordinary brick or concrete sewers are sometimes coated with vitrified tile liners or glazed bricks at their bottoms (where the abrasion is maximum, because sand, grit and mud settle there).

given by Table 4.7. However, in flat countries, like Indo-Gangetic plains of North India, sewers are designed to develop self cleansing velocities of about 0.9 m/sec at maximum discharge only, and the condition of developing such a velocity at average flow is waived off. This permits flatter gradients, avoiding deep excavations.

On the other hand, if the available ground slopes are neither too steep nor too flat, the condition of developing velocities of about 0.9 m/sec. at average flow may be practically possible and economical, and hence may be insisted upon. In hilly areas permitting too high slopes, the sewers may be designed to develop such velocities of 0.9 m/sec even at minimum discharge, and they may be checked for limiting non-scouring velocities at maximum discharge.

4.7. Hydraulic Characteristics of Circular Sewer Sections Running Full or Partially Full

The circular section is most widely adopted for sewer pipes. They may, however, sometimes be of 'egg shape' or 'horse shoe shape' or 'rectangular shape'. The circular sewers may sometimes run full or may run partially full. When they run full, their hydraulic properties will be as given below :

Area of cross-section

$$(a) = A = \frac{\pi}{4} D^2$$

where D is the dia. of the pipe.

Wetted perimeter

$$(p) = P = \pi D$$

$\therefore$ Hydraulic mean depth

$$r = R = \frac{A}{P} = \frac{\frac{\pi}{4} D^2}{\pi D} = \frac{D}{4}$$

When the sewers run partially full, at a depth, say d , as shown in Fig. 4.2, the hydraulic elements can be worked out as given below :

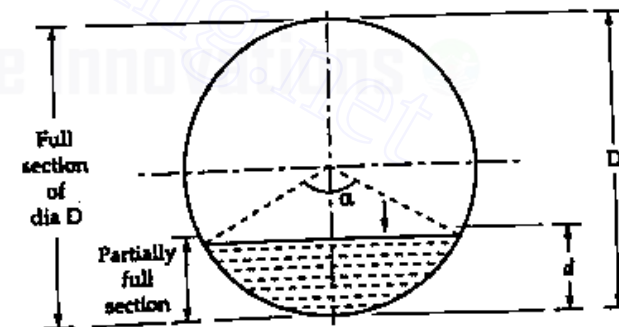


Fig. 4.2. Partially full circular sewer section.

The depth at partial flow

$$= d = \left[\frac{D}{2} - \frac{D}{2} \cos \frac{\alpha}{2} \right]$$

where α is the central angle in degrees, as shown in Fig. 4.2.

∴ Proportionate depth

$$\begin{aligned} &= \frac{d}{D} \\ &= \frac{1}{2} \left(1 - \cos \frac{\alpha}{2} \right) \end{aligned} \quad \dots(4.13)$$

Area of cross-section while running partially full

$$\begin{aligned} a &= \frac{\pi D^2}{4} \cdot \frac{\alpha}{360^\circ} - \frac{D}{2} \cos \frac{\alpha}{2} \cdot \frac{D}{2} \sin \frac{\alpha}{2} \\ &= \frac{\pi D^2}{4} \left[\frac{\alpha}{360^\circ} - \frac{\sin \alpha}{2\pi} \right] \end{aligned} \quad \dots(4.14)$$

$$\left[\because \sin \alpha = 2 \sin \frac{\alpha}{2} \cdot \cos \frac{\alpha}{2} \right]$$

∴ Proportionate area

$$= \frac{a}{A} = \left[\frac{\alpha}{360^\circ} - \frac{\sin \alpha}{2\pi} \right] \quad \dots(4.15)$$

Wetted perimeter, while running partially full

$$= p = \pi D \cdot \frac{\alpha}{360^\circ} \quad \dots(4.16)$$

∴ Proportionate perimeter

$$= \frac{p}{P} = \frac{\alpha}{360^\circ} \quad \dots(4.17)$$

Hydraulic mean depth (H.M.D.), while running partially full

$$\begin{aligned} r &= \frac{a}{p} \\ &= \frac{D}{4} \left[1 - \frac{360^\circ \sin \alpha}{2\pi\alpha} \right] \end{aligned} \quad \dots(4.18)$$

∴ Proportionate H.M.D.

$$= \frac{r}{R} = \left[1 - \frac{360^\circ \sin \alpha}{2\pi\alpha} \right] \quad \dots(4.19)$$

Velocity of flow is given by Manning's formula, as

v = velocity at partial flow

$$= \frac{1}{n} r^{2/3} \sqrt{S_0} \quad [\because s = S_0, \text{ i.e., bed slope}]$$

V = velocity, when running full

$$= \frac{1}{N} R^{2/3} \sqrt{S_0}$$

(Bed slope $s = S_0$ remaining constant whether pipe runs full or partially full)

∴ Proportionate velocity

$$= \frac{v}{V} = \frac{N}{n} \cdot \frac{r^{2/3}}{R^{2/3}} \quad \dots(4.20)$$

Assuming that roughness coefficient n does not vary with depth, we have

$$n = N.$$

∴ Proportionate velocity

$$\begin{aligned} &= \frac{v}{V} = \frac{r^{2/3}}{R^{2/3}} \\ &= \left[1 - \frac{360^\circ \sin \alpha}{2\pi\alpha} \right]^{2/3} \end{aligned} \quad \dots(4.21)$$

Since, discharge is given by $a.v$, therefore,

Discharge when pipe is running partially full

$$= q = av \quad \dots(4.22)$$

Discharge when pipe is running full

$$= Q = AV \quad \dots(4.23)$$

∴ Proportionate discharge

$$\begin{aligned} &= \frac{q}{Q} = \frac{av}{AV} = \frac{a}{A} \cdot \frac{v}{V} \\ &= \left[\frac{\alpha}{360^\circ} - \frac{\sin \alpha}{2\pi} \right] \left[1 - \frac{360^\circ \sin \alpha}{2\pi\alpha} \right] \end{aligned} \quad \dots(4.24)$$

In all the above derived equations, except α , every thing is constant, and hence by giving different values to α , all the six proportionate elements can be easily calculated.

By taking proportionate depth (d/D) as reference, values of other elements can be found out from the ready made computed values, shown in Table 4.8.

Table 4.8. Proportionate Values of Hydraulic Elements for Circular Sewers when Flowing Partially Full (without being corrected for variations of roughness with depth)

Proportionate Depth d/D (1)	Proportionate area a/A (2)	Proportionate Wetted perimeter p/P (3)	Proportionate H.M.D. r/R (4)	Proportionate Velocity v/V (5)	Proportionate Discharge q/Q (6)
1.00	1.00	1.00	1.000	1.000	1.000
0.90	0.949	0.857	1.192	1.124	1.066
0.80	0.858	0.706	1.217	1.140	0.988
0.70	0.748	0.631	1.186	1.120	0.838
0.60	0.626	0.564	1.110	1.072	0.671
0.50	0.500	0.500	1.000	1.000	0.500
0.40	0.373	0.444	0.857	0.902	0.337
0.30	0.252	0.369	0.684	0.776	0.196
0.20	0.143	0.296	0.482	0.616	0.088
0.10	0.052	0.206	0.254	0.401	0.021
0.00	0.000	0.000	0.000	0.000	0.000

From the data given in Table 4.8, it can be seen that the velocities in partially filled circular sewer sections, equal or exceed those in full sections, so

not when the sewer is running full but when the depth of flow is 0.81 times the full depth, and is about 14% greater than when running full.

Similarly, the maximum discharge is obtained not when the sewer is running full, but when the depth is about 0.95 times the full depth, and is about 7% greater than that when running full. But, as the depth of flow goes below half the full depth, the velocities and discharges, both decline, and become lesser than those at full flow. However, the decline in proportionate velocities is not so sharp, as is the decline in discharges, because the area (on which depends discharge) reduces much faster as compared to the hydraulic mean depth (on which depends velocity).

The statements given above are precisely correct only, so long as the roughness (n) is supposed to be independent of depth. However, Sundin has demonstrated theoretically as well as experimentally that the value of rugosity coefficient (n) is not constant, but varies as much as 20% or more with depth, as shown in col. (2) of Table 4.9.

Table 4.9. Hydraulic Particulars of Circular Sewers, accounting Variations of n with depth

Proportionate depth d/D (1)	Proportionate roughness n/N (2)	Proportionate velocity v/V (3)	Proportionate discharge q/Q (4)
1.0	1.00	1.000	1.000
0.9	1.07	1.056	1.020
0.8	1.14	1.003	0.890
0.7	1.18	0.952	0.712
0.6	1.21	0.890	0.557
0.5	1.24	0.810	0.408
0.4	1.27	0.713	0.268
0.3	1.28	0.605	0.163
0.2	1.27	0.486	0.070
0.1	1.22	0.329	0.017

The effect of the variation of n is to reduce the proportionate velocities and discharges at lower depths of flow, because roughness (n) increases with lower depths. If these variations of n are also considered, more precise values of proportionate velocities and discharges can be computed out, as shown in Col. (3) and (4) of table 4.9.

These precise proportionate velocities and discharges (Table 4.9), have been plotted, as shown by firm lines in Fig. 4.3, to obtain a standard chart, which is very useful in obtaining different elements, by knowing any one of them. Values of table 4.8 are also plotted by dotted curves (Fig. 4.3), as to obtain proportionate elements, when variations of n are ignored.

By a perusal of Fig. 4.3, it is found that when roughness is also considered, the velocities equal to or more than those produced in sections flowing full, will be produced at lower depths of flow.

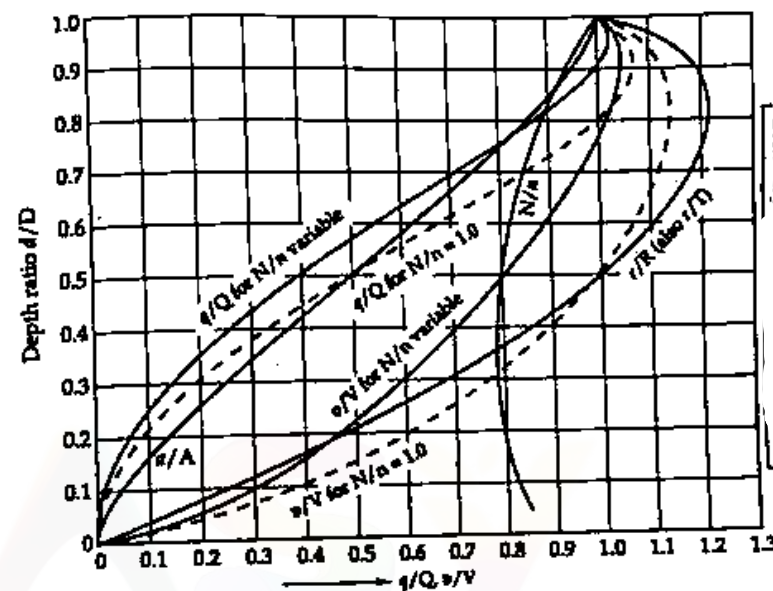


Fig. 4.3. Standard chart for proportionate hydraulic elements for circular sewers.

Nevertheless, sewers flowing with depths between 50% and 80% full, need not be placed on steeper gradients to be as self-cleansing as sewers flowing full. The reason is that velocity and discharge are functions of tractive force intensity, which depends upon the friction coefficient as well as flow velocity. Needed ratios of v/V , q/Q and s/S , where the subscript s denotes self-cleansing equal to that obtained in the full section, can be computed with the help of equation (4.8) on the assumption that equality of tractive force intensity implies equality of cleaning or $\tau = T$.

$$\therefore \gamma_w r.s. = \gamma_w R.S;$$

$$\text{where } s = s_s$$

$$\text{or } s_s = \left(\frac{R}{r}\right) S \quad \dots(4.25)$$

$$\text{and } \frac{v_s}{V} = \frac{N}{n} \left(\frac{r}{R}\right)^{2/3} \sqrt{\frac{s_s}{S}} \quad \dots(4.26)$$

$$\text{or } \frac{v_s}{V} = \frac{N}{n} \left(\frac{r}{R}\right)^{1/6} \quad \dots(4.27)$$

$$\text{and } \frac{q_s}{Q} = \frac{N}{n} \left(\frac{r}{R}\right)^{1/6} \left(\frac{r}{R}\right)^{1/6} \quad \dots(4.27)$$

Various curves for values of $\frac{q_s}{Q}$, $\frac{v_s}{V}$ and $\frac{s_s}{S}$ for different values of $\frac{d}{D}$ are plotted, as shown in Fig. 4.4. It is confirmed from these figures that the minimum gradients are enough, so long as circular sewers flow more than half full. However, when flow depth reduces to less than 0.3 times the full depth, the

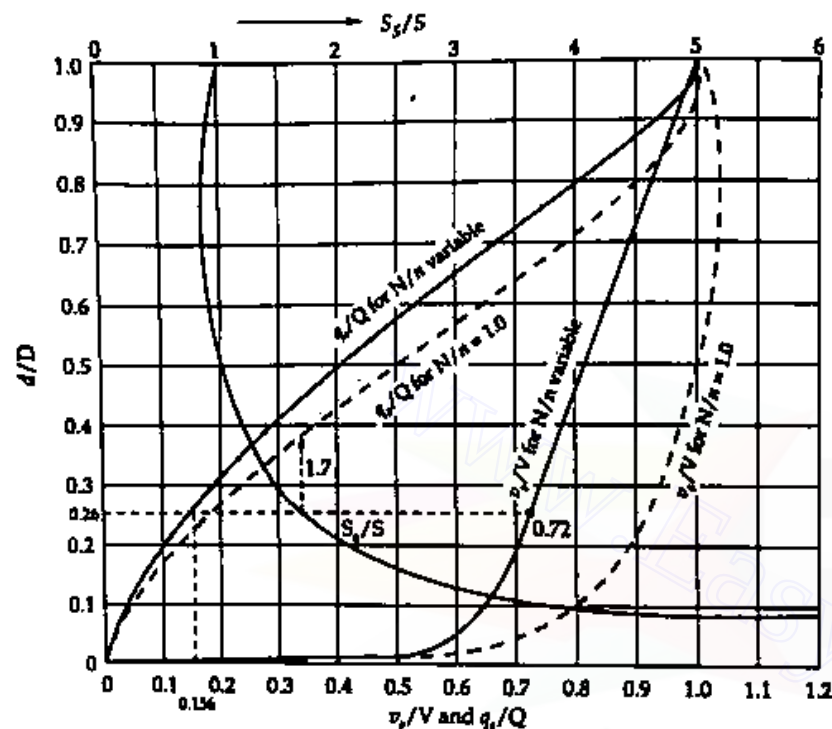


Fig. 4.4. Standard chart for proportionate elements, to ensure self-cleansing equivalent to full flow, in circular sewers.

grades must be increased. So much so, that at a depth of 0.2 times the full depth, the gradient must be doubled, and at a depth of 0.1 times the full depth, the gradient must be trebled. The use of these equations will become more clear when we solve the following examples.

Example 4.1. A 300 mm dia sewer is to flow at 0.3 depth on a grade ensuring a degree of self-cleansing equivalent to that obtained at full depth at a velocity of 0.90 m/sec. Find the required grade and associated velocity and rate of discharge at this depth. Assume Manning's rugosity coefficient n as 0.013. The variations of n with depth may be neglected.

Solution. From Manning's formula, we have

$$v = \frac{1}{n} \cdot r^{2/3} \sqrt{S}$$

At full depth, using capital letters, we have

$$V = \frac{1}{N} \cdot R^{2/3} \sqrt{S}$$

Using $V = 0.90$ m/sec.

$$N = 0.013$$

$$R = \frac{D}{4} = \frac{300}{4} = 75 \text{ mm} = 0.075 \text{ m}$$

$$\text{We have } 0.90 = \frac{1}{0.013} (0.075)^{2/3} \sqrt{S}$$

$$\text{or } \sqrt{S} = \frac{0.90 \times 0.013}{0.178} = 0.0657$$

$$\text{or } S = 0.0043 \text{ (i.e. 4.3‰)*}$$

$$\text{and } Q = A \cdot V.$$

$$= \frac{\pi}{4} (0.3)^2 \cdot 0.90 \text{ cumecs} = 0.064 \text{ cumecs}$$

Now, at a depth (d) equal to 0.3 times the full depth (D), we have

$$\frac{d}{D} = 0.3,$$

Using Table 4.8, we have for

$$\frac{d}{D} = 0.3$$

(Variations of n to be neglected, as given)

$$\frac{a}{A} = 0.252$$

$$\frac{r}{R} = 0.684$$

Now for the sewer to be the same self-cleansing at 0.3 depth (d), as it will be at full depth, we have the gradient (s_s) required from Eq. (4.25), as :

$$s_s = \left(\frac{R}{r} \right) S$$

$$\therefore s_s = \frac{1}{0.684} S = \frac{1}{0.684} \times 0.0043 = 0.0063 \text{ (i.e. 6.3‰). Ans.}$$

Now, the velocity v_s generated at this gradient is given by Eq. (4.26), as

$$\begin{aligned} v_s &= \frac{N}{n} \cdot \left(\frac{r}{R} \right)^{1/6} \cdot V \\ &= 1 \times (0.684)^{1/6} \times 0.9 \text{ m/sec} = 0.939 \times 0.9 \\ &= 0.846 \text{ m/sec. Ans.} \end{aligned}$$

The discharge q_s is given by Eq. (4.27) as

$$\begin{aligned} q_s &= \frac{N}{n} \left(\frac{a}{A} \right) \left(\frac{r}{R} \right)^{1/6} \cdot Q \\ \therefore q_s &= (1)(0.252)(0.684)^{1/6}(0.064) \text{ cumecs} \\ &= 0.015 \text{ cumecs. Ans.} \end{aligned}$$

Example 4.2. A 225 mm dia sewer is to discharge 0.005 cumecs at a velocity as self-cleansing as a sewer flowing full at 0.80 m/sec. Find the depth, velocity generated, and the required gradient. Use Manning's rugosity coefficient as 0.013. Also assume that the rugosity coefficient varies with depth. Standard chart of Fig. 4.4 can be used to compute the values of proportionate elements of self-cleansing equivalent of full flow.

Solution. Using Manning's formula, when sewer runs full at a velocity of 0.8 m/sec, we have

$$V = \frac{1}{N} \cdot R^{2/3} \sqrt{S}$$

$$\therefore 0.8 = \frac{1}{0.013} \cdot \left(\frac{0.225}{4}\right)^{2/3} \sqrt{S}$$

or $\sqrt{S} = \frac{0.8 \times 0.013}{0.146} = 0.0712$

$$\therefore S = 0.0051 \text{ (i.e. 5.1\%)}$$

Now $Q = A \cdot V$

$$= \frac{\pi}{4} \cdot (0.225)^2 \times 0.8 \text{ cumecs.}$$

$$= 0.0397 \times 0.8$$

$$= 0.032 \text{ cumecs}$$

But $q_s = 0.005 \text{ cumecs (given)}$

$$\therefore \frac{q_s}{Q} = \frac{0.005}{0.032} = 0.156$$

Now, from Fig. 4.4 for $\frac{N}{n}$ variable and $\frac{q_s}{Q} = 0.156$, we have

$$\frac{d_s}{D} = 0.26$$

$$\frac{v_s}{V} = 0.72$$

and $\frac{s_s}{S} = 1.7$

Hence, $d_s = \text{depth at equivalent self-cleansing}$
 $= 0.26 \text{ times full depth}$
 $= 0.26 \times 0.225 \text{ m} = 0.058 \text{ m} = 58 \text{ mm. Ans.}$

$v_s = \text{velocity at equivalent self-cleansing}$
 $= 0.72 V = 0.72 \times 0.8 \text{ m/sec.}$
 $= 0.58 \text{ m/sec. Ans.}$

and $s_s = \text{slope at equivalent self-cleansing}$
 $= 1.7 \times 5.1\% = 8.6\%. \text{ Ans.}$

Example 4.3. A 350 mm dia sewer is to flow at 0.35 depth on a grade ensuring a degree of self-cleansing equivalent to that obtained at full depth at a velocity of 0.8 m/sec. Find :

- the required grade
- associated velocity
- the rate of discharge at this depth.

Given :

(ii) Proportionate area = 0.315

(iii) Proportionate wetted perimeter = 0.472

(iv) Proportionate HMD (r/R) = 0.7705. (Civil Services, 1984)

Solution. At full depth, $V = 0.8 \text{ m/sec}$, $D = 350 \text{ mm} = 0.35 \text{ m}$, $N = 0.014$.

At 0.35 depth, $\frac{d}{D} = 0.35$, $\frac{a}{A} = 0.315$, $\frac{P}{P} = 0.472$, $\frac{r}{R} = 0.7705$.

$\therefore$ At full depth

$$V = \frac{1}{N} \cdot R^{2/3} \cdot \sqrt{S}$$

or $0.8 = \frac{1}{0.014} \cdot \left(\frac{0.35}{4}\right)^{2/3} \cdot \sqrt{S}$

or $\sqrt{S} = 0.0568$

or $S = 3.234 \times 10^{-3}$

Now, for a sewer to be the same self-cleansing at 0.35 depth as it will be at full depth, we have the gradient (s_s) required from equation (4.25) as

$$s_s = \left(\frac{R}{r}\right) S$$

$$= \frac{1}{0.7705} \times 3.234 \times 10^{-3} \quad \left[\because \frac{r}{R} = 0.7705 \text{ given}\right]$$

$$= 4.2 \times 10^{-3}$$

i.e. $= 4.2\%$

(i) Hence, the reqd. grade = 4.2%. Ans.

(ii) The velocity generated at this gradient at 0.35 depth, is given by equation (4.26), as

$$v_s = \frac{N}{n} \cdot \left(\frac{r}{R}\right)^{1/6} \cdot V$$

$$= 1 \times (0.7705)^{1/6} \cdot 0.8 = 0.765 \text{ m/sec. Ans.}$$

(iii) The discharge q_s , is then given by

$$q_s = a \cdot v_s$$

$$= 0.315 \cdot \frac{\pi}{4} \times (0.35)^2 \times 0.765$$

$$= 0.023 \text{ cumecs. Ans.}$$

Example 4.4. (a) A main combined sewer was designed to serve an area of 60 sq. km with an average population of 185 persons/hectare. The average rate of sewage flow is 350 litres/capita/day. The maximum flow is 50% in excess of the average together with the rainfall equivalent of 12 mm in 24 hours, all of which are run off. What should be the capacity of the sewer in cu. m/sec.?

(b) Find the minimum velocity and gradient required to transport coarse sand through a sewer of 40 cm dia with sand particles of 1 mm dia and specific gravity 2.65. Assume k for sand = 0.04. The Manning's roughness coefficient (n)

Solution. Total population of the area

$$= \text{Population density} \times \text{area}$$

$$= 185 \text{ p/ha} \times (60 \times 10^3) \text{ ha}$$

$$= 1110 \times 10^3 \text{ persons}$$

$$= 11.1 \times 10^5 \text{ persons}$$

Average sewage flow = 350 litres/capita/day

$$= 350 \times 11.1 \times 10^5 \text{ litres/day}$$

$$= 388.5 \times 10^6 \text{ litres/day}$$

$$= \frac{388.5 \times 10^6}{10^3} \times \frac{1}{24 \times 60 \times 60} \text{ cu.m/sec}$$

$$= 4.5 \text{ cumecs.}$$

$$\text{Storm water flow} = 60 \times 10^3 \times \left(\frac{12}{1000} \right) \frac{1}{24 \times 60 \times 60} \text{ cumecs.}$$

$$\left[\text{i.e. } \frac{\text{area in m}^2 \times \text{depth of S.R.O. in m}}{\text{Time of 24 hr. in sec.}} \right]$$

$$= 8.33 \text{ cumecs.}$$

Maximum sewage flow

$$= 1.5 \times \text{average sewage flow}$$

$$= 1.5 \times 4.5 \text{ cumecs} = 6.75 \text{ cumecs.}$$

$\therefore$ Total maximum flow of the combined sewer

$$= \text{Max. sewage flow} + \text{storm flow}$$

$$= 6.75 + 8.33 = 15.08 \text{ cumecs.}$$

Hence, the capacity of the sewer

$$= 15.08 \text{ cumec. Ans.}$$

(b) Now, the minimum velocity (i.e. self cleansing) is given by equation (4.11) as:

$$V_s = \frac{1}{n} \cdot r^{\frac{1}{6}} \sqrt{k d' (G - 1)}$$

$$\text{where, } n = 0.012, k = 0.04, G = 2.65$$

$$d' = \text{dia of grain} = 1 \text{ mm}$$

$$r = R = \frac{D}{4} = \frac{0.4 \text{ m}}{4} = 0.1 \text{ m}$$

$$\therefore V_s = \frac{1}{0.012} \times (0.1)^{\frac{1}{6}} \sqrt{0.04 \times \frac{1}{10 \times 100} \times (2.65 - 1)}$$

$$= 58.77 \times (8.12 \times 10^{-3}) \text{ m/s} = 0.48 \text{ m/s}$$

$\therefore$ Min. velocity required for the sewer to be self cleansing
= 0.48 m/sec. Ans.

The velocity in sewer, however, is calculated by Manning's formula as:

$$v = \frac{1}{n} r^{2/3} S^{1/2} \quad (\text{i.e., Eq. 4.4})$$

Now, assuming the sewer is designed to be running full, we have

$$n = N = 0.012$$

$$r = R = \frac{D}{4} = 0.1 \text{ m}$$

$$\therefore 0.48 = \frac{1}{0.012} (0.1)^{2/3} S^{1/2}$$

$$\text{or } S = \frac{1}{1523}$$

Hence, the required gradient for the sewer to be self cleansing is 1 in 1523. Ans.

4.8. Use of Tables and Nomograms for Hydraulic Computations for the Design of Sewers

The various formulas described earlier for computing the sizes and gradients of sewers required for developing requisite velocities at different discharges, involve a lot of mathematical calculations.

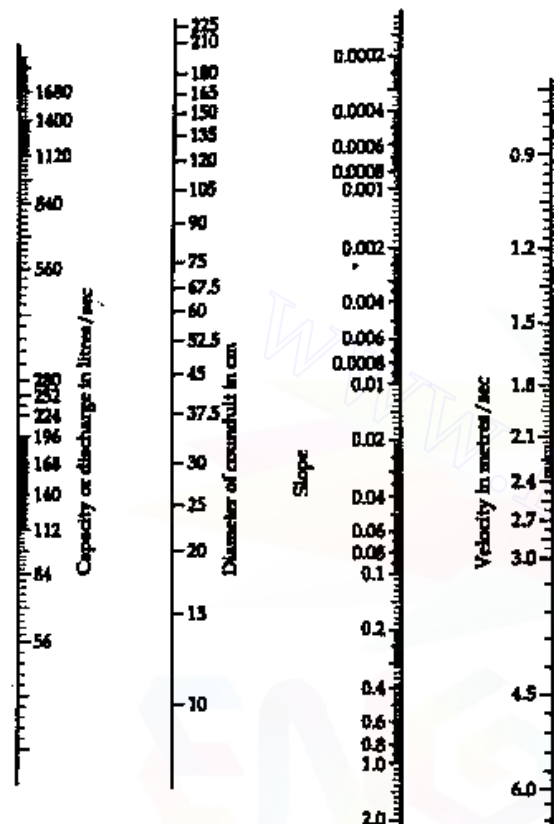
This mathematical work becomes enormous while designing a full fledged sewerage scheme, where such calculations are required to be made for thousands of sewers. To reduce the calculation work, ready-made charts and tables, based upon their original formulas, are generally prepared, kept in the design office, and used.

Fig. 4.5 shows a nomogram based on Manning's formula, for sewers running full, using a value of N as 0.013. This nomogram can be easily used by placing a straight edge across any two known variables (such as velocity and discharge), as to read out the remaining two variables (such as dia and gradient). If the value of N , to be used, is different from 0.013 (say for example it is 0.017); then the velocity or discharge obtained from this chart for a value

of $N = 0.013$, should be multiplied by a ratio $\frac{0.013^*}{0.017}$ (i.e., $\frac{0.013}{N}$) to obtain the

real velocity or discharge produced at $N = 0.017$. Similarly, if the discharge or velocity is given, the required parameters can be found by first correcting the given discharge or velocity by multiplying them by $\frac{0.017}{0.013}$ (i.e., $\frac{N}{0.013}$) and then placing the straight edge across the two known values.

Santo Crimps tables are the readymade tables based upon the Crimp and Burge's formula (given by Eq. 4.5), and are quite often used in India. A sample page of such tables is shown in table 4.10.

Fig. 4.5. Nomogram based on Manning's formula for $N = 0.013$ for sewers running full.Table 4.10. Sample Page of Santo-Crimps Tables
(for Sewers Running Full)

Sewer Dia in mm	Grade = 1 in 225		Grade = 1 in 100	
	Velocity in m/sec.	Discharge in litres/sec.	Velocity in m/sec.	Discharge in litres/sec.
100	0.479	3.78	0.560	4.40
150	0.628	11.12	0.942	16.67
200	0.760	23.90	1.140	35.83
250	0.833	43.34	1.324	65.01
300	0.996	70.52	1.494	105.80
375	1.156	127.70	1.735	191.70
450	1.306	208.00	1.960	312.30
525	1.447	318.30	2.170	470.10
600	1.582	448.10	2.373	672.00
675	1.711	611.20	2.568	918.50
750	1.837	812.50	2.750	1210.00

✓ **Example 4.5.** Determine the size of a circular sewer for a discharge of 600 lps running half-full. Assume $i = 0.0001$ and $n = 0.015$.

Solution. $d = 0.5 D$

$$\frac{d}{D} = 0.5$$

$$q = 600 \text{ litres/sec.}$$

$$= 0.6 \text{ cumecs}$$

$$S = i = 0.0001$$

$$n = 0.015$$

From table 4.8, at $\frac{d}{D} = 0.5$

we have $\frac{q}{Q} = 0.5$

$$\therefore Q = \frac{q}{0.5} = \frac{0.6}{0.5} = 1.2 \text{ cumecs.}$$

Assuming n not to vary with depth, we have by using Manning's formula,

$$Q = \frac{1}{N} \cdot AR^{2/3} \cdot \sqrt{S}$$

$$\text{or } 1.2 = \frac{1}{0.015} \left(\frac{\pi}{4} \cdot D^2 \right) \left(\frac{D}{4} \right)^{2/3} \cdot \sqrt{0.0001}$$

$$\text{or } \frac{1.2 \times 0.015 \times 4 \times 2.52 \times 100}{\pi} = D^{4/3}$$

$$\text{or } D^{4/3} = 5.78$$

$$\text{or } D = (5.78)^{3/4} = (5.78)^{0.75} = 1.93 \text{ m}$$

Hence, the diameter of the sewer required

$$= 1.93 \text{ m. Ans.}$$

Alternatively when table 4.8 is not available, we may solve the problem as follows:

We know that $\frac{d}{D} = 0.5$

$$= \frac{1}{2} \left(1 - \cos \frac{\alpha}{2} \right)$$

... Refer Eq. (4.13)

$$\text{or } \cos \frac{\alpha}{2} = 0$$

$$\text{or } \frac{\alpha}{2} = 90^\circ$$

$$\text{or } \alpha = 180^\circ.$$

Now, using Eq. (4.14), we have

$$Q = \frac{D^3}{4} \left[\frac{\pi \alpha}{360} - \frac{\sin \alpha}{2} \right]$$

$$= \frac{D^3}{4} \left[\frac{\pi \cdot 180^\circ}{360^\circ} - \frac{\sin 180^\circ}{2} \right]$$

$$= \frac{D^3}{4} \left[\frac{\pi}{2} - 0 \right] = \frac{\pi D^3}{8}$$

Now, using Eq. (4.16), we have

$$p = \pi D \frac{\alpha}{360^\circ}$$

$$= \pi D \frac{180^\circ}{360^\circ} = \frac{\pi D}{2}$$

$$\therefore r = \frac{a}{p} = \frac{\pi D^3}{8} \left(\frac{1}{\frac{\pi D}{2}} \right) = \frac{D}{4}$$

Using Manning's formula, we have

$$q = \frac{1}{n} \cdot a \cdot r^{2/3} \sqrt{S}$$

$$\therefore 0.8 = \frac{1}{0.015} \cdot \frac{\pi D^2}{8} \cdot \left(\frac{D}{4} \right)^{2/3} \sqrt{0.0001}$$

$$\text{or } D^{4/3} = \frac{0.8 \times 0.015 \times 8 \times 2.52 \times 100}{\pi}$$

$$\text{or } D = 1.93 \text{ m. Ans.}$$

Example 4.6. Design a sewer running 0.7 times full at maximum discharge for a town provided with the separate system, serving a population of 80,000 persons. The water supplied from the water-works to the town is at a rate of 190 litres/person/day. The sewer is made up of brick work plastered smooth with cement mortar ($n = 0.013$) and the permissible slope is 1 in 600. The variations of n with depth may be neglected. Assume any other data not given and needed.

Solution.

Population = 80,000

Rate of water supplied

= 190 litres/person/day

Average rate of daily water supplied to the town

= 80,000 × 190 litres/day

Average water supplied (in cumecs)

= $\frac{80,000 \times 190}{24 \times 60 \times 60 \times 1000}$ cumecs = 0.176 cumecs

Assuming that 80% of water supplied to the town appears as sewage, we have

The average discharge of sewage produced

$$= 0.176 \times 0.8 \text{ cumecs} = 0.14 \text{ cumecs.}$$

Assuming the maximum flow to be three times the average, we have

The maximum sewage discharge

$$= 3 \times 0.14 = 0.42 \text{ cumecs.}$$

Now since the sewer is to be designed as running 0.7 times the full depth at

maximum discharge, we have from Table 4.8, for a value of $\frac{d}{D} = 0.7$,

$$\frac{q}{Q} = 0.838$$

Here $q = 0.42 \text{ cumecs}$

$$\therefore Q = \frac{0.42}{0.838} = 0.5 \text{ cumecs.}$$

Now using Manning's nomogram at full flow and $n = 0.013$ (Fig. 4.5), for known values of

$$Q = 0.5 \text{ cumecs (500 litres/sec.)}$$

$$\text{and } S = \frac{1}{600};$$

we read the other unknown factors, as

$$D = 0.78 \text{ m}$$

$$\text{and } V = 1.04 \text{ m/sec.}$$

Then from Table 4.8, for $\frac{d}{D} = 0.7$;

$$\text{we have } \frac{v}{V} = 1.12$$

$$\therefore v = 1.12 V$$

$$= 1.12 \times 1.04 \text{ m/sec.} = 1.17 \text{ m/sec.}$$

Which is more than the self-cleansing velocity, and hence satisfactory.

Check for minimum flow

Assuming the minimum flow in the sewer to be $\frac{1}{3}$ time the average flow, we have, the minimum flow as

$$q_{\min} = \frac{0.14}{3} = 0.047 \text{ cumecs.}$$

From curves of Fig. 4.3, for a discharge ratio of $\frac{q_{\min}}{Q}$ as $= \frac{0.047}{0.5} = 0.11$, and

$n = N$ as given, we have

$$\text{Depth ratio} = \frac{d_{\min}}{D} = 0.23$$

and velocity ratio for this depth ratio is given by

$$\text{Velocity ratio} = \frac{v_{\min}}{V} = 0.65$$

$$\therefore \text{The velocity at minimum flow} \\ = 0.65 \times 1.04 \text{ m/sec.} \\ = 0.68 \text{ m/sec.}$$

which is more than the minimum required of 0.45 m/sec, and hence, satisfactory.

Note. When the velocity at minimum flow (i.e. D.W.F.) is not satisfactory, we have either to increase the slope or try with increased dia of the sewer.

Example 4.7. Calculate the velocity and discharge through a rectangular concrete lined smooth channel 2.4 m wide and 1.2 m deep built to a slope of 1 in 200, when running completely full. Use Bazin's coefficient in Chezy's formula as :

$$C = \frac{157.6}{1.81 + \frac{K}{\sqrt{r}}}$$

where $K = 0.3$ for smooth concrete lined surface.

(Engg. Services, 1968)

Solution. Area of channel

$$= A = 2.4 \text{ m} \times 1.2 \text{ m} = 2.88 \text{ sq. m.}$$

$$\text{Wetted perimeter} = P = 2.4 + 1.2 + 1.2 + 2.4^* = 7.2 \text{ m}$$

$$\therefore R = \frac{A}{P} = \frac{2.88}{7.2} = 0.40 \text{ m.}$$

$$\text{Now, } C = \frac{157.6}{1.81 + \frac{0.3}{\sqrt{0.40}}} = \frac{157.6}{1.81 + 0.474} = \frac{157.6}{2.284} = 68.99$$

Using Chezy's formula, we have

$$V = C \cdot \sqrt{RS} \\ = 68.99 \sqrt{0.40 \times \frac{1}{200}} = 68.99 \times 0.0447 = 3.08 \text{ m/sec. Ans.}$$

Discharge $Q = A \cdot V$

$$= 3.08 \times 2.88 \\ = 8.88 \text{ cumecs. Ans.}$$

Example 4.8. Calculate the diameter and discharge of a circular sewer laid at a slope of 1 in 400 when it is running half full, and with a velocity of 1.9 m/sec. (n in Manning's formula = 0.012).

(Engg. Services, 1969)

Solution. When pipe is running half full,

The area of section

$$a = \frac{\pi D^2}{8}$$

The wetted perimeter

$$p = \frac{\pi D}{2}$$

The H.M.D. $r = \frac{D}{4}$.

Using Manning's formula, we have

$$V = \frac{1}{n} \cdot r^{2/3} \cdot \sqrt{S}$$

$$\therefore 1.9 = \frac{1}{0.012} \left(\frac{D}{4} \right)^{2/3} \cdot \frac{1}{\sqrt{400}}$$

$$\text{or } D^{2/3} = 1.9 \times 0.012 \times 2.52 \times 20 = 1.15$$

$$\text{or } D = (1.15)^{3/2} = 1.23 \text{ m.}$$

Hence, use 1.23 m dia sewer. Ans.

Discharge $Q = a \cdot v$

$$= \frac{\pi (1.23)^2}{8} \times 1.9 \text{ m}^3/\text{sec.} = 1.13 \text{ cumecs. Ans.}$$

Example 4.9. Design a sewer to serve a population of 36,000; the daily per capita water supply allowance being 135 litres, of which 80 per cent finds its way into the sewer. The slope available for the sewer to be laid is 1 in 625 and the sewer should be designed to carry four times the dry weather flow when running full. What would be the velocity of flow in the sewer when running full?

Assume $n = 0.012$ in Manning's formula.

(Engg. Services, 1970)

Solution. Population

$$= 36,000$$

Per capita water supply

$$= 135 \text{ litres/person/day}$$

$\therefore$ Average water supplied daily

$$= 36,000 \times 135 \text{ litres/day}$$

Average water supplied in cumecs

$$= \frac{36,000 \times 135}{1000 \times 24 \times 60 \times 60} \text{ cumecs} \\ = 0.0562 \text{ cumecs.}$$

Average sewage discharge

$$= 80\% \text{ of water supplied}$$

$$= 0.8 \times 0.0562 \text{ cumecs} = 0.045 \text{ cumecs.}$$

$\therefore$ D.W.F. = 0.045 cumecs.

Maximum discharge for which sewer should be designed running full

$$= 4 \times 0.045 \text{ cumecs} = 0.18 \text{ cumecs.}$$

* Assuming the sewer to be running half full.

$$Q = \frac{1}{N} \cdot A R^{2/3} \cdot \sqrt{S}$$

(Capital letters being used for running full)

$$\therefore 0.18 = \frac{1}{0.012} \left(\frac{\pi D^2}{4} \right) \left(\frac{D}{4} \right)^{2/3} \frac{1}{\sqrt{625}}$$

$$\text{or } \frac{0.18 \times 0.012 \times 4 \times 252 \times 52}{\pi} = D^{8/3}$$

$$\text{or } D^{8/3} = 0.173$$

$$\text{or } D = (0.173)^{3/8} = 0.31 \text{ m}$$

Hence, use 0.31 m dia. sewer pipe. **Ans.**

Velocity of flow when running full

$$= V = \frac{Q}{A} = \frac{0.18}{\frac{\pi (0.31)^2}{4}} = 2.39 \text{ m/sec. } \text{Ans.}$$

Example 4.10. Design an outfall circular sewer of the separate system for a town with a population of 1,00,000 persons with a water supply at 180 litres per head per day. The sewer can be laid at a slope of 10 in 10,000 with $n = 0.012$. A self-cleansing velocity of 0.75 m/sec is to be developed. The dry weather flow may be taken as 1/3 of the maximum discharge. Given the following table :

Proportionate Depth	Proportionate Velocity	Proportionate Discharge
0.31	0.7901	0.2086
0.35	0.8430	0.2629
0.37	0.8675	0.2981
0.39	0.8909	0.3217
0.40	0.9022	0.3370
0.42	0.9299	0.3682

(Engg. Services 1975)

Solution. Population

$$= 1,00,000$$

Average rate of water supply

$$= 180 \text{ litres/person/day}$$

$\therefore$ Average rate of water supplied per day

$$= 1,00,000 \times 180 \text{ litres}$$

$\therefore$ Average rate of water supplied in cumecs

$$= \frac{1,00,000 \times 180}{1,000 \times 24 \times 60 \times 60} \text{ cumecs} = 0.208 \text{ cumecs.}$$

$\therefore$ D.W.F. = 0.208 cumecs

$\therefore$ Maximum discharge

$$= 3 \times 0.208 \text{ cumecs.} = 0.624 \text{ cumecs}$$

Let us design the sewer as running full at maximum discharge.

Using Manning's formula, we have

$$Q = \frac{1}{N} A R^{2/3} \cdot \sqrt{S}$$

Assuming that the sewer is laid at the available slope of 10 in 10,000 i.e. 1 in 1,000, we have

$$S = \frac{1}{1000}$$

Putting the values in Manning's equation, we have

$$0.624 = \frac{1}{0.012} \left(\frac{\pi D^2}{4} \right) \left(\frac{D}{4} \right)^{2/3} \frac{1}{\sqrt{1000}}$$

$$\text{or } D^{8/3} = \frac{0.624 \times 0.012 \times 4 \times 252 \times 3.16}{\pi}$$

$$\text{or } D^{8/3} = 0.758$$

$$\text{or } D = (0.758)^{3/8} = 0.915 \text{ m}$$

Now, velocity of flow at full flow

$$V = \frac{Q}{A} = \frac{0.624}{\frac{\pi (0.915)^2}{4}} = 0.95 \text{ m/sec}$$

This is more than 0.75 m/sec, and hence satisfactory.

Let us check for the velocity at D.W.F.

$$\text{At D.W.F. } \frac{q}{Q} = \frac{1}{3} = 0.333$$

From the given table, corresponding to this discharge ratio, we find

$$\text{Depth ratio } \frac{d}{D} = 0.40$$

$$\text{Velocity ratio } = \frac{v}{V} = 0.9022 \text{ (given)}$$

Hence, the velocity developed at D.W.F.

$$= 0.9022 \times 0.95 \text{ m/sec} = 0.855 \text{ m/sec.}$$

This is more than 0.75 m/sec and, therefore, satisfactory.

Hence, use 0.915 m dia pipe as worked out. **Ans.**

Note. If the velocity at D.W.F. works out to be less than 0.75 m/sec, then increase the design slope or try with increased dia of sewer.

Example 4.11. A circular sanitary sewer is designed to carry the maximum flow of sewage while flowing 70% full at a velocity of 0.9 m/sec. If the ratio of

Maximum Average and Average Minimum flow are 3 and 2.5 respectively, find out :

(i) the proportionate depth of flow, and

(ii) the velocities of flow generated at the time of :

- (a) average flow, and
(b) minimum flow.

Variations in the value of N with depths may be neglected.

Solution. At maximum flow, the $\frac{d}{D}$ ratio is 0.7.

$$\therefore \frac{d_{\max}}{D} = 0.7$$

and $v_{\max}$ = velocity at the time of maximum flow
= 0.9 m/sec.

From Fig. 4.3, for $\frac{d}{D} = 0.7$, and at $\frac{N}{n} = 1$

we have $\frac{v}{V} = 1.12$

and $\frac{q}{Q} = 0.838$.

Here $v = v_{\max} = 0.9$ m/sec.

$$\therefore V = \frac{0.9}{1.12} = 0.8 \text{ m/sec.}$$

and $q_{\max}$ = discharge at maximum flow = 0.838 Q .

At average flow,

$$q_{av} = \frac{1}{3} \cdot q_{\max} \text{ (given)}$$

$$= \frac{1}{3} (0.838 Q) = 0.279 Q.$$

From Fig. 4.3, for $\frac{q}{Q} = 0.279$ and $\frac{N}{n} = 1$ (of course);

we have $\frac{d}{D} = 0.37$

and $\frac{v}{V} = 0.87$

$$\therefore v_{av} = \text{velocity at average flow}$$

$$= 0.87 V = 0.87 \times 0.8 \text{ m/sec.} = 0.7 \text{ m/sec}$$

Hence, while carrying the average discharge, the sewer runs 37% full, and the velocity then generated is 0.7 m/sec. Ans.

(b) At minimum flow

$$\frac{q_{av}}{q_{\min}} = 2.5$$

$$\therefore q_{\min} = \frac{q_{av}}{2.5} = \frac{0.279 Q}{2.5} = 0.111 Q$$

Now from Fig. 4.3 for $\frac{q}{Q} = 0.111$, and $\left(\frac{N}{n} = 1 \text{ of course}\right)$, we have

$$\frac{d}{D} = 0.23$$

and $\frac{v}{V} = 0.64$

or $v_{\min}$ = Velocity at minimum flow

$$= 0.64 V = 0.64 \times 0.8 = 0.51 \text{ m/sec.}$$

Hence, while carrying the minimum discharge, the sewer runs 23% full, and the velocity then generated is 0.51 m/sec. Ans.

Note. From the above example, it follows that in a circular sewer flowing 70% full at the time of maximum discharge, the velocity is reduced by $\left(\frac{0.9 - 0.7}{0.9}\right) = 21\%$ only,

when the discharge is reduced by 66.7%; and the velocity is reduced by $\frac{0.9 - 0.51}{0.9} = 43.3\%$ only, when the discharge reduces by 86.67%. A circular sewer can thus keep a fairly uniform velocity of flow although the discharge may fluctuate considerably. Such sewers are, therefore, quite suitable for carrying sanitary sewage whose flows vary considerably from hour to hour.

Example 4.12. A combined sewer of a circular section is to be laid to serve a particular area. Calculate the size of this sewer from the following data :

Area to be served	= 120 hectares
Population	= 1,00,000
Maximum permissible flow velocity	= 3 m/sec.
Time of entry for storm water	= 10 minutes
Time of flow in channel	= 20 minutes
Per capita water supply	= 250 litres/day/person
Coefficient of run-off for the area	= 0.45
Hourly, Maximum rainfall for the area at the design frequency	= 5 cm

Assume any other data not given, and if needed.

Solution. Sewage Discharge (i.e. D.W.F.) Computations

Average water supplied

$$= 250 \times 1,00,000 \text{ litres/day}$$

$$= \frac{250 \times 1,00,000}{1000 \times 24 \times 60 \times 60} \text{ cumecs} = 0.289 \text{ cumecs}$$

Assuming that 80% of the water supplied appears as sewage, we have

Average sewage discharge

$$= 0.8 \times 0.289 = 0.23 \text{ cumecs}$$

Assuming the maximum sewage discharge to be 3 times the average discharge, we have

Maximum sewage discharge

$$= 3 \times 0.23 = 0.69 \text{ cumecs.}$$

Storm water discharge computations

Time of concentration

$$T_c = \text{Time of entry} + \text{Time of flow}$$

$$= (10 + 20) \text{ minutes} = 30 \text{ minutes.}$$

Now, maximum hourly rainfall for the area

∴ Using Eq. (3.3), we have

$$p_c = p_o \left(\frac{2}{1 + T_c} \right)$$

where T_c is the concentration time in hours

$$= \frac{30}{60} = 0.5 \text{ hour}$$

$$\therefore p_c = 5 \left(\frac{2}{1 + 0.5} \right) = \frac{10}{1.5} = 6.67 \text{ cm/hr.}$$

Now, using rational formula, Eq. (3.1), we have

$$\begin{aligned} \text{Max. storm run off} = Q_p &= \frac{1}{36} K p_c A \\ &= \frac{1}{36} \times 0.45 \times 6.67 \times 120 \text{ cumecs.} \\ &= 10 \text{ cumecs.} \end{aligned}$$

∴ The combined maximum discharge

$$= \text{Storm run-off} + \text{Sewage discharge}$$

$$= 10 + 0.69 = 10.69 \text{ cumecs.}$$

Now assuming the sewer to be running full at the maximum velocity of 3 m/sec at the time of maximum flow, we have

$$\text{Area required} = \frac{Q}{V} = \frac{10.69}{3} \text{ m}^2 = 3.56 \text{ m}^2$$

∴ Dia of sewer pipe required

$$= \sqrt{\frac{4}{\pi} \cdot 3.56} = \sqrt{4.53} = 2.13 \text{ m.}$$

Hence, use a sewer pipe of 2.13 m dia. **Ans.**

Example 4.13. Using Rational method, rainfall intensity duration curves (Fig. 4.6) and the data given on Fig. 4.7, compute the diameter of the outfall sewer. The length of lines, drainage areas, and inlet times are marked on Fig. 4.7 itself.

(Engineering Services, 1981)

Assume :

- Runoff coefficient for the entire area = 0.30.
- Velocity of flow in sewers flowing full = 0.75 m/sec.
- 5 years average frequency curve may be used (Fig. 4.7).
- Table 1 gives the hydraulic elements for circular pipes flowing full.

Table 1. Hydraulic Elements for a Circular Pipe Flowing Full

Quantity of flow l/m	Dia of pipe mm	Slope of pipe m/m	Velocity m/sec
400	450	0.025	2.7
600	525	0.020	2.8
650	1050	0.0065	0.75
1500	1350	0.001	1.55
2000	1450	0.001	

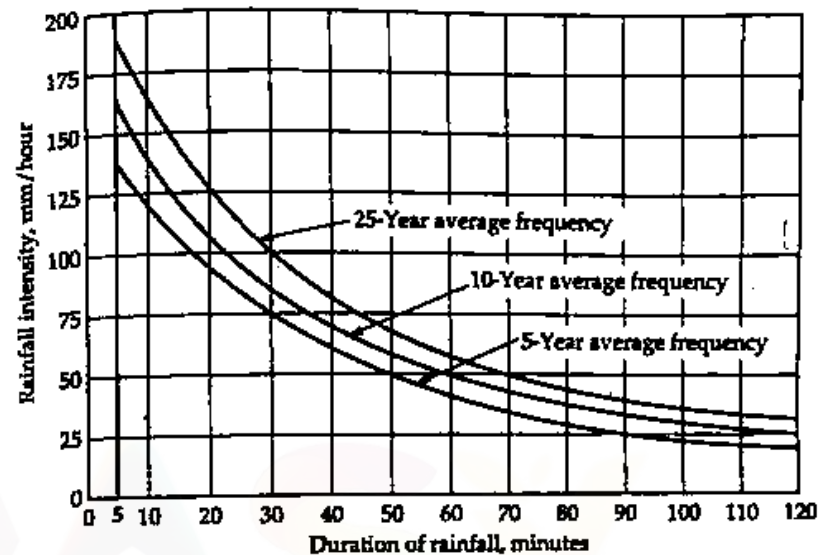


Fig. 4.6 (given)

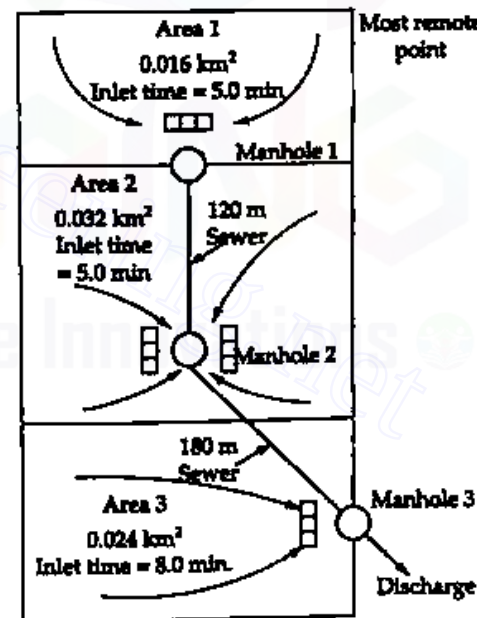


Fig. 4.7 (given)

Solution. Flow time (T_{f1}) in sewer from manhole 1 to manhole 2

$$= \frac{120 \text{ m}}{0.75 \text{ m/sec}} = 120 \times \frac{4}{3} \text{ sec} = \frac{120 \times 4}{3} \text{ min}$$

Flow time (T_f) in sewer from manhole 2 to manhole 3

$$= \frac{180 \text{ m}}{0.76 \text{ m/sec}} = 180 \times \frac{4}{3} \text{ sec} = \frac{180 \times 4}{60 \times 3} \text{ min} \\ = 4 \text{ min.}$$

(i) Time of concentration for area 1 (to contribute wholly at Manhole 3)

$$T_1 + T_{f1} + T_f = [5 + 2.7 + 4] \text{ min} \\ = 11.7 \text{ min} \quad \dots(i)$$

(ii) Time of concentration for area 2 (to contribute wholly at Manhole 3)

$$T_2 + T_f = 5 \text{ min} + 4 \text{ min} = 9 \text{ min.} \quad \dots(ii)$$

(iii) Time of concentration for area 3 (to contribute wholly at Manhole 3)

$$T_3 = 8 \text{ min.} \quad \dots(iii)$$

That means that after 11.7 min, all the three areas 1, 2 and 3 will start contributing fully at Manhole 3. The time of concentration for the entire catchment (area 1 + area 2 + area 3) will, thus, be equal to 11.7 min.

Since the critical rainfall duration is equal to the time of concentration, we can consider, that rain as a critical rain, which will be having a duration of 11.7 min; and since 5 year frequency is to be considered in designing the sewer, let us work out the rainfall intensity for such a rain having a frequency of 5 years and a duration of 11.7 minutes. Such an intensity is read out from the given intensity duration curves (Fig. 4.6), using the 5 year frequency curve, as 11.5 mm/hr, i.e. 11.5 cm/hr.

With this critical rain, having intensity of 11.5 cm/hr, we can apply Rational formula, to work out the discharge at the outfall, as:

$$Q = \frac{1}{36} \cdot K \cdot p_c \cdot A$$

where K = run-off coeff. = 0.30 (given)

p_c = critical rain intensity in cm/hr

= 11.5 cm/hr (worked out above)

A = total catchment area in hectares

$$Q = \frac{1}{36} \times K \cdot [p_c] [A_1 + A_2 + A_3]$$

because K is constant throughout the area A_1 , A_2 and A_3 ,

where $A = A_1 + A_2 + A_3$

$$= (0.018 + 0.032 + 0.024) \text{ km}^2$$

$$= \frac{0.072 \times 10^6}{10^4} \text{ hectares}$$

$$= 7.2 \text{ hectares.}$$

$$Q = \frac{1}{36} \times 0.30 \times 11.5 \times 7.2$$

$$= 0.62 \text{ m}^3/\text{s}$$

For passing a discharge of 690 l/sec, with a sewer flow velocity of 0.75 m/sec, the required sewer from Table 1 should be of 1050 mm dia laid at a slope of 0.00055 m/m i.e. 0.55 mm/m of sewer length. Ans.

Example 4.14. A 25 cm diameter sewer with an invert slope of 1 in 400 is running full. Calculate the velocity and rate of flow in the sewer. Is it self cleansing? Take $n = 0.015$. (Civil Services, 1993)

Solution. D = dia of sewer = 25 cm = 0.25 m

Area of sewer when running full

$$(A) = \frac{\pi}{4} \cdot D^2$$

$$= \frac{\pi}{4} \times (0.25)^2 \text{ m}^2 = 0.049 \text{ m}^2.$$

$$R = \frac{A}{P} = \frac{\frac{\pi}{4} \cdot D^2}{\pi D} = \frac{D}{4} = \frac{0.25}{4} = 0.0625 \text{ m}$$

$$S = \frac{1}{400}$$

$$N = 0.015$$

Using Manning's equation, we have

$$V = \frac{1}{N} \cdot R^{2/3} \cdot S^{1/2}$$

$$= \frac{1}{0.015} \times (0.0625)^{2/3} \cdot \frac{1}{\sqrt{400}} = 0.525 \text{ m/s. Ans.}$$

$$Q = V \cdot A = 0.525 \times 0.049 \text{ m}^3/\text{s} = 0.0257 \text{ m}^3/\text{s. Ans.}$$

The velocity in the above sewer is 0.525 m/s, which is slightly more than 0.45 m/s, which is the numerical theoretical value of the self-cleansing velocity. Hence, the sewer can be termed as self-cleansing at full flow, although such self-cleansing should be obtained at partial flow also, such as at $\frac{1}{2}$ full. In this case, the velocity at partial flow is likely to be lesser than 0.45 m/s or so, and hence the sewer will no longer remain self-cleansing at partial flow. Ans.

4.9. Limitations on Depth of Flow due to Ventilation Considerations

From considerations of ventilation in wastewater flows, sewers should not be designed to run full.

Sewers up to 400 mm dia, may be designed to run at $\frac{1}{2}$ depth; sewers between 400 to 900 mm dia may be designed for $\frac{3}{4}$ depth; and larger sewers

may be designed for $\frac{3}{4}$ depth, at ultimate peak designed flows.

4.10. Egg Shaped Sewers and Hydraulically Equivalent Sections

Circular sewer sections are most widely used these days in all the cities, which are preferably provided with separate sewerage system. However, other forms of sewer sections, such as egg shape, horse shoe shape, U shape, parabolic

used. The circular sections are generally preferred to all other shapes, because of their following advantages :

- (i) They can be manufactured most easily and conveniently.
- (ii) A circular sewer provides the maximum area for a given perimeter, and thus providing the maximum hydraulic mean depth when running full or half full ; and is, therefore, the most efficient section at these flow conditions.
- (iii) Circular section utilizes the minimum quantities of materials, and is, therefore, the cheapest and most economical.
- (iv) A circular section, being of uniform curvature all round, offers less opportunities for deposits.

But all these advantages of circular sections are obtained only when the section runs at least half full. When the depth in a circular section goes less than half full, its merits are lost, as the velocity and discharge reduce considerably with the reduction in depth. Lesser the discharge, the poorer the performance.

The circular sections, will therefore, be the best when discharge does not vary too much, and the chances of sewers running with very low depths (less than half) are less.

In combined sewers, however, the variations in discharge are enormous, because the storm run-off is generally 20 to 25 times that of the sewage discharge. Hence, combined sewers will have to run at low discharges of about $\frac{1}{20}$ to $\frac{1}{25}$ times the maximum, during non-monsoon periods.

Egg shaped sewers, such as shown in Figs. 4.8 (a) and (b), which for low discharges maintain hydraulic depth nearly uniform and give 2 to 15% higher velocities than provided by hydraulically equivalent* circular sections

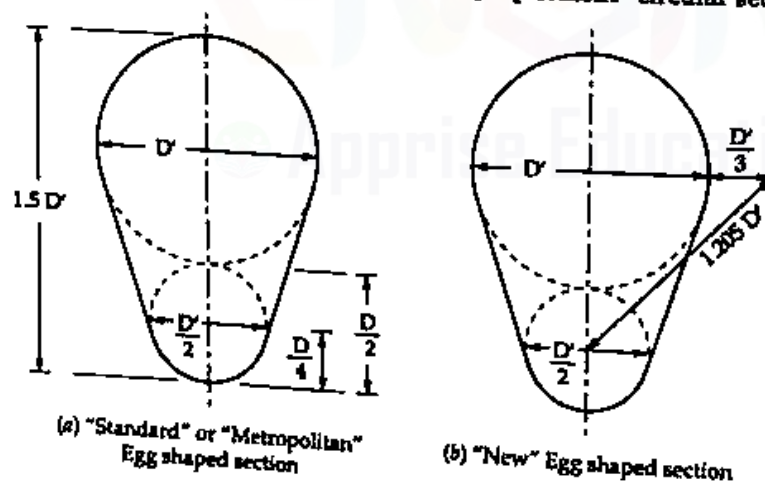


Fig. 4.8

*Two sewers of different shapes are said to be hydraulically equivalent if they discharge the same quantity of water at the same depth.

carrying the same low discharges, are, therefore, preferred for combined sewers. However, the increase in velocities is quite small compared to their other disadvantages and, therefore, such sewers, which were quite often used in olden days, are becoming obsolete these days. Their disadvantages over circular sewers are :

- (i) They are more difficult to construct.
- (ii) Since the smaller base has to support the weight of the upper broader section, they are less stable.
- (iii) They require more material and are, therefore, more costly.

Various forms of egg shaped sewers (sometimes called *Ovoid sewers*) had been in use, and the two most common forms are shown in Figs. 4.8 (a) and (b).

The computations of areas and wetted perimeters of such egg shaped sewers involve complicated mathematical calculations. Therefore, while designing such sewers, the usual practice is to calculate the approximate dia of a hydraulically equivalent circular sewer first, which would give the same discharge when running full at the same gradient ; and then to convert it into dimensions of an egg shaped section having an equal area.

For computing the egg shaped sewer of an equivalent section, the dia of the circular section (D) is multiplied by a constant factor so as to get the top horizontal dia width (D') of the egg shaped section. Thus

$$D' = 0.84 D \quad \dots(4.28)$$

where D' = width of egg shape section

D = dia of circular sewer of the same cross-sectional area, obtained for passing the requisite discharge.

Knowing D , D' can be easily worked out, and the dimensions of the egg shaped sewer are thus established.

The hydraulic mean depth of egg shape sewers of equivalent section is the same as that of the circular sewers when running full, but it is higher for smaller depths of flow ; and hence the velocity generated in them at smaller depths is also higher than that generated in the equivalent circular sewers. The proportionate velocities at smaller depths in circular as well as in egg shape sewers are given below in Table 4.11.

Table 4.11. Comparison of Circular and Egg Shaped (Standard form) Sewers

Proportionate Depth	Proportionate Velocity	
	in Circular sewers	in Egg shaped sewers*
0.25	0.701	0.698
0.20	0.616	0.627
0.15	0.517	0.544
0.10	0.401	0.440
0.05	0.267	0.295

*Two sewers of different shapes are said to be hydraulically equivalent if they discharge the same quantity of water at the same depth.

Example 4.15. (a) Design a circular sewer so as to cater to a residential colony in town, having the following data :

Area of the colony	= 36 hectares
Population	= 8,000
Per capita water consumption	= 170 lphd
Critical design rainfall intensity	= 4 cm/hr.
General available ground slope	= 1 in 900

Assume any other data, not given, and if needed.

(b) What will be the dimensions of an equivalent egg shaped sewer if adopted in this case.

Solution. Sewage Discharge computations

Average quantity of water consumed per day
= 170×8000 litres/day.

Average quantity of water consumed in cumecs
= $\frac{170 \times 8000}{1000 \times 24 \times 60 \times 60}$ cumecs = 0.0157 cumecs.

Assuming that 80% of water consumed appears as sewage, we have

Average quantity of sewage discharge
= 0.8×0.0157 cumecs = 0.0126 cumecs.

Assuming the peak sewage discharge to be three times the average discharge, we have

Maximum rate of sewage produced
= 3×0.0126 cumecs = 0.038 cumecs.

Storm run-off computations

Assuming the coefficient of run-off (K) for the area as 0.55, we have, by using Rational formula,

Peak storm run-off

$$Q_p = \frac{1}{36} K_p A$$

$$= \frac{1}{36} \times 0.55 \times 4 \times 36 \text{ cumecs} = 2.2 \text{ cumecs.}$$

Combined Maximum discharge

$$= 2.2 + 0.038 = 2.238 \text{ cumecs}$$

Now, assuming that the sewer while carrying this combined peak discharge possesses 10% extra capacity, we have

The design discharge which the sewer should carry while flowing full
= $\frac{2.238}{0.9}$ cumecs = 2.49 cumecs

Now, using Manning's formula, we have

$$Q = \frac{1}{N} \cdot A R^{2/3} \sqrt{S}$$

Using the same gradient as is available, i.e. $\frac{1}{900}$ as the first proposition, and Manning's $N = 0.013$ for smooth concrete or vitrified clay sewer, we have

$$2.49 = \frac{1}{0.013} \left(\frac{\pi D^2}{4} \right) \left(\frac{D}{4} \right)^{2/3} \cdot \frac{1}{\sqrt{900}}$$

where D is the dia of the equivalent circular section.

$$D^{4/3} = \frac{2.49 \times 0.013 \times 4 \times 2.52 \times 30}{\pi}$$

$$D^{4/3} = 3.12$$

$$\text{or } D = (3.12)^{3/4} = 1.533 \text{ m ; say } 1.54 \text{ m.}$$

Now, velocity generated

$$= \frac{Q}{A} = \frac{2.49}{\frac{\pi}{4} \cdot (1.54)^2} = 1.33 \text{ m/sec.}$$

This is satisfactory.

Note. The velocity can be increased further by steepening the slope and changing the size of the sewer accordingly. This will no doubt increase the ground excavations but will make the sewer more efficient at low flows, as the presently designed sewer may give very low velocities at low flows during non-monsoon seasons.

Check for lone sewage discharge

When maximum sewage is passing (once a day) in non-monsoon periods, the $\frac{q}{Q}$ will be equal to $\frac{0.038}{2.49} = 0.0152$. For this ratio of $\frac{q}{Q} = 0.0152$, from Fig. 4.3, we have

$$\frac{v}{V} = 0.3.$$

$$\text{or } v = 0.3 \times 1.35$$

$$= 0.4 \text{ m/sec. (which is just sufficient for non-silting)}$$

Hence, in this sewer, deposition will take place during average and minimum lone sewage flow. The efficiency can be further increased by providing a steeper gradient, or by providing egg shaped section, which provide comparatively larger proportionate velocities at low depths.


(b) **Equivalent egg-shaped sewer**

Now $D = 1.54 \text{ m}$

If D' is the width of the standard equivalent egg shaped sewer, then by Eq. (4.28), we have

$$D' = 0.84 D$$

$$\text{or } D' = 0.84 \times 1.54$$

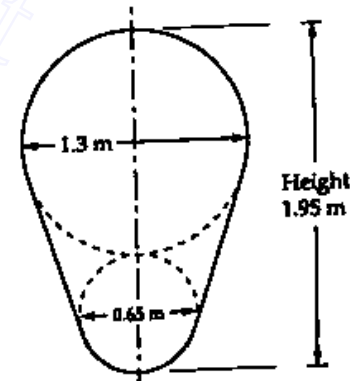

Thus, the top width of the egg shape section

$$= 1.3 \text{ m}$$

and the height or vertical diameter of the egg shape section

$$= 1.6D'$$

$$= 1.5 \times 1.3$$

$$= 1.95 \text{ m.}$$

Hence use a standard egg-shaped section 1.3 m $\times$ 1.95 m, as shown in Fig. 4.9.

Example 4.16. Find the relation between the side of a square section of one sewer and the diameter of a circular section of another sewer when both are hydraulically equivalent.

Solution. Let D be the diameter of the circular sewer and b be the side of the equivalent square sewer.

The discharging capacity of circular sewer while running full* at a gradient of 1 in S

$$= \frac{1}{N} \left(\frac{\pi D^2}{4} \right) \left(\frac{D}{4} \right)^{2/3} \sqrt{S} \quad \dots(i)$$

The discharging capacity of the rectangular section while running full* at a gradient of 1 in S

$$= \frac{1}{N} \cdot b^2 \cdot \left(\frac{b}{4b} \right)^{2/3} \sqrt{S} \quad \dots(ii)$$

$\therefore$ Equating (i) and (ii), we have

$$\therefore \frac{1}{N} \left(\frac{\pi D^2}{4} \right) \left(\frac{D}{4} \right)^{2/3} \sqrt{S} = \frac{1}{N} b^2 \left(\frac{b}{4b} \right)^{2/3} \sqrt{S}$$

$$\text{or } \frac{\pi}{4} \cdot \frac{D^{8/3}}{2.52} = \frac{b^{8/3}}{2.52}$$

$$\text{or } D^{8/3} = 1.272 b^{8/3}$$

$$\text{or } D = 1.094b.$$

This is the required relation, where b is the side of a square and D is the dia of the circular section. **Ans.**

Example 4.17. A rectangular sewer with width 1.5 times its depth is hydraulically equivalent to a circular one. Find the relation between the width of the rectangular sewer and the diameter of the circular sewer.

Solution. Let B and D_1 represents the width and depth of the rectangular sewer, respectively.

$$\therefore B = 1.5 D_1$$

Now, when this rectangular sewer is running completely full, the area of cross-section $A = BD_1 = 1.5 D_1^2$.

*Assuming that the sewer runs completely full and the roof is also a part of the wetted perimeter: thus giving $P = 4D_1$ and $R = \frac{A}{P} = \frac{1.5 D_1^2}{4 D_1} = 0.375 D_1$.

the wetted perimeter P (assuming the roof as part of the wetted perimeter)

$$= 2(B + D_1) = 5D_1.$$

$$R = \frac{A}{P} = \frac{1.5 D_1^2}{5 D_1} = \frac{A}{P} = \frac{1.5 D_1^2}{5 D_1} = 0.3 D_1$$

$\therefore$ Discharging capacity of rectangular sewer

$$= \frac{1}{N} (1.5 D_1^2) (0.3 D_1)^{2/3} \sqrt{S} \quad \dots(i)$$

If D is the dia of the circular sewer, then its capacity at full depth

$$= \frac{1}{N} \left(\frac{\pi D^2}{4} \right) \left(\frac{D}{4} \right)^{2/3} \sqrt{S} \quad \dots(ii)$$

For hydraulically equivalent sections, equating (i) and (ii), we get

$$\frac{1}{N} \cdot (1.5 D_1^2) (0.3 D_1)^{2/3} \sqrt{S} = \frac{1}{N} \left(\frac{\pi D^2}{4} \right) \left(\frac{D}{4} \right)^{2/3} \sqrt{S}$$

$$\text{or } 2.25 D_1^{8/3} (0.448) = \frac{\pi}{4} \cdot \frac{1}{2.52} \cdot D^{8/3}$$

$$\text{or } D_1^{8/3} = \frac{\pi}{4 \times 2.52 \times 2.25 \times 0.448} D^{8/3}$$

$$\text{or } D^{8/3} = 3.24 D_1^{8/3}$$

$$\text{or } D = (3.24)^{3/8} D_1 = 1.565 D_1$$

$$\text{or } D = 1.565 D_1$$

$$\text{But } B = 1.5 D_1$$

$$\text{or } D_1 = \frac{B}{1.5}$$

$$\therefore D = 1.565 \frac{B}{1.5}$$

$$D = 1.043 B.$$

This is the required relation, where D is the dia of the circular sewer and B is the width of the rectangular sewer. **Ans.**

4.11. Design of Storm Water Drains

In a modern separate sewerage system, as pointed out earlier, the storm water is not mixed with the sewage discharge, but is carried separately through storm water drains and disposed of into a stream, lake or ocean.

For accomplishing this process efficiently, storm water is collected in the streets and admitted into the link drains (often kept covered) through inlets, which in-turn discharge into the main drains (often kept open); the main drains finally discharging into some large body of water, such as a river or a stream. Gravity discharge is always preferred, if the FSL of the river or the main drain into which the considered drain is being discharged, permits. However, this is not always possible, because if the FSL of the drain (which has to be less than the N.S.L. of the catchment area drained by it) is lower than the FSL or the HFL

of the source of disposal, the gravity flow cannot take place. In such circumstances, the drain discharge has to be disposed of by pumping.

For designing the city's storm water drainage system, first of all, the contour maps of the area are collected, and the positions of various link drains, major drains and sources of disposal are properly planned with due regard to the possible gravity flow. If the gravity flow can be permitted with flatter drain gradient, it is always economical and preferred to pumping. After deciding the alignments of different drains, the catchment areas to be drained by each drain are marked. The peak discharge expected in the drain (reach by reach) is then worked out for each drain, by suitable method (various methods for computing peak discharge are given in chapter 3).

An L-section for the drain is now drawn, which fixes the full supply line of the drain. The full supply line is fixed keeping in view the natural surface level (NSL) of the area to be drained and the permissible outfall full supply level. The FSL line at no place along the length of the drain should go above the NSL line, as otherwise, water-logging may take place in that low lying area. However, sometimes, some encroachment above the NSL may be allowed, and in that case, the water of those few low lying pockets, will be removed by pumping into the gravity drain carrying the major discharge of the catchment.

After fixing the FSL line, and thus the slope of the water surface, the bed line (i.e. depth of the drain) has to be fixed. The depth is decided from various considerations, such as :

(i) The bed of the considered drain should not at the outfall point go below the bed of the source into which it is discharged.

(ii) The depth in uncovered drain, should preferably be kept less than the man's height, as to avoid frequent dangers of drowning.

(iii) The depth will sometimes be guided by the availability of land for the width of the drain, i.e. when available land width is less, naturally the width of the drain has to be kept less, and thus necessitating the construction of deeper drains.

(iv) The drain section should be economical and the velocities generated should be non-silting and non-scouring in nature. Certain empirical formulas relating the width and the depth of the drain have been suggested based on experimental results. They are given below :

(a) For drains up to 15 cumecs

$$y = 0.5\sqrt{B}$$

...(4.29)

(b) For drains above 15 cumecs, depths of the following order may be used.

Table 4.12

Discharge Q_p in the drain (cumecs)	Depth (y) in metres
15	1.7
30	1.8
75	2.3
150	

(c) C.W.C. has recommended a graphical relation for unlined drains representing $\frac{\text{Width}}{\text{Depth}} \left(\text{i.e., } = \frac{B}{y} \right)$ ratios for different discharges, as shown in Fig. 4.10.

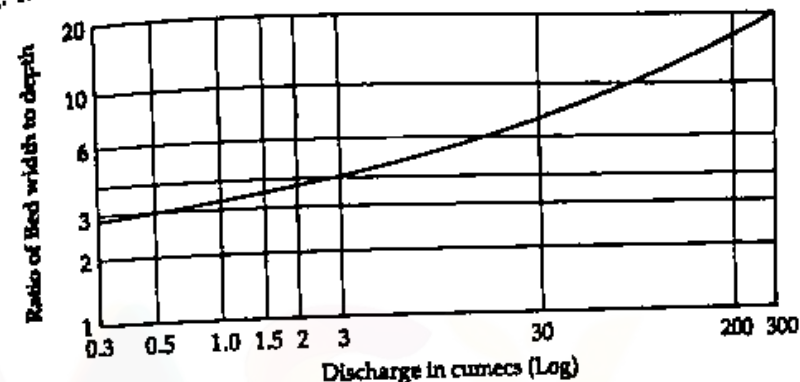


Fig. 4.10

The permissible velocities in unlined and lined drains are given in Table 4.13.

Table 4.13. Permissible Velocities in Drains

S. No.	Type of soil	Max. permissible velocity in m/sec
Unlined drains		1.5
1.	Rock and gravel	1.0 to 1.1
2.	Murum, hard soil, etc.	0.6 to 0.8
3.	Sandy loam, black cotton soil, etc.	0.3 to 0.6
4.	Very light loose sand to average sandy soil	0.6 to 0.9
5.	Ordinary soils	
Lined drains		1.5
1.	Stone pitched	1.8
2.	Burnt clay tile lined	2 to 2.5
3.	Cement concrete lined	

The drain section can finally be designed by using Manning's formula, either as a trapezoidal section (if open and lined or unlined) or as a rectangular section (if covered and lined). A freeboard as suggested in Table 4.1, is then provided above the FSL of the drain, which fixes the bank levels on both sides of the drain.

An outfall structure is also required to be constructed for energy dissipation at the place where any drain outfalls into another major drain. A regulator is also sometimes required at the outfall point, so as to avoid back flow into the drain (when the stream) is in high floods, and the

Example 4.18. Design an unlined trapezoidal section for the outfall reach of an open urban storm water drain, draining a catchment area of 120 hectares. Given the following additional data :

- (i) Inlet time = 18 minutes.
- (ii) Flow time in the upper reaches of the drain = 30 minutes.
- (iii) Coefficient of run-off for the area = 0.6.
- (iv) Design water surface slope = 1 in 3000.
- (v) The drain has to be designed for a 5 years rain frequency, and is situated near a place for which depth duration curves are available, from which the rainfall for 48 min duration is read out to be 52 mm for 5 year frequency.
- (vi) The drain is to be constructed in cutting with a maximum permissible flow velocity as 0.9 m/sec.

Solution. Time of concentration,

$$T_c = \text{Inlet time} + \text{Flow time} \\ = (18 + 30) \text{ minutes} = 48 \text{ minutes.}$$

The critical rainfall corresponding to a duration of 48 minutes for 5 years frequency curve is given to be 52 mm.

$$\therefore p_c = \frac{52 \text{ mm}}{48 \text{ min}} = \frac{5.2}{48} = 6.5 \text{ cm/hr.}$$

From Rational formula, the peak storm run-off

$$= Q_p = \frac{1}{36} \cdot K p_c A \\ = \frac{1}{36} (0.6)(6.5)(120) \text{ cumecs.} = 13 \text{ cumecs.}$$

Assuming a depth (y) of 1.5 m (from Table 4.12) and using Eq. (4.29), let us have the width of the drain (B) as

$$y = 0.5\sqrt{B} \\ \text{or } 1.5 = 0.5\sqrt{B} \\ \text{or } B = 9 \text{ m}$$

Let us now assume the side slopes of the drain as 1 H : 4 V, and longitudinal slope as $\frac{1}{3000}$ (given).

Using $N = 0.025$ in Manning's formula, the discharge through this drain (Fig. 4.11) is given as :

$$Q = \frac{1}{N} \cdot AR^{2/3} \sqrt{S}$$

$$\text{where } A = (B + y)y$$

$$= (9.0 + 1.5) 1.5 = 16.75 \text{ sq. m.}$$

$$P = B + 2\sqrt{2} \cdot y$$

$$= 9.0 + 2\sqrt{2} \times 1.5 = 9.0 + 4.24 = 13.24 \text{ m.}$$

$$R = \frac{A}{P} = \frac{16.75}{13.24}$$

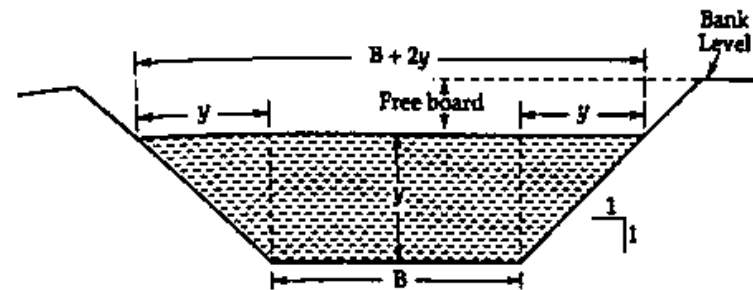


Fig. 4.11

$$\therefore Q = \frac{1}{0.025} \times 16.75 (1.19)^{2/3} \frac{1}{\sqrt{3000}} = 11.5 \times 1.123 \\ = 12.93 \text{ cumecs, which is slightly less than the required value of 13 cumecs.}$$

Hence, increase the bed width slightly, say use $B = 9.1$ m.

$$\therefore A = (9.1 + 1.5) 1.5 = 10.6 \times 1.5 = 15.9 \text{ sq. m.}$$

$$P = 9.1 + 2\sqrt{2} \times 1.5 = 9.1 + 4.24 = 13.34 \text{ m}$$

$$R = \frac{15.9}{13.34} = 1.192 \text{ m}$$

$$\therefore Q = \frac{1}{0.025} \times 15.9 (1.192)^{2/3} \frac{1}{\sqrt{3000}} \\ = 13.05 \text{ cumecs, which is O.K.}$$

Check for maximum velocity

Velocity generated in the drain at the peak discharge

$$= \frac{Q_p}{A} = \frac{13}{15.9} = 0.81 \text{ m/sec.}$$

(which is less than the maximum permissible velocity of 0.9 m/sec.)

Hence, use a trapezoidal drain section with bed width of 9.1 m and water depth of 1.5 m with 1 : 4 side slopes, laid at a longitudinal slope of 1 in 3000. **Ans.**

Example 4.19. Design a suitable stone pitched section for a drain reach, required to pass the expected urban drainage discharge from a catchment area of 300 hectares. The maximum hourly design rainfall is 4 cm/hr and the time of concentration for the drain is 1 hour. The FSL line for the proposed drain has been fixed, as to give a longitudinal slope of 1 in 2300.

Solution.

$$p_0 = 4 \text{ cm/hr.}$$

$$T_c = 1 \text{ hr.}$$

$$p_c = p_0 \left(\frac{2}{1 + T_c} \right) = 4 \left(\frac{2}{1 + 1} \right) = 4 \text{ cm/hr.}$$

Using $K = 0.55$ in Rational formula, we have,

The expected peak discharge in the drain

$$= Q_p = \frac{1}{36} K_p A = \frac{1}{36} \times 0.55 \times 4 \times 300 = 18.3 \text{ cumecs.}$$

Assuming a depth of 1.5 m, we have

$$y = 0.5\sqrt{B}$$

$$\therefore 1.5 = 0.5\sqrt{B}$$

$$\text{or } B = 9 \text{ m.}$$

Use a trapezoidal drain section with 1 : 1 side slopes as shown in Fig. 4.12.

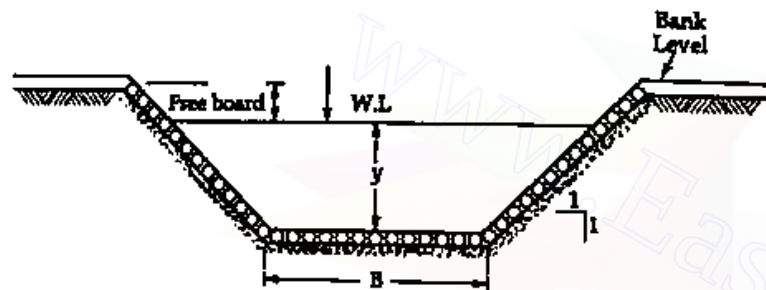


Fig. 4.12

$$\text{Now } A = (B + y)y = (9.0 + 1.5)1.5 = 15.75 \text{ sq. m.}$$

$$P = B + 2\sqrt{2} \cdot y$$

$$= 9.0 + 2\sqrt{2} \times 1.5 = 9.0 + 4.24 = 13.24 \text{ m}$$

$$R = \frac{A}{P} = \frac{15.75}{13.24} = 1.19 \text{ m.}$$

Using Manning's formula and value of n as 0.020, for ordinary dry stone pitching, we have

$$Q = \frac{1}{0.020} \times 15.75 \times (1.19)^{2/3} \times \frac{1}{\sqrt{2300}}$$

$$= 18.4 \text{ cumecs.}$$

$$= \text{Required (18.3 cumecs)}; \therefore \text{ Safe.}$$

$$\text{Velocity generated} = \frac{Q}{A} = \frac{18.3}{15.75} = 1.16 \text{ m/sec.}$$

$$< \text{permissible velocity of 1.5 m/sec.}$$

$$\therefore \text{ Velocity is safe.}$$

Hence, use a trapezoidal drain section with base width of 9 m and water depth as 1.5 m, side slopes 1 : 1, laid at a longitudinal bed slope (parallel to water surface) of 1 in 2300. Ans.

PROBLEMS

- (a) Explain briefly the method of finding out the sizes of sanitary sewers when the discharges to be carried through them are known.

- A circular sanitary sewer is designed to carry the maximum flow of sewage while flowing 70% (i.e. at 0.7 depth) full at a velocity of 0.9 m/sec. If the ratio of

Maximum and Average flows are 2.5 and 2.0 respectively, find out :

(i) the proportionate depth of flow,

(ii) the velocities of flow generated at the time of average flow, and at the time of minimum flow. Neglect variations in the value of 'n', the coefficient of roughness of sewer.

[Hint. Follow Example 4.9]

- State three important design criteria for a sanitary sewer (under Indian conditions) in a town with 30,000 population.
 - A 30 cm dia. sewer having an invert slope of 1 in 150 was flowing full. What would be the velocity of flow and discharge? ($n = 0.013$). Is the velocity self cleansing? What would be the velocity and the discharge when the same is flowing at 0.20 and 0.8 of the full depth.
- Draw two suitable surface drain sections.
 - A sanitary sewer is to serve a uniformly distributed population of 10,000 along a 1,000 m road. The average ground slope for first 500 m is 1 in 400, and for the remaining as 1 in 900. Design the sewer. Give expected peak, average and minimum velocities. Make suitable assumptions, and state them clearly.
- What are the different hydraulic elements and the relation that exists between them, which govern the discharge through a sewer?
 - Find the diameter of a circular sanitary sewer for the following data :

(i) population	= 1,50,000
(ii) average sewage flow	= 190 litres/head/day
(iii) slope of sewer	= 1 in 1000
(iv) value of n in Manning's formula	= 0.018
- Mention the various aspects you would keep in view when designing a sewer.
 - A 90 cm dia. sewer with a invert slope of 1 in 400 is flowing 1/3rd of the full depth. Calculate the velocity and the rate of flow in the sewer. Is it self-cleansing velocity? Use $n = 0.015$.
- Discuss the various factors that affect the hydraulics of sewer lines.
 - Mention the conditions when two conduits are hydraulically equivalent.
 - Draw a neat sketch of a standard egg-shaped sewer. Under what circumstances, it is more advantageous compared to a circular one?
- How does the variation of sewage flow affects its velocity in a circular sewer.
 - Design a sanitary sewer with the following data :

(i) Population served	= 25,000.
(ii) Expected sewage flow	= 135 l/c/d (average)
(iii) Average slope of the ground	= 1 in 500
- Why a circular section is more commonly used in the construction of sewers? What are the advantages of the egg-shaped section, and under what conditions of flow, does it become more useful? Will you recommend its use for sanitary sewers, and if not, why?
- What points should be kept in mind while designing sewers, and how are they designed?
 - Calculate from Manning's formula the diameter of a circular vitrified clay sewer (flowing full at a slope of 1 in 2300) when flowing full at a slope of 1 in 2300.

- (c) For the sewer in (b) above ; if the flow was at 0.6 depth, what would be the discharge in the sewer, and what will be the velocity of flow in partially full sewer, given the following data :

d/D	q/Q	v/V
0.1	0.02	0.30
0.5	0.39	0.80
0.6	0.54	0.88
0.8	0.85	1.01

Where d , q and v are depth of flow, discharge, and velocity respectively for partial flow condition, and D , Q and V are full flow conditions.

10. (a) Explain the importance of the following in the design of sewers :
 - (i) Self-cleansing velocity ; and
 - (ii) Non-scouring velocity.
- (b) A sewer line is laid to serve a community of 150 persons/ha in a mohalla of 30 ha. The average water supply is 225 l/c/d. The available ground slope is 1 in 600. Using Manning's formula with $n = 0.015$, select a suitable diameter of sewer to carry the peak discharge, flowing half-full in the section. Check the velocity for self-cleansing section.
11. (a) Name the two factors used as criteria for selection of pipe diameter and slope in design of sewer.
- (b) Calculate the ratio of discharge of a sewer when flowing at full depth to that when flowing at $3/4$ depth.
12. Write detailed notes on :
 - (i) Design of storm water drains ;
 - (ii) Egg-shaped sewers and hydraulically equivalent sections ;
 - (iii) Characteristics of partially full sewers ; and
 - (iv) Maximum and Minimum permissible velocities in sewers.
13. Define and explain the following terms, connected to sewer designs :
 - (i) Self cleansing velocity ;
 - (ii) Non-scouring velocity ;
 - (iii) Hydraulically equivalent section ; and
 - (iv) Circular and Egg-shaped sewer sections.

Sewers, their Construction, Maintenance, and Required Appurtenances

5.1. Introduction

Sewer pipes, as pointed out earlier, are generally circular pipes laid below the ground level, and generally sloping continuously towards the outfall. They are designed to flow under gravity, except for the outfall sewer which carries the treated and pumped sewage into the discharging source, and hence flows full under pressure*.

5.2. Shapes of Sewer Pipes

The sewer pipes are normally circular in section, although some other sections such as basket handle shape, egg shape, horse shoe shape, parabolic shape, semicircular shape, semi elliptical shape, rectangular shape, etc. may also be used under special necessities of a particular project. Out of these remaining shapes also, egg shape sections may be preferred for combined sewers, and rectangular shaped sewers are preferably constructed at site and normally used as independent covered storm water surface drains, and not as sewers. All other forms of sewers are almost out-dated and rarely used these days. The various forms of sewers, which can possibly be constructed and the circumstances in which each one is preferred, are shown in Fig. 5.1 (a), (b), (c), (d), (e), (f), (g), (h), (i) and (j).


5.3. Forces Acting on Sewer Pipes

The structural design of the sewer pipes should be such as to enable them to withstand the various forces likely to come on them. The following forces generally come into play in the sewer pipes :


- (1) Internal pressure of sewage ;
- (2) Pressure due to external loads ;
- (3) Temperature stresses ;
- (4) Flexural stresses.

These forces are discussed below :


5.3.1. Internal Pressure of Sewage. The pressure exerted by the sewage from inside the pipe when running full is called the internal pressure. Such a pressure may be exerted due to either chancy surcharge or due to overflow of sewers flowing under gravity, or it may be exerted in outfall sewers which have to flow full under pressure. Since most of the sewers of a sewerage

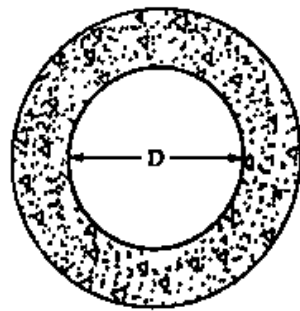


(a)
Circular shaped sewer
(most widely used for
all types of sewers)

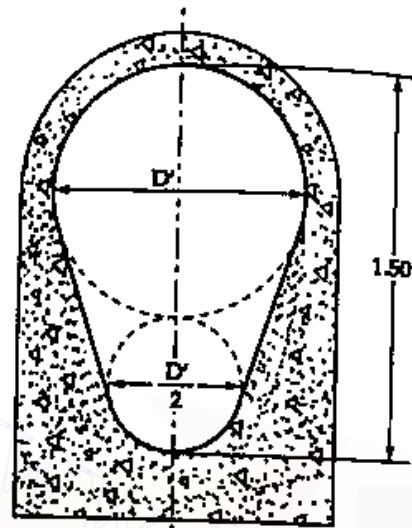


(b)
Standard Egg-shaped sewer
(may be preferred for
combined sewers)

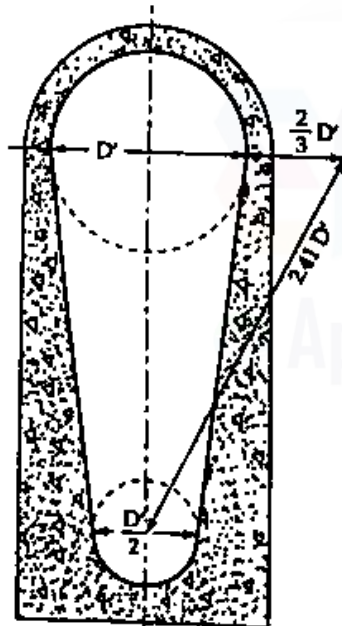


(c)
New Egg-shaped sewer
(may be preferred for
combined sewers)

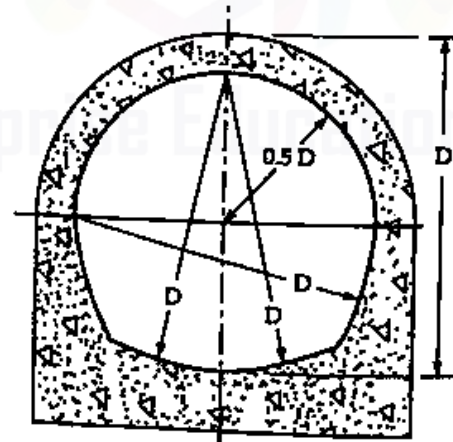

(d)
Horse shoe shaped sewer
(may be used for large sewers
with heavy discharges, such as for

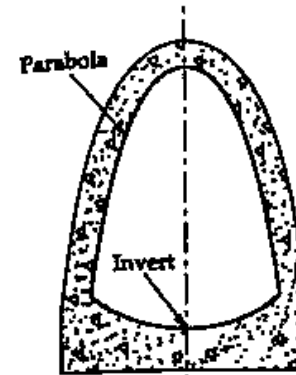


(e)
Parabolic shaped Sewer
(may be used for carrying comparatively
smaller quantities of sewage.)

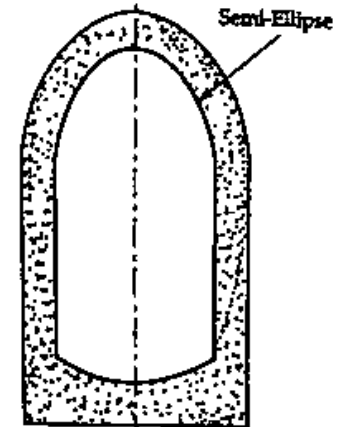


(f)
Semi-Elliptical Section
(may be used for soft soils as it is
more stable, but useful only for
carrying large amounts of sewage,
in sewers greater than about 1.8 m
in a diameter.)




(g)
Rectangular shaped section
(generally used for covered
storm water drains)

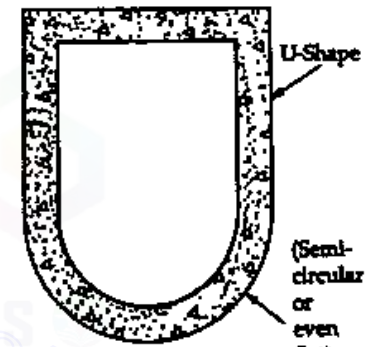

(h)
U-shaped section
(may be used for larger sewers
and especially in open cuts)

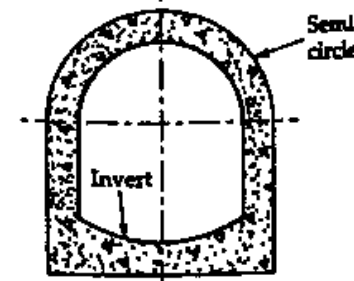

(i)
Semi-circular shaped sewer

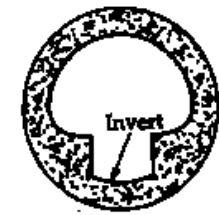

(j)
Basket handle shaped sewer

scheme are designed as gravity conduits, the internal pressure of water is not of much problem. However, it may be mentioned here that the tendency of the internal pressure is to cause bursting of the pipe and to induce tensile stresses in the pipe material. Hence, when pipes are to be used as pressure pipes, they must be strong in tension.

5.3.2. Pressures due to External Loads. Sewer pipes are mostly buried under the ground and placed in trenches, which are back filled. The weight of the pipe, the weight of the backfill and the superimposed traffic loads if any, will then be transferred to the pipe. This will produce compressive stresses in the pipe material (when the pipe is flowing under no internal pressure) and the material may fail in compression, if it exceeds the allowable compressive stress of the pipe material. The pipes should, therefore, be checked for this possible failure.

This compressive force is the most predominant force for the sewers, since they are sometimes taken very deep, and hence it must be properly evaluated.

The stresses produced due to external loadings can be evaluated by using certain empirical formulas, as given below. These formulas are based on the experiments carried out by Marston, etc. at Iowa State College in U.S.A.

(a) For pipes resting on or projecting above the undisturbed ground in cohesion less soils and covered with fills, such as in a highway culvert (Fig. 5.2), the external load likely to come per unit length of pipe (W) is given by


$$W = C_p \cdot \gamma \cdot D^2 \quad \dots(5.1)$$

where C_p = a coefficient whose value depends upon the type of pipe and character of foundation backfill. Typical values of C_p are given in table 5.1.

γ = Sp. wt. of the fill material

D = The external diameter of the pipe
= (Internal diameter + 2 × thickness)

Table 5.1. Values of C_p in Eqn. (5.1)

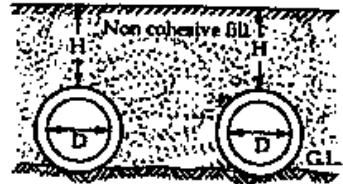Conditions	Cover depth External pipe dia	Values of C_p	
		For rigid pipes	For flexible pipes
(1)	(2)	(3)	(4)
	1.0	1.2	1.1
	2.0	2.8	2.6
	3.0	4.7	4.0
	4.0	6.7	5.4
	6.0	11.0	8.2

(b) For flexible pipes (such as steel pipes) buried in narrow trenches and with thoroughly compacted side fills, such as shown in Fig. 5.3, the external load per unit length of the pipe is given by

$$W = C \cdot \gamma \cdot B \cdot D \quad \dots(5.2)$$


where C = a coefficient, characterising the fill material and the ratio H/B . Typical values are given in table 5.2.

(c) For rigid pipes (such as concrete, cast iron, vitrified clay, etc.) buried in narrow trenches and thoroughly compacted with cohesionless fills, the external load per unit length of the pipe is given by

$$W = C \cdot \gamma \cdot B^2 \quad \dots(5.3)$$

where C , γ and B have the same meaning as given above.

Table 5.2. Values of C in Eqns. (5.2) and (5.3)

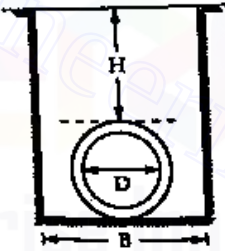Conditions	Fill Material	Dry Sand and Gravel	Satu- rated top soil	Clay	Satu- rated clay
	Specific wt. in kg/m ³	1600	1600	1920	2080
	values of $\frac{H}{B}$	C	C	C	C
	1.0	0.84	0.86	0.88	0.90
	2.0	1.45	1.50	1.55	1.62
	3.0	1.90	2.00	2.10	2.26
	4.0	2.22	2.33	2.49	2.65
	5.0	2.45	2.60	2.80	3.03
	6.0	2.60	2.78	3.04	3.33
	7.0	2.75	2.95	3.23	3.57
	8.0	2.80	3.03	3.37	3.76
	9.0	2.88	3.11	3.48	3.92
	10.0	2.92	3.17	3.56	4.04
	12.0	2.97	3.24	3.68	4.23
	14.0	3.00	3.28	3.75	4.34

(d) The amount of superimposed loads (such as traffic load, etc.) which is transmitted to the pipe, can be evaluated by using Boussinesq's equation. Assuming the fill surface to be horizontal, the equation is

$$p_t = \frac{3 \cdot H^3 \cdot P}{2\pi Z^3} \quad \dots(5.4)$$

where p_t = unit pressure developed at any point in the fill at a depth H below the surface due to traffic load.

P = Load superimposed.

Z = The slant height of the considered point from the load P .

H = Distance of the top of pipe below the surface of the fill.

The total traffic load developed on a unit length of conduit (W') can be found by integrating the Eqn. (5.4) over the projected area of the pipe. This integration can be done by subdividing the projected area of the pipe into small squares, and then computing the load on each sub-division, and finally adding these values to obtain a total.

In case of unsurfaced roads, the impact from moving loads may nearly double the computed loads. Paving considerably reduces the effect of impact. Moreover, the effect of superimposed load decreases rapidly as the depth of cover increases (because Z^3 increases much more than H^3).

The total load per unit length of the pipe from the backfill and from traffic can be found by adding W with W' . The compressive stress produced, which should be checked (when pipe is empty) will then be given by

$$\frac{W + W'}{t} \text{ kg/m}^2 \quad \dots(5.5)$$

(where t is the thickness of the pipe in metres).

Note. There is sometimes the possibility of creation of vacuum in the pipe due to water hammer, which will increase the compressive stresses. The pipe thickness should be checked for that possibility also, so as to avoid collapse in such conditions.

Example 5.1. A pipe 1 metre in diameter, buried in a trench 1.4 m wide, is backfilled with dry sand. The top of the pipe is 2.5 m below the surface of the fill. The pipe passes at right angles under a one lane road which carries a vehicle whose loading (including impact) consists of two concentrated 800 kg loads located at 1.8 m apart transverse to the roadway. Find the maximum vertical force exerted on a unit length of the pipe, if

(a) the pipe is made of steel.

(b) the pipe is a cast iron pipe.

The thickness of the pipe may be neglected for calculating the external dia of the pipe.

(c) what is the stress produced in steel pipe, if its thickness is 1 cm?

Solution. We will, first of all, evaluate the forces caused by backfill.

In this question, we have

$$D = d = 1 \text{ m (neglecting thickness, as given)}$$

$$B = 1.4 \text{ m}$$

$$\gamma \text{ for dry sand} = 1600 \text{ kg/m}^3 \text{ (assumed)}$$

$$H = 2.5 \text{ m.}$$

Case (a) The pipe is of steel—which is a flexible pipe

$\therefore$ Using Eqn. (5.2), we have

$$W = C \cdot \gamma \cdot B \cdot D$$

The value of C from table 5.2, for $\frac{H}{B} = \frac{2.5}{1.4} = 1.8$, and dry sand is given by

$$= 0.84 + \frac{1.45 - 0.84}{1} \times 0.8 = 0.84 + 0.61 \times 0.8 = 0.84 + 0.49$$

$$= 1.33.$$

Substituting, we get

$$W = 1.33 \times 1600 \times 1.4 \times 1 \text{ kg/m} = 2980 \text{ kg/m.} \quad \dots(i)$$

Case (b) The pipe is of cast iron, which is a rigid pipe. Using Eqn. (5.3), we have

$$W = C \cdot \gamma \cdot B^2 = 1.33 \times 1600 \times (1.4)^2 = 4170 \text{ kg/m.} \quad \dots(ii)$$

Now, we will evaluate the forces caused by traffic load.

Using Eqn. (5.4), we have

P_t = pressure developed due to traffic load

$$= \frac{3H^3 \cdot P}{2\pi Z^5}$$

Here in this question, we have

Z = The slant height from one of the wheel load to a point on the pipe midway between the load

$$= \sqrt{\frac{\text{space between the wheel}^2}{4} + H^2}$$

$$= \sqrt{\left(\frac{1.8}{2}\right)^2 + (2.5)^2} = \sqrt{0.81 + 6.25} = \sqrt{7.06}$$

or $Z = 2.66 \text{ m.}$

But $P_t = \frac{3 \cdot H^3 \cdot P}{2\pi Z^5}$

Hence, pressure developed due to single wheel load

$$= \frac{3 \times (2.5)^3 \times 800}{2 \times 3.14 \times (2.66)^5} = \frac{3 \times 15.6 \times 800}{2 \times 3.14 \times 134} = 44.4 \text{ kg/m}^2.$$

Total force due to traffic load per metre length of pipe

$$W' = p_t \times \text{No. of wheels} \times \text{projected area of the pipe}$$

$$= (44.4) \times 2(1)$$

$$[\because \text{Projected area} = \text{Dia} \times 1 \text{ metre length} = 1 \text{ m} \times 1 \text{ m} = 1 \text{ m}^2]$$

$$W' = 88.8 \text{ kg/m length.}$$

or Total external force inclusive of backfill and traffic per metre length of pipe in case (a)

$$W + W' = 2980 + 88.8 = 3068.8 \text{ kg/m}$$

Say 3069 kg/m. Ans.

*The more accurate estimate of superimposed load could have been made by analysing smaller unit areas and then adding the load on each subdivision (Z will then be different in all cases). This method is not justified in this case.

Total external force inclusive of backfill and traffic per metre length of pipe in case (b)

$$= 4170 + 88.8 = 4258.8 \text{ kg/m}$$

Say 4259 kg/m. Ans.

Using Eqn. (5.5),

$$\begin{aligned} \text{Stress produced in steel pipe} &= \frac{W + W'}{t} = \frac{4259}{0.01} \\ &= 4,25,900 \text{ kg/m}^2 = 42.59 \text{ kg/cm}^2. \text{ Ans.} \end{aligned}$$

5.3.3. Temperature stresses. When pipes are laid above the ground, they are exposed to the atmosphere; and are, therefore, subjected to temperature changes. They expand during day time and contract at night. If this expansion or contraction is prevented due to fixation or friction over the supports, longitudinal stresses are produced in the pipe materials. The amount of these stresses may be calculated as below:

$$\text{Elongation} = L \cdot \alpha \cdot T$$

• But, Strain = Elongation per unit length

$$\begin{aligned} &= \frac{L \cdot \alpha \cdot T}{L} \\ &= \alpha \cdot T \end{aligned}$$

$$\text{Stress} = E_p \cdot \text{strain} = E_p \cdot \alpha \cdot T$$

or

$$f = E_p \cdot \alpha \cdot T \quad \dots(5.6)$$

where E_p = Modulus of elasticity of the pipe material

α = Co-efficient of expansion of the material

T = Change in temperature in °C.

Special types of expansion joints at suitable intervals (say 20 m to 30 m or so) must be provided to counteract these stresses. But however, since the sewer pipes are mostly buried underground, these temperature stresses do not come into picture.

5.3.4. Flexural stresses. Sometimes, the sewer pipes may have to be carried supported between trestles, or piers, like beams. Similarly, sometimes the rain water, etc. may wash off the ground from below the pipes resting on the ground, thus exposing them like beams supported between two supports. Under all such circumstances, bending stresses get produced in the pipe, since the pipe acts like a beam with loads resulting from the weight of the pipe, weight of the sewage in the pipe, and any other superimposed loads. The stresses caused by this beam action may be determined by usual methods of structural analysis applied to beams. However, in normal circumstances, the stresses produced are small for smaller spans, and hence often neglected except for long spans or where there are huge superimposed loads.

5.4. Sewer Materials

Vitrified clay (or stone ware), cement concrete, asbestos cement and cast iron are the most common materials used for constructing sewer pipes. While selecting a particular material for constructing sewer pipes, the important factors which must be considered are:

SEWERS, THEIR CONSTRUCTION, MAINTENANCE, AND REQUIRED APPURTENANCES 93

(i) *Resistance to corrosion.* The sewer pipes are likely to be acted upon by sewer gases, and thus get corroded, due to the presence of acids and other impurities in sewage. The sewer material should therefore, be such as to be resistant to corrosion, and thus to last for a longer life.

(ii) *Resistance to abrasion.* When the sewage contains a lot of grit and sand particles, moving at a high velocity at the sewer invert, a lot of wear and tear of the sewer material may be caused due to abrasion. To avoid this erosion or wear and tear of the sewer pipe, the sewer material must be strong enough, so as to withstand such possible abrasions.

(iii) *Strength and durability.* The sewer pipes should be strong enough to withstand all the forces that are likely to come on them. Since they are laid well below the ground level, they are subjected to considerable external loads. However, they are generally not subjected to the internal pressure of water (as the water pipes are subjected to). In order to counteract the various forces* to which these pipes are likely to be subjected, sufficient thickness of the pipe material, or suitable reinforcement in the pipes, must be provided. Moreover, the pipe materials must be durable as not to give way quickly due to normal wear and tear, and thus to provide a longer life span and to avoid their frequent replacement.

(iv) *Light weight.* The material used for sewers should be light, so that the sewers can be easily handled and transported.

(v) *Imperviousness.* The sewer material should be impervious as not to allow any seepage of the sewage from the sewer.

(vi) *The economy and cost.* The sewer material must be cheaper and less costly as to cause overall economy in their construction.

(vii) *Hydraulically efficient.* The sewer material should be such as to provide a smooth interior surface (with Manning's N as low as possible) so as to provide an hydraulically efficient surface.

Besides cement concrete, asbestos cement and vitrified clay which are the commonly used materials, other materials which may also be used for sewer constructions are bricks, cast iron and plastics. The sewers of different possible materials and their comparative utilities are described below.

(1) *Asbestos Cement Sewers.* Asbestos cement pipes are manufactured from a mixture of asbestos fibre, silica and cement, converted under pressure to a dense homogenous material, possessing considerable strength, called asbestos cement. The asbestos fibre which is thoroughly mixed with cement serves as reinforcement, and provides a strong material. These pipes are normally available in sizes say from 10 to 90 cm in diameter and 4 metres in length.

Jointing. These pipes can be easily assembled without skilled labour, with the help of a special coupling (called Ring Tie coupling or Simplex joint) as shown in Fig. 5.4 (a) and (b). The assembly consists of a pipe sleeve and two rubber rings, which are compressed between the pipe and the interior of the sleeve. The joint is as resistant to corrosion as the pipe itself, and is flexible enough as to permit as much as 12° deflection, while laying the pipes around curves (in plan).

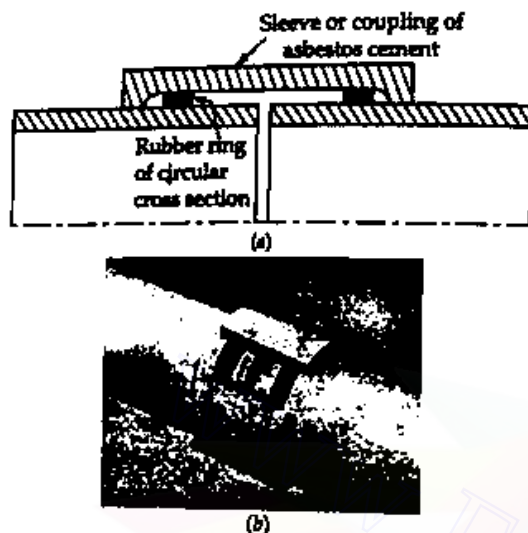


Fig. 5.4. Simplex joint for A.C. pipes. Rubber O-rings seal the joint and provide a degree of flexibility.

The advantages of A.C. pipes are :

- (i) They are light in weight and hence easy to transport.
- (ii) They can be easily cut and assembled without skilled labour.
- (iii) Their interior surface is exceptionally smooth (with Manning's $N = 0.011$), thus providing an excellent hydraulically efficient sewer.

The disadvantages of A.C. pipes are :

- (i) They are structurally not strong enough to bear the huge compressive stresses induced by the heavy external loads to which the deeply buried sewers may be subjected to.
- (ii) They are susceptible to corrosion by sulphuric acid from hydrogen sulphide gas generated in sanitary waste water or by some industrial chemicals. The sulphide corrosion of asbestos cement as well as cement concrete pipes is a big problem in areas where the sewage is strong, stale and very warm, because under such conditions the bacterial activity responsible for producing hydrogen sulphide gas gets accelerated. Hence in all such cases, vitrified clay (popularly called stone ware) pipes should be used for sewers of less than 1 m in diameter, and cement concrete pipes with cast insitu plastic linings may be used for larger diameter sewers.

In view of their disadvantages, asbestos cement pipes are best suited to be used as verticals* for bringing down either the rain water from the roofs, or the comparatively less foul sullage from kitchens and bath rooms situated at the upper floors of the buildings**. The use of A.C. pipes for these purposes in place of cast iron pipes can lead to considerable economy.

(2) Plain Cement Concrete and Reinforced Cement Concrete Sewers. Plain cement concrete pipes are manufactured in small sizes (i.e., up to say

*Not subjected to any earth pressure.

**Rain water and sullage are less foul, and therefore...

0.45 m diameter),* while they are reinforced with steel reinforcement for larger diameter pipes. RCC pipes are easily available in sizes up to diameters say 1.8 metres, and may be got manufactured for larger diameters say upto about 4.5 metres, on special orders. These pipes may either be prepared at site by transporting ingredients (i.e., cement, steel, aggregates, water, etc.) or can be manufactured in factories, and then transported to site. They are known as cast insitu pipes in the former case, and precast pipes in the latter case. Cast insitu pipes are useful when the site conditions are difficult and where it may be difficult to carry the pipes. But since such pipes are cast at site, lesser supervision and check is possible as compared to the case of precast pipes which are cast in the factories and thus subjected to greater quality control and supervision.

The usual mix is $1 : 1\frac{1}{2} : 3$ (1 cement : $1\frac{1}{2}$ fine aggregate : 3 coarse aggregate) with maximum size of aggregate limited to 6 mm. The water cement ratio usually varies between 0.5 to 0.7 depending upon the thickness of the pipe section, and the equipment used for placing and compacting the concrete.

Reinforced cement concrete (R.C.C.) pipes are those concrete pipes which are provided with circumferential reinforcement to carry internal or external stresses, and a nominal longitudinal reinforcement equal to 0.25% of the cross-sectional area of concrete. The circumferential reinforcement is generally provided in three different ways, as shown in Figs. 5.5 (a), (b) and (c).

In a sewer of Fig. 5.5 (a), the main circular circumferential reinforcement has been provided near the inner surface of the pipe, so as to withstand the internal forces causing Hoop's tension. Such reinforcements are, therefore, provided in smaller sized pipes (less than 0.8 m in diameter) which are subjected to internal pressure only. In case of larger sized pipes (greater than 0.8 m in diameter) subjected to internal as well as external pressures, two sets of circular circumferential reinforcements (one near the inner face, and one near the outer face) as shown in Fig. 5.5 (b), may be provided. However, in case of large diameter sewers subjected to external pressures alone (as is the normal case for sewers), an elliptical cage reinforcement, such as shown in Fig. 5.5 (c), may be provided.

The non-pressure R.C.C. pipes are classified according to IS : 458—1988 into the following three categories :

- (i) NP2 pipes. They are light duty R.C.C. non-pressure pipes, normally used for drainage and irrigation use, for culverts carrying light traffic. The thickness of NP2 pipes vary from 25 mm for 8 cm dia pipe to 110 mm for 2.2 m dia pipe.
- (ii) NP3 pipes. They are medium duty non-pressure pipes, normally used for drainage and irrigation use, for culverts carrying medium traffic. The thickness of NP3 pipes vary from 25 mm for 8 cm dia pipe to 215 mm for 2.6 m dia pipe.
- (iii) NP4 pipes. They are heavy duty non-pressure pipes, normally used for drainage and irrigation use, for culverts carrying heavy traffic, such as railway loadings.

* Plain C.C. pipe are non-pressure pipes, and classified as NP1 pipes according to IS 458—1988 ; their thicknesses varying from 2.5 to 3.5 cm. for dia varying from 8 cm to 45 cm.

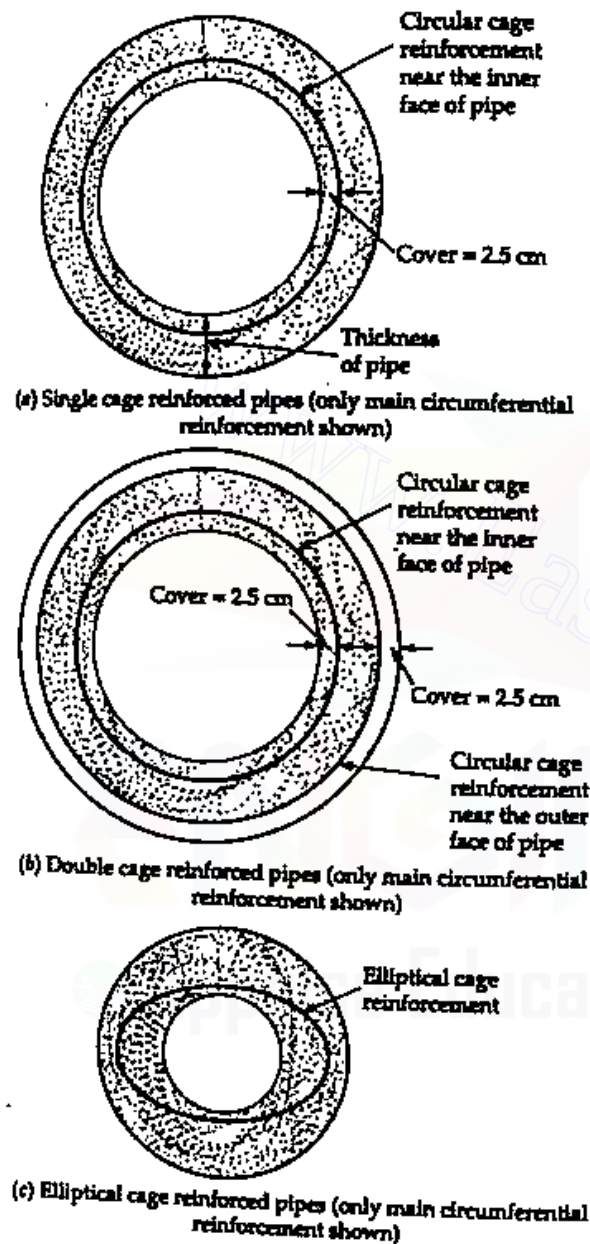


Fig. 5.3 Reinforced cement concrete pipes.

The unreinforced as well as reinforced concrete pipes shall be capable of withstanding a test pressure of 7 m head of water.

R.C.C. pressure pipes, classified as P1, P2 and P3 pipes, are generally used for carrying water supplies under pressure and are usually not used as sewers which are designed as gravity sewers.

R.C.C. pipes can be manufactured in three different ways, viz. :

(a) Pipes having bar and mesh reinforcement, and concrete poured by usual ordinary methods of concrete pouring and tamped.

(b) Pipes made by rotating the mould or the form, rapidly about the pipe axis. The mould contains concrete and fabricated reinforcement. The centrifugal force throws off the concrete, which then spreads in a uniform layer over the internal surface of the mould and embed the reinforcement ; thus providing a high density water-tight concrete surface. This type is known as *centrifugal type*.

(c) The third type of pipes are made by lining thin cylindrical steel shells, both internally and externally, with rich cement concrete. These are stronger and more water-tight than the first two. They are known as *cylinder type*.

Hume steel pipes are also the R.C.C. pipes patented under this name, and consist of thin steel shells coated from inside with cement mortar by centrifugal process. The thickness of the inside coating varies from 12 mm to 30 mm depending upon the size of the pipe. They are also coated from outside, so as to protect the steel shell from external weather or soil action. The thickness of external coating is 25 mm for pipes up to 1 metre in diameter, and is 37.5 mm for pipes of larger diameters. The thickness of steel shell depends upon the size of the pipe, and also upon the pressures to be borne by the pipe. They are available in sizes ranging from 10 cm to 2.4 m in diameter, and in lengths varying from 0.9 to 2.4 m.

Advantages of concrete pipes are given below :

(i) All these different forms of cement concrete pipes are quite strong in tension (for withstanding internal pressures) as well as in compression (for withstanding external loads).

(ii) They are quite resistant to erosion and abrasion.

(iii) They can be easily moulded and manufactured either at site or in the factory.

(iv) They can be made of any desired strength by proper design and proportioning of concrete mixes.

(v) Their precast forms may be easily used at places where, owing to ground water or running sand conditions, brick sewers or cast at site concrete sewers can not be used.

(vi) They prove economical in medium and large sizes, and hence, widely adopted for branch and main sewers.

The biggest drawback of the concrete sewers, however, is the fact that they easily get corroded and pitted by the action of sulphuric acid produced from hydrogen sulphide gas (evolved from the stale sewage) or from such other chemicals present in sewage. This not only reduces the life span of the sewers but also reduces their carrying capacities with time. Besides corrosion, they are also susceptible to erosion by sewage containing too much silt and grit.

The concrete sewers can be protected from such actions by lining their interiors with vitrified clay linings, as shown in Fig. 5.6. The blocks of vitrified clay, for this purpose, are provided with projections, which project and enter the cement mortar joints between adjacent blocks are filled

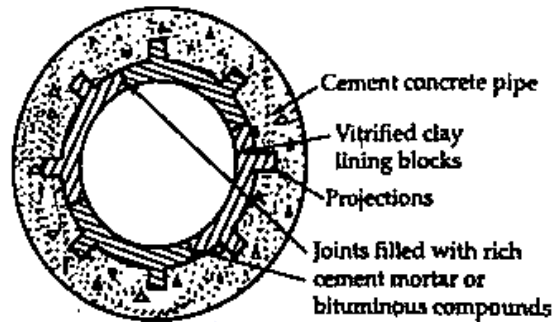


Fig. 5.6. Cement concrete pipe, lined inside with vitrified clay lining.

Other methods of protecting concrete sewers from hydrogen sulphide corrosion are :

- (i) Prohibiting the entry of wastes containing sulphides.
- (ii) Reducing the sulphate contents by pre-treating the sewage.
- (iii) Aerating and chlorinating the sewage.
- (iv) By adequately ventilating the sewers.
- (v) By making the sewers to run full.
- (vi) By adding such chemicals to sewage as may neutralise the already present sulphur compounds.

In view of its merits and drawbacks, the unlined cement concrete sewers are widely used for carrying storm water, which is comparatively free from organic impurities responsible for generating hydrogen sulphide gas. They may, however, be used for branch sewers bringing sewage free from industrial wastes. With protective linings, they are used for almost all the branch and main sewers.

Joining. The concrete pipe lengths, flowing under gravity, can be easily joined with a mortar caulked bell and spigot joint, such as shown in Fig. 5.7.

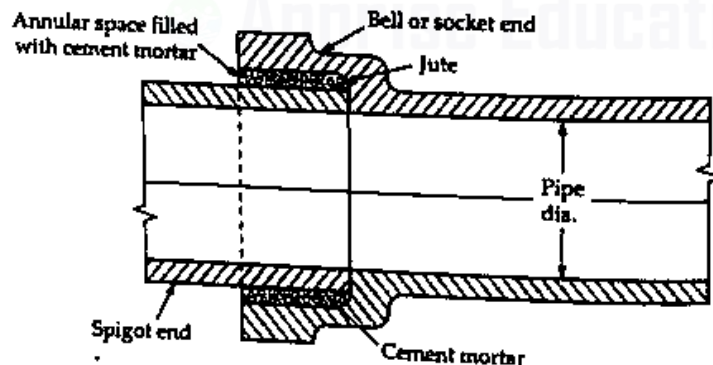


Fig. 5.7. Bell and Spigot Joint.

For gravity flows, even a No-joint concrete pipe has been developed in California. This pipe has

A special pipe laying machine with a slip form is used. This No-joint pipe, though not reinforced, is yet found to have a good life.

The R.C.C. pipe lengths are joined by placing the protruding end bars of different lengths butting against one another and welding them, and finally filling the gap with rich cement concrete, so as to provide a water-tight joint.

(3) **Vitrified clay or Stoneware or Salt-glazed Sewers.** Vitrified clay pipes are widely used for carrying sewage and drainage, as *house connections* as well as *lateral sewers*. They are available in size of 5 cm increments from 10 to 30 cm, and in 7.5 cm increments from 30 cm to 90 cm. They are, however, rarely made in sizes bigger than 90 cm diameter.

These pipes are manufactured from clays and shales of special qualities, which are, first of all, pulverised and mixed thoroughly with water. This mixture is then used for casting standard pipe sections in a pipe press at a pressure of about 8.5 kg/cm². These moulded pipe sections are dried in warm air, and then burnt in hot kilns under controlled temperatures. The temperature of the kiln is maintained at about 150°C, in the beginning for several hours, and then raised to about 700°C, and finally to about 1200°C, when fusion or *vitrification* of clay takes place. This makes it very dense and hard. Near the end of the burning period, sodium chloride (i.e. common salt) is placed in the kiln. The intensive heat causes the salt to vaporise, which reacts with the clay, forming a thin smooth, hard, and a waterproof glazed layer on the pipe surfaces. These pipes are joined by a bell and a spigot flexible compression joint, in which the precision mated surfaces are in tight contact with one another. These pipe lengths are, therefore, cast with having bell and spigot ends, in lengths of about 0.9 to 1.2 m. The interior surface of the socket end and the exterior surface of the spigot end, are, however, not glazed so as to make a water-tight joint.

The *advantages* of these pipes are :

- (i) The stone-ware pipes offer the maximum advantage of being highly resistant to sulphide corrosion, and therefore, preferred for carrying polluted sewage and industrial wastes.
- (ii) Their interiors are very smooth and they are hydraulically very efficient.
- (iii) They are highly impervious and do not allow any sewage to seep out of them.
- (iv) They are, though weak in tension, yet quite strong in compression, and hence they are quite suitable for withstanding compressive stresses caused by traffic and back-fills. They are also quite strong to withstand beam action under superimposed loads. So much so, that they can withstand loads of about 4.5 m soil cover, if a pipe length remains hanging between joints due to the removal of soil from below.

They, however, can withstand only very small tensile stresses caused by internal pressures. Hence, they can, though withstand slight tensile stresses caused by some chancy surcharge of gravity sewers, yet cannot be used as sewers flowing under pressure.

- (v) These pipes are quite cheap, durable, easily available, and can be easily laid and jointed.

(vi) They are made non absorbant, so as not to absorb water more than 5% of their own weight, after kept immersed in water for 24 hours.

The *disadvantages* of these pipes are :

(i) They are heavy, bulky, and brittle, and, therefore, difficult to transport. Due to this reason, they are cast only in smaller sizes and smaller lengths. Due to their shorter lengths, numerous joints are required in laying such pipes, and due to smaller sizes, they cannot be utilised as branch or main sewers.

(ii) They cannot be used as pressure pipes, because they are weak in tension.

(4) **Brick sewers.** Bricks had been used as sewer material since ancient days. They, however, have now-a-days been almost replaced by cement concrete sewers. However, they may still be used at places where the sewers are required to be constructed at the site and ingredients required for cement concreting may not be easily available. They may also be preferred for constructing large sized combined sewers, or particularly for storm water drains.

Brick sewers are generally plastered on their outer surfaces so as to prevent the entry of tree roots and ground water through the brick joints ; and are lined inside with stone ware or ceramic block so as to render them smooth and hydraulically efficient. The stoneware or ceramic coating also helps in resisting sulphide corrosion which is not possible with the ordinary cement plaster as the same is easily attacked by sewer gases like hydrogen sulphide.

(5) **Cast iron sewers.** Cast iron pipes are structurally stronger and capable of withstanding greater tensile, compressive, as well as bending stresses, but are costlier, compared to cement concrete or stone ware pipes. They are, therefore, used as sewers, only under special circumstances, such as :

(i) For outfall sewers, for rising mains of pumping stations, or for inverted siphons, all running under pressure.

(ii) For sewers to be laid below heavy traffic loads, such as those laid below highways or railways.

(iii) For sewers carried over piers or trestles while crossing low lying areas.

(iv) For sewers which are to be 100% leak proof, so as to avoid possible contamination of under ground water supplies.

Cast iron pipes are though structurally quite stronger and durable, yet can not withstand the corrosive action of gases and other acids present in sewage ; and hence generally lined from inside with cement concrete, or painted with coal tar, etc. Although the sewer pipes are not subjected to high pressures, but still they are made as heavy or even heavier than the water pipes, so as the resist the corrosive action of sewage.

Cast iron pipes can be manufactured by two methods. One is the ordinary *sand moulding method*, and the other is the *centrifugal process*. Pipes, cast in horizontal position by ordinary sand moulding are called *Mcwane pipes*, while those cast vertically are called *pit cast pipes*. Horizontal cast pipes are 100 percent strong in tension and 60 percent stronger in rupture than vertically cast iron pipes. Centrifugally cast iron pipes are made either in sand or metallic moulds. The former are called *Sand spun pipes* and the latter are called *Delavand pipes*. The spun iron pipes are denser and tougher than the

The Indian specifications on cast iron pipes are given in IS : 1536—1967, and its important provisions are given in Vol. I—“Water Supply Engineering”. They may be referred to, if needed. The cast iron pipes are generally manufactured in lengths of about 3.5 metres but may also be manufactured up to 6 m or so, on special orders. The different pipe lengths are jointed together by means of a *bell and spigot joint* (such as shown in Fig. 5.7) in which the annular space may be filled either by cement mortar or by lead. Lead may be used in place of cement mortar at places where absolute water tightness is required or where internal pressures are likely to be produced.

(6) **Lead Sewers.** The lead pipes are smooth, soft, and can be easily bent to take odd shapes. They are also not affected by acid or alkaline sewage discharges, and can resist sulphide corrosion. They are, however, very costly.

The lead pipes are occasionally used in smaller sizes (3 to 4 cm diameter) and in smaller lengths in the toilets. They may be used as a downtake pipes of flushing cisterns, or as waste pipes from stall urinals and wash basins, or for geyser connections.

(7) **Plastic Sewers.** The use of plastics for non-pressure sewer pipes is of comparatively recent origin, and is still in the experimental stages. Yet however, certain countries like Netherlands, Scandinavia, France, etc. have already started using plastic pipes for sewers of 250 mm dia and above, on a moderate to large scale (15% to 25% or so). Their use in Germany and U.K. is hardly 5—7%, and in India, practically no plastic pipes are used for laying sewers, although of course, they are, finding increasing use in internal water supply and drainage fittings.

In modern days, however, plastic pipes of upto 1.50 mm dia have also been started to be used even in India in house connections for carrying sewage up to the municipal sewers.

Although, at one stage, the use of plastic pipes for non-pressure sewers appeared not too promising, yet, however, the improved technology in plastics have increased the use of plastic sewers.

The test results on uPVC pipes have shown that :

(i) such pipes get deformed up to about 2 years, the rate of deformation decreasing with time ;

(ii) their deformation is predominantly influenced by the type of backfill material and its method of application ;

(iii) traffic loading has a little effect on the final deformations, but it reduces the time to achieve equilibrium conditions ; and

(iv) at no time, a PVC pipe failed to operate as part of an operational sewer system due to excessive deformations.

Further improvements in plastic sewers are on the anvil. A number of novel pipe construction methods have been devised to provide optimum performance for such uPVC pipes.

The latest development of a rib-reinforced solid wall uPVC pipe (ULTARA-RIB), which has been largely tested in U.K. and Scandinavia, has shown

5.5. Laying and Testing of Sewer Pipes

During planning a sewerage system for a city or a town, the alignment of various laterals, branches and main sewers are, first of all, decided on a contour map of the area. The populations or catchment areas, to be drained by each pipe, are then marked. The required sizes of the pipe sections and their gradients are then computed, so as to enable each pipe to pass the maximum sewage that may enter into it. Separate L sections are then drawn for each sewer line, showing the invert levels at different R.Ds (Reduced distances) and the typical cross-sections between them. The positions of manholes at suitable intervals along the route of the sewer line are also decided and marked. The positions of other appurtenances* are also decided and marked on the maps.

After finalising all the details of the different sewer lines on the maps, the work is got approved, and finally executed. During execution, the sewer pipes will have to be laid at their designed levels; the different pipe lengths to be suitably jointed; and finally tested for their corrected alignments and water tightness. In this article, we are describing the procedures adopted for laying and testing these sewer pipes.

5.5.1. Laying of the Sewer Pipes. All the sewer pipes are generally laid starting from their outfall ends, towards their starting ends. The advantage gained in starting from the tail end, (i.e. outfall end) is the utilisation of the tail length even during the initial periods of its construction, thus ensuring that the functioning of the sewerage scheme has not to wait till the completion of the entire scheme. The laying of the sewer pipes is, therefore, started from the outfall end, and proceeded upward by locating the different points along the proposed alignment on the ground. It is a common practice, to first locate the points where manholes are required to be constructed (as per the drawing i.e. L-section of sewer), and then laying the sewer pipe between the two manholes.

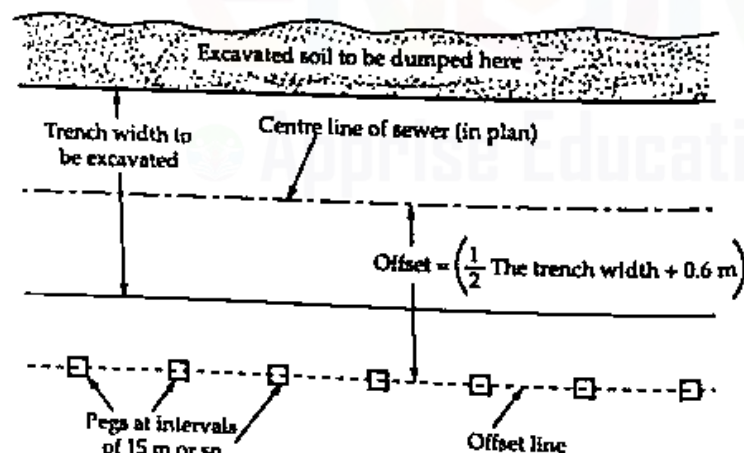


Fig. 5.8

The centre line of the sewer may be best marked by drawing an offset line on the ground, parallel to the centre line at a suitable fixed horizontal distance of

2 to 3 m away from it. This offset line, usually offsetted from the centre line of the sewer by a suitable distance of about half the trench width + 0.6 m or so, is therefore, marked on the ground by fixing pegs at intervals of 15 m or so, as shown in Fig. 5.8. This offset line should be drawn on that side of the trench which is not likely to be disturbed by the piling of the excavated earth, and can always be used for finding out the centre line of the sewer (in plan) simply by offsetting the fixed distance from this offset line.

Temporary bench marks along this offset line, at intervals of 200 to 300 m, should also be established by carrying the levels from a G.T.S. bench mark.

Excavating trenches. The excavation work is now started. The road pavements may have to be, first of all, removed. Softer pavements can be removed with pick axes using manual labour; whereas, the hard concrete pavements may be removed by using mechanical appliances like pneumatic drills or spades. The earth or rock from below the pavements is then excavated so as to dug the required trench. This excavation may be carried out either by pick axes using manual labour, or by using machines like power shovels, boom and bucket excavators, track excavators, continuous bucket excavators, etc. The width of excavation at any level will depend upon the width of the trench at the bottom, and the additions due to side slopes and due to timbering etc. The trench is excavated between two manholes, and the sewer is laid between them. After completing the laying of the sewer between two manholes, further excavations are carried out for laying the pipes between the next consecutive manholes. The process is continued from the outfall end of the sewer towards the uphill, till the entire sewer is laid out.

The excavated material is deposited on one side of the trench; and the other side being used for the offset line, and also for lowering the sewer pipes and other construction materials into the trench.

The width of the trench at the bottom is generally kept 15 cm more than the dia of the sewer pipe, subjected to a minimum value of about 60 to 75 cm for smaller dia pipes, so as to facilitate laying and jointing of pipe lengths. If smaller dia pipes, so as to facilitate laying and jointing of pipe lengths. If the sewer pipes are sewers are to be cast at site, no extra space is required. If the sewer pipes are not to be embedded in concrete (which is possible for smaller pipes laid in very firm grounds), then the bottom 1/2 portion of the trench is excavated in such a way that it conforms to the shape of the pipe itself. But generally, as pipes are laid in ordinary or softer grounds, they are embedded in concrete, as shown in

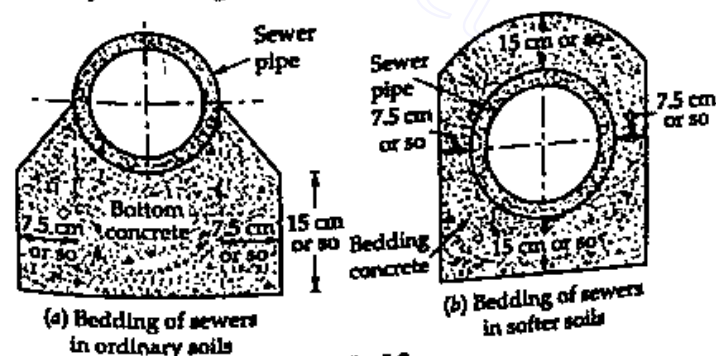


Fig. 5.9

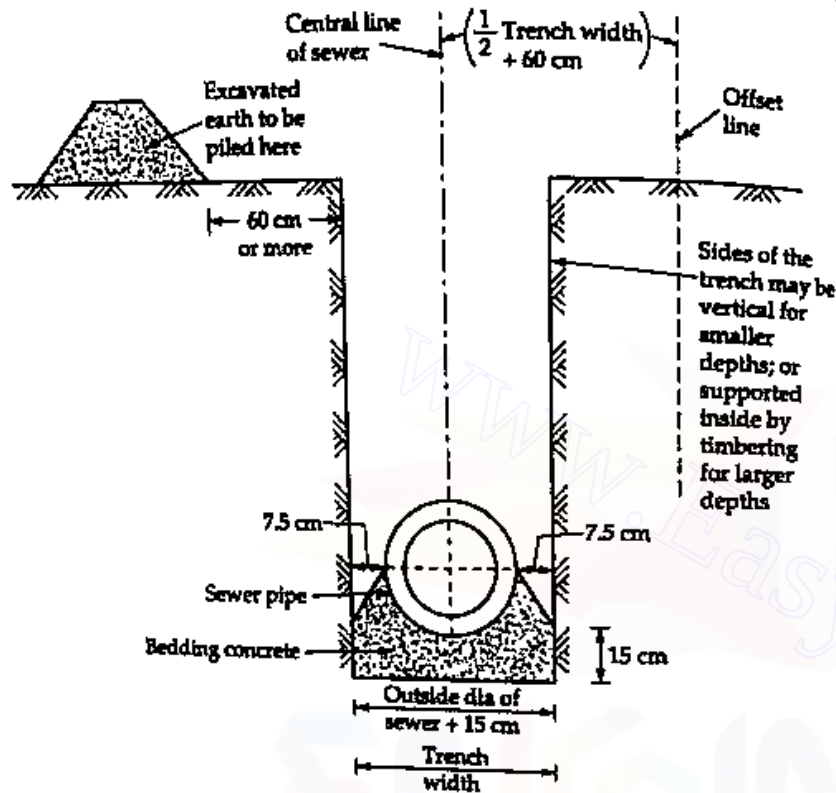


Fig. 5.10. Excavation of Trench for laying Sewers.

In order to accommodate the socket end or the collar of the pipe, and also to facilitate the caulking at the bottom of the pipe with hands, a recess, sufficient for the purpose, is also excavated in the bottom of the trench, at required intervals (equal to each pipe length).

Timbering or Sheet Piling Trenches. The trenches are excavated with vertical sides or with sloping sides, keeping in view the fact that the soil may cave in posing dangers to the labourers working in those trenches. When trenches with vertical sides are excavated in depths more than 2 m or so in ordinary soils, it is often necessary to support the soil by sheeting and bracing the trenches. The bracing will absorb the soil pressure, and prevent it from collapsing. The *sheeting* or the sheeting boards are the wooden planks which are placed in actual contact with the trench sides, either horizontally or vertically; whereas the *braces* are the cross wooden pieces extending from one side of the trench to the other side, and may also be called *struts*. The *Ranger* boards to the cross braces which transfer the load from the sheeting in Fig. 5.11. This entire assembly of sheeting boards, braces and rangers is called *timbering* or *shoring* of the trench.

The extent of timbering required depends upon the nature of the soil excavated, and also upon the depth of the trench.


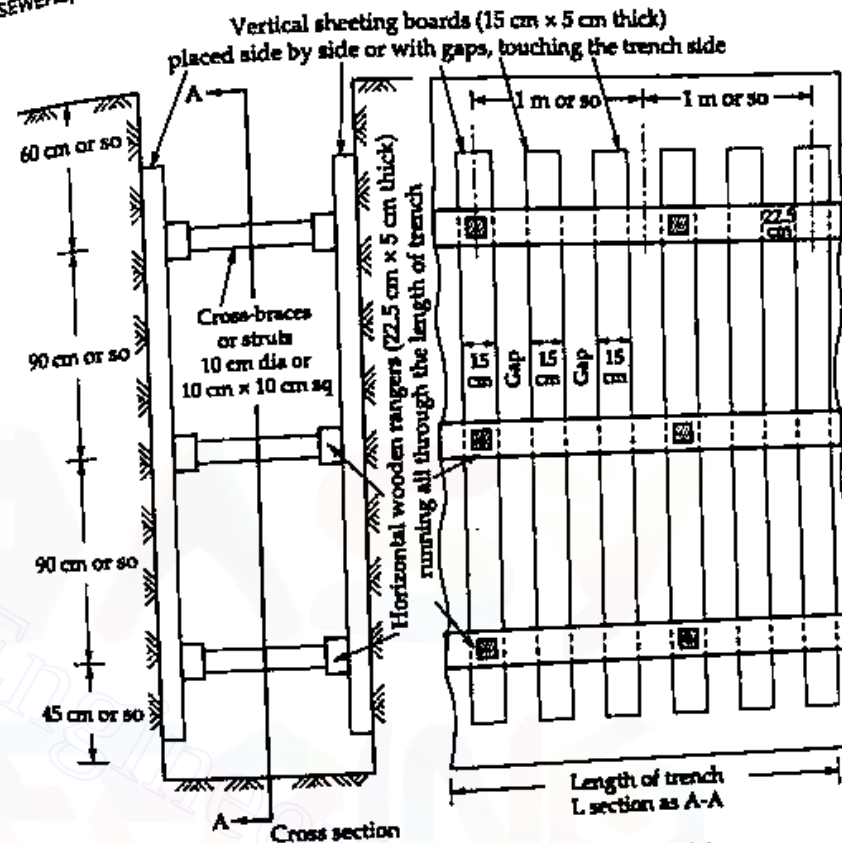


Fig. 5.11. Extent of Timbering required under Ordinary conditions.

Fig. 5.11. Extent of Timbering required under water.

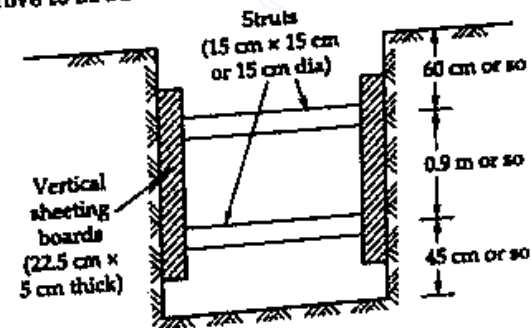

has been laid, and before the trench is refilled, although sometimes it may be left as it is, particularly in wet soils, where the removal of sheeting may permit the movement of the soil, endangering the sewer, or where, the arch of the sewer is supported against the sheeted sides of the trench. While removing the timbering, the braces and then the rangers are, first of all, loosened and removed. The process requires a lot of care and experience, as otherwise, the sides of the trench may cave-in, endangering the labourers. The sheeting planks are finally removed. If a hoisting engine is available, a loop of rope or a cable is thrown around one or more sheeting planks and they are pulled out. Steel piles have a hole in their upper ends, in which a hook can be placed, and thus pulled out through the cable attached to the hook. The timber sheeting planks can also be removed by hands in the absence of hoisting engine, with the help of a bar and a clamp, as shown in Fig. 5.13.

Dewatering of Trenches. While excavating a trench, the ground water may appear, if the water-table happens to be high or if the sewer happens to be laid very deep. This ground water will create problems in further excavations, if needed, and also in laying and jointing the pipes. Moreover, this ground water is likely to infiltrate into the sewers, thus considerably increasing the load on them. To avoid these troubles, ground water must be removed. The ground water may be removed through an open jointed drain constructed below the sewer trench (Refer Fig. 5.14), which discharges into an independent water course either by gravity or pumping.

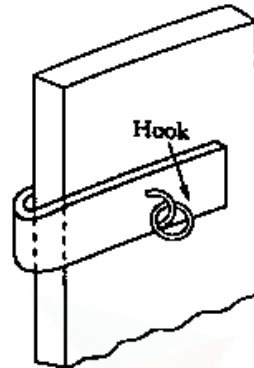
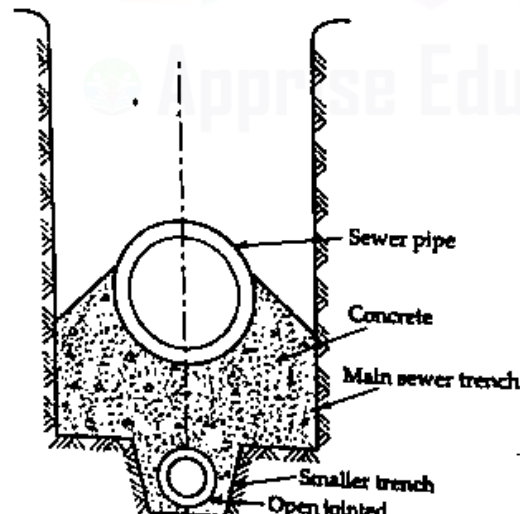


Fig. 5.13. Steel clamp for removing timber sheeting boards.

Sometimes, the ground water is removed by pumping out the water from the sump constructed in the trench. The pump in such a case will be operated throughout the 24 hours of the day, as the water keeps on flowing into the trench. This method can be used on smaller jobs and in non sandy soils.

The problem of dewatering in sandy soils becomes enormous, because if the water flow is large and the subsoil is sandy, a *quicksand** is caused, which tends to flow out into the trench, thus undermining the sides of the trench. For larger jobs in such sandy soils, the dewatering is done by means of *well point drainage*. In this method of dewatering, a number of well points are installed by water jetting method, alongside the trench, at suitable intervals of 1.5 m or so. All these well points are connected to a common *header pipe*, which, in turn, is connected to a pump, as shown in Fig. 5.15. The water is removed by pumping, till the water level goes below the bottom of the trench. Each well point should be equipped with a valve, so that it may be cut off from the header, and, thus, to have greater control on the outflow.

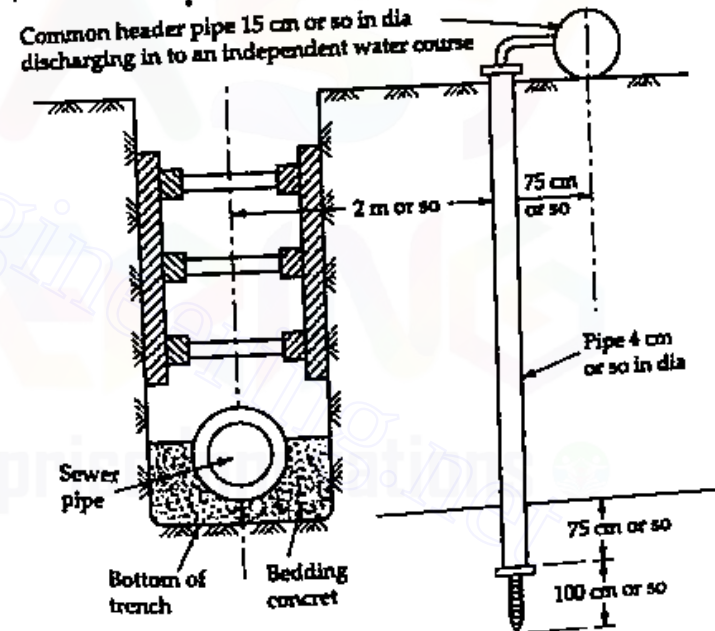


Fig. 5.15. Well point discharge for dewatering trenches.

Shaping the trench bottom to correct levels. The trench should be excavated up to a level equal to the bottom of the embedding concrete or upto the invert level of the sewer pipe if no embedding concrete is provided.

Hence, when the trench excavation reaches the final stages, the bottommost portion of the trench (30 cm or so) should be excavated carefully, so as not to dig more than the required. The designed invert levels at different

RDs and the designed slope between them, as per the longitudinal section of the sewer, should, therefore, be precisely transferred to the trench bottom. A simple and a practical method normally adopted for this purpose is described below with reference to Fig. 5.16.

Two vertical posts are first of all driven into the ground at the sides of the trench. A horizontal board spanning the entire width of the trench is now fixed on these posts by means of nails and is called sight rail. A vertical pencil line is marked on this wooden board with the help of a theodolite, so that this line falls on exact alignment of sewer. A small horizontally projecting needle is now fixed on this pencil line at a known reduced level, so that it lies above the invert level of the sewer at that point by a known height say h , and above the bottom of concrete by a height say h' .

Sight rails having such nails fixed on them are thus erected all along the trench at intervals of 10 m or so, and at all junctions and *change points*^{*}. A string is now stretched between the needles of consecutive sight rails. This will establish a line in space which will be exactly parallel to the sewer line, and will be at a known height h above the proposed sewer invert. This line may be conveniently used for measuring from it, the exact depth of excavation, the level of top of foundation concrete, and the line and level of the sewer pipe. Usually, a rod of adjustable length, called *boning rod* or a *Traveller* (adjusted to a length of h or h') is used to measure from the string line, so as to reach precisely upto the required invert of sewer, or the bottom of concrete.

Laying the sewer pipes. After the bedding concrete has been laid in the required alignment and levels, the sewer pipes are lowered down into the trench. Smaller pipe lengths of sizes less than 40 cm dia can be directly handled by masons and their helpers, and the larger pipe lengths can be lowered by passing ropes around each end of the pipe length. For very large pipes, sometimes, machines may have to be used for lowering down the pipes into the trench.

The sewer pipe lengths are usually laid from the lowest point with their *socket ends facing upstream*, as shown in Fig. 5.17. In this way, the spigot of each pipe can be easily inserted in the socket of the already laid pipe. After fitting the socket and spigot into each other, the proper jointing is done with lead caulking or cement mortar as required. During jointing, care must be taken to see that the pipe lengths remain in true level and alignment, and do not get

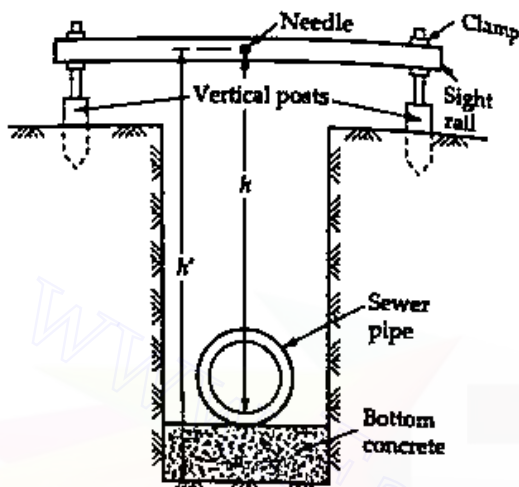


Fig. 5.16. Cross-section of Trench.

disturbed till the jointing material hardens. After the sewer has been laid in this way, it is tested for leakage and correct alignment, as described below :

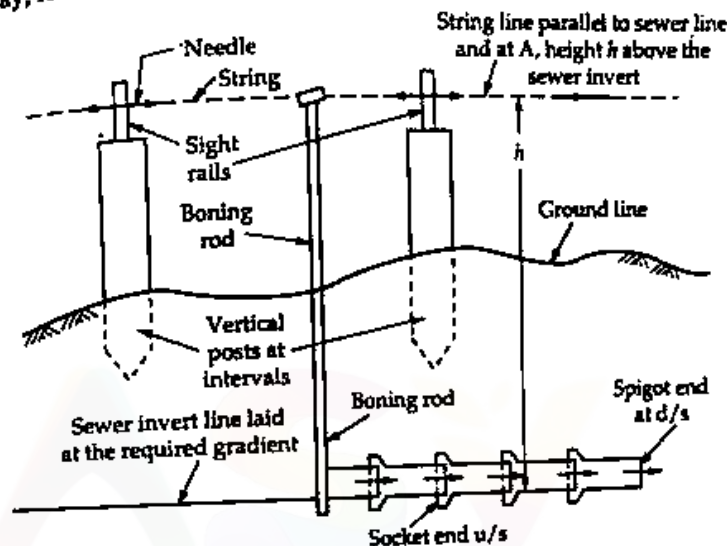


Fig. 5.17. Laying of sewer (L-section).

5.5.2. Testing of the Sewer Pipes. The sewers after being laid and jointed, are tested for *watertight joints*, and also for *correct straight alignment*, as described below :

(1) **Test for leakage, called Water test.** The sewers are tested, so as to ensure 'no leakage' through their joints after giving a sufficient time to these joints to set in. For this purpose, the sewer pipe sections are tested between manhole to manhole under a test pressure of about 1.5 m of water head.

In order to carry-out this test on a sewer line between two manholes, the lower end (i.e. downstream end) of the sewer is, first of all, plugged, as shown in Fig. 5.18. The water is now filled in the manhole at the upper end, and is allowed to flow through the sewer line. The depth of water in the manhole is maintained to the testing head of about 1.5 m. The sewer line is watched by moving along the trench, and the joints which leak or sweat, are repaired. The leaking pipes, if any, will also be replaced.

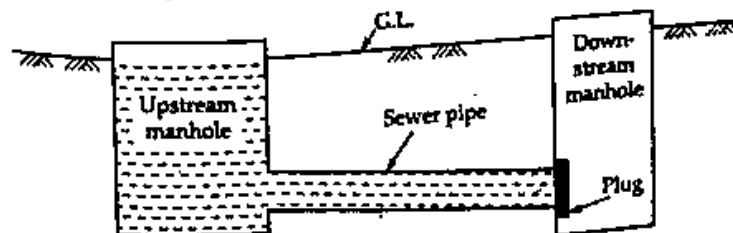


Fig. 5.18

(2) **Test for straightness of alignment and obstruction.** The straightness of the sewer pipe can be tested by placing a mirror at one end of the sewer line and a lamp at the other end. If the pipe line is straight, the full circle of light will be observed. However, if the pipe line is not straight, this would be apparent, and the mirror will also indicate any obstruction in the pipe barrel.

Any obstruction present in the pipe can also be tested by inserting at the upper end of the sewer, a smooth ball of diameter 13 mm less than the internal dia of the sewer pipe. In the absence of any obstruction, such as, yarn or mortar projecting through the joints, etc.; the ball shall roll down the invert of the sewer pipe and emerge at the lower end.

5.5.3. Back-filling of the Trenches. After the sewer line has been laid and tested, the trenches are back-filled. While back-filling the excavated earth in the trench, the earth should be laid equally on either side of the sewer, and the earth should be filled up in layers of about 15 cm thickness. Each layer should be properly watered, tamped and rammed. However, the earth filling above the crown of the sewer pipe should be carefully carried out by hand shoveling in layers and using selected soils (i.e. soft earth without any stone rubbish or old lumber). After a few months of exposure, when this top layer gets fully settled, the road pavements may be constructed. This will prevent their subsidence and cracking.

5M * SEWER APPURTENANCES

Sewer appurtenances are those structures which are constructed at suitable intervals along a sewerage system, and help in its efficient operation and maintenance. These devices include :

1. Manholes
2. Drop manholes
3. Lampholes
4. Clean-outs
5. Street inlets called Gullies
6. Catch basins
7. Flushing tanks
8. Grease and Oil traps
9. Inverted siphons
10. Storm regulators.

These devices are discussed in the following pages :

5.6. Manholes

5.6.1. Definition of Manholes. Manholes are masonry or R.C.C. chambers, constructed at suitable intervals along the sewer lines, for providing access into them.

The manholes, thus, help in joining sewer lengths, and also help in their inspection, cleaning and maintenance. If the manhole covers are perforated, they may also assist in ventilating the sewers, but will cause evolution of pungent gases.

* Excluded from

5.6.2. Location and Spacing of Manholes. The manholes are generally provided at regular intervals in a straight sewer line, and also at points of every bend, junction, change of gradient, or change of sewer dia. Unless there are practical difficulties, the sewer line between two manholes is laid straight with even gradient. Even when the sewer line runs straight, the manholes are provided at regular intervals. The spacing between the manholes, in such a case, however, depends mainly upon the size of the sewer line. The larger is the diameter of the sewer, the greater* will be the spacing between the manholes. The manhole spacings, generally adopted, on straight sewer reaches, are given below :

Table 5.3. Manhole spacings as per IS 1742—1960

Size of the Sewer	Recommended Spacing of Manholes on straight reaches of Sewer lines as per IS 1742—1960
Dia up to 0.3 m	45 m
Dia upto 0.6 m	75 m
Dia upto 0.9 m	90 m
Dia upto 1.2 m	120 m
Dia upto 1.5 m	250 m
Dia greater than 1.5 m	300 m

The minimum internal dimensions of manhole chambers, as per IS 1742—1960 are also given in Table 5.4.

Table 5.4. Minimum Internal Dimensions for Manhole Chambers as per IS 1742—1960

S. No.	Depth	Min. Size specified
1.	0.8 m or less	0.75 m × 0.75 m
2.	0.8 m and 2.1 m	1.2 m × 0.9 m
3.	> 2.1 m	Circular chambers with min. dia of 1.4 m ; or rectangular chambers with min. dimensions of 1.2 m × 0.9 m
	Min. wall thickness upto	
	(a) 1.5 m depth	20 cm
	(b) > 1.5 m depth	30 cm

5.6.3. Classification of Manholes. Depending upon their depth, the manholes may be classified as :

- (i) Shallow manholes
- (ii) Normal manholes
- (iii) Deep manholes.


* The spacing is greater because they can be entered more

A shallow manhole is about 0.7 to 0.9 m in depth, and is constructed at the start of a branch sewer or at places, which are not subjected to heavy traffic. Such a manhole is provided with a light cover at its top, and is called an inspection chamber.

A normal or medium manhole is about 1.5 m in depth and is constructed either square (1 m × 1 m) or rectangular (1.2 m × 1 m) in cross-section. Its section is not changed with depth, as is done in a deep manhole. Such a manhole is provided with a heavy cover at its top.

A deep manhole is having depth more than 1.5 m. The section of such a manhole is generally not kept the same. The size in the upper portion is reduced by providing an offset, as shown in Fig. 5.19. Steps, etc. are provided in such a manhole for facilitating descending into the manhole, and to enable the workers to go upto its bottom. Such a manhole is provided with a heavy cover at its top.

5.6.4. Component Parts of a Manhole. The typical details of a deep manhole are shown in Fig. 5.19. The various component parts of such a manhole are briefly discussed below :

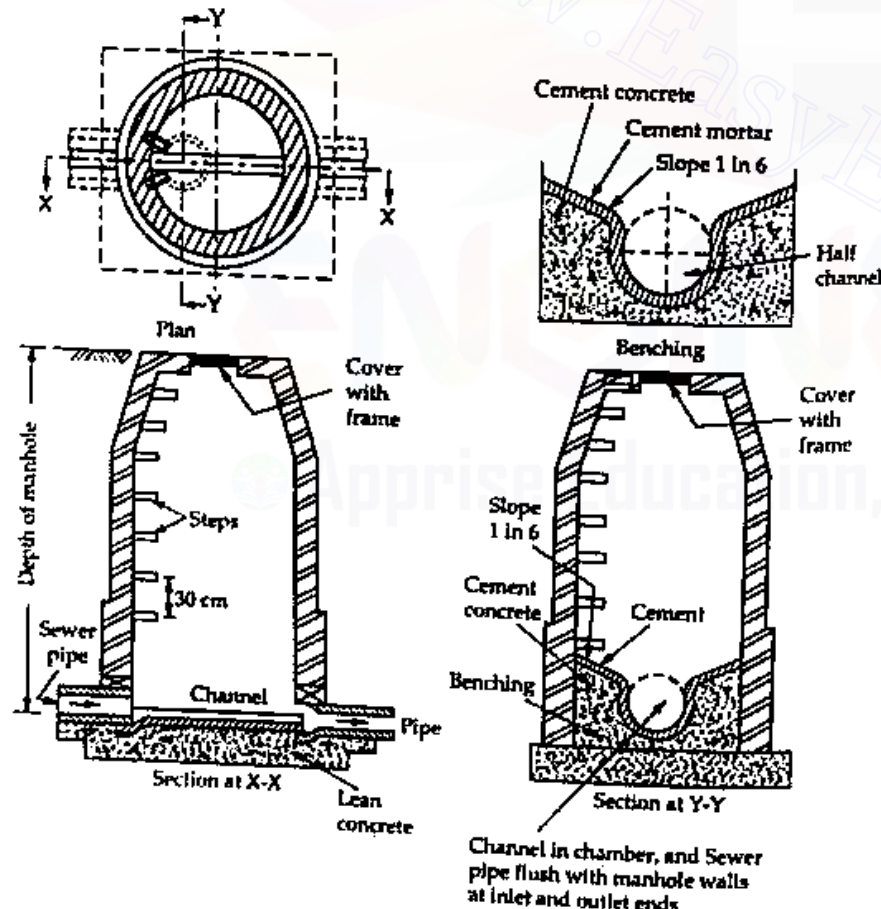

(i) **Access Shaft.** The upper portion of a deep manhole is called access shaft. Its minimum size for a rectangular manhole is about 0.75 × 0.6 m ; and for a circular manhole, the minimum diameter is about 0.6 to 0.75 m. Its depth depends upon the depth of the manhole and the height required for the working chamber.

This upper portion (i.e. access shaft) is expanded in the lower portion (i.e., working chamber) by providing an offset by providing R.C.C. slab, or by corbelling or by arching, etc.

(ii) **Working chamber.** As explained above, the lower portion of the manhole is known as the working chamber, as it provides a working space for inspecting and cleaning-operations. Its minimum size for a rectangular manhole is about 1.2 m × 0.9 m ; and for a circular manhole, the minimum diameter is about 1.2 m. The height of this chamber should generally be not less than 1.8 m or so.

(iii) **The Benching i.e. the Bottom or invert portion of manhole.** The bottom portion of the manhole is constructed in cement concrete. A semicircular, or a U-shaped channel is generally constructed, and the sides are made to slope towards it, as shown in section Y-Y of Fig. 5.19. The concreting is known as benching, and facilitates the entry of sewage into the main sewer.

(iv) **The side walls.** The side walls of the manhole are made of brick or stone masonry or R.C.C. The brick masonry walls are simple to construct, and are commonly adopted. The minimum thickness of the brick walls should be 22.5 cm (9"). The approximate thickness may, however, be computed by using the empirical thumb-rule :

$$t = 10 + 4d \quad \text{(For brick walls)} \quad \dots(5.7)$$

where t = Thickness of wall in cm.

d = Depth of excavation in metres.

The thickness of R.C.C. walls will, however, be much less as compared to that of brick walls, and can be designed by the usual structural methods of analysis. The R.C.C. walls, however, prove costlier and require skilled labour, and as such, adopted only under special circumstances.

(v) **Steps or Ladders.** As pointed out earlier, steps are generally provided for descending into the manhole. The steps are made of cast iron, and are placed staggered at a horizontal distance of about 20 cm and at a vertical centre to centre distance of about 30 cm. If the steps are made of double width, staggering is not required. The steps should be fully embedded in wall.

For deeper manholes, ladders are provided in place of steps. The ladder will give a high sense of security to the labourers descending into the manhole.

The steps or ladder may start from about 40 cm below the ground level, and may be continued upto about 30 cm above the bottom level of the manhole.

(vi) **Cover and Frame.** The manhole is provided with a cast iron cover and a cast iron frame at its top. The thickness of the frame is about 20 to 25 cm, and its base is about 10 cm wide. It is firmly embedded in the pavement, and the

The manhole cover may be rectangular or circular; the circular covers being very common. The size of a rectangular cover is about $0.6 \text{ m} \times 0.45 \text{ m}$, and that of a circular cover being 0.5 to 0.6 m in diameter. The top surface of the cover is roughened, so as to avoid slipping of the persons walking over it. The top surface of the cover also carries an arrow mark, and the cover is so placed as to place the direction of the arrow in the direction of the flow of sewage. The top level of the cover should flush with the road or the pavement level, so as not to cause any inconvenience to the traffic. Packing or a gasket may also sometimes be placed between the cover and the frame, so as to properly fit the cover in the frame. This is necessary when the cover is loose and is making noise.

The weight of the cover and the frame varies between 90 to 270 kg . The lighter cover is adopted to carry lighter traffic, and heavier one is adopted to carry heavier traffic.

5.7. Drop Manholes

When a branch sewer enters a manhole by more than 0.5 to 0.6 m above the main sewer, the sewage is generally not allowed to fall directly into the manhole, but is brought into it through a down pipe taken from the branch sewer to the bottom of the manhole. If the drop is only a few metres, the down pipe can be kept sloping (at 45° to the ground), and if the drop is more, a vertical pipe is found to be economical.

The manhole, in which a vertical pipe, such as shown in Fig. 5.20 is used, is called a *drop manhole*; whereas, the one using an inclined pipe is called a *ramp*.

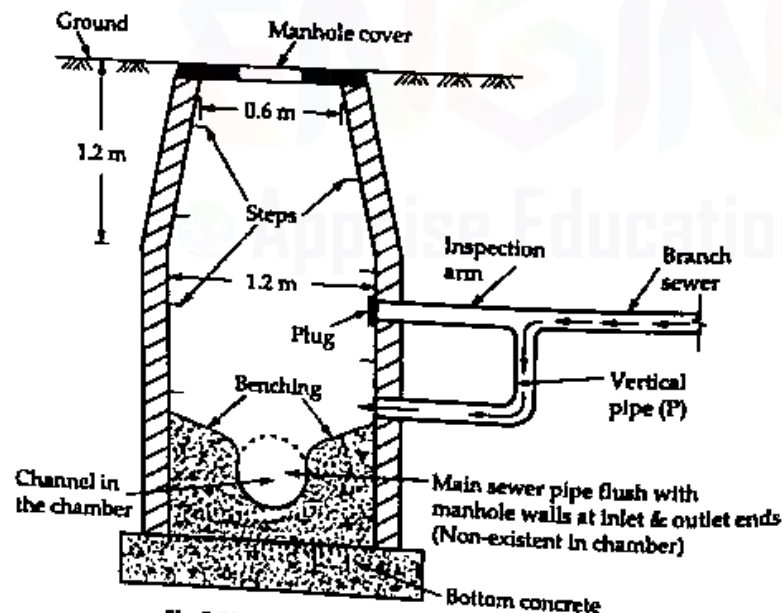


Fig. 5.20. A typical section of circular drop manhole.

The construction of a drop manhole in place of an ordinary manhole in case a high levelled branch sewer enters a low levelled main sewer, will thus serve the following purposes:

(i) the steep gradients which otherwise would have to be given to the branch sewer (so as to bring it low) will be avoided, thus avoiding a lot of earth work excavation;

(ii) the sewage trickling into the manhole from the directly placed branch sewer is likely to fall on persons working in the manhole. This is avoided in drop manholes.

The typical details of a drop manhole are shown in Fig. 5.20. The branch sewer is joined to the manhole through a vertical pipe (P). The sewage coming through the branch sewer dips in through the vertical pipe, and trickles over the main sewer channel, just above it, as shown.

A plug is provided at the point where branch sewer, if taken straight, intersects the wall of the manhole. The length of the branch sewer between the vertical pipe and the plug is known as *inspection arm*; and can be used for inspecting and cleaning the branch sewer after opening the plug.

5.8. Lamp Holes

Lamp holes are the small openings on sewers to permit the insertion of a lamp into the sewer. The lamp light is then viewed from the upstream as well as the downstream manholes. The obstructed light confirms the obstructions in the sewers.

The typical details of a lamphole are shown in Fig. 5.21. It consists of a vertical cast iron or stone ware pipe (20 to 30 cm in dia) extending from the ground and connected to the sewer line through a T-junction, as shown. This vertical pipe is surrounded by concrete so as to make it stable. A manhole cover is provided at the top of such a pipe, which should be capable of withstanding the traffic load.

The lampholes are especially adaptable when: (i) a bend in a sewer is necessary, (ii) construction of manholes is difficult, and (iii) the spacing of manholes is more than the usual. But however, lampholes are rarely used these days and have become obsolete.

Besides its principal use as an inspection device (by inserting a lamp in it), a lamphole can under some circumstances be used as a flushing device. And also, if its cover is kept perforated, it can be used for ventilation of sewers; in which case, a lamphole is known as a *fresh air inlet*.

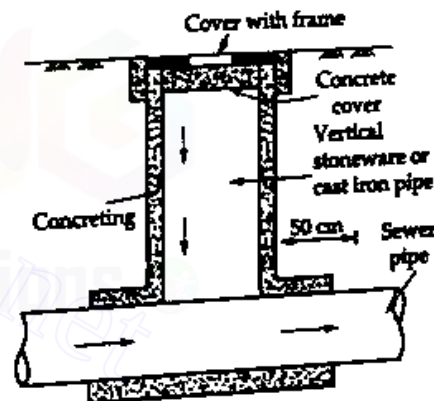


Fig. 5.21. Typical cross-section of a lamphole.

5.9. Clean-Outs

A clean-out is an inclined pipe extending from the ground and connected to the under-ground sewer, as shown in Fig. 5.22. A cleanout is used for cleaning sewer pipes.

[A clean-out is generally provided at the upper ends of lateral sewers in place of manholes.]

The functioning of a clean-out is very simple, and consists in removing the top cover and forcing water through the clean-out pipe to lateral sewers to remove obstacles in the sewer line. If obstructions are large enough, a flexible rod may be inserted through the clean-out pipe and pushed forward and backward to remove such obstacles.

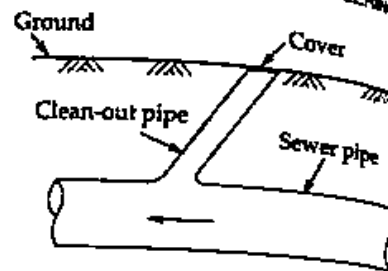


Fig. 5.22. Clean-out.

5.10. Street Inlets, called Gullies

Inlets are gullies or openings on the road surface at the lowest point for draining rain water from roads, and admitting it into the underground storm water sewers (drains) or combined sewers.

These inlets are, therefore, located along road sides on straight roads at an interval of 30 m to 60 m or so. At intersection points, they are usually located, as shown in Fig. 5.23. In this figure, the slope of the streets is shown by the arrows, and the inlets are placed in such a way that the cross walks will not be flooded. Placing of inlets at the corners not only requires the pedestrians to step across flooded gutters, but also subjects the inlets to considerable traffic wear and damage.

The inlets are connected to the nearby manholes by pipe lines (branches) as shown in Fig. 5.23.

A street inlet is a simple concrete box having gratings or openings in vertical or horizontal direction. The inlet having vertical openings is known as the *vertical inlet* or the *curb inlet*, and the inlet having horizontal openings is known as the *horizontal inlet*. The typical details of both these types of inlets are shown in Fig. 5.24 and 5.25.

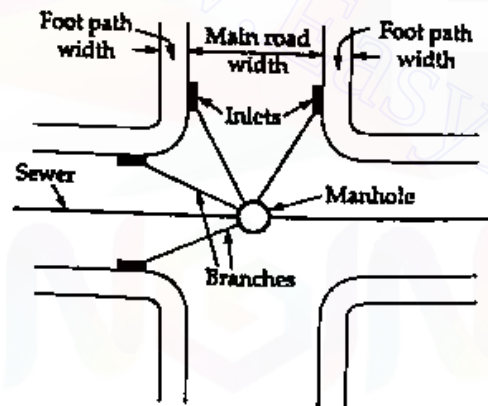


Fig. 5.23. Showing the locations of storm sewer inlets at street intersections. [Note. Branch lines enter at manholes. The arrows show the direction of storm runoff in the streets.]

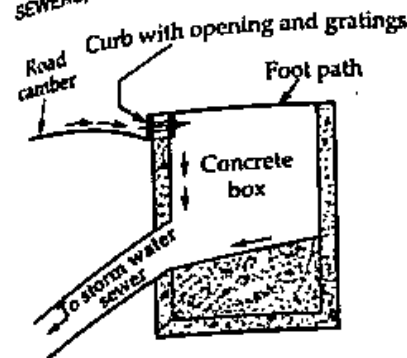


Fig. 5.24. Vertical inlet or curb inlet.

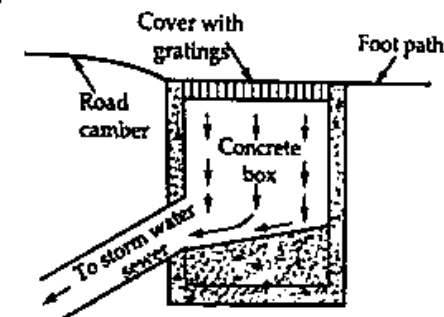


Fig. 5.25. Horizontal inlet.

5.11. Catch Basins or Catch Pits

Catch basins are nothing but street inlets provided with additional small settling basins, as shown in Fig. 5.26. Grit, sand, debris, etc., do settle in these basins, and their entry into the sewer is thus prevented. In addition to this, a hood, as shown, is also provided, which prevents the escape of foul gases, which may find its way through the sewer line.

Catch basins need periodical cleaning, as otherwise, the settled organic matter may decompose, producing foul odours, and may also become a breeding place for mosquitoes.

Catch basins were considered necessary in old combined sewerage systems, but, however, in modern days, they are not considered as very essential, because the modern well paved streets offer very less grit and debris with storm run off, and the same can be conveyed easily in storm water sewers (drains) laid at suitable gradients to provide self cleansing velocities. Moreover, the problem of eruption of foul gases from S.W. sewers (drains) is very less; and as such, there is not much necessity of providing such basins in the modern separate sewerage systems.

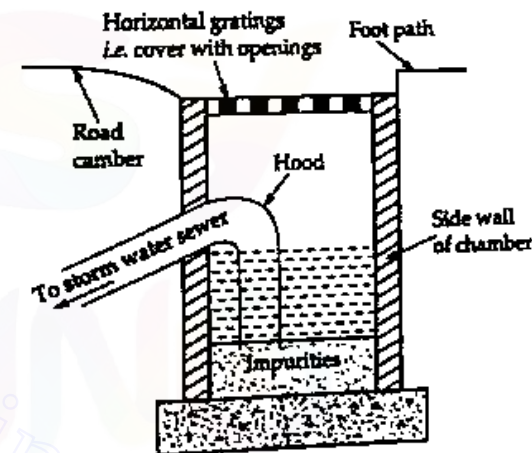


Fig. 5.26. Catch basins or catch pits.

5.12. Flushing Tanks

Wherever, there are any chances of blockage of sewer pipes, such as in the case of sewers laid on flat gradients not producing self cleansing velocities, or near the dead end points of sewers, flushing devices are installed. These devices are connected to the sewer for the purpose of

Flushing tanks should have a capacity to store enough water, which may prove to be sufficient for cleaning the sewer line. This capacity is generally kept equal to about one-tenth of the cubical contents of the sewer line served by it.

Two types of flushing operations are normally used ; viz.

- (i) Flushing operation using automatic flushing tank.
- (ii) Hand operated flushing operation.

The automatic type of flushing tanks are being used more commonly in modern days.

(i) **Automatic Flushing Tanks.** In this type of a flushing tank, the flushing operation is carried out automatically at regular intervals. The entry of water is so regulated as to fill the tank upto the discharge point in a period equal to the flushing interval. An overflow pipe is also provided to drain away water in case the tank fails to discharge, and thereby overflows. The typical details of such an automatic tank are shown in Fig. 5.27. With reference to this figure, the working operation of an automatic flushing tank is explained below :

Initially, when the tank is empty, the water level stands at A—B in the U-tube. As the water enters the tank through the inlet pipe, the water level in

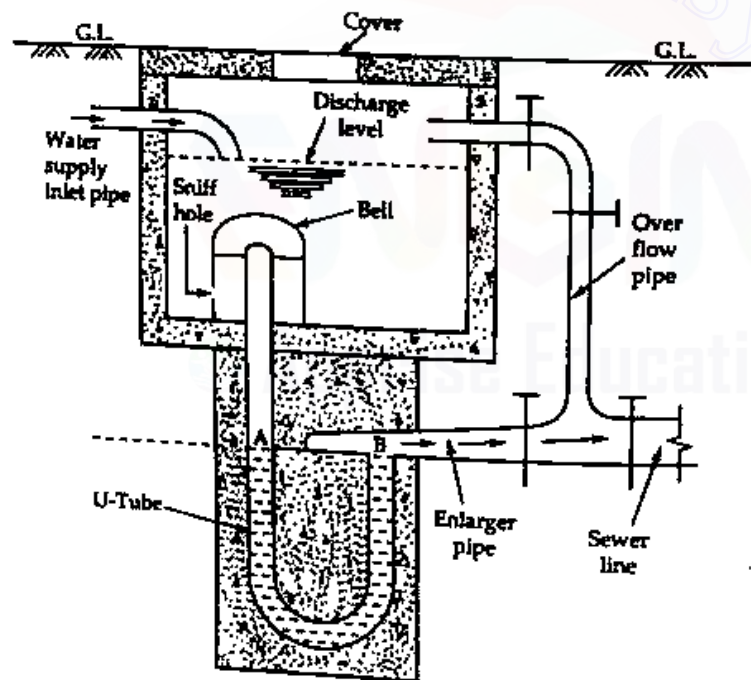


Fig. 5.27. Automatic flushing tank.

the tank slowly goes on rising. The water level in the U-tube remains to this level, i.e. A—B till the water level in the tank remains below the level of sniff

hole. But, however, as the water in the tank goes above the level of the sniff hole, the air is caught and compressed in the bell portion. This compressed air exerts pressure on the surface A, and hence the water level gets depressed in this long arm of U-tube. The water level goes on depressing more and more as the tank goes on filling more and more. Ultimately, a stage is reached when the water level in the longer arm of U-tube reaches the bend portion. When this happens, some compressed air gets released through the shorter arm of U-tube and a corresponding quantity of water enters the bell. It is so adjusted that the discharge line is just reached at this stage, and the head of water above the bell becomes greater than that in the shorter arm of U-tube. The compressed air is suddenly removed from the longer arm of U-tube, and a siphoning action starts, which releases the water from the tank into the sewer through the enlarger pipe. The siphonic action continues till the water in the tank falls up to the sniff hole. The air then enters the bell portion through the sniff hole and it breaks the siphonic action. The water level in the two arms of the U-tube again assumes the position A—B. The cycle goes on repeating, thus releasing water in the sewer at regular intervals.

(ii) **Hand Operated Flushing Operations.** The flushing and cleaning of sewers can be carried out at suitable intervals by means of manual labour. It may be carried out in the following ways :

(a) In one method, the outlet end of the manhole is closed by a sluice valve, etc. The sewage entering the manhole from the inlet end will then start collecting in the manhole. When sufficient quantity of sewage gets accumulated, the outlet end of the manhole is suddenly opened, and the sewage is thus allowed to enter the sewer, causing flushing operation.

(b) In another method, the inlet end as well as the outlet end of the manhole are closed by sluice valves, etc. The water from outside is now made to enter into the manhole. The flushing of sewer can then be carried out by opening the outlet and the inlet ends.

(c) In another method, one end of a hose pipe is connected to a nearby fire hydrant, and the other end may be placed in the manhole to obtain the flushing operation.

5.13. Grease and Oil Traps

Grease and oil traps are those trap chambers which are constructed in a sewerage system to remove oil and grease from the sewage before it enters into the sewer line. Such traps are located near the sources contributing grease and oil to the sewage. They are, therefore, generally located at places, such as, automobile repair work-shops, garages, kitchens of hotels, oil and grease industries, etc.

The removal of oil and grease from the sewage before it enters into the sewer pipe is considered necessary because of the following reasons :

- (i) The grease and oil, if allowed to enter the sewer, will stick to the sewer sides, and thus reducing the sewer capacity.
- (ii) The suspended matter which would have, otherwise, flown along with the sewage, also sticks to the sides of the sewer, due to sticky nature of oil and grease.

(iii) The presence of oil and grease in the sewage adds to the possibilities of explosions in the sewers.

(iv) The presence of oil and grease in sewage makes the sewage treatment difficult, as their presence adversely affects the biochemical reactions.

The principle on which oil and grease traps work is simple: the grease and oil being lighter in weight, float on the top surface of the sewage. Hence, if an outlet draws the sewage from lower level, grease and oil will get excluded. Based on this principle, the grease and oil trap chambers are designed in such a way that the outlet level is located near the bottom of the chamber, and the inlet level is kept near the top of the chamber, as shown in Fig. 5.28.


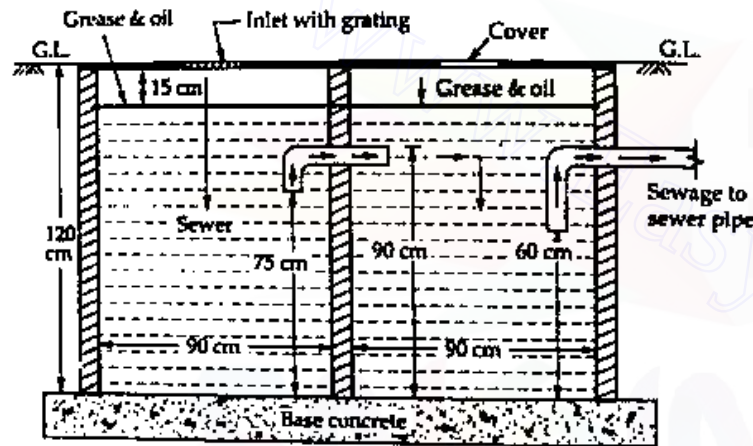


Fig. 5.28. Grease and Oil trap.




If sand is also desired to be excluded from the sewage, dead space should also be kept at the bottom of the chamber for sand to be deposited, as shown in Fig. 5.29.

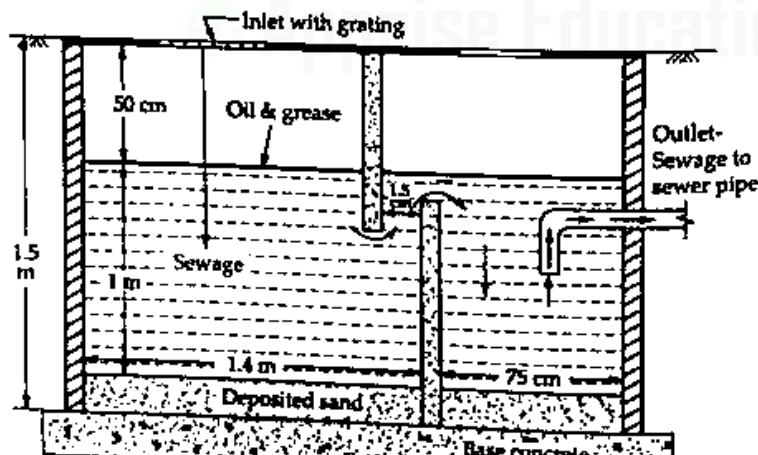

These traps should be cleaned periodically, as otherwise, they would not function properly, and sewage will not flow freely.

5.14. Inverted Siphons

Whenever a sewer pipe has to be dropped below the hydraulic gradient line for passing it beneath a valley, a road, a railway, a stream, a tidal estuary or any other depression in the earth's surface or where it passes beneath some other

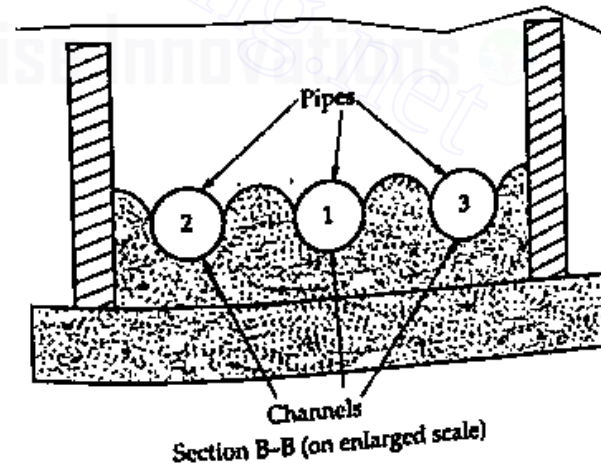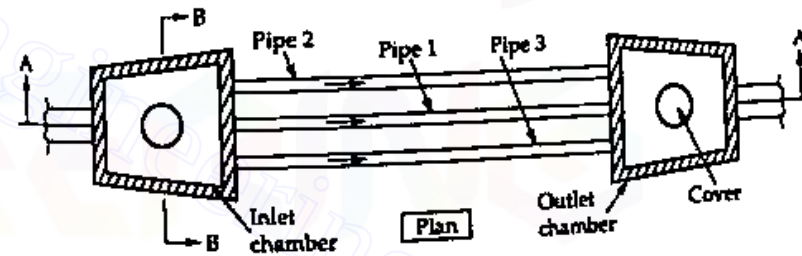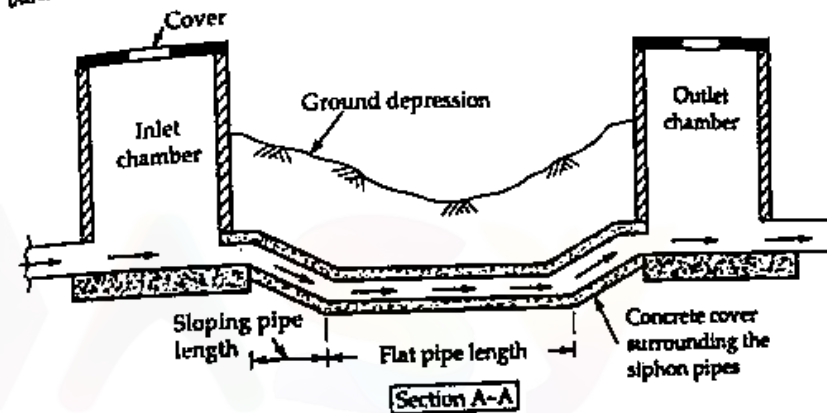

obstructions in its path, it will be known as an *inverted siphon** or a *depressed sewer* or a *sag pipe*. The sewage through such a pipe line will not flow under gravity, but will be flowing under pressure (as in the case of water pipe lines).

An inverted siphon is thus a sewer section constructed lower than the adjacent sewer sections, and it runs full under gravity with pressure greater than the atmosphere.

An inverted siphon is usually made of siphon tubes or pipes made of cast iron or concrete. These pipes are laid between the inlet and the outlet chambers (usually at the same elevation). The pipes between these ends are depressed for passing below obstructions like roads, railways, rivers or any other ground depressions. The inverted siphon laid between the inlet and the outlet chambers consists of two sloping pipe lengths joined by a flat pipe length, as shown in Fig. 5.30.

5.14.1. Design of an Inverted Siphon. The proper design of siphons is very important; as otherwise, they are likely to be clogged and become inefficient. The siphon should, therefore, be designed to develop a self cleansing velocity of about 0.9 m/sec even during minimum discharge. For this purpose, the inverted siphon is usually made of three pipe sections laid side by side in plan, as shown in Fig. 5.30. One of these three channels is meant for carrying minimum sewage flow, the other one for average sewage flow, and the third one for carrying maximum sewage flow.

The inlet chamber contains three channels one for each pipe section. When channel No. 1 overflows, the sewage enters channel No. 2 and pipe No. 2 starts functioning. Similarly, when channel No. 2 overflows, the sewage enters channel No. 3 and pipe No. 3 starts functioning.

The three barrels as provided above are usually provided for combined sewers. However, for sanitary sewers only two pipe sections may be provided—one for minimum dry weather flow and the other for maximum dry weather flow.

Besides designing the siphons in the manner explained above, the following additional points must be kept in mind while designing these inverted siphons.

(i) If the length of the siphon is more, hatch boxes at intervals of about 100 m should be provided for facility of rodding. There should be a vent pipe in the hatch box to prevent the formation of air-locks in the siphon.

(ii) The changes of direction of inverted siphons should be easy and gradual.

(iii) The design of siphons should be made on the basis of pipes running full under pressure**. It is, therefore, necessary to know the maximum available head (i.e. head difference between the water levels of the inlet and the outlet chambers). The greater is this available head, the better self cleansing of the siphon will occur. Also the losses including the loss of head due of friction, losses due to bends, and losses at the entry should be properly calculated, and accordingly adjusted in the design of siphon.

*The name inverted siphon has no other justification except that it being the mirrored image of a true siphon.

**There should be no vacuum anywhere in the siphon, although due to its full.

(iv) The inlet chamber should be provided with screens, so as to remove the coarser silt, debris, grit, etc. from the sewage before it enters the siphon pipes.

(v) The minimum diameter of the siphon pipe is taken as 15 to 20 cm.

(vi) Manholes should be provided at each end of the siphon to enable barrels to be cleaned.

(vii) It is advisable to provide a diversion for the siphon. Hence, when the siphon either gets choked, or overflows due to surcharge, the flow of sewage can be diverted.

5.14.2. Demerits of Siphons. The inverted siphons should be avoided as far as possible, because of its following demerits:

(i) It is most likely to get silted, as the down gradient is not continuous. The proper design with self cleansing velocity at different discharges is, therefore, of utmost importance. Moreover, when once it gets silted up, it becomes very difficult to clean it up. Sometimes, a chain extending from the inlet chamber to the outlet chamber is provided to stir and keep in suspension the deposited silt in the siphon.

(ii) If the inlet chamber is not properly designed, the floating matter present in the sewage will separate out, and will accumulate in this chamber, and thus seriously affecting the proper working of this chamber.

(iii) It is not possible to give side connections to the inverted siphons.

An example on the design of an inverted siphon is solved below:

Example 5.2. Design a three barrel siphon for carrying sewage across a river stream. The total length of the siphon measured along the centre line including slopes is about 80 m. The invert levels at the inlet and the outlet ends of the sewer are 202.38 m and 201.80 m respectively. The average flow of the sewage is 180 litres per second, and the maximum and the minimum flows are 250% and 40% of the average respectively. Assume the minor losses to be about 6 cm.

Solution. The average flow to be carried by the siphon

$$= 180 \text{ l/s} = 0.18 \text{ cumecs.}$$

The maximum flow to be carried by the siphon

$$= 250\% \text{ of } 0.18 \text{ cumecs.} = 2.5 \times 0.18 = 0.45 \text{ cumecs.}$$

The minimum flow to be carried by the siphon

$$= 40\% \text{ of } 0.18 \text{ cumecs} = 0.4 \times 0.18 = 0.072 \text{ cumecs.}$$

Max. available head = Difference in the invert levels at the inlet and the outlet

$$= 202.38 - 201.80 = 0.58 \text{ m.}$$

Flow at minimum discharge. Assuming a flow velocity of 0.9 m/sec at the minimum discharge, we have the dia of the pipe required.

$$Q = A \cdot V = \frac{\pi}{4} d^2 \cdot V$$

$$\text{or } 0.072 = \frac{\pi}{4} d^2 \times 0.9$$

$$\text{or } d = \sqrt{\frac{0.072 \times 4}{\pi \times 0.9}} = 0.319 \text{ m; Use 30 cm dia pipe.}$$

Actual velocity generated

$$= \frac{0.072}{\frac{\pi}{4} \times (0.30)^2} \text{ m/sec.} = 1.019 \text{ m/sec} > 0.9 \text{ m/sec.}$$

Hence, the generated velocity is safe and self cleansing.

The head loss in the siphon pipe can be calculated as follows :

Using Manning's formula

$$V = \frac{1}{n} \cdot R^{2/3} \cdot S^{1/2}$$

where S = The hydraulic gradient or loss per metre length of pipe.

$$R = \frac{d}{4} = \frac{0.3}{4} = 0.075 \text{ m}$$

$$V = 1.019 \text{ m/sec}$$

$$n = 0.013 \text{ (for old cast iron pipe).}$$

$$\therefore 1.019 = \frac{1}{0.013} (0.075)^{2/3} \cdot S^{1/2}$$

$$\text{or } \frac{1.019 \times 0.013}{(0.075)^{2/3}} = S^{1/2}$$

$$\text{or } S^{1/2} = \frac{1.019 \times 0.013}{0.178} = 0.074$$

$$\text{or } S = 0.0055.$$

$$\text{Head loss } H_f = S \times L = 0.0055 \times 80 = 0.443 \text{ m.}$$

$$\text{Total losses} = 0.443 + 0.06^* = 0.506 < 0.58 \text{ m}$$

Hence, we can easily adopt 30 cm dia pipe.

Flow at average discharge. At average discharge, the excess discharge passing through the second pipe

$$= 0.18 - 0.072 \text{ cumecs} = 0.108 \text{ cumecs.}$$

For 0.9 m/sec velocity, the diameter required

$$= \sqrt{\frac{0.108 \times 4}{\pi \times 0.9}} = 0.391 \text{ m. Let us use 38 cm dia pipe.}$$

Actual velocity through the second barrel

$$= \frac{0.108}{\frac{\pi}{4} \times (0.38)^2} \text{ m/sec} = 0.952 \text{ m/sec.}$$

Using Manning's formula, we have

$$0.952 = \frac{1}{0.013} \left(\frac{0.38}{4} \right)^{2/3} S^{1/2}$$

$$\text{or } S^{1/2} = \frac{0.952 \times 0.013}{(0.095)^{2/3}} = \frac{0.952 \times 0.013}{0.208} = 0.059$$

*Minor losses.

$$S = 0.0035.$$

or

$$H_f = 0.0035 \times 80 = 0.283.$$

$$\text{Total losses} = 0.283 + 0.06 = 0.343 \text{ m} < 0.58 \text{ m.}$$

So 38 cm dia pipe is all right.

Flow at maximum discharge. At maximum discharge, the excess discharge passing through the third pipe

$$= 0.45 - 0.18 = 0.27 \text{ cumecs.}$$

Assuming the velocity as 1.5 m/sec in this case, the required diameter

$$= \sqrt{\frac{0.27}{\pi \times 1.5}} = 0.48 \text{ m ; use 48 cm dia pipe.}$$

Actual velocity through this third barrel

$$= \frac{0.27}{\frac{\pi}{4} \times (0.48)^2} = 1.49 \text{ m/sec.}$$

Use Manning's formula

$$1.49 = \frac{1}{0.013} \left(\frac{0.48}{4} \right)^{2/3} S^{1/2}$$

$$\text{or } 1.49 = \frac{1}{0.013} \times (0.12)^{2/3} \cdot S^{1/2}$$

$$\text{or } S^{1/2} = \frac{1.49 \times 0.013}{0.243} = 0.079$$

$$\text{or } S = 0.0063.$$

$$\therefore H_f = 0.0063 \times 80 = 0.508.$$

$$\text{Total losses} = 0.508 + 0.06 = 0.568 \text{ m} < 0.58 \text{ m.}$$

$\therefore$ 48 cm dia pipe is O.K.

Hence use pipes of the following sizes :

$$\left. \begin{array}{l} \text{Pipe No. 1} = 30 \text{ cm dia} \\ \text{Pipe No. 2} = 38 \text{ cm dia} \\ \text{Pipe No. 3} = 48 \text{ cm dia} \end{array} \right\} \text{ Ans.}$$

5.15. Storm Water Regulators or Storm Relief Works

Storm water regulators are constructed in the combined sewerage systems, and permit the diversion of excess storm water into a nearby stream. Say for example, if the combined sewer has been designed for carrying a maximum combined discharge of three times the dry weather flow, the excess quantity of sewage after this limit is crossed, is diverted to some natural stream or river. This excess sewage will be mainly composed of storm water, and, therefore, it will not be foul in character.

Storm regulators may be of the following three types :

- (i) Leaping weir ;
- (ii) Overflow weir ; and
- (iii) Siphon spillway.

These three types of storm relief works are briefly discussed below :

5.15.1. Leaping Weir. The leaping weir arrangement consists of an opening in the invert of the storm drain (or combined sewer) through which the normal storm flow is diverted into the intercepting sewer, and the excess flow leaps over the combined sewer to flow into the nearby stream. This arrangement is shown in Fig. 5.31.

When the sewage discharge is small, the sewage will fall directly into the intercepting sewer through the opening. But, however, when the discharge exceeds a certain limit, the excess sewage leaps or jumps across the weir, and it is carried to the natural stream, as shown.

The leaping weir is a good regulator, but in heavy storms, most of the flow may leap over the combined sewer, and only small quantity may be left in the sewer, which may result in low velocity and thus creating silting problems.

5.15.2. Overflow Weir. In this type of arrangement, the excess sewage is allowed to overflow the combined sewer in the manhole, from where it enters into a channel carrying it into a storm water drain or directly into a stream, as shown in Fig. 5.32.

In order to prevent the escape of the floating matter from the combined sewer, adjustable plates, as shown in Fig. 5.32, may be used.

In another type of arrangement, openings at suitable height above the invert of the sewer are provided at suitable intervals along the length of the combined sewer, as shown Fig. 5.33. These openings are then joined to

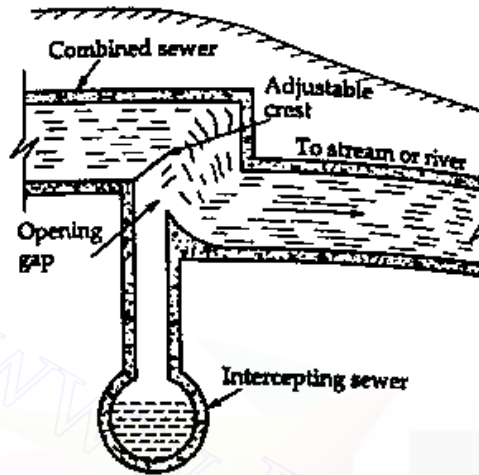


Fig. 5.31. Leaping weir.


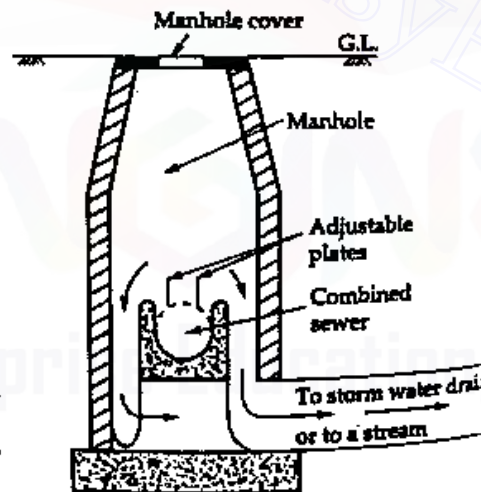


Fig. 5.32. Overflow weir.

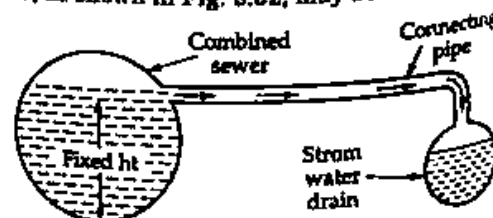

near the combined sewer. The excess sewage above this fixed height is thus diverted and conveyed to the natural stream or the river, through the storm water drain.

5.15.3. Siphon Spillway. The siphon spillway arrangement used for diverting excess sewage discharge from the combined sewer, is shown in Fig. 5.34. This method provides the most effective type of a storm relief work. It is an automatic process, and works on the principle of siphonic action. The siphonic action starts when the sewage in the combined sewer rises above a fixed level (i.e., the crest level of the siphon) and stops as soon as the sewage falls below this level.

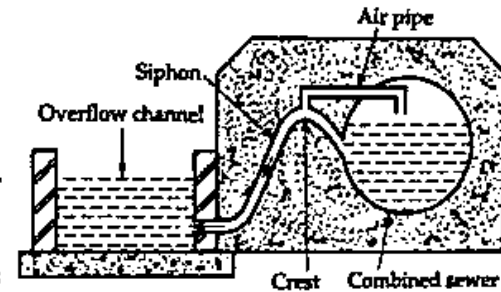


Fig. 5.34. Siphon spillway type of storm regulator.

The level of the crest of the siphon is generally kept at the level reached by the flow in the combined sewer during the period of maximum dry weather flow. The siphonic action does not start so long as the level of the sewage in the combined sewer remains lower than this crest level of the siphon. However, where the sewage level in the combined sewer goes beyond the crest level, the mouth of the air pipe gets sealed, and the air contained in the siphon is suddenly removed by the flow. The suction thus developed, starts the siphonic action, and the full flow through the siphon pipe into the storm water drain, immediately gets established. The siphonic action continues till the mouth of the air pipe remains submerged in the sewage flowing in the combined sewer. When the excess sewage is discharged, the level of sewage in the combined sewer falls down, and the mouth of the air pipe gets exposed. The air now enters the siphon pipe, thus breaking the siphonic action and the consequent overflow through the siphon pipe. The process goes on repeating.

As pointed out earlier, this method is automatic and is the most effective out of all other methods. In this arrangement, it is also possible to adopt greater heads which may increase the capacity of the arrangement. Moreover, this arrangement has no moving parts and thus requires the least maintenance. However, it is liable to be clogged due to narrow passages.

MAINTENANCE, CLEANING AND VENTILATION OF SEWERS

5.16. Maintenance of Sewers

Sewer maintenance generally involves their cleaning to keep them free from any clogging and to carry out the repairs to the damaged portions if any, so as to prolong their life and to ensure efficient functioning.

The proper maintenance of sewers is, therefore, absolutely necessary in order to make the sewerage system function efficiently. The sewer maintenance generally includes : their frequent inspection and supervision, measuring the rate of flow, cleaning and flushing, repairing the leaking joints

or any other damaged portions if any, protecting them against their misuse, preventing explosions, etc.

The most general complaint received in respect of their inefficient functioning is their *clogging*. The sewers get blocked or clogged due to silting and deposition of debris, grit and other floating matter present in the sewage. Although, the sewers are generally designed to flow with a self cleansing velocity, yet some silting always takes place. This silting is more pronounced at low discharges, and in sewers laid on flatter gradients. Greasy and oily matters from kitchens of hotels and restaurants or from such industries, further aid in clogging, because such matters stick to the interior of the sewer pipes and further catch the floating matter. Oil and grease traps should, therefore, be constructed at the sources of such oil and greasy sewage, and also along the sewer line.

Many a times, the general public also throw away their domestic wastes, and garbage, etc. into the manholes, which may find its way into the sewers, thus increasing the chances of their deposition and consequent blockage of the sewer pipes. To avoid this, public opinion should be raised against such habits, and *garbage dumping homes* be made at frequent places, which should regularly be cleaned by municipal sweepers.

In spite of all precautions taken to avoid their silting, sewers do silt, and, therefore, require frequent cleaning.

5.17. Cleaning of Sewers

Sewers should be periodically cleaned so as to avoid their complete clogging. A full record of the desilting operations should be kept. Proper watch and ward to avoid fake desilting operations is very very important in actual practical life.

For cleaning small sewers which can not be entered into by manual labour, flushing operations are essential. A flexible fire hose with about 2.5 cm or less sized nozzle can be inserted down, and the water discharged under pressure. The water pressure stiffens the rubber hose pipe, and together with the support from the sides of the sewer, make it possible to push the hose in and out in the sewer by 30 m or more, thus helping in flushing and cleaning of the sewer. Flushing can also be carried out by tipping larger volumes of water into the manholes, as explained earlier in article 5.12 under "Flushing Tanks".

Medium sized sewers are generally cleaned by using scraping instruments, which are dragged through the sewer. A commonly used device consists of a steel cylinder of 20 to 25 cm diameter and 60 to 75 cm long, and provided with a sharp cutting teeth on the open forward end. This type of a sewer cleaning rod called *cane rodding* is dragged in the sewer to and fro from the manholes. Sections of the roddings are screwed together in the manhole and pushed down the sewer until the obstruction is reached and removed.

Pills have been successfully used in U.S.A. for cleaning badly clogged sewers. *Pills* are nothing but a series of light floating wooden or rubber hollow balls. When such a ball is rolled into the sewer, it gets struck up at the place where heavy deposition has taken place. It, thus, constricts the passage thereby raising the velocity of flow, and thus scouring the obstruction.

manhole. Progressively, larger and larger sized pills are inserted from one manhole and taken out at the next manhole. The process is repeated till the last pill passed is just 2 to 3 cm less in dia than the dia of the sewer. In order to avoid the entangling and the loss of the pill, a string is generally tied to the pill by which it can be pulled out, if it gets stuck up in the blockage.

Large sized sewers which can be entered into by men are generally cleaned by manual labour. The sweepers do actually enter into the sewer pipes, and remove the deposited materials by hand shovels, etc., collect it up in buckets, and remove it outside the manhole. However, sufficient precautions and care must be taken while entering the sewers, as otherwise, sometimes, foul, poisonous and explosive gases may cause serious hazards to the workers entering the sewer pipes.

Precautions to be taken while entering sewers. Various poisonous and explosive gases which are generally found present in sewers are : hydrogen sulphide (H_2S), carbon dioxide (CO_2), and methane (CH_4) along with petrol vapours. These gases are largely produced when the sewage gets stale and septic, which more commonly happens in hotter climates. In addition to the production of these hazardous gases, oxygen gets consumed by the organic matter in their putrefaction, and thus resulting in the shortage of oxygen inside the sewer, and may consequently cause difficulty in breathing.

In order to avoid the large scale presence of these poisonous and hazardous gases inside the sewers, *ventilation of sewers* is generally adopted. Various methods are adopted for ventilating the sewers, and are discussed in the next article. In addition to the ventilation of sewers, the following precautions should also be taken while allowing the workers to enter the sewers :

(i) The very first precaution which should be taken before entering a sewer through a manhole is : to open the cover of the manhole in question as well as the covers of two manholes, one on the upstream and the other on the downstream ; at least half an hour in advance. This will help in obtaining some ventilation and exposure of the sewer to the atmospheric oxygen.

(ii) Now, tests should be carried out to detect the presence of any hazardous gases inside the sewer. The following tests may be carried out to detect their presence :

(a) H_2S gas may be detected by exposing a sheet of paper moistened with lead acetate for 5 minutes near the sewer entry. If the paper turns black, the presence of H_2S gas is indicated.

(b) Presence of CO_2 gas may be detected by lowering a miners safety lamp near the level of sewage in the manhole. If the flame extinguishes within 5 minutes, the presence of CO_2 gas is indicated.

(c) The presence of methane (CH_4) gas may be detected by lowering the miners safety lamp in the upper layers of the sewer ; methane, being lighter than air, is generally present in the upper layers of sewer. When the gas is present, it forms an explosive mixture with air, and the gauge cylinder of the safety lamp gets filled with the flame. The lamp should be withdrawn immediately. The formation of flames will indicate the presence of methane gas inside the sewer.

When any of these gases are found to be present, special breathing apparatus fitted with hose masks should be used by the workers entering the sewers. Moreover, only permissible safety lamps, rubber boots, and non-sparking tools should be used.

(iii) If the above hazardous gases are absent, a lighted lantern may be lowered down the manhole, so as to test the presence of oxygen. If it burns brilliantly, the sewer can be safe to enter.

(iv) In any case, the workers going down for inspection must be tied with ropes to their waists, and they may be held fast by the persons on top, so that they may be immediately pulled up in case of any risks. A responsible officer should preferably be present to direct the operations.

(v) Any smoking or carrying of naked lights inside the sewers are strictly prohibited.

(vi) Necessary warning signals should be erected.

5.18. Ventilation of Sewers

The sewers must be properly ventilated for the following reasons :

(i) The decomposition and putrefaction of sewage inside the sewers may result in the production of various *sewer gases*, such as, carbon dioxide, carbon monoxide, methane, hydrogen sulphide, ammonia, nitrogen, etc. These gases are disposed of into the atmosphere by exposing the sewage to the outside atmosphere by suitable methods of ventilation. These gases, if not removed, may cause serious problems, and prove hazardous to the workers entering the sewers. Methane gas being highly explosive, if not removed, may even blow off the manhole covers. Moreover, these gases have a tendency to interfere with the flow of sewage.


(ii) Another reason for ventilating sewers is to ensure a continuous flow of sewage inside the sewer. This is achieved by ventilation by keeping the surface of sewage in contact with free air and thus preventing the formation of air-locks in the sewage.

5.18.1. Methods of Ventilation. Following methods are adopted for ventilating the sewers :

(i) *Use of Ventilating Columns.* In order to achieve proper ventilation, ventilating columns or shafts are generally placed at intervals of 150 to 300 m along the sewer lines. They are also provided at the upper end of every branch sewer, and also at every change in the size of the sewers.

A typical vertical column used for ventilating the sewers is shown in Fig. 5.35.

It consists of a vertical shaft made by joining cast iron or steel

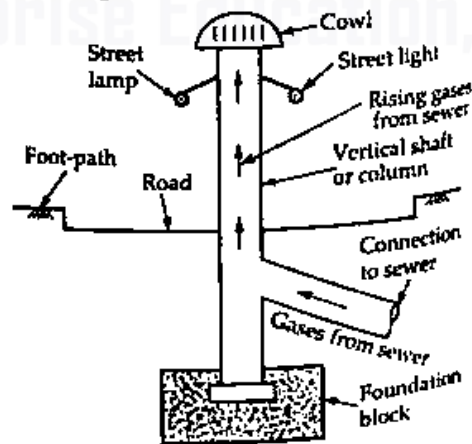

is provided at the bottom end of the shaft in order to keep it steady in a vertical position. A connection is provided in the lower under-ground portion to join it to the sewer as shown. A cowl is provided at the top end of the shaft in order to allow the escape of sewer gases into the atmosphere.

The ventilating columns are generally designed to serve two purposes together: one for ventilating the sewer, and the other for working as a support for street lamps, sign boards, etc. ; in such cases, the presence of ventilating columns will not be detected at a glance by the general public, and hence will not look unaesthetic to the eyes.

The diameter of the ventilating column is preferably kept equal to one third of the dia of the sewer served by it. The ventilating columns should be carried higher than the height of the nearby structures. Moreover, the joints between the pipe lengths used in building the higher vertical column must be made airtight ; as otherwise, sewer gases may leak at low heights, thus causing bad and unpleasant smells.

The top of ventilating columns should be covered with wire mesh or cowl, so as to prevent the birds from building their nests at the top, and to prevent any thing directly falling into the pipe.

The ventilating columns should be located in open places, so that they are exposed to sun-shine for the most part of the day. The heat of sunshine will help in causing proper circulation of air.

(ii) *Use of Ventilating Manhole Covers.* The manhole covers are sometimes provided with perforations, through which the sewer gets exposed to the atmosphere. This will no doubt help in achieving some ventilation, but will cause more nuisance, as the bad smells continue to erupt from them. Moreover, the openings of the manhole cover will permit admitting large quantities of storm water and other road dust, etc. This method is, therefore, of no practical utility, except that it may be adopted in very isolated places.

(iii) *Proper Design of Sewers.* The sewers should be properly designed as running half or two third full, thus reserving the top space for the sewer gases. Moreover, the velocity in the sewer should be self-cleansing so that sewage does not stay at one point for longer periods. The proper design of sewers ensures enough ventilation.

(iv) *Use of Mechanical Devices.* Forced draught is sometimes provided by exhaust fans to expel out the foul gases from the sewers. This method requires mechanical supervision and skill.

(v) *Unobstructed Outlets.* In the case of storm water drains or sewers, they can also act as partial ventilators.

(vi) *House vent and Soil pipes.* They may directly help in ventilating house drains and public sewers, particularly where interceptors are not provided on the sewers connecting houses and buildings.

(vii) Sometimes, immediate artificial ventilation is resorted to at site before entering a sewer, by blowing fresh air supply into the sewer through mechanical means such as air blowers having suitably protected and encased motors and fitted with canvas air pipe suspended into the sewer. The blower, should preferably be situated a little away from the opening, so that it may not act as a source of limitation for the inflammable gases in the sewers.

PROBLEMS

- Write a short note on the construction and maintenance of sewers, bringing out the salient features like materials used, shapes, and gradients adopted generally, testing, etc.
- A trench 5 ft. wide and 10 ft. deep has to be dug in loose soil for laying a sewer. Show the best method of shoring to be adopted, giving sketches with dimensions.
- What are the various types of storm water regulators used in a sewerage system. Explain briefly the working of each of these with sketches.
- Describe in order the various stages followed in the construction of sewers.
- (a) Draw a neat sketch of a drop man-hole and indicate where it is used.
(b) Describe the laying of a sewer line in a trench.
- Specify the qualities of a good material for constructing sewers. Judging from these requirements, discuss the suitability of :
(a) Bricks, (b) Cement concrete, and (c) Stone ware for sewers.
- State the types of sewers used in sewerage system, giving their sketches. Comment on their hydraulic properties.
- Write in detail about (a) laying, jointing and testing of sewers ; (b) considerations involved in determining the size of sewers.
- (a) What should be the characteristics of materials to be used for sewers.
(b) Draw a neat sketch of a sewage ventilator, and explain the necessity of sewage ventilation.
- Enumerate the various forces that act on a sewer pipe laid underground. Discuss in details, any two of these forces.
- Write short notes on any four of the following :
(i) Manholes ; (ii) Drop manholes ; (iii) Eccentric manholes ; (iv) Lampholes ;
(v) Street inlets and gullies ; (vi) Catch pits ; (vii) Flushing tanks ; (viii) Inverted syphons ; (ix) Storm water over-flows ; (x) Ventilation.
- Draw a junction manhole with a 22.5 cm diameter sewer at a depth of 4.5 m below ground level and 10 cm dia. sewer at a depth of 1.5 m below ground level. The outgoing outfall sewer is 60 cm in diameter. Draw plan and section through the manhole.
- (a) What are the common jointing materials used in making joints in sewers, and what should be the necessary qualities with them.
(b) Describe the method of making joints in the following types of sewers. Draw sketches to illustrate your answer : (i) Stoneware ; (ii) Concrete ; and (iii) C.I. Rising mains.
(c) What are 'poured joints' and 'filled joints' ? State the conditions under which one is suitable to the other.
- (a) Describe the method of construction of large size brick or R.C.C. sewers laid in deep trenches in city areas.
(b) What safety precautions would you employ to protect workmen and traffic during such constructions ?
(c) How will you go ahead with the construction, if the ground water table is high, or the trenches are to be excavated in running sand ?
- (a) Discuss the points you would keep in mind while deciding upon the programme for construction of sewers in a town ?
(b) Describe briefly the laying of pipe sewers by constructing trenches. How will you maintain correctly their gradient and alignment ?
(c) Explain how will you test the newly laid sewer lines before bringing them into


- State the different materials and shapes of which the sewers are made, and explain their merits and demerits. What points are considered in selecting a particular shape and material, and what materials and shape would you use in the following cases :
(i) Small size (upto 25 cm diameter) sanitary sewers ;
(ii) Medium size (25 to 60 cm diameter) sanitary sewers ;
(iii) Large size (> 75 cm diameter) sanitary sewers ; and
(iv) Storm sewers : (a) small size (b) large size.
Give reasons for your choice.
- (a) Discuss and describe the problems commonly encountered in the maintenance of sewers. Also describe the methods employed to tackle these problems.
(b) What precautions would you take in the design and construction of sewers so that their maintenance would be simple and easy.
- What are the different kinds of pipes used in sewerage works ? Compare their advantages and disadvantages. Find out the velocity and discharge of a stoneware pipe flowing full of 0.6 m diameter laid in a gradient of 1 : 300.
- Write a short note on sewer materials, bringing out the criteria for selection of sewer material.
- Write short notes on :
(a) Testing of new sewers ; and
(b) Types of sewers.
- (a) Clearly differentiate between manhole and drop manhole.
(b) Design an inverted siphon to cross a 50 m wide canal. The available head loss is 1.0 m and the average sewage flow is 0.5 m³/s. The maximum and minimum rates of flow may be taken as 300% and 50% of average flow, respectively.
- Describe briefly and explain the functions of the following :
(a) Street inlet ; (b) Leaping weir ; (c) Drop manhole ; and (d) Flushing manhole.
- Write short notes on any four of the following with neat sketches :
(i) Grease and oil trap ; (ii) Drop manhole ;
(iii) Inverted syphon ; (iv) Street inlet ;
(v) Lamp-hole ; (vi) Flushing tank ;
(vii) Catch pit ; and (viii) Clean out.

Pumps for Lifting Sewage

6.1. Necessity of Pumping Sewage

Sewage is required to be lifted up from a lower level to a higher level at various places in a sewerage system. Sewage may have to be lifted by pumps under the following circumstances :

- (i) The sewage from localised low lying pockets in a city has to be pumped, so as to throw it up into the city's sewer pipes flowing under gravity and running at higher elevations.
- (ii) When the area is flat, the laying of sewers at their designed gradients may involve deeper and deeper excavations in the forward direction of flow. In such circumstances, it may be advisable to lift the sewage at suitable intervals, and then to lay sewers at reasonable depth below the surface, as shown in Fig. 6.1 (b).

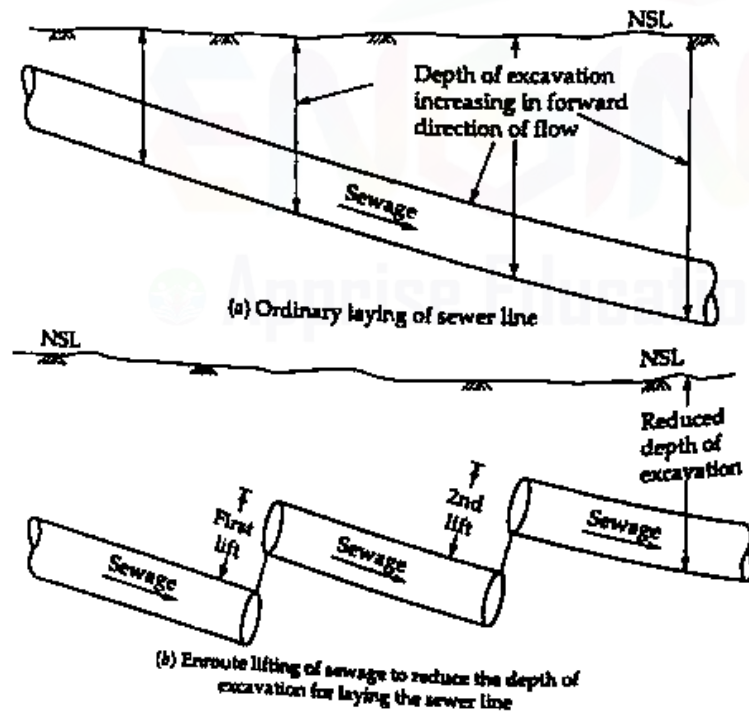

- (iii) For disposing of the sewage of the basements of large commercial buildings, sewage may have to be pumped, as the street sewer may be higher than the level of the basement floor.
- (iv) When the outfall sewer is lower than the level of the treatment plant, the sewage will have to be pumped up. Similarly, when the level of the treated sewage coming out from the treatment plant is lower than the level of the source of its disposal, it will have to be pumped before it can be disposed of.
- (v) In case, a sewer has to go across a high ridge, then instead of driving a tunnel through the ridge, it may prove more economical to pump the sewage into sewers laid across the slope of the ridge at reasonable depths.

6.2. Types of Pumps

Various types of pumps that are commonly used for *lifting water* have been thoroughly discussed in volume I—“Water Supply Engineering”, and may be referred to again. Before we discuss here the types of pumps used for *lifting sewage*, it may be mentioned that there are two essential differences between the requirements of a pumping station in a water supply system and a station in a sewerage system :

(1) Sewage cannot be stored except for short periods of time, and the flow is highly variable ; hence in a sewage pumping station provision must be made for pump capacities capable of handling peak flows as they arrive at the station. In order to ensure this, two or more pumps, and in some cases two sources of power, are needed. As against this, water can be stored easily for future use, and as such, water supply pumps may be sized on the basis of average daily or longer use ; the capacity depending on the amount of storage provided.

(2) Sewage contains coarse solids, both floating and suspended, and hence requires special pumps which should not get easily clogged. As against this, water does not contain significant amount of suspended matter, and as such, no specially designed pumps are required for pumping water.

In view of this, it can be easily stated that the most important characteristic of a sewage pump is its ability to operate without clogging. As an added precaution, the interior of the pump should be easily accessible for cleaning or removal of obstructions. On the other hand, since the head against which a sewage pump has to work is generally small, efficiency is of minor importance for most installations.

Various types of pumps that are commonly employed for pumping sewage are :

1. Centrifugal pumps :
2. Reciprocating pumps ; and
3. Pneumatic ejectors or Air pressure pumps.

These three types of pumps are discussed below :

6.2.1. Centrifugal Pumps. Centrifugal pumps are most widely used for lifting sewage, as they can be easily installed in pits and sumps, and can easily transport the suspended matter present in sewage without getting clogged so often.

The horizontal axis flow type of centrifugal pumps are generally used. They are provided with either open or closed three vane type impellers* (Refer Fig. 6.2). The clearance between the vanes is kept large enough so as to allow any solid matters entering the pump to pass out with the liquid sewage. This helps in preventing the clogging of pumps and damage to the rotor. Such pumps are, therefore, called *non-clog pumps*.

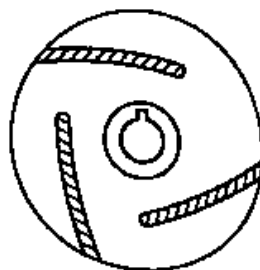


Fig. 6.2. Three vane type impeller of a non-clog centrifugal pump.

In another type of centrifugal pumps, the solid matters present in sewage are broken up (i.e. disintegrated) as they pass through the pump impeller. Such pumps are called *Disintegrating pumps*. They are used when sewage is to be directly disposed of into the sea through the outfall sewer.

Both the above types of centrifugal pumps, no doubt, work at low efficiency (of the order of 30 to 60 per cent), but their use avoids the necessity of installing pre-screens for grit removal before pumping. However, where sewage has, already been screened, ordinary centrifugal pumps of high efficiency may be used.

Other types of centrifugal pumps, such as, *volute*, *turbine* type, etc. may also sometimes be used depending upon the circumstances.

The centrifugal pumps may be installed either *submerged* beneath the sewage in the *wet well* or a *sump*, or the pumps may be installed in the *dry well* or pit, below the sewage level in the wet well. In the first case, the pump is set with a vertical shaft reaching to the motor placed above the sewage level in a dry space, the pump being always submerged, and therefore, called *Submersible pump*.

In the latter case, the pump is set in a dry well, and sucks its inlet supplies through the suction pipe from an adjacent wet well containing sewage, as shown in Fig. 6.3. The pump is installed in such a way that its suction pipe remains below the lowest waste water level in the adjacent well. This will eliminate the need for priming the pump. The exterior of the pump, in this case, is always dry, and as such, its inspection and maintenance is easy, and the chances of corrosion of the pump casing, shaft and bearings are much less as compared to that in the case of a submersible pump. This type of setting is, therefore, generally preferred.

6.2.2. Reciprocating Pumps. Reciprocating pumps are generally not used these days, because of their high initial cost, difficulty in maintenance, and greater wear and tear of their valves. However, they may sometimes be used for pumping difficult sludges and where large quantity is required to be pumped against low heads. They should, however, be amply protected by screens of 2 cm spacing.

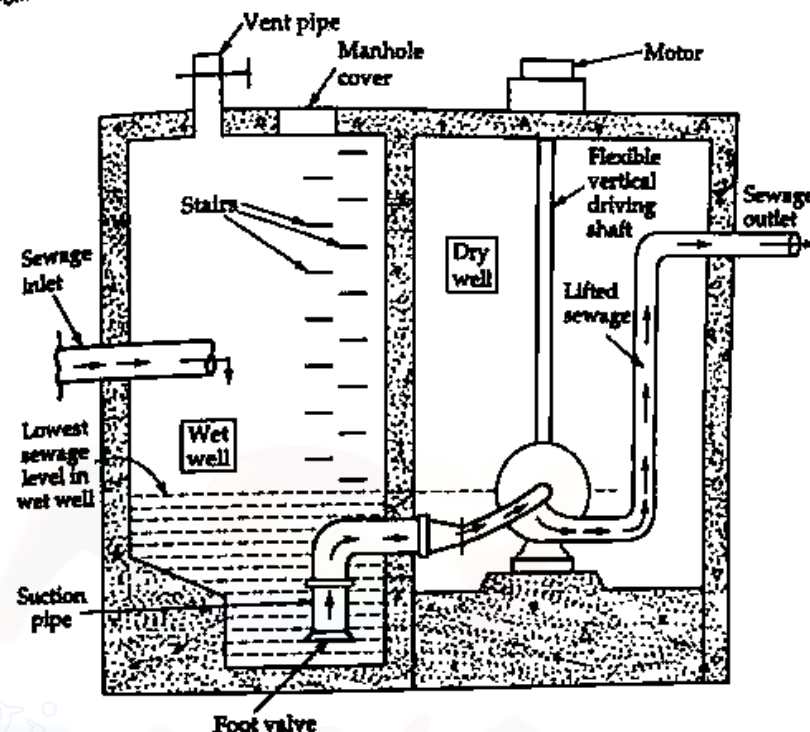


Fig. 6.3. Typical centrifugal pump installation for sewage pumping.

Reciprocating pumps used for pumping sewage are generally of two types :

- (i) *Ram type* ; and
- (ii) *Propeller type*.

In the *ram type* of a reciprocating pump, a piston or a plunger moves inside a closed cylinder. On the intake stroke, the liquid enters the cylinder through the intake suction valve. The delivery valve remains close during intake stroke. On the discharge stroke, the suction valve closes, and the liquid is forced into the delivery pipe through the delivery valve, which opens during the discharge stroke. A *diaphragm pump* is an example of this type.

In the *propeller type* of a reciprocating pump, a multiple blade screw rotor or a propeller moves vertically inside a pump casing, causing the sewage to lift up. The action is somewhat similar to that of a ship's propeller, as it draws water through the inlet guide vanes, and discharges through the outlet guide vanes. The *axial-flow screw pump* is an example of this type.

Diaphragm pump. A diaphragm pump is a ram type of reciprocating pump ; and is shown in Fig. 6.4. It is the most commonly used type of a reciprocating pump. In this pump, a piston or a plunger is attached to the centre of a circular rubber diaphragm, the outer edge of which is bolted to a flange on the pump. The up and down motion of the plunger is permitted by the flexibility of the diaphragm, thus increasing or decreasing the capacity of the pump casing. When the piston moves upward, the liquid flows into the pump through the

piston moves downward, the suction valve closes, and the liquid is forced through the delivery pipe by opening the delivery valve. The diaphragm pump is simple, durable and needs no priming. However, after some use, the rubber diaphragm may wear out and need replacement.

6.2.3. Pneumatic Ejectors.

Pneumatic ejectors sometimes called *Air ejectors* or *Air pressure pumps* are complete lift units in themselves, and are used for pumping smaller quantities of waste waters, such as for raising waste waters from the basements of buildings and thus discharging it into street sewers. Such a complete unit can be purchased readymade, fabricated for direct installation.

A pneumatic ejector, in general, consists of an air-tight tank into which the waste water flows by gravity, and out of which, the waste water is forced automatically whenever sufficient waste water has accumulated to raise a float, and thus opening the compressed air inlet valve.

A typical air-ejector called *Shone's air ejector* is shown in Fig. 6.5. It consists of a cast iron chamber with a spindle having an upper and a lower

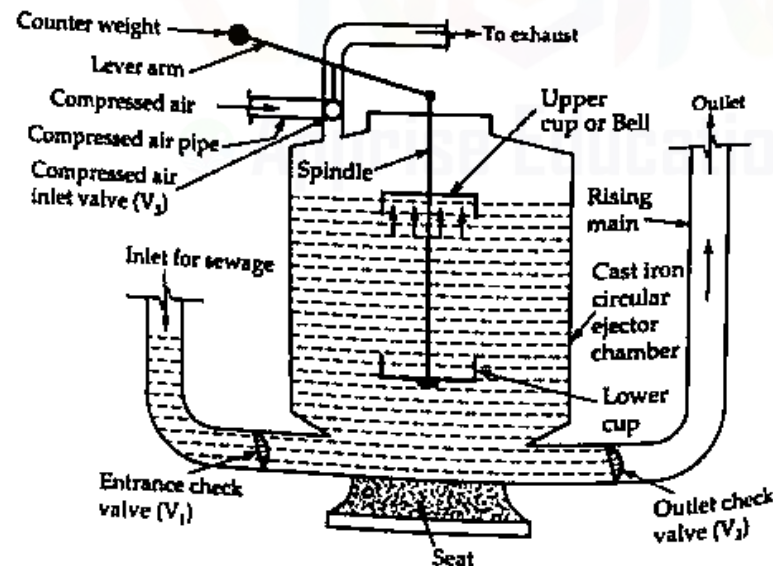


Fig. 6.4. Diaphragm pump a ram type of reciprocating pump.

cup, as shown. Two check valves V_1 and V_2 are provided at the entrance and exit points, respectively. The ejector chamber rests on a seat, as shown. A lever arrangement with a counter-weight is provided, so as to open the compressed air inlet valve (V_3). The compressed air is supplied through this valve at a pressure of about 1.5 kg/cm^2 .

The waste water enters the ejector chamber through the entrance valve (V_1), and slowly rises in the chamber. At this stage, the exit valve (V_2) and compressed air inlet valve (V_3) remain closed. As the waste water level in the chamber rises, the air from the chamber escapes through the exhaust. But when the waste water level in the chamber reaches the bottom of the upper cup, the air inside gets entrapped. The further rise of wastewater in the chamber makes this entrapped air to exert vertical pressure on the spindle. This causes the spindle to lift up, and through the lever arrangement, it results in the closing of the exhaust, and opening of the compressed air inlet valve (V_3).

The air under pressure entering the chamber from valve (V_3) forces the wastewater from inside the chamber to rise up in the outlet pipe by opening the exit valve (V_2). At this stage, the valves V_2 and V_3 remain open, but valve V_1 is closed. The wastewater is thus lifted up and discharged from the outlet, till the level of the wastewater falls below the bottom of the upper cup. At this stage, the entrapped air from the upper cup escapes, and the lever arrangement opens the exhaust and closes the compressed air inlet valve (V_3). The exit valve (V_2) also closes, and the entrance valve (V_1) opens to again admit the wastewater. The process goes on repeating.

Pneumatic ejectors are often used in pairs, so that when one is empty, the other is filled.

The advantages of air ejectors are :

- (i) There is no necessity of providing primary treatment arrangement for sewage, when air ejectors are employed.
- (ii) They are automatic complete units, and require least supervision.
- (iii) They are useful in conditions, where there are chances of small capacity centrifugal pumps getting clogged, if used.
- (iv) Such ejectors are not likely to be clogged anywhere.
- (v) Compared to the construction of a pumping station, they are found to be economical at places, where smaller quantities of wastewaters are required to be lifted.

The only disadvantage of air-ejectors is that they have very low efficiency, of the order of 15 per cent or so.

An example on the design of such an ejector is solved below :

Example 6.1. A low lying residential colony is having a population of 3000 persons. The colony gets a per capita supply of water at the rate of 140 litres per day. A separate sewerage system for the colony is installed. It is further required to lift the entire sewage of the colony by installing an air-ejector. Assuming the velocity in the main sewer as 0.9 m/sec , and velocity of compressed air in the ejector

Solution. Assuming that the entire water supplied appears as sewage, we have

The average sewage flow

$$= \frac{3000 \times 140}{1000 \times 24 \times 60 \times 60} \text{ cumecs.} = 0.00486 \text{ cumecs.}$$

Assuming the peak flow to be three times the average flow, we have

The peak sewage discharge to be lifted

$$= 3 \times 0.00486 = 0.0146 \text{ cumecs.}$$

Design of the Ejector Chamber

Assuming that the ejector fills after every ten minutes, we have

The required capacity of the ejector

$$= 0.0146 \times 10 \times 60 \text{ cu-m.} = 8.75 \text{ cu-m.}$$

Assuming the height of the ejector as 2 m, we have

The cross-sectional area of ejector chamber

$$= \frac{8.75}{2} \text{ m}^2 = 4.375 \text{ m}^2.$$

Diameter of the circular ejector chamber

$$= \sqrt{\frac{4.375 \times 4}{\pi}} = 2.36 \text{ m ; say 2.5 m.}$$

Hence use 2.5 m diameter ejector chamber with 2 m height. **Ans.**

Design of the Main Sewer

Since the peak flow of 0.0146 cumecs flows with a velocity of 0.9 m/sec, we have

The area of x-section of the main

$$= \frac{0.0146}{0.9} = 0.016 \text{ m}^2.$$

$\therefore$ Diameter of the main

$$= \sqrt{\frac{0.016 \times 4}{\pi}} = 0.143 \text{ m.}$$

$$= 14.3 \text{ cm ; Say 15 cm dia.}$$

Hence use 15 cm dia main. **Ans.**

Design of the Compressed Air-pipe

Velocity of the compressed air

$$= 5 \text{ m/sec.}$$

$\therefore$ Area of the pipe required

$$= \frac{0.0146}{5} = 0.0029 \text{ m}^2.$$

$\therefore$ Diameter of air pipe

$$= \sqrt{\frac{0.0029 \times 4}{\pi}} = 0.06 \text{ m} = 6 \text{ cm. } \mathbf{Ans.}$$

6.3. Pumping Stations

The building where pumps and other accessories are installed for lifting sewage is called a sewage pumping station. Such a building should be located at a carefully chosen site.

6.3.1. Proper Location. These pumping stations should preferably be located near a natural disposal unit, such as, a stream, a lake, or a river, etc., so that in case of break-down of pumping, the accumulated sewage can overflow into this natural source of disposal. But at the same time, the site should be such that it is not liable to get flooded either due to seepage from the adjoining river stream or due to high floods in that river stream.

6.3.2. Component Parts. A typical sewage pumping station is shown in Fig. 6.6. Such an installation has the following major components :

- (1) Grit channel ;
- (2) Coarse and fine screens ;
- (3) Well, called Sump well ;
- (4) Dry well or Pump room ;
- (5) Motor room ;
- (6) Rising mains ;
- (7) Emergency Exit Pipe (Not shown in Fig. 6.6) ; and
- (8) Other accessories like starters, valves, flow recorders, etc.

The construction and functioning of these different components is briefly discussed below :

(1) **Grit channel.** The sewage entering the pumping station generally contains a lot of indestructible solid matter, such as, grit, gravel, sand, etc., in addition to the solids in suspension like feces, papers, rags, etc. It is necessary to remove as much of this material as possible before pumping, so as to minimise the wear and tear of the pump impeller and of the rising main.

The solid matter is, therefore, first of all, removed before the sewage enters the pump.

In order to achieve this purpose, the sewage is first passed through grit channel (or grit chamber), where its velocity is considerably reduced to the order of 0.15 to 0.3 m/sec. Grit channel is a long basin with an enlarged cross-section above the invert line of the inlet sewer, as shown, which results in reducing the flow velocity. Due to the reduced velocity, the grit settles down, and is removed by an endless chain to which perforated buckets are fixed. The chain is operated by power, and the grit is dredged into a closed container, till it is removed and disposed of.

The grit channel should have a minimum capacity of one per cent of the daily dry weather flow. Moreover, there should be two similar units, each of which can be used, allowing the other to be cleaned. In small installations, grit is removed once a week ; whereas in larger installations, the removal may be a continuous daily process.

(2) **Screens.** After the sewage has been excluded from the solid grit matter by settling it down in the grit channel, it is passed through the screens ; which help in extracting other matter, such as, excess of rags, sticks, papers, etc.

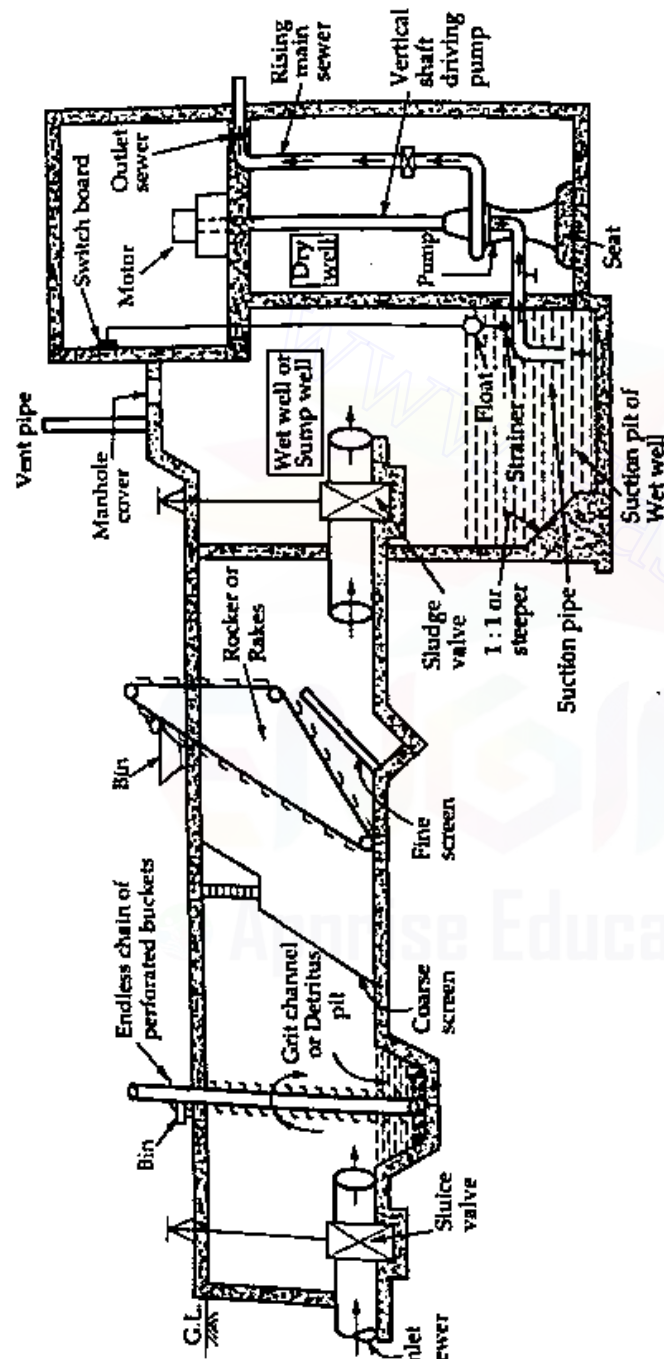


Fig. 6.6. A Typical Sewage Pumping Station.

However, use of screens may be avoided by using disintegrating pumps (as pointed out earlier).

Two types of screens are commonly used—*coarse screens* and *fine screens*. Normally, in large installations, both these types of screens are provided together. The sewage is first passed through coarse screens having clear openings of 5 to 10 cm, to intercept solids like scrubbing brushes, blocks of wood, etc. The sewage is then passed through fine screens having openings of 2.5 to 5 cm, to intercept all except very fine particles of sewage. The screens are cleaned mechanically by rakes having fingers attached to either end of an endless roller chain running over sprockets; the fingers entering at the bottom, drawing through it and moving vertically till they are over a collecting trough where they are tilted and screenings deposited in sealed bins for quick disposal.

(3) **Wet well or Sump well.** The purpose of providing a sump well is to form a suction pit from which the pump may draw sewage through the suction pipe. It also acts as an equalising basin to minimise the load fluctuations on the pump. A float connected to a switch is provided in this sump well in such a way that when the sewage rises above the float level, the switch gets pressed and pump automatically starts functioning, thus pumping sewage. This designed level of the sewage in the sump well is kept above the pump level, which avoids the necessity of priming of the pump.

The capacity of the sump well should be about 15 to 30 minutes of the peak flow. If its capacity is less, the operation of the power unit shall have to be done at frequent intervals, with the result that the operation becomes expensive (in case of electrically operated plant, it means increased cost of current, as the starting current is more than the full load current).

The floor of the bottom should slope 1 : 1 or steeper. This will help in pushing the sludge into the low point, where the inlet to the suction pipe is located. Sometimes, the capacity of the sump also includes the emptying of the rising main back to the sump at the time of the cleaning of the wells, unless a separate wash-out is provided. When two or more pumps are employed, the separate wash-out is provided. When two or more pumps are employed, the separate wash-out is provided. When two or more pumps are employed, the separate wash-out is provided. When two or more pumps are employed, the separate wash-out is provided.

(4) **Dry well or Pump well.** In this room, pumps are installed, and the end of their suction pipe is placed in the suction pit or the wet well. The general layout of a pump room should be carefully made, and it may include a repair workshop, office and store room, etc. Enough provision for its possible future extension may also be made.

The number and sizes of pumps required should be carefully worked out, and depends upon the quantity of sewage likely to enter into the station.

The provision for stand-by units should also be made.

(5) **Motor room.** This room is situated above the pump room, and accommodates the electric motor which drives the pumps. The other appurtenances like automatic starters, flow recorders, etc. are also installed in this room.

(6) **Rising mains.** The sewage, after being pumped, is taken to the high levelled gravity sewer through the rising mains. The rising main may be of cast iron or asbestos cement pressure pipes. To avoid siltation, the velocity of flow in the rising main should not be less than 0.75 m/sec at any time of flow; and to avoid excessive head loss, the maximum velocity of flow in the rising main is usually limited to 1.8 m/sec and never allowed to exceed 3 m/sec. The preferred value, however, is about 1.2 m/sec.

(7) **Emergency exit pipe.** An emergency exit pipe, connecting the sump well with a natural stream or river, is preferably provided at all major pumping stations. Hence, when the sump well overflows due to any reason, the excess sewage can be easily directed through this exit pipe.

(8) **Other accessories.** Besides the above major parts, various other accessories, such as, automatic starters, check valves, flow recorders, etc., are needed, and installed suitably in the pumping station.

An example on the design of various components of a pumping station has been solved below :

Example 6.2. Draw a typical sketch of a sewage pumping station for a town having a population of 50,000 supplied with a per capita water supply of 130 litres per day. The sewage from this town enters the pumping station through a low levelled sewer at R.L. 195.0 m and leaves through the high levelled sewer at R.L. 205.0 m. The town has been provided with a separate sewerage system, and there are no chances of storm water getting infiltrated into sewers. Calculate (a) the size of the rising main, (b) size of the sump well, and (c) B.H.P. of the pump motor required. Assume the length of the rising main as 100 m. Make other suitable assumptions, where needed.

Solution. For typical sketch of a sewage pumping station, please refer Fig. 6.6.

Now, we will calculate the required size of the rising main and the size of the pump, etc. as below :

Assuming that 80% of the water supplied appears as sewage, we have

The average quantity of sewage produced

$$= 0.8 \left[\frac{50,000 \times 130}{1000 \times 24 \times 60 \times 60} \right] = 0.06 \text{ cumecs.}$$

Assuming the maximum flow to be three times the average, we have

The peak sewage discharge

$$= 3 \times 0.06 = 0.18 \text{ cumecs.}$$

(a) **Design of the rising main.** Assuming the velocity of flow in the rising main as 1.2 m/sec, we have

The required cross-sectional area of the rising-main

$$= \frac{Q}{V} = \frac{0.18}{1.2} \text{ m}^2 = 0.15 \text{ m}^2$$

Required dia. of the rising main

$$= \sqrt{\frac{0.15 \times 4}{\pi}} = 0.437 \text{ m}$$

Hence, use 0.45 m dia, rising main.

∴ Velocity in the rising main

$$= \frac{0.18}{\frac{\pi}{4}(0.45)^2} = \frac{0.18}{0.159} = 1.13 \text{ m/sec. Ans.}$$

(b) **Design of the sump well.** The sump well can be designed for the peak flow of 15 minutes* (i.e., 15 minutes detention period with peak flow). The capacity of the rising main may also be added to the above quantity, in case the rising main has to be emptied into the sump at the time of cleaning the sump.

Peak flow rate = 0.18 m³/sec.

∴ Peak flow for 15 minutes

$$= 0.18 \times (15 \times 60) = 162 \text{ cu-m.}$$

Capacity or contents of the rising main

$$= \text{Area} \times \text{Length}$$

$$= \frac{\pi}{4} \times (0.45)^2 \times 100 = 15.9 \text{ cu-m ; Say 16 cu-m.}$$

∴ Total capacity of the sump well

$$= 162 + 16 = 178 \text{ cu-m.}$$

Let us now provide 3 number of sumps, any two taking the maximum flow and the third as stand-by unit, we have the capacity of each sump well

$$= \frac{178}{2} = 89 \text{ cu-m.}$$

Assuming the depth of the sump well as 3 m, we have the reqd. cross-sectional area of the sump well

$$= \frac{\text{Capacity}}{\text{Depth}} = \frac{89}{3} \text{ m}^2 = 29.66 \text{ m}^2.$$

∴ The reqd. dia. of the sump well

$$= \sqrt{\frac{29.66 \times 4}{\pi}} = 6.15 \text{ m. Ans.}$$

(c) **Design of pump.** Each pump has to lift 89 cu-m of waste water in 15 minutes.

∴ Capacity of each pump

$$= \frac{89}{15 \times 60} = 0.0988 \text{ cumecs.}$$

The lift of pump reqd.

$$\begin{aligned} &= \text{R.L. of high levelled sewer} \\ &\quad - \text{R.L. of low levelled sewer} \\ &\quad + \text{Depth of sump well} \\ &= 205.0 - 195.0 + 3 = 13 \text{ m.} \end{aligned}$$

The pump has to work against this lift as well as the losses. Let us now evaluate the losses :

* 15 minutes for the pumps to run continuously.

Frictional loss of head in the rising main

$$= \frac{4fV^2}{2gd}$$

$$= \frac{4 \times 0.01 \times 100 \times (1.13)^2}{2 \times 9.81 \times 0.45} = 0.58 \text{ m.}$$

[using $f = 0.01$]

Assuming the loss in bends, etc. = 0.3 m, we have

Total losses = 0.58 + 0.3 = 0.88 m.

∴ Total lift against which pumps have to work
= 13 + 0.88 = 13.88 m.

∴ H.P. of the pump

$$= \frac{w \cdot QH}{75} = \frac{1000 \times 0.0988 \times 13.88}{75} = 18.3 ; \text{ say } 19 \text{ H.P.}$$

Assuming the pump efficiency to be 60%, we have

The Brake Horse Power of the motor reqd.

$$= \frac{19}{0.6} = 31.67 ; \text{ say } 32 \text{ Ans.}$$

PROBLEMS

- When is pumping of sewage required in a sewerage system? How is it more difficult than the pumping of water in water supply schemes? Draw a sketch of a typical sewage pumping station, showing all the necessary arrangements to pump sewage of a town of one lakh population at the outfall sewer.
- Propose suitable pumping units to pump (1.0 M.L./day average flow) sewage from 2 km away and 10 m above the level of the outfall sewer level. Suggest suitable size of a rising main. Show on a neat sketch the details of the sewage pumping station.
- Under what circumstances is pumping of sewage necessary? What types of pumps would you recommend for pumping sewage and why?
- (a) Write short note on Shone's ejector.
(b) An ejector has to lift 2250 L/min, if the velocity of air in the air pipe is 6 m/sec and that of sewage in the sealed main is 0.75 m/sec, find the diameters of pipes and the capacity of the ejector, supposing, it is filled and emptied 10 times an hour.
[Ans. Air main = 10 cm; sewage main = 30 cm; Ejector = 13.5 m³]
- Comment on the following with respect to a sewage pumping station:
 - Capacity of the wet well;
 - Selection of the type and capacities of the pump;
 - Number of pumps and stand-by capacity of the pumping units;
 - Factors governing the size of the rising main; and
 - Overflow arrangement for the wet well.
- (a) Under what circumstances would you advise pumping of sewage? Name the various types of lifting devices used in discharging low level sewage to high level sewers, and describe their merits and demerits.
(b) Design and draw a dimensioned sketch of sump wall and pump house for a low level sewage pumping station dealing with sewage from 15,000 people with a sewage rate of 110 lphd. Invert of the low level sewer is 6 m below the ground.
- Differentiate between 'ejectors' and 'pumps'. Also describe with a sketch the working of a typical 'ejector'.
- (a) Draw a sketch of a typical sewage pumping station.
(b) Mention which type of pump is used in a sewage pumping station.

Quality and Characteristics of Sewage

7.1. Importance of Study

When untreated sewage is discharged into some river stream, floating solids present in the discharged sewage may be washed up on to the shore, near the point of disposal, where they decompose and create foul smells and bad odours. The large amount of organic matter present in the discharged sewage will also consume the dissolved oxygen from the river stream in getting oxidised, and may thus seriously decrease the dissolved oxygen of the river stream, causing fish kills and other undesirable effects. In addition to these effects, the discharged sewage will contaminate the river water with pathogenic* bacteria. Hence, even though municipal sewage is 99.9 per cent water, it requires treatment, if nuisance is to be avoided.

The extent and type of treatment required, however, depends upon the character and quality of both sewage and source of disposal. For example, a small community at the seaside might discharge its unaltered sewage directly into the ocean without any ill effects, but if this town/colony was located inland on a small stream, a high degree of treatment might be needed.

In the olden times, the waste waters from a community were not so much contaminated as they are today. The urbanisation, industrial growth, and the improved standards of living, have however, increased the strength and quantity of municipal sewage in recent years to a point where dilution alone can no longer be relied upon to prevent the undesirable effects of pollution. In many cases, more advanced treatment of wastewater is essential to prevent undue pollution. This is much more so, when the disposed sewage is likely to contain industrial wastewaters.

Hence, it is absolutely necessary to study the characteristics and behaviour of sewage, to ensure its safe disposal. This study will help us in determining the degree and type of treatment required to be given to a given sewage, and thus avoid the pollution of the source of its disposal.

Before we discuss the various physical, chemical and biological (bacteriological) characteristics of sewage, let us first discuss as to how the sewage gets decayed, and what happens to it with the passage of time.

7.2. Decay or Decomposition of Sewage

Most of the organic matter present in sewage is unstable and decomposes readily through chemical as well as biological actions.




*Pathogenic bacteria or pathogens are those harmful micro-organisms which cause serious water borne diseases like cholera, typhoid, infectious hepatitis, dysentery, etc. For details, please refer to chapter 8 of Vol. I—'Water Supply Engineering' by the same author.

biological methods, chemical treatment of sewage was, therefore, being adopted to remove the organic matter from the sewage. However, after the advent of biological degradation methods, this type of treatment has become our foremost choice.

The organic matter, which is decomposed by bacteria, under biological action, is called the biodegradable organic matter. Most of the organic matter present in sewage is biodegradable, and hence undergoes biological decomposition, which can be divided into two types, i.e.

- (i) *aerobic decomposition*, called *aerobic oxidation*; and
- (ii) *anaerobic decomposition*, called *putrefaction*.

7.2.1. Aerobic Decomposition. If air or oxygen is available freely to the wastewater in dissolved form, then the biodegradable organic matter will undergo *aerobic decomposition*, caused by *aerobic bacteria** as well as by *facultative bacteria—operating aerobically.*** These bacteria will then utilise the free oxygen as electron acceptor, thereby oxidising the organic matter to stable and unobjectionable end products. The stable end products like nitrates, carbon dioxide, sulphates are formed, respectively for the three forms of matter, i.e. nitrogenous, carbonaceous and sulphurous matter. Water, heat, and additional bacteria will also be produced in this biological oxidation, which can be represented by the following equations:



It may also be noted that during the decomposition of nitrogenous organic matter, the ammonia formed in the initial stages, may linger on till the end, depending upon the available oxygen, retention time, temperature, biological activity, etc., because the *facultative bacteria are incapable to break ammonia to nitrates*.

The intermediate products formed in the aerobic oxidation of the three types of organic matter are shown in their respective cycles, in Fig. 7.1 (a), (b) and (c). These cycles are known as *nitrogen cycle*, *carbon cycle*, and *sulphur cycle*, for *nitrogenous*, *carbonaceous*, and *sulphurous organic matter*, respectively.

*Aerobic bacteria are those which flourish in the presence of free dissolved oxygen in wastewater, and consume organic matter for their food, and thereby oxidising it to stable end products.

Anaerobic bacteria flourish in the absence of free dissolved oxygen, since they survive by utilising the bounded molecular oxygen in compounds like nitrates (NO_3^-) and sulphates (SO_4^{--}), etc., thereby reducing them to stable end products along with evolution of foul smelling gases like H_2S , CH_4 , etc.

**Facultative bacteria can operate either as aerobically or as anaerobically. Hence, they can survive and cause decomposition of organic matter in the presence or in the absence of free dissolved oxygen.

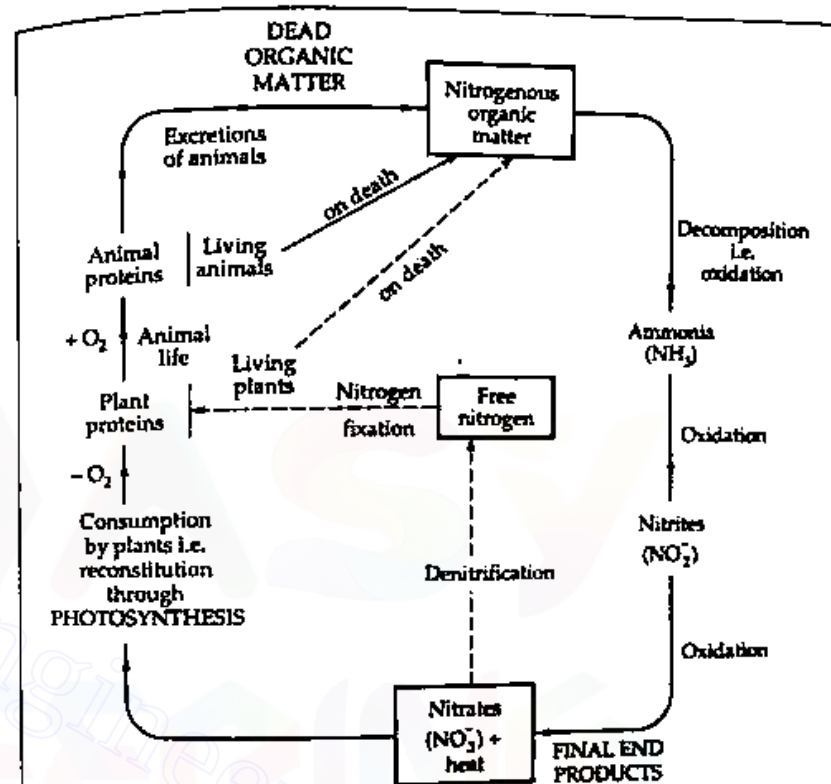


Fig. 7.1. (c) Nitrogen cycle under aerobic oxidation.

Steps in the Nitrogen cycle. Nitrogenous organic matter get oxidised to ammonia, then to nitrites, and finally to nitrates, which when consumed by plants, through photosynthesis, form plant proteins (plant life). The plant proteins, when consumed by animals, form animal proteins. The wastes produced by animals and their dead bodies, will again form nitrogenous organic matter, thus completing the nitrogen cycle.

There may be some short circuits of the cycle, as shown by dotted lines; say for example, the dead plants may also, on death, lead to formation of organic matter directly, without changing into animal proteins. Similarly, nitrates on denitrification may get converted into free nitrogen (and sometimes to ammonia), which may be converted into plant proteins, as it may be used by certain bacteria residing in the plant roots. This is called *nitrogen fixation*. Blue-green algae also causes nitrogen fixation.

7.2.2. Anaerobic Decomposition. If free dissolved oxygen is not available to the sewage, then anaerobic decomposition, called *putrefaction*, will occur. Anaerobic bacteria as well as facultative bacteria—operating anaerobically, will then flourish and convert the complex organic matter into simpler organic compounds of nitrogen, carbon, and sulphur. These anaerobic bacteria, in fact, survive by extracting and consuming the *bounded molecular oxygen* present in compounds like nitrates (NO_3^-) and sulphates (SO_4^{--}). Gases like ammonia, nitrogen, hydrogen sulphide, methane, etc. are also evolved in this process.

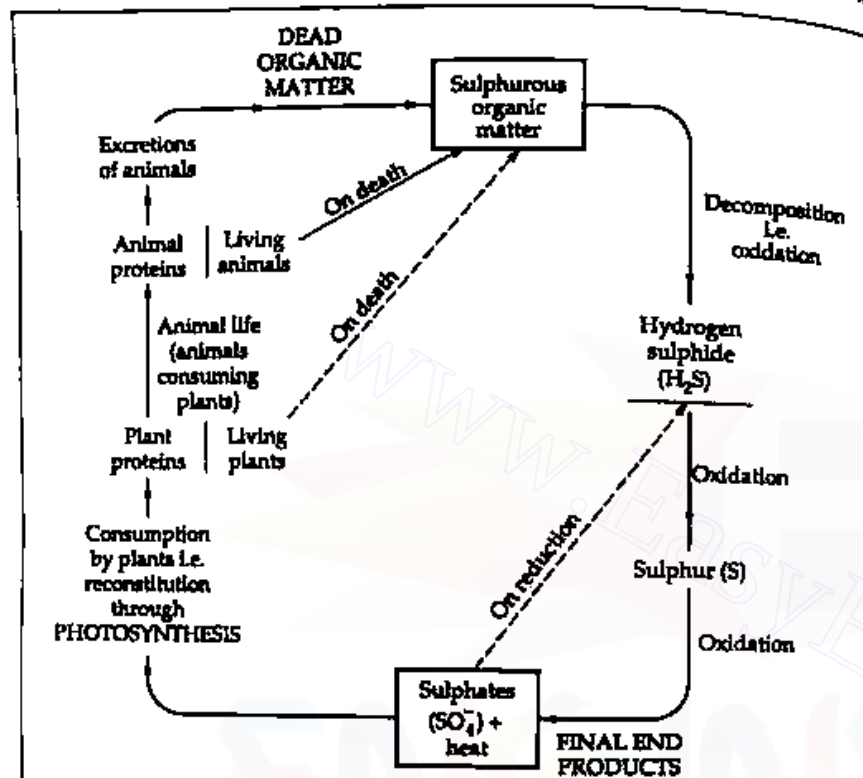


Fig. 7.1. (b) Sulphur cycle under aerobic oxidation.

Steps in the sulphur cycle. This cycle is similar to nitrogen cycle. The sulphurous organic matter, on oxidation, produces H_2S gas, which on further oxidation, changes to sulphur, and then finally to sulphates (SO_4^{2-}). Sulphates, when consumed by plants through photosynthesis, change into plant proteins; which when eaten by animals, change into animal proteins. The wastes produced by animals and their dead bodies will again form sulphurous organic matter, thus completing the sulphur cycle.

There may be short circuits in the cycle, as shown by the dotted lines: organic sulphurous matter may be directly formed by the death of the plants, without the formation of animal proteins.

Similarly, sulphates in the absence of oxygen, will be converted into H_2S , by the process of reduction.

these gases are evolved are shown in Fig. 7.2, which represents nitrogen, carbon and sulphur cycles together, for the above anaerobic decomposition. The final equations, representing this decomposition, are given below:



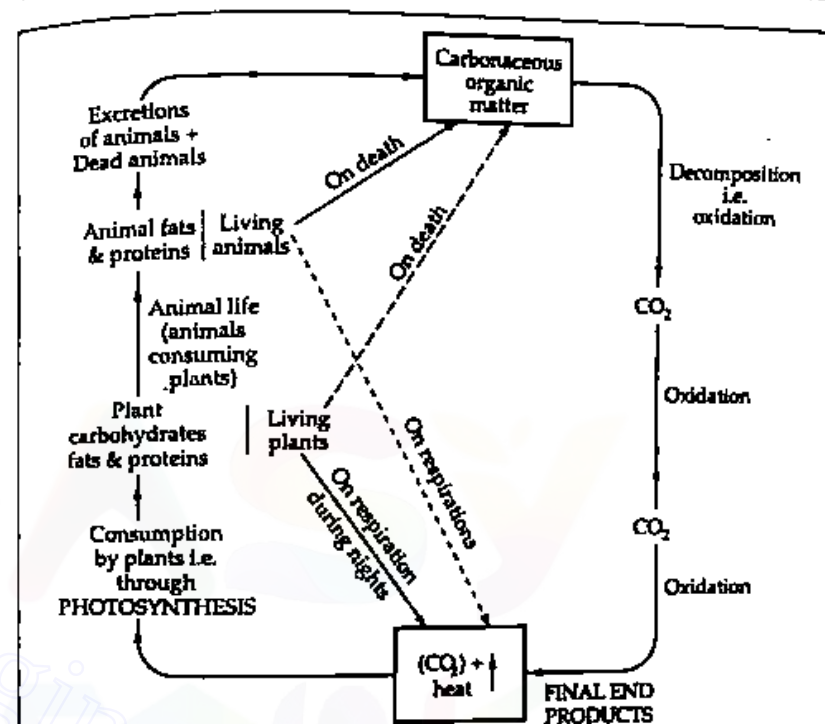


Fig. 7.1. (c) Carbon cycle under aerobic oxidation.


Steps in the carbon cycle. The carbonaceous organic matter, on oxidation, releases carbon dioxide, which is its final end product. This CO_2 , when used by plants through photosynthesis, gets converted into plant carbohydrates, fats and proteins (sugars); which when eaten by animals, change into animal fats and proteins. The wastes produced by animals and their dead bodies will again form carbonaceous organic matter, thus completing the carbon cycle.

There may be short circuits in the cycle, as shown by the dotted lines. Organic carbonaceous matter may be directly formed by the death of plants.

Similarly, the plant life gives off CO_2 at night, and the animal life gives off CO_2 during respiration. Both these respiration processes are shown by the dotted lines in the above figure.



The organic acids including alcohols produced in Eq. 7.4, are further converted into methane gas ($CH_4 \uparrow$), carbon dioxide gas ($CO_2 \uparrow$), etc., if methane-forming bacteria are also especially present in the sewage. This conversion is represented by the equation:



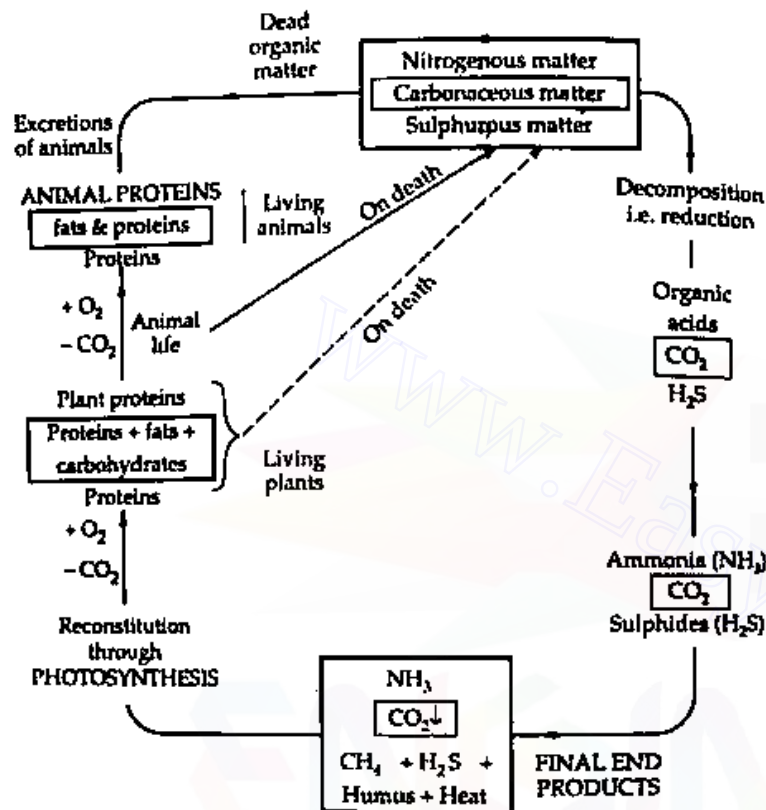


Fig. 7.2. Nitrogen, carbon and sulphur cycles, under anaerobic oxidation.

An understanding of these cycles will help us in determining the stage of decomposition of sewage by testing for the products of decay. For example, a well oxidised sewage will contain nitrates and sulphates, but very little ammonia and hydrogen sulphide. On the other hand, lesser oxidised sewage will contain nitrites and sulphur instead of nitrates and sulphates.

7.2.3. Basis of Biological Treatment. Numerous bacteria are found in waste waters of a community. So much so, that about 5 to 50 billion bacteria are generally present per litre of sewage. Out of these bacteria, only a small number are harmful to man, and are called **pathogens**. But a large number of bacteria present in sewage, called **non-pathogens**, are, however, important aids, in the process of decomposition, and are thus useful to us in sewage treatment. The fundamental basis of our treatment given to sewage, therefore, is to provide an environment favourable to the action of the aerobic and anaerobic bacteria, that stabilise the organic matter present in sewage either through aerobic or anaerobic decomposition.

Treatment units which work on oxidation alone (i.e. aerobic decomposition) are : *septic tanks, Imhoff tanks, sludge digestion tanks, and anaerobic lagoons.*

Treatment units which work on putrefaction alone (i.e., anaerobic decomposition) are : *septic tanks, Imhoff tanks, sludge digestion tanks, and anaerobic lagoons.*

CHARACTERISTICS OF SEWAGE

The quality of sewage can be checked and analysed by studying and testing its physical, chemical and bacteriological (biological) characteristics, as explained below :

* 7.3. Physical Characteristics of Sewage and Their Testing

Physical examination of sewage is carried out in order to determine its physical characteristics. This includes : tests for determining (i) turbidity ; (ii) colour ; (iii) odour ; and (iv) temperature. These tests are summarised below :

(i) **Turbidity.** Sewage is normally turbid, resembling dirty dish water or wastewater from baths having other floating matter like fecal matter, pieces of paper, cigarette-ends, match-sticks, greases, vegetable debris, fruit skins, soaps, etc., etc. The turbidity increases as sewage becomes stronger.

The degree of turbidity can be measured and tested by turbidity rods or by **turbidimeters**, as is done for testing raw water supplies. This has been thoroughly discussed in vol. I, chapter 8, of "Water Supply Engineering".

(ii) **Colour.** The colour of sewage can normally be detected by the naked eye, and it indicates the freshness of sewage. If its colour is yellowish, grey, or light brown, it indicates fresh sewage. However, if the colour is black or dark brown, it indicates stale and septic sewage. Other colours, may also be formed due to the presence of some specific industrial wastes.

(iii) **Odour.** Fresh sewage is practically odourless. But, however, in 3 to 4 hours, it becomes stale with all oxygen present in sewage being practically exhausted. It then starts omitting offensive odours, especially that of hydrogen sulphide gas, which is formed due to decomposition of sewage.

The odour of water or wastewater can be measured by a term called the **Threshold odour number (TON)**, which represents the extent of dilution required to just make the sample free of odour.

The minimum odour of the sample that can be detected after successive dilutions with odourless medium, is, thus, known as the **threshold odour**.

The Threshold odour number (TON) can be calculated by the equation :

$$\text{TON} = \frac{V_s + V_D}{V_s} \quad \dots(7.8)$$

where TON = Threshold Odour Number

V_s = Vol. of the sewage

V_D = Vol. of distilled or odourless water added to just make the sewage sample lose its odour.

(iv) **Temperature.** The temperature has an effect on the biological activity of bacteria present in sewage, and it also affects the solubility of gases in sewage. In addition, temperature also affects the viscosity of sewage, which, in turn, affects the sedimentation process in its treatment.

The normal temperature of sewage is generally slightly higher than the temperature of water, because of additional heat added during the utilisation of water. The average temperature of sewage in India is 20°C , which is near about the ideal temperature for the biological activities. However, when the temperature is more, the dissolved oxygen content (D.O.) of sewage gets reduced.]

* 7.4. Chemical Characteristics of Sewage and Their Testing

Tests conducted for determining the chemical characteristics of sewage help in indicating : the stage of sewage decomposition, its strength, and extent and type of treatment required for making it safe to the point of disposal.

Chemical analysis is, therefore, carried out on sewage in order to determine its chemical characteristics. It includes tests for determining :

- (i) total solids, suspended solids, and settleable solids ;
- (ii) pH value ;
- (iii) chloride content ;
- (iv) nitrogen content ;
- (v) presence of fats, greases, and oils ;
- (vi) sulphides, sulphates and H_2S gas ;
- (vii) dissolved oxygen ;
- (viii) chemical oxygen demand (C.O.D.) ;
- (ix) bio-chemical oxygen demand (B.O.D.).

These tests are briefly discussed below :

7.4.1. Total Solids, Suspended Solids and Settleable Solids*. Sewage normally contains very small amount of solids in relation to the huge quantity of water (99.9%). It only contains about 0.05 to 0.1 per cent (i.e. 500 to 1000 mg/l) of total solids. Solids present in sewage may be in any of the four forms : suspended solids, dissolved solids, colloidal solids, and settleable solids.

Suspended solids are those solids which remain floating in sewage. *Dissolved solids* are those which remain dissolved in sewage just as salt in water. *Colloidal solids* are finely divided solids remaining either in solution or in suspension. *Settleable solids* are that portion of solid matter which settles out, if sewage is allowed to remain undisturbed for a period of 2 hours. The proportion of these different types of solids is generally found to be as given below :

It has been estimated that about 1000 kg of sewage contains about 0.45 kg of total solids, out of which 0.225 kg is in solution, 0.112 kg is in suspension, and 0.112 kg is settleable.

Further, the solids in sewage comprise of both : the organic as well as inorganic solids. The organic matter works out to be about 45 per cent of the total solids, and the remaining about 55 per cent is the inorganic matter.

*Particles more than $1\text{ }\mu\text{m}$ (micron) in size are classified as *suspended solids*, particles less than $1\text{ }\mu\text{m}$ and up to $10^{-3}\text{ }\mu\text{m}$ are classified as *colloidal* ; and particles smaller than $10^{-3}\text{ }\mu\text{m}$ are considered as *dissolved solids*.

Particles more than $10\text{ }\mu\text{m}$ in size settle without coagulation, and hence are called *settleable solids*.

Inorganic matter consists of minerals and salts, like : sand, gravel, debris, dissolved salts, chlorides, sulphates, etc.

Organic matter consists of : (i) carbohydrates such as cellulose, cotton, fibre, starch, sugar, etc. (ii) fats and oils received from kitchens, laundries, garages, shops, etc. (iii) nitrogenous compounds like proteins and their decomposed products, including wastes from animals, urea, fatty acids, hydrocarbons, etc.

As a general rule, the presence of inorganic solids in sewage is not harmful. They require only mechanical appliances for their removal in the treatment plant. On the other hand, suspended and dissolved organic solids are responsible for creating nuisance, if disposed of, untreated. The amounts of various kinds of solids present in sewage can be determined as follows :

(a) The *total amount of solids* (S_1 in mg/l) present in a given sewage can be determined by evaporating a known volume of sewage sample, and weighing the dry residue left. The mass of the residue divided by the volume of the sample evaporated, will represent the total solids in mg/l, say S_1 .

(b) The *suspended solids* (S_2) are those solids which are retained by a filter of $1\text{ }\mu\text{m}$ pores ; and they are, therefore, also called as *non-filterable solids*. Their quantity can be determined by passing a known volume of sewage sample through a *glass-fiber filter apparatus*, and weighing the dry residue left. The mass of the residue divided by the volume of sample filtered, will represent the suspended solids, say (S_2), in mg/l.

(c) The difference between the total solids (S_1) and the suspended solids (S_2) will represent nothing but *dissolved solids plus colloids*, and represents the *filterable solids* ; say S_3 where $S_3 = S_1 - S_2$.

(d) Now, the *total suspended solids* (S_2) may either be *volatile* or *fixed*. In order to determine their proportion, the non-filtered dry residue of step (b) above, is burnt and ignited at about 550°C in an electric muffle furnace for about 15 to 20 minutes. Loss of weight due to ignition will represent the *volatile solids* in the sample volume filtered through the filter. Let the volatile suspended solids concentration be S_4 (in mg/l).

(e) The difference $S_2 - S_4 = S_5$ (say) will evidently represent the *fixed solids*.

(f) The quantity of *settleable solids* (S_6) can be determined easily with the help of a specially designed conical glass vessel called *Imhoff cone* (Refer Fig. 7.3). The capacity of the cone is 1 litre, and it is graduated up to about 50 ml.

Sewage is allowed to stand in this Imhoff cone for a period of two hours, and the quantity of solids settled in the bottom of the cone can then be directly read out. However, in order to obtain precise amount of settleable solids, the liquid from the cone should be decanted off, and the settleable solids collected at the bottom of the cone should be dried and weighed.

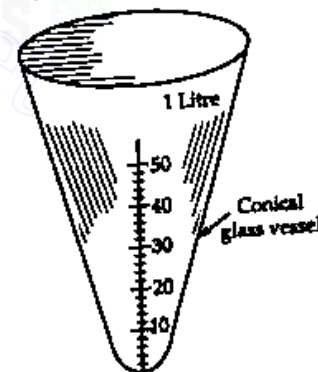


Fig. 7.3. Imhoff cone.

The quantities of different types of solids when determined experimentally as above, will help in detecting the strength of sewage, as given in Table 7.1.

Table 7.1. Typical quantities of Solids present in Domestic Sewage in mg/l

Type of solid	Strength of Sewage		
	Weak	Medium	Strong
Total Solids	400	800	1200
Suspended Solids			
Total	100	200	350
Volatile	75	135	210
Settleable solids	2.5	5	7
Ether soluble matter such as fats, oils and grease.	6	14	20

7.4.2. pH Value. The pH value of sewage indicates the negative log of hydrogen ion concentration present in sewage.

$$\text{i.e., } \text{pH} = -\log H^+; \text{ or } H^+ = (10)^{-\text{pH}} \quad \dots(7.9)$$

It is, thus, an indicator of the alkalinity of sewage. If the pH value is less than 7, the sewage is acidic, and if the pH value is more than 7, the sewage is alkaline. The lesser is the pH value, the lesser is the alkalinity.

The determination of pH value of sewage is important, because of the fact that efficiency of certain treatment methods depends upon the availability of a suitable pH value. The pH value can be measured quickly and automatically with the help of a potentiometer, which measures the electrical potential exerted by the hydrogen ions, and thus, indicating their concentration; as explained in determining the pH value of water in chapter 8, volume I—“Water Supply Engineering”.

It may also be mentioned here that the fresh sewage is generally alkaline in nature (with pH more than 7); but as time passes, its pH tends to fall due to production of acids by bacterial action in anaerobic or nitrification processes. The pH, however, rises upon treatment of sewage.

7.4.3. Chloride Contents. Chlorides are generally found present in municipal sewage, and are derived from the kitchen wastes, human feces, and urinary discharges, etc. The normal chloride content of domestic sewage is 120 mg/l, whereas, the permissible chloride content for water supplies is 250 mg/l. However, large amounts of chlorides may enter from industries like ice cream plants, meat salting, etc., thus, increasing the chloride contents of sewage. Hence, when the chloride content of a given sewage is found to be high, it indicates the presence of industrial wastes or infiltration of sea water, thereby indicating the strength of sewage.

The chloride content can be measured by titrating the waste water (i.e. sewage) with standard silver nitrate solution, using potassium chromate as indicator, as is done for testing water supplies.

7.4.4. Nitrogen Contents. The presence of nitrogen in sewage indicates the presence of organic matter, and may occur in one or more of the following forms:

- (a) Free ammonia*, called Ammonia nitrogen
 - (b) Albuminoid nitrogen, called Organic nitrogen
 - (c) Nitrites; and
 - (d) Nitrates.
- Kjeldahl nitrogen

As pointed out earlier, the free ammonia indicates the very first stage of decomposition of organic matter (thus indicating recently, staled sewage); albuminoid nitrogen indicates quantity of nitrogen present in sewage before the decomposition of organic matter is started; the nitrites indicate the presence of partly decomposed (not fully oxidised) organic matter; and nitrates indicate the presence of fully oxidised organic matter.

The nitrites thus indicate the intermediate stage of conversion of organic matter of sewage into stable forms, thus indicating the progress of treatment. Their presence will show that treatment given to sewage is still incomplete, and the sewage is stale. Whereas, the presence of nitrates indicate the most stable form of nitrogenous matter contained in sewage, thus indicating the well oxidised and treated sewage.

Even though ‘nitrates’ have been defined as the non-objectionable final end product in aerobic treatment of sewage, yet its concentrations in potable waters are controlled, because larger concentrations (above 45 ppm; say), may cause nitrate poisoning in infants. This happens because there exists lower acidity in the intestines of the infants, which permits growth of nitrate-reducing bacteria, which convert nitrates to nitrites. The nitrites, when absorbed in blood, prove very harmful, because they have greater affinity for hemoglobin than does oxygen, and thus, nitrite replaces oxygen in the blood complex. The body is, therefore, denied oxygen, causing suffocation in extreme cases. Since suffocation or lack of oxygen, causes the body to turn bluish, it may lead the child to turn blue. Hence, this disease, popularly called blue baby disease, or technically as methaemoglobinemia, is caused in children by the presence of excess nitrates in water. Fortunately, however, when the child grows, say above 6 months or so, the chances of conversion of nitrate into nitrite gets meagre due to development of the child's intestinal tract, and hence such a disease does not normally occur afterwards.


Fortunately also, the natural oxidation of nitrites into nitrates in the water bodies occurs quickly, and hence dangerous-nitrite contents are generally not found in natural water bodies.

All these different forms of nitrogen, present in sewage, can be tested and measured easily as explained below:

*Ammonia remains a gas, at the temperatures and pressures, normally found in sewage and water systems. This gas (NH_3) exists in equilibrium with the aqueous ionic form, called ammonium (NH_4^+), as



Its further oxidation occurs as



The amount of free ammonia present in sewage can be easily measured by simply boiling the sewage, and measuring the ammonia gas which is consequently liberated. The amount of albuminoid nitrogen can be measured by adding strong alkaline solution of potassium permanganate (KMnO_4) to the *already boiled* sewage sample and again boiling the same, when ammonia gas is liberated, which is measured, so as to indicate the amount of Albuminoid nitrogen (Organic nitrogen) present in sewage. If however an unboiled sample is used to add KMnO_4 before boiling, the evolved ammonia gas will measure the sum total of Ammonia nitrogen as well as Organic nitrogen; and is known as Kjeldahl nitrogen.

The amount of nitrites or nitrates present in sewage sample can be measured by colour matching methods. For nitrites, the colour is developed by adding sulphonic acid and naphthamine; whereas for nitrates, the colour is developed by adding phenol-di-sulphonic acid and potassium hydroxide. The colour developed in waste water is finally compared with the standard colours of known concentrations.

7.4.5. Presence of Fats, Oils and Greases. Greases, fats and oils are derived in sewage from the discharges of animals and vegetable matter, or from the industries like garages, kitchens of hotels and restaurants, etc.

Such matter form scum on the top of the sedimentation tanks and clog the voids of the filtering media. They thus interfere with the normal treatment methods, and hence need proper detection and removal.

The amount of fats and greases in a sewage sample is determined by making use of the fact that oils and greases are soluble in ether, and when the ether is evaporated, it leaves behind ether-soluble-matter, which represents the quantity of fats and oils. Hence, in order to estimate their amount, a sample of sewage is, first of all, evaporated. The residual solids left are then mixed with ether (hexane). The solution is then poured off and evaporated, leaving behind the fats and greases as a residue, which can be easily weighed.

7.4.6. Sulphides, Sulphates and Hydrogen Sulphide Gas. The determination of sulphides and sulphates in sewage is rarely called for, although their presence reflects aerobic, and/or anaerobic decomposition.

Sulphides and sulphates are formed due to the decomposition of various sulphur containing substances present in sewage. This decomposition also leads to evolution of hydrogen sulphide gas, causing bad smells and odours, besides causing corrosion of concrete sewer pipes.

In aerobic digestion of sewage, the aerobic and facultative bacteria, oxidise the sulphur and its compounds present in sewage to initially form sulphides, which ultimately break down to form sulphate ions (SO_4^{2-}), which is a stable and an unobjectionable end product. The initial decomposition is associated with formation of H_2S gas, which also ultimately gets oxidised to form sulphate ions.

In anaerobic digestion of sewage, however, the anaerobic and facultative bacteria reduce the sulphurous matter into sulphides, with evolution of H_2S gas along with methane and carbon dioxide, thus causing very obnoxious

smells and odours. If, however, the quantity of H_2S in raw sewage is below 1 ppm, obnoxious odours are not felt.

7.4.7. Dissolved Oxygen (D.O.). The determination of dissolved oxygen present in sewage is very very important, because: while discharging the treated sewage into some river stream, it is necessary to ensure at least 4 ppm of D.O. in it; as otherwise, fish are likely to be killed, creating nuisance near the vicinity of disposal. To ensure this, D.O. tests are performed during sewage disposal treatment processes.

The D.O. test performed on sewage before treatment, helps in indicating the condition of sewage. It is well known by now, that only very fresh sewage contains some dissolved oxygen, which is soon depleted by aerobic decomposition. Also, the dissolved oxygen in fresh sewage depends upon temperature. *If the temperature of sewage is more, the D.O. content will be less.* The solubility of oxygen in sewage is 95% of that in distilled water.

The D.O. content of sewage is generally determined by the Winkler's method which is an oxidation-reduction process carried out chemically to liberate iodine in amount equivalent to the quantity of dissolved oxygen originally present.

7.4.8. Chemical Oxygen Demand (COD). The organic matter present in waste water can be measured in a number of ways; volatile solids determination being a crude measure of organic matter.

Organic matter is most often assessed in terms of oxygen required to completely oxidise the organic matter to CO_2 , H_2O and other oxidised species.

The oxygen required to oxidise the organic matter present in a given waste water can be theoretically computed, if the organics present in waste water are known. Thus, if the chemical formulas and the concentrations of the chemical compounds present in water are known to us, we can easily calculate the theoretical oxygen demand of each of these compounds by writing the balanced reaction for the compound with oxygen to produce CO_2 , H_2O and oxidised inorganic components.

Hence, if the organic compounds and their concentrations are known, the theoretical oxygen demand of the waste water can be accurately calculated, but it is virtually impossible to know the details of the organic compounds present in any natural raw water or a waste water. The chemical oxygen demand (COD) of a raw water or a waste water is, therefore, determined by performing a laboratory test on the given water with a strong oxidant like dichromate solution; and the theoretical computations of COD are only performed on water solutions prepared with the known amounts of specific organic compounds in laboratory situations to compare the theoretical and test results, and to establish the limitations of the test procedures.

The laboratory determination of COD, as said above, lies in using a strong oxidant like potassium dichromate ($\text{K}_2\text{Cr}_2\text{O}_7$) or potassium permanganate (KMnO_4) solution to stabilize the organic matter to determine the molecular oxygen used from the oxidant solution in oxidising the organic matter present in the given waste water.

In order to perform this test, a known quantity of waste water is mixed with a known quantity of standard solution of potassium dichromate, and the

mixture is heated. The organic matter is oxidised by $K_2Cr_2O_7$ (in the presence of $H_2SO_4^*$). The resulting solution of $K_2Cr_2O_7$ is titrated, and the oxygen used in oxidising the waste water is determined. This is called the *chemical oxygen demand (C.O.D.)* and is a measure of total organic matter (biodegradable as well as non-biodegradable) present in sewage.

7.4.9. Total Organic Carbon (TOC). Another important method of expressing organic matter is in terms of its carbon content. Carbon is the primary constituent of organic matter, and hence the chemical formula of every organic compound will reflect the extent of carbon present in that compound. Known concentrations of such chemical compounds in a given waste water will thus enable us to theoretically calculate the carbon present in that waste water per litre of solution, as computed in example 7.1.



Example 7.1. Compute (a) the theoretical oxygen demand; and (b) the organic carbon concentration of a water that contains the following chemical compounds:

(i) glucose ($C_6H_{12}O_6$) = 200 mg/l; and

(ii) benzene (C_6H_6) = 25 mg/l

(c) What is the formula weight of the organic matter in this solution?

Solution. The equations for the total oxidation of the two constituents are first written as:



From the above equations: The theoretical oxygen demand of glucose is found to be $\frac{192}{180} = 1.07$ mg of O_2 /mg of glucose; and the theoretical oxygen

demand of benzene is found to be $\frac{240}{78} = 3.08$ mg of O_2 /mg of benzene.

Hence, the total theoretical oxygen demand of the solution containing 200 mg/l of glucose and 25 mg/l of benzene

$$= [1.07 \times 200 + 3.08 \times 25] \text{ mg/l} = 291 \text{ mg/l.}$$

Hence, COD = 291 mg/l. Ans.

(b) From the molecular formulas of glucose and benzene, it is found that:

The carbon content of glucose is 72 mgC/180 mg of glucose; and the carbon content of benzene is 72 mgC/78 mg of benzene. Hence, the total organic carbon content of the solution containing 200 mg/l of glucose and 25 mg/l of benzene

$$= \left[\frac{72}{180} \times 200 + \frac{72}{78} \times 25 \right] \text{ mgC/l}$$

$$= (0.4 \times 200 + 0.92 \times 25) = 103.1 \text{ mgC/l. Ans.}$$

(c) The concentrations of each atom (i.e. C, H and O) in the water containing two organic compounds of given concentrations are now worked out as below:

$$C = \left(\frac{72}{180} \times 200 + \frac{72}{78} \times 25 \right) \text{ mg/l} = 103.1 \text{ mg/l}$$

$$= 103.1 \times 10^{-3} \text{ gm/l} = 103.1 \times 10^{-3} \times \frac{1}{12} \text{ moles of C}$$

$$= 8.59 \times 10^{-3} \text{ moles of C.}$$

$$H = \left(\frac{12}{180} \times 200 + \frac{6}{78} \times 25 \right) \text{ mg/l} = 15.26 \text{ mg/l}$$

$$= 15.26 \times 10^{-3} \text{ g/l} = 15.26 \times 10^{-3} \times \frac{1}{1} \text{ moles of H}$$

$$= 15.26 \times 10^{-3} \text{ moles of H.}$$

$$O = \left[\frac{96}{180} \times 200 + 0 \right] \text{ mg/l} = 106.67 \text{ mg/l}$$

$$= 106.67 \times 10^{-3} \text{ g/L} = \frac{106.67 \times 10^{-3}}{16} \text{ moles of O}$$

$$= 6.67 \times 10^{-3} \text{ moles of O.}$$

The chemical formula for the organic matter present in water thus becomes:

$C_{8.59} \cdot H_{15.26} \cdot O_{6.67}$ at a concentration of 1 milli-moles. Ans.

Obviously, this formula does not represent the structure of the organic matter but only the relative amounts of the elements contained in it.

7.4.10. Bio-Chemical Oxygen Demand (B.O.D.). The organic matter, in fact, is of two types; i.e. that which is biologically oxidised (i.e. oxidised by bacteria) and is called *biologically active* or *biologically degradable*; and (ii) that which cannot be oxidised biologically, and is called *biologically inactive*. Truly speaking, while testing a waste water, we are mainly interested in finding out the amount of biologically active organic matter present in it; whereas, the above COD test gives us the total of biologically active as well as biologically inactive organic matter. Hence, further testing is carried out to determine the biochemical oxygen demand (B.O.D.) of sewage, which directly gives us the amount of biologically active organic matter present in sewage.

BOD test constitutes the most important test for waste waters, and is discussed below:

If sufficient oxygen is available in waste water, the useful aerobic bacteria will flourish and cause the aerobic biological decomposition of wastewater, which will continue until oxidation is completed. The amount of oxygen consumed in this process is the BOD. Polluted waters will continue to absorb oxygen for many months, and it is not practically feasible to determine this ultimate oxygen demand.

Hence, the BOD of water during 5 days at 20°C is generally taken as the standard demand, and is about 68% of the total demand. A 10 day BOD is about 90% of the total.

This standard 5 day BOD, written as BOD_5 , or simply as BOD is determined in the laboratory by mixing or diluting a known volume of a sample of wastewater with a known volume of aerated pure water*, and then

*It, however, contains small amount of sodium bicarbonate and other nutrient salts and

calculating the D.O. of this diluted sample. The diluted sample is then incubated for 5 days at 20°C. The D.O. of the diluted sample, after this period of incubation, is again calculated. The difference between the initial D.O. value and the final D.O. value will indicate the oxygen consumed by the sewage sample in 5 days (used in causing aerobic decomposition of wastes). The BOD in ppm is then calculated by using the equation

$BOD \text{ or } BOD_5 = D.O. \text{ consumed in the test by the diluted sample}$

$$\times \left[\frac{\text{Vol. of the diluted sample}}{\text{Vol. of the undiluted sewage sample}} \right] \quad \dots(7.11)$$

The factor on the right hand side in the above equation is nothing but the dilution factor.

Say for example, 1% diluted sample means : 1 ml of sewage is diluted to make 100 ml of test sample ; and hence dilution factor would be 100, as 1 ml has been diluted by 100 times to make 100 ml. Hence, the multiplying factor of the right hand side would be 100.

In actual experimentation in the laboratory, we generally use 300 ml sized BOD test bottles. The given vol. of sample, say 4 ml is then placed in the bottle, and mixed with pure aerated water to make 300 ml diluted sample. This sample is incubated at 20°C for 5 days. *Light must be excluded from the incubator to prevent algal growth that may produce oxygen in the bottle.* The DO content before the incubation and after the incubation are thus determined. The BOD_5 of sewage would then be calculated easily as,

$$BOD_5 = DO \text{ consumed by the diluted sample} \times \left(\frac{300}{4} \right)$$

(∵ Dilution factor being $\frac{300}{4}$)

As pointed out earlier, this test is conducted to determine the oxygen demand for the first five days on a number of samples, and their average value is taken as the BOD_5 at the test temperature.

In fact, if the oxygen supply is made available for periods more than 5 days, it is found that the oxygen is consumed rapidly for 6 or 7 days, and then slows down until the end of about 20 days or so. Thereafter, it may again accelerate for sometime, and again slow down to a very low rate for an indefinite period. The first demand during the first 20 days or so, in fact, occurs due to the oxidation of organic matter, and is called **carbonaceous demand** or **first stage demand** or **initial demand**. The latter demand occurs due to biological oxidation of ammonia, and is called **Nitrogenous demand** or **Second-stage demand**.

In fact, a sanitary engineer is more concerned with the first stage demand, since the oxygen consumed in its satisfaction is not recoverable. Hence, the term **BOD** is usually used to mean the **first stage BOD**, i.e. the demand due to the presence of carbonaceous matter alone.

This carbonaceous demand is represented by a curve, called **1st stage BOD curve**, shown in Fig. 7.4.

The rate at which BOD is satisfied at any time, (i.e. the rate of *deoxygenation*) depends on the temperature, and also on the amount and nature of organic matter present in sewage at that time.

Thus, at a certain temperature, the rate of deoxygenation is assumed to be directly proportional to the amount of organic matter present in sewage at that time ; i.e.

$$\frac{dL_t}{dt} = -KL_t \quad \dots(7.12)$$

where L_t = oxygen equivalent of carbonaceous oxidisable organic matter present in sewage after t days from the start of oxidation, in mg/l.

t = time in days.

K = rate constant signifying the rate of oxidation of organic matter, and it depends upon the nature of organic matter and temperature. Its unit is per day.

Integrating Eq. (7.12), we get

$$\int \frac{dL_t}{L_t} = \int -K \cdot dt$$

or $\log_e L_t = -K \cdot t + C$... (7.13)

where C is a constant of integration, and can be evaluated from the boundary conditions at the start i.e.

when $t = \text{zero } (0)$,

i.e. at start $L_t = L$ (say). **

Substituting in Eq. (7.13), we have

$$\log_e L = K(0) + C$$

or

$$C = \log_e L$$

*Minus sign indicates that with the passage of time (i.e., increase in t), the value of L , decreases.

** L is the oxygen equivalent of organic matter present in sewage (at start). It is a fixed quantity. For this

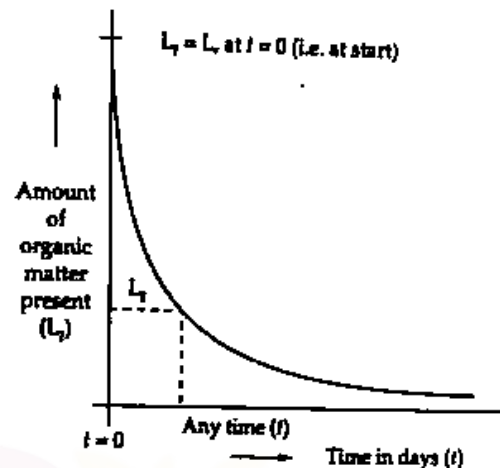


Fig. 7.4. 1st stage BOD curve.

Substituting this value of C in Eq. (7.13), we get

$$\log_e L_t = -K_d \cdot t + \log_e L$$

$$\text{or } \log_e L_t - \log_e L = -K_d \cdot t$$

$$\text{or } \log_e \frac{L_t}{L} = -K_d \cdot t$$

$$\text{or } 2.3 \log_{10} \frac{L_t}{L} = -K_d \cdot t$$

$$\text{or } \log_{10} \frac{L_t}{L} = -\frac{K_d \cdot t}{2.3} = -0.434 K_d \cdot t$$

$$\text{Using } 0.434 K_d = K_D \quad \dots(7.14)$$

where K_D is the De-oxygenation constant or more strictly, the BOD rate constant (on base 10) at the given temperature = $0.434 K$

$$\text{We have } \log_{10} \frac{L_t}{L} = -K_D \cdot t$$

$$\text{or } \frac{L_t}{L} = (10)^{-K_D \cdot t} \quad \dots(7.15)$$

Now, L is the organic matter present at the start of BOD reaction, (expressed as oxygen equivalent) and L_t is the organic matter left after t days, which means that during t days, the quantity of organic matter oxidised = $L - L_t$.

If Y_t represents the total amount of organic matter oxidised in t days (i.e. the BOD of t days), then we have

$$Y_t = L - L_t$$

Taking L out of bracket on R.H.S.

$$\text{we have } Y_t = L \left[1 - \frac{L_t}{L} \right]$$

$$\text{or } \frac{Y_t}{L} = 1 - \frac{L_t}{L}$$

$$\text{or } \frac{L_t}{L} = 1 - \frac{Y_t}{L}$$

Substituting this value of $\frac{L_t}{L}$ in equation (7.15), we get

$$1 - \frac{Y_t}{L} = (10)^{-K_D \cdot t}$$

$$\text{or } \frac{L_t}{L} = 1 - (10)^{-K_D \cdot t}$$

$$\text{or } Y_t = L \left[1 - (10)^{-K_D \cdot t} \right] \quad \dots(7.16)$$

*Certain authors use the symbol K_1 for this constant K_D , which is a constant on base 10, as

This is an important equation. Y_t is the oxygen absorbed in t days, i.e. BOD of t days.

The ultimate first stage BOD (Y_u) would be obtained from the above equation, when we substitute $t = \infty$ days in it.

$$\text{Hence } Y_u = L \left[1 - (10)^{-K_D \cdot \infty} \right]$$

$$\text{or } Y_u = L \left[1 - \frac{1}{(10)^{\infty}} \right] = L[1 - 0]$$

$$\text{or } Y_u = L \quad \dots(7.17)$$

Hence, the ultimate first stage BOD (Y_u) of a given sewage is equal to the initial oxygen equivalent of the organic matter present in this sewage (L). This is a fixed quantity, and does not depend upon the temperature of oxidation.

The value of K_D however, determines the speed of the BOD reaction, without influencing the ultimate BOD, as shown in Fig. 7.5. It is found to vary

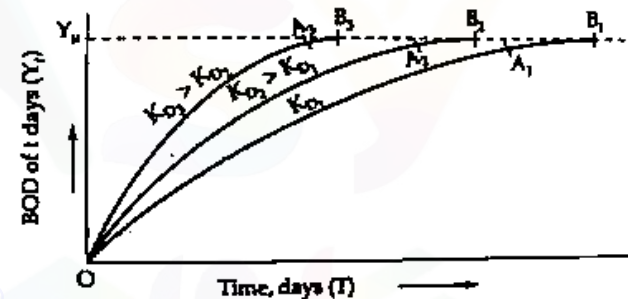


Fig. 7.5. BOD exertion as a function of K_D .

with temperature of sewage, and this relationship is approximately given by the equation

$$K_{D(T)} = K_{D(20)} [1.047]^{T-20} \quad \dots(7.18)$$

where $K_{D(20)}$ = Deoxygenation constant at 20°C . Its numerical value varies between 0.05 to 0.2 per day, depending upon the nature of the organic matter present in sewage. Simple compounds such as sugars and starches are easily utilised by the micro-organisms, and have a high K_D rate, while complex molecules such as phenols are difficult to assimilate and hence have low K_D values. Some typical K_D values are given in Table 7.2.

$K_{D(T)}$ = Deoxygenation constant at temperature $T^\circ\text{C}$.

Table 7.2. Typical Values of K_D at 20°C for Various Types of Waters and Waste Waters

Water Type	K_D value per day
Tap waters	< 0.05
Surface waters	0.05–0.1
Municipal waste waters	0.1–0.16
Treated sewage effluents	0.05–0.1

Equation (7.16) shows that K_D will be higher at higher temperatures, which means that the speed at which BOD is consumed in the oxidation of the organic matter, is higher at higher temperatures. This means that the entire carbonaceous organic matter will get oxidised quickly and in lesser time at higher temperatures.

Equation (7.16) is called the *first stage equation* of BOD reaction, and is represented graphically by the curve *OAB* of Figs. 7.5 and 7.6.

Fig. 7.5 shows that the coefficient of deoxygenation is different at different temperatures, but finally, Y_∞ is constant.

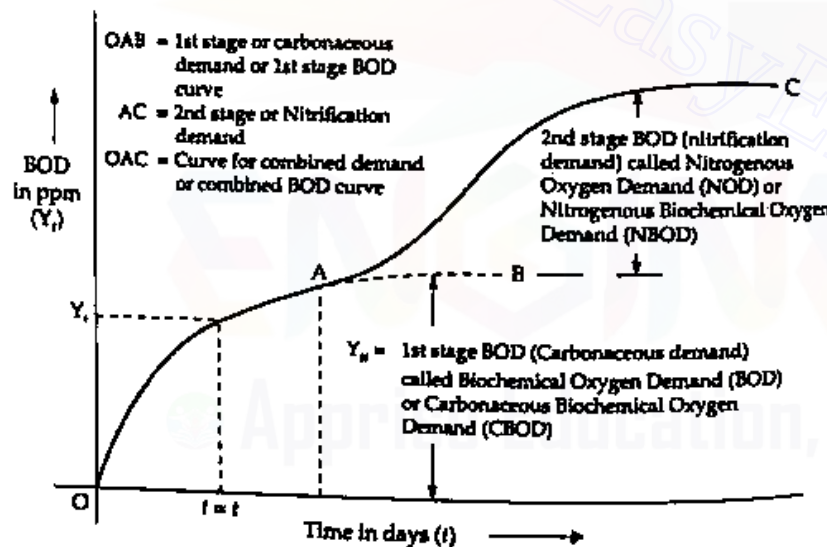


Fig. 7.5

By comparing Figs. 7.4 and 7.6, it can be seen that the curve of Fig. 7.6 is nothing but the reciprocal of curve in Fig. 7.4. This is because the oxygen used in satisfying BOD is in direct ratio of the amount of organic matter oxidised, which means reciprocal of the curve of Fig. 7.4.

The portion *AC* of the curve of Fig. 7.6 represents the nitrification stage, which follows the carbonaceous stage, so that the BOD curve for the complete oxidation is represented by *OAC*.

Note. The equations given above are only for the important first stage BOD (called carbonaceous BOD) and the second stage BOD (called nitrogenous BOD).

second stage BOD (called *Nitrogenous BOD* or *Nitrogenous oxidation demand* (NOD), with which we are not concerned here.

The Eqs. (7.16), (7.17) and (7.18) make it possible to convert the test results from different time periods and temperatures to the standard 5-day 20°C test or *vice versa*, as shown in examples solved below :

Values of 5-days 20°C BOD of municipal wastewaters generally vary between 100 and 500 mg/l, as shown in Table 7.3.

Table 7.3. Typical characteristics of Domestic Sewage in mg/l

S. No.	Parameter/characteristic	Strength of Sewage		
		Weak	Medium	Strong
1.	Total suspended solids (SS)	100	200	350
2.	Volatile suspended solids	75	135	210
3.	BOD	100	200	400
4.	COD	175	300	600
5.	TOC*	100	200	400
6.	Ammonia-N	5	10	20
7.	Organic-N	8	20	40
8.	PO ₄ -P	7	10	20

Example 7.2. If 2.5 ml of raw sewage has been diluted to 250 ml and the D.O. concentration of the diluted sample at the beginning of the BOD test was 8 mg/l, and 5 mg/l after 5-day incubation at 20°C; find the BOD of raw sewage.

Solution. Volume of sample of sewage = 2.5 ml.
Volume of diluted sample = 250 ml.

$$\therefore \text{Dilution ratio} = \frac{250}{2.5} = 100.$$

$$\begin{aligned} \text{Loss of dissolved oxygen during the test} \\ &= \text{D.O. before testing} - \text{D.O. after testing} \\ &= 8 - 5 = 3 \text{ mg/l.} \end{aligned}$$

Using equations (7.11), we have

$$\therefore \text{BOD of sewage} = \text{Loss of oxygen} \times \text{Dilution factor} \\ = 3 \text{ mg/l} \times 100 = 300 \text{ mg/l. Ans.}$$

Example 7.3. A 2% solution of a sewage sample is incubated for 5 days at 20°C. The depletion of oxygen was found to be 4 ppm. Determine the BOD of the sewage.

Solution. Dilution factor

$$= \frac{100}{\text{Per cent of solution}} = \frac{100}{2} = 50$$

$$\text{Depletion of oxygen} = 4 \text{ ppm.}$$

Using equation (7.11), we have

$$\text{BOD} = \text{Depletion of oxygen} \times \text{Dilution factor} \\ = 4 \text{ ppm} \times 50 = 200 \text{ ppm Ans.}$$

7.4.10.1. Laboratory estimation of K_D and L values by Thomas's graphical method. The BOD rate constant K_D used in eqn. (7.18), can be computed from BOD values measured at various times. The sewage samples are tested for BOD (Y_t) at different times (t), such as after 0.5, 1.0, 1.5, 2.0, 3.0, 5.0 days. A graph is now plotted between the values of time t in days on X-axis, and the

values of function $\sqrt{\frac{t \text{ (in days)}}{Y_t \text{, i.e., BOD (in mg/l)}}$ on Y-axis, as shown in Fig. 7.6. The

best fit line drawn through these points is used to calculate the K_D rate by the following relationship :

$$K_D = 2.61 \frac{m}{C} \quad \dots(7.19)$$

where K_D = rate constant per day

m = slope of the line.

C = intercept of the line on Y-axis.

$$\text{Also, } L = Y_{\infty} = \frac{1}{2.3K_D C^3} \quad \dots(7.20)$$

Example 7.4. BOD tests performed on 4 ml samples of a waste water through 300 ml standard BOD bottles at different times, have yielded the following results. Compute (a) the value of BOD rate constant ; (b) the value of BOD_5 ; (c) the value of ultimate BOD.

Bottle No.	Initial DO in mg/l	Incubation period in days	Final DO in mg/l
1	8.4	0.5	7.45
2	8.4	1.0	6.7
3	8.4	1.5	6.1
4	8.4	2.0	5.5
5	8.4	3.0	4.6
6	8.4	5.0	3.6

Solution. The dilution factor in each case = $\frac{300 \text{ ml}}{4 \text{ ml}} = 75$.


The given values of initial and final D.O. are used to compute the D.O. drop values, which are multiplied by the dilution factor of 75 to compute BOD values for all the samples, as shown in col. (6) of table 7.4. The values of

function $\sqrt{\frac{t}{\text{BOD}}}$ are then computed in col. (7) of this table.

Table 7.4

S. No.	Initial DO mg/l	Incubation time (t) in days	Final DO in mg/l	DO drop in mg/l col. (2) - col. (4)	BOD (Y_t) mg/l col. (5) $\times 75$	$\sqrt{\frac{t}{\text{BOD}}} \left(\frac{\text{col. 3}}{\text{col. 6}} \right)^{1/2}$
(1)	(2)	(3)	(4)	(5)	(6)	(7)
1	8.4	0.5	7.45	0.95	71.25	0.192
2	8.4	1.0	6.7	1.7	127.5	0.199
3	8.4	1.5	6.1	2.3	172.5	0.206
4	8.4	2.0	5.5	2.9	217.5	0.210
5	8.4	3.0	4.6	3.8	285	0.219
6	8.4	5.0	3.6	4.8	360	0.240

A graph is now plotted between the values of t (col. 3) and the values of function $\sqrt{\frac{t}{\text{BOD}}}$ (col. 7), as shown in Fig. 7.7, to pass a straight line of best fit.

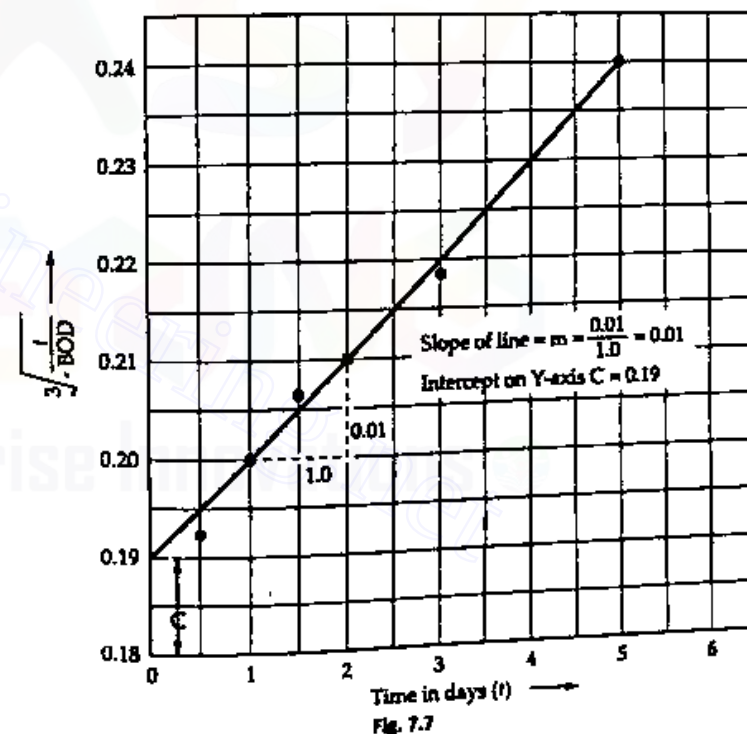

The value of K_D is then computed by using eqn. (7.19) as

$$K_D = 2.61 \left(\frac{m}{C} \right)$$

where m = slope of line = 0.01
 C = intercept on Y-axis = 0.19

$$\therefore K_D = 2.61 \times \frac{0.01}{0.19} = 0.137. \text{ Ans.}$$

(b) The 5 day value of BOD as computed in col. (6) is 360 mg/l. Ans.

(c) From Eq. (7.20), we have

$$Y_u = L = \frac{1}{2.3 K_D \cdot C^3} = \frac{1}{2.3 \times 0.137 \times (0.19)^3} \\ = 482.7 \text{ mg/l. Ans.}$$

[M]

7.4.11. $\frac{\text{BOD}}{\text{COD}}$ Ratio. Ultimate BOD (BOD_u), as we know, is the oxygen required for oxidising the Biodegradable Organics of a given waste water. COD, on the other hand, is the oxygen required to oxidise the Biodegradable Organics (BO's) as well as the Non-Biodegradable Organics (NBO's) both. COD of a waste water will, therefore, always be more than its BOD_u , since their difference will represent the quantum of NBO's present in the given waste water. The $\frac{\text{BOD}_u}{\text{COD}}$ ratio will, therefore, always be less than 1.0; but this value shall approach towards 1.0 with the decreasing amount of NBO's.

If this ratio is found to be between 0.92 to 1.0, the wastewater can be considered to be virtually fully biodegradable.


Since, BOD_u is generally not measured, and only BOD_5 is measured, the ratio $\frac{\text{BOD}_5}{\text{COD}}$, usually referred to as $\frac{\text{BOD}}{\text{COD}}$ ratio, becomes more important.

Since BOD_5 is about 68% of BOD_u , we can easily state that $\frac{\text{BOD}_5}{\text{COD}}$ ratio should, for fully-biodegradable waste waters, vary between $(0.92 \times 0.68 = 0.63)$ to $(1.0 \times 0.68 = 0.68)$. Any wastewater, having its $\frac{\text{BOD}}{\text{COD}}$ ratio more than 0.63, can hence, be considered to be quite amenable to biological treatment, since it contains very little or zero* non-biodegradable organics.

Example 7.5. What will be the maximum upper limit of BOD of a glucose solution of concentration 300 mg/l. (Engineering Services, 1998)

Solution. Since the $\frac{\text{BOD}_u}{\text{COD}}$ ratio is always less than 1 or at the most equal to 1, the maximum ultimate BOD value can be taken as equal to the value of COD. Moreover, the value of COD, can either be determined by the dichromate test for complex wastewaters; or may be determined theoretically if the organic compounds and their concentrations present in the wastewater are known. Such a theoretical oxygen demand of an organic compound can be calculated by writing the balanced reaction for the compound with oxygen to produce CO_2 , H_2O and oxidised organic components.

In the present case, the water contains only glucose, which is oxidised under the following equation:



From this balanced equation of oxidation of glucose, it can be stated that the theoretical oxygen demand for glucose is $\frac{192}{180} = 1.07$ mg of O_2 /mg of glucose.

$$\therefore \text{Total theoretical oxygen demand of the 300 mg/l glucose solution} \\ = 1.07 \times 300 \text{ mg/l} = 321 \text{ mg/l}$$

This COD can be taken to be equal to the maximum ultimate BOD.

Hence, the maximum ultimate BOD = 321 mg/l. Ans.

7.4.12. $\frac{\text{COD}}{\text{TOC}}$ ratio. The total carbonaceous organics present in a given wastewater can be ascertained by computing TOC of the waste-water, by converting the carbonaceous organics to CO_2 , which is measured by infra-red analysis, and converted instrumentally to the original organic carbon content. $\frac{\text{COD}}{\text{TOC}}$ ratio is considered to be an important factor in monitoring wastewater treatments.

TOC is related to COD through a carbon-oxygen balance, such as in the oxidation of Glucose,



we will have,

$$\frac{\text{COD}}{\text{TOC}} = \frac{6 \text{ mol of } \text{O}_2}{6 \text{ mol of C}} = \frac{6 \times 32}{8 \times 12} = 2.66.$$

Depending on the organic in question, the $\frac{\text{COD}}{\text{TOC}}$ ratio may vary from zero for an organic material resistant to dichromate oxidation, to 5.33 for methane. Since the organic content undergoes change during biological oxidation, it can be expected that $\frac{\text{COD}}{\text{TOC}}$ ratio will also change.

The same rationale will also apply to $\frac{\text{BOD}}{\text{TOC}}$ ratio. The TOC test is rapid and accurate, but has not become popular in our country, because it needs a costly instrument and sufficient skill in using the same. Moreover, it does not give an idea of Biologically Degradable Organics, and hence cannot be of much use for monitoring the Biological Treatment of wastewaters, which is the most common method adopted in our country for treating wastewaters.

7.5. Population Equivalent

Industrial wastewaters are generally compared with per capita normal domestic wastewaters, so as to rationally charge the industries for the pollution caused by them. The strength of the industrial sewage is, thus, worked out as below:

$$\left[\frac{\text{Standard BOD (BOD}_5\text{) of}}{\text{of industrial sewage}} \right] = \left[\frac{\text{Standard BOD (BOD}_5\text{) of}}{\text{domestic sewage per}} \right] \left[\frac{\text{person per day}}{\text{Population equivalent}} \right] \quad \dots (7.21)$$

The average standard BOD₅ of domestic sewage is worked out to be about 0.08 kg/day/person. Hence, if the BOD₅ of sewage coming from an industries is worked out as 300 kg/day, then

The population equivalent

$$= \frac{\text{BOD}_5 \text{ of the industry in kg/day}}{0.08 \text{ kg/day/person}} \quad \dots(7.22)$$

$$= \frac{300}{0.08} = 3750.$$

The population equivalent, thus, indicates the strength of the industrial wastewaters for estimating the treatment required at the municipal sewage treatment plant, and also helps in assessing realistic charges for this treatment to be charged from the industries instead of charging them simply by the volume of sewage.]

7.6. Relative Stability

The term relative stability of a treated sewage effluent may be defined as the ratio of oxygen available in the effluent (as D.O., nitrite or nitrate) to the total oxygen required to satisfy its first stage B.O.D. demand. It is expressed as percentage of the total oxygen required, and can be expressed by the equation:

$$\text{Relative stability} = S = 100 [1 - (0.794)^{t_{(20)}}] \quad \dots(7.23)$$

$$\text{or} \quad S = 100 [1 - (0.630)^{t_{(37)}}] \quad \dots(7.24)$$

where S = The relative stability, $t_{(20)}$ and $t_{(37)}$ represent the time in days for a sewage sample to decolourise a standard volume of methylene blue solution, when incubated at 20°C or 37°C* respectively.

The decolourisation caused by the enzymes produced by anaerobic bacteria, in fact, is an indication of the available oxygen in oxidising the unstable organic matter.

The sooner the decolourisation takes place, the earlier the anaerobic conditions develop, which means lesser availability of oxygen. Hence, if the decolourisation takes place sooner (less than 4 days or so), the effluent sample may be taken as relatively unstable (as relativity is less than about 0.6). But samples which do not decolourise in four days can be taken as relatively stable, and, thus, discharged into the stream without any troubles.

The above test for determining relative stability is suitable only in case of polluted stream waters or sewage effluents (i.e. treated sewage). In case of raw sewage, however, the colour is precipitated out due to the presence of colloidal matter in the sewage, and therefore, the test is of little use in that case. This test is, however, very simple, and quickly gives a rough indication of the character of the treated sewage.

7.7. Collection of Sewage Samples for Physical and Chemical Testing

The physical and chemical characteristics of sewage vary from top to bottom of sewage depth, as well as with time as from morning to evening. It therefore becomes difficult to obtain a truly representative sample. A fair compromise is, therefore, made in practice. Samples are taken at a point beneath the surface where the turbulence is thoroughly mixing up the sewage particles. This is called a *grab sample*. Such grab samples are collected at regular intervals during a day. These different samples are now mixed together, and the amount utilised from each specimen is proportional to the rate of flow at the time the specimen was collected. This composite sample is taken for testing, as it represents more nearly, the average true strength of the sewage.

In order to keep a sample cool, so as to prevent the biological action from taking place in the sewage sample, preservatives, such as chloroform, formaldehyde and sulphuric acid are added in the collecting bottle. The characteristics of preservatives should, however, be such as not to affect the result of the analysis to be made. For example, *no preservative should be used on a sample, on which BOD determination is to be made.*

7.8. Bacteriological Characteristics and Testing

The bacterial characteristics of sewage are due to the presence of micro-organisms, which include bacteria and other living micro-organisms, such as algae, fungi, protozoa, etc. The bacteria are, however, more active and exist in abundance (5—15 billion per litre of sewage).

Microorganisms are, in fact, present in significant quantities (numbers) in sewage, which primarily originates from human feces (including urine). *They are the most diverse group of living organisms on Earth and occupy important niches in the ecosystem.* The micro-organisms are able to survive and proliferate in extreme environments, ranging for example, from low to high pH or temperatures. Their simplicity and minimal survival requirements allow them to exist in diverse situations.

There are various types of micro-organisms. The most fundamental and the simplest wholly contained life systems are bacteria or prokaryotes.

Bacteria are the most diverse group of micro-organisms, which are the minute single cell micro-organisms, possessing no defined nucleus and having no chlorophyll to help them manufacture their own food. They are reproduced by binary fission and may be of various shapes, such as spherical shape (called cocci), straight rod like shape (called bacillus), spiral shape (called spirillum), and curved shape (called vibrio). They are so small in length (of the size of 1 to 4 micron) that they cannot be seen with a naked eye and have to be examined under a microscope. Certain other micro-organisms, such as viruses, are much smaller and cannot be seen singly even under a microscope. Their presence can, however, be detected with difficulty only by observing their reactions to different stains or cultures.

Most of the bacteria types are harmless, and under certain conditions, non-beneficial to humans, animals and crops. Such bacteria are called non-pathogenic. However, certain other bacteria are pathogenic.

serious diseases. Such bacteria are known as pathogenic bacteria* or pathogens. The viruses, similarly, may be of the pathogenic type or of non-pathogenic type.

Most of the bacteria require oxygen for their survival. These bacteria consume dissolved oxygen from the water and decompose the refuse and organic matter present in water or sewage, thus doing their cleaning up job. Besides these bacteria, which survive on oxygen, certain other types of bacteria which can survive with or without oxygen, are also sometimes present. Depending upon the oxygen requirement of the bacteria, they may be classified as follows:

- (i) Aerobic bacteria — i.e., those which require oxygen for their survival.
- (ii) Anaerobic bacteria — i.e., those which flourish and thrive in the absence of free oxygen.
- (iii) Facultative bacteria — i.e., those which can survive with or without free oxygen.

Besides the bacteria (*Prokaryotes*), certain other parasitic micro-organisms of higher stage of living do exist, which together are known as *Eukaryotes*. Under this category of *Eukaryotes*, we do have *protozoa* and *fungi* as the important groups. *Protozoa* are the single-celled organisms, and are the lowest and simplest form of animal life. They are bacteria eaters and destroy pathogenic bacteria (pathogens). They can be directly counted under a microscope. *Fungi* are generally filamentous and have a true cell wall. They are plants which grow without sunlight and live in other plants or animals, dead or alive. Some fungi are microscopic, while some others may be fairly large.

Rotifers and *Worms* are the other important groups of micro-organisms, which may be present in water or sewage. *Rotifers* are simple multi-cellular organisms at the first stage above the single-cell bacteria. They have cilia used for movement and food currents, located around their mouth. These aerobic micro-organisms are naturally found in marine and fresh waters in relatively high numbers. *Worms* have an elongated body and move with undulating motion. These simple animals are sometimes found in sewage, originating from the diseased man and animals. There are many worms classified into a number of different phyla. *Roundworms* or *nematodes* are estimated to be the second most numerous group of organisms after insects. Flatworms are distinguished by a flat body. The most common free-living flatworms are the *planaria*, found in quiescent waters throughout the world.

Numerous micro-organisms of different types may be found present in wastewater, which primarily originates from human feces (including urine). Diseased humans will evidently contribute pathogens into the resulting sewage. Worms and other micro-organisms may also be introduced into the wastewater from soil or animal wastes.

Bacterial Flora of Human Feces. The chemical and water composition of feces is variable and complex. Different diets and climates also influence the composition of feces and thus, the flora present in it. Likewise, dietary

*First of all discovered by Louis Pasteur (a Frenchman) and Robert Koch (a German)

practices and other factors affect the volume and weight of feces. The average per capita wet weight of feces produced on a daily basis around the world from individuals ranges from 91 to 489 g. As water content increases, the volume of fecal material increases. Few organisms are found in urine because of high ammonia content and low pH.

Bacteria dominate amongst the various micro-organisms present in feces. The total bacterial population in 1 g of feces has been estimated to be equivalent to 1.8×10^{12} E-coli (*Escherichia Coli*) cells; E-coli being one of the indicator organism bacteria. Except for pathogens, fecal bacteria are necessary for digestion. As one would expect, more bacteria in feces are facultative and anaerobic micro-organisms. The environment in the intestines is rich in organic matter, which would require high amounts of oxygen to maintain aerobic bacteria. Maintaining an aerobic environment in the intestines would be counter productive for the host, because the aerobic microbes would oxidise the organic matter and reduce its value for the host.

Table 7.5 lists the average concentrations of major groups of bacteria found in human feces of different countries. It is observed that the bacterial composition of feces is relatively uniform around the world. However, the presence of pathogens is highly variable depending on the occurrence of diseases and carriers of pathogens as well as other variables.

Table 7.5. Faecal Microflora of Different Human Populations*

Diet	Country	Mean log ₁₀ number of bacteria per gram of feces						
		Enterobacteria**	Streptococci	Lactobacilli	Clostridia	Bacteroides	Bifidobacteria	Sabacteria
Largely carbohydrate	India	7.9	7.3	7.6	5.7	9.2	9.8	9.5
	Japan	9.4	8.1	7.4	5.8	9.4	9.7	9.8
	Uganda	8.0	7.0	7.2	5.1	8.2	9.4	9.3
	Hong Kong	7.0	6.8	6.1	4.7	9.8	9.1	8.5
Mixed Western	England	7.9	6.8	6.5	5.7	9.8	9.9	9.3
	Scotland	7.8	5.3	7.7	5.6	9.8	9.9	9.3
	U.S.A.	7.4	6.9	6.5	5.4	9.7	9.9	9.3
	Denmark	7.0	6.8	6.4	6.3	9.8	9.9	9.3
	Finland	7.0	7.5	8.0	6.2	9.7	9.7	9.5

*From Peachment et. al. (1980).

**Fecal coliform bacteria are in the family of *Enterobacteriaceae*.

It may also be mentioned here that most of the vast number of bacteria present in sewage are harmless non-pathogenic bacteria. They are useful and helpful in bringing oxidation and decomposition of sewage during sewage treatment processes. A little number of bacteria, however, are disease producing pathogens, and it is they who constitute the real danger to the health of the public.

Since animal wastes also do enter into waste waters, the flora of their feces also become important particularly because animals are a reservoir for some diseases that afflict humans. The microbial flora of the animal feces, as

compiled by Geldreich (1978), is given in table 7.6. Table 7.7 also lists the various pathogenic micro-organisms commonly found in raw wastewaters.

Table 7.6. Microbial Flora of Animal Feces*

Animal group	Average density $\times 10^{-3}$ per gram				
	Fecal coliforms	Fecal streptococci	Clostridium perfringens	Bacteroides	Lactobacilli
Farm animals					
Cow	230	1300	0.2	**	0.25
Pig	3300	84000	3.98	500	251000
Sheep	16000	38000	199	**	79
Horse	12.6	6300	**	**	10000
Duck	33000	54000	—	—	—
Chicken	1300	3400	0.25	**	316000
Turkey	290	2800	—	—	—
Pet animals					
Cat	7900	27000	25100	795000	63000
Dog	23000	980000	251000	500000	39.8
Wild animals					
Mice	330	7700	**	795000	1260000
Rabbits	0.020	47	**	396000	**
Chipmunk	148	6000	—	—	—
Humans	13000	3000	1.58	5000000	630000

*From Geldreich (1978).

**Present in negligible amount.

Table 7.7. Pathogenic Micro-organisms Commonly found in Raw Waste Waters

Organism	Disease	Remarks
(1)	(2)	(3)
<i>Ascaris</i> spp., <i>Enterobius</i> spp.	Nematode worms	Danger to man from waste water effluents and dried sludge used as fertilizer
<i>Bacillus anthracis</i>	Anthrax	Found in waste water. Spores are resistant to treatment
<i>Brucella</i> spp.	Brucellosis, Malta fever in man. Contagious abortion in sheep, goats, and cattle	Normally transmitted by infected milk or by contact. Waste water is also suspected
<i>Entamoeba histolytica</i>	Dysentery	Spread by contaminated waters and sludge used as fertilizer. Common in hot climates
<i>Leptospira icterohaemorrhagiae</i>	Leptospirosis (Weil's disease)	Carried by sewer rats
<i>Mycobacterium tuberculosis</i>	Tuberculosis	Isolated from waste water and polluted streams. Waste water is a possible mode of transmission with

<i>Salmonella paratyphi</i>	Paratyphoid fever	Common in waste water and effluents in times of epidemics
<i>Salmonella typhi</i>	Typhoid fever	Common in waste water and effluents in times of epidemics
<i>Salmonella</i> spp.	Food poisoning	Common in waste water and effluents
<i>Schistosoma</i> spp.	Schistosomiasis	Probably killed by efficient waste water treatment
<i>Shigella</i> spp.	Bacillary dysentery	Polluted waters are main source of infection
<i>Taenia</i> spp.	Tapeworms	Eggs very resistant, present in waste water sludge and waste water effluents. Danger to cattle on land irrigated or land manured with sludge
<i>Vibrio cholerae</i>	Cholera	Transmitted by waste water and polluted waters
Virus	Poliomyelitis, hepatitis	Exact mode of transmission not yet known. Found in effluents from biological waste water-treatment plants

As far as testing of sewage is concerned, it may be clarified that, the routine bacteriological tests, as performed on water supply samples, are generally not performed on sewage, because of the high concentration of bacteria present in it. But at the time of epidemiological investigation, certain tests may be useful for separating the pathogenic bacteria. The bacteriological counts may also be useful where the treatment processes are likely to be affected adversely by bactericidal industrial wastewaters. These tests have already been discussed in "Vol-I Water Supply Engg." by the same author.

Example 7.8. The average sewage flow from a city is 80×10^6 l/d. If the average 5 day BOD is 285 mg/l, compute the total daily 5 day oxygen demand in kg, and the population equivalent of sewage. Assume per capita BOD of sewage per day = 75 g.

Solution. Quantity of sewage flowing per day = 80×10^6 litres.

Average 5 day BOD = 285 mg/l.

$\therefore$ Total daily 5 day oxygen demand
 $= 285 \times (80 \times 10^6) \text{ mg} = 22,800 \text{ kg. Ans.}$

Population equivalent = $\left[\frac{20,800}{75} \right] = 3,04,000. \text{ Ans.}$

Example 7.7. If the period of incubation is 10 days at 20°C in the relative conductivity test on sewage, calculate the percentage of relative stability.

Solution. Using eqn. (7.23), we have

Relative stability = S

$$= 100 \left[1 - (0.794)^{t/t_{20}} \right]$$

where t_{20} = Time in days to decolourise a standard vol. of methylene blue at 20°C = 10 days (given)

$$S = 100[1 - (0.794)^{10}]$$

$$= 100[1 - 0.0995876] = 90.04\% \text{ Ans.}$$

Example 7.8. Calculate the population equivalent of a city given (i) the average sewage from the city is 95×10^6 l/day, and (ii) the average 5 day BOD is 300 mg/l.

Solution. Average 5 day BOD = 300 mg/l.

$$\text{Average sewage flow} = 95 \times 10^6 \text{ l/day}$$

$\therefore$ Total BOD in sewage

$$= 300 \times 95 \times 10^6 \text{ mg/day}$$

$$= 300 \times 95 \text{ kg/day} = 28500 \text{ kg/day}$$

Population equivalent

$$= \frac{\text{Total 5 day BOD in kg/day}}{0.08}$$

[assuming the domestic sewage quantity to be 0.08 kg/person/day]

$$= \frac{28500}{0.08} = 3,56,250. \text{ Ans.}$$

Example 7.9. The BOD₅ of a waste water is 150 mg/l at 20°C. The k value is known to be 0.23 per day. What would BOD₅ be, if the test was run at 15°C?

Solution. Here, we will first clarify, that the given value of constant k , as equal to 0.23 per day, cannot be the value of deoxygenation constant K_D (on base 10), but it must be the rate constant (on base e) which was symbolised by us as ' K ', where, $K_D = 0.434 K$. This is because of the reason that the highest K_D value at 20°C for strong municipal sewage is of the order of 0.1 to 0.15, or slightly less. Hence, the given k value must be the value of K and not of K_D .

Hence, at 20°C, we use

$$K = 0.23 \text{ (given)}$$

$$\therefore K_D = 0.434 K = 0.434 \times 0.23 = 0.0998 \approx 0.1.$$

Also BOD of 5 days = BOD₅ = 150 mg/l (at 20°C)

Using equation (7.16), we have

$$Y_t = L[1 - (10)^{-K_D \cdot t}]$$

$$\therefore Y_5 = L[1 - (10)^{-K_D \cdot 5}]$$

$$\text{or } 150 = L[1 - (10)^{-0.1 \times 5}]$$

$$= L[1 - (10)^{-0.5}] = L\left[1 - \frac{1}{(10)^{0.5}}\right]$$

$$= L\left[1 - \frac{1}{3.16}\right] = L[1 - 0.316] = 0.684 L$$

$$\therefore L = \frac{150}{0.684} = 219.4$$

$$\text{or } L = 219.4 \text{ mg/l.} \quad \dots(i)$$

Now, let us find K_D value at 15°C

Using equation (7.18), we have

$$K_{D(15^\circ)} = K_{D(20^\circ)} [1.047]^{T-20}$$

$$\therefore K_{D(15^\circ)} = 0.1 [1.047]^{15-20} = 0.1 [1.047]^{-5}$$

$$= 0.1 \left[\frac{1}{(1.047)^5} \right] = 0.1 \left[\frac{1}{1.258} \right] = 0.079$$

Now, again using

$$Y_t = L[1 - (10)^{-K_D \cdot t}], \text{ where } Y_t \text{ is BOD of } t \text{ days}$$

$$\text{we have } Y_5 = 219.4 [1 - (10)^{-0.079 \times 5}]$$

$$= 219.4 \left[1 - \frac{1}{(10)^{0.432}} \right] = 219.4 \left[1 - \frac{1}{4.285} \right]$$

$$= 219.4 [1 - 0.233] = 219.4 \times 0.766 = 168.2 \text{ mg/l}$$

Hence BOD₅ = Y_5 = 168.2 mg/l. Ans.

Example 7.10. The 5 day 30°C BOD of sewage sample is 110 mg/l. Calculate its 5 days 20°C BOD. Assume the deoxygenation constant at 20°C, K_D as 0.1.

Solution. $K_{D(20^\circ)} = 0.1$

Now, using equation (7.18)

$$K_{D(15^\circ)} = K_{D(20^\circ)} [1.047]^{T-20}, \text{ we get}$$

$$K_{D(30^\circ)} = 0.1 [1.047]^{30-20} = 0.1 [1.047]^{10} = 0.158 \quad \dots(i)$$

Now, using $Y_t = L[1 - (10)^{-K_D \cdot t}]$, we get

$$Y_5 = L[1 - (10)^{-K_D \cdot 5}]$$

$$\therefore Y_{5 \text{ at } 30^\circ} = L[1 - (10)^{-K_D(30^\circ) \times 5}]$$

$$\text{or } 110 = L[1 - (10)^{-0.158 \times 5}] = L[1 - (10)^{-0.79}]$$

$$= L\left[1 - \frac{1}{(10)^{0.79}}\right] = L[1 - 0.162]$$

$$\text{or } 110 = L(0.838) \text{ or } L = \frac{110}{0.838} = 131.3$$

$$\text{or } L = 131.3 \text{ mg/l.} \quad \dots(ii)$$

$$\text{Now } Y_{5 \text{ at } 20^\circ} = L[1 - (10)^{-K_D(20^\circ) \times 5}]$$

$$= 131.3 [1 - (10)^{-0.1 \times 5}] = 131.3 \left[1 - \frac{1}{(10)^{0.5}} \right]$$

$$= 131.3 \times (1 - 0.316) = 131.3 \times 0.684$$

$$= 89.8 \text{ mg/l. Ans.}$$

Example 7.11. Calculate 1 day 37°C BOD of sewage sample whose 5 day 20°C BOD is 100 mg/l. Assume K_D at 20°C as 0.1.

Solution. 5 day 20°C BOD = 110 mg/l (given)

Now using Eq. (7.16), we have

The BOD at 20°C, say after $t = 5$ days, is given by

$$Y_t = L [1 - (10)^{-K_D(20^\circ) \cdot t}]$$

Using $Y_t = 110$ mg/l (given)

$$K_{D(20^\circ)} = 0.1$$

we have

$$110 = L [1 - (10)^{-0.1 \times 5}]$$

or

$$110 = L [1 - (10)^{-0.5}] = L \left[1 - \frac{1}{3.16}\right]$$

$$= L [1 - 0.316] = L [0.684]$$

or

$$L = \frac{110}{0.684} = 160.8 \text{ mg/l.}$$

Now let us work out K_D at 37°C, by using Eq. (7.18) as :

$$K_{D(37^\circ)} = K_{D(20^\circ)} [1.047]^{T-20}$$

or

$$K_{D(37^\circ)} = 0.1 [1.047]^{37-20} = 0.1 [1.047]^{17}$$

$$= 0.1 \times 2.4 = 0.24$$

Now, we have to work out Y_t for one day i.e. Y_1 at 37°C, using

$$Y_t = L [1 - (10)^{-K_D \cdot t}]$$

$\therefore$

$$Y_1 = L [1 - (10)^{-K_D \cdot 1}]$$

or

$$Y_1 \text{ (at } 37^\circ\text{C)} = 160.8 \left[1 - (10)^{-K_{D(37^\circ)} \times 1}\right]$$

$$= 160.8 [1 - (10)^{-0.24 \times 1}] = 160.8 \left[1 - \frac{1}{(10)^{0.24}}\right]$$

$$= 160.8 \left[1 - \frac{1}{1.738}\right] = 160.8 [1 - 0.575] = 82.07$$

Hence, Y_1 at 37°C = 82.07 mg/l. Ans.

Example 7.12. The BOD of a sewage incubated for one day at 30°C has been found to be 110 mg/l. What will be the 5-day 20°C BOD? Assume $K_1 = 0.1$ at 20°C.

Solution. $Y_1 \text{ (at } 30^\circ\text{C)} = 110$ mg/l ; $Y_5 \text{ (at } 20^\circ\text{C)} = ?$; $K_{D(20^\circ)} = 0.1$.

First of all, let us calculate K_D at 30°C, by using Eq. (7.18) i.e.

$$K_{D(30^\circ)} = K_{D(20^\circ)} [1.047]^{T-20}$$

or

$$K_{D(30^\circ)} = 0.1 [1.047]^{30-20} = 0.1 [1.047]^{10}$$

$$= 0.1 \times 1.583 = 0.1583$$

Now using Eq. (7.16), we have

$$Y_t = L [1 - (10)^{-K_D \cdot t}]$$

At 30°C and for one day, we have

$$Y_1(30^\circ) = L [1 - (10)^{-K_{D(30^\circ)} \times 1}]$$

or

$$110 = L [1 - (10)^{-0.1583 \times 1}] = L \left[1 - \frac{1}{1.438}\right]$$

$$= L [1 - 0.696] = L [0.304]$$

or

$$L = \frac{110}{0.304} = 361.8 \text{ mg/l.}$$

Now again using $Y_t = L [1 - (10)^{-K_D \cdot t}]$, we have

$$Y_5(20^\circ) = L [1 - (10)^{-K_{D(20^\circ)} \times 5}]$$

$$= L [1 - (10)^{-0.1 \times 5}] = L \left[1 - \frac{1}{(10)^{0.5}}\right]$$

$$= L [1 - 0.316]$$

$$= 361.8 [1 - 0.316] = 247.4 \text{ mg/l. Ans.}$$

Example 7.13. The BOD₅ of a waste has been measured as 600 mg/l. If $k_1 = 0.23/\text{day}$ (base e), what is the ultimate BOD_u of the waste. What proportion of the BOD_u would remain unoxidised after 20 days.

Solution. Use eqn. (7.16) as :

$$Y_t = L [1 - (10)^{-K_D \cdot t}]$$

Here $K = k_1 = 0.23/\text{day}$ (given)

$$\therefore K_D = 0.434 K = 0.434 \times 0.23 = 0.1$$

Using $t = 5$ days, we have

$$Y_5 = \text{BOD of 5 days}$$

$$= 600 \text{ mg/l} = L [1 - (10)^{-0.1 \times 5}]$$

$$\text{or } 600 \text{ mg/l} = L [1 - (10)^{-0.5}] = L \left[1 - \frac{1}{(10)^{0.5}}\right]$$

$$= L \left[1 - \frac{1}{3.16}\right] = L [1 - 0.316] = 0.684 L$$

$$\therefore 0.684 L = 600 \text{ mg/l}$$

$$\therefore L = \frac{600}{0.684} \text{ mg/l} = 877.5 \text{ mg/l.}$$

Hence, the ultimate BOD = 877.5 mg/l. Ans.

$$\text{Now } Y_{20} = L [1 - (10)^{-0.1 \times 20}] = Y_u \left[1 - \frac{1}{(10)^2}\right]$$

$$= Y_u [1 - 0.01] = Y_u [0.99]$$

$\therefore Y_{20} = 0.99 Y_u$
It means that 99% of BOD_u is utilised in 20 days, and hence only 1% of ultimate BOD would be left unoxidised after 20 days. Ans.

Example 7.14. The following observations were made on a 3% dilution of waste water :

Dissolved oxygen (D.O.) of aerated water used for dilution
= 3.0 mg/l

Dissolved oxygen (D.O.) of diluted sample after 5 days incubation
= 0.8 mg/l

Dissolved oxygen (D.O.) of original sample
= 0.6 mg/l.

Calculate the B.O.D. of 5 days and ultimate BOD of the sample assuming that the deoxygenation coefficient at test temp. is 0.1.

Solution. The 100% contents of the diluted sample consists of 3% wastewater and 97% of aerated water used for dilution.

$$\begin{aligned}\text{Hence its D.O.} &= \text{D.O. of waste water} \times \text{its content} \\ &+ \text{D.O. of dilution water} \times \text{its content} \\ &= 0.6 \times 0.03 + 3.0 \times 0.97 \\ &= 0.018 + 2.91 = 2.928 \text{ mg/l.}\end{aligned}$$

$$\begin{aligned}\text{D.O. of the incubated sample after 5 days} \\ &= 0.8 \text{ mg/l.}\end{aligned}$$

$$\begin{aligned}\text{Thus, D.O. consumed in oxidising organic matter} \\ &= 2.928 - 0.8 = 2.128 \text{ mg/l.}\end{aligned}$$

$$\begin{aligned}\therefore \text{B.O.D. of 5 days} &= \text{D.O. consumed} \times \text{Dilution factor} \\ &= 2.128 \times \frac{100}{3} = 70.93 \text{ mg/l.}\end{aligned}$$

Ultimate B.O.D. is given by L .

Using Eq. (7.16), we have

$$Y_t = L [1 - (10)^{-K_D \cdot t}]$$

$$\text{or } Y_5 = L [1 - (10)^{-K_D \cdot 5}] \quad \dots (i)$$

The value of K_D at test temp. is given as 0.1. Substituting the known values in Eq. (i) above, we have

$$\begin{aligned}70.93 &= L [1 - (10)^{-0.1 \times 5}] = L [1 - (10)^{-0.5}] \\ &= L \left[1 - \frac{1}{(10)^{0.5}} \right] = L \left[1 - \frac{1}{3.16} \right] \\ &= L [1 - 0.316] = L \times 0.684\end{aligned}$$

$$\text{or } L = \frac{70.93}{0.684} = 103.7 \text{ mg/l. Ans.}$$

Example 7.15. If the per capita contribution of suspended solids and B.O.D. is 90 gm and 55 gm, find the population equivalents of

- A combined system serving 1000 persons and having 75 gm per capita daily of B.O.D.; and
- 40,000 litres daily of industrial waste water containing 1800 mg/l of

Solution. (i) Population served by the combined system
= 1000.

Daily per capita B.O.D. of the combined system
= 75 gm.

Total daily B.O.D. produced by the system
= $1000 \times 75 \text{ gm} = 75,000 \text{ gm.}$

But standard per capita B.O.D. (given)
= 55 gm.

$$\begin{aligned}\therefore \text{Population equivalent} \\ &= \frac{75,000}{55} = 1364. \text{ Ans.}\end{aligned}$$

(ii) 1 litre of industrial wastewater contains 1800 mg of suspended solids.

$\therefore$ 40,000 litres of industrial wastewater (daily) will produce

$$\begin{aligned}&= \frac{1800 \times 40,000}{10^3} \text{ gm of suspended solids} \\ &= 72,000 \text{ gm of suspended solids}\end{aligned}$$

But standard daily per capita solid contribution is 90 gm.

$$\begin{aligned}\therefore \text{Population equivalent} \\ &= \frac{72,000}{90} = 800. \text{ Ans.}\end{aligned}$$

Example 7.16. In a test conducted for determining the relative conductivity at 20°C, the period of incubation was found to be 12 days. Calculate the per cent of relative stability.

Solution. The relative stability (S) at 20°C is given by equation (7.23) as :

$$S = 100 [1 - (0.794)^{t_{(20)}}]$$

$$\begin{aligned}\text{Using } t_{(20)} &= \text{No. of days at 20°C test temp.} \\ &= 12 \text{ days.}\end{aligned}$$

$$\begin{aligned}\text{We get } S &= 100 [1 - (0.794)^{12}] \\ &= 100 [1 - 0.063] = 100 \times 0.937 = 93.7\%. \text{ Ans.}\end{aligned}$$

Example 7.17. Change in concentration of organic matter, L , with time, t , is

$$\text{given by } \frac{dL}{dt} = -KL$$

Calculate the organic matter remaining after 3 days if the initial concentration was 200 mg/l, and $K = 0.4$ per day.

$$\text{Solution. } \frac{dL}{dt} = -KL \text{ or } \frac{dL}{L} = -K dt$$

Integrating, we have

$$\log_e L = -Kt + C$$

$$\text{or } 2.3 \log_{10} L = -Kt + C.$$

When $t = 0$ (at start), $L = 200 \text{ mg/l.}$

$$\begin{aligned}\therefore 2.3 \log_{10} 200 &= 0 + C \\ \therefore C &= 2.3 \times 2.301 = 5.28.\end{aligned}$$

Now, the value of L after 3 days is given by

$$2.3 \log_{10} L = -0.4 \times 3 + C$$

or $2.3 \log_{10} L = -1.2 + 5.28 = 4.08$

or $\log_{10} L = \frac{4.08}{2.3} = 1.773$

or $L = 59.3 \text{ mg/l.}$

Hence the organic matter left after 3 days = 59.3 mg/l. **Ans.**

Example 7.18. Data from an unseeded domestic waste water BOD test are: 5 ml of waste in 300 ml bottle, initial D.O. of 7.8 mg/l, and 5 days DO equal to 4.3 mg/l. Compute

(a) the BOD; and (b) the ultimate BOD, assuming a k -rate of 0.10 per day.

Solution. Initial D.O. = 7.8 mg/l

D.O. after 5 days of incubation = 4.3 mg/l

$\therefore$ D.O. consumed in 5 days = 7.8 - 4.3 = 3.5 mg/l

Now, using equation (7.10), we have

BOD₅ of wastewater

= D.O. consumed by diluted sample

$$\times \left[\frac{\text{Vol. of diluted sample}}{\text{Vol. of undiluted sewage used}} \right]$$

$$= 3.5 \text{ mg/l} \times \left[\frac{300 \text{ ml}}{5 \text{ ml}} \right] = 210 \text{ mg/l. Ans.}$$

Now, using equation $Y_t = L [1 - (10)^{-K_D \cdot t}]$, we have

$$Y_5 = L [1 - (10)^{-K_D \cdot 5}]$$

where $K_D = 0.1$ per day and $Y_5 = 210 \text{ mg/l}$

$$\therefore 210 = L [1 - (10)^{-0.1 \times 5}] = L \left[1 - \frac{1}{(10)^{0.5}} \right]$$

$$= L [1 - 0.316] = 0.684L$$

or $L = \frac{210}{0.684} \text{ mg/l} = 307.1 \text{ mg/l}$

Hence, ultimate BOD (Y_u) = $L = 307.1 \text{ mg/l. Ans.}$

Example 7.19. A dairy processing about 1,33,000 kg of milk daily produced an average of 246 cubic metre per day of waste water with a BOD of 1400 mg/l. The principal operations are bottling of milk, and making ice cream, with limited production of cheese. Compute the waste water flow and BOD per 1000 kg of milk received, and the equivalent population of the daily waste discharge.

Solution. Daily milk processed = 1,33,000 kg

Daily wastewater produced = 246 m³

BOD of wastewater = 1400 mg/l

Evidently,

Wastewater produced per 1000 kg of milk

BOD of the wastewater = 1400 mg/l

$$= 1400 \times 10^3 \text{ mg/m}^3$$

$$= \frac{1400 \times 10^3}{1000} \text{ gm/m}^3 = \frac{1400 \times 10^3}{10^3 \times 10^3} \text{ kg/m}^3$$

$$= 1.4 \text{ kg/m}^3$$

But vol of waste water produced in processing 1000 kg of milk = 1.85 m³ (calculated above).

Hence, BOD produced per 1000 kg of milk processed

$$= 1.4 \frac{\text{kg}}{\text{m}^3} \times 1.85 \text{ m}^3 = 2.59 \text{ kg. Ans.}$$

Daily BOD produced by 246 m³ of wastewater

$$= 1.4 \text{ kg/m}^3 \times 246 \text{ m}^3 = 344.4 \text{ kg/day.}$$

From equation (7.21), we have

Population equivalent

$$= \frac{\text{BOD of industry in kg/day}}{0.08} = \frac{344.4}{0.08} = 4305. \text{ Ans.}$$

[Note. The dairy is producing as much pollution as is likely to be produced by 4305 persons.]

Example 7.20. The 3 days 15°C BOD of a sample of sewage is 150 mg/l. Draw a graph of 5 day BOD as a function of temperature in the range 10°C to 30°C in steps of 5°C. Assume K_D at 20°C = 0.1.

Solution. K_D at 20°C = 0.1.

K_D at 15°C is given as :

$$K_{D(15^\circ)} = K_{D(20^\circ)} [1.047]^{7-20}$$

or $K_{D(15^\circ)} = 0.1 [1.047]^{15-20}$

$$= 0.1 (1.047)^{-5} = \frac{0.1}{(1.047)^5} = 0.079$$

Now, using $Y_t \text{ at } T = L [1 - (10)^{-K_D \cdot t}]$, we have

$$Y_3 \text{ at } 15^\circ = 150 \text{ mg/l}$$

$$\therefore 150 \text{ mg/l} = L [1 - (10)^{-0.079 \times 3}]$$

$$= L \left[1 - \frac{1}{(10)^{0.237}} \right] = 0.422L$$

or $L = 355.53 \text{ mg/l.}$


$$K_{D(10^\circ)} = 0.1 [1.047]^{10-20} = 0.063$$

$$K_{D(25^\circ)} = 0.1 [1.047]^{25-20} = 0.1258$$

$$K_{D(30^\circ)} = 0.1 [1.047]^{30-20} = 0.1583$$

$$(i) Y_5 \text{ at } 10^\circ = 355.53 [1 - (10)^{-0.063 \times 5}] = 183 \text{ mg/l}$$

$$(ii) Y_5 \text{ at } 15^\circ = 355.53 [1 - (10)^{-0.079 \times 5}] = 212 \text{ mg/l}$$

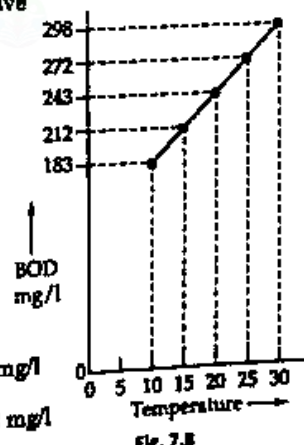

$$(iii) Y_{5 \text{ at } 20^{\circ}\text{C}} = 355.53 \left[1 - (10)^{-0.1 \times 5} \right] = 243 \text{ mg/l}$$

$$(iv) Y_{5 \text{ at } 25^{\circ}\text{C}} = 355.53 \left[1 - (10)^{-0.1258 \times 5} \right] = 272 \text{ mg/l}$$

$$(v) Y_{5 \text{ at } 30^{\circ}\text{C}} = 355.53 \left[1 - (10)^{-0.1583 \times 5} \right] = 298 \text{ mg/l}$$

These calculated five number BOD values w.r.t. temperature are plotted in Fig. 7.8, so as to obtain the requisite graph, which is almost a straight line. Ans.

PROBLEMS

- State the routine tests carried out in the laboratories at sewage treatment and disposal works, and explain the significance of each of them.
 - Mention the common types of organisms found in domestic sewages, and explain why routine biological examination of sewage is usually not carried out, as is done for water supplies.
- Explain the importance of determination of solids in sewage. How do you determine the suspended solids in a given sample of waste water?
 - What is the difference between BOD and COD? A 2% solution of a sewage sample is incubated for 5 days at 20°C . The depletion of oxygen was found to be 4 ppm. Determine the BOD of the sewage. [Ans. 200 mg/l or 200 ppm]
- Write short note on BOD.
 - Calculate 1 day 37°C BOD of sewage sample whose 5-days 20°C BOD is 100 mg/l.
- Explain population equivalent.
 - Given a waste water containing 300 mg/l of a ketone of chemical formula $\text{CH}_3\text{COC}_2\text{H}_5$.
 - Calculate the COD.
 - Assume a "k" value (base 10) of 0.1 per day. Calculate the ultimate BOD and the 5 day BOD of the waste. Note: H = 1, C = 12, O = 16.
- Give in a tabular form, the average composition of domestic sewage of a town.
 - The average sewage flow from a city is 80×10^6 l/d. If the average 5-days BOD is 285 mg/l, compute the total daily 5-day oxygen demand in kg, and the population equivalent of sewage, $k = 0.1$. Assume per capita BOD of the sewage per day = 75 gm.
- Give a brief account of general composition of sewage. What is the purpose and principle involved in its treatment and disposal?
- Explain the importance of the following operations in a laboratory determination of BOD of waste water sample:
 - pH adjustment;
 - dilution with aerated water;
 - seeding and nutrient addition to dilution water; and
 - incubation at controlled temperature.
- State and describe four important tests that may be carried out to know the characteristics of sanitary sewage.
 - Distinguish between aerobic, anaerobic and facultative micro-organisms and their role in the decomposition of sewage.
- Explain the importance of determination of solids in sewage. How do you determine the suspended solids in a given sample of waste water?
 - A town has an average domestic sewage flow of $31,710 \text{ m}^3/\text{day}$ with a BOD concentration of 250 ppm. A neighbouring industrial estate adds about $11,325 \text{ m}^3/\text{day}$ of sewage having 9080 kg of BOD to it. Find out:

- the concentrations of BOD in industrial and the combined sewage;
 - the probable population and per capita flow of sewage; and
 - the population equivalents based on the (i) BOD load and (ii) the hydraulic load.
- What is BOD? Deduce an expression for BOD with time. What are the factors on which the de-oxygenation constant (k) depends?
 - The 3 day 37°C BOD of a sample of sewage is 300 ppm. What will be its 10 days 20°C BOD, and 5 day 30°C BOD?
 - Explain the composition of sewage and also the possible methods of measuring the strength of sewage. Write out the laboratory procedure of the experiment to determine the strength of sewage.
 - State the common laboratory tests conducted on sewage and their importance in the treatment and disposal of sewage.
 - Name two most important parameters used to characterise sewage and describe their significance.
 - The 7 days 20°C BOD of a sample of sewage is 300 ppm, and its 3 days 37°C BOD is 500 ppm. Find out the value of deoxygenation constant k , and then estimate its 5 days 30°C BOD.
 - What is BOD? Deduce an expression for the first stage BOD.
 - If 3.0 ml of raw sewage was diluted to 300 ml and the D.O. concentration of the diluted sample at the beginning was 8.6 mg/l, and 4.5 mg/l at the end of 5 day incubation at 20°C , find the B.O.D. of raw sewage.
 - If the contribution of suspended solids and B.O.D. is 90 gm and 75 gm per capita per day, estimate the population equivalents of
 - a combined system serving 1200 persons and having 125 gm per capita daily of BOD; and
 - 50,000 litres daily contribution of industrial waste-water containing 1800 mg/l of suspended solids.
 - Write notes on:
 - Cycles of decay of waste organic substances;
 - B.O.D.;
 - C.O.D. and B.O.D.;
 - Concentration of solids in sewage;
 - Population Equivalent;
 - Composition of Municipal Sewage;
 - BOD/COD ratio; and
 - TOC.

—8

Disposing of the Sewage Effluents

Before we discuss, in our next chapter, the various treatments that may be given to raw sewage before disposing of it, it shall be worthwhile to first discuss the various methods and sources of disposal of sewage. The study of the sources of disposal is important, because the amount of treatment required to be given to a sewage depends very much upon the source of disposal, its quality and capacity to tolerate the impurities present in the sewage effluents, without itself getting potentially polluted or becoming less useful.

[There are two general methods of disposing of the sewage effluents :

- (a) *Dilution* i.e. disposal in water ; and
- (b) *Effluent Irrigation or Broad Irrigation or Sewage Farming*, i.e. disposal on land.

Disposal by dilution is more common of these two methods, which are described below :

✓ DISPOSAL BY DILUTION

[Disposal by dilution is the process whereby the treated sewage or the effluent from the sewage treatment plant is discharged into a river stream, or a large body of water, such as a lake or sea. The discharged sewage, in due course of time, is purified by what is known as *self purification process of natural waters*. The degree and amount of treatment given to raw sewage before disposing of it into the river-stream in question, will definitely depend not only upon the quality of raw sewage but also upon the *self purification capacity of the river stream and the intended use of its water*.]

8.1. Conditions Favouring Disposal By Dilution

The dilution method for disposing of the sewage can favourably be adopted under the following conditions :

- (i) When sewage is comparatively fresh (4 to 5 hr old), and free from floating and settleable solids, (or are easily removed by primary treatment).
- (ii) When the diluting water (i.e. the source of disposal) has a high dissolved oxygen (D.O.) content.
- (iii) Where diluting waters are not used for the purpose of navigation or water supply for at least some reasonable distance on the downstream from the point of sewage disposal.
- (iv) Where the flow currents of the diluting waters are favourable, causing no deposition, nuisance or destruction of aquatic life. It means that swift forward currents are helpful, as they easily carry away the sewage to the points of unlimited dilution. On the other hand, slow back currents tend to cause sedimentation, resulting in large sludge deposits.

(v) When the outfall sewer of the city or the treatment plant is situated near some natural waters having large volumes.

8.2. Standards of Dilution for Discharge of Wastewaters into Rivers
The ratio of the quantity of the diluting water to that of the sewage is known as the *dilution factor* ; and depending upon this factor, 'the Royal Commission Report on Sewage Disposal' has laid down the following standards and degrees of treatment required to be given to a particular sewage.

Table 8.1. Standards of Dilution Based on Royal Commission Report

Dilution factor	Standards of purification required
Above 600	No treatment is required. Raw sewage can be directly discharged into the volume of dilution water.
Between 300 to 600	Primary treatment such as <i>plain sedimentation</i> should be given to sewage, and the effluents should not contain suspended solids more than 150 ppm.
Between 150 to 300	Treatments such as <i>sedimentation, screening and essentially chemical precipitation</i> are required. The sewage effluent should not contain suspended solids more than 60 ppm.
Less than 150	Complete thorough treatment should be given to sewage. The sewage effluent should not contain suspended solids more than 30 ppm, and its 5 days B.O.D. at 18.3°C should not exceed 20 ppm.

The above standards have been operative in England since 1912, and had also been followed in India without much variance. However, with the increasing pollution of surface streams due to indiscriminate discharge of domestic and industrial wastewaters, without bothering to look into the available dilution ratios, it has become imperative to limit the concentrations of various pollutants being discharged in to the surface water sources along with the sewage and industrial effluents. The tolerance limits for such constituent pollutants have therefore been prescribed by various countries, including India. These limits are based upon the desirability of giving full fledged treatment to sewage and industrial liquid wastes, up to minimum level of 'secondary treatment'.

The Bureau of Indian Standards (BIS), previously known as Indian Standard Institution (ISI), has therefore laid down its *guiding standards* for sewage effluents, vide IS 4784-1973, and for industrial effluents vide IS : 2490-1974, as shown in table 8.2. These tolerance limits are supposed to be the *national guidelines* for guiding the various *State Pollution Control Boards** for prescribing their legally enforceable standards, depending upon the water

*Indian States like Karnataka, Kerala, Maharashtra, Rajasthan, U.P. and West Bengal have already published their legally enforceable effluent standards for various industries, and other States are in the process of doing so. The standards adopted by these States are almost the same as suggested by BIS(ISI), except for some locally needed changes. GOI has also notified these standards under the Environment (Protection) Rules, 1986, as shown in Table 8.3.

Table 8.2. BIS (ISI) Standards for Discharge of Sewage and Industrial Effluents in Surface Water Sources* and Public Sewers

S. No.	Characteristic of the Effluent	Tolerance limit for Sewage Effluent discharged into Surface Water Sources, as per IS 4764-1973	Tolerance Limit for Industrial effluent discharged into	
			Inland surface waters, as per IS 2490-1974	Public sewers as per IS 3306-1974
(1)	(2)	(3)	(4)	(5)
1.	BOD ₅	20 mg/l	30 mg/l	500** mg/l
2.	COD	—	250 mg/l	—
3.	pH value	—	6.5 to 8.0	5.5 to 8.0
4.	Total Suspended Solids (TSS)	30 mg/l	100 mg/l	800 mg/l
5.	Temperature	—	40°C	45°C
6.	Oil and grease	—	10 mg/l	100 mg/l
7.	Phenolic compounds (as Phenol)	—	1 mg/l	5 mg/l
8.	Cyanides (as CN)	—	0.2 mg/l	2 mg/l
9.	Sulphides (as S)	—	2 mg/l	—
10.	Fluorides (as F)	—	2 mg/l	—
11.	Total residual chlorine	—	1 mg/l	—
12.	Insecticides	—	Zero	—
13.	Arsenic (as As)	—	0.2 mg/l	—
14.	Cadmium (as Cd)	—	2 mg/l	—
15.	Chromium, hexavalent (as Cr)	—	0.1 mg/l	2 mg/l
16.	Copper	—	3 mg/l	3 mg/l
17.	Lead	—	0.1 mg/l	1 mg/l
18.	Mercury	—	0.01 mg/l	—
19.	Nickel	—	3 mg/l	2 mg/l
20.	Selenium	—	0.06 mg/l	—
21.	Zinc	—	5 mg/l	15 mg/l
22.	Chlorides (as Cl)	—	—	600 mg/l
23.	% Sodium	—	—	80%
24.	Ammoniacal nitrogen (as N)	—	50 mg/l	50 mg/l
25.	Radioactive materials	—	—	—
	(i) α-emitters	—	10 ⁻³ μCi/ml (micro curie/ml)	—
	(ii) β-emitters	—	10 ⁻⁶ μCi/ml	—

*Includes Rivers, Estuaries, Streams, Lakes and Reservoirs.

quality and dilution available in their respective surface water sources, and the type of effluents produced by the different industries. These standards have also been notified by GOI under Environment (Protection) Rules, 1986, and are shown in Table 8.3.

When the industrial wastewaters are disposed of in to public sewers, then also, their quality has to be checked, by following the standards prescribed by IS 3306-1974 (Refer col. (5) of table 8.2) or the standards notified by GOI under Environment (Protection) Rules, 1986, as shown in Table 8.3.

Table 8.3. General Standards for Discharge of Environment Pollutants from Effluents into Surface Water Sources, Public Sewers, and Marine Coasts Under Environment (Protection) Rules, 1986

S. No.	Characteristic of the effluent i.e. Name of pollutant in the effluent	Standard Prescribed under Environment (Protection) Rules, 1986 of GOI for		
		Inland surface waters	Public sewers	Marine coasts i.e. seas and oceans
(1)	(2)	(3)	(4)	(5)
1.	Colour and odour	All efforts should be made to remove colours and unpleasant odours, as far as possible	All efforts should be made to remove colours and unpleasant odours as far as possible.	All efforts should be made to remove colours and unpleasant odours as far as possible.
2.	Total suspended solids (TSS)	100 mg/l	500 mg/l	(i) 100 mg/l for process waste water (ii) For cooling water effluent, 10% above total suspended matter of influent
3.	Particle size of suspended solids	Shall pass 550 microp sieve	—	(a) Floatable solids: max 3 mm (b) Settling solids: max 550 microns
4.	BOD ₅ at 20°C	30 mg/l	250 mg/l	100 mg/l
5.	COD	250 mg/l	—	250 mg/l
6.	pH value	5.5–8.0	5.5–8.0	5.5–8.0
7.	Temperature	Shall not exceed 5°C above the temp. of receiving water	—	Shall not exceed 5°C above the temp. of receiving water.
8.	Oil and grease	10 mg/l	20 mg/l	20 mg/l
9.	Total residual chlorine	1.0 mg/l	—	1.0 mg/l
10.	Ammoniacal Nitrogen (as N)	50 mg/l	50 mg/l	50 mg/l
11.	Total Kjeldahl nitrogen (as N)	100 mg/l	—	100 mg/l

(1)	(2)	(3)	(4)	(5)
12.	Free Ammonia (as NH_3)	5.0 mg/l	—	5.0 mg/l
13.	Phenolic compounds (as $\text{C}_6\text{H}_5\text{OH}$)	1.0 mg/l	5.0 mg/l	5.0 mg/l
14.	Sulphide (as S)	2.0 mg/l	—	5.0 mg/l
15.	Arsenic (as As)	0.2 mg/l	0.2 mg/l	0.2 mg/l
16.	Mercury (as Hg)	0.01 mg/l	0.01 mg/l	0.01 mg/l
17.	Lead (as Pb)	0.1 mg/l	1.0 mg/l	2.0 mg/l
18.	Cadmium (as Cd)	2.0 mg/l	1.0 mg/l	2.0 mg/l
19.	Hexavalent Chromium (as Cr + 6)	0.1 mg/l	2.0 mg/l	1.0 mg/l
20.	Total Chromium (as Cr)	2.0 mg/l	2.0 mg/l	2.0 mg/l
21.	Copper (as Cu)	3.0 mg/l	3.0 mg/l	3.0 mg/l
22.	Zinc (as Zn)	5.0 mg/l	15 mg/l	15 mg/l
23.	Selenium (as Se)	0.05 mg/l	0.05 mg/l	0.05 mg/l
24.	Nickel (as Ni)	3.0 mg/l	3.0 mg/l	5.0 mg/l
25.	Cyanide (as CN)	0.2 mg/l	2.0 mg/l	0.2 mg/l
26.	Fluoride (as F)	2.0 mg/l	15 mg/l	15 mg/l
27.	Dissolved phosphates (as P)	5.0 mg/l	—	—
28.	Radioactive materials (a) Alpha emitters (b) Beta emitters	10^{-7} microcurie/ml 10^{-6} microcurie/ml	10^{-7} microcurie/ml 10^{-6} microcurie/ml	10^{-7} microcurie/ml 10^{-6} microcurie/ml
29.	Bio-assay test	90% survival of fish after 96 hrs in 100% effluent	90% survival of fish after 96 hrs in 100% effluent	90% survival of fish after 96 hrs in 100% effluent
30.	Manganese (as Mn)	2 mg/l	2 mg/l	2 mg/l
31.	Iron (as Fe)	3 mg/l	3 mg/l	3 mg/l
32.	Vanadium (as V)	0.2 mg/l	0.2 mg/l	0.2 mg/l
33.	Nitrate Nitrogen	10 mg/l	—	20 mg/l

(1)	(2)	(3)	(4)	(5)
34.	Pesticides			
	(i) Benzene hexachloride	10 $\mu\text{g/l}$	—	10 mg/l
	(ii) Carboxyl	10 $\mu\text{g/l}$	—	10 $\mu\text{g/l}$
	(iii) DDT	10 $\mu\text{g/l}$	—	10 $\mu\text{g/l}$
	(iv) Endosulfan	10 $\mu\text{g/l}$	—	10 $\mu\text{g/l}$
	(v) Diamethoate	450 $\mu\text{g/l}$	—	450 $\mu\text{g/l}$
	(vi) Penitrothion	10 $\mu\text{g/l}$	—	10 $\mu\text{g/l}$
	(vii) Malathion	10 $\mu\text{g/l}$	—	10 $\mu\text{g/l}$
	(viii) Phorate	10 $\mu\text{g/l}$	—	10 $\mu\text{g/l}$
	(ix) Methyl parathion	10 $\mu\text{g/l}$	—	10 $\mu\text{g/l}$
	(x) Phenthoate	10 $\mu\text{g/l}$	—	10 $\mu\text{g/l}$
	(xi) Pyrethrums	10 $\mu\text{g/l}$	—	10 $\mu\text{g/l}$
	(xii) Copper oxychloride	9600 $\mu\text{g/l}$	—	9600 $\mu\text{g/l}$
	(xiii) Copper sulphate	60 $\mu\text{g/l}$	—	60 $\mu\text{g/l}$
	(xiv) Ziram	1000 $\mu\text{g/l}$	—	1000 $\mu\text{g/l}$
	(xv) Sulphur	30 $\mu\text{g/l}$	—	30 $\mu\text{g/l}$
	(xvi) Paraquat	2300 $\mu\text{g/l}$	—	2300 $\mu\text{g/l}$
	(xvii) Propanil	7300 $\mu\text{g/l}$	—	7300 $\mu\text{g/l}$
	(xviii) Nitrogen	780 $\mu\text{g/l}$	—	780 $\mu\text{g/l}$

* 8.3. Dilution in Rivers and Self Purification of Natural Streams

When sewage is discharged into a natural body of water, the receiving water gets polluted due to waste products, present in sewage effluents. But the conditions do not remain so for ever, because the natural forces of purification, such as *dilution*, *sedimentation*, *oxidation-reduction in sunlight*, etc., go on acting upon the pollution elements, and bring back the water into its original condition. This automatic purification of polluted water, in due course, is called the *self-purification phenomenon*. However, if the self-purification is not achieved successfully either due to too much of pollution discharged into it or due to other causes, the river water itself will get polluted, which, in turn, may also pollute the sea where the river outfalls.

The various natural forces of purification which help in effecting self-purification process are summarised below :

1. Physical forces are :

- (i) *Dilution and dispersion*,
 - (ii) *Sedimentation*, and
 - (iii) *Sunlight (acting through bio-chemical reactions)*.
2. Chemical forces aided by biological forces (called bio-chemical forces) are :
- (iv) *Oxidation (Bio)*,
 - (v) *Reduction*.

These forces are described below :

(i) **Dilution and Dispersion.** When the putrescible organic matter is discharged into a large volume of water contained in the river-stream, it gets rapidly dispersed and diluted. The action, thus, results in diminishing the concentration of organic matter, and thus reduces the potential nuisance of sewage.)

When sewage of concentration C_S flows at a rate Q_S in to a river stream with concentration C_R flowing at a rate Q_R , the concentration C of the resulting mixture is given by

$$C_S Q_S + C_R Q_R = C(Q_S + Q_R)$$

or

$$C = \frac{C_S Q_S + C_R Q_R}{Q_S + Q_R} \quad \dots(8.1)$$

This equation is applicable separately to concentrations of different impurities, such as, oxygen content, BOD, suspended sediments, and other characteristic contents of sewage.

(ii) **Sedimentation.** The settleable solids, if present in sewage effluent, will settle down into the bed of the river, near the outfall of sewage, thus, helping in the self purification process.

(iii) **Sunlight.** The sun light has a bleaching and stabilising effect of bacteria. It also helps certain micro-organisms to derive energy from it, and convert themselves into food for other forms of life, thus absorbing carbon dioxide and releasing oxygen by a process known as photosynthesis. The evolution of oxygen in river water due to sunlight will help in achieving self-purification through oxidation, as given below :

(iv) **Oxidation.** The oxidation of the organic matter present in sewage effluent, will start as soon as the sewage outfalls into the river water containing dissolved oxygen. *The deficiency of oxygen so created, will be filled up by the atmospheric oxygen.* The process of oxidation will continue till the organic matter has been completely oxidised. This is the most important action responsible for affecting self purification of rivers.

(v) **Reduction.** Reduction occurs due to hydrolysis of organic matter settled at the bottom either chemically or biologically. Anaerobic bacteria will help in splitting the complex organic constituents of sewage into liquids and gases, and thus paving the way for their ultimate stabilization by oxidation.

The various factors on which these natural forces of purification depend are : (a) temperature; (b) turbulence; (c) hydrography such as the velocity and surface expanse of the river-stream; (d) available dissolved oxygen, and the amount and type of organic matter present, (e) rate of re-aeration, etc.

Besides affecting the dilution and sedimentation rates, the temperature also affects the rate of biological and chemical activities, which are enhanced at higher temperatures and depressed at lower temperatures. The dissolved oxygen content of water, which is very essential for maintaining aquatic life and aerobic conditions (so as to avoid the anaerobic decomposition and subsequent nuisance caused by the eruption of foul odours) is also influenced by temperature. *At higher temperatures, the capacity to maintain the D.O. concentration is low; while the rate of biological and chemical activities are high, causing thereby rapid depletion of D.O.* This is likely to lead to anaerobic

The turbulence in the body of water helps in breaking the surface of the stream or lake, and helps in rapid re-aeration from the atmosphere. Thus, it helps in maintaining aerobic conditions in the river stream, and in keeping it clean! Too much of turbulence, however, is not desirable, because it scours the bottom sediment, increases the turbidity, and retards algae growth, which is useful in re-aeration process. Wind and undercurrents in lakes and oceans cause turbulences which affect their self-purification.

The Hydrography affects the velocity and surface expanse of the river stream. High velocities cause turbulence and rapid re-aeration, while large surface expanse (for the same cubic contents) will also have the same effects.

The larger the amount of dissolved oxygen present in water, the better and earlier the self-purification will occur.

The amount and the type of organic matter and biological growth present in water will also affect the rate of self-purification. Algae which absorbs carbon dioxide and gives out oxygen, is thus, very helpful in the self-purification process.

The rate of re-aeration i.e. the rate at which the D.O. deficiency is replenished, will considerably govern the self-purification process. The greater is this rate, the quicker will be the self-purification, and there will be no chances of development of anaerobic conditions.

8.3.1. Zones of Pollution in a River-Stream. A polluted stream undergoing self-purification can be divided into the following four zones :

- (i) Zone of degradation;
- (ii) Zone of active decomposition;
- (iii) Zone of recovery; and
- (iv) Zone of cleaner water.

These zones are discussed below :

(i) **Zone of degradation or Zone of pollution.** This zone is found for a certain length just below the point where sewage is discharged into the river-stream. This zone is characterised by water becoming dark and turbid with formation of sludge deposits at the bottom. D.O. is reduced to about 40% of the saturation value*. There is an increase in carbon dioxide content; reoxygenation (i.e. re-aeration) occurs but is slower than de-oxygenation.


These conditions are unfavourable to the development of aquatic life; and as such, algae dies out, but fish life may be present feeding on fresh organic matter. Moreover, certain typical bottom worms such as *Limnodrilus* and *Tubifex* appear with sewage fungi, such as *sphaerotilusnatans*.

(ii) **Zone of active decomposition.** This zone is marked by heavy pollution. It is characterised by water becoming greyish and darker than in the previous zone. D.O. concentration falls down to zero, and anaerobic conditions may set in with the evolution of gases like methane, carbon dioxide, hydrogen sulphide, etc., bubbling to the surface, with masses of sludge forming an ugly scum layer at the surface. As the organic decomposition slackens due to stabilisation of organic matter, the re-aeration sets in and D.O. again rises to the original level (i.e. about 40%).

*Saturation value at 30°C = 7.63 mg/l. (Pl. see Appendix Tables A-3 given at the end of the

In this zone, bacteria flora will flourish. At the upper end, anaerobic bacteria will replace aerobic bacteria; while at its lower end, the position will be reversed. Protozoa and fungi will first disappear and then reappear. Fish life will be absent. Algae and Tubifex will also mostly be absent. Larvae of maggots and psychoda (sewage fly) will, however, be present in all but the most septic sewage.

(iii) **Zone of recovery.** In this zone, the river stream tries to recover from its degraded condition to its former appearance. The water becomes clearer, and so the algae reappears while fungi decreases. B.O.D. falls down and D.O. content rises above 40% of the saturation value; protozoa, rotifers, crustaceans and large plants like sponges, bryozons, etc. also reappear. Bottom organisms will include: tubifex, mussels, snails, etc. The organic material will be mineralised to form nitrates, sulphates, phosphates, carbonates, etc.

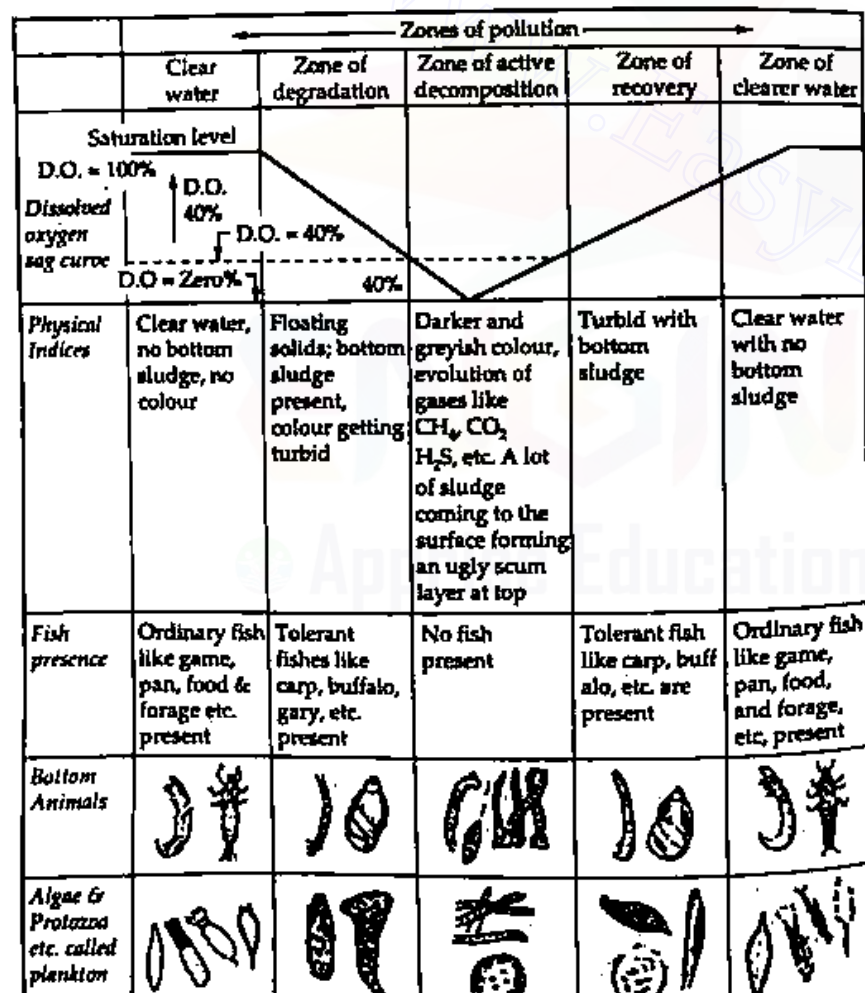

(iv) **Zone of cleaner water.** In this zone, the river attains its original conditions with D.O. rising upto the saturation value. Water becomes attractive in appearance, and Game fish (which requires atleast 4 to 5 mg/l of D.O.) and usual aquatic life prevails. Some pathogenic organisms may still, however, survive and remain present, which confirms the fact that "when once a river water has been polluted, it will not be safe to drink it, unless it is properly treated."

8.3.2. Indices of Self-Purification. The stage of self-purification process can be determined by the physical, chemical and biological analysis of the water. Colour and turbidity are the physical indices, while DO, BOD and suspended solids (SS) are the chemical indices which can mark the stages of purification. Moreover, the biological growth present in water can also indicate the stage of purification process, as different types of micro and macro organisms will exist in polluted water under different conditions, as discussed in the previous sub article.

The different zones of pollution (i.e. various stages in the self-purification process) and the physical, chemical and biological indices, characteristics of each zone, are shown in Fig. 8.1.

8.3.3. The Oxygen Deficit of a Polluted River-Stream. The oxygen deficit D at any time in a polluted river-stream is the difference between the actual D.O. content of water at that time and the saturation D.O. content* at the water temperature; i.e.

$$\text{[Oxygen deficit (D) = Saturation D.O. - Actual D.O.]} \quad \dots(8.2)$$

In order to maintain clean conditions in a river-stream, the oxygen deficit must be nil, and this can be found out by knowing the rates of de-oxygenation and re-oxygenation.

De-oxygenation Curve. In a polluted stream, the D.O. content goes on reducing due to decomposition of volatile organic matter. The rate of de-oxygenation depends upon the amount of the organic matter remaining to be oxidised at the given time (i.e. L_t) as well as on the temperature of reaction (i.e. t). Hence, at a given temperature, the curve showing depletion of D.O. with time, i.e. deoxygenation curve (Refer curve 1 of Fig. 8.2) is similar to the first stage B.O.D. curve (Refer Fig. 7.3). It can also be expressed mathematically as per Eq. (7.12).

Re-oxygenation Curve. In order to counter-balance the consumption of D.O. due to de-oxygenation, atmosphere supplies oxygen to the water, and the process is called re-oxygenation. The rate at which the oxygen is supplied by the atmosphere to the polluted water depends upon:

- the depth of the receiving water (rate is more in a shallow depth);
- the condition of the body of water (rate is more in a running stream than in a quiescent pond);

*It means the amount of D.O. which will be present in water if it is fully saturated with oxygen. The normal saturation D.O. value for fresh water varies between 14.6 mg/l to 7.8 mg/l for temperature varying between 0°C to 30°C . (Pl. see Appendix Table A-3)

- (iii) the saturation deficit or the oxygen deficit (i.e. the deficit of D.O. below the saturation value); and
 (iv) the temperature of water.

Depending upon these factors, the rate of re-oxygenation can also be expressed mathematically and plotted in the form of a curve called re-oxygenation curve (Refer curve II—Fig. 8.2).

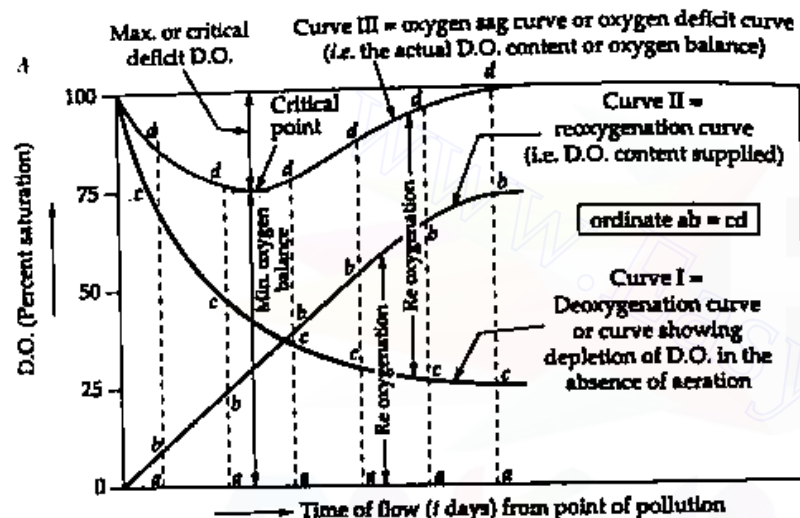


Fig. 8.2. Oxygen sag curve in a river receiving discharge of sewage.

Oxygen Deficit Curve. In a running polluted stream exposed to the atmosphere, the de-oxygenation as well as the re-oxygenation go hand in hand. If de-oxygenation is more rapid than the re-oxygenation, an oxygen deficit results.

[Note. If the D.O. content becomes zero, aerobic conditions will no longer be maintained and putrefaction will set in.]

The amount of resultant oxygen deficit can be obtained by algebraically adding the de-oxygenation and re-oxygenation curves (see curve III—Fig. 8.2). The resultant curve so obtained is called the oxygen sag curve or the oxygen deficit curve. From this curve, the oxygen deficit (D) and oxygen balance (i.e., $100 - D$) per cent in a stream after a certain lapse of time, can be found out.

It can also be seen that when the de-oxygenation rate exceeds the re-oxygenation rate, the oxygen sag curve shows increasing deficit of oxygen; but when both the rates become equal, the critical point is reached, and then finally when the rate of de-oxygenation falls below that of re-oxygenation, the oxygen deficit goes on decreasing till becoming zero.

The entire analysis of super-imposing the rates of de-oxygenation and re-oxygenation have been carried out mathematically, and the obtained results expressed in the form of famous Streeter-Phelps equation; i.e.,

$$D_t = \frac{K_D \cdot L}{K_R - K_D} \left[(10)^{-K_D \cdot t} - (10)^{-K_R \cdot t} \right] + [D_0 \times (10)^{-K_R \cdot t}] \quad \dots(8.3)$$

where D_t = the D.O. deficit in mg/l after t days.

L = Ultimate first stage B.O.D. of the mix at the point of waste discharge in mg/l.

D_0 = Initial oxygen deficit of the mix at the mixing point in mg/l.

K_D = De-oxygenation coefficient for the wastewater, which can be considered as equal to the BOD rate constant* determined in the laboratory, through BOD tests performed at different times on BOD bottles, as discussed in article 7.4.1.9. Also, K_D varies with temp. as per Eq. (7.18), as:

$$K_{D(T)} = K_{D(20)} \left[\frac{1047}{T} \right]^{T-20} \quad \dots(\text{i.e. Eq. 7.18})$$

The typical values of $K_{D(20)}$ vary between 0.1 to 0.2, generally taken as 0.1.

K_R^{**} = Re-oxygenation coefficient for the stream. It can be determined by the field tests by using eqn.:

$$K_{R(20)} = \frac{3.9 \sqrt{v}}{y^{1.5}} \quad \dots(8.4)$$

where v = Av. stream velocity in m/s

y = Av. stream depth in m.

K_R varies with temperature as per the eqn.:

$$K_{R(T)} = K_{R(20)} \left[\frac{1016}{T} \right]^{T-20} \quad \dots(8.5)$$

where $K_{R(T)}$ is the K_R value at $T^\circ\text{C}$ and $K_{R(20)}$ is the K_R value at 20°C .

Typical values of $K_{R(20)}$ are given in Table 8.4.

*Deoxygenation coefficient for a river is, in fact, a little more than the BOD rate constant, since BOD is exerted more rapidly in a river than that in a BOD bottle due to turbulent mixing in a river. However, for practical purposes, this value is taken to be the same, as determined in the laboratory.

**Certain authors use K_r as the symbol for this constant.

Table 8.4. Values of Re-oxygenation Coefficient (K_R) at 20°C

S. No.	Type of water body	Value of K_{R20} per day
1.	Small ponds and back waters	0.05—0.10
2.	Sluggish streams, large lakes and impounding reservoirs	0.10—0.15
3.	Large streams of low velocity	0.15—0.20
4.	Large streams of normal velocity	0.20—0.30
5.	Swift streams	0.30—0.50
6.	Rapids and waterfalls	Over 0.5

The oxygen deficit curve can be plotted easily with the help of Eq. (8.3), by using different values of t in days :

The critical time (t_c) after which the minimum dissolved oxygen occurs can be found by differentiating Eq. (8.3) and equating it to zero ; which on solving gives

$$t_c = \left[\frac{1}{K_R - K_D} \right] \log \left[\left(\frac{K_D L - K_R D_0 + K_D D_0}{K_D L} \right) \frac{K_R}{K_D} \right] \quad \dots(8.6)$$

and the critical or max. oxygen deficit is given as :

$$D_c = \frac{K_D L}{K_R} \left[10 \right]^{-K_D t_c} \quad \dots(8.7)$$

The constant $\frac{K_R}{K_D}$ is sometimes represented by f , called self-purification constant, the values of which are given in Table 8.5.

Table 8.5. Values of Self Purification Constant ($f = \frac{K_R}{K_D}$)

S. No.	Type of water body	Value of f
1.	Small ponds and back waters	0.5—1.0
2.	Sluggish streams, large lakes and impounding reservoirs	1.0—1.5
3.	Large streams of low velocity	1.5—2.0
4.	Large streams of normal velocity	2.0—3.0
5.	Swift streams	3.0—5.0
6.	Rapids and waterfalls	Over 5.0

Using $\frac{K_R}{K_D}$ as f , the Eq. (8.6) becomes as

$$t_c = \frac{1}{K_D(f-1)} \log \left[\left\{ 1 - (f-1) \frac{D_0}{L} \right\} f \right] \quad \dots(8.8)$$

and equation (8.7) becomes

$$D_c = \frac{L}{f} \left[10 \right]^{-K_D t_c} \quad \dots(8.9)$$

Taking log, we get

$$\log D_c = \log \frac{L}{f} - K_D \cdot t_c \quad \dots(8.10)$$

Substituting the value of t_c from Eq. (8.8) in Eq. (8.10), we get

$$\log D_c = \log \frac{L}{f} - \frac{K_D \cdot 1}{K_D(f-1)} \log \left[f \left\{ 1 - (f-1) \frac{D_0}{L} \right\} \right]$$

$$\text{or} \quad \log D_c = \log \frac{L}{f} - \frac{1}{(f-1)} \log \left[f \left\{ 1 - (f-1) \frac{D_0}{L} \right\} \right]$$

$$\text{or} \quad (f-1) \left[\log \frac{L}{f} - \log D_c \right] = \log \left[f \left\{ 1 - (f-1) \frac{D_0}{L} \right\} \right]$$

$$\text{or} \quad \log \left[\frac{L}{D_c} \right]^{f-1} = \log \left[f \left\{ 1 - (f-1) \frac{D_0}{L} \right\} \right]$$

$$\text{or} \quad \left(\frac{L}{D_c \cdot f} \right)^{f-1} = f \left[1 - (f-1) \frac{D_0}{L} \right] \quad \dots(8.11)$$

This is the important first stage equation in which L is the B.O.D. of the mixture of sewage and stream, and f (K_D and K_R also) corresponds to the temperature of the mixture of sewage and stream at the outfall.

The above equations are of practical value in predicting the oxygen content at any point along a stream, and thus help us in estimating the degree of waste treatment required, or of the amount of dilution necessary, in order to maintain a certain D.O. in the stream.

A few examples showing the use of these eqns. have been solved below.

Example 8.1. The sewage of a town is to be discharged into a river stream. The quantity of sewage produced per day is 8 million litres, and its B.O.D. is 250 mg/l. If the discharge in the river is 200 l/s and if its B.O.D. is 6 mg/l, find out the B.O.D. of the diluted water.

Solution. Sewage discharge = Q_s

$$= \frac{8 \times 10^6}{24 \times 60 \times 60} \text{ l/s.} = 92.59 \text{ l/s.}$$

Discharge of the river = $Q_R = 200 \text{ l/s}$

B.O.D. of sewage = $C_s = 250 \text{ mg/l}$

B.O.D. of river = $C_R = 6 \text{ mg/l.}$

Using equation (8.1), we have

B.O.D. of the diluted mixture

$$= C = \frac{C_S \cdot Q_S + C_R \cdot Q_R}{Q_S + Q_R}$$

$$\text{or } C = \frac{250 \times 92.59 + 6 \times 200}{92.59 + 200} = 83.21 \text{ mg/l. Ans.}$$

Example 8.2. In the above example, what should be the river discharge, if it is desired to reduce the B.O.D. of diluted water to 20 mg/l.

Solution. Here $C = 20 \text{ mg/l}$

$$\therefore 20 = \frac{250 \times 92.59 + 6 \times Q_R}{92.59 + Q_R}$$

$$\text{or } Q_R = 1521 \text{ l/s. Ans.}$$

Example 8.3. A city discharges 1500 litres per second of sewage into a stream whose minimum rate of flow is 6000 litres per second. The temperature of sewage as well as water is 20°C . The 5 day B.O.D. at 20°C for sewage is 200 mg/l and that of river water is 1 mg/l. The D.O. content of sewage is zero, and that of the stream is 90% of the saturation D.O. If the minimum D.O. to be maintained in the stream is 4.5 mg/l, find out the degree of sewage treatment required. Assume the de-oxygenation coefficient as 0.1, and re-oxygenation coefficient as 0.3.

Solution. From the table given at the end of the book in Appendix A-3, the value of saturation D.O. at 20°C is found out as 9.17 mg/l.

D.O. content of the stream

= 90% of the saturation D.O.

$$= \frac{90}{100} \times 9.17 = 8.25 \text{ mg/l.}$$

D.O. of mix at the start point (i.e. at $t = 0$)

$$= \frac{8.25 \times 6000 + 0 \times 1500}{6000 + 1500} \quad (\because \text{D.O. of sewage is zero})$$

$$= 8.6 \text{ mg/l}$$

$\therefore D_0$ = initial D.O. deficit

$$= [\text{Saturation D.O. at mix. temp.} - \text{D.O. of mix.}]$$

$$= 9.17 - 8.6 = 0.57 \text{ mg/l} \quad (\text{Assume instantaneous mixing})$$

Minimum D.O. to be maintained in the stream

$$= 4.5 \text{ mg/l.}$$

$\therefore$ Max. permissible saturation deficit (i.e., critical D.O. deficit)

$$= D_c = 9.17 - 4.5$$

$$= 4.67 \text{ mg/l.}$$

Now, using equations (8.11), the first stage B.O.D. of mixture of sewage and stream (L) is given by

$$\left[\frac{L}{D_c f} \right]^{f-1} = f \left[1 - (f-1) \frac{D_0}{L} \right]$$

Substituting the values as :

$$D_0 = 2.57 \text{ mg/l and } D_c = 4.67 \text{ mg/l}$$

$$f = \frac{K_R}{K_D} = \frac{0.3}{0.1} = 3$$

$$\text{we get } \left[\frac{L}{4.67 \times 3} \right]^{3-1} = 3 \left[1 - (3-1) \frac{2.57}{L} \right]$$

$$\text{or } \left[\frac{L}{14.01} \right]^2 = 3 \left[1 - \frac{5.14}{L} \right]$$

Solving by hit and trial, we get the value

$$L = 21.1 \text{ mg/l}$$

Now, using $Y_t = L[1 - 10^{-K_D t}]$, we have

Max. permissible 5 day B.O.D. of the mix (at 20°C)

$$Y_5 = 21.1 [1 - 10^{-0.1 \times 5}] \quad (\text{where } K_D \text{ at } 20^\circ\text{C} = 0.1)$$

$$= 14.43 \text{ mg/l.}$$

Now, using equation (8.1), we have

$$C = \frac{C_S Q_S + C_R Q_R}{Q_S + Q_R}$$

where C stands for concentrations of B.O.D.

Substituting the values, we get

$$14.43 = \frac{C_S \times 1500 + 1 \times 6000}{1500 + 6000}$$

where C_S will represent the permissible B.O.D.₅ (at 20°C of course) of the discharged wastewater.

Solving, we get

$$C_S = 68.16 \text{ mg/l.}$$

$\therefore$ Degree of treatment required (per cent)

$$= \frac{\text{Original B.O.D. of sewage} - \text{Permissible B.O.D.}}{\text{Original B.O.D.}} \times 100$$

$$= \frac{200 - 68.16}{200} = \frac{131.84}{200}$$

$$= 65.9\% \text{ Ans.}$$

Example 8.4. A city discharges 100 cumecs of sewage into a river, which is fully saturated with oxygen and flowing at the rate of 1500 cumecs during its lean days with a velocity of 0.1 m/sec. The 5-days BOD of sewage at the given temperature is 280 mg/l. Find when and where the critical D.O. deficit will occur in the downstream portion of the river, and what is its amount. Assume coefficient of purification of the stream (f) as 4.0, and coefficient of de-oxygenation (K_D) as 0.1.

Solution. The initial D.O. of river

$$= \text{Saturation D.O. at the given temp.} = 9.2 \text{ mg/l (say)}$$

D.O. of mix at $t = 0$ i.e., at start

$$= \frac{9.2 \times 1500 + 0 \times 100}{1500 \times 100} \quad (\text{assuming that D.O. of sewage is nil})$$

$$= 8.62 \text{ mg/l}$$

Initial D.O. deficit of the stream

$$= D_0 = 9.2 - 8.62 = 0.58 \text{ mg/l}$$

Also, 5-day BOD of the mixture of sewage and stream is given by

$$C = \frac{C_s Q_s + C_R Q_R}{Q_s + Q_R}$$

$$= \frac{280 \times 100 + 0 \times 1500}{100 + 1500}$$

$$= \frac{280 \times 100}{1600} = 17.5 \text{ mg/l.}$$

$\therefore$ 5 day BOD of mix at the given temp. $= Y_5 = 17.5 \text{ mg/l}$

$$Y_5 = L \left[1 - (10)^{-K_D \times 5} \right] \text{ and } K_D = 0.1 \text{ (at } 20^\circ\text{C)}$$

$\therefore$ The ultimate BOD of the mix (i.e. L)

$$= \frac{17.5}{0.684} = 25.58 \text{ mg/l.}$$

Now, using equation (8.11), we have

$$\left[\frac{L}{D_c \cdot f} \right]^{f-1} = f \left[1 - (f-1) \frac{D_0}{L} \right]$$

$$\text{or } \left[\frac{25.58}{D_c \times 4} \right]^3 = 4 \left[1 - \frac{3 \times 0.58}{25.58} \right]$$

$$\text{or } D_c = 4.12 \text{ mg/l. Ans.}$$

Now, from equation (8.8), we have

$$t_c = \frac{1}{K_D(f-1)} \log_{10} \left[f \left\{ 1 - (f-1) \frac{D_0}{L} \right\} \right]$$

$$\text{or } t_c = \frac{1}{0.1(4-1)} \log_{10} \left[4 \times \left\{ 1 - \frac{3 \times 0.58}{25.58} \right\} \right]$$

$$= \frac{1}{0.3} \times 0.571 = 1.905 \text{ days.}$$

$$\text{Now, distance} = \text{Velocity of river} \times \text{Travel time}$$

$$= 0.1 \text{ m/sec} \times (1.905 \times 24 \times 60 \times 60 \text{ sec})$$

$$= 16,460 \text{ m} = 16.46 \text{ km}$$

Hence, the most critical deficit will occur after 1.905 days and at point 16.46 km downstream of the point of sewage disposal. **Ans.**

Example 8.5. A town with a population of 30,000 has to design a sewage treatment plant to handle industrial as well as domestic wastewaters of the town. A sanitary survey revealed the following:

Dairy wastes of 3 million litres per day with BOD of 1100 mg/l, and sugar mill waste of 2.4 million litres per day with BOD of 1500 mg/l are produced. In addition, domestic sewage is produced at the rate of 240 litres per capita per day. The per capita BOD of domestic sewage being 72 gm/day. An overall expansion factor of 10 per cent to be provided. The sewage effluents are to be discharged to a river stream with a minimum dry weather flow of 4500 litre per second and a saturation dissolved oxygen content of 9 mg/l. It is necessary to maintain a dissolved oxygen content of 4 mg/l in the stream. Determine the degree of treatment required to be given to the sewage. Assume suitable values of coefficients of de-oxygenation and re-oxygenation.

Solution. Per capita B.O.D. of the domestic sewage

$$= 72 \text{ gm/day} = 72 \times 1000 \text{ mg/day.}$$

The per capita sewage produced

$$= 240 \text{ litre/day.}$$

$\therefore$ B.O.D. per litre of the domestic sewage

$$= \frac{72 \times 1000}{240} \text{ mg/l.} = 300 \text{ mg/l.}$$

Amount of domestic wastewater produced per day

$$= 30,000 \times 240 \text{ litres} = 7.2 \text{ million litres}$$

Net B.O.D. of all wastewaters (i.e. domestic + industrial)

$$= \left[\frac{7.2 \times 300 + 3 \times 1100 + 2.4 \times 1500}{7.2 + 3 + 2.4} \right] = 718 \text{ mg/l.}$$

Total wastewater discharge

$$= \frac{\text{Vol. of wastewaters entering per day}}{\text{No. of secs in 1 day}}$$

$$= \frac{3 \text{ MI} + 2.4 \text{ MI} + 7.2 \text{ MI}}{1 \times 24 \times 60 \times 60 \text{ sec}}$$

$$= \frac{12.6 \times 10^6}{24 \times 3600} \text{ l/s} = 145.8 \text{ l/s}$$

Total wastewater discharge with 10% expansion factor

$$= 1.1 \times 145.8 \text{ l/s} = 160 \text{ l/s}$$

Initial D.O. of saturated stream water

$$= 9 \text{ mg/l (i.e. saturation D.O. as given)}$$

$\therefore$ D.O. of mixture at $t = 0$ i.e., at start point

$$= \frac{\text{D.O. of river} \times Q_R + \text{D.O. of sewage} \times Q_S}{Q_R + Q_S}$$

$$= \frac{9 \times 4500 + 0 \times 160}{4500 + 160}$$

(Assuming that the D.O. of wastewaters is nil)

$$= 8.69 \text{ mg/l}$$

∴ Initial D.O. deficit

$$= D_0 = 9 - 8.69$$

(assuming instantaneous mixing)

$$= 0.31 \text{ mg/l}$$

Also, critical D.O. deficit, i.e. allowable max. D.O. deficit

$$= D_c = 9 - 4.0$$

$$= 5 \text{ mg/l}$$

Now, using eqn. (8.11), we have

$$\left[\frac{L}{5 \times 3} \right]^2 = f \left[1 - (f - 1) \frac{D_0}{L} \right]$$

$$\text{where } D_c = 5 \text{ mg/l,}$$

$$D_0 = 0.31 \text{ mg/l,}$$

$$K_D = 0.1; K_R = 0.3; f = 3$$

(assumed values at mix. temp.)

$$\therefore \left[\frac{L}{5 \times 3} \right]^2 = 3 \left[1 - \frac{2 \times 0.31}{L} \right]$$

Solving by hit and trial,

$$L = 25.65 \text{ mg/l}$$

Max. permissible 5 day B.O.D. of mix at mix temp.

$$= Y_5 = L \left[1 - (10)^{-0.1 \times 5} \right] \quad (K_D \text{ at mix temp. is assumed} = 0.1)$$

$$= 0.684 L$$

$$= 0.684 \times 25.65 = 17.54 \text{ mg/l}$$

Using eqn. (8.1) as

$$C = \frac{C_S Q_S + C_R Q_R}{Q_S + Q_R}$$

$$\text{we get } 17.54 = \frac{C_S + 160 + 0 \times 4500}{160 + 4500}$$

where C_S = Max. permissible B.O.D.₅ of waste-waters

$$\text{or } C_S = 511 \text{ mg/l.}$$

∴ Permissible B.O.D. of wastewaters

$$= 511 \text{ mg/l}$$

Initial B.O.D. of city wastewaters

$$= 719 \text{ mg/l}$$

∴ Degree of treatment reqd.

$$= \frac{719 - 511}{719} = 28.93\% \text{ Ans.}$$

Example 8.6. In the previous example, determine what should be the dilution ratio, if no treatment was required, and thus determine the river discharge for such a condition.

Solution. When no treatment is required, the value of max. permissible BOD₅ of wastewaters, i.e. C_S should be 719, Q_R can then be determined as:

$$17.54 = \frac{719 \times 160 + 0 \times Q_R}{160 + Q_R}$$

$$\text{or } 17.54 [160 + Q_R] = 719 \times 160$$

$$\text{or } 160 + Q_R = \frac{719 \times 160}{17.54} = 6559$$

$$\text{or } Q_R = 6399 \text{ l/s (say). Ans.}$$

$$\text{Dilution ratio} = \frac{6399}{160} = 39.99; \text{ Say 40 times.}$$

Hence when the dilution ratio is 40 and the minimum river discharge is 6400 l/s, no treatment will be required. Ans.

[Note. Strictly speaking, when Q_R increases, D_0 will reduce, increasing Y_5 , needing repeat of calculations, to obtain precise results. But the effect will be very small and on safer side, and hence is generally ignored.]

Example 8.7. A waste water effluent of 560 l/s with a BOD = 50 mg/l, DO = 3.0 mg/l and temperature of 23°C enters a river where the flow is 28 m³/sec, and BOD = 4.0 mg/l, DO = 8.2 mg/l, and temperature of 17°C. k_1 of the waste is 0.10 per day at 20°C. The vel. of water in the river downstream is 0.18 m/s and depth of 1.2 m. Determine the following after mixing of waste water with the river water:

(i) Combined discharge;

(ii) BOD;

(iii) DO; and

(iv) Temperature.

(Civil Services, 1981)

Solution.

Particulars of
Sewage thrown

$$Q_S = 560 \text{ l/s}$$

$$= 0.56 \text{ m}^3/\text{sec}$$

Concentrations (C_S)

$$\text{BOD} = 50 \text{ mg/l}$$

$$\text{DO} = 3.0 \text{ mg/l}$$

$$\text{Temp.} = 23^\circ\text{C}$$

$$k_1 \text{ at } 20^\circ = 0.1 \text{ per day}$$

(i) Combined discharge

$$= Q_S + Q_R$$

$$= 0.56 + 28 = 28.56 \text{ m}^3/\text{sec. Ans.}$$

Now, using equation (8.1), for conc. of mix as

$$C = \frac{C_S \cdot Q_S + C_R \cdot Q_R}{Q_S + Q_R}, \text{ we have}$$

(ii) BOD of mix

$$= \frac{50 \times 0.56 + 4.0 \times 28}{0.56 + 28} = \frac{140}{28.56} = 4.9 \text{ mg/l. Ans.}$$

(iii) DO of mix

$$= \frac{3.0 \times 0.56 + 8.2 \times 28}{0.56 + 28} = 8.098 \text{ mg/l Ans.}$$

(iv) Temp. of mix

$$= \frac{23 \times 0.56 + 17 \times 28}{0.56 + 28} = 17.12^\circ\text{C. Ans.}$$

Example 8.8. 125 cumecs of sewage of a city is discharged in a perennial river which is fully saturated with oxygen and flows at a minimum rate of 1600 cumecs with a minimum velocity of 0.12 m/sec. If the 5 day BOD of the sewage is 300 mg/l, find out where the critical DO will occur in the river. Assume:

(i) the coefficient of purification of the river as 4.0,

(ii) the ultimate BOD as 125% of the 5 day BOD of the mixture of sewage and river water.

(iii) Saturation DO of river = 9.2 mg/l

Solution. Saturation D.O. Concentration of the given river

= 9.2. (given in assumption iii)

The D.O. of the river at the mixing point after disposal of sewage (D)

$$= \frac{125 \times 0 + 1600 \times 9.2}{125 + 1600} = 8.53 \text{ mg/l}$$

Initial D.O. deficit (D_0) = $D_s - D$

$$= 9.2 - 8.53 = 0.67 \text{ mg/l.}$$

BOD₅ of the river at the mixing point after disposal of sewage (Y_5)

$$= \frac{125 \times 300 + 1600 \times 0}{125 + 1600} = 21.74 \text{ mg/l}$$

The ultimate BOD of river (mix) at mixing point (L)

$$= 125\% \text{ BOD}_5 \quad [\text{as per given in assumption (ii)}]$$

$$= 1.25 \times 21.74 = 27.17 \text{ mg/l.}$$

Now, using eqn. (7.16), we have

$$\text{BOD}_5 = L [1 - (10)^{-K_D \times 5}]$$

$$\text{or } 21.74 = 27.17 [1 - (10)^{-K_D \times 5}]$$

$$\text{or } 0.8 = [1 - (10)^{-5K_D}]$$

$$\text{or } (10)^{-5K_D} = 0.20$$

$$\text{or } -5K_D \log 10 = \log 0.20$$

$$\text{or } K_D = 0.14.$$

Now, using eqn. (8.8) as

$$t_c = \frac{1}{K_D(f-1)} \log \left[\left\{ 1 - (f-1) \frac{D_0}{L} \right\} f \right], \text{ where } f = 4.0 \text{ (given)}$$

$$\therefore t_c = \frac{1}{0.14(4-1)} \log \left[\left\{ 1 - (4-1) \frac{0.67}{27.17} \right\} 4 \right] = 1.354 \text{ days.}$$

The distance along the river, where the critical D.O. deficit will occur

$$= S = \text{Velocity} \times \text{Time}$$

$$= 0.12 \text{ m/sec} \times (1.354 \times 24 \times 3600 \text{ sec})$$

$$= 14.04 \text{ km ; Say 14 km}$$

Hence, critical D.O. deficit will occur at 14 km downstream of the sewage disposal point. Ans.

Example 8.9. A wastewater treatment plant disposes of its effluents into a stream at a point A. Characteristics of the stream at a location fairly upstream of A and of the effluent are as below:

Item	Units	Effluent	Stream
Flow	m ³ /s	0.20	0.50
Dissolved oxygen	mg/l	2.00	8.00
Temperature	°C	26	22
BOD ₅ at 20°C	mg/l	40	3

Assume that the deoxygenation constant K_1 at 20°C (base e) = 0.20 d⁻¹ and the re-aeration constant K_2 at 20°C (base e) = 0.40 d⁻¹ for the mixture. Equilibrium concentration of dissolved oxygen C_s for the fresh water is as follows:

Temperature °C	18	20	22	23	24	25	26
C_s (mg/l)	9.54	9.17	8.99	8.83	8.53	8.38	8.22

The velocity of the stream downstream of the point A is 0.2 m/s. Determine the critical oxygen deficit and its location.

[Use temperature coefficients of 1.04 for K_1 and 1.02 for K_2]

(Civil Services, 1989)

Solution. K_1 at 20°C (base e)

$$= 0.2 \text{ d}^{-1} = 0.2 \text{ per day}$$

∴ K_D at 20°C (base 10)

$$= \frac{K_1}{2.3} = 0.434 K_1$$

$$= 0.434 \times 0.2 \text{ per day} = 0.087 \text{ per day.}$$

Similarly, K_R at 20°C

$$= 0.434 \times 0.4 \text{ d}^{-1} = 0.174 \text{ per day.}$$

The formulas to be used in this question for converting K_D and K_R at any other temperature ($T^\circ\text{C}$) will be

$$K_{D(T^\circ)} = K_{D(20^\circ)} \left[1.04 \right]^{T^\circ - 20^\circ}; \text{ and}$$

$$K_{R(T^\circ)} = K_{R(20^\circ)} \left[1.02 \right]^{T^\circ - 20^\circ} \quad (\text{as per the given values})$$

(i) We will now determine DO, BOD and temperature of mixture as below:

$$\text{DO of mixture} = \frac{\text{DO of sewage} \times Q_s + \text{DO of river} \times Q_R}{Q_s + Q_R}$$

$$= \frac{2 \times 0.20 + 8 \times 0.50}{0.20 + 0.50}$$

$$= 6.29 \text{ mg/l.}$$

BOD₅ of mixture

(i.e. 5 day BOD at 20°C)

$$= \frac{40 \times 0.20 + 3 \times 0.50}{0.20 + 0.50}$$

$$= 13.57 \text{ mg/l.}$$

Temperature of mixture

$$= \frac{26 \times 0.20 + 22 \times 0.50}{0.20 + 0.50} = 23.14^\circ\text{C}$$

(ii) Ultimate BOD of mixture (L)

$$L = \frac{Y_0 \text{ (i.e. 5 day BOD of mixture at } 20^\circ\text{C})}{1 - (10)^{-K_D \times 5}}$$

where K_D is at $20^\circ\text{C} = 0.087$ per day

$$= \frac{13.57}{1 - (10)^{-0.087 \times 5}} = \frac{13.57}{0.633} = 21.45 \text{ mg/l.}$$

(iii) Initial D.O. Deficit of mixture,

D.O. of mixture = 6.29 mg/l

Saturation D.O. at mixture temperature of 23.14°C

= 8.79 (interpolated from given values)

$\therefore D_0 = \text{D.O. deficit}$

$$= 8.79 - 6.29 = 2.50 \text{ mg/l.}$$

(iv) Corrected values of K_D and K_R are :

$$K_{D(23.14^\circ)} = K_{D(20^\circ)} [1.04]^{T-20}$$

$$= 0.087 [1.04]^{3.14} = 0.098$$

$$K_{R(23.14^\circ)} = K_{R(20^\circ)} [1.02]^{T-20}$$

$$= 0.174 [1.02]^{3.14} = 0.185$$

(v) The time (t_c) after which critical D.O. deficit (D_c) occurs is given by eqn. (8.8) as

$$t_c = \frac{1}{K_D(f-1)} \log_{10} \left[\left\{ 1 - (f-1) \frac{D_0}{L} \right\} f \right]$$

where $K_R = 0.185$
 $K_D = 0.098$

$$\therefore f = \frac{K_R}{K_D} = \frac{0.185}{0.098} = 1.888$$

$$L = 21.45 \text{ mg/l}$$

$$D_0 = 2.5 \text{ mg/l.}$$

$$\therefore t_c = \frac{1}{0.098(1.888-1)} \log_{10} \left[\left(1 - \frac{0.888 \times 2.5}{21.45} \right) 1.888 \right]$$

$$= \frac{1}{0.098(0.888)} \times 0.228 = 2.625 \text{ days.}$$

(vi) Now, Distance = Velocity $\times$ Travel time

$$= 0.2 \text{ m/s} \times (2.625 \times 24 \times 60 \times 60 \text{ sec})$$

$$= 45.36 \text{ km. Ans.}$$

(vii) D_c is now given by eqn. (8.11) as

$$\left(\frac{L}{D_c \cdot f} \right)^{f-1} = f \left(1 - (f-1) \frac{D_0}{L} \right)$$

$$\text{or } \left(\frac{21.45}{D_c \times 1.888} \right)^{0.888} = 1.888 \left(1 - \frac{0.888 \times 2.5}{21.45} \right)$$

$$\text{or } \frac{21.45}{1.888 D_c} = \left(1.692 \right)^{\frac{1}{0.888}} = (1.692)^{1.126} = 1.808$$

$$\text{or } D_c = \frac{21.45}{1.888 \times 1.808} = 6.28 \text{ mg/l.}$$

Hence, the critical D.O. deficit equal to 6.28 mg/l occurs at 45.36 km downstream of A, after 2.625 days. Ans.

Example 8.10. A treated waste water is discharged at the rate of $1.5 \text{ m}^3/\text{sec}$ into a river of minimum flow $5 \text{ m}^3/\text{sec}$. The temperature of river flow and waste water flow may be assumed as 25°C . The BOD removal rate constant K_1 is $0.12/\text{d}$ (base 10). The BOD₅ at 25°C of the waste water is 200 mg/l , and that of the river water upstream of the wastewater outfall is 1 mg/l . The efficiency of waste water treatment is 80%. Evaluate the following :

(i) BOD₅ at 25°C , if river water receives untreated waste water

(ii) BOD₅ at 25°C if river water receives treated waste water

(iii) ultimate BOD of the river water after it receives treated waste water.

(Civil Services, 1993)

Solution.

Discharge of waste water = $Q_w = 1.5 \text{ m}^3/\text{s}$

Discharge of river = $Q_R = 5 \text{ m}^3/\text{s}$

Temperature = $T = 25^\circ\text{C}$

$$K_{D(25^\circ)} = K_1 = 0.12/\text{d.}$$

C_w = Conc. of BOD₅ for untreated waste water = 200 mg/l

C_R = Conc. of BOD₅ for river water = 1 mg/l

Using eqn. (8.1),

(i) Conc. of BOD₅ of the mixture if untreated waste water is discharged into the river

$$= C = \frac{C_W \cdot Q_W + C_R \cdot Q_R}{Q_W + Q_R} = \frac{200 \times 1.5 + 1 \times 5}{1.5 + 5}$$

$$= 46.92 \text{ mg/l. Ans.}$$

(ii) BOD_5 of the treated wastewater is given by

$C_{TW} = 20\%$ of the BOD_5 of untreated wastewater

($\because$ efficiency of wastewater treatment is 80%)

$$= 20\% \times C_W = 20\% \times 200 \text{ mg/l}$$

$$= 40 \text{ mg/l.}$$

BOD_5 of mixture if treated wastewater is discharged into the river

$$= C' = \frac{C_{TW} \cdot Q_W + C_R \cdot Q_R}{Q_W + Q_R}$$

$$= \frac{40 \times 1.5 + 1 \times 5}{1.5 + 5} = 10 \text{ mg/l. Ans.}$$

(iii) BOD_5 of river water after it receives treated wastewater

= 10 mg/l (as computed above)

Ultimate BOD of this mixture

$$= Y_u = L = ?$$

Using eqn. (7.16), we have

$$Y_{t(\text{day})} = L \left[1 - (10)^{-K_D \cdot t} \right]$$

$$\text{or } Y_5 = L \left[1 - (10)^{-0.12 \times 5} \right]$$

$$\text{or } 10 = L \left[1 - (10)^{-0.6} \right]$$

$$\text{or } L = 13.35 \text{ mg/l. Ans.}$$

8.4. Disposal of Wastewaters in Lakes and Management of Lake Waters

8.4.1. Lake Pollutants. Disposal of wastewaters in confined lakes or reservoirs, is much more harmful than its disposal in flowing streams and rivers. Water quality management in lakes is entirely different from that in rivers. It is in fact the **phosphorous** (a nutrient largely contained in industrial as well as domestic waste waters), which seriously affects the water quality of lakes; and is hence considered as the **prime lake pollutant**. *Oxygen demanding wastes may be the other important lake pollutants.* The *toxic chemicals* from industrial waste waters may also sometimes very adversely effect some special classes of the lakes. However, phosphorous (a nutrient) constitute the most important lake pollutant, and needs special study in water quality management of lakes.

A study of the lake systems is essential to understand the role of phosphorus in lake pollution. The study of lakes is called **limnology**.

8.4.2. Stratification in Lakes. The water of a lake gets stratified during summers and winters, as discussed below :

During summer season, the surface water of a lake gets heated up by sunlight and warm air. This warm water being lighter, remains in upper layers near the surface, until mixed downward by turbulence from winds, waves, boats and other forces. Since such turbulence extends only to a limited depth from below

the water surface, the top layers of water in the lake become well mixed and aerobic. This warmer, well mixed and aerobic depth of water is called **epilimnion zone**. The lower depth, which remains cooler, poorly mixed and anaerobic, is called the **hypolimnion zone**. There may also exist an intermediate zone or a dividing line, called **thermocline or metalimnion**, as shown in Fig. 8.3 (a).

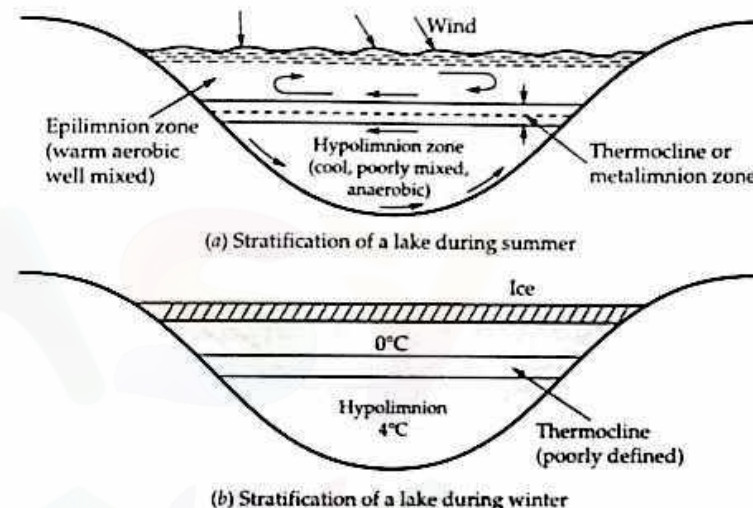


Fig. 8.3. Stratification of lakes.

The change from epilimnion to hypolimnion can be experienced while swimming in a lake. When you swim in top layers horizontally, you will feel the water warmer ; and if you dive deeper, you will find the water cooler. **The change line will represent monoclone.** The depth of epilimnion zone depends upon the size of the lake for the same temperature changes. It may be as little as 1 m in small lakes and may be as large as 20 m or more in large lakes. This depth also depends upon the storm activity in the spring when stratification is developing. A major storm at the right time will mix the warmer water to a substantial depth and thus create a deeper epilimnion zone than its normal depth. *Once formed, lake stratification is very stable, and can only be broken by exceedingly violent storms.* As a matter of fact, as summer progresses, this stability increases, the epilimnion continues to warm, while the hypolimnion remains at a fairly constant temperature.

With the onset of winter season, the epilimnion cools, until it is more dense than the hypolimnion. The surface water then sinks, causing 'overturning'. The water of the hypolimnion rises to the surface, where it cools and again sinks. *The lake, thus becomes completely mixed*, making it quite aerobic. In regions of freezing temperatures, when the temperature drops below 4°C, the above process of overturning (or *turn over*) stops, because water is most dense at this temperature. Further cooling or freezing of the water surface results in winter stratification, as shown in Fig. 8.3 (b).

With the passing of winters and commencement of spring season, the surface water again warms up and overturns, and lake becomes completely mixed. The lakes in regions of temperate climate will, therefore, have at least one, if not two, cycles of stratification and *turn-over* every year.

8.4.3. Biological Zones in Lakes. Lakes have been found to exhibit distinct zones of biological activity, largely determined by the availability of light and oxygen. The most important biological zones are :

- (i) *Euphotic zone* ;
- (ii) *Littoral zone* ; and
- (iii) *Benthic zone*.

These zones are shown in Fig. 8.4, and briefly discussed below :

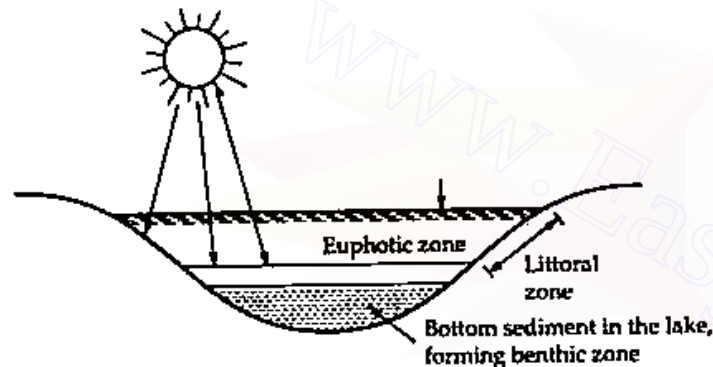


Fig. 8.4. Biological zones in a lake.

8.4.3.1. Euphotic zone. The upper layer of lake water through which sunlight can penetrate, is called the euphotic zone. All plant growth occurs in this zone. In deep water, algae grow as the most important plants, while rooted plants grow in shallow water near the shore.

The depth of the euphotic zone is reduced by the turbidity, which blocks sunlight penetration. In most lakes, the turbidity is due to algal growth ; although colour and suspended clays may substantially reduce sunlight penetration in some lakes. It is important to note that the bottom of euphotic zone only rarely coincides with the thermocline.

The depth of the euphotic zone can be approximated and measured by a simple device, called the *Secchi disk*, shown in Fig. 8.5. This disk is lowered into the lake water until the observer can no longer distinguish between the boundaries between its white and black quadrants. This depth, called the *Secchi disk depth*, does not correspond exactly to the depth of euphotic zone, but provides a good approximation of its extent. This *Secchi disk depth* also provides a measure of the aesthetic quality of water. *The greater is the secchi disk depth, the clearer is the water.*

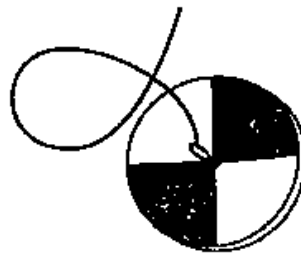


Fig. 8.5. Secchi disk.

8.4.3.2. Littoral zone. The shallow water near the shore, in which rooted plants grow, is called the littoral zone. The extent of the littoral zone depends on the slope of the lake bottom, and the depth of the euphotic zone. The littoral zone cannot extend deeper than the euphotic zone, as shown in Fig. 8.4.

8.4.3.3. Benthic zone. The bottom sediments in a lake comprises what is called the benthic zone. As the organisms living in the overlying water die, they settle down to the bottom, where they are decomposed by the organisms living in the benthic zone. Bacteria are always present in this zone. The presence of higher life forms, such as worms, insects and crustaceans however, depends upon the availability of oxygen at the lake bottom.

8.4.4. Productivity of a Lake. The productivity of a lake is defined as a measure of its ability to support a food chain. Since the algae forms the base of this food chain, which is required by the other forms of living organisms to thrive, its presence measures the lake productivity. Although, more productive lakes will have a higher fish population, yet since such a lake will have to support heavier algal growth, its water quality will be reduced, because of the undesirable changes that occur as algal growth increases. Moreover, due to reduced water quality, the most desirable fish which flourish in better quality waters, will be lost.

A lake's productivity level may, therefore, be determined by measuring the amount of algal growth that can be supported by the available nutrients. This productivity level of a lake is thus, reflective of the water quality of the lake. *As the productivity of a lake increases, its water quality reduces.* Because of the important role productivity plays in determining water quality, it forms a basis for classifying lakes.

Depending upon the increasing level of its productivity, the lakes may be classified as :

- (i) *Oligotrophic lakes* ;
- (ii) *Mesotrophic lakes* ;
- (iii) *Eutrophic lakes* ; and
- (iv) *Senescent lakes*.

These four types are discussed below :

8.4.4.1. Oligotrophic lakes. Oligotrophic lakes have a low level of productivity due to a severely limited supply of nutrients to support algal growth. The water of such a lake is, therefore, clear enough as to make its bottom visible upto considerable depth. In such a case, the euphotic zone often extends into the hypolimnion, which is aerobic. Oligotrophic lakes, therefore, support cold water game fish. An important example of such a lake is offered by the *Tahoe lake* on California-Nevada border in USA.

8.4.4.2. Mesotrophic lakes. The lakes having medium productivity levels, with medium growth of algae and turbidity, are usually classified as mesotrophic lakes. In such a lake, *although substantial depletion of oxygen may occur in the hypolimnion, yet it remains aerobic.*

8.4.4.3. Eutrophic lakes. Eutrophic lakes do have a high level of productivity, because of an abundant supply of algal nutrients. The flourishing growth of algae make the lake water to be highly turbid, so that the euphotic zone may extend only partially into the epilimnion. As the algae die, they settle to the lake bottom, where they are decomposed by benthic

organisms. In a eutrophic lake, this decomposition is sufficient to deplete the hypolimnion of oxygen during summer stratification.

Because the hypolimnion is anaerobic during summer, such a lake will only support warm water fish. As a matter of fact, all types of cold water fish are driven out of the lake, before the hypolimnion becomes anaerobic, because they generally require dissolved oxygen levels of at least 5 mg/L. Highly eutrophic lakes may also have large mats of floating algae that typically impart unpleasant tastes and odours to the water.

8.4.4.4. Senescent lakes. These are very old shallow lakes, having thick organic sediment deposits at their bottoms. Rooted water plants abundantly grow in such shallow ponds, which ultimately become *marshes*.

8.4.5. Eutrophication of Lakes. Eutrophication is a natural process under which lakes get infested with algae and silt up gradually to become shallower and more productive through the entry and cycling of nutrients like carbon, nitrogen and phosphorus. The initially clear water of oligotrophic lakes, therefore, gradually turns into mesotrophic, eutrophic, and senescent stages, due to continuous entry of silt and nutrients.

This natural process of eutrophication in fact can always get its carbon and nitrogen requirements from the atmospheric gases like CO_2 and NO_2 ; while the requirement of phosphorus is met by its presence in natural run off due to disintegration of rocks, which produce phosphorus. The increased phosphorus in lake water, entering either through the agricultural use of its drainage area or through the entry of domestic and industrial waste waters, will cause accelerated eutrophication of lakes, and is called the **cultural eutrophication**. The natural process of eutrophication thus, gets intensified by the entry of wastewater discharge into the lakes, causing permanent damage to its water quality and leading to its siltation. *Eutrophic lakes are, however, not necessarily polluted, but pollution contributes to eutrophication.*

The water quality management for a lake, therefore, aims at reducing its eutrophication to atleast at its natural level, by controlling and reducing the input of phosphorus in the lake water. Once the input of phosphorus, (which directly controls the production of *chlorophyll* and hence the algal development) is reduced, the phosphorus concentration will gradually fall down, as the existing phosphorus will get buried into the sediment or is flushed out of the lake along with the excess river flow feeding the lake.

Strategies suggested for reducing eutrophication by removal of phosphorus by its precipitation by addition of lime to the lake water; or by dredging out the phosphorus rich sediment from the lake bottom, will not succeed until the entry of phosphorus is not curtailed. It, therefore, becomes imperative to stop the entry of sewage and industrial wastewaters, which largely contain phosphorus, into the lakes. Even the treated sewage will not be low in phosphorus, since phosphorus can be removed only by costly advanced methods of waste treatment. *The lake waters should, therefore, not be used even for discharge of treated sewage.* The phosphorus content of the domestic sewage can, however, be reduced by banning the use of phosphorus rich polyphosphates in detergents, which presently contribute heavy input of

excreta. Several advanced countries have, therefore, banned the use of phosphates in detergents and soaps. India has yet to follow suit.

The continuous entry of seeping septic tank effluents from cottages and houses built adjoining the lakes, through the sub-soil towards the lake, will also cause phosphorus pollution in the lake, after the soil gets too saturated to absorb any further phosphorus, finally passing it on to the lake. The time it takes for phosphorus to break through to the lake depends on the type of soil, the distance to the lake, the amount of wastewater generated, and the concentration of phosphorus in the seeping wastewater. Entry of phosphorus through such sources should also be controlled to reduce cultural eutrophication of lakes, by collecting the effluents of septic tanks in sewers, to be carried up to the treatment plants, before disposing them off, safely.

The use of fertilizers in fields in the drainage area should also be controlled to reduce the entry of phosphorus through the surface run off flowing over such fields and finally entering the lakes. Treatment of such catchments to reduce soil erosion will also help in reducing phosphorus entry into the surface runoff.

8.5. Disposal of Wastewaters in Sea Water

Sea water normally contains 20% less oxygen than that contained in fresh water of a river stream. Moreover, sea water normally contains a large amount of dissolved matter. As such, the capacity of sea water to absorb sewage solids is not as high as that of fresh water of a stream. Moreover, sewage solids, when thrown into sea water, chemically react with the dissolved matter of sea water, resulting in precipitating some of the sewage solids, giving a milky appearance to the sea water and forming sludge banks. These sludge banks are undesirable, as they are likely to produce offensive hydrogen sulphide gas by reacting with the sulphate rich water of the sea.

As pointed out earlier, the oxygen content of sea water is less than that of fresh water, and also, its re-aeration is slower. However, since the sea contains too larger volumes of water, most of these deficiencies get removed, provided the sewage is taken deep into the sea and away from the coast line.

Since the specific gravity of sea water is greater than that of sewage, and temperature of sea water is lower than that of sewage, the lighter and the warmer sewage will rise up to the surface when thrown into the sea water. This will result in spreading of the sewage at the top surface of sea in a thin film or 'sleek'.

To prevent the backing up and spreading of sewage on the sea shore, the sewage should preferably be disposed off during low tides. Large sized tanks may, therefore, sometimes, be constructed to hold the sewage during high tides. Provision of a large sized sewer, grated with a non-return valve at the outfall end, is also an alternative to hold the sewage during high tides.

In all, the following points should be kept in mind while discharging sewage into the sea to avoid marine pollution:

- (i) The sewage should be discharged in deep sea only.
- (ii) In order to mix the sewage properly with sea water, the sewage should be released at a minimum depth of 3 to 5 metres below the water level, and by

taking it sufficiently inside (about $1\frac{1}{2}$ km) from the shore line. This measure will prevent the sewage from accumulating on the shore, and thus preventing nuisance to baths and recreation centres on the shores.

(iii) Before deciding the position of outfall point, the sea currents, wind direction, velocity, etc. should be thoroughly studied. The point of disposal should be such that the sewage is taken away from the shore by the winds, and not brought back near to the shore.

(iv) The outfall sewer should be placed on a firm rocky foundation, and encased in thick stone masonry, so as to properly protect it from wave action, floating debris, etc.

The discharge of wastewaters into the sea should, however be controlled in respect of the quality of the effluents, by adhering to the prescribed standards. The standards prescribed by BIS under IS : 1968—1976 are shown in Table 8.6.

Table 8.6. BIS (ISI) Standards for Wastewater Effluents to be Discharged into Marine Coasts

S. No.	Constituent Pollutant contained in the Wastewater Effluent	Tolerance Limit
(1)	(2)	(3)
1.	BOD ₅	100 mg/l
2.	COD	250 mg/l
3.	pH value	5.5 to 9.0
4.	Total suspended solids	100 mg/l
5.	Oil and grease	20 mg/l
6.	Fluorides (as F)	15 mg/l
7.	Ammoniacal Nitrogen (as N)	50 mg/l

Note. In addition to these major constituents, limits are prescribed for many trace metals and non-metals, as given in Table 8.3 (col. 5).

The standards prescribed for discharge of polluted waste waters into the marine coasts by GoI under Environmental (Protection) Rules, 1986 have already been given in (col. 5) of Table 8.3.

An Indian example of discharge of city's sewage into the sea can be seen in Mumbai city, where the *Love Grove Waste Water Treatment Facility Terminal* at Worli Mumbai, is disposing of the partially treated sewage at 3.5 km distance inside the sea, via. an underground *marine outfall* tunnel, at 65 m below the ground level, after removing the floating material and inorganic solids through the screens and aerated grit chambers. This STP (Sewage Treatment Plant) facility is designed for treating a peak flow of 1820 MLD. The sewage discharge from the area comprising of Church Gate on South to Dadar on North, Mumbai Harbour, Ray Road, Seweri on the East and Arabian Sea on the West, flows upto this STP site, and is lifted, at the Influent Pumping Station (IPS) containing seven duty pumps (with one additional standby unit), each having a designed capacity of 260 MLD each for a designed head of 12.5 m. Before being lifted, the sewage is made to pass through 2 No

openings = 100 mm) installed upstream of the IPS. The lifted sewage is then passed through 8 No. *fine screens* (size of openings = 20 mm), which discharge the sewage to 4 No. *aerated grit chambers* of size 34.5 m × 7 m × 5.1 m. The grit chambers are designed as spiral flow aeration tanks, provided with air diffusion tubes placed on one side of the tank. The compressed air is discharged at a pressure of 70 kN/m² @ 1500 m³/hr. The compressed air and the geometry of the tank induces a "spiral roll" that provides centrifugal force to assist in the removal of inorganic materials of size 0.2 mm in diameter or larger, with a sp. gravity of 2.65, thereby keeping organic matter of lower sp. gravity in suspension. The roll also "sweeps" the settled grit into a bottom hopper or collection trough, from where it is periodically removed.

The outflowing screened and dewatered sewage from the grit chambers flows to the sea through *marine outfall conduit*, normally by by-passing the *Effluent Pumping Station (EPS)*. At higher discharges from the IPS, sewage from the grit chambers spills over to the EPS, containing 5 centrifugal pumps of 520 MLD capacity each at 5.8 m head. As the water level rises in the EPS wet well, the pumps at the EPS are turned on. Once the EPS is discharging into the channel leading to *marine outfall*, the flow in the by-pass channel will backup, closing the by-pass flap gates. All flow will then be pumped through the EPS.

The sewage coming out of the EPS channel or the by-pass channel now enters into a *drop shaft* on shore, from which it flows into a 3 km long underground R.C.C. circular tunnel of 3.5 m diameter, constructed at an upward slope under the sea bed at a depth of about 65 m below the ground level. This underground tunnel is named as the *marine outfall*.

The outfalling 240 m end length of this tunnel is provided with 10 No riser pipes, each of 1 m diameter, capped just above the sea bottom with circular caps containing horizontal outlet ports, the elevation of which is about 1 m above the sea bottom above the layer of sediments suspended by waves. There are 10 outlet ports of size varying from 220 mm diameter to 280 mm diameter on each riser. As such, there are 100 outlets on 10 risers. They are at a depth of about 9 m from the mean sea level to maximise dilution in initial discharges, as they rise to the surface. At this selected discharge point in the sea, the direction of currents is such that the plume of sewage is taken away from the shore side to towards the deep sea side, and spreading the sewage on a wide area.

well
5M

DISPOSAL ON LAND

✓ 8.6. Disposal of Sewage Effluents on Land for Irrigation

In this method, the sewage effluent (treated or diluted) is generally disposed of by applying it on land. The percolating water may either join the water-table, or is collected below by a system of under-drains. This method can then be used for irrigating crops.

This method, in addition to disposing of the sewage, may help in increasing crop yields (by 33% or so) as the sewage generally contains a lot of fertilising minerals and other elements*. However, the sewage effluent before being used

*Fertilising elements like nitrogen, phosphate, potash, etc. do help in increasing the yields of cash crops like cotton, sugarcane, plantain, etc. However, crops to be eaten raw or which do not have any skin to be removed before eating, should not be grown on sewage farms, although this is seldom practised by the farmers.

as irrigation water, must be made safe. In order to lay down the limiting standards for sewage effluents, and the degree of treatment required, it is necessary to study as to what happens when sewage is applied on to the land as irrigation water.

When raw or partly treated sewage is applied on to the land, a part of it evaporates, and the remaining portion percolates through the ground soil. While percolating through the soil, the suspended particles present in the sewage are caught in the soil voids. If proper aeration of these voids is maintained, the organic sewage solids caught in these voids get oxidised by aerobic process. Such aeration and aerobic conditions will more likely prevail, if the soil is sufficiently porous and permeable (such as sands and porous loams). However, if the land is made up of heavy, sticky and fine grained materials (such as clay, rock, etc.), the void spaces will soon get choked up, and thus resulting in non-aeration of these voids. This will lead to the developing of non-aerobic decomposition of organic matter, and evolution of foul gases. Moreover, excessive clogging may also result in ugly ponding of sewage over the farm land, where mosquitoes may breed in large number, causing further nuisance.

Application of too strong or too heavy load of sewage will also similarly result in the quick formation of anaerobic conditions. The greater is the sewage load, more likely it will be for the soil to get clogged. Hence, if the sewage load is reduced either by diluting it or by pre-treating it, it may be possible to avoid the clogging of the soil pores. The degree of treatment required will, however, considerably depend upon the type of the soil of the land. *If this soil, to be irrigated, is sandy and porous, the sewage effluents may contain more solids and other wastes, and thus requiring lesser treatment, as compared to the case where the soil is less porous and sticky.*

The pretreatment process may be adopted by larger cities which can afford to conduct treatment of sewage; whereas the dilution technique may be adopted by smaller cities. When sewage is diluted with water for disposal for irrigation, too large volumes of dilution water are generally not needed, so as not to require too large areas for disposal. The extent of land area required for disposing a certain volume of sewage effluent can be worked out from the values given in Table 8.7.

Table 8.7. Recommended Doses* for Sewage Farming in India

Type of soil	Doses of sewage in cubic metres per hectare per day	
	Raw sewage	Settled sewage
Sandy	120—150	220—280
Sandy loam	90—100	170—220
Loam	60—80	110—170
Clayey loam	40—50	60—110
Clayey	30—45	30—60

*These quantities will be governed by the requirements of crops grown. These quantities can also be increased by laying a system of under-drains, and thus increasing the rate of percolation. The land area will, however, then act like a crude intermittent sand filter. But

Example 8.11. A town having population of 40,000 disposes sewage by land treatment. It gets a per capita assured water supply from waterworks at a rate of 130 l/day. Assuming that the land used for sewage disposal can absorb 80 m³ of sewage per hectare per day, determine the land area required, and its cost at the rate of ₹ 25,000 per hectare. Make suitable assumptions where needed.

Solution.

$$\text{Population} = 40,000$$

$$\text{Rate of water supply} = 130 \text{ l/day/person}$$

$$\text{Total water supplied per day}$$

$$= 40,000 \times 130 \text{ l}$$

$$= 52,00,000 \text{ litres} = 5,200 \text{ cu. m.}$$

Assuming that 80% of this water appears as sewage, we have

$$\text{The quantity of sewage produced per day}$$

$$= 0.8 \times 5200 = 4160 \text{ cum.}$$

$$\therefore \text{Area of land reqd. for disposing sewage}$$

$$= \frac{4160}{80} = 52 \text{ hectares.}$$

Providing 50% extra land for rest and rotation, we have

$$\text{The total land area required}$$

$$= 1.5 \times 52 = 78 \text{ hectares. Ans.}$$

$$\text{Cost of land involved}$$

$$= ₹ 25,000 \times 78 = ₹ 19,50,000. \text{ Ans.}$$

Example 8.12. A town disposes sewage by land treatment. It has a sewage farm of area 150 hectares. The area included an extra provision of 50% for rest and rotation. The population of the town being 50,000 and rate of water supply 140 litres per capita per day. If 75% of the water is converted into sewage, determine the consuming capacity of the soil.

Solution. Quantity of water produced per day

$$= 50,000 \times 140 \text{ litres/day}$$

$$= 70,00,000 \text{ l/day} = 7,000 \text{ cu-m/day.}$$

$$\text{Quantity of sewage produced}$$

$$= 0.75 \times 7000 = 5,250 \text{ cu-m/day.}$$

$$\text{Area of farm land provided}$$

$$= 150 \text{ hectares including 50\% additional reserve for rest and rotation.}$$

$$\therefore \text{Area provided for immediate need}$$

$$= \frac{150}{1.5} = 100 \text{ hectares.}$$

$$100 \text{ hectares is capable of passing } 5250 \text{ cum per day.}$$

$$\therefore \text{Consuming capacity of soil}$$

$$= \frac{5250}{100}$$

$$= 52.5 \text{ cu-m per hectare per day. Ans.}$$

8.7. Quality Standards For Wastewater Effluents to be Discharged on Land For Irrigation

The Bureau of Indian Standards (BIS), previously known as Indian Standard Institution (ISI), has vide its Code IS : 3307-1965, laid down the tolerance limits for various polluting characteristics/constituents of wastewater effluents for their discharge on land for irrigation. These standards are based upon the quality of irrigation water required by the crops, and thus limit the concentrations of pollutants contained in sewage or industrial liquid wastes, which may prove harmful to the crops. The prescribed BIS standards are shown in table 8.8.

Table 8.8. BIS (ISI) Standards of Wastewater Effluents to be Discharged on Land for Irrigation

S. No.	Characteristic/constituent of Effluent wastewater	Tolerance limit as per IS : 3307-1965
(1)	(2)	(3)
1.	BOD ₅ at 20°C	500 mg/l*
2.	pH value	5.5 to 9.0
3.	Total Dissolved Solids (TDS)	2100 mg/l
4.	Oil and grease	30 mg/l
5.	Chlorides (as Cl)	600 mg/l
6.	Boron	2 mg/l
7.	Sulphates	1000 mg/l
8.	Percentage of Sodium with respect to total content of Sodium, Calcium, Magnesium and Potassium	60%
9.	Radioactive Materials	
	(i) α-emitters	10 ⁻⁹ μC/ml
	(ii) β-emitters	110 ⁻⁸ μC/ml

In order to make them legally enforceable, GOI has notified the standards of polluted effluents for discharge on land (for irrigation) under Environment (Protection) Rules 1986. These notified standards are shown in Table 8.9.

Table 8.9. Standards for Discharge of Polluted Effluents on Land for Irrigation under Environment (Protection) Rules, 1986

S. No.	Characteristics of effluent i.e. pollutant of waste water	Standards under Environment (Protection) Rules, 1986
(1)	(2)	(3)
1.	Colour and odour	All efforts should be made to remove colour and unpleasant odour as far as practicable
2.	BOD ₅ at 20°C	100 mg/l

(Contd.)

(1)	(2)	(3)
3.	Suspended Solids (SS)	200 mg/l
4.	pH Value	5.5 to 9.0
5.	Oil and grease	10 mg/l
6.	Arsenic (As)	0.2 mg/l
7.	Cyanide (as CN)	0.2 mg/l
8.	Radioactive materials	
	(a) Alpha emitters	10 ⁻⁸ μC/ml
	(b) Beta emitters	10 ⁻⁷ μC/ml
9.	Bio-assay test	90% survival of fish after 96 hours in 100% effluent
10.	Pesticides	
	(i) Benzene hexachloride	10 μg/l
	(ii) Carbaryl	10 μg/l
	(iii) DDT	10 μg/l
	(iv) Endosulfan	10 μg/l
	(v) Diamethoate	450 μg/l
	(vi) Penitrothion	10 μg/l
	(vii) Malathion	10 μg/l
	(viii) Phorate	10 μg/l
	(ix) Methyl parathion	10 μg/l
	(x) Phenthoate	10 μg/l
	(xi) Pyrethrums	10 μg/l
	(xii) Copper oxychloride	9600 μg/l
	(xiii) Copper sulphate	50 μg/l
	(xiv) Ziram	1000 μg/l
	(xv) Sulphur	30 μg/l
	(xvi) Paraquat	2300 μg/l
	(xvii) Proponil	7300 μg/l
	(xviii) Nitrogen	780 μg/l

The effluent irrigation method for disposal of sewage can be favourably adopted under the following conditions :

(i) When some natural rivers or water courses are not located in the vicinity, the land treatment is the only alternative left, and has to be adopted.

(ii) When irrigation water is scarcely available, the use of sewage for irrigating crops is a good alternative.

(iii) When large areas of open land are available, broad irrigation may be practised over it with the help of sewage effluents, and good returns can be earned by raising cash crops. Crops like wheat, cotton, sugarcane, plantain, grasses, fodder, coconut, orange trees, etc. have been successfully grown with advantage on sewage farms.

(iv) The method of effluent irrigation will prove useful in areas of low rainfall, as this will help in maintaining good absorption capacity of the soil.

(v) The area for land treatment or sewage farming should preferably be porous, such as sandy, loamy, or alluvial soils, or soft moorum. It should not be made of heavy retentive soils like clay, etc., which prevent easy aeration of the soil voids, and thus creating anaerobic conditions.

(vi) This method of disposal of sewage, poses problems during the periods when no irrigation water is required for the crops especially during rains. This method is, therefore preferred when sewage can be diverted to some river streams (flowing high during rainy season).

(vii) This method is preferred in areas of low water-table, where rate of percolation may be quite high.

8.8. 'Effluent Irrigation' and 'Sewage Farming'—Difference Thereof
Although, outwardly, both these terms are used as synonyms to each other, yet there is one basic difference between them. This difference is that : in 'effluent irrigation' (or broad irrigation), the chief consideration is the successful disposal of sewage, while in 'sewage farming', the chief consideration is the successful growing of the crops.

Hence, in broad irrigation, the raw or settled sewage is discharged on a vacant land, which is provided underneath, with a system of properly laid under-drains. These under-drains, usually, consist of 15 to 20 cm dia porous tile pipes, laid open jointed at a spacing of 12 to 30 m. The effluent collected in these drains after getting filtered through the soil pores is generally small (as a large quantity gets evaporated) and well stabilised, and can be easily disposed into some natural water courses, without any further treatment.

In case of sewage farming, however, the stress is laid upon the use of sewage effluents for irrigating crops and increasing the fertility of the soil. The pre-treatment of sewage, in removing the ingredients which may prove harmful and toxic to the plants is, therefore, necessary in this case.

However, in general, for all practical purposes, both these terms are used as synonyms, and both means : use of sewage effluents for irrigating crops.

8.9. Methods of Applying Sewage Effluents to Farms

The sewage effluents can be used for irrigating farms exactly in the same manner as irrigation water is used for farming. The various techniques that are employed for irrigating crops are :

(1) *Surface Irrigation called Broad Irrigation.* In this method, sewage is applied in different ways, on to the surface of the land. Depending upon the mode of application, it can be of different types, such as :

- (i) Free flooding ;
- (ii) Border flooding ;
- (iii) Check flooding ;
- (iv) Basin flooding ; and
- (v) Furrow irrigation method.

(2) *Sub-surface Irrigation.* In this method, sewage is supplied directly to the root zone of crops, through a system of properly laid open-jointed pipes. Sewage, as it flows through these pipes, percolates through the open joints, and is distributed in the surrounding area by the action of capillarity.

(3) *Sprinkler or Spray Irrigation.* In this method, sewage is spread over the land through nozzles, which are fitted at the tips of pipes carrying sewage

under pressure. The process, being costly, is not preferred in India, although it gives very good results, like those of a natural rainfall.

All these methods of irrigation have been thoroughly discussed in "Irrigation Engineering and Hydraulic Structures" (Chapter 1) by the same author ; and can be referred to in special needs.

8.10. Sewage Sickness

When sewage is applied continuously on a piece of land, the soil pores or voids may get filled up and clogged with sewage solids retained in them. The time taken for such a clogging will, of course, depend upon the type of soil* and the load present in sewage. But when once these voids are clogged, free circulation of air will be prevented, and anaerobic conditions will develop within the pores. Due to this, the aerobic decomposition of organic matter will stop, and anaerobic decomposition will start. The organic matter will thus, of course, be mineralised, but with the evolution of foul gases like hydrogen sulphide, carbon dioxide and methane. This phenomenon, of soil getting clogged, is known as *sewage sickness of land* in question.

In order to prevent the sewage sickness of a land, the following preventive measures may be adopted :

(i) *Primary Treatment of Sewage.* The sewage should be disposed of, only after primary treatment, such as screening, grit removal, and sedimentation. This will help in removing settleable solids and reducing the B.O.D. load by 30% or so ; and as such, soil pores will not get clogged, quickly.

(ii) *Choice of Land.* The piece of land used for sewage disposal should normally be sandy or loamy. Clayey lands should be avoided.

(iii) *Under-drainage of Soil.* The land on which the sewage is being disposed of, can be better drained, if a system of under-drains (i.e. open jointed pipes) is laid below, to collect the effluent ; and this will also minimise the possibilities of sewage sickness.

(iv) *Giving Rest to the Land.* The land being used for disposal should be given rest, periodically, by keeping some extra land as reserve and standby for diverting the sewage during the period the first land is at rest. Moreover, during the rest period, the land should be thoroughly ploughed, so that it gets broken up and aerated.

(v) *Rotation of Crops.* Sewage sickness can be reduced by planting different crops in rotation instead of growing single type of a crop. This will help in utilising the fertilising elements of sewage and help in aeration of soil.

(vi) *Applying shallow Depths.* The sewage should not be filled over the area in larger depths, but it should be applied in thin layers. Greater depth of sewage on a land does not allow the soil to receive the sewage satisfactorily, and ultimately results in its clogging.

A sewage-sick land can be improved and made useful by thoroughly ploughing and breaking the soil, and exposing it to the atmosphere.

*As discussed earlier, porous sandy soils will clog less as compared to heavy clayey soils.

8.11. Crops Grown in Sewage Farms and Their Hygienic Aspect

In fact, the city sewage is screened and sedimented before discharging it for irrigation. Neither biological treatment is given to it, nor it is disinfected. Due to this fact, the sewage effluents used for irrigation, normally remain contaminated. And since in all the broad irrigation methods (except furrow irrigation method), sewage applied for irrigation will come in direct contact with the plants, it may endanger the life and health of the people, if at all the crops grown are eaten raw, as the sewage is a potential carrier of germs and pathogenic bacteria, likely to cause diseases like typhoid, cholera, dysentery, etc. From public health point of view, therefore, *no crops which are to be eaten raw or without any skin removal, and which come in direct contact with the sewage, should be grown on sewage farms.*

Green vegetables, potatoes, etc. should, therefore, never be grown in such farms. However, crops like cotton, groundnut, grains, tobacco, sugarcane, etc. may be raised successfully on a sewage farm. Grass and fodder may also be raised, provided however, care is taken to see that the cattle do not graze on sewage wet fodder.

In any case, the crops grown on sewage farms should be properly labelled and marked*, so that the public knows about their source, and is cautious in their use.

It is suggested that, if at all vegetables are grown and sold in the market without any control, as is happening in Delhi (the capital city of India), the public should take preventive measures by keeping the raw vegetables submerged for at least 10 minutes in 1 in 400 water solution of bleaching powder, and then thoroughly wash them with water, before use. The use of potassium permanganate for disinfecting vegetables is not recommended, as by its use, the vegetables tend to lose freshness and crispness.

The health of the farmers working in the fields, is also an important factor. They should also take adequate precautions by wearing gum boots and gloves, as otherwise, the larvae present in sewage effluent may get into their body, through direct contact, causing diseases, most commonly the intestinal worms.

8.12. Dilution Method Vs. Land Disposal Method for Disposal of Sewage

(i) For disposal by dilution, large volumes of natural clean waters (with nil or very low B.O.D.) are required; whereas, for land disposal, large areas of land, preferably with sandy soils, are required.

(ii) The cost of land, in land disposal method, is generally very high, specially in cities and urban areas, which are generally situated near rivers or oceans, and thus suggesting the choice of dilution method. Whereas, in the rural areas, where the amount of sewage produced is less, land being available at lesser cost, no easy water source being available, the land disposal method is a better choice.

(iii) When the cost of land is high in land disposal method, some return may be available due to sewage farming; but then good management is also

*Practically, no farmer does so, as it will reduce the cash value of his crop.

required. Dilution method of disposal, however, when possible, is a simple method, and does not require too much of management.

(iv) Land disposal method requires either no pre-treatment of sewage or only preliminary treatment; whereas, dilution method of disposal, generally requires either full or at least partial treatment.

(v) Dilution method of sewage disposal requires nil or small head pumping, because rivers flow through the lowest contours, while land disposal requires high head pumping, thus making the land disposal method costlier.

(vi) Land disposal method is generally found to be a better choice in hot climatic areas. This is because of the fact that in hot areas, D.O. contents of natural waters are reduced, while fish and aquatic life need higher D.O. concentrations, thus rendering rivers (particularly those with small dry weather flows) susceptible to too much pollution and unfit for throwing untreated or less treated sewage. A lot of pretreatment, if required, will make the dilution method costlier.

(vii) Land disposal saves the inland rivers from getting polluted by sewage, and returns to the land the fertilising elements, which were once drawn from it. Dilution in river water will naturally cause downstream river water to become polluted, and an unavoidable health hazard. The towns and the cities situated downstream of the disposal point (particularly those near the zone of degradation and zone of active decomposition) cannot utilise river water without thorough and costlier treatment. Sometimes, the river water may get so much polluted that it may become almost impossible to purify it within the normal economics. Due to the pollution of the river, fish life may be lost, resulting in a good loss to the economy. Moreover, the recreational uses of the river will be gone, if it becomes polluted.

For most of the Indian towns and cities, the land disposal method is a better choice, because of the following reasons:

(i) Due to hot climate, D.O. contents of river waters are low, while the fish and aquatic life requires higher D.O. concentrations for their survival, thus rendering the dilution method more difficult and prohibitive.

(ii) There are only a few coastal towns in India, which have strong tidal currents moving in the forward directions, and the necessary depth of water at the point of disposal, thus, prohibiting the disposal of sewage in the sea on large scale.

(iii) Most of the inland rivers, flowing in the vicinity of our cities and towns, do have very small amounts of dry weather flows in them. Most of them run dry during summer season. Even the perennial rivers like Yamuna, have very low dry weather flows in them. Further, these very rivers are the only sources of water supply to these cities and towns. All these factors make it almost imperative upon us, as not to throw away our sewage in rivers, but to throw it away on land. Even if it is decided to be thrown into the rivers, a lot of pre-treatment will be required, which will make it very costly.

(iv) Except for a few major cities, the water supplies in India are very low (90 to 120 litres per capita per day), thus resulting in the production of highly concentrated sewage, which on travelling in our hot climate, becomes very stale and septic by the time it reaches the disposal point, thus prohibiting the use of dilution method for its disposal.

PROBLEMS

- Enumerate the two general methods adopted for sewage disposal; and discuss their merits, and demerits explaining the conditions favourable for their adoption.
- What are the factors affecting self-purification of polluted streams? What measures would you recommend to control stream pollution in India.
- What is meant by "Environmental Pollution"? Describe what happens when untreated sewage from a town is discharged into a nearby stream.
- Sewage disposal systems are to be provided for:
 - an isolated residential building with ten users;
 - a small town of 2000 persons located on the bank of a river;
 - a town with 10,000 persons located on the bank of a small river.
 Describe the possible methods of sewage disposal for each case and bring out the advantages and disadvantages of the various methods listed.
- Write a detailed note on land treatment of sewage dealing with the chemical as well as the engineering aspects of the process.
- What do you understand by self-purification property of a stream? Explain the factors affecting this property.
- A district town with a population of 60,000 has to discharge its sewage into a small stream. Explain various considerations involved in determining the degree of treatment required.
 - In what process of treatment, do you observe the following phenomenon, and why:
 - sewage sickness;
 - sludge bulking.
 Mention the remedial measures that are normally taken to correct the situation.
- What is sewage farming? What are its advantages over the method of disposal of sewage by dilution? What crops should be grown on such farms? What precautions should be taken in its operations to prevent health hazards either to the farm workers or to the consumers using the produce?
 - Calculate the area of sewage farm and type of crop to be grown if waste flow is 5 Mlpd, (nitrogen required may be taken as 40 kg/ha/crop and nitrogen available in waste as 20 ppm).
- Write a brief note on the use of sewage effluent for irrigation. Mention the places (Indian cities)*, where such uses of sewage are being made on a large scale.
 - A town with a population of 25,000 is to be provided with a sewage treatment plant to handle both its industrial as well as domestic wastes. A sanitary survey has revealed the following facts:
Dairy wastes of 2.7×10^6 litre/day with BOD of 1200 mg/l and sugar mill waste of 2.2×10^6 litre/day with B.O.D. of 800 mg/l are produced. In addition, domestic sewage produced at the rate of 200 litres/capita/day, the per capita BOD of sewage being 76 gm/day. An expansion factor of 10% is to be provided. The effluent from the treatment plant is to be discharged into a stream with a minimum flow of 7000 litres/sec and a dissolved oxygen content of 8 mg/l. It is necessary to maintain a D.O. content of 4.0 mg/l. Find the degree of treatment required for the plant.
[Hint. Follow example 8.5]
- Explain self-purification of streams and indicate how sunlight helps in such purification.

- Write a short note on "Minimum D.O. content in polluted stream for survival of aquatic life".
- Explain the importance of study of re-oxygenation and de-oxygenation in problems of stream sanitation.
 - The sewage discharge of a city is 85 m³/sec in the river having a minimum discharge of 930 l/sec with a velocity of 0.12 m/sec. The B.O.D. at 20°C of the sewage is 325 mg/l. The B.O.D. of the river is zero. Determine the quantity and point of critical D.O. deficit.
 - Explain the difference between the dilution process, if the waste water effluents are disposed in stream water and sea water.
 - Explain clearly the methods, problems, and limitations of land disposal of sewage.
 - Explain how domestic sewage is different from industrial waste.
 - Write a detailed explanatory note on the self-purification of streams.
 - What are the different indices that can be used to assess the self purification obtained above? Which of them is most significant and why?
 - 0.04 cumecs of settled sewage having a 5 day B.O.D. of 120 ppm and containing 4.6 ppm of D.O. are discharged into a large normal stream carrying an average flow of 1.02 cumecs with a 5 day B.O.D. at 20°C of 8 ppm, and containing 6 ppm of D.O. what is the value of maximum deficit that is likely to occur downstream, assuming the temp. at 20°C throughout, $k_D = 0.1$, $k_R = 0.24$, and saturation D.O. at 20°C = 9.2 ppm. If the minimum D.O. is to be kept at 5 ppm, what percentage of removal is necessary in a treatment plant?
 - What factors are considered in estimating the amount of dilution required for disposal of sewage in bodies of water? What dilution ratios are usually, employed in India while disposing of domestic sewage in inland surface streams, which are sufficiently clean?
 - Find out the flow in stream required per 1000 population in disposing of sewage from a residential town in India with the following data:
Average stream temperature = 30°C.
5 day BOD of sewage at 30°C = 300 ppm.
Average sewage flow = 135 lphd.
Value of de-oxygenation and reoxygenation constant of the stream at 30°C are 0.15 and 0.27, respectively.
Minimum D.O. concentration to be provided in stream = 4 ppm.
 - Write short notes on:
 - Oxygen sag curve;
 - Broad Irrigation and Effluent Irrigation;
 - Sewage sickness;
 - Sewage treatment required Vs Available dilution ratio for its disposal;
 - Self-purification of streams, and self-purification constant;
 - Dilution method Vs Land disposal method for sewage disposal.

*Bangalore, Delhi, Ahmedabad and Pune, all using partly treated i.e. sedimented sewage for irrigating crops.

-9

Treatment of Sewage

9.1. Classification of Treatment Processes

Sewage, before being disposed of either in river streams or on land, has generally to be treated, so as to make it safe. The degree of treatment required, however, depends upon the characteristics of the source of disposal, as discussed in the previous chapter.

Sewage can be treated in different ways. Treatment processes are often classified as :

- (i) Preliminary treatment ;
- (ii) Primary treatment ;
- (iii) Secondary (or Biological) treatment ; and
- (iv) Complete final treatment, as discussed below :

9.1.1. Preliminary Treatment. Preliminary treatment consists solely in separating the floating materials (like dead animals, tree branches, papers, pieces of rags, wood, etc.), and also the heavy settleable inorganic solids. It also helps in removing the oils and greases, etc. from the sewage. This treatment reduces the BOD of the wastewater, by about 15 to 30%. The processes used are : Screening for removing floating papers, rags, clothes, etc. ; Grit chambers or Detritus tanks for removing grit and sand ; and Skimming tanks for removing oils and greases.

9.1.2. Primary Treatment. Primary treatment consists in removing large suspended organic solids. This is usually accomplished by sedimentation in Settling basins.

The liquid effluent from primary treatment, often contains a large amount of suspended organic material, and has a high BOD (about 80% of the original).

Sometimes, the preliminary as well as primary treatments are classified together, under primary treatment.

The organic solids, which are separated out in the sedimentation tanks (in primary treatment), are often stabilised by anaerobic decomposition in a digestion tank or are incinerated. The residue is used for land fills or soil conditioners.

9.1.3. Secondary Treatment. Secondary treatment involves further treatment of the effluent, coming from the primary sedimentation tank. This is generally accomplished through biological decomposition of organic matter, which can be carried out either under aerobic or anaerobic conditions. In these biological units, bacteria will decompose the fine organic matter, to produce clearer effluent.

The treatment reactors, in which the organic matter is decomposed (oxidised) by aerobic bacteria are known as *aerobic biological units* ; and may consist of : (i) Filters (intermittent sand filters as well as trickling filters) ; (ii) Aeration tanks, with the feed of recycled activated sludge (i.e. the sludge, which is settled in secondary sedimentation tank, receiving effluents from the aeration tank)* ; (iii) Oxidation ponds and Aerated lagoons. Since all these aerobic units, generally make use of primary settled sewage, they are easily classified as secondary units.

The treatment reactors, in which the organic matter is destroyed and stabilised by anaerobic bacteria, are known as *anaerobic biological units* and may consist of Anaerobic lagoons, Septic tanks, Imhoff tanks, etc. Out of these units, only anaerobic lagoons, make use of primary settled sewage, and hence, only they can be classified under secondary biological units. Septic tanks and Imhoff tanks, using raw sewage, are, therefore, not classified as secondary units.

The effluent from the secondary biological treatment will usually contain a little BOD (5 to 10% of the original), and may even contain several milligrams per litre of DO.

The organic solids/sludge, separated out in the primary as well as in the secondary settling tanks, will be disposed of by stabilising them under anaerobic process in a Sludge digestion tank.

9.1.4. The Final or Advanced Treatment. This treatment is sometimes called tertiary treatment, and consists in removing the organic load left after the secondary treatment, and particularly to kill the pathogenic bacteria. This treatment, which is normally carried out by chlorination, is generally not carried out for disposal of sewage in water, but is carried out, while using the river stream for collecting water for re-use or for water supplies. It may, however, sometimes be adopted, when the outfall of sewage is very near to the water intake of some nearby town.

The sewage treatment is, therefore, usually confined up to secondary treatment only. Well in fact, various physical, chemical and biological processes are available for treatment, depending upon the particular requirements. The choice of the treatment methods, depends on several factors, including the disposal facilities available. *Actually, the distinction between primary, secondary and tertiary treatment is rather arbitrary, since many modern treatment methods incorporate physical, chemical and biological processes in the same operation.*

The various treatment units, which may be used for treating sewage, and the extent of BOD, solids and bacteria removed by them, have been summarised in Table 9.1.

The individual operations of these units may be combined in different ways, depending upon the topography and other local needs, so as to create different types of treatment plants.

*Aeration tank(s), with feed of active sludge, along with secondary settling tank, etc., constitute an Activated sludge plant.

Table 9.1 Types of Treatments Units Employed in Sewage Treatment, Their Functions and Efficiencies

S. No.	Types of Treatment	Purification effected	Process or unit employed	BOD removal as percentage of original	Removal of suspended and dissolved solids as percentage of original	Removal of bacterial load as percentage of original	Disposal of residuals
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)
1.	Preliminary Treatment	(a) Removal of floating materials like dead animals, tree branches, pieces of rags, wood and other large sized floating materials. (b) Removal of heavy settleable inorganic solids. (c) Removal of fats and greases.	Coarse and fine screens of different designs Grit chambers or Detritus tanks Skimming tanks or Vacuators.	5-10 10-20 20-30	2-20 20-40 20-40	10-20 10-20 10-20	Screenings can be disposed of easily, either by burial or burning. The grit can be easily disposed of either by burial or burning for raising low lying areas. The skimings contain unstable volatile organic materials, and have to be disposed of by first stabilising them in digestion tanks by anaerobic process.
2.	Primary treatment	Removal of suspended organic solids	(i) Sedimentation tanks or (ii) Skimming tanks	30-35	60-65	25-75	Sludge containing organic material has to be stabilised first, in digestion tanks, and the digested material is then used as a manure or soil builder.

(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)
			(ii) Septic tanks (used only for small colonies or in rural areas), or (iii) Imhoff tanks (seldom used in modern days).	20-30 30-40	40-60 60-65	25-75 25-75	The effluents are generally disposed of for sewage farming on land. These units combine sludge digestion along with sedimentation in these tanks.
3.	Secondary or Biological Treatment	Removal of fine suspended non-settleable solids and colloids, including dissolved organic matter	(i) Chemical flocculation and sedimentation (seldom used in sewage treatment) or (ii) Intermittent sand filters, followed and preceded by sedimentation (seldom used in modern days) or (iii) Conventional low rate trickling filters, followed and preceded by sedimentation. or (iv) Modern high rate trickling filters, followed and preceded by sedimentation.	50-85 90-95 90-95	70-90 85-95 70-92	40-80 95-98 90-95	Sludge containing organic material has to be stabilised in digestion tanks, and the residue is used as manure or soil builder. Sludge containing organic material has to be stabilised in digestion tanks, and the residue is used as manure or soil builder. Sludge containing organic material has to be stabilised in digestion tanks, and the residue is used as manure or soil builder.

(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)
			(c) Activated sludge treatment in Aeration tank and secondary settling tank or (cc) Oxidation ponds	75-95	85-90	90-98	Sludge containing organic materials has to be stabilised in digestion tanks, and the residue is used as manure or soil builder. Effluent are generally disposed of by using them for irrigation.
			Chlorination (seldom used for sewage treatment)	85-90	95-90	90-98	—
		Removal of Pathogens and the remaining very fine dissolved organic matter		100%	100%	100%	
4.	Final or Tertiary Treatment						

Fig. 9.1 shows diagrammatic sketches of some standard types of sewage treatment plants, which give full treatment, and may be adopted under different conditions. The first plant [Fig. 9.1 (a)] consists of *Imhoff tanks* and *low rate trickling filters*, and may be adopted for very small towns, although the use of *Imhoff tanks* has become old and obsolete these days. The second plant [Fig. 9.1 (b)] consists of *sedimentation tanks* and *high rate trickling filters*, and is suitable for cities of small and medium sizes. The third type of treatment plant [Fig. 9.1 (c)] consists of a *sedimentation tank* and an *activated sludge treatment plant*, and is suitable for larger cities, where continuous attendance and supervision is possible.

These three different types of treatment plants contain different combinations of treatment units. These combinations can also be changed, and some other combination made, depending upon the local needs. The topography and geology will influence the choice of the units to be adopted. For example, the trickling filter plant consumes high head and requires steep ground slope to avoid pumping; *Imhoff tanks* are very deep and can not be constructed economically under adverse underground conditions. Similarly, the size of the plant will also influence the type of units to be housed in it. For example, smaller sized plants cannot house such units which require continuous skilled attendance and supervision, and as such, they should house such units, which do not employ complicated mechanical equipment.

All these treatment units, will now be discussed in details.

→ SCREENING

Screening is the very first operation carried out at a sewage treatment plant, and consists of passing the sewage through different types of screens, so as to trap and remove the floating matter, such as pieces of cloth, paper, wood, cork, hair, fibre, kitchen refuse, fecal solids, etc. present in sewage. These floating materials, if not removed, will choke the pipes, or adversely affect the working of the sewage pumps. Thus, the main idea of providing screens is to protect the pumps and other equipments from the possible damages due to the floating matter of the sewage.

Screens should preferably be placed before the *grit chambers* (described in the next article). However, if the quality of 'grit' is not of much importance, as in the case of land fillings, etc., screens may even be placed after the *grit chambers*. They may sometimes be accommodated in the body of the *grit chambers* themselves.

9.2. Types of Screens, their Designs and Cleaning

Depending upon the size of the openings, screens may be classified as coarse screens, medium screens, and fine screens.

(i) **Coarse screens** are also known as *Racks*, and the spacing between the bars (i.e. opening size) is about 50 mm or more. These screens do help in removing large floating objects from sewage. They will collect about 6 litres of solids per million litre of sewage. The material separated by coarse screens, usually consists of rags, wood, paper, etc., which will not putrefy, and may be disposed of by incineration, burial, or dumping.

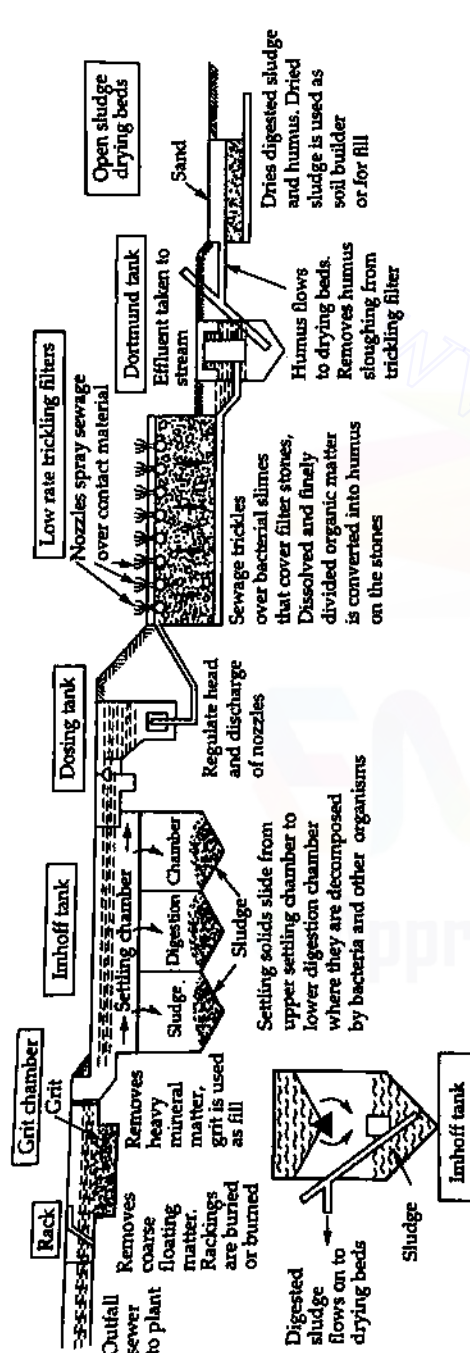


Fig. 9.1 (a) Flow diagram of a sewage treatment plant, which may be used for very small towns (use of Inhoff tank, though, has become old and obsolete)

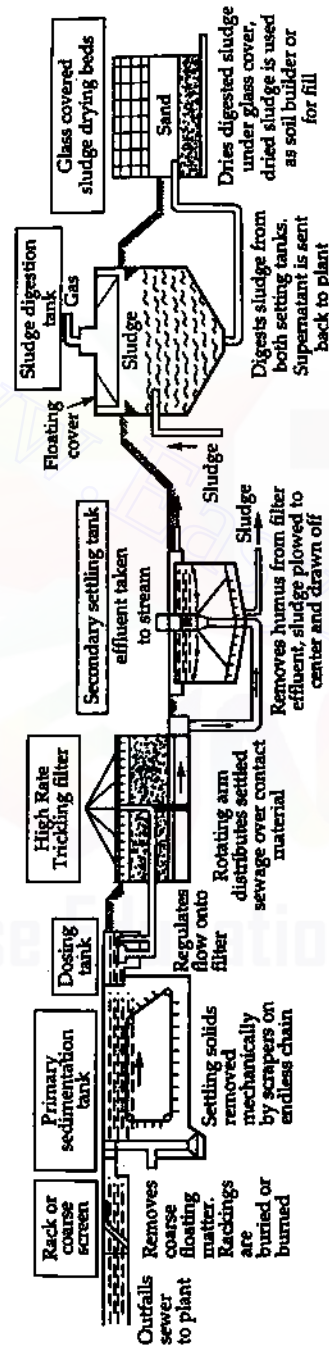


Fig. 9.1 (c) Flow diagram of a sewage treatment plant useful for small and medium sized cities

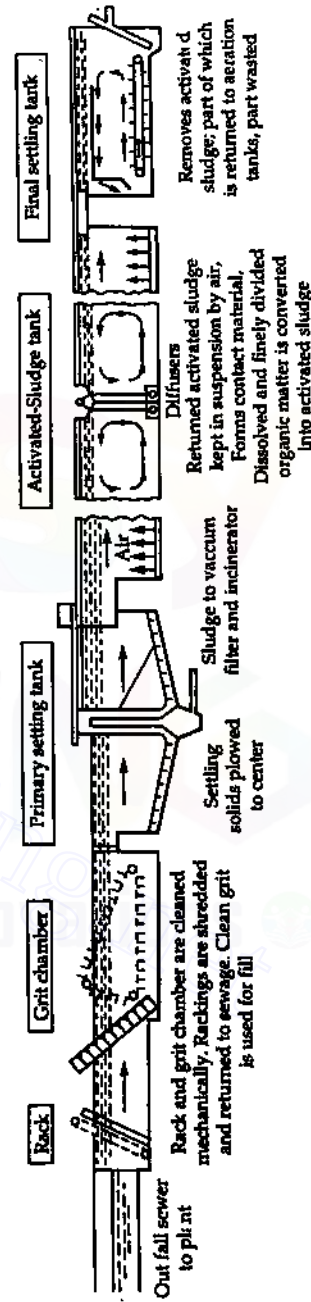


Fig. 9.1 (c) Flow diagram of sewage treatment plant useful for large sized cities

(ii) In medium screens, the spacing between the bars is about 6 to 40 mm. These screens will ordinarily collect 30 to 90 litres of material per million litre of sewage. The screenings usually contain some quantity of organic material, which may putrefy and become offensive, and must, therefore, be disposed of by incineration, or burial (not by dumping).

Rectangular shaped coarse and medium screens are now-a-days widely used at sewage treatment plants. They are made of steel bars, fixed parallel to one another at desired spacing on a rectangular steel frame, and are called **bar screens**. The screens are set in a masonry or R.C.C. chamber, called the **screen chamber**. Now-a-days, these screens are generally kept inclined at about 30° to 60° to the direction of flow, so as to increase the opening area, and to reduce the flow velocity; and thus making the screening more effective. A most commonly used hand cleaned bar type screen is shown in Fig. 9.2.

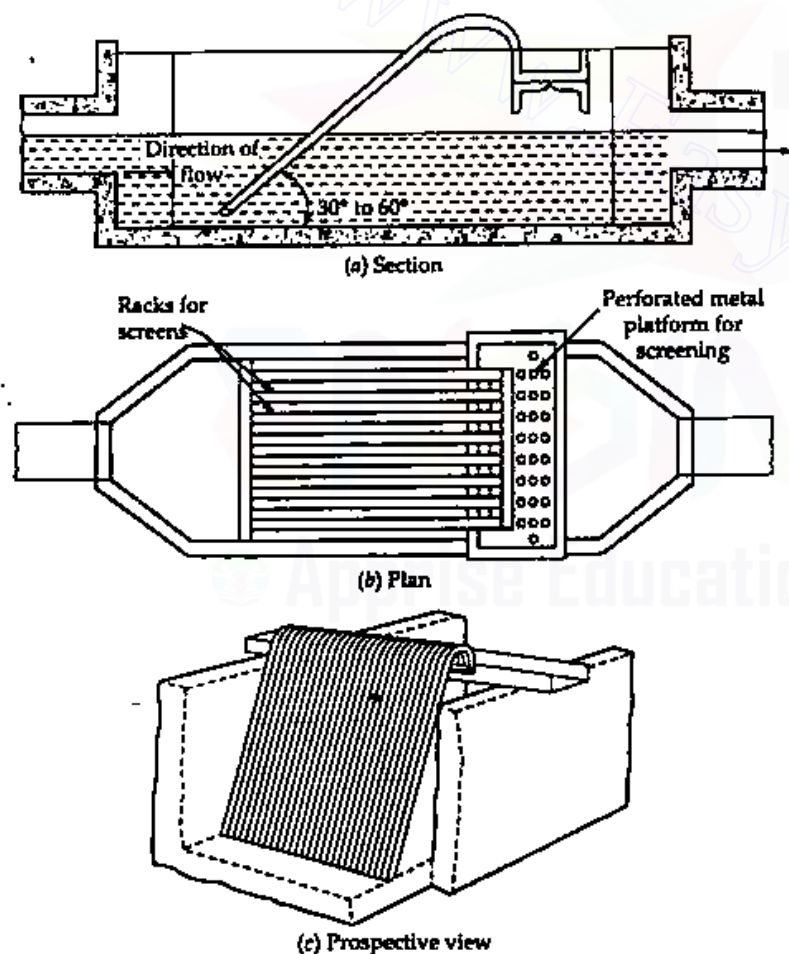


Fig. 9.2. Fixed Bar type Hand Cleaned Coarse or Medium Screen or Rack.

While designing the screens, clear openings should have sufficient total area, so that the velocity through them is not more than 0.8 to 1 m/sec. This limit, placed on velocity, limits the head loss through the screens, and, thus, reduces the opportunity for screenings to be pushed through the screens.

The material collected on bar screens can be removed either manually or mechanically. Manual cleaning is practised at small plants with hand operated rakes.* The inclined screens help in their cleaning by the upward stroke of the rake. Large plants, however, use mechanically operated rakes, which move over the screens, either continuously or intermittently.

The cleaning of screens by rakes will be hindered by cross bars, if at all provided. They are, therefore, generally avoided.

Screens are sometimes classified as *fixed* or *movable*, depending upon whether the screens are stationary or capable of motion. **Fixed screens** are permanently set in position. **Movable screens** are stationary during their operating periods, but they can be lifted up bodily and removed from their positions for the purpose of cleaning. A common movable bar medium screen is a 3-sided cage with a bottom of perforated plates. It is mainly used in deep pits ahead of pumps.

(iii) **Fine Screens** have perforations of 1.5 mm to 3 mm in size. The installation of these screens prove very effective, and they remove as much as 20% of the suspended solids from sewage. These screens, however, get clogged very often, and need frequent cleaning. They are, therefore, used only for treating the industrial wastewaters, or for treating those municipal wastewaters, which are associated with heavy amounts of industrial wastewaters. These screens will considerably reduce the load on further treatment units.

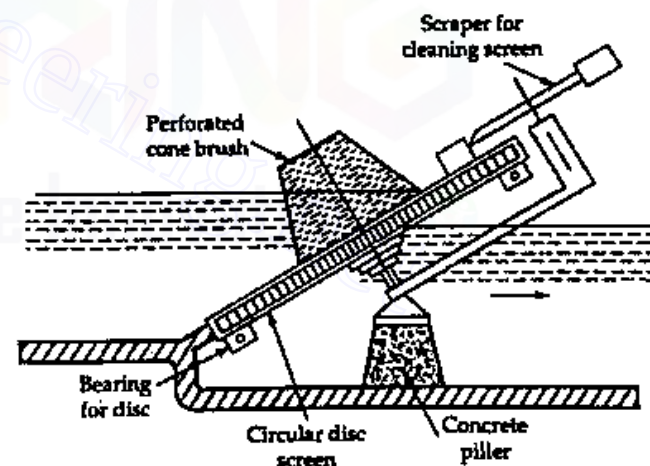


Fig. 9.3. Reinach-Wurl screen (disc type fine screen).

*A rake is a toothed bar. The teeth of the rakes are designed in such a way that they fit in between the spacings of the screen bars. Hence, an operator puts the rake in position, and drags the material contained between the screen bars, up towards him, and dumps it on the floor.

Brass or Bronze plates or wire mesh are generally used for constructing fine screens. The metal used should be resistant to rust and corrosion.

The fine screens may be disc or drum type, and are operated continuously by electric motors. Fig. 9.3 shows a typical disc type of fine screen, which is cleaned by a cone brush.

Example 9.1. Estimate the screen requirement for a plant treating a peak flow of 60 million litres per day of sewage.

Solution. Peak flow = 60 ML/day

$$= \frac{60 \times 10^6}{1000} \text{ cu-m/day}$$

$$= \frac{60,000}{24 \times 60 \times 60} \text{ cu-m/sec} = 0.694 \text{ m}^3/\text{sec}.$$

Assuming that the velocity through the screens (at peak flow) is not allowed to exceed 0.8 m/sec, we have

The net area of screen openings required

$$= \frac{0.694}{0.8} \text{ m}^2 = 0.87 \text{ m}^2.$$

Using rectangular steel bars in the screen, having 1 cm width, and placed at 5 cm clear spacings, we have

The gross area of the screen required

$$= \frac{0.87 \times 6}{5} = 1.04 \text{ m}^2$$

Assuming that the screen bars are placed at 60° to the horizontal, we have

The gross area of the screen needed

$$= \frac{1.04}{\frac{\sqrt{3}}{2}} = \frac{1.04 \times 2}{\sqrt{3}} = 1.2 \text{ m}^2.$$

Hence, a coarse screen of 1.2 m² area is required. **Ans.**

While designing the screen, we have also to design its cleaning frequency. The cleaning frequency is governed by the head loss through the screen. The more the screen openings are clogged, more will be the head loss through the screen. Generally, not more than half the screen clogging is allowed. To know whether the screen has been clogged and needs cleaning, we can check or measure the head loss.

The head loss through the cleaned screen and half-cleaned screen, can be computed as follows :

Velocity through the screen = 0.8 m/sec.

Velocity above the screen

$$= \frac{0.8 \times 5}{6} \text{ m/sec} = 0.67 \text{ m/sec}$$

Head loss through the screen

$$= 0.0729 (V^2 - v^2)$$

...(9.1)

When the screen openings get half clogged, then

The velocity through the screen


$$= v = 0.8 \times 2 = 1.6 \text{ m/sec}$$

$$\therefore \text{Head loss} = 0.0729 (1.6^2 - 0.67^2) = 0.1538 ; \text{ say } 0.15 \text{ m}.$$


This shows that when the screens are totally clean, the head loss is negligible i.e. about 1.3 cm only ; whereas, the head loss shoots up to about 15 cm at half the clogging. The screens should therefore be cleaned frequently, as to keep the head loss within the allowable range. **Ans.**

9.3. Comminutors


Comminutors or Shredders are the patented devices, which break the larger sewage solids to about 6 mm in size, when the sewage is screened through them. Such a device consists of a revolving slotted drum, through which the sewage is screened (Fig. 9.4). Cutters mounted on the drum, shear the collected screenings against a comb, until they are small enough to pass through 5 mm to 10 mm wide slots of the drum. These are usually arranged in pairs to facilitate repairs and maintenance. Commminutors are of recent origin,

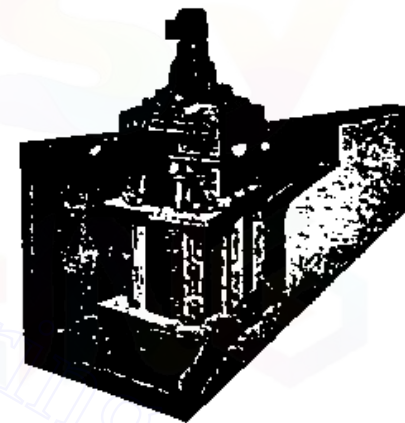

(a) Photo view of a comminutor

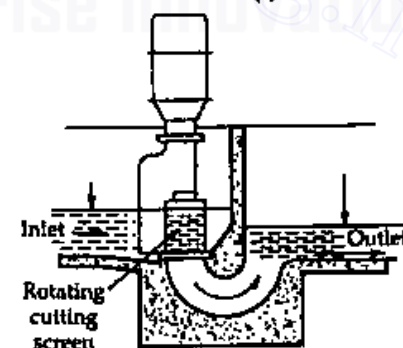

(b) Commminutor-section

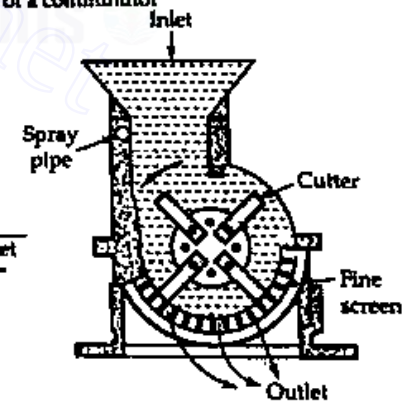

(c) Shredder

and eliminate the problem of disposal of screenings, by reducing the solids to a size which can be processed elsewhere in the plant. They should always be preceded by grit chambers to prevent their excessive wear.

Such devices are used only in developed countries like USA, and generally not adopted in our country.

9.4. Disposal of Screenings

The material separated by screens is called the screenings. It contains 85 to 90% of moisture and other floating matter. It may also contain some organic load which may putrefy, causing bad smells and nuisance. To avoid such possibilities, the screenings are disposed of either by burning, or by burial, or by dumping. The dumping is avoided when screenings are from medium and fine screens, and are likely to contain organic load, as pointed out earlier. The screenings may also sometimes be broken up by a comminutor and then passed on to the grit chamber.

Burning of the screenings is done in the incinerators, similar to those used for burning garbage. The process of burning is called **Incineration**. The screenings are first dried with sun's heat by spreading on ground or by compressing through hydraulic or other presses, so as to reduce the moisture content to about 60%. The incineration is carried out at temperatures of about 760 to 815°C. This will avoid bad smells.

The screenings may also be disposed of by **burial**. The process is technically called **Composting**. In this process, the screenings are buried in 1 to 1.5 m deep trenches, and then covered with 0.3 to 0.45 m of porous earth. In due course of time, oxidation-reduction of screenings will take place, and the contents can be used as manure.

Another method of disposing of the screenings is by dumping them in low lying areas (away from the residential areas) or in large bodies of water, such as sea. **Dumping in sea** will be suitable only where strong forward currents do exist to take the dumped material away from the shore line. The **dumping on land** for raising low lying areas is also adopted only when screenings are from the coarse screens, and not from the medium or fine screens, and as such not containing much organic load.

Digestion of screenings along with the sewage sludge in a sludge digestion tank has also been tried, but not found successful.

GRIT REMOVAL BASINS

Grit removal basins, such as Grit chambers or Grit channels or Detritus tanks are the sedimentation basins placed in front of the wastewater treatment plant to remove the inorganic particles (specific gravity about 2.65), such as sand, gravel, grit, egg shells, bones, and other nonputrescible materials that may clog channels or damage pumps due to abrasion, and to prevent their accumulation in sludge digesters. Grit chambers are, in fact, nothing but like sedimentation tanks, designed to separate the intended heavier inorganic materials by the process of sedimentation due to gravitational forces, and to pass forward the lighter organic material*. The grit chambers are usually

*The organic material is not allowed to settle in this process, as otherwise, the organic matter gets entangled with the inorganic matter, causing septicity of sewage and requiring additional expenses for disposal or removal.

placed after the fine screens, to remove particles of size up to 0.2 mm or so. Many engineers, however, prefer to place them before the fine screens, as to avoid silting of the screen chambers.

Many a times, the grit chambers are aerated by providing outside air through compressors. The diffused air creates spiral current within the grit, as to help in its settlement.

Since the grit chambers are sedimentation or settling basins, we will discuss theory of sedimentation first, before coming to the design of grit chambers.

9.5. Settling of Discrete Particles (Type I* Sedimentation or Settling) in Waste Waters or Raw Waters

Sedimentation is the physical separation of suspended material from a water or a wastewater by the action of gravity. It is a common operation for water treatment and found in almost all waste water treatment plants. It is less costly than many other treatment processes.

[The very fundamental principle underlying the process of sedimentation is that the organic matter present in sewage is having specific gravity greater than that of water (i.e. 1.0). In still sewage, these particles will, therefore, tend to settle down by gravity; whereas, in flowing sewage, they are kept in suspension, because of the turbulence in water. Hence, as soon as the turbulence is retarded by offering storage to sewage, these impurities tend to settle down at the bottom of the tank offering such storage. This is the principle behind sedimentation.] *Settling = Sedimentation*

The design of sedimentation basins is thus, totally dependent upon the settling velocity of the sewage solids. The design of an ideal settling basin is based on the removal of all particles that have a settling velocity greater than a specified settling velocity.

The settling velocity of a discrete** solid particle is mathematically computed and analysed on the basis of the theory of sedimentation, which is discussed below:

9.5.1. Theory of Type I Settling. The settlement of a particle in water brought to rest is opposed by the following factors:

(i) *The velocity of flow* which carries the particle horizontally. The greater the flow area, the lesser is the velocity, and hence more easily the particle will settle down.

(ii) *The viscosity of water* in which the particle is travelling. The viscosity varies inversely with temperature. Warm water is less viscous and, therefore, offers less resistance to settlement. However, the temperature of water cannot be controlled to any appreciable extent in "water or wastewater purification processes" and hence this factor is generally ignored.

(iii) *The size shape and specific gravity of the particle.* The greater is the specific gravity, more readily the particle will settle. The size and shape of the

**Type I sedimentation refers to discrete particles settling.

***Discrete or 'granular' particles are those which do not change their size, shape and weight. The other type of particles called 'flocculated' particles are those which change their size, shape and weight, and thus lose their identity.

particle also affect the settling rate. For example, the weight and volume of the spherically shaped particle, varies with the cube of its diameter

(volume being equal to $\frac{\pi d^3}{6}$, where d is the dia) or its size; and its area

varies with the square of the diameter (area being equal to $\frac{\pi d^2}{4}$). Hence, very

small sized particles will settle very slowly. It, therefore, clearly follows that the shape and size of the particles do affect their setting velocities.

The settling velocity of a spherical particle is expressed by Stoke's law, which takes the above three factors into account. The final Stoke's equation, is expressed as:

$$v_s = \frac{g}{18} (G - 1) \frac{d^2}{\nu} \quad \text{for } d < 0.1 \text{ mm} \quad \dots(9.2)$$

[for viscous flow and small sized particles, represented by $R_e < 0.5$]

where v_s = velocity of settlement of particle (assumed to be spherical) in m/sec.

d = diameter of the particle in m.

G = sp. gravity of the particle.

ν = kinematic viscosity of water in m^2/sec^2 , and

is equal to $\frac{\mu}{\rho_w}$, where μ = absolute or

dynamic viscosity of water in $\text{kg sec}/\text{m}^2$

R_e = Reynold Number

$$= \frac{v_s \cdot d}{\nu}$$

Derivation of Stoke's Law. When a solid particle settles down in water, its downward settlement is opposed by the drag force offered by the water. The effective weight of the particle (i.e. actual weight—buoyancy) causes the particle to accelerate in the beginning, till it attains a sufficient velocity (v_s) at which the drag force becomes equal to the effective weight of the particle. After attaining that velocity, the particle falls down with that constant velocity (V_s). Now, the drag force offered by the fluid is given by Newton's law, as

$$\text{Drag force} = C_D \cdot A \cdot \rho_w \cdot \frac{v^2}{2} \quad \dots(1)$$

where C_D = Coefficient of drag

A = Area of particle

ρ_w = Density of water

v = velocity of fall

[Note. This drag force increases with the increasing velocity, till it becomes equal to the effective weight of the particle; and at that time, v becomes equal to v_s .]

The effective weight of the particle

= Total weight - Buoyancy

$$= \frac{4}{3} \cdot \pi r^3 \gamma_s - \frac{4}{3} \pi r^3 \gamma_w$$

[$\because$ weight = volume $\times$ unit weight]

where r = radius of particle

γ_s = unit weight of particle

γ_w = unit weight of water.

$$= \frac{4}{3} \pi r^3 [\gamma_s - \gamma_w] \quad \dots(2)$$

Eqs. (1) and (2) will become equal when v becomes equal to v_s in Eq. (1).

$$\therefore C_D \cdot A \cdot \rho_w \cdot \frac{v_s^2}{2} = \frac{4}{3} \pi r^3 [\gamma_s - \gamma_w]$$

But $A = \pi r^2$

$$\therefore C_D \cdot \pi r^2 \cdot \rho_w \cdot \frac{v_s^2}{2} = \frac{4}{3} \pi r^3 [\gamma_s - \gamma_w]$$

$$\text{or } v_s^2 = \frac{4}{3} \cdot \frac{(r) \cdot (\gamma_s - \gamma_w) \cdot 2}{\rho_w \cdot C_D}$$

$$\text{or } v_s^2 = \frac{\frac{4}{3} \left(\frac{d}{2} \right) (\gamma_s - \gamma_w) \cdot 2}{\rho_w \cdot C_D}$$

$$\text{or } v_s^2 = \frac{\frac{4}{3} (\gamma_s - \gamma_w) \cdot d}{\rho_w \cdot C_D} \quad \dots(3)$$

Now, $\gamma_s = \rho_s \cdot g$

and $\gamma_w = \rho_w \cdot g$

$$\therefore \gamma_s - \gamma_w = g(\rho_s - \rho_w)$$

$$= g \cdot \rho_w \left(\frac{\rho_s}{\rho_w} - 1 \right)$$

$$= g \rho_w (G - 1)$$

Eq. (3) then becomes

$$v_s^2 = \frac{4}{3} \cdot \frac{g \cdot \rho_w (G - 1) d}{\rho_w \cdot C_D}$$

$$\text{or } v_s^2 = \frac{\frac{4}{3} \cdot g \cdot (G-1) d}{C_D} \quad \dots(9.3)$$

The coefficient of drag (C_D), has been found for a *viscous flow and small particles* (size $d < 0.1$ mm), to be equal to $\frac{24}{R_e}$...(9.4a)

$$\text{where } R_e \text{ is the particle Reynold number} \\ = \left(\frac{v_s \cdot d}{\nu} \right)$$

$\therefore$ Eq. (9.3) then becomes,

$$v_s^2 = \frac{\frac{4}{3} \cdot g \cdot (G-1) \cdot d}{\frac{24}{R_e}}$$

$$\text{or } v_s^2 = \frac{4}{3} \cdot g \cdot (G-1) \cdot d \cdot \frac{R_e}{24} \\ = \frac{g}{18} (G-1) d \cdot \frac{v_s \cdot d}{\nu}$$

$$\text{or } v_s = \frac{g}{18} (G-1) \frac{d^2}{\nu} \text{ for } d < 0.1 \text{ mm}$$

which is the requisite equation 9.2.

The above Stoke's equation is valid for particles of size less than 0.1 mm ; in which case, the viscous force predominates over the 'inertial force, leading to what is known as *laminar or streamline settling*.

If, however, the settling particles are larger than 0.1 mm, the nature of settling tends to become *turbulent*, with a *transition zone* in between. It has been established that *turbulent settling* occurs for particle size greater than 1.0 mm, whereas settling remains *transition settling* for particle sizes between 0.1 mm to 1.0 mm.

The relation between coefficient of drag (C_D) and R_e for these three types of settling are as follows :

(a) For *streamline or laminar settling* ($d < 0.1$ mm)

Here $R_e < 1$; and

$$C_D = \frac{24}{R_e} \quad (\text{i.e. Eq. 9.4a})$$

(b) For *transition settling* (d between 0.1 mm and 1.0 mm)

Here $1 < R_e < 10^3$

$$C_D = \frac{24}{R_e} + \frac{3}{R_e^{0.5}} + 0.34 \quad \dots(9.4bi)$$

$$\text{or } C_D = \frac{18.5}{R_e^{0.6}} \quad \dots(9.4bii)$$

(c) For *turbulent settling* ($d > 1.0$ mm)

Here $R_e > 10^3$

$$C_D = 0.34 \text{ to } 0.4 \quad \dots(9.4bc)$$

Grit particles, generally, lie between 0.1 mm and 1 mm sizes, and hence, undergo settling which lies in transition settling zone. In such a case, therefore, the settling velocity equation (9.3) becomes :

$$v_s^2 = \frac{\frac{4}{3} \cdot g \cdot (G-1) \cdot d}{C_D} \quad \text{where } C_D = \frac{18.5}{R_e^{0.6}}$$

$$\text{or } v_s^2 = \frac{4}{3} g \cdot (G-1) \cdot d \times \frac{R_e^{0.6}}{18.5}$$

$$\text{or } v_s^2 = \frac{g}{13.88} (G-1) \cdot d R_e^{0.6}$$

$$\text{or } v_s^2 = \frac{g}{13.88} (G-1) d \cdot \left(\frac{v_s \cdot d}{\nu} \right)^{0.6}$$

$$\text{or } v_s^{1.4} = \frac{g(G-1) d^{1.6}}{13.88 \nu^{0.6}}$$

$$\text{or } v_s = \left[\frac{g(G-1) d^{1.6}}{13.88 (\nu)^{0.6}} \right]^{1/1.4}$$

$$\text{or } v_s = \left[\frac{g(G-1) d^{1.6}}{13.88 (\nu)^{0.6}} \right]^{0.714} \quad \dots(9.5)$$

for d lying between 0.1 mm and 1.0 mm.

For *turbulent settling*, the equation (9.3) reduces to :

$$v_s^2 = \frac{4g}{3} (G-1) d \cdot \frac{1}{C_D} \text{ where } C_D = 0.34 \text{ to } 0.4 \text{ (eq. 9.4c)}$$

$$\text{or } v_s^2 = \frac{4g}{3 \times 0.4} (G-1) \cdot d = 3.33g (G-1)d$$

$$\text{or } v_s = 1.8 \sqrt{gd(G-1)} \text{ for } d > 1 \text{ mm} \quad \dots(9.6)$$

This equation is known as Newton's equation for turbulent settling.

The above formulas represent the theoretical settling velocities of discrete spherical particles. The actual settling velocities in the sedimentation basins will be much less than those calculated by these formulas, because of : the non-sphericity of the particles, the upward displacement of the fluid caused by the settling of other particles, and convection currents.

Based upon experiments, Hazen has formulated a table (Table 9.5) giving the values of the settling velocities (popularly called (*hydraulic settling values*)) for different sized particles in still liquids at 10°C.

Table 9.5. Hydraulic Settling Values in mm/sec in still liquids at 10°C.

Type of material	Dia of particles in mm	Settling velocity in mm/sec	
		Particles of Sp. gravity 2.65	Particles of Sp. gravity 1.20
(1)	(2)	(3)	(4)
Course sand	1.00	100	12.0
	0.80	83	9.6
	0.60	63	7.2
Medium sand	0.50	53	6.0
	0.40	42	4.8
	0.30	32	3.6
Fine sand	0.20	21	2.4
	0.15	15	1.8
	0.10	8	1.2
Very fine sand	0.08	6	0.63
	0.06	3.8	0.30
	0.05	2.9	0.21
Silt	0.04	2.1	0.13
	0.03	1.3	0.076
	0.02	0.62	0.034
	0.015	0.35	0.019
	0.010	0.154	0.0084
Fine silt	0.008	0.098	0.0054
	0.006	0.055	0.0030
	0.005	0.0385	0.0021
Clay	0.004	0.0247	0.0013
	0.003	0.0138	0.00076
	0.002	0.0062	0.00034
	0.0015	0.0035	0.00019
Fine clay	0.001	0.00164	0.000084
	0.0001	0.0000164	0.00000084
Colloidal clay	• 0.0001		

*Note. At higher temperatures such as 26°C (i.e. average temperature prevailing in our country), the value of settling velocity will be about 50% more than these values.

The above experimental values have also been expressed in mathematical form as modified Hazen's equation for transition zone, given by :

$$v_s = 60.6d (G - 1) \cdot \left(\frac{3T + 70}{100} \right)$$

for particles between 0.1 and 1 mm

...(9.7)

The above equation yields the following :

For inorganic solids

Settling velocity for inorganic solids

$$v_{s(in)} = 60.6d (1.65) \cdot \frac{3T + 70}{100}$$

or

$$v_{s(in)} = d(3T + 70)$$

...(9.8)

Similarly, settling velocity for organic matter (for which $G = 1.2$)

$$v_{s(o)} = 60.6d (0.2) \left(\frac{3T + 70}{100} \right)$$

or

$$v_{s(o)} = 0.12d (3T + 70)$$

...(9.9)

*9.6. Grit Chambers or Grit Channels SM

As stated earlier, the *grit chambers* or *grit channels*, as they are usually called, are the sedimentation basins placed usually after the fine screens and certainly, before the primary sedimentation tank. The *grit chamber* removes the *inorganic grit*, such as sand, gravel, and other mineral matter that has a nominal diameter of 0.15 to 0.20 mm or more. Actually, grit will also include smaller mineral particles that may settle, as well as non-putrescible organic matter, such as rags, coffee grounds, vegetable cuttings, ash clinker, wood pieces, and tea leaves, etc. Even though, some of the grit components, such as coffee grounds are organic, they are essentially non-biodegradable over time spans involved here in grit collection and disposal.

The amount of grit collected is a function of the removal device, its operation, and the quantity of grit in the sewage, and therefore, it varies over a wide range. The grit quantity may vary between 0.004 – 0.037 m³/1000 m³ of sewage for separate sewage system ; while this may range between 0.004 – 0.180 m³/1000 m³ for combined sewage system.

Generally, *grit channels* are designed to remove all particles of higher specific gravity of 2.65 or so, with a nominal diameter of 0.20 mm and more, having settling velocity of about 21 mm/s (at 10°C) ; although some grit removal channels are designed to remove particles above 0.15 mm size, having settling velocity of about 15 mm/s (at 10°C).

It is not at all desirable to remove any organic matter in the *grit chambers*, because no further treatment of removed grit is provided*. The *grit chamber* must hence, be designed to scour the lighter organic particles, while the heavier grit particles remain settled.

Grit channels can be divided into the following two general types :

- horizontal flow type (non-aerated) ; and
- aerated

In the *horizontal flow type*, the flow passes through the channel in a horizontal direction. The chamber (or channel) is designed to give a horizontal straight line flow velocity, which is kept constant over varying discharge.

*The organic material is not allowed to settle in this process, as otherwise, the organic matter gets entangled with the inorganic matter, causing septicity of sewage and requiring unnecessary labour and expenses for disposal or removal.

The constant velocity is achieved by providing a *velocity control section*, such as a *proportional flow weir* at the effluent end of a rectangular channel; or a *parabolic (or V) shaped channel*, having varying width with depth, as discussed in article 9.7.

The aerated type of grit channel consists of a spiral flow aeration tank, where the spiral velocity is controlled by the dimensions/shape of the chamber and the quantity of air supplied to the unit. This type of grit channels are discussed in article 9.8.

9.7. Constant Velocity Horizontal Flow Grit Channels

Such a grit channel is an enlarged channel or a long basin, in which the cross-section is increased, so as to reduce the flow velocity of sewage to such an extent that the heavy inorganic materials do settle down by gravity, and the lighter organic materials remain in suspension, and, thus, go out along with the effluent of the grit basin. The important point in the design of the grit basins is that the flow velocity should neither be too low as to cause the settling of lighter organic matter, nor should it be so high as not to cause the settlement of the entire silt and grit present in sewage. The flow velocity should also be enough to scour out the settled organic matter, and reintroduce it into the flow stream. Such a critical scouring velocity is, in fact, given by the modified Shield's formula, which states that

$$\text{Critical scour velocity} = V_H = 3 \text{ to } 4.5 \sqrt{gd(G-1)} \quad \dots(9.10)$$

For grit particles of 0.2 mm (d), the above formula gives critical velocity values of 0.17 to 0.26 m/sec. This fixes the limits for optimum flow velocity for design of grit basins. In practice, a flow velocity of about 0.25 to 0.3 m/sec is adopted for the design of grit basins.

In order to prevent large increase in flow velocity at peak hours due to increased discharge, and thus, to avoid the scouring of the settled grit particles from the bottom, it is preferable to design the grit chambers for D.W.F. (Dry weather flow), and to provide additional units for taking increased discharge at peak hours. If, however, a single unit is to be designed, or there are large variations in discharge, then the grit chamber is designed for generating optimum velocity at peak discharge and a velocity control section, such as a properly designed modified weir, called a *proportional flow weir* or a *sutro weir* (Fig. 9.5a), is provided at the lower (effluent) end of the rectangular grit channel, which helps in varying the flow area of the section in direct proportion to the flow, and thus, helps to maintain a constant velocity in the channel (within the permissible limits of ± 5 to 10% over the designed value), even at varying discharges.

A channel with a varying cross-section geometry (Fig. 9.5b) is an alternative to providing a modified weir. The channel may discharge into a parshall flume (Fig. 9.7) to measure the discharge accurately. In this case, there is a rectangular control section at the end of the channel, but the channel width varies as a function of water depth, as shown in Fig. 9.5 (b) and 9.8 to keep the velocity constant at varying discharge.)

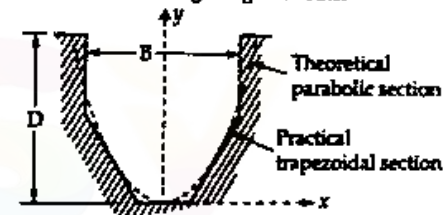
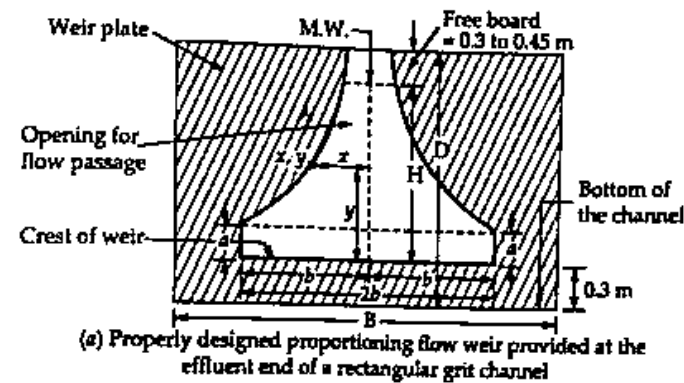


Fig. 9.5. Velocity control sections for horizontal grit channels.

9.7.1. Design of a Rectangular Grit Chamber provided with a Proportioning Flow Weir at Effluent End. The depth and detention time provided for a grit basin are inter dependent, and are based on the considerations of settling velocity of inorganic particles through water. A detention time of about 40 to 60 seconds (1 minute) is generally sufficient for a water depth of about 1 to 1.8 m.* After fixing the water depth and the detention time, we can easily design the dimensions of a rectangular chamber, as its length will then be equal to velocity $\times$ detention time.

As stated earlier, generally two to three separate chambers in parallel (as shown in Fig. 9.6) should be provided; one to pass the low flow, and the other to pass (along with the first of course) the high flow. This will also help in manual cleaning of the chambers, as one unit can work, while the other is shut down for cleaning.

*Settling velocity of inorganic matter is given by equation (9.8) as,

$$V_s = d(3T + 70)$$

For $T = 25^\circ\text{C}$, and $d = 0.2$ mm, we get

$$V_s = \frac{0.2}{10 \times 100} (3 \times 25 + 70) = 0.029 \text{ m/sec.}$$

$$\therefore \text{Detention time in secs} = \frac{\text{Depth}}{\text{Settling velocity}} = \frac{\text{Depth}}{0.029} = 34 \text{ Depth in m.}$$

$$\therefore \text{Detention time} = 34D \text{ (where } D \text{ is the depth in m).}$$

$$\therefore \text{For depth of 1 m, detention time} = 34 \text{ secs (= 40 secs).}$$

$$\text{And for a depth of 1.8 m, detention time} = 34 \times 1.8 = 61 \text{ secs (= 60 secs).}$$

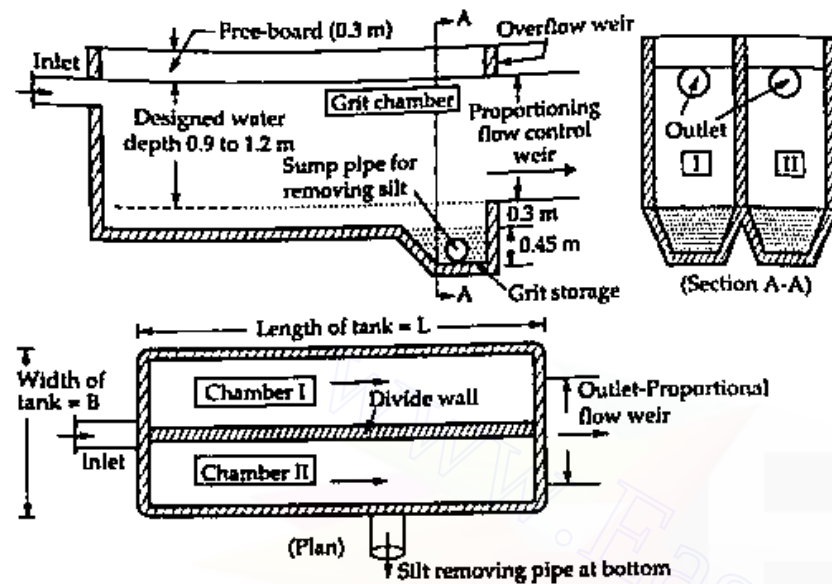


Fig. 9.6. Typical Rectangular Grit chamber (Not showing Scraper arrangement).

The grit chambers can be cleaned periodically at about 3 weeks interval, either manually, mechanically or hydraulically. Hand cleaning is done only in case of smaller plants (of capacity less than about 4.5 million litres per day), while mechanical or hydraulic cleaning is adopted for larger plants. In *manual cleaning*, grit is removed manually by shovels, etc., while in *mechanical cleaning*, grit is removed with the help of machines; and in *hydraulic cleaning*, grit is removed by the force of water-jet directed from a central point and removed through the pipes in the side walls or bottom of the chamber.

The removed grit may contain some organic matter, and can be washed prior to its disposal, if necessary, by using certain patented machines, and the wash water returned to the plant influent. Washed grit may still contain about 1 to 5% of putrescible organic matter.

The silt and grit, etc. removed by the grit chambers can be easily disposed off either by burial or burning (incineration) or for raising low lying areas by dumping. It cannot be used for preparation of concrete, as it contains sufficient organic matter.

9.7.7.1. Design of proportioning flow weir. The modified weir shape w.r. to Fig. 9.5 (a) can be designed by using the following equation

$$x = \frac{2 \cdot B \cdot V_h}{C_d \cdot \sqrt{2g} \cdot \pi \cdot \sqrt{y}} \quad \dots(9.11)$$

where B = width of channel

V_h = horizontal flow velocity

C_d = coefficient of discharge ≈ 0.62

x and y are coordinates on weir profile, shown in Fig. 9.5 (a).

The bottom portion of the weir is slightly modified to a rectangle of width $2b$ and height a . The recommended minimum value of a is 0.025 m (25 mm) for domestic wastewaters. The value of b can be computed from Eq. (9.11) for assumed value of a , by using $y = a$ in the above equation, i.e.

$$b = \frac{2 \cdot B \cdot V_h}{C_d \cdot \sqrt{2g} \cdot \pi \cdot \sqrt{a}} = \frac{2B \cdot V_h}{0.62 \times \sqrt{2 \times 9.81} \times 3.14 \times \sqrt{0.025}}$$

or

$$b = 1.467 \cdot B \cdot V_h$$

...(9.12)

Example 9.2 (a) A rectangular grit chamber is designed to remove particles with a diameter of 0.2 mm, specific gravity 2.65. Settling velocity for these particles has been found to range from 0.016 to 0.022 m/sec, depending on their shape factor. A flow through velocity of 0.3 m/sec will be maintained by proportioning weir. Determine the channel dimensions for a maximum wastewater flow of 10,000 cu m/day.

Solution. Let us provide a rectangular channel section, since a proportional flow weir is provided for controlling velocity of flow.

Now,

Horizontal velocity of flow = $V_h = 0.3$ m/sec.

Settling velocity is between 0.016 to 0.022 m/sec, and hence let it be 0.020 m/sec.

Now, $Q = \text{velocity} \times \text{cross-section}$

or

$$Q = V_h \times A$$

where $Q = 10,000$ cu m/day

$$= \frac{10000}{24 \times 60 \times 60} \text{ m}^3/\text{s} = 0.116 \text{ m}^3/\text{s}$$

$$0.116 = 0.3 \cdot A$$

$$A = \frac{0.116}{0.3} \quad \text{or} \quad A = 0.385 \text{ m}^2$$

Assuming a water depth (H) of 1 m above the crest of the weir, which is kept at 0.3 m above the channel bottom, we have the width (B) of the basin as

$$1 \times B = 0.385$$

or

$$B = 0.385 \text{ m ; say } 0.4 \text{ m}$$

Overall depth of grit chamber (D)

= Water depth above the crest of weir + 0.3 m

+ Free board of 0.45 m

$$= 1.0 \text{ m} + 0.3 \text{ m} + 0.45 \text{ m} = 1.75 \text{ m}$$

Now, settling velocity

$$V_s = 0.02 \text{ m/sec}$$

$$\therefore \text{Detention time} = \frac{\text{Water depth in the basin}}{\text{Settling velocity}} = \frac{1}{0.02} = 50 \text{ secs}$$

$$\therefore \text{Length of the tank} = V_h \times \text{Detention time} = 0.3 \times 50 \text{ m} = 15 \text{ m}$$



The length of the channel is increased beyond theoretical value by a factor of 10–50% to account for non-idealities in the flow and settling of particles. Hence, using about 30% (say) increased length, we get $L = 20$ m.

Hence, use a rectangular tank, with dimensions :

$$\left. \begin{array}{l} \text{Length } (L) = 20 \text{ m} \\ \text{Width } (B) = 0.4 \text{ m} \\ \text{Depth } (D) = 1.75 \text{ m} \end{array} \right\} \text{ Ans.}$$

9.7.2. Design of Parabolic or V-shaped Grit Chamber provided with a Parshall Flume

9.7.2.1. Parshall flume. A parshall flume, also called a venturi flume, is a horizontally constricted vertical throat provided in a rectangular section of an open channel, as shown in Fig. 9.7. Such a venturi-flume, as we know, can be used as the best discharge measuring device, as it involves negligible head loss, giving smooth hydraulic flow and preventing deposition of solids. A parshall flume can also work under submerged conditions for certain limits. These limits of submergence are : 50% in case of 0.15 m throat width, and 70% for wider throat widths upto 1 m. Another advantage of a venturiflume is, that : one control section can be installed for 2 to 3 grit chambers. All treatment plants are often equipped with such discharge measuring devices, to exercise control on flow. Some existing STP's have venturimeters in the discharge piping from the wet well, but these are not recommended because of potential operation and maintenance problems.

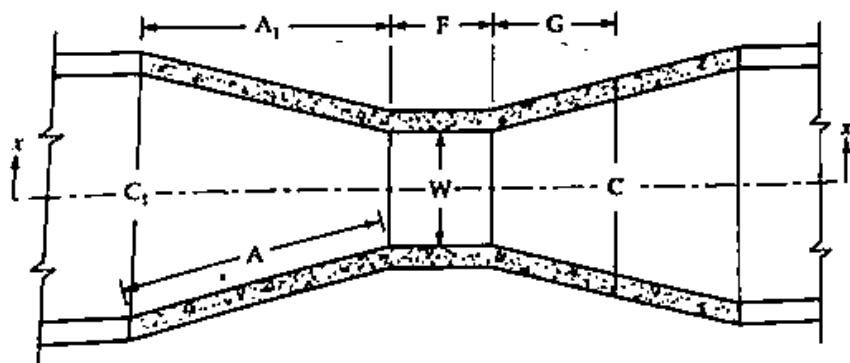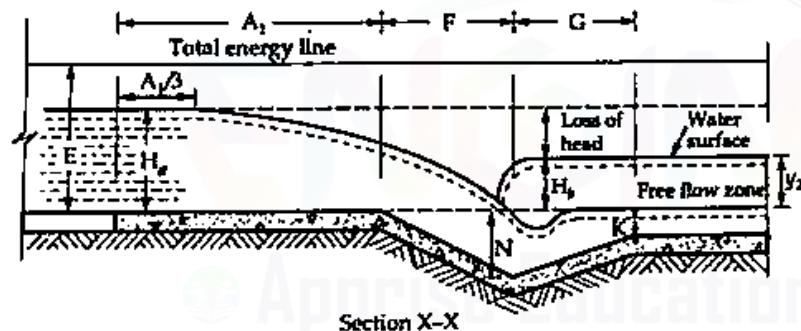

The discharge passing through a parshall flume of the type shown in Fig. 9.7, is related to the water head (i.e. upstream water depth) by the formula :

$$Q = 2.264 W \cdot (H_a)^{3/2} \quad \dots(9.13)$$

where W = The width of the throat in m

Q = Flow in m^3/sec

H_a = Depth of flow in upstream leg of flume at one third point in m.

The above equation is applicable to flumes of 0.3 m to 3 m in width.

Typical design dimensions for parshall flumes are given in table 9.2.

Table 9.2. Standard Dimensions of Parshall flume
(w.r. to Fig. 9.7) in cm.

Flow range max. in M.L./sec	Throat width W	A	A ₁	C	C ₁	F	G	K	N
Upto	7.5	46.0	45.0	17.5	25.5	15.0	60.0	2.5	5.6
5–30	15.0	61.0	60.0	31.5	39.1	30.0	60.0	7.5	11.3
30–45	22.5	86.5	85.0	37.5	56.6	30.0	75.0	7.5	11.3
45–170	30.0	135.0	132.2	60.0	83.1	60.0	90.0	7.5	22.5
170–250	45.0	142.5	139.7	75.0	101.0	60.0	90.0	7.5	22.5
250–350	60.0	150.0	147.2	90.0	118.8	60.0	90.0	7.5	22.5
350–500	90.0	165.0	161.9	120.0	154.7	60.0	90.0	7.5	22.5
500–700	120.0	180.0	178.6	150.0	190.6	60.0	90.0	7.5	22.5
700–850	150.0	210.0	206.0	210.0	262.5	60.0	90.0	7.5	22.5
850–1400	240.0	240.0	235.3	270.0	334.4	60.0	90.0	7.5	22.5

9.7.2.2. Parabolic grit channel. In order to maintain a constant horizontal flow velocity (V_h) through a grit channel, we have to ensure that the cross-sectional area of the channel changes with the changed discharge in direct proportion to the change in discharge. Thus, if x is taken along the width side, and y is taken along the depth side of a channel x -section, then the cross-section must be such that

$$V_h = \frac{Q}{\int_0^y x \cdot dy} = \text{constant} = C_1$$

$$\text{or } Q = C_1 \cdot \int_0^y x \cdot dy \quad \dots(9.14)$$

Also, the discharge through the control section such as a surge weir or a parshall flume, placed at the down end of the grit channel, in general, is given by the equation

$$Q = C_2 \cdot y^n \quad \dots(9.15)$$

where n is the discharge coefficient of the control section ; i.e. 1.5 for parshall flume, and 1 for proportional flow weir.

Equating Q from equations (9.14) and (9.15), we get

$$C_1 \int_0^y x \cdot dy = C_2 \cdot y^n$$

$$\text{or } C_1 \cdot x \cdot y = C_2 \cdot y^n \text{ or } y^{n-1} = \frac{C_1}{C_2} \cdot x$$

$$\text{or } y^{n-1} = C' \cdot x \quad \dots(9.16)$$

For a parshall flume, $n = 1.5$,

$$\therefore y^{1.5-1} = C' \cdot x \text{ or } y^{1/2} = C' \cdot x$$

$$\text{or } y = C \cdot x^2 \quad \dots(9.16a)$$

Hence, when parshall flume is provided at the affluent end of a channel, then the channel section should be governed by equation $y = C \cdot x^2$ (x representing width, and y representing depth); which is a parabolic section. Such a parabolic section can be approximated to a trapezoidal section. The method of designing the dimensions of a parabolic grit channel is explained in example 9.2 (b).

If a rectangular channel is used instead of a parabolic channel, then its width is constant;

i.e. $x = k$. Then, using equation (9.16), we have

$$y^{n-1} = C' \cdot x$$

$$= C' \cdot k \text{ or } y^{n-1} = C''$$

$$\text{or } n - 1 = 0 \text{ or } n = 1.$$

Hence, for a rectangular channel section, we need a control section, such as a proportional flow weir, whose discharge equation is of the form

$$Q = K \cdot y \quad \dots(9.16b)$$

where K is a constant.

Example 9.2 (b) Design a parabolic (trapezoidal) grit chamber for a horizontal velocity of 25 cm/sec and a flow which ranges from a minimum of 25000 cu-m/day to a maximum of 1,00,000 cu-m/day. Average flow is 62500 cu-m/day.

Solution. Let us adopt 4 grit channels, each designed to carry discharges as:

- (i) Minimum discharge $= \frac{25000}{4} = 6250$ cu m/day
- (ii) Normal maximum discharge $= \frac{1,00,000}{4} = 25000$ cu m/day
- (iii) Average discharge $= \frac{62500}{4} = 15625$ cu m/day
- (iv) Let each unit be designed to carry a peak discharge of 1.33 times the normal max. discharge, say
 $= 1.33 \times 25000 = 33,325$ cu-m/day.

Let a vertically controlled flume be used to maintain constant velocity. The flow in the control section is assumed to be at critical depth.

Let us now design the parabolic channel X-section:

For a parabolic channel,

$$\text{Area of cross-section} = A = \frac{2}{3} B.D.$$

where B = Top width

$$\text{Since } A = \frac{Q}{V_A}; \text{ and } V_A = 0.25 \text{ m/sec,}$$

(for all discharges), we can easily work out, A values corresponding to peak, maximum, average, and minimum discharges.

$$\therefore A \text{ for } Q_{\text{peak}} = (A_{\text{peak}}) = \frac{Q_{\text{peak}}}{0.25} = \frac{33325}{24 \times 60 \times 60} \times \frac{1}{0.25} \text{ m}^2$$

$$= \frac{0.386}{0.25} = 1.54 \text{ m}^2. \quad \dots(i)$$

Similarly,

$$A \text{ for } Q_{\text{max}} = (A_{\text{max}}) = \frac{25000}{24 \times 60 \times 60} \times \frac{1}{0.25} = \frac{0.289}{0.25} = 1.16 \text{ m}^2 \quad \dots(ii)$$

$$A \text{ for } Q_{\text{av.}} = (A_{\text{av.}}) = \frac{15625}{24 \times 60 \times 60} \times \frac{1}{0.25} = \frac{0.181}{0.25} = 0.72 \text{ m}^2 \quad \dots(iii)$$

$$A \text{ for } Q_{\text{min}} = (A_{\text{min}}) = \frac{6250}{24 \times 60 \times 60} \times \frac{1}{0.25} = \frac{0.072}{0.25} = 0.29 \text{ m}^2. \quad \dots(iv)$$

At maximum discharge

Let us limit the maximum width of the channel to 1.5 m at Q_{max} . Then, we have

$$A_{\text{max}} = \frac{2}{3} B \cdot D_{\text{max}} = \frac{2}{3} \times 1.5 \text{ m} \times D_{\text{max}} \quad \dots(v)$$

Equating eqn. (ii) and (v), we have

$$1.16 = \frac{2}{3} \times 1.5 \cdot D_{\text{max}}$$

$$\text{or } D_{\text{max}} = \frac{1.16 \times 3}{2 \times 1.5}$$

$$\text{or } D_{\text{max}} = 1.16 \text{ m.}$$

The total energy upstream of control section is given by

$$E_1 = D + \frac{V_1^2}{2g} \quad \dots(vi)$$

$\approx D$ (neglecting velocity of approach in channel)

$$\text{or } E_1 = D \quad \dots(vii)$$

Hence at maximum discharge

$$E_1 = D_{\text{max}} = 1.16 \text{ m} \quad \dots(viii)$$

Total energy at critical point i.e. at the point of jump formation

$$= E_c = y_c + \frac{V_c^2}{2g} + H_L \quad \dots(9.17)$$

where H_L is the energy or head loss in jump.

Assuming that the head loss in control section (H_L) is 10% of the velocity head in the control section, we have

$$H_L = 0.1 \frac{V_c^2}{2g}$$

$$\therefore E_c = y_c + \frac{V_c^2}{2g} + 0.1 \frac{V_c^2}{2g} \quad \dots(9.17a)$$

But, in the control section, at critical depth, we know

$$y_c = \frac{V_c^2}{g} \quad \dots(9.18)$$

$$\therefore E_c = \frac{V_c^2}{g} + \frac{V_c^2}{2g} + 0.1 \frac{V_c^2}{2g}$$

$$\text{or } E_c = \frac{3.1}{2} \cdot \frac{V_c^2}{g}$$

$$\text{or } E_c = 1.55 \frac{V_c^2}{g} \quad \dots(9.17b)$$

Using Bernoulli's theorem,

Total energy at u/s point in channel

= Total energy at critical point in control section

$$\text{or } E_1 = E_c = 1.55 \frac{V_c^2}{g}$$

But $E_1 = D$ (from eq. vii)

$$\therefore \boxed{D = 1.55 \frac{V_c^2}{g}} \quad \dots(9.19)$$

Using the value of $D_{\max}$, as equal to 1.16 at maximum discharges, we have

$$\therefore V_c \text{ at } Q_{\max} = \sqrt{\frac{1.16 \times 9.81}{1.55}} = 2.71 \text{ m/sec.}$$

$$\text{Also } y_c \text{ at } Q_{\max} = \frac{V_c^2 \text{ at } Q_{\max}}{g} = \frac{(2.71)^2}{9.81} = 0.74 \text{ m.}$$

The discharge through the control section is :

$$Q = (W \cdot y_c) V_c \quad \dots(9.20)$$

where W is the throat width ;

and $W \cdot y_c$ is the flow area of the throat.

$$\text{or } W = \frac{Q}{y_c \cdot V_c} \quad \dots(9.20 a)$$

$$\begin{aligned} \therefore W &= \frac{Q_{\max}}{y_c \cdot V_c \text{ (both at } Q_{\max})} \\ &= \frac{0.289}{0.74 \times 2.71} = 0.144 \text{ m} \end{aligned}$$

Hence, use throat width $W = 0.144 \text{ m}$.

For other flow conditions. Using the above used two formulas, we have

$$y_c = \frac{V_c^2}{g} \quad \dots(\text{i.e. eqn. 9.17})$$

$$\text{Also } W \cdot y_c \cdot V_c = Q \quad \dots(\text{i.e. eqn. 9.19})$$

$$\begin{aligned} \therefore V_c &= \frac{Q}{W \cdot y_c} \quad \text{or } y_c = \frac{\left(\frac{Q}{W \cdot y_c}\right)^2}{g} \\ \text{or } g \cdot y_c \cdot y_c^2 W^2 &= Q^2 \\ \text{or } y_c^3 &= \frac{Q^2}{g \cdot W^2} \quad \text{or } y_c = \sqrt[3]{\frac{Q^2}{g W^2}} \quad \dots(9.21) \end{aligned}$$

Knowing Q and W , we can find y_c at different discharges.

From eqn. (9.13) derived above, we have

$$D = 1.55 \cdot \frac{V_c^2}{g}$$

$$\text{or } D = 1.55 y_c \quad \dots(9.22)$$

Knowing y_c at different discharges, we can find D at different discharges.

Then finally, we have for a parabolic section

$$\frac{2}{3} \times B \times D = A$$

$$\therefore B = \frac{1.5A}{D} \quad \dots(9.23)$$

Knowing A at various discharges, already computed, we can find B at different discharges, because D is known at different discharges.

The values of B are, thus, calculated for other discharges, as shown in table 9.3.

With B and D values, computed in col. (6) and (7) of the above table, we can draw the parabolic section, which is approximated to a practical trapezoidal section, as shown in Fig. 9.8.

Table 9.3

Cond.	Q m ³ /day	Q in m ³ /sec	A m ²	$y_c = \sqrt[3]{\frac{Q^2}{g W^2}}$ where $W = 0.144$	$D = 1.55 y_c$	$B = \frac{1.5A}{D}$
(1)	(2)	(3)	(4)	(5)	(6)	(7)
Peak	33,325	0.386	1.54	0.90	1.40	1.65*
Maximum	25000	0.289	1.16	0.74	1.15	1.51
Average	15625	0.181	0.72	0.54	0.84	1.29
Minimum	6250	0.072	0.29	0.29	0.45	0.97

*Limited to 1.51 m.

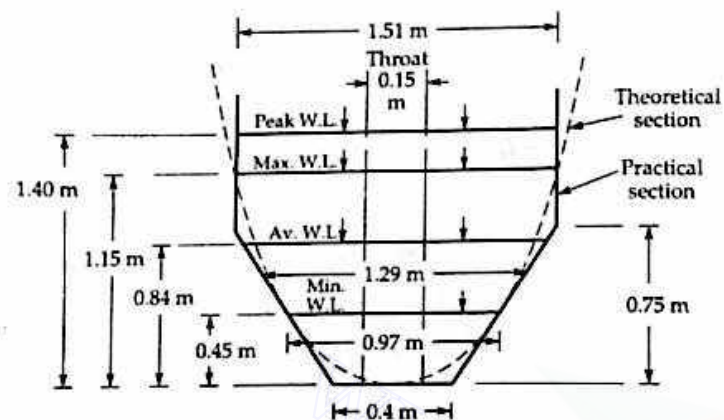


Fig. 9.8. Grit channel section for example 9.2 (b).

9.8. Aerated Grit Channels

Aerated grit channels are like *spiral flow aeration tanks**, usually designed to provide detention periods of about 3 minutes at the maximum rate of flow. The rectangular tank cross-section is also similar to that provided for spiral circulation in activated-sludge aeration tanks*, except that a grit hopper at about 0.9 m depth with steeply sloping sides is located under the air diffusers, as shown in Fig. 9.9 (a). The air diffusers are located at about 0.45 m to 0.60 m above the normal bottom of the tank.


The spiral roll or *helical flow* of waste water in the grit chamber (Fig. 9.9 (b)) 'drives' the grit into the hopper. The shearing action of the air bubbles is supposed to strip the inert grit of much of the organic material that adheres to its surface.

The performance of an aerated grit chamber is a function of the *roll velocity* and *detention time*. If the velocity of roll is too high, grit will be carried through the chamber; and if it is too low, organic matter may also settle down along with the grit. The roll velocity can, however, be easily controlled by adjusting the air feed rate, which may range between 0.15 to 0.45 cubic metre per minute of air per metre of tank length (typical value being 0.30 m³/min per m length).


Liquid detention time is kept in the design at about 3 minutes at maximum flow. Length to width ratios may range from 2.5 to 7.0 with depths of the order of 2 to 5 m, with width-depth ratio varying between 1 : 1 to 5 : 1 (typical value being 2 : 1).

Grit accumulation in the chamber varies largely, depending on whether the sewer system is of a combined type, or of a separate type; and also on the efficiency of the chamber. For combined systems, 90 m³ of grit per M.cum of sewage is not uncommon, while in a separate system, one might expect something less than 30 m³/M.cum of sewage. Normally, the grit is buried in a sanitary landfill site, being free of organic matter.

*Explained in article 9.33.2.

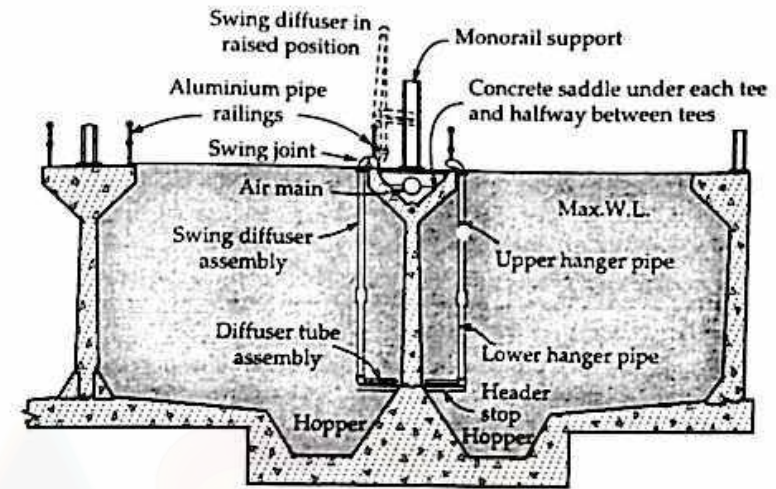

(a) Typical section through a two chambered aerated grit channel

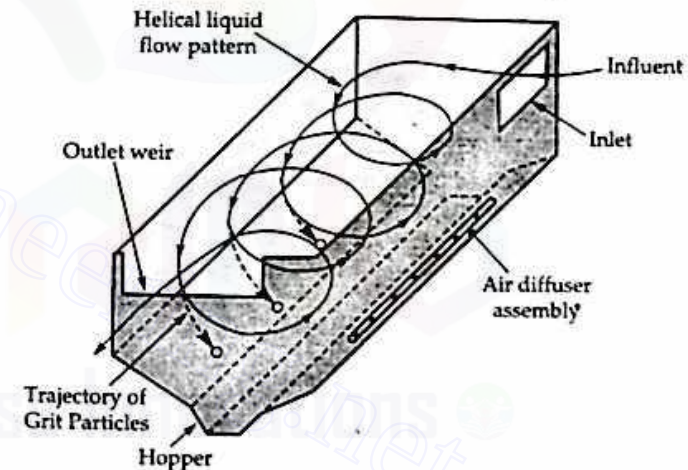

(b) Helical liquid flow pattern (spiral roll) in an aerated grit chamber

Fig. 9.9. Aerated grit chamber.

Many aerated chambers have been provided with mechanical means for grit removal in the form of *grab buckets* [Pl. see Colour Photo Fig. 9.1(a) under article 9.47] travelling on monorails, centred over the grit collection and storage trough. Other installations are equipped with chain-and-bucket conveyor, running the full length of the storage troughs, which move the grit to one end of the trough, and elevate it above the waste water level in a continuous operation. Screw conveyors, jet pumps, and air lift pumps have also been used for hydraulical removal of the grit.

Aerated grit channels have been used at 690 MLD *Ghatkopar Sewage Treatment Plant, Mumbai*, where the lifted sewage at the plant is first made to pass through the 4 No. semi automatic screens of 1600 × 2000 mm size to arrest the floating solids, and the screened sewage is made to flow through the 4 No. aerated grit channels to settle out inorganic particles of sp. gravity = 2.6 and of size 0.2 mm and above. The spiral current within the grit is created by the use of diffused air, being let into the grit channels through the compressor. The rate of air supply is adjusted to create the velocity in the bottom, low enough to allow the grit to settle. The settled grit is removed by Grab and Crane machinery, as can be seen in the colour Photo Fig. 9.1 (a) and (b). The sewage from the grit channels at this plant is finally admitted into the aerated lagoons for final treatment, as explained in details in article 9.47.

Aerated grit channels have also been used at another sewage treatment plant at Mumbai, called the *Love Grove Waste Water Treatment Facility Terminal at Worli*, where the outflow from the grit channels is directly discharged into the sea through a 3.5 km long *marine outfall* conduit, as explained in article 8.5.

Example 9.3. Design an aerated grit chamber for treating municipal waste water with average flow rate of $0.5 \text{ m}^3/\text{s}$ (43.2 MLD). Assume the peak flow rate to be 3 times the average.

Solution. Peak flow rate = $0.5 \text{ m}^3/\text{sec} \times 3 = 1.5 \text{ m}^3/\text{s}$

Assume average liquid detention time = 3 min = 180 sec.

∴ Aerator volume = $1.5 \text{ m}^3/\text{s} \times 180 \text{ s} = 270 \text{ m}^3$

In order to drain the channel periodically for routine cleaning and maintenance, use two chambers.

∴ Volume of one aerated channel = $\frac{270 \text{ m}^3}{2} = 135 \text{ m}^3$

To determine the dimensions of the aerated channel, assume depth of 3 m and width-depth ratio of 2 : 1.

∴ Width of channel = Depth × 2 = 3 m × 2 = 6 m

∴ Length of channel = $\frac{135 \text{ m}^3}{3 \text{ m} \times 6 \text{ m}} = 7.5 \text{ m}$

Increase the length by about 20% to account for inlet and outlet conditions.

∴ Provided length = $7.5 \times 1.2 = 9 \text{ m}$.

Hence, use 2 chambers, each of size 9 m × 6 m × 3 m depth. **Ans.**

Air supply requirement. Assume that $0.03 \text{ m}^3/\text{min}$ per m length may be adequate,

Air required = $0.03 \frac{\text{m}^3}{\text{min} \cdot \text{m}} \times 9 \text{ m} = 0.27 \text{ m}^3/\text{min}$. **Ans.**

Volume of grit produced daily. Assume that $50 \text{ m}^3/\text{M}$ cum of sewage of grit is produced by the incoming sewage, the daily grit volume produced

= Peak flow rate of sewage in $\text{m}^3/\text{d} \times$ Grit produced per m^3 of sewage

$$= 1.5 \frac{\text{m}^3}{\text{s}} \times \left(24 \times 3600 \frac{\text{s}}{\text{d}} \right) \times \frac{50 \text{ m}^3}{10^6 \text{ m}^3} = 6.48 \text{ m}^3/\text{d}. \text{ Ans.}$$

[Note. The grit handling facilities must be based on sustained peak flow rate. Hence, the arrangement for removal of grit @ $6.48 \text{ m}^3/\text{d}$ must be provided.]

9.9. Detritus Tanks

Detritus tanks are nothing but rectangular grit chambers, designed to flow with a smaller flow velocity (of about $0.09 \text{ m}/\text{sec}$) and longer detention periods (about 3 to 4 minutes) so as to separate out not only the larger grit, etc., but also to separate out the very fine sand particles, etc. Due to this, a large amount of organic matter will also settle out along with the inorganic grit, sand, etc. This organic material is then separated from the grit by control of currents in the tank through baffles, or by controlled aeration of the flow through the tank. The rising air bubbles will then separate the lighter organic matter from the descending grit. The grit is removed continuously by means of scraper mechanism. All other details of detritus tanks remain the same as those of a rectangular grit chamber.

Example 9.4. Design a suitable grit chamber cum Detritus tank for a sewage treatment plant getting a dry weather flow from a separate sewerage system @ $400 \text{ l}/\text{s}$. Assume the flow velocity through the tank as $0.2 \text{ m}/\text{sec}$; and detention period of 2 minutes. The max. flow may be assumed to be three times of dry weather flow.

Solution. The length of the tank

$$= \text{Velocity} \times \text{Detention time} = 0.2 \times (2 \times 60) = 24 \text{ m}.$$

Since the peak flow is three times the DWF, let us provide three detritus tanks, each designed for passing D.W.F.

∴ The discharge passing through each tank = $400 \text{ l}/\text{s} = 0.4 \text{ m}^3/\text{sec}$.

∴ Cross-sectional area required = $\frac{\text{Discharge}}{\text{Velocity}} = \frac{0.4}{0.2} = 2 \text{ m}^2$.

Assuming the water depth in the tank to be 1.2 m, we have the width of the tank

$$= \frac{\text{Area of X-section}}{\text{Depth}} = \frac{2}{1.2} = 1.67 \text{ m}; \text{ say } 1.7 \text{ m}.$$

Hence, use a Detritus tank with $24 \text{ m} \times 1.7 \text{ m} \times 1.2 \text{ m}$ size.

At the top, a free-board of 0.3 m may be provided; and at the bottom, a dead space depth of 0.45 m for collection of detritus may be provided.

Thus, the overall depth of the tank

$$= 1.2 + 0.3 + 0.45 = 1.95 \text{ m}.$$

The tank will be 1.7 m wide upto 1.5 m depth, and then the sides will slope down to form an elongated trough of 24 m length and 0.8 m width at the bottom with rounded corners, as shown in Fig. 9.10.

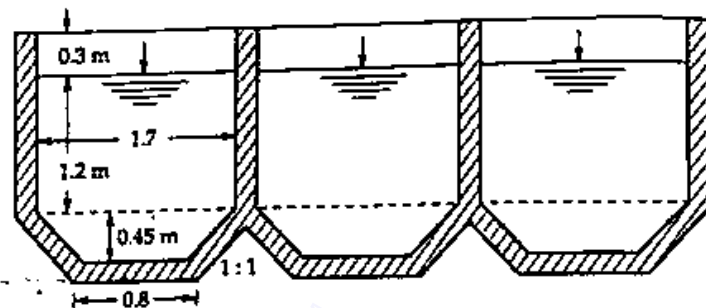


Fig. 9.10

TANKS FOR REMOVING OILS AND GREASE


9.10. Skimming Tanks

Skimming tanks are sometimes employed for removing oils and grease from the sewage, and placed before the sedimentation tanks. They are, therefore, used where sewage contains too much of grease or oils, which include fats, waxes, soaps, fatty acids, etc. These materials may enter into the sewage from the kitchens of restaurants and, houses, from motor garages, oil refineries, soap and candle factories, etc. They are, thus, normally present in large amounts in the industrial wastewaters.

If such greasy and oily matter is not removed from the sewage before it enters further treatment units, it may form unsightly and odorous scums on the surface of the settling tanks, or interfere with the activated sludge treatment process, and inhibit biological growth on the trickling filters.

These oil and greasy materials may be removed in a skimming tank, in which air is blown by an aerating device through the bottom. The rising air tends to coagulate and congeal (solidify) the grease, and cause it to rise to the surface (being pushed in separate compartments), from where it is removed.

The typical details of a skimming tank are shown in Fig. 9.11. It consists of a long trough shaped structure divided into two or three lateral compartments

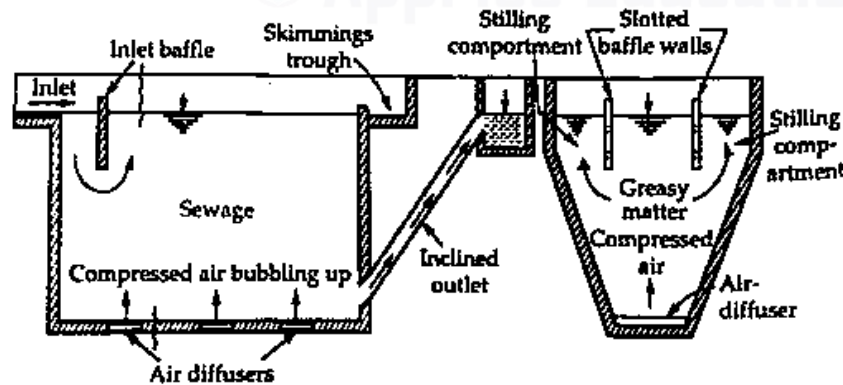

(b) X-section

by means of vertical baffle walls (having slots in them) for a short distance below the sewage surface, as shown in Fig 9.11 (b). The baffle walls help in pushing the rising coagulated greasy material into both the side compartments (called stilling compartments). The rise of oils and grease is brought about by blowing compressed air into the sewage from diffusers placed at the bottom of the tank. The collected greasy materials are removed (i.e. skimmed off) either by hand or by some mechanical equipment. It may then be disposed of either by burning or burial.

Sewage enters the tank from one end, flows through longitudinally, and finally goes out through a narrow inclined duct, as shown. This is so narrow that the suspended heavier particles are carried up its slope and out of the tank. A detention period of about 3 to 5 minutes is usually sufficient, and the amount of compressed air required is about 300 to 6000 m³ per million litres of sewage. The surface area required for the tank can be found out by using the formula :

$$A = 0.00622 \frac{q}{V_r} \quad \dots(9.24)$$

where q = Rate of flow of sewage in m³/day.

V_r = Minimum rising velocity of greasy material to be removed in m/minute

= 0.25 m/minute in most cases.

The efficiency of a skimming tank can be increased considerably (three to four times) by passing chlorine gas (2 mg per litre of sewage) along with the compressed air. Chlorine may also be added as a solution with the sewage discharge, just ahead of the air diffuser plates. The action of chlorine is to destroy the protective colloidal effect of protein, which holds the grease in emulsified form.

9.11. Vacuators

Grease can also be removed from the sewage by vacuum floatation method, by subjecting the aerated sewage to a vacuum pressure of about 0—25 cm of mercury for 10 to 15 minutes in a vacuator. This causes the air bubbles to expand and move upward through the sewage to the surface. The rising bubbles lift the grease and the lighter waste solids to the surface, where they are removed through skimming troughs. Heavier solids settle to the tank bottom, where they are collected and carried away for sludge treatment and disposal.

9.12. Disposal of Skimmings

The oil and greasy material removed as skimmings from the skimming tanks or vacuators can be disposed of either by burning or burial. It is generally too polluted to be of any economic use. However, it may sometimes be converted into soap lubricants, candles and other non-edible products. It may sometimes be digested in digestors, which prove beneficial only if the mineral oils are less in amount, and vegetable and organic matters predominate. The latter digest easily, and produce gases of high fuel value.

9.13. Necessity and Use of Skimming Tanks in India

In hot countries like India, it is very difficult to skim out the oils and grease, because they do not coagulate and congeal (solidify due to cooling) easily. Moreover, in normal municipal wastewaters, they are generally found in very meagre quantities. They are, however, largely present in particular industrial wastewaters. Attempts are, therefore, generally made in India, to remove the greasy matters before they enter the municipal sewers, by constructing oil and grease traps, as discussed in chapter 5.

Skimming tanks are, hence, generally not provided here in India at our treatment plants. They may, however, be provided in particular industrial towns, or at colder hill stations like Shimla, Mussoorie, Nainital, etc., where the greasy materials may congeal easily.

SEDIMENTATION

9.14. Necessity of Sedimentation in Treatment of Waste Waters

As discussed in the previous pages, the screens and the grit chambers do remove most of the floating materials (like paper, rags, cloth, wood, tree branches, etc.) and the heavy inorganic settleable solids from the sewage. However, a part of the suspended organic solids which are too heavy to be removed as floating matters, and too light to be removed by grit chambers (designed to remove only the heavy inorganic solids of size more than 0.2 mm, and of sp. gravity 2.65), are generally removed by the sedimentation tanks. The sedimentation tanks are thus designed to remove a part of the organic matter from the sewage effluent coming out from the grit chambers.

In a complete sewage treatment, the sedimentation is, in fact, carried out twice; once before the biological treatment (i.e. primary sedimentation) and once after the biological treatment (i.e. secondary sedimentation). When chemical coagulants are also used for flocculating the organic matter during the process of sedimentation, the process is called *chemical precipitation or sedimentation aided with coagulation*. This is generally not used in modern days, as discussed, later.

Other sewage treatment units which work on the principle of sedimentation are: *Septic tanks, Imhoff tanks*, etc. Septic tanks and Imhoff tanks combine sludge digestion with sedimentation, whereas the sludge deposited in primary as well as in the secondary settling tanks, is separately digested in the *sludge-digestion tanks*.

9.15. Sedimentation Tanks

The clarification of sewage by the process of 'sedimentation' can be affected by providing conditions under which the suspended material present in sewage can settle out. This is brought about in specially designed tanks called sedimentation tanks.

Out of the three forces which control the settling tendencies of the particles (enumerated earlier), the two forces i.e. the velocity of flow, and the shape and size of the particles, are tried to be controlled in these settling tanks. The third force i.e. the viscosity of sewage or the temperature of sewage is left uncontrolled, as the same is not practically possible.

The velocity of flow can be reduced by increasing the length of travel, and by detaining the particles for a longer time in the sedimentation basin. The size and the shape of the particles can be altered by the addition of certain chemicals in water. These chemicals are called *coagulants*, and they make the sedimentation quite effective leading to the settlement of even very fine and colloidal particles. However, their use is not made in "Plain Sedimentation" (or generally called "sedimentation"), but is being made in the process called "chemical precipitation" or "sedimentation with coagulation". This will be discussed later.

Sedimentation basins are thus designed for effecting settlement of particles by reducing the flow velocity or by detaining the sewage in them. They are generally made of reinforced concrete and may be rectangular or circular in plan. Long narrow rectangular tanks with *horizontal flow* (Fig. 9.12a) are generally preferred to the circular tanks with *radial or spiral flow* (Fig. 9.12b).

The capacity and other dimensions of the tank should be properly designed, so as to effect a fairly high percentage of removal of the suspended organic material. A plain sedimentation tank under normal conditions may remove about 60 to 65% of the suspended solids, and 30 to 35% of the BOD from the sewage*.

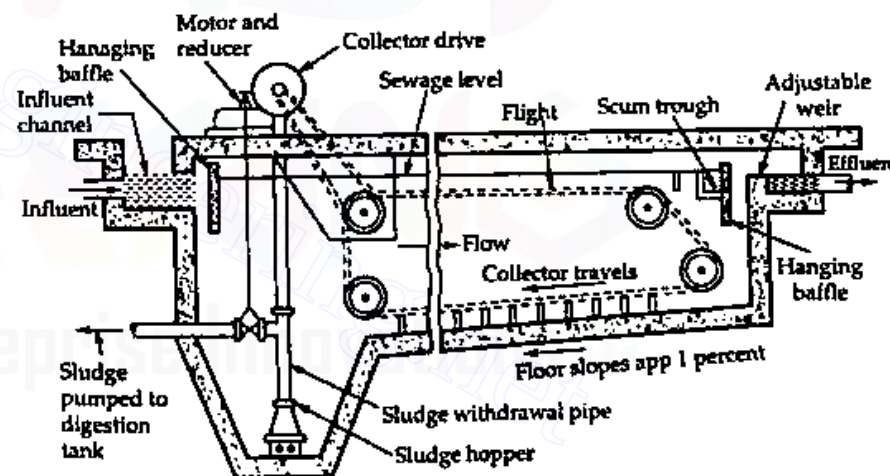


Fig. 9.12 (a) Rectangular sedimentation tank.

*The percentage removal of BOD is lesser than the percentage removal of the suspended solids, because more BOD is caused by the finer non settleable and dissolved solids which escape out through the effluent than due to the settleable solids which are removed in these tanks.

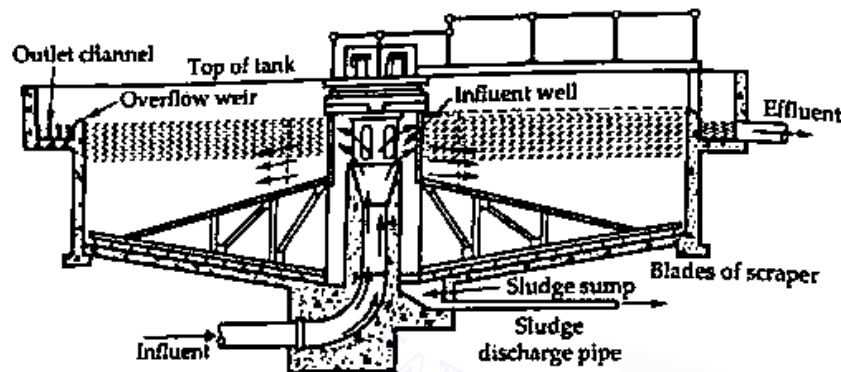


Fig. 9.12 (b) Circular sedimentation tank.

9.15.1. Types of Sedimentation Tanks. Sedimentation tanks may function either intermittently or continuously.

The Intermittent Settling tanks called *quiescent type tanks* are simple settling tanks which store sewage for a certain period and keep it in complete rest. After giving it a rest of about 24 hours, during which the suspended particles settle down to the bottom of the tank, the cleaner sewage from the top may be drawn off, and the tank be cleaned off the settled silt. The tank is again filled with raw sewage to continue the next operation. This type of tank, thus, functions intermittently, as a period of about 30 to 36 hours is required to put the tank again in working condition. This necessitates the commissioning of atleast two tanks. Such tanks are generally not preferred, because a lot of time and labour is wasted and more units are required, *They have, therefore, become completely obsolete these days.*

In a continuous flow type of a sedimentation tank, which is generally used in modern days, the flow velocity is only reduced, and the sewage is not brought to complete rest, as is done in an intermittent type. The working of such a tank is simple, as the water enters from one end, and comes out from the other end. The velocity is sufficiently reduced by providing sufficient length of travel. *The velocity is so adjusted that the time taken by the particle to travel from one end to another is slightly more than the time required for settlement of that particle.* The theory and design of such a tank is discussed below in details.

Flow of eff. of set tank and relation to depth
9.15.2. Design of a Continuous Flow Type of a Sedimentation Tank. In the theory which is applied to the design of such sedimentation basins, it is assumed that the sediment is uniformly distributed as the sewage enters the basin. In Fig. 9.13, let the water containing uniformly distributed sediment, enters the rectangular tank with a uniform velocity V . If Q is the discharge entering the basin, the flow velocity V is given by

$$V = \frac{Q}{BH} \quad \dots(9.25)$$

where B = Width of the tank or basin, and

H = Depth of sewage in the tank.

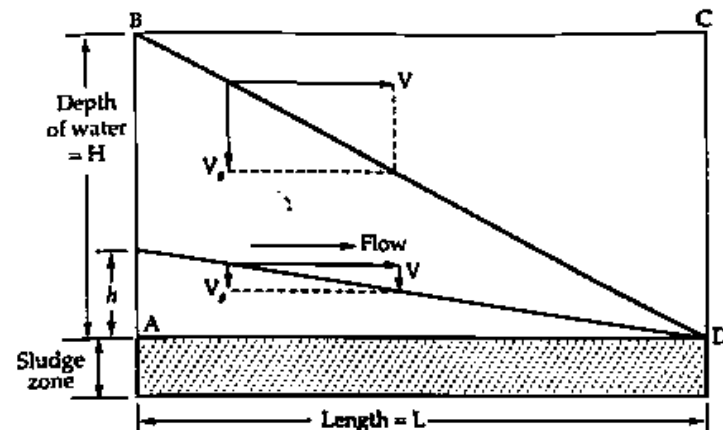


Fig. 9.13. Elevation or L-section of a rectangular sedimentation tank (Line diagram).

Now, every discrete particle is moving with a horizontal velocity V and a downward vertical velocity V_s . The resultant path is given by the vector sum of its flow velocity (V) and its settling velocity (V_s).

Now assuming that all those particles whose paths of travel are above the line BD, will pass through the basin, we have from geometric considerations :

$$\frac{V}{V_s} = \frac{L}{H} \quad \dots(9.26)$$

$$\text{or} \quad V_s = \frac{V \cdot H}{L}$$

$$\text{But} \quad V = \frac{Q}{BH} \quad \text{from equation (9.25)}$$

$$\therefore V_s = \frac{Q}{BH} \cdot \frac{H}{L} \quad \text{or} \quad V_s = \frac{Q}{BL} \quad \dots(9.27)$$

It shows that all those particles with a settling velocity equal to or greater than Q/BL will settle down, and be removed. In other words, no particle having a settling velocity more than or equal to Q/BL will remain suspended in such a tank.

It is mentioned above, that a particle having settling velocity greater than or equal to Q/BL will be removed. In fact, it is the case when the particle entering at full height H of the tank is considered. Truly speaking, even the smaller particles having settling velocities lower than Q/BL will also settle down, if they happen to enter at some other height h of the tank. In that case, when the particles are entering at some other height h of the tank, all those

particles having their settling velocities $\geq \frac{h}{H} \cdot \frac{Q}{BL}$ will settle down.

If y_0 represents the number of particles of a given size that are settled out, and y being the total number of particles of that size, then the percentage of that particular sized particles which shall be removed is y_0/y ; and is equal to h/H for an assumed uniform distribution of particles. Hence, if 70% of

particles of a given size are proposed to be removed in a settling tank, then the settling velocity of that sized particles must be kept $\geq \frac{70}{100} \cdot \frac{Q}{BL}$. In other words

$\frac{Q}{BL}$ must be kept less than equal to

$$\frac{100}{70} \times \text{settling velocity of that sized particle} \quad \dots(9.28)$$

It, therefore, follows that the quantity Q/BL i.e. the discharge per unit of plan area is a very important term for the design of continuous flow type of settling tanks; and is known as **overflow rate** or **surface loading** or **overflow velocity**. *What is overflow rate or surface loading? 5M*

Normal values of overflow rates ranges between 40,000 to 50,000 litres/sq. m/day* for plain primary sedimentation tanks; and between 50,000 to 60,000 litres/sq. m/day for sedimentation tanks using coagulants as aids; and about 25,000 to 35,000 litres/sq. m/day for secondary sedimentation tanks.

Decreasing the overflow rate will lead to the settlement of even those particles which are having lower values of their settling velocities. Hence, smaller particles will also settle down, if the overflow rate is reduced. Further, with a given Q , the overflow rate can be reduced by increasing the plan area of the basin. It therefore, follows that an increase in the plan area (i.e. width $\times$ length) will increase the efficiency of sedimentation tank; and theoretically speaking, depth does not have any effect on the efficiency of sediment removal. However, it is important for practical considerations, and also for making allowance for deposition of sludge and silt.

Usual values of effective depth (i.e. depth excluding the bottom sludge zone) ranges between 2.4 to 3.6 m (generally not exceeding 3 m).

Another important term, which is used in connection with the design of sedimentation basins, is its detention time or detention period or retention

*It is intended to remove 60 to 70% of the organic particles (sp. gr. 1.2) of size larger than 0.06 mm. The settling velocity for such particles is about 0.3 mm/sec or 1.2 m/hr. For affecting settlement, we have

$$\frac{Q}{BL} \leq \frac{100}{70} = 1.2 \text{ m/hr (For affecting 70% removal)}$$

or $\frac{Q}{BL} = 1.2 \text{ m/hr.}$

or $\frac{Q}{BL} = 1.2 \text{ m}^3/\text{m}^2 \text{ plan area/hr.}$
 $= 1700 \text{ litres/m}^2 \text{ of plan area/hr.}$
 $= 1700 \times 24 \text{ litres/m}^2/\text{day}$
 $= 40800 \text{ litres/m}^2/\text{day}$

Similarly, for affecting 60% removal, it can be calculated that

$$\frac{Q}{BL} = 48,000 \text{ l/m}^2/\text{day}$$

Hence, surface loading adopted is about 40,000 to 50,000 l/m²/day for removing

period. The detention time (t) of a settling tank may be defined as the average theoretical time required for the sewage to flow through the tank. It is, thus, the time that would be required for the flow of sewage to fill the tank, if there was no outflow. In other words, it is the average time for which the sewage is detained in the tank. Hence, it is the ratio of the volume of the basin to the rate of flow (i.e. discharge) through the basin.

$\therefore$ Detention time, t , for a Rectangular tank

$$\begin{aligned} &= \frac{\text{Volume of the tank}}{\text{Rate of flow}} \\ &= \frac{B.L.H.}{Q} \end{aligned} \quad \dots(9.29)$$

Similarly, the detention time for a circular tank

$$= \frac{d^2(0.011d + 0.785H)}{Q} \quad \dots(9.30)$$

where d = Dia of the tank

H = Vertical depth at wall or Side water depth.

The detention time for a sewage sedimentation tank usually ranges between 1 to 2 hours*. The lower value of detention period (i.e. 1 hour) is generally adopted when the activated sludge treatment is used in secondary treatment after the sedimentation; and the higher and more normal value (i.e. 2 hours) is generally adopted when the trickling filters are used as the secondary treatment.

Larger detention periods will result in higher efficiency; but too long a period induces septic conditions, and should be avoided. However, if the secondary sedimentation is to be avoided, a longer detention period of about $2\frac{1}{2}$ hours to 3 hours may be adopted.

The width of the tank is normally kept at about 6 m, and not allowed to exceed 7.5 m or so. The length of the tank is generally not allowed to exceed 4 to 6 times the width. The cross-sectional area of the sedimentation tank is such as to provide a horizontal flow velocity of about 0.3 m/minute. The total amount of flow from the tank within 24 hours, generally equals the maximum daily flow of sewage.

The maximum dia of a circular tank may be kept 60 m or so.

What is short circuiting?
9.15.3. Short Circuiting in the Sedimentation Tanks. For the efficient removal of sediment in the sedimentation tanks, it is necessary that the flow is uniformly distributed throughout the cross-section of the tank. If currents, on the other hand, permit a substantial portion of the water to pass directly through the tank without being detained for the intended time, the flow is said to be short circuited. Properly designed inlets and outlets near the entrance and the exit may reduce the short circuiting tendencies, and distribute the flow more evenly. Moreover, relatively narrow tanks are less affected by inlet and outlet disturbances, and by currents caused by breezes.

*The settling velocity of the particles to be separated being of the order of 0.3 mm/sec or 1.2 m/hr., means that a detention period of 2 hrs will give satisfactory removal of intended solids (larger than 0.06 mm or so) in a tank of 2.4 m depth.

But however, in actual practice, certain amount of short circuiting will always exist, and, therefore, the actual average time taken by a batch of water in passing through a settling tank (called *flowing through period*) will always be less than the detention period, which is the corresponding theoretical time. The ratio of the 'flowing through period' to the 'detention period' is called the *Displacement efficiency*.

∴ Displacement efficiency (%)

$$= \frac{\text{Flowing through period}}{\text{Detention period}} \quad \dots(9.31)$$

Note. In order to counteract the effects of short circuiting, it may be necessary to keep a high detention period or a smaller surface loading than that obtained from the theoretical considerations for obtaining the desired results.

9.15.4. Constructional Details of the Sedimentation Tanks. The following features of such tanks need special attention :

(i) **Inlet and Outlet Arrangement.** In order to reduce short circuiting, and to distribute the flow uniformly, proper arrangement must be made for smooth entry of water. A most suitable type of an inlet for a rectangular settling tank is in the form of a channel extending to full width of the tank, with a submerged weir type baffle wall, as shown in Fig. 9.14.


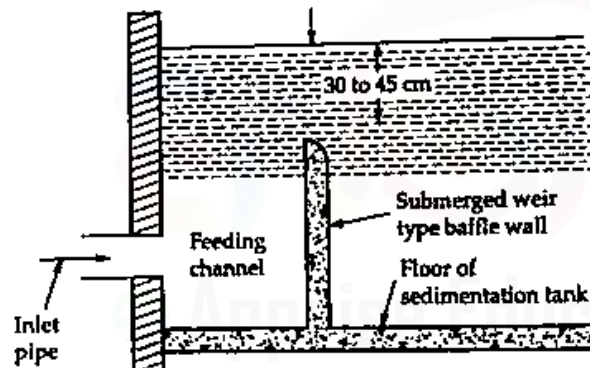


Fig. 9.14. Section of a 'Submerged type' or a 'Weir type' Inlet.

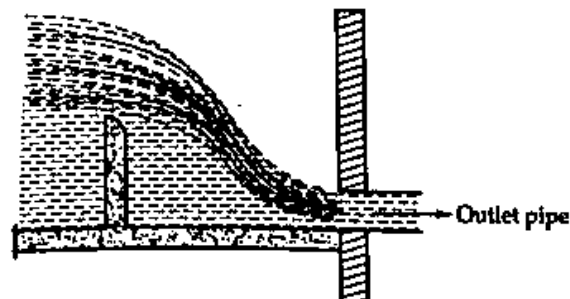

A similar type of outlet arrangement is also used these days. It consists of an outlet channel extending for full width of the tank and receiving the water after it has passed over a weir, as shown in Fig. 9.15.

(ii) **Baffles.** Baffles are required to prevent the movement of organic matter and its escape along with the effluent ; and to distribute the sewage uniformly through the cross-section of the tank, and thus to avoid short circuiting. Both inlets and outlets are, therefore, protected by hanging baffles, 0 to 90 cm in front of them, and submerged 45 to 60 cm below the flow line, as shown in Fig. 9.11. Some other arrangement of placing baffles may be designed, but it should not be too complicated. Moreover, too many baffles may result in concentration of currents and is as bad as too less baffles are.

(iii) **Skimming Troughs.** When the amount of oils and greasy matter present in a sewage is small, it is generally uneconomical to provide a separate skimming tank. In such cases, a scum trough is generally provided in the sedimentation tank itself, near its outlet end, as shown in Fig. 9.12 (a).

In manually operated tanks, the skimmings that float to the surface may be pushed into the trough by squeezes with hand. Whereas, in mechanically operated tanks (such as in Fig. 9.12 a), the skimmings may be pushed by the same scraper blades which collect the sludge while moving along the bottom, and push the skimmings into the end trough, when they move near the surface along with the endless chain to which they are attached.

(iv) **Cleaning and Sludge Removal.** The suspended organic solids contained in sewage, settle down at the bottom of the sedimentation tank, and have to be removed periodically. The removal of the deposited sludge before it becomes stale and septic is necessary not only because it reduces the capacity of the tank and its detention period, but also because it leads to the evolution of foul gases formed due to the anaerobic decomposition of the settled organic matter. The sedimentation tanks are, therefore, cleaned from time to time at frequent intervals, either manually or they are provided with mechanical arrangements for cleaning.

In manual cleaning, the tank is, first of all, put out of service (thus needing duplicate tanks), and the supply of sewage stopped. The already contained sewage is drained off till the depth remains about 30 cm or so. The deposited sludge is now stirred and removed as a slurry through a separate pipe provided with a gate valve at the bottom of the tank. *Pick axes* and *pharaohs* may be used for displacing hard deposits. The removed sludge is first taken to a pump-sump, and then pumped into a sludge digestion tank for further treatment.

Modern sedimentation tanks, however, are generally provided with mechanical cleaning devices. Say for example, in Fig. 9.12 (a), the sludge is scraped by scrapers and brought to the hopper at the inlet end, and is removed daily or often. The scrapers can work either continuously or at any desired intervals of time. Similarly, in a circular tank (Fig. 9.12 b), the sludge is scraped and brought to the centre, and likewise removed. For tanks without mechanical sludge removing equipment, an additional minimum depth of

about 0.8 to 1.2 m should be provided for storage of settled material, and is called the *sludge zone*.

Example 9.5. Design a suitable rectangular sedimentation tank (provided with mechanical cleaning equipment) for treating the sewage from a city, provided with an assured public water supply system, with a max. daily demand of 12 million litres per day. Assume suitable values of detention period and velocity of flow in the tank. Make any other assumptions, wherever needed.

Solution. Assuming that 80% of water supplied to the city becomes sewage, we have the quantity of sewage required to be treated per day (i.e. max. daily).

$$= 0.8 \times 12 \text{ million litres} = 9.6 \text{ M. litres}$$

Now assuming the detention period in the sewage sedimentation tank as 2 hours, we have

The quantity of sewage to be treated in 2 hours i.e. the capacity of the tank required

$$Q = \frac{9.6}{24} \times 2 \text{ M. litres} = 0.8 \text{ M litres} = 800 \text{ cu. m.}$$

Now, assuming that the flow velocity through the tank is maintained at 0.3 m/minute; we have

The length of the tank required

$$= \text{Velocity of flow} \times \text{Detention period} \\ = 0.3 \times (2 \times 60) \text{ m} = 36 \text{ m.}$$

Cross-sectional area of the tank required

$$= \frac{\text{Capacity of the tank}}{\text{Length of the tank}} = \frac{800}{36} \text{ m}^2 = 22.2 \text{ m}^2.$$

Assuming the water depth in the tank (i.e. effective depth of tank) as 3 m,

The width of the tank required

$$= \frac{\text{Area of X-section}}{\text{Depth}} = \frac{22.2}{3} = 7.4 \text{ m.}$$

Since the tank is provided with mechanical cleaning arrangement, no extra space at bottom is required for sludge zone.

Now, assuming a free-board of 0.5 m, we have

The overall depth of the tank

$$= 3 + 0.5 = 3.5 \text{ m.}$$

Hence, a rectangular sedimentation tank with an overall size of 36 m $\times$ 7.4 m $\times$ 3.5 m can be used.

[Note. This satisfies the requirements like : length $\div$ 4 to 5 times the width; and the width not more than 7.5 m or so; the depth between 2.4 to 3.6 m, etc.]. **Ans.**

Alternatively,

Instead of assuming the depth, we may assume an overflow rate, say as 40,000 litres/m²/day.

$$\therefore \frac{Q}{BL} = 40,000 \text{ litres/m}^2/\text{day}$$

$$\text{But } Q = 9.6 \text{ M. litres/day} = 9.6 \times 10^6 \text{ litres/day}$$

$$\therefore BL = \frac{Q}{40,000} = \frac{9.6 \times 10^6}{40,000} \text{ m}^2 = 240 \text{ m}^2$$

$$\text{or } B = \frac{240}{L} = \frac{240}{36} = 6.67 \text{ m ; Say } 6.7 \text{ m.}$$

$\therefore$ The depth required

$$= \frac{\text{Area of X-section}}{\text{Width}} = \frac{22.2}{6.7} = 3.3 \text{ m.}$$

Hence, we can alternatively use a tank of dimensions 36 m $\times$ 6.7 m $\times$ (3.3 + 0.5 m) overall depth i.e. 36 m $\times$ 6.7 m $\times$ 3.8 m size. **Ans.**

Example 9.6. Design a circular settling tank unit for a primary treatment of sewage at 12 million litres per day. Assume suitable values of detention period (presuming that trickling filters are to follow the sedimentation tank), and surface loading.

Solution. Assuming the normal detention period for such cases as 2 hr, and surface loading as 40,000 litres/sq. m/day; we have

The quantity of sewage to be treated per 2 hours

$$= 12 \text{ M. litres} \times \frac{2}{24} = 1 \text{ M. litres} = 1000 \text{ m}^3.$$

$$\therefore \text{Capacity of tank} = 1000 \text{ m}^3.$$

Now, surface loading

$$= \frac{Q}{\text{Surface area of tank}} = \frac{Q}{\frac{\pi}{4} \cdot d^2}$$

$$\text{or } 40,000 = \frac{12 \times 10^6}{\frac{\pi}{4} \cdot d^2}$$

where d is the dia. of the tank

$$\text{or } \frac{\pi}{4} \cdot d^2 = \frac{12 \times 10^6}{40,000}$$

$$\text{or } d = \sqrt{\frac{300 \times 4}{\pi}} = 19.55 \text{ m Say } 19.6 \text{ m.}$$

Now, effective depth of tank

$$= \frac{\text{Capacity}}{\text{Area of X-section}} = \frac{1000}{\frac{\pi}{4} \times (19.6)^2} = \frac{1000}{302} \\ = 3.2 \text{ m. (Say).}$$

Hence, use a settling tank with 19.6 m dia. and 3.2 m water depth (with free board of 0.3 m extra depth). **Ans.**

SEDIMENTATION AIDED WITH COAGULATION

(Type II. Sedimentation)

* what is
SM 9.16. Chemical Precipitation and Coagulation

Very fine suspended particles, present in wastewaters, which cannot be removed in plain sedimentation, may sometimes, be settled by increasing their size by

changing them into flocculated particles. For this purpose, a chemical compound (like ferric chloride, ferric sulphate, alum, chlorinated copperas, etc.) called *coagulant*, is added to the wastewater, which on thorough mixing, forms a gelatinous precipitate, called *floc*. The fine mud particles and other colloidal matter present in wastewater get absorbed in these flocs, forming the bigger sized flocculated particles. The process of addition and mixing of chemical is called coagulation. The coagulated sewage is then made to pass through sedimentation tank, where the flocculated particles settle down, and get removed.

The process of coagulation of sewage is similar to that of water, as described thoroughly in "Environmental Engg. Vol. I—Water Supply Engineering" (chapter 9). The purpose, principle, feeding and mixing of coagulants and their chemical reactions have been discussed at length in that chapter. Since the coagulation of sewage is seldom adopted in modern days, we shall not repeat the entire coagulation process here in this volume. The readers may, however, refer to volume 1, in special needs.

The characteristics and efficiency of the important coagulants used in sewage treatment are, however, given in Table 9.5.

9.17. Merits and Demerits of Coagulation Process in Sewage Treatment

As pointed out earlier, the coagulation process is generally not adopted in modern sewage treatment plants, mainly because of the following reasons :

(1) More advanced methods of sewage treatment based on biological actions are available these days, and they are preferred to coagulation.

(2) The coagulation process has various disadvantages, such as discussed below :

Disadvantages or Demerits of Coagulation in Sewage Treatment

(i) The biological secondary treatments used these days for treating sewage are complete in themselves, and do not require coagulation. Moreover, coagulation rather makes some of these processes more difficult.

(ii) The chemicals used in coagulation react with sewage, and during these reactions, they destroy certain micro-organisms, which are helpful in digestion of the sludge, thus creating difficulties in sludge digestion.

(iii) Cost of chemicals is added to the cost of sedimentation, without much use, and thereby making the treatment costlier.

(iv) The process of coagulation and subsequent sedimentation produces larger quantities of sludge than that produced in plain sedimentation, and thus adding to the problem of sludge disposal.

(v) The process of coagulation requires skilled supervision and handling of chemicals.

In view of all these disadvantages, the coagulation of sewage has become obsolete these days. It may still, however, be adopted in certain special cases, such as :

(a) For treatment

Table 9.5. Properties of Important Coagulants Used in Sewage Treatment

	Name of coagulant	B.O.D. removed as percentage of total present	Suspended solids removed as percentage of total present	Dosage required in ppm	pH value required for proper functioning	Remarks
1.	Ferric chloride	80—90	90—95	25—35	5.5 to 7.0	This coagulant is widely used for sewage treatment, wherever, coagulation is adopted.
2.	Ferric sulphate with lime	60	80	35—40	8.0 to 8.5	Ferric sulphate has been found to be more effective than chlorinated copperas, if used in conjunction with lime. Hence ferric chloride and ferric sulphate are mainly used, as the main coagulants in sewage, if at all coagulation is adopted.
3.	Alum	60	80	40—50	6 to 8.5	It is generally not used in sewage, although used for treating water supplies on a large scale.
4.	Chlorinated copperas	70—80	80—90	35—40	5.5 to 7.0 and 9.0 to 9.5	This coagulant is effective for producing sludge for activated sludge process.

Ferric chloride forms a dense heavy floc, which settles rapidly. The sludge formed is also not so bulky, and can be digested or dewatered easily. However, it is corrosive in nature and requires care in storing and handling. Alum, although cheap and easy to handle, yet is not used in sewage treatment, because it forms a spongy floc, which settles slowly. Moreover, a volume of sludge produced is also large.

(b) It is particularly advantageous, where there is large seasonal variation in sewage flow or as an emergency measure to increase the capacity of an overloaded plain sedimentation tank. It may, thus be of use at places, like hill stations, where flow may considerably go up during rush seasons.

The various advantages offered by the coagulation process in sewage treatment are :

(i) Sedimentation aided with coagulation produces better effluent with lesser BOD and suspended solids, as compared to plain sedimentation.

(ii) Coagulated settling tank requires less space than that required by an ordinary plain settling tank.

(iii) Coagulation process may also remove the phosphates from sewage, which may help in controlling eutrophication* of river, into which the effluent is being discharged.

SECONDARY TREATMENT THROUGH BIOLOGICAL FILTRATION OF SEWAGE (Aerobic Attached Culture)

9.18. Introduction to Sewage Filtration

The effluent from the primary sedimentation tank contains about 60 to 80% of the unstable organic matter originally present in sewage. This colloidal organic matter, which passes the primary clarifiers, without settling there, has to be removed by further treatment. This further treatment of sewage, called *secondary or biological treatment*, is carried out by changing the character of the organic matter, and thus converting it into stable forms (like nitrates, sulphates, etc.) by oxidation or nitrification.

The character of the organic matter in sewage may be changed by different methods, which are broadly classified into : (i) *filtration*, and (ii) *activated sludge process*. These processes help in changing the unstable organic matter into stable forms, and thus ensuring their removal, when the effluent from these units is settled in *secondary sedimentation tanks*. The sludge settled in secondary settling tanks may be disposed of in the manner explained earlier.

All the secondary treatment processes (i.e. filters as well as activated sludge process) are designed to work on aerobic bacterial decomposition. This is because of the fact that aerobic decomposition does not produce bad smells and gases, as are produced by the anaerobic decomposition, and also because aerobic bacteria are more active than anaerobic bacteria (the rate of doing work by aerobic bacteria being three times that of the anaerobic type at 30°C). Hence, in the biological treatment units,

*The excessive growth of algae and other aquatic plants in a river stream is called *eutrophication*. The nitrogen and phosphorous present in the sewage and industrial effluents being discharged into the rivers, serve as fertilising elements, which in the presence of sun-light, stimulate the growth of algae and other aquatic plants.

Certain limited quantity of these plants is, of course, necessary in a river stream, as to serve as a source of food for fish. However, large growths are undesirable, as they tend to clog the flow and to form floating mats and to decrease water clarity. They are unsightly and become breeding places for mosquitoes, thus resulting in spread of malaria. The decomposition of

the main aim is to produce suitable environmental conditions, which may help in stimulating the growth of these aerobic bacteria.

The *filter units* used for secondary treatment consist of *open beds* of coarse aggregates over which sewage (i.e. effluent from the primary clarifier) is sprinkled intermittently. The necessary contact surface for the growth of aerobic bacteria is provided by the aggregates in the bed, and the aeration is provided by nature. The effluent from filter units is settled out in secondary clarifiers. On the other hand, an *activated sludge treatment unit* consists of *aeration tanks* of long detention period, in which the activated sludge mixed with the sedimented sewage (i.e. effluent from primary clarifiers) is agitated and aerated. The sludge solids, thus kept in suspension will provide the necessary contact surfaces for the growth of aerobic bacteria. The mixed liquor after agitation is settled out in secondary clarifiers. *The sludge so settled in secondary clarifier is called the activated sludge as it contains a lot of oxygen, and is thus biologically active.* This sludge will be disposed of after digestion, although a small part of it will be taken to aeration tanks for keeping the activated sludge process going.

There are various kinds of filters that are commonly employed either singly or in combinations, for giving secondary treatment of sewage. All these filters try to oxidise the unstable organic matter into stable forms, mainly by aerobic decomposition. The different types of filters that may be used in sewage treatment are :

- (1) *Contact beds* (used at very small plants, and have become almost obsolete these days).
- (2) *Intermittent sand filters* (used at smaller plants).
- (3) *Trickling filters* (most commonly used in modern days).
- (4) *Miscellaneous types of filters* (used under special circumstances in particular projects).

All these different types of filters are described below in details :

9.19. Contact Beds for Biological Filtration of Sewage

In contact beds, also known as *contact filters*, sewage is kept in contact with the filtering media for a certain period (i.e. during first contact period). As the sewage percolates through the filtering media, fine colloidal organic matter is trapped in the voids between the particles of the filtering media. *Due to this, a film of organic matter is formed around the particles of the filtering media.* A large number of aerobic bacteria present in the sewage will get attached to the filter sand, and will, thus, be present in this biofilm. These bacteria will carry out the oxidation of the organic matter present in this film, by the process of aerobic decomposition. In order to make sufficient oxygen available for the growth of aerobic bacteria, the filter is left empty (without any sewage) for a certain period (i.e. second contact period). The filter, during this period, will absorb oxygen from the atmosphere, and will complete the oxidation process. This constitutes one cycle of operation. The stabilised organic matter in the first cycle will be washed away by the fresh sewage in the next cycle of operation.

9.19.1. Constructional Details. A typical plan and section of a contact beds unit is shown in Fig. 9.16. A contact bed is a water tight rectangular tank, filled with a filtering media, consisting of gravel ballast, or broken bricks or stones. The size of the media particles may vary between 20 to 40 mm. The depth of the filtering media varies between 1 to 1.8 metres (the common being 1.2 m). These tanks are generally dug below the ground level, and are provided with water-tight concrete lining, as shown. A siphonic dosing tank is provided to serve two or three contact beds. The dosing tank will receive sewage from the primary sedimentation tanks, and will supply it to the different contact beds, turn by turn, at regular intervals by the timed siphonic action. Ordinary tanks without siphons, and operated manually by

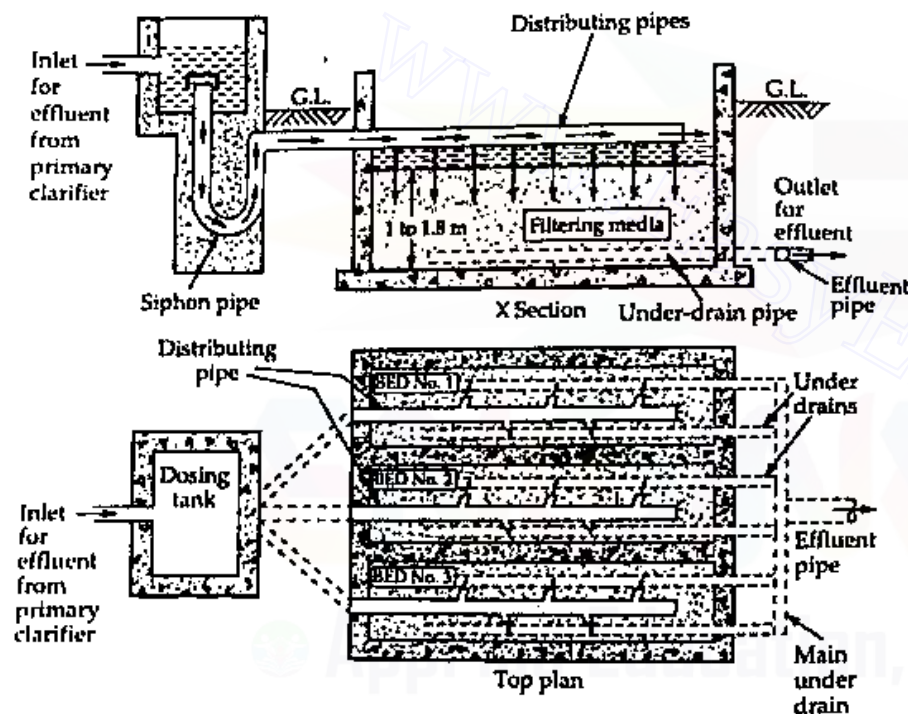


Fig. 9.16. Contact beds.

valves may also be used. The sewage percolating through the filtering media is collected at the bottom by a system of suitably laid open-jointed under-drains. The effluent coming out from the effluent pipe may be taken to the secondary sedimentation tank for settling out the oxidised organic matter.

9.19.2. Operation. The sewage is, first of all allowed from the dosing tank, so as to fill the bed completely, and to stand to a depth of about 5 to 10 cm above their top surface. While doing so, the outlet valve is kept closed. This filling takes about 1 hour. The dosing tank supply is then closed, and the sewage is left over the bed as it is, for about two hours or so (called the first contact period). The colloidal matter present in sewage will be transferred to filter voids during this period.

trapped in the voids of the filter media does not get washed out with the down-moving sewage. The bed is now kept empty at rest for a period of about 4 to 6 hours (called the 2nd contact period or the empty period). During this period, the organic matter trapped in the voids get oxidised by aerobic bacteria in the presence of free oxygen that rushes into the filter voids from the atmosphere. This completes one full cycle of operation, which takes about 8 to 12 hours*. The stabilised organic matter from the voids is finally washed down the contact material in the next emptying of the tank.

Since the inflow of sewage is continuous, while the beds are to be operated intermittently, several units will have to be constructed, so that the sewage can be applied in turn to the different units. As pointed out earlier, a siphonic dosing tank is generally used for this purpose. Continuous attendance is, of course, necessary to operate the different units in succession.

9.19.3. Performance and Rate of Loading. The effluent obtained from the contact beds is slightly turbid and odourless, as it removes about 80% of the suspended solids, and 60 to 75% of the BOD. But due to its intermittent operation, the rate of loading is very low; and it should not exceed 110 litres per day per sq. m. of the filter for beds of 1.2 to 1 m depth. Moreover, with the passage of time, as the filtering media goes on clogging more and more, the rate of loading is reduced accordingly. After 4 to 5 years, the beds become almost fully clogged, and are removed, washed and dried. The under-drains are also washed, and the beds reinstated.

Use. Although the contact beds produce satisfactory effluent and consume little head, they are generally not adopted these days; mainly because their rate of loading is quite less, and they thus, require large land areas for their installation. Moreover, their intermittent operation requires continuous attendance. All such factors make them unsuitable for use in modern days, when more efficient filters have been designed. They may, however, still be used for small isolated institutions, where the quantity of sewage to be treated is very small; or at places where available head is limited, and further pumping is undesirable.

9.20. Intermittent Sand Filters for Biological Filtration of Sewage

Intermittent sand filters were the earlier forms of biological units of sewage treatment, and are now rarely used because of their large area requirement. They may still however, be used at certain places, to give highly nitrified and polished effluent, such as in case of treating sewage from tuberculosis hospitals.

Intermittent sand filters are more or less like contact beds, with the difference that the contact media here is finer than that in the contact beds; and also, there is no concrete lining around the filter media, as was there in the contact beds.

9.20.1. Construction and Operation. The plan and section of a typical intermittent sand filter is shown in Fig. 9.17. It consists of an underground rectangular tank, 1 to 1.25 m deep, 1000 to 4000 sq. m. in plan, and made by excavating the earth without any lining on sides or bottom. The sand, (i.e. the filtering media) is filled in this tank to a depth of about 0.75 to 1.05 m.

*The contact period is about two to three loadings (generally two) per day.

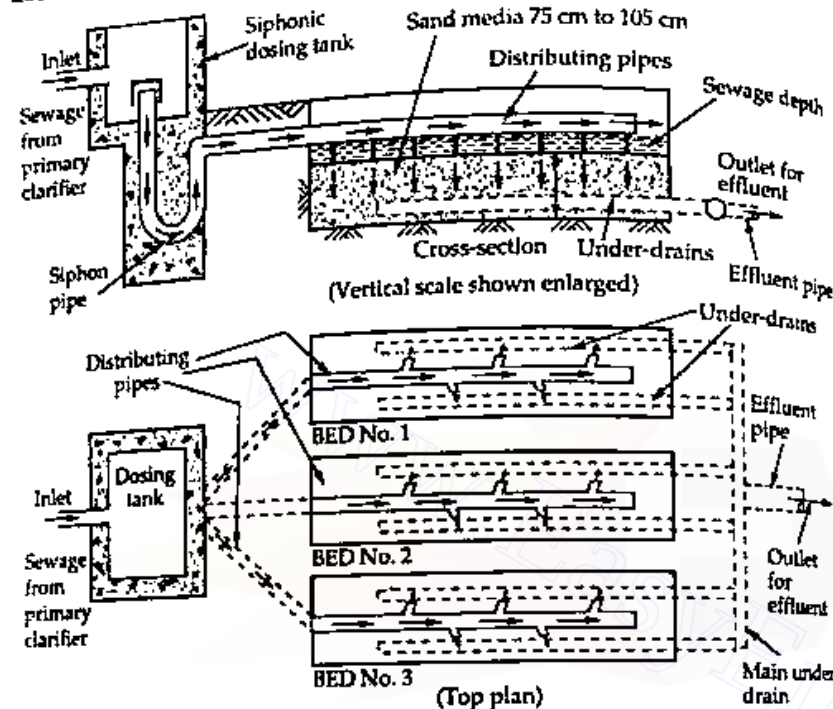


Fig. 9.17. Intermittent sand filters.

The bottom of the tank is made sloping gently towards the under-drains, which are placed at about 9 m apart in trenches below the bottom of the sand. These under-drains are nothing but the vitrified tile pipes with open joints of about 1 cm, and surrounded by graded gravel.

A siphonic dosing tank is generally provided to serve two or three filter beds. The dosing tank will receive sewage from the primary sedimentation tank, and supply it to the different filter beds, turn by turn, at regular intervals, by the timed siphonic action. Ordinary tanks without siphons, and operated manually by valves, may also be used.

The sewage from the dosing tank is spread intermittently over the filter bed, through *distribution pipes*, which are provided with side openings, as shown. These distribution pipes are laid at about 9 to 18 m apart. The depth of sewage applied to the entire filter bed is about 5 to 7.5 cm. As the sewage percolates through the bed, the suspended organic matter present in sewage gets trapped in the voids between the particles of the filtering media. The organic matter is thus first removed by the straining action of the filter. This trapped organic matter is then acted upon by the aerobic bacteria which can flourish well in the presence of free oxygen rushing in from the atmosphere during the period the filter bed is kept at rest after the sewage dose has percolated down.

Design Criteria. As stated earlier, the intermittent sand filters are rectangular in plan and their depth is about 1.5 to 2.0 m.

The sand used in the filtering media should be clean and sharp, with an effective size (D_{10}) of about 0.2 to 0.5 mm and uniformity coefficient ($\frac{D_{60}}{D_{10}}$)

ranging between 2 to 5. If the finer sand is used, the filter will be rapidly clogged, and if the coarser sand is used, the penetration of the solids will be too deep, and the distribution of sewage will be difficult. The top 15 cm layer of this sand may be kept of finer variety than that of the rest, which is generally kept uniform in grain size. However, if different gradation of sand are used (thought not necessary), then the coarsest layers should be placed near the bottom, and the finest towards the top. The finer the sand used, the purer and better effluent will be obtained, as more impurities and bacteria will be trapped, but the filter will clog quickly. In addition to this sand layer, a bottom layer of about 15 cm of gravel may also sometimes be placed, so as to facilitate the drainage of the effluent.

The rate of loading for the intermittent sand filters is less than that permitted for the contact beds (which contain coarser filtering media). The commonly adopted values of the hydraulic loading (i.e. the rate at which the sewage is applied) ranges between 80 to 110 litres per day per sq. m of plan area of the filter bed. In the olden days, these filters were being designed to directly treat the raw sewage with loadings of the order of 50 litres/sq. m/day.

To prevent any displacement of the sand by the incoming sewage, concrete blocks may sometimes be placed on the sand bed at the outlet points in the distributing pipe system.

It is a common practice to apply sewage dose for 24 hours on one bed, and then to apply it on the second bed, keeping the first bed at rest. Usually, three to four beds may thus function in rotation.

9.20.2. Cleaning of the Filter. The condition of a filter bed, in relation to the extent of its clogging, should be carefully observed; and if necessary, the bed should be put out of operation, when it requires cleaning or rest. A complete rest of 1 to 4 weeks becomes necessary, if septic conditions prevail in the bed. The septic conditions are more likely to occur, when the top layers of the sand are clogged due to non-oxidation of some suspended solids, which are transferred into *humus*. In such case, the top 5 to 7.5 cm sand layer may be raked and replaced by clean sand.

9.20.3. Performance and Use. The effluent obtained from an intermittent sand filter is of excellent quality, with suspended solids < 10 ppm, and BOD < 5 ppm. This effluent is better than that obtained from any other ordinary type of sewage treatment, and can be disposed of even without dilution. However, these filters require large land areas, and huge quantities of sand for their installations, as their rate of loadings are very low. These filters cannot, therefore, be economically used at larger plants. They may, however, still be used for treating smaller quantities of polluted sewage coming out from hospitals or isolated commercial and industrial institutions. In very cold climates, these filters may further pose troubles due to danger of sand surface freezing.

9.21. Trickling Filters for Biological Filtration of Sewage

The conventional trickling filters and their improved forms, known as high

treatment to sewage. These filters, also called as *percolating filters* or *sprinkling filters*, consist of tanks of coarser filtering media, over which the sewage is allowed to sprinkle or trickle down, by means of *spray nozzles* or *rotary distributors*. The percolating sewage is collected at the bottom of the tank through a well designed *under-drainage system*.

The decomposition of the organic matter and the resultant purification of the sewage is brought about by a population of micro-organisms. Micro-organisms and bacteria, which are naturally present in sewage, get attached to the filter media. Organic matter from the sewage influent is also adsorbed on the biological film, which is formed by the micro-organisms around the filtering media particles (i.e., sand particles). In the outer portions of this film of biological mass or *slime layer*, the organic matter is degraded by the aerobic bacteria. As the micro-organisms grow, the thickness of the slime layer increases, and the diffused oxygen is consumed by the upper portions of the slime layer, thereby creating an anaerobic environment near the surface of the media particles. As the slime layer increases in thickness, the adsorbed organic matter is metabolised before it can reach the micro-organisms near the media face. This creates shortage of external source of organic carbon near the media face, due to which, the micro-organisms near the media face enter into an endogenous phase of growth, and lose their ability to cling to the media surface. The liquid sewage, exerting a *shearing action*, then breaks up some biological mass (slime) from the media, but the new slime layer continues to grow. The continuing growth and break up of biological mass from this biofilm (slime layer), in fact, creates a balance in the thickness of the formed biofilm. The break up or detachment of the biomass (biological solids) from the slime layer is known as *sloughing*.

The *sloughing*, in fact, imparts turbidity to the filter effluent, and the sloughed material (biological solids) is separated from the treated sewage in the secondary settling tank.

The extent of *sloughing* is primarily a function of organic and hydraulic loading on the filter. The hydraulic loading accounts for shear velocities that are developed in the filter (which causes sloughing); while the organic loading accounts for the rate of metabolism in the slime layer (which loosens the biological mass in the slime layer, leading to sloughing).

In order to ensure the large scale growth of the aerobic bacteria in the biofilm, sufficient quantity of oxygen is supplied by providing suitable ventilation facilities in the body of the filter; and also to some extent by the intermittent functioning of the filter.

The effluent obtained from the under-drains of the filter, must be taken to the secondary sedimentation tank for settling out the sloughed biomass. This secondary tank thus, separates the treated sewage from the biological solids. A portion of the filter effluent or the settled effluent is recycled, usually to dilute the incoming wastewater. The sewage influent entering the filter must, of course, be given pre-treatments, including screening and primary sedimentation.

9.21.1. Construction and Operation of Trickling Filters. Trickling filter tanks are generally constructed above the ground. They may either be rectangular or more generally circular [Refer Fig. 9.18 (a) and (b)]. Rectangular filters are provided with a network of under-drains, while

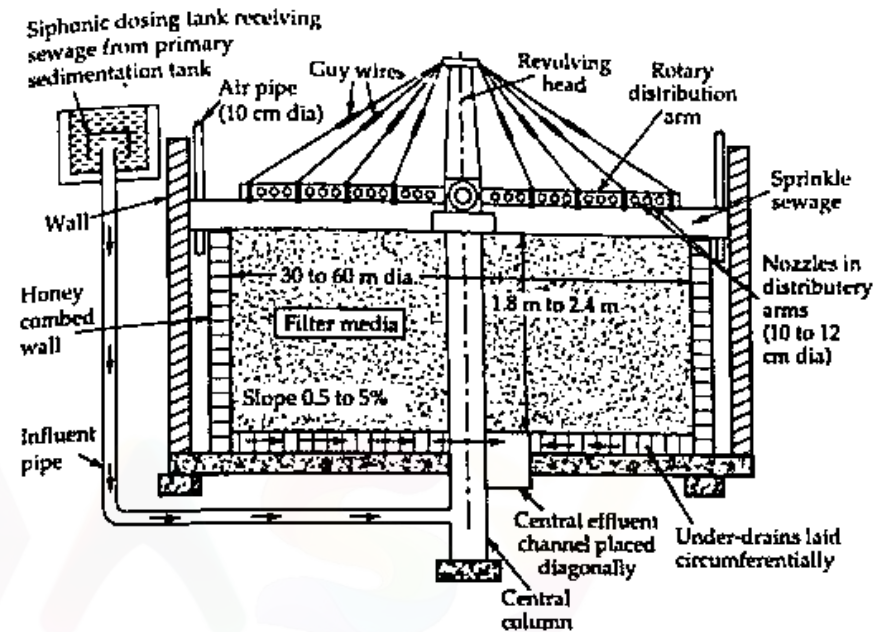


Fig. 9.18(a) Typical section of a conventional Circular-Trickling filter with Rotary distributors (vertical scale shown enlarged).

which spray the incoming sewage into the air, which then falls over the bed of the filter, under gravity. The circular filter tanks on the other hand, are provided with rotary distributors having a number of distributing arms (generally four arms are used). These distributors rotate around a central support either by an electric motor, or more generally by the force of reaction on the sprays. Such self-propelled reaction type of distributors (Fig. 9.19) are now-a-days preferred and used. The rate of revolutions vary from 2 RPM for small distributors to less than $\frac{1}{2}$ RPM for large distributors. The advantage of having two or more arms is not only to get reaction sufficient to rotate the entire mechanism but is also to pass the fluctuating demands by taking low flows in two arms, and the remaining two arms coming into operation only at the times of higher flows. The distributing arms should remain about 15 to 20 cm above the top surface of the filtering media in the tank.

There is an important difference between the action of rotary distributors and that of spray nozzles. With a rotary distributor, the application of sewage to the filter is practically continuous; whereas with spray nozzles, the filter is dosed for 3 to 5 minutes, and then rested for 5 to 10 minutes before the next application. In any case, however, dosing tanks with siphons, receiving sewage from the primary clarifiers and supplying it to the filters at regular intervals, are used. The dosing tank for a filter with distributors will, however, be designed to have a smaller capacity (i.e. about 1 to 3 minutes detention capacity), as against a higher capacity (of about 5 to 10 minutes detention capacity) for filters with spray nozzles.

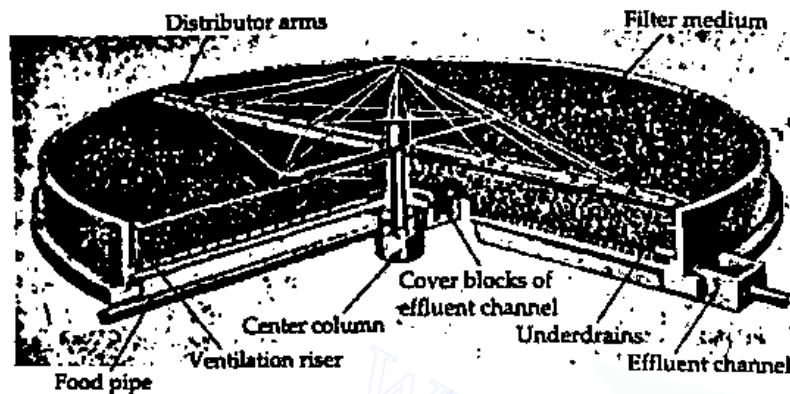


Fig. 9.18. (b) Photographic view of a conventional Circular Trickling filter with Rotary distributors.



Fig. 9.19. Photographic view of Rotary Distributors (Reactions type).


The filtering media, as pointed out earlier, consists of coarser materials like cubically broken stones or slag, free from dust and small pieces. The size of the material used may vary between 25 to 75 mm. The filtering material should be washed before it is placed in position. The quality of the stone used should be such as not to be easily affected by acidic sewage, and should be sufficiently hard (with hardness of about 12 on Brinels Hardness machine), and should have a minimum compressive strength (crushing strength) of about 100 N/mm^2 ($\approx 1000 \text{ kg/cm}^2$). Its resistance to freezing and thawing is another important property, especially for northern regions. Usually, stones from rocks like granite or limestone may be used.

The depth of the filtering media may vary between 2 to 3 metres. The filtering material may be placed in layers; with coarsest stone used near the bottom, and finer material towards the top.

The walls of the filter tank are made *honey-combed* or otherwise provided with openings for circulation of air, all through. Sometimes, instead of constructing the supporting walls, the filtering material may be stacked above the ground with its natural angle of repose, so as to ensure better circulation of air from the surrounding atmosphere.

Sometimes, forced ventilation, by forcing the air vertically upwards through the filter by the use of fans or other mechanical equipment, may be used; but it has not been found to increase the capacity of well-constructed trickling filters.

A satisfactory ventilation is achieved when properly designed under drains, having adequate openings, are provided under the filter bed. Besides ensuring satisfactory drainage, such drains, will also ensure satisfactory ventilation and aeration of the filter bed. Vitrified clay blocks (Fig. 9.20) are generally used as under-drains. These blocks have top openings of such size that the stone can be placed directly on them, and yet they furnish flow channels with

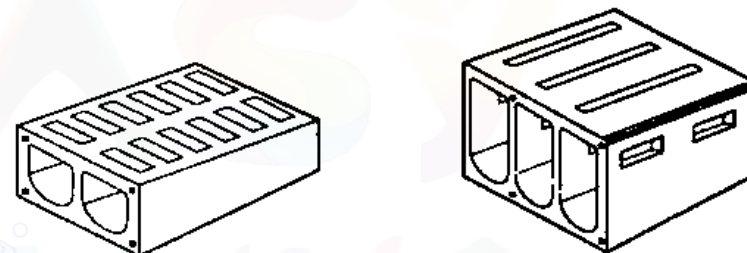

(a) Under-drain block for standard trickling filters

(b) Under-drain block for high rate trickling filters with heavy hydraulic loading

Fig. 9.20

sufficient capacity for the heaviest hydraulic loading. These blocks are laid on a reinforced concrete floor (about 10 to 15 cm thick), which is sloped at 0.5 to

5% (i.e. $\frac{1}{200}$ to $\frac{1}{40}$) towards the main effluent rectangular channel. This main

effluent channel may be provided *diagonally* adjoining the central column of the distributor, as shown in Fig. 9.18 (a) and (b); or may be provided along the circular periphery of the filter. The flow in this channel has characteristics similar to the flow in a wash-water trough of a rapid sand filter used in water supplies. The slope of the channel should be sufficient to ensure a minimum flow velocity of about 0.9 m/sec. The depth and the width of this central channel should be such that it can carry the maximum flow entering the filter. The main effluent channel will receive lateral flows from the precast, perforated vitrified tile or concrete blocks. These under drains are laid at right angles to the main channel. Hence, if the main channel is laid diagonally, then these under drains will be laid circumferentially; and if the main channel is laid along the outer circular periphery of the filter, then the under drains will be laid radially. The under drains will be designed to flow not more than $1/6$ to $1/8$ of the total flow. The min flow velocity should be

9.21.2. Types of Trickling Filters. Trickling filters can be broadly classified into:

(1) **Conventional trickling filters or Ordinary trickling filters or Standard rate or Low rate trickling filters:**

(2) **High rate filters or High rate trickling filters.**

Strictly speaking, all what we have spoken so far is about conventional or standard rate trickling filters. The high rate filters of modern advancements, also function on the same lines, and are having the same constructional details, but with the difference that provision is made in them for *recirculation of sewage through the filter*, by pumping a part of the filter-effluent to the primary settling tank, and re-passing through it and the filter. The high rate filters make it possible to pass sewage at greater loadings, thus requiring lesser space and lesser filter media. The process of 'recirculation' and its use in making high rate filters shall be discussed thoroughly, a little later, after we finish the general description of trickling filters, and the comparative characteristics of both types.

9.21.3. Merits and Demerits of Trickling filters. The various advantages of the trickling filters are:

(i) Rate of filter loading is high, as such requiring lesser land areas and smaller quantities of filter media for their installations.

(ii) Effluent obtained from the trickling filters is sufficiently nitrified and stabilised. They can remove about 75% of BOD and about 80% of suspended solids. The effluent can, therefore be easily disposed of in smaller quantity of dilution water.

(iii) Working of trickling filters is simple, and does not require any skilled supervision.

(iv) They are flexible in operation, and they can, therefore, withstand the application of variety of sewages having different concentrations and compositions. Even if they are over-loaded, they can recoupe after rest.

(v) They are self-cleaning.

(vi) Mechanical wear and tear is small, as they contain less-mechanical equipment.

(vii) Moisture content of sludge, obtained from trickling filters, is as high as 99% or so.

(viii) Trickling filters have been found to operate more efficiently in warm weather, and produce an effluent appreciably lower in BOD. Hence, they are of immense use in hot countries like India.

The disadvantages of the trickling filters are:

(i) The head loss through these filters* is high, making automatic dosing of the filters necessary (through siphonic dosing tanks).

(ii) Cost of construction of trickling filters is high.

(iii) These filters cannot treat raw sewage, and primary sedimentation is a must.

*The total head loss through such a filter will be equal to the head loss through the circular distributor (about 45 to 58 cm) plus the loss in the bed.

(iv) These filters pose a number of operational troubles such as given below:

(a) **Fly Nuisance.** The filter fly, *psychoda*, which develops in the filter particles, may prove to be nuisance, as the same may be carried away into the habitation.

This problem may be controlled by flooding the filter with sewage for 24 hours or more. The flooding will destroy the larvae, and usually interfere slightly with the results of operation. However, two or more filters will be needed, in order that, while one is flooded, another is available to treat the sewage.

Another method of controlling fly nuisance is by using insecticides, such as D.D.T., chlordane, and benzene hexachloride, etc. in the filter plant. When using insecticides for fly control, the flies may sometimes develop resistance to one particular insecticide. In such a case, the insecticide used must be changed. An insecticide may be applied at the siphon chamber or at any other place in the plant that may be more convenient. The dosage of insecticide required is normally 1 to 2 mg/l based on the total daily sewage flow, but is applied over a period of about 2 hours. Application should be used on active content of the insecticide.

(b) **Odour Nuisance.** Odours, generally, do not prevail in trickling filters using rotary distributors; but however, when fixed nozzles are used, H_2S and other odourous gases are frequently released from the sprays into the atmosphere. The usual remedy is to chlorinate the sewage to prevent formation of H_2S gas, or to neutralise that which is already formed.

Some odours may also be evolved due to sludge, and also due to anaerobic conditions which may prevail as and when the sewage becomes stale. The remedy is to chlorinate the sewage, and to keep sewage fresh by recirculation, as is done in rapid filters.

(c) **Ponding trouble.** Sometimes, the voids in the filter media gets clogged due to heavy growth of fungi and algae. This may result in ponding of the sewage over the filter bed. This trouble, posed by algae and fungi, can be controlled by chlorinating the sewage, which kills the algae, thus causing unloading of the accumulated material. Other methods of controlling algae are to add copper sulphate to the sewage, and resting the bed for some time.

Besides these external controlling factors, the algae is utilised by the worms and larvae particularly of the *psychoda* fly, which feed on the vegetable matter; and in the process, bring about a biological change.

Ponding at the surface is, therefore, most common during the winter months, when the worms and larvae are driven down from the surface by cold. Near spring time, however, they return to the surface, breaking up the vegetable growth in the filter, and causing heavy discharge of *humus** from the bed. This process is called *spring off loading*.

The humus so produced is easily settleable and is allowed to settle down in the secondary clarifier. Sometimes, separate tanks, similar to settling tanks, called *Humus tanks* may be used for this purpose. They are provided, particularly when the effluent from the filters is to be discharged into the rivers, and a high degree of purification is needed. Although humus is inert,

*Humus is present in the filter effluent.

yet it cannot be allowed to pass into the river streams, because ultimately it produces a large quantity of mud, and impedes the course of the river stream in question.

9.21.4. Design of Trickling Filters. The design of the trickling filter, primarily involves the design of the dia of the circular filter tank, and its depth. The design of the *rotary distributors* and *under-drainage system* is also involved in the filter design.

The design of the filter size is based upon the values of the filter-loadings, adopted for the design. This loading on a filter can be expressed in two ways :

(i) By the quantity of sewage applied per unit of surface area of the filter per day. This is called *hydraulic-loading rate* and expressed in million litres per hectare per day. The value of hydraulic loading for conventional trickling filters may vary between 22 to 44 (normally 28) million litres per hectare per day (as against the value of 1.1 ML/ha/day for intermittent sand filters). The hydraulic loading can still be increased to about 110 to 330 (normally 220) M.L/ha/day in the high rate trickling filters.

(ii) By the mass of BOD per unit volume of the filtering media per day. This is called *organic loading rate*, and expressed in kg of BOD₅ per hectare metre of the filter media per day. The value of organic loading for conventional filters may vary between 900 to 2200 kg of BOD₅ per ha-m. This organic loading value can be further increased to about 6000—18000 kg of BOD₅ per ha-m in high rate trickling filters.

With an assumed value of organic loading (as between 900 to 2200 kg/ha-m), we can find out the total volume of the required filter, by dividing the total BOD₅ of the sewage entering the filter per day in kg, by the assumed value of the organic loading. The organic loading can thus, decide the volume of the filter.

The hydraulic loading, on the other hand, gives us the area of the filter required, when the total sewage volume entering the filter per day is divided by the hydraulic loading, (assumed between 22 to 44 M.L/ha/day).

Knowing the volume and area of the cylindrical filter, we can easily find out its dia and depth.

It may also be mentioned here that the filter dia and depth is designed for average value of sewage flow. The rotary distributors, under-drainage system, and other connected pipe lines etc. are, however, designed for peak flow, and of course checked for the average flow. Moreover, since the rotary distributors are available indigenously only up to 60 m in length, it is desirable to keep the dia of the filter tank up to a max. of 60 m. If the required filter dia is more than 60 m, then it is better to use more units of lesser dia. The design of rotary distributors, and under-drainage system is explained in the numerical example 9.7.

9.21.5. Performance of Conventional Filters and Their Efficiencies. The effluent obtained from a conventional trickling filter plant is highly nitrified and stabilized. The BOD is reduced to about 80 to 90% of the original value. The BOD left in the effluent is generally less than 20 ppm or so. The sludge obtained in the secondary clarifier is thick, with moisture content of about 92%. It is heavy and easily digestible. The filter is very flexible, and can even take intermittent shock loads without any detrimental effects. Hence, a conventional or standard rate trickling filter plant is very useful to medium towns and industrial cities.

The efficiency of such a conventional filter plant can be expressed by the equation evolved by National Research Council of U.S.A., and given as :

$$\eta (\%) = \frac{100}{1 + 0.0044\sqrt{u}} \quad \dots(9.32)$$

where η = Efficiency of the filter and its secondary clarifier, in terms of percentage of applied BOD removed.

u = Organic loading in kg/ha-m/ day applied to the filter (called unit organic loading).

This equation shows that the BOD removed by the filter plant depends upon the organic loading adopted. Greater is the loading, lesser is the efficiency, and thus lesser BOD is removed. This equation holds good when there is no recirculation. In case of recirculation, this equation modifies to as given in Eq. (9.34).

Example 9.7. (a) Design suitable dimensions of a circular trickling filter units for treating 5 million litres of sewage per day. The BOD of sewage is 150 mg/l.

(b) Also design suitable dimensions for its rotary distribution system, as well as the under-drainage system.

Solution. Total BOD present in sewage to be treated per day

$$= 5 \text{ ML} \times 150 \text{ mg/L} = 5 \times 10^6 \times 150 \text{ mg}$$

$$= 5 \times 150 \text{ kg} = 750 \text{ kg.}$$

Assuming the value of organic loading, say as, 1500 kg/hectare metre/day [i.e. between 900 to 2200 kg/ha-m/day], we have

The volume of filtering media required

$$= \frac{750}{1500} \text{ hectare-metre} = 0.5 \text{ ha-m} = 5000 \text{ m}^3.$$

Assuming the effective depth of filter, as, say 2 m, we have

The surface area of the filter required

$$= \frac{5000}{2} \text{ m}^2 = 2500 \text{ m}^2.$$

Using a circular trickling filter of dia 40 m, we have the number of units required

$$= \frac{\text{Total area required}}{\text{Area of one unit}} = \frac{2500}{\frac{\pi (40)^2}{4}} \approx 2 \text{ Nos.}$$

Check for Hydraulic loading. The surface area of the filter bed required can also be worked out by assuming the value of hydraulic loading, say as, 25 million litres per hectare per day [i.e. between 22 to 44 ML/ha/day]

$\therefore$ Surface area required

$$= \frac{\text{Total sewage to be treated per day}}{\text{Hydraulic loading per day}}$$

$$= \frac{5 \text{ ML/day}}{25 \text{ ML/ha/day}} \text{ hectares}$$

$$= \frac{5}{25} \times 10,000 \text{ m}^2 = 2000 \text{ m}^2.$$

The surface area chosen is 2500 m², which is greater than 2000 sq. m, and hence safe.

Hence, 2 units each of 40 m dia and 2 m effective depth (i.e. 2.6 m overall depth), can be adopted. An extra third unit as stand-by may also be constructed. **Ans.**

Design of Rotary Distributors

Rotary distributors, as said earlier, are to be designed for peak flow, which may be considered as 2.25 times the average flow.

$$\begin{aligned}\therefore \text{Peak sewage flow per day} &= 2.25 \times 5 \text{ M.L./day} = 11.25 \text{ M.L./day} \\ &= 11.25 \times \frac{10^6}{10^3} \times \frac{1}{24 \times 60 \times 60} \text{ cu-m/sec} \\ &= 0.13 \text{ m}^3/\text{sec}.\end{aligned}$$

This flow is divided into two filter units; and, therefore,

$$\begin{aligned}\text{Flow through each unit at peak flow} &= 0.065 \text{ m}^3/\text{sec}.\end{aligned}$$

Assuming that the velocity at peak flow is 2 m/sec through the central column of the distributor, we have

$$\begin{aligned}\text{The dia of the central column} &= \sqrt{\frac{0.065}{2} \times \frac{1}{\pi/4}} = 0.2 \text{ m}.\end{aligned}$$

Provide a central column of 0.2 m in dia, but check the velocity through the column at average flow, as it should not be less than 1 m/sec or so.

Check for flow velocity through the central column at average flow

$$\begin{aligned}\text{Discharge through each unit at average flow} &= \frac{5}{2} \text{ M.L. day} = 2.5 \text{ M.L./day} \\ &= 2.5 \times \frac{10^6}{10^3} \times \frac{1}{24 \times 3600} \text{ m}^3/\text{sec} = 0.029 \text{ m}^3/\text{sec}.\end{aligned}$$

$\therefore$ Velocity at average flow

$$= \frac{0.029}{\frac{\pi}{4} \times (0.2)^2} = 0.92 \text{ m/sec}.$$

Strictly speaking, since the velocity at average flow becomes slightly less than the minimum permissible of 1 m/sec, we should reduce the adopted dia slightly. Say, let us use 0.19 m dia, then

The velocity at average flow

$$= \frac{0.029}{\frac{\pi}{4} \times (0.19)^2} = 1.023 \text{ m/sec} > 1 \text{ m/sec}; \therefore \text{permissible}$$

The velocity at peak flow will then be

$$= \frac{0.065}{\frac{\pi}{4} \times (0.19)^2} = 2.29 \text{ m/sec}.$$

Hence, we may use a central column of 0.19 m in dia. If, however, the central column of 0.19 m in dia is not available, we may permit 0.2 m (8") dia central column, as the velocity at average flow is quite near the allowable minimum value.

Design of Arms. Now, let us use rotary reaction spray type distributor with 4 arms.

Then, the discharge per arm

$$= \frac{0.065}{4} \text{ m}^3/\text{sec} = 0.016 \text{ m}^3/\text{sec}.$$

Dia of filter used = 40 m.

$$\therefore \text{Arm length} = \frac{40 - 2}{2} = \frac{38}{2} = 19 \text{ m}.$$

We can use each arm of 19 m length with its size reducing from near the central column towards the end. The first two sections, each of 6 m length, and the third section of 7 m length, can be used.

The flow in the arms has to be adjusted in the proportion of the filter area covered by these lengths of arm. Therefore, the area covered by the different lengths of arm are calculated first.

Let A_1 , A_2 , and A_3 be the circular filter areas covered by each length of arm, starting from the central column. Allowing for 0.3 m dia in centre to be used for central column, etc., these areas would be:

$$\begin{aligned}A_1 &= \pi(r_2^2 - r_1^2) \\ &= \pi(6.15^2 - 0.15^2) \\ &= \pi(37.82 - 0.0225) = 118.69 \text{ m}^2. \\ A_2 &= \pi[(12.15)^2 - (6.15)^2] \\ &= \pi(147.62 - 37.82) = 344.77 \text{ m}^2 \\ A_3 &= \pi[(20)^2 - (12.15)^2] \\ &= \pi(400 - 147.62) = 792.5 \text{ m}^2\end{aligned}$$

Total area of filter (A)

$$= \pi[(20)^2 - (0.15)^2] = 1256 \text{ m}^2.$$

$\therefore$ Proportionate areas served by each section of arm (numbered from the centre towards the end) are worked out as:

$$\begin{aligned}\text{1st} &= \frac{A_1}{A} = \frac{118.69}{1256} = 9.45\% \\ \text{2nd} &= \frac{A_2}{A} = \frac{344.77}{1256} = 27.45\% \\ \text{3rd} &= \frac{A_3}{A} = \frac{792.5}{1256} = 63.1\% \\ &\quad \underline{100\%}\end{aligned}$$

*Check. A should be equal to $A_1 + A_2 + A_3$,
i.e., $= 118.69 + 344.77 + 792.5$

Now, full discharge through an arm, i.e., $0.016 \text{ m}^3/\text{sec}$, will flow through the first section, and this will go on reducing through the second and third sections.

(i) Design of first section

Discharge = $0.016 \text{ m}^3/\text{sec}$.

Assuming the velocity through the arm as 1.2 m/sec , we have

$$\text{The area required} = \frac{0.016}{1.2} \text{ m}^2 = 0.0133 \text{ m}^2$$

$$\therefore \text{Dia required} = \sqrt{\frac{0.0133}{\pi/4}} = 0.13 \text{ m, say } 13 \text{ cm, or } 130 \text{ mm.}$$

(ii) Design of second section

Discharge through the second section

$$= (100 - 9.45) \% \times 0.016$$

$$= \frac{100 - 9.45}{100} \times 0.016 = 0.0145 \text{ m}^3/\text{sec.}$$

$$\therefore \text{Area required} = \frac{Q}{V} = \frac{0.0145}{1.2} = 0.012 \text{ m}^2$$

$$\text{Dia required} = \sqrt{\frac{0.012}{\pi/4}} = 0.124 \text{ m} = 124 \text{ mm.}$$

(iii) Design of third section

Discharge through the third section

$$= (100 - 9.45 - 27.45) \% \times 0.016$$

$$= \frac{63.1}{100} \times 0.016 = 0.010 \text{ m}^3/\text{sec.}$$

$$\therefore \text{Dia required} = \sqrt{\frac{0.010}{1.2 \times \frac{\pi}{4}}} = 0.103 \text{ m} = 103 \text{ mm.}$$

Each arm length can thus be made of three sections, i.e. first 6 m from centre to be 130 mm dia, next 6 m of 124 mm dia, and the last 7 m of 103 mm dia. If economy is not much effected, and or if different sized pipes are difficult to join, then the entire arm length may be kept of 130 mm dia; or the first 12 m may be kept of 130 mm dia, and the last 7 m of 103 mm dia. **Ans.**

Design of Orifices. Each arm section will be provided with different number of orifices, depending upon the discharge to be passed through each section.

Total discharge through each arm

$$= 0.016 \text{ m}^3/\text{sec.}$$

Assuming that 10 mm dia orifices are provided with coefficient of discharge (C_d) being 0.85, we have

The discharge through each orifice with an assumed water head, causing flow, as 1.5 m,

$$= C_d \cdot A \cdot \sqrt{2gh}$$

$$= 0.85 \times \frac{\pi}{4} \times (0.01)^2 \times \sqrt{2 \times 9.81 \times 1.5}$$

Total No. of orifices through each arm

$$= \frac{\text{Total discharge through each arm}}{\text{Discharge through each orifice}} = \frac{0.016}{2.768 \times 10^{-4}} = 58.$$

Hence, use a total of 58 orifices in the arm; the number of orifices in each section of the arm is given as:

$$\text{Number of orifices through the first section} = \frac{9.45}{100} \times 58 = 5$$

$$\text{Number of orifices through the second section} = \frac{27.45}{100} \times 58 = 16$$

$$\text{Number of orifices through the third section} = \frac{63.1}{100} \times 58 = 37.$$

Spacing of orifices can be

$$\text{In the first section, 5 number in 6 m length, i.e. } @ \frac{6}{5} = 1.2 \text{ m c/c.}$$

$$\text{In the second section, 16 numbers in 6 m length, i.e. } @ \frac{6}{16} = 0.375 \text{ m c/c.}$$

$$\text{In the third section, 37 numbers in 7 m length, i.e. } @ \frac{7}{37} = 0.189 \text{ m i.e. } 18.9 \text{ cm c/c.}$$

Design of Under-drainage System

Total discharge through each filter unit at peak flow = $0.065 \text{ m}^3/\text{sec}$.

Let us design the under-drainage system with a central rectangular channel, fed by radial laterals discharging into the channel. The under-drain block lengths, containing semi-elliptical openings, can be used as laterals.

The size and slope of the rectangular effluent channel should be such as to allow, say a velocity of 1 m/sec through it (min. = 0.9 m/sec).

$$\therefore \text{Area of channel} = \frac{\text{Discharge}}{\text{Velocity}} = \frac{0.065}{1} \text{ m}^2 = 0.065 \text{ m}^2$$

Using 0.225 m width, we have

$$\text{its depth} = \frac{0.065}{0.225} = 0.288 \text{ m; say } 0.3 \text{ m.}$$

The slope of the bed of this channel S , is given by:

$$Q = \frac{1}{N} \cdot A \cdot R^{2/3} \cdot S^{1/2}$$

where N = Manning's coefficient = 0.018 (say)

$$A = 0.225 \text{ m} \times 0.3 \text{ m} = 0.0675 \text{ m}^2$$

$$R = \frac{A}{P} = \frac{0.0675}{(0.225 + 0.3 + 0.3)} = \frac{0.0675}{0.825} = 0.082$$

$$0.065 = \frac{1}{0.018} \times 0.0675 \times (0.082)^{2/3} \cdot S^{1/2}$$

$$= 0.706 \sqrt{S}$$

$$\text{or } \sqrt{S} = \frac{0.065}{0.706} = \frac{1}{10.86}$$

$$\text{or } S = \frac{1}{117.9} \text{ ; say 1 in 100.}$$

Hence, use a central effluent channel, 0.225 m (9") in width and 0.3 m (12") in depth below the bottom level of laterals. The channel may be laid at a slope of 1 in 100. **Ans.**

The under-drain block lengths can be placed in rows, discharging into the effluent channel. *The under-drains may be laid circumferentially at a slope of 1 in 40 if the main effluent channel is provided diagonally, [otherwise they may be laid radially if the main effluent channel is laid along the outer periphery of the filter].*

Let us use 10 cm (4") dia, semi-circular under-drain blocks. These laterals should be designed to run less than $\frac{1}{2}$ full, so as to ensure proper ventilation. Let us assume that laterals run at a depth of say $0.3D$, where D is the dia of circle of which the lateral section is a semi circle. Then from Table 4.8, we have

$$q = 0.196 Q$$

$$a = 0.252 A$$

$$\text{Also } Q = \frac{1}{N} \cdot A \cdot R^{2/3} \cdot S^{1/2}$$

$\therefore Q$ through a circular sewer of dia = $D = 0.1$ m (10 cm) is given as :

$$Q = \frac{1}{0.013} \times \frac{\pi \times (0.1)^2}{4} \times \left(\frac{0.1}{4}\right)^{2/3} \cdot \frac{1}{\sqrt{40}} = 0.00815 \text{ m}^3/\text{sec.}$$

$$\therefore q = 0.196 Q = 0.196 \times 0.00815 = 0.0016 \text{ m}^3/\text{sec.}$$

Discharge through the filter = $0.065 \text{ m}^3/\text{sec.}$

Discharge through each lateral = $0.0016 \text{ m}^3/\text{sec.}$

$\therefore$ Number of laterals required

$$= \frac{0.065}{0.0016} = 40 \text{ (say).}$$

So use 40 laterals in all, laid circumferentially in the circular filter tank of 40 m in dia @ about 1 m spacing to discharge in the central effluent channel below.

Now, velocity through the laterals at peak flow

$$= \frac{q}{a} = \frac{0.0016}{0.252 \times \frac{\pi}{4} \times (0.1)^2} = 0.81 \text{ m/sec.} > 0.75 \text{ (required.)}$$

Velocity at average flow :

$$= \frac{0.0016}{\dots}$$

$$\therefore \frac{q_{av}}{Q} = \frac{0.00071}{0.00815} = 0.087$$

For $\frac{q}{Q}$ of 0.087, from table 4.8, $\frac{d}{D} = 0.2$ and $\frac{a}{A} = 0.143$

$$\therefore a_{av} = 0.143 A$$

$$v_{av} = \frac{q_{av}}{a_{av}} = \frac{0.00071}{0.143 \times \frac{\pi}{4} \times (0.1)^2}$$

$$= 0.632 \text{ m/sec} > 0.5 \text{ m/sec (required). O.K.}$$

Hence, use 40 semi circular laterals of 10 cm dia. each, discharging into the effluent channel and laid at a slope of 1 in 40. **Ans.**

Example 9.8. The sewage is flowing @ 4.5 Million litres per day from a primary clarifier to a standard rate trickling filter. The 5-day BOD of the influent is 160 mg/l. The value of the adopted organic loading is to be 160 gm/m²/day, and surface loading 2000 l/m²/day. Determine the volume of the filter and its depth. Also calculate the efficiency of this filter unit.

Solution. Total 5-day B.O.D. present in sewage

$$= \frac{160 \times 4.5 \times 10^6}{10^3} \text{ gm/day} = 7,20,000 \text{ gm/day}$$

Volume of the filter media required

$$= \frac{\text{Total B.O.D.}}{\text{Organic loading}}$$

$$= \frac{7,20,000 \text{ gm/day}}{160 \text{ gm/m}^2 \cdot \text{day}} \text{ m}^2 = \frac{7,20,000}{160} \text{ m}^2$$

$$= 4,500 \text{ m}^2. \text{ Ans.}$$

Surface area required for the filter

$$= \frac{\text{Total flow}}{\text{Hydraulic loading}} = \frac{4.5 \times 10^6 \text{ l/d}}{2000 \text{ l/m}^2 \cdot \text{d}}$$

$$= \frac{4.5 \times 10^6}{2000} \text{ m}^2 = 2.25 \times 10^3 \text{ m}^2 = 2250 \text{ m}^2.$$

$\therefore$ Depth of the bed required

$$= \frac{4500}{2250} \text{ m} = 2 \text{ m. Ans.}$$

Efficiency of the filter is given by Eq. (9.32) as

$$\eta = \frac{100}{1 + 0.044 \cdot \sqrt{u}}$$

where u = organic loading in kg ha-m/day.

Organic loading, $u = 160 \text{ gm/m}^2 \cdot \text{day}$ (given)

Now, 1 hectare-m = $10^4 \text{ m}^2 \cdot \text{m} = 10^4 \text{ m}^3$.

$$\text{Hence, } \eta = \frac{100}{1 + 0.0044\sqrt{1600}}$$

$$= \frac{100}{1 + 0.176} = \frac{100}{1.176} = 85.03\% \text{ Ans.}$$

9.21.6. Comparison of Conventional and High Rate Trickling Filters.
This comparison is given in Table 9.6.

Table 9.6. Conventional Vs. High Rate Trickling Filters

S. No.	Characteristics	Conventional or Standard rate filters	High rate filter
(1)	(2)	(3)	(4)
1.	Depth of filter media	Varies between 1.6 to 2.4 m.	Varies between 1.2 to 1.8 m.
2.	Size of filter media	25 to 75 mm.	25 to 60 mm.
3.	Land required	More land area is reqd. as the filter loading is less	Less land area is reqd. as the filter loading is more.
4.	Cost of operation	It is more for treating equal quantity of sewage	It is less for treating equal quantity of sewage.
5.	Method of operation	Continuous application, less flexible, and requires less skilled supervision,	Continuous application, more flexible, and more skillful operation is required.
6.	Type of effluent produced	The effluent is highly nitrified and stabilised, with BOD in effluent ≤ 20 ppm or so.	The effluent is nitrified up to nitrite stage only and is thus less stable, and hence it is of slightly inferior quality. BOD in effluent ≥ 30 ppm. or so.
7.	Dosing interval	It generally varies between 3 to 10 minutes. The sewage is generally not applied continuously but is applied at intervals.	It is not more than 15 seconds, and the sewage is thus applied continuously.
8.	Filter loading values	Varies between 22 to 44 M.L. per hectare per day	Varies between 110 to 330 M.L. per hectare per day.
	(i) Hydraulic loading		
	(ii) Organic loading	Varies between 900 to 2200 kg of BOD_5 per hectare-metre of filter media per day.	Varies between 6000 to 18,000 kg of BOD_5 per hectare metre of filter media per day.
9.	Recirculation system	Not provided generally.	Always provided for increasing hydraulic loading.
10.	Quality of secondary sludge produced	Black, highly oxidised with allight fine particles.	Brown, not fully oxidised with fine particles.

9.22. Recirculation of Treated Sewage and its Use in High Rate Trickling Filters

Recirculation of sewage is an essential and important feature of high rate filters. The recirculation consists in returning a portion of the treated or partly treated sewage to the treatment process. Usually, the return is from the secondary settling tank to the primary settling tank, or to the dosing tank of the filter, as shown in Fig. 9.21. Sometimes, the effluent from the filter itself, before it enters the secondary clarifier, may be sent back to the primary clarifier.

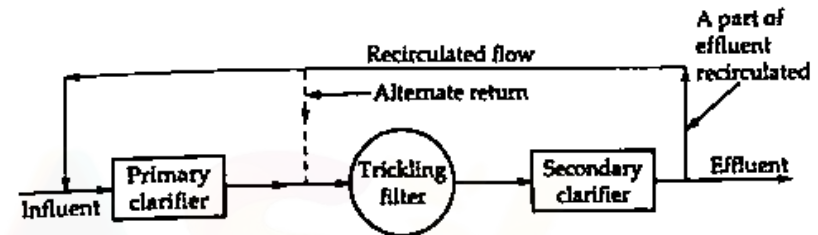


Fig. 9.21. Single stage commonly adopted Recirculation Process.

In some other cases, and to obtain better efficiency, two stage recirculation process may be adopted. A two stage recirculation process consists of having two filters arranged in series, as shown in Fig. 9.22. Various other combinations are possible.

Recirculation improves the operating results of filters, because of the following reasons :

(i) Recirculation allows continuous dosing of the filters, irrespective of the fluctuations in flow.

(ii) Recirculation equalises and reduces loading, thereby increasing the efficiency of the filter.

(iii) Recirculation provides longer contact of the applied sewage with the bacterial film on the contact media, thereby seeding it with bacteria, and accelerating the biological oxidation process.

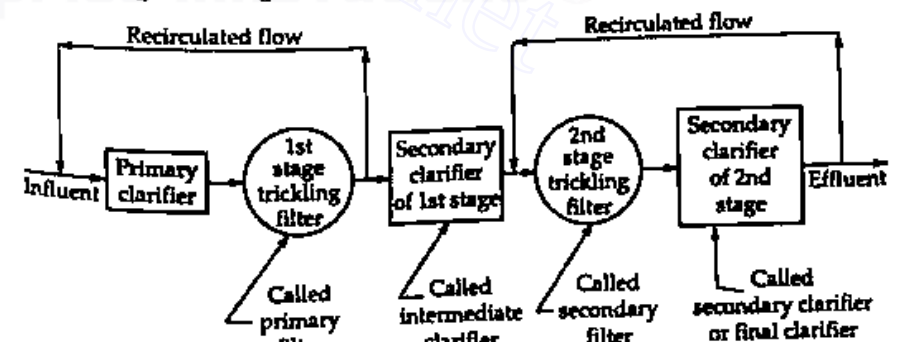


Fig. 9.22. Two stage commonly adopted Recirculation Process.

(iv) The influent remains fresh all the time, and also helps in reducing odours. The fly nuisance is also comparatively less.

It may, however, be noted that although the effluent would greatly be reduced in its BOD content because of the recirculated flow, yet a large volume of sewage through the filter tends to wash off the filter before nitrification has had time to take place, resulting in loss of nitrates in the effluent, thereby slightly lowering the quality of the effluent. *For this reason, a high rate filter plant with single stage recirculation may not show as good results as those obtained from a conventional trickling filter plant.* For comparable or better results, two high rate filters are constructed and operated in series, as shown in Fig. 9.22. As pointed out earlier, various recirculation schemes may be used, the most common being to pump back a part of the effluent from each filter to the influent of the same filter.

9.22.1. Efficiency of High Rate Filters. The efficiency of high rate filters depend upon the volume of the recirculated flow (in comparison to the volume of raw sewage) and also upon the organic loading.

The ratio of the Volume of sewage recirculated (R) to the Volume of raw sewage (I), i.e. $\frac{R}{I}$ is called recirculation ratio, and is an important feature in obtaining the efficiency of the filter plant (or to work out the required degree of treatment for obtaining a certain efficiency). The recirculation ratio (R) is connected to another term, called recirculation factor (F) by the relation

$$F = \frac{1 + \frac{R}{I}}{\left[1 + 0.1 \frac{R}{I}\right]^2} \quad \dots(9.33)$$

The recirculation factor (F) also represents the number of effective passages through the filter. Thus, when there is no recirculation and $\frac{R}{I}$ is zero, F is unity.

The efficiency of the single stage high rate trickling filter can then be worked out by using the equation,

$$\eta(\%) = \frac{100}{1 + 0.0044 \sqrt{\frac{Y}{V \cdot F}}} \quad \dots(9.34)$$

where Y = the total organic load in kg/day applied to the filter, i.e. the total BOD in kg. The term $\frac{Y}{V \cdot F}$ is also called unit organic loading on filter, i.e., u .

V = Filter volume in hectare-metres.

F = Recirculation factor given by Eq. (9.33).

In a two stage filter, the efficiency achieved in the first stage will be obtained as per Eq. (9.34); and in the second stage, it is obtained as :

Final efficiency in the two stage filter

$$\eta'(\%) = \frac{100}{1 + \frac{0.0044}{1 - \eta} \sqrt{\frac{Y'}{V' \cdot F}}} \quad \dots(9.35)$$

where Y' = Total BOD in effluent from first stage in kg/day.

V' = Volume of second stage filter in ha-m.

F = Recirculation factor for the second stage filter.

η' = Final efficiency obtained after two stage filtration.

These equations are very important, as they form the basis of designing high rate filters, as will become clear when we solve examples 9.9 to 9.14.


9.22.2. Effects of Recirculation on Sizes of Treatment Units. Recirculation through the primary sedimentation tanks requires extra capacity in these tanks, because the flow passing through them is increased, and under some conditions, the size of the secondary sedimentation tanks may also have to be increased. The volume of the filter, no doubt, will not be affected by recirculation, but the distributor should have the capacity to handle the increased flow.

If recirculation is from the effluent of the secondary sedimentation tank to the inlet of the primary sedimentation tank, then both the tanks, will have to be made larger. For example, with a flow of 4 million litres per day and a recirculation ratio of 0.5, both tanks will have to be designed, so as to provide the required detention period and overflow rate for a flow of 6 million litres per day, and the volume will thus have to be 50% greater. However, if the recirculation is from the effluent of the filter (before entering the secondary clarifier) the secondary clarifier need not be larger, since the detention period and overflow rate remain constant.


9.22.3. Types of High Rate Filters. There are three principal proprietary types of high rate filters. Their patented proprietary names are : (1) *Biofilters*, (2) *Accelo filters*, and (3) *Aero filters*. The patent for two of them is for the method of application of sewage to the filter. Although in practice, through cross-licensing and expiration of patents, these features no longer control the use of high rate filters.

These three important types of filters are discussed below in brief.


(1) **Bio-filters.** The bio-filters are comparatively shallow filters with 1.2 m to 1.5 in depth (the depth is kept less on the consideration that the main action of treatment is involved in the upper surface layers of the filter). The filter utilises recirculation of a portion of the filter effluent to the primary settling tank for a second passage through the filter. If additional treatment is necessary to lower the BOD content in the effluent, such as in the case of strong sewages, a second stage filter may be provided. Also the quality of final effluent can also be changed by altering the loading rate and the recirculation ratio. Fig. 9.23 shows the various arrangements of Bio-filters utilising one stage or two stage treatment.

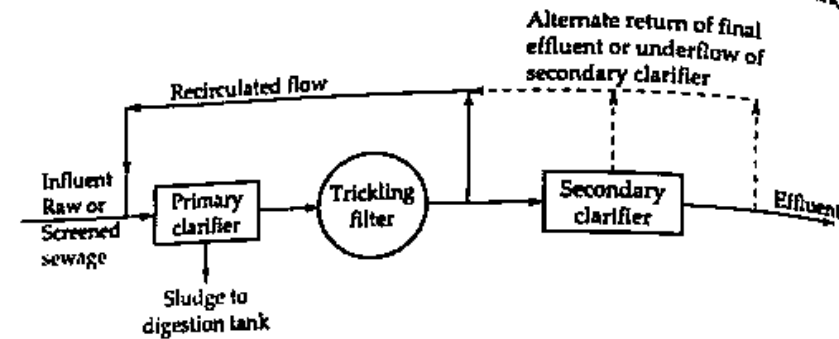

(a) Single stage complete treatment (biofilter)

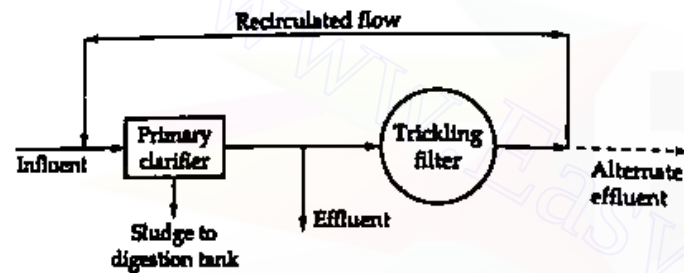

(b) Single stage intermediate treatment (biofilter)

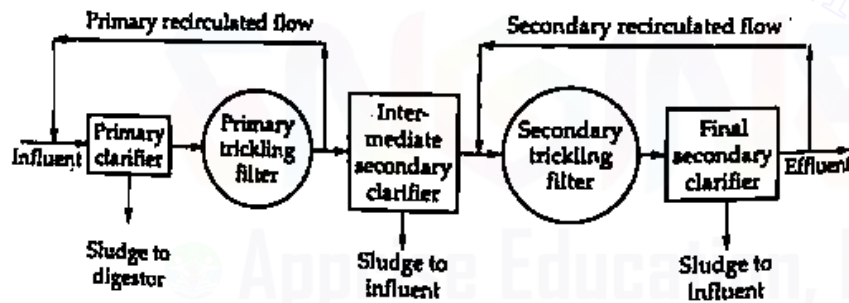


(c) Two stage complete treatment (biofilter)


Fig. 9.23. Flow diagrams of bio-filter plants.

These filters are capable of giving any desired degree of treatment by appropriate selection of flow diagram and recirculation ratio. Organic loading adopted, normally, ranges between 9,000 to 11,000 kg of BOD₅ per hectare metre per day. The total hydraulic loading may range between 110 to 330 million litres per day per hectare.


(2) Accelo-filters. These filters are normally 1.8 to 2.4 m deep, and utilise the direct recirculation of unsettled filter effluent to the distributor feed. Various arrangements, such as shown in Fig. 9.24, may be used. The applied loadings usually vary between the same limits as for the bio-filters.

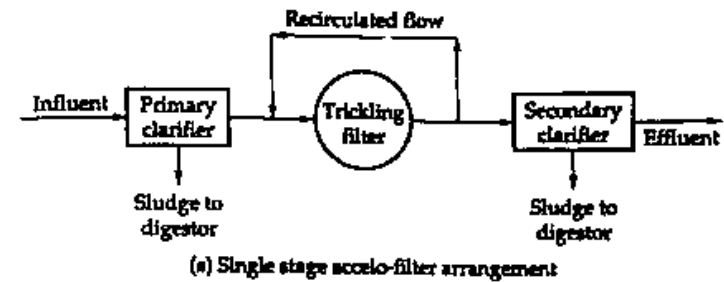

(a) Single stage accelo-filter arrangement

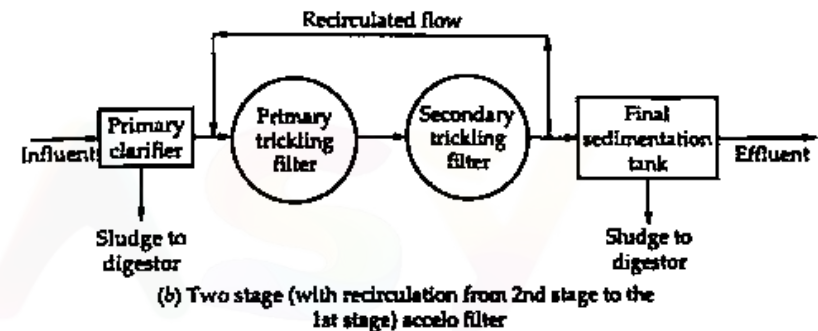

(b) Two stage (with recirculation from 2nd stage to the 1st stage) accelo filter

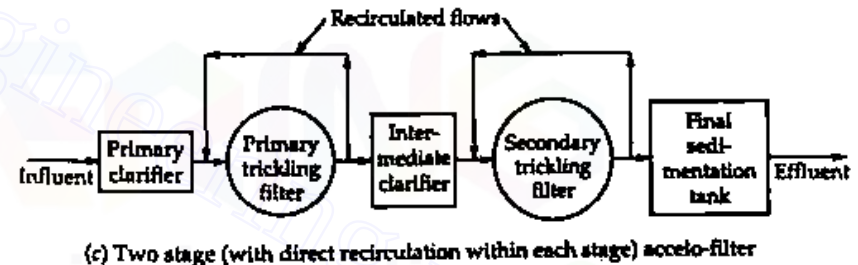

(c) Two stage (with direct recirculation within each stage) accelo-filter

Fig. 9.24. Flow diagrams for Accelo-filters.

(3) Aero filters. In the aero-filters, a continuous, uniform and low rate of application of sewage over the filter media is maintained. Whereas, in the bio-filters and accelo-filters, the recirculation is used for more intimate contact of sewage with the biological film of organic matter formed within the particles of the filter media; in the aero-filters, on the other hand, the same results are obtained by the use of special type of distributor designed for frequent "rain drop" applications. Recirculation is used only during periods of low sewage flow; and then only in amounts necessary to ensure operation of the distributor. If additional treatment is required to lower the BOD of the effluent, a second stage filter may also be used; flow diagrams used are shown in Fig. 9.25.

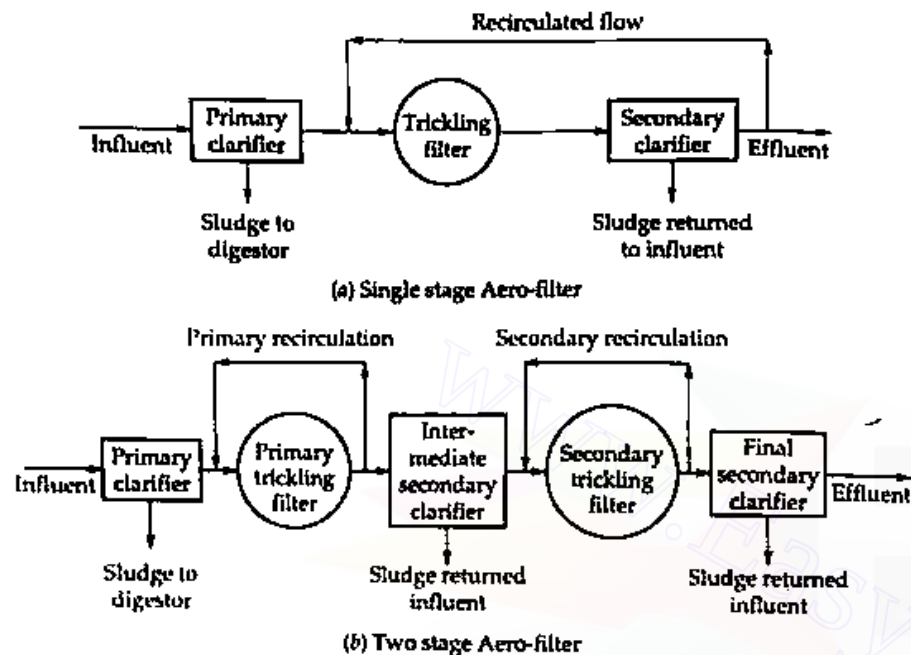


Fig. 9.25. Flow diagrams for Aero-filters.

Aero-filter beds are usually more than 1.8 m deep. The recommended organic loading may range between 11000 to 12000 kg of 5 day-BOD per hectare metre per day. The hydraulic dose, for proper functioning of filters, should not be less than 150 million litres per hectare per day (which may need recirculation during low flow rates).

Example 9.9. A town having a population of 30,000 persons is producing the following sewages :

(i) Domestic sewage @ 120 l.p.c.d. having 200 mg/l of BOD.

(ii) Industrial sewage @ 3,00,000 l.p.d. having 800 mg/l of BOD.

Design high rate single stage trickling filters for treating the above sewage. Assuming that the primary sedimentation removes 35% of BOD. Allow an organic loading of 10,000 kg/ha-m/day (excluding recirculated sewage). The recirculation ratio is 1.0; and the surface loading should not exceed 170 M.l./ha/day (including recirculated sewage). Also determine the efficiency of the filter and the BOD of the effluent.

Solution. Quantity of domestic sewage produced per day
 $= 120 \times 30,000 \text{ litres/day} = 3.6 \text{ M.l./day.}$

BOD for domestic sewage = 200 mg/l.

$\therefore$ Total BOD of domestic sewage per day
 $= 3.6 \times 200 \text{ kg/day} = 720 \text{ kg/day}$

Quantity of industrial sewage produced per day

$= 3,00,000 \text{ litres.}$

...(i)

$$\begin{aligned} \therefore \text{Total BOD of industrial sewage} \\ &= \frac{3,00,000 \times 800}{10^6} \text{ kg/day} \\ &= 240 \text{ kg} \end{aligned}$$

...(ii)

Total BOD of domestic as well as industrial sewage per day
 $= 720 + 240 = 960 \text{ kg/day}$

Out of this BOD, 35% is already removed in primary clarifier.

$$\begin{aligned} \therefore \text{BOD to be removed by filter unit} \\ &= 960 \times (0.65) = 624 \text{ kg/day.} \end{aligned}$$

Volume of filter media required

$$\begin{aligned} &= \frac{\text{Total BOD removed}}{\text{Organic loading}} = \frac{624}{10,000} \text{ ha-m} \\ &= \frac{624}{10,000} \times 10^4 \text{ m}^3 = 624 \text{ m}^3. \end{aligned}$$

Now, the total volume of sewage flowing

$$\begin{aligned} &= (3.6 \times 10^6 + 3,00,000) \text{ litres/day} \\ &= (3.9 \times 10^6) \text{ litres/day} = 3.9 \text{ M.l./day} \end{aligned}$$

A recirculation ratio of 1 means that the volume of recirculated sewage

$$(R) = \text{Original volume} = 3.9 \text{ M.l./day}$$

...(i)

Total volume (i.e., original + recirculated)

$$= 2 \times 3.9 \text{ M.l./day} = 7.8 \text{ M.l./day}$$

$\therefore$ Filter area required

$$\begin{aligned} &= \frac{\text{Total flow volume}}{\text{Surface loading}} = \frac{7.8 \text{ M.l./d}}{170 \text{ M.l./ha.d}} \\ &= \frac{7.8}{170} \text{ hectares} = \frac{7.8}{170} \times 10^4 \text{ m}^2 = 458.8 \text{ m}^2. \end{aligned}$$

$\therefore$ Dia of the filter tank required

$$= \sqrt{\frac{458.8 \times 4}{\pi}} = 24.17 \text{ m.}$$

Hence, use, say, 24 m dia tank with area as = 452.16 m². Ans.

$\therefore$ Depth of filter media required

$$= \frac{\text{Volume of filter media}}{\text{Surface area}} = \frac{624 \text{ m}^3}{452.16 \text{ m}^2} = 1.38 \text{ m. Ans.}$$

Efficiency of this filter is given by Eq. (9.34) as

$$\eta = \frac{100}{1 + 0.0044 \sqrt{\frac{Y}{V.F.}}}$$

where Y = Total organic load, i.e., total BOD applied to filter in kg/day = 624 kg per day.

V = Volume of filter in ha-m

F = Recirculation factor as given by Eq. (9.33) as:

$$= \frac{1 + \frac{R}{I}}{\left[1 + 0.1 \frac{R}{I}\right]^2} \text{ where } \frac{R}{I} = 1 \text{ (given)}$$

$$= \frac{1 + 1}{(1 + 0.1)^2} = \frac{2}{(1.1)^2} = \frac{2}{1.21} = 1.65$$

or $\eta = \frac{100}{1 + 0.0044 \sqrt{\frac{624}{0.0824 \times 1.65}}} = \frac{100}{1 + 0.0044 \sqrt{\frac{10^4}{1.65}}} = 74.5\% \text{ Ans.}$

BOD of the effluent left

$$= \frac{(100 - 74.5)}{100} \times 624 \text{ kg/day}$$

$$= \frac{25.5}{100} \times 624 = 159.12 \text{ kg}$$

Total volume of effluent = 3.9 M l/day

$\therefore$ BOD concentration in the effluent

$$= \frac{159.12 \times 10^6}{3.9 \times 10^6} \text{ mg/l} = 40.8 \text{ mg/l. Ans.}$$

Example 9.10. Determine the size of a high rate trickling filter for the following data:

(i) Sewage flow = 4.5 Mld;

(ii) Recirculation ratio = 1.5;

(iii) BOD of raw sewage = 250 mg/l;

(iv) BOD removal in primary tank = 30%;

(v) Final effluent BOD desired = 30 mg/l.

(A.M.I.E. 1974)

Solution. Quantity of sewage flowing into the filter per day = 4.5 M l/day.

BOD concentration in raw sewage = 250 mg/l.

$\therefore$ Total BOD present in raw sewage = 4.5 Ml $\times$ 250 mg/l = 1125 kg.

BOD removed in primary tank = 30%

BOD left in the sewage entering per day in the filter unit
= (1125) 0.7 = 787.5 kg.

BOD concentration desired in final effluent = 30 mg/l.

$\therefore$ Total BOD left in the effluent per day = 4.5 $\times$ 30 kg. = 135 kg.

$\therefore$ BOD removed by the filter = 787.5 - 135 = 652.5 kg.

$\therefore$ Efficiency of the filter

$$= \frac{\text{BOD removed}}{\text{Total BOD}} \times 100 = \frac{652.5}{787.5} \times 100 = 82.85\%.$$

Now, using equation (9.34), we have

$$\eta = \frac{100}{1 + 0.0044 \sqrt{\frac{Y}{V \cdot F}}}$$

where $\eta = 82.85\%$

Y = Total BOD in kg = 787.5 kg.

$$F = \frac{1 + \frac{R}{I}}{\left(1 + 0.1 \frac{R}{I}\right)^2} ; \text{ where } \frac{R}{I} = 1.5 \text{ (given)}$$

$$\therefore F = \frac{1 + 1.5}{[1 + 0.1 \times 1.5]^2} = \frac{2.5}{(1.15)^2} = \frac{2.5}{1.322} = 1.89$$

$$\therefore 82.85 = \frac{100}{1 + 0.0044 \sqrt{\frac{787.5}{V \times 1.89}}}$$

or $1 + 0.0044 \sqrt{\frac{416.6}{V}} = 1.207$

or $\sqrt{\frac{416.6}{V}} = \frac{0.207}{0.0044} = 47.05$

or $\frac{416.6}{V} = 2213.3$

or $V = 0.188 \text{ hectare-m.} = 1880 \text{ m}^3$

Assuming the depth of the filter as 1.5 m, we have

The surface area required

$$= \frac{1880}{1.5} \text{ m}^2 = 1253 \text{ m}^2$$

$\therefore$ Dia of the circular filter required

$$= \sqrt{1253 \times \frac{4}{\pi}} = 40 \text{ m.}$$

Hence, use a high rate trickling filter with 40 m dia., 1.5 m deep filter media, and with recirculation (single stage) ratio of 1.5. **Ans.**

Example 9.11. Determine the size of a high rate trickling filter for the following data:

Flow = 4.5 Mld

Recirculation ratio = 1.4

BOD of raw sewage = 250 mg/l

BOD removed in primary clarifier = 25%.

Final effluent BOD desired = 50 mg/l.

Calculate also the size of the standard rate trickling filter to accomplish the above requirement. (Calcutta University 1967)

Solution. Total BOD present in raw sewage per day

$$= 4.5 \text{ MI} \times 250 \text{ mg/l} = 1125 \text{ kg.}$$

BOD removed in the primary clarifier = 25%.

$\therefore$ BOD entering per day in the filter units

$$= 0.75 \times 1125 \text{ kg} = 843.75 \text{ kg.}$$

Permissible BOD concentration in the effluent = 50 mg/l.

$\therefore$ BOD allowed to go into the effluent

$$= 50 \text{ mg/l} \times 4.5 \text{ MI} = 225 \text{ kg.}$$

$\therefore$ BOD removed by the filter per day = $843.75 - 225 = 618.75 \text{ kg.}$

$$\text{Efficiency of the filter} = \frac{\text{BOD removed}}{\text{Total BOD entering}} \times 100 = \frac{618.75}{843.75} \times 100 = 73.3\%.$$

Now, efficiency of the filter is given by Eq. (9.34) as

$$\eta = \frac{100}{1 + 0.0044 \sqrt{\frac{Y}{V \cdot F}}}$$

where Y = Total BOD applied to the filter per day in kg.

$$= 843.75 \text{ kg}$$

F = Recirculation factor

V = Vol of filter in ha.m.

$$= \frac{1 + \frac{R}{I}}{\left[1 + 0.1 \frac{R}{I}\right]^2}; \text{ where } \frac{R}{I} = 1.4 \text{ (given)}$$

$$= \frac{1 + 1.4}{(1 + 0.1 \times 1.4)^2} = \frac{2.4}{(1.14)^2} = \frac{2.4}{1.3} = 1.85$$

$$73.3 = \frac{100}{1 + 0.0044 \sqrt{\frac{843.75}{V \times 1.85}}}$$

$$\text{or } 1 + 0.0044 \sqrt{\frac{458}{V}} = \frac{100}{73.3} = 1.364$$

$$\text{or } \sqrt{\frac{458}{V}} = \frac{0.364}{0.0044} = 82.78$$

$$\text{or } \frac{458}{V} = 6853$$

$$\text{or } V = \frac{458}{6853} \text{ hectare-m.} = \frac{458}{6853} \times 10^4 \text{ m}^3 = 665.4 \text{ m}^3.$$

Using 1.5 m depth of the filter, we have

$$\text{Area required} = \frac{665.4}{1.5} = 443.6 \text{ m}^2$$

$\therefore$ Dia of the filter tank required

For an equivalent standard rate filter; $F = 1$.

$$73.3 = \frac{100}{1 + 0.0044 \sqrt{\frac{843.75}{V}}}$$

$$\text{or } 1 + 0.0044 \sqrt{\frac{843.75}{V}} = \frac{100}{73.3} = 1.364$$

$$\text{or } \sqrt{\frac{843.75}{V}} = \frac{0.364}{0.0044} = 82.73$$

$$\text{or } \frac{843.75}{V} = 6843$$

$$\text{or } V = \frac{843.75}{6843} \text{ ha-m} = 0.1233 \text{ ha-m} = 1233 \text{ m}^3$$

$$\left[\begin{aligned} \therefore \text{ha-m} &= 10^4 \text{ sq. mm.} \\ &= 10^4 \text{ m}^3 \end{aligned} \right]$$

Using depth of filter as 1.5 m, we have

$$\text{Surface area required} = \frac{\sqrt{1233}}{1.5} = 822 \text{ m}^2$$

$\therefore$ Dia of the filter tank required

$$= \sqrt{\frac{822 \times 4}{\pi}} = 32.4 \text{ m. Ans.}$$

Example 9.12. A single stage filter is to treat a flow of 3.79 M.l.d. of raw sewage with BOD of 240 mg/l. It is to be designed for a loading of 11086 kg of BOD in raw sewage per hectare metre, and the recirculation ratio is to be 1. What will be the strength of the effluent, according to the recommendations of the National Research Council of U.S.A.

Solution. Total BOD present in raw sewage

$$= 3.79 \text{ MI} \times 240 \text{ mg/l} = 909.6 \text{ kg}$$

Now, filter volume required

$$= \frac{\text{Total BOD in raw sewage in kg}}{\text{Given BOD loading rate of } 11,086 \text{ kg / ha-m}}$$

$$= \frac{909.6}{11086} \text{ ha-m} = 0.082 \text{ ha-m.}$$

Now, assuming that 35% of BOD is removed in primary clarifier, we have

The amount of BOD applied to the filter

$$= 0.65 \times 909.6 \text{ kg} = 591.24 \text{ kg.}$$

Now, using equation (9.34), we have

$$\eta = \frac{100}{1 + 0.0044 \sqrt{\frac{Y}{V \cdot F}}}$$

where Y = Total BOD applied to the filter in kg

$$= 591.24 \text{ kg}$$

$$F = \frac{1 + \frac{R}{I}}{\left(1 + 0.1 \frac{R}{I}\right)^2}; \text{ where } \frac{R}{I} = 1$$

$$\therefore F = \frac{1 + 1}{(1 + 0.1)^2} = \frac{2}{1.21} = 1.65.$$

$$\therefore \eta = \frac{100}{1 + 0.0044 \sqrt{\frac{591.24}{0.082 \times 1.65}}} = 77.47\%.$$

$\therefore$ The amount of BOD left in the effluent
 $= 591.24 [1 - 0.7747] \text{ kg.} = 133.21 \text{ kg.}$

$\therefore$ BOD concentration in the effluent
 $= \frac{\text{Total BOD}}{\text{Sewage volume}} = \frac{133.21 \times 10^6}{3.79 \times 10^6} \text{ mg/l} = 35.15 \text{ mg/l. Ans.}$

Example 9.13. It is proposed to use a two stage plant instead of the single stage plant in example 9.12. The total volume of filter medium remains the same as was in one filter, i.e. 0.082 ha-m, and each filter is to contain half of this material, and the recirculation ratio is to be 1 for each filter. Determine the BOD of the plant effluent.

Solution. For each filter $F = 1.65$.

For the first stage filter, the efficiency is given by

$$\eta = \frac{100}{1 + 0.0044 \sqrt{\frac{Y}{V \cdot F}}}$$

where Y = Total BOD applied to filter
 $= 591.24 \text{ kg (from previous example)}$

V = Volume of filter $= \frac{0.082}{2} = 0.041 \text{ ha-m}$

$$\therefore \eta = \frac{100}{1 + 0.0044 \sqrt{\frac{591.24}{0.041 \times 1.65}}} = 70.85\%$$

$\therefore$ Percentage of BOD removed in first stage filter = 70.85%.

$\therefore$ Amount of BOD left in the effluent from that filter
 $= 591.24 [1 - 0.7085] = 172.32 \text{ kg.}$

For the second stage filter, the efficiency is given by equation (9.35), i.e.,

$$\text{The efficiency } \eta' = \frac{100}{1 + \frac{0.0044}{1 - \eta} \sqrt{\frac{Y'}{V' \cdot F'}}}$$

where $Y' = 172.32 \text{ kg}$
 $V' = 0.041 \text{ ha-m.}$
 $F' = 1.65.$

$$\therefore \eta' = \frac{100}{1 + \frac{0.0044}{1 - 0.7085} \sqrt{\frac{172.32}{0.041 \times 1.65}}} = \frac{100}{1 + \frac{0.0044}{0.2915} \sqrt{\frac{172.32}{0.041 \times 1.65}}} = 56.76\%$$

$\therefore$ The amount of BOD left in the effluent from the plant

$$= 171.9 \left[\frac{100 - 56.76}{100} \right] \text{ kg.} = 74.33 \text{ kg.}$$

$\therefore$ BOD concentration in the effluent

$$= \frac{\text{Total BOD}}{\text{Sewage volume}} = \frac{74.33 \times 10^6}{3.79 \times 10^6} \text{ mg/l} = 19.61 \text{ mg/l. Ans.}$$

Example 9.14. The design flow of sewage is 3.8 million litres per day, and the BOD of the raw sewage is 300 mg/l. Design a single stage Bio filter to produce an effluent having a BOD of 45 mg/l or less.

Solution. Total BOD present in raw sewage per day

$$= 3.8 \times 300 \text{ kg.} = 1140 \text{ kg.}$$

Assuming that 35% of this BOD is removed in the primary sedimentation tank, we have

The total daily BOD applied to the filter $= 0.65 \times 1140 \text{ kg} = 741 \text{ kg.}$

Now, the total daily BOD present in the effluent (permissible maximum)
 $= 3.8 \times 45 \text{ kg.} = 171 \text{ kg.}$

$\therefore$ Total daily BOD to be removed by the filter $= 741 - 171 = 570 \text{ kg.}$

$\therefore$ Efficiency of the filter $= \frac{570}{741} \times 100 = 76.92\%.$

Assuming an organic loading of say 10,000 kg/ha-m/day [i.e., between 9,000 to 14,000], we have

Volume of filter required $= \frac{\text{Total daily BOD removed}}{\text{Organic loading}}$

$$= \frac{570}{10,000} \text{ ha-m.} = 0.057 \text{ ha-m.} = 570 \text{ m}^3$$

Now, using equation (9.34), we have

$$\eta = \frac{100}{1 + 0.0044 \sqrt{\frac{Y}{V \cdot F}}}$$

where Y = Total daily BOD applied to filter in kg
 $= 570 \text{ kg.}$

V = Volume of filter $= 0.057 \text{ ha-m.}$

and $\eta = 76.92\%$ (worked out earlier)

$$\therefore 76.92 = \frac{100}{1 + 0.0044 \sqrt{\frac{570}{0.057 F}}}$$

$$\text{or } 1 + \frac{0.44}{\sqrt{F}} = \frac{100}{76.92} = 1.3$$

$$\text{or } \frac{0.44}{\sqrt{F}} = 0.3$$

$$\text{or } F = \left(\frac{0.44}{0.3} \right)^2 = 2.15$$

$$\text{or } F = \frac{1 + \frac{R}{I}}{\left(1 + 0.1 \frac{R}{I} \right)^2}$$

$$\text{or } 2.15 = \frac{1 + \frac{R}{I}}{\left(1 + 0.1 \frac{R}{I} \right)^2}$$

This gives $\frac{R}{I} = 1.47$ (Solving by trial)

Hence, the recirculation ratio used in the bio filter will be 1.47 or say 1.5. **Ans.**

(Note. The ratio can be reduced by reducing the organic loading.)

Example 8.15. Explain Eckenfelder trickling filter equation.

Determine the BOD_5 of the effluent from a low rate trickling filter that has a diameter of 35 m and a depth of 1.5 m, if the hydraulic loading is $1900 \text{ m}^3/\text{day}$ and the influent BOD_5 is 150 mg/l . Assume the rate constant as 1.89 d^{-1} and $\eta = 0.67$.
(Engineering Services, 1994)

Solution. Eckenfelder has developed an equation for measuring the performance of trickling filters, on the basis of rate of waste removal. His final equation which helps to compute the BOD removed by the filter, is given as :

$$\frac{Y_t}{Y_0} = \left[e \right]^{-\frac{K D}{Q_L}} \quad \dots(9.36)$$

where $Y_0 = BOD_5$ of the influent entering the filter, in mg/L

$Y_t = BOD_5$ of the effluent getting out of the filter, in mg/L

$K =$ Rate constant per day

$D =$ Depth of filter in m

$Q_L =$ Hydraulic loading rate per unit area of filter in $\text{m}^3/\text{day}/\text{m}^2$

$$= \frac{Q}{A}$$

The values given in the question are

$Y_t = BOD_5$ of the effluent = ?

$Y_0 = BOD_5$ of the influent = 150

$D =$ Depth of filter = 1.5 m

$K =$ Rate constant per day = 1.89 d^{-1}

$\eta = 0.67$

$Q_L =$ Hydraulic loading rate in $\text{m}^3/\text{d}.\text{m}^2$

$$= \frac{1900 \text{ m}^3/\text{d}}{\text{Area of filter}}$$

$$= \frac{1900}{\frac{\pi}{4} \times (35)^2} \text{ m}^3/\text{d}.\text{m}^2 = 1.976 \text{ m}^3/\text{d}.\text{m}^2$$

Substituting the above values in Eqn. (9.36), we get

$$\frac{Y_t}{150} = \left[e \right]^{-\frac{1.89 \times 1.5}{(1.976)^{0.67}}}$$

$$= (e)^{-1.796} = \frac{1}{(e)^{1.796}} = \frac{1}{6.027}$$

$$\text{or } Y_t = \frac{150}{6.027} = 24.89 \text{ mg/l say } 25 \text{ mg/l}$$

Hence, the BOD_5 of the filter effluent = 25 mg/L . **Ans.**

9.23. Other Miscellaneous Types of Filters

Besides the ordinary sand filters, contact beds, and both types of trickling filters (standard rate as well as high rate), other types of filters, such as, Dunbar filters, magnetic filters, rapid sand filters, etc. may also sometimes be used under special circumstances. These three types of filters are briefly noted below :

(i) **Dunbar Filters.** Dunbar filters are similar to intermittent sand filters in so far as their construction and operation is concerned, except that, here the filter media is graded from bottom to top from 150 to 1 mm size. At each dose of sewage, the filter is flooded, which then slowly percolates down. The filtering process is continued till the filter gets clogged. The surface of the filter is then cleaned.

Thus, surface loading may be kept at about 25 million litres per hectare of surface area per day (i.e. $2500 \text{ M.L./m}^2/\text{day}$). The BOD removed is upto 85% or so.

(ii) **Magnetic Filters.** In this type of filter, a layer of crushed magnetic ore of iron is provided in about 80 mm thickness, and is supported on a non-magnetic metal wire screen. Sewage is filtered through the magnetic layer, which removes the impurities purely by mechanical straining action. Filter is regularly cleaned, as and when the loss of head becomes more. These filters are not in common use these days.

(iii) **Rapid Sand Filters.** Rapid sand filters are like rapid gravity filters used in treating raw public water supplies. They may be adopted in treatment of sewage for reclaiming the used water, and then to utilise the reclaimed water for gardening, etc. However, such filters are generally not adopted, as they get clogged very soon.

SECONDARY SEDIMENTATION

9.24. Secondary Settling Tanks or Humus Tanks

It was pointed out earlier also that a filter, in fact, does remove only a very small percentage of the finely divided suspended organic matter present in sewage, while the majority of this organic matter undergoes a change of character, only due to the biological oxidation and nitrification taking place in the filter. Due to this aerobic oxidation and nitrification that takes place in the filter, the organic solids are converted into coagulated suspended mass, which is heavier and bulkier, and would thus settle down by gravity, if allowed to do so in sedimentation tanks. The effluent of the filter is, therefore, passed through a sedimentation tank, called the *Secondary clarifier** or the *Secondary settling tank* or the *Humus tank*.*

A secondary clarifier used for settling the effluents from the filters is similar to a primary settling tank, with a detention period of 1.5 to 2 hours, and over-flow rate ranging between 40,000 to 70,000 litres per sq. m. of plan area per day. Ordinary rectangular tanks with horizontal flow [Fig. 9.12 (a)] or circular tanks with spiral flow [Fig. 9.12 (b)] may be used. Sometimes, a third type, i.e. *hopper bottomed vertical flow type* tank (such as shown in Fig. 9.26), called *Dortmund tank*, is also used, especially for the secondary clarifier. They are circular tanks with deep conical hoppers, with dia as well as height ranging between 7.5 to 9 m. They are very costly, and as such, not generally used these days, and ordinary rectangular tanks with horizontal flow are generally preferred even for secondary clarification.

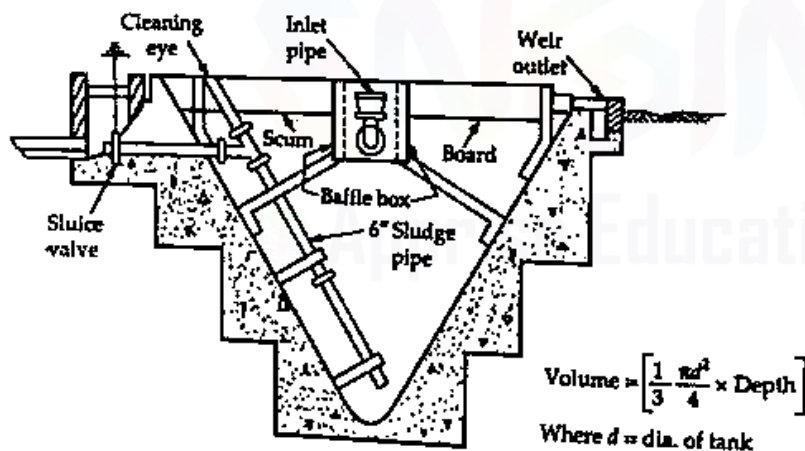


Fig. 9.26. Hopper-bottomed conical vertical flow type Sedimentation tank, called Dortmund tank.

*A secondary clarifier is a general term used for the tank, which is used for settling the effluent from a filter or from an activated sludge process. However, the word *Humus tank* specifically refers to the secondary settling tank, used for settling the effluent because humus is produced in the filter.

The secondary clarifiers provided for settling the effluent from the high rate filters (provided with recirculation of its filtered-settled sewage), will have larger capacities, so as to provide adequate settling time for the total rate of flow, and in addition, should be provided with necessary recirculation devices.

The sludge settled at the bottom of the humus tanks should be continuously and rapidly removed, and sent to the digestion tanks, either directly or through primary clarifiers.

Example 9.16. Design percolating filters with conical humus tanks for treating 7 million litres of sewage per day.

Solution. We will design conventional trickling filters, with a hydraulic loading, say, 28 M.l./ha/day [i.e. between 22 to 44].

$$\therefore \text{Surface area of the filter bed required} = \frac{7}{28} \text{ ha} = \frac{7}{28} \times 10^4 \text{ m}^2 = 2500 \text{ m}^2$$

Using two equal sized circular tanks, we have the dia of each tank

$$= \sqrt{\frac{2500}{2} \times \frac{4}{\pi}} = 39.9 \text{ m ; say } 40 \text{ m.}$$

Hence, use two trickling filters, each of 40 m dia. A third extra unit as stand-by unit, may also be provided. The depth of the filter provided may be kept 2 m or so. **Ans.**

Design of Conical Humus Tank

Assuming the detention period as 1.5 hours, we have the capacity of the tank required

$$= \frac{7}{24} \times 1.5 \text{ M.l.} = 0.437 \text{ M.l.} = 437 \text{ cu. m}$$

The volume of each conical tank, such as shown in Fig. 9.26, is given by

$$V = \left[\frac{1}{3} \cdot \frac{\pi d^2}{4} \right] \times \text{Depth} \quad \dots(9.37)$$

Using 4 Nos tanks, with 7.5 m depth of each tank, we have the vol. of each tank = $\frac{437}{4} \text{ m}^3 = 109.25 \text{ m}^3$.

$$\therefore \text{Surface area of each tank} = \frac{109.25}{7.5} \text{ m}^2 = 14.57 \text{ m}^2$$

$\therefore$ Dia of each tank (d) is given by

$$\frac{1}{3} \cdot \frac{\pi d^2}{4} = 14.57$$

$$\text{or } d = \sqrt{\frac{14.57 \times 12}{\pi}} = 7.46 \text{ m ; say } 7.5 \text{ m.}$$

Hence, use 4 tanks with dia 7.5 m and height also as 7.5 m. One additional tank as stand-by unit may also be provided ; thus, using 5 tanks in all. **Ans.**

DIGESTION AND DISPOSAL OF PRIMARY AND SECONDARY SLUDGE

9.25. Sludge and Its Moisture Content

The sludge, which is deposited in a primary sedimentation tank, is called the *Raw sludge*; and the sludge which is deposited in a secondary clarifier is called the *Secondary Sludge*. Raw sludge is odourous, contains highly putrescible organic matter, and is, thus, very very objectionable. Secondary sludge is also putrescible, though a little less objectionable.

The sludge withdrawn from the bottom of the sedimentation basins must, therefore, be stabilised before its final disposal. In addition to its putrescibility, another problem posed by the sludge is its high moisture content. In case of raw sludge, the moisture content is about 95%; in case of secondary sludge from a trickling filter plant, it is about 96 to 98%; and in case of secondary sludge from an activated sludge treatment plant*, it is about 98% to over 99%. *The sludge containing high moisture content becomes very bulky, and difficult to handle.* For example, sludge with 95% moisture, contains 5 litres of solid matter in 100 litres of sludge. Similarly, the sludge with 90% moisture will contain 10 litres of solid matter in 100 litres of sludge, i.e. 5 litres of solid matter in 50 litres of sludge. Thus, the sludge with 90% moisture will be half in quantity as compared to that of the sludge with 95% moisture, for the same volume of solids. Similarly, a sludge with 99% moisture contains 1 litre of solids in 100 litres of sludge, whereas, a sludge with 95% moisture contains 5 litres of solids in 100 litres of sludge, i.e. 1 litre of solids in

20 litres of sludge. Hence, the sludge with 99% moisture will be $\frac{100}{20} = 5$ times more bulky than the sludge with 95% moisture, for storing the same solid content.

It, therefore, follows that if the moisture content of the sludge is reduced, its volume will go on decreasing. If moisture content is reduced to about 70 to 80%, the sludge becomes viscous; and at about 10% moisture content, it becomes dry, and assumes powder form. The complete moisture can, however, be removed only by special treatments, since the water is so tenaciously held in the sludge.

Example 9.17. A sedimentation tank is treating 4.5 million litres of sewage per day containing 275 ppm of suspended solids. The tank removes 50% of suspended solids. Calculate the quantity of sludge produced per day in bulk and weight, if (a) moisture content of sludge is 98%; (b) moisture content of sludge is 96%.

Solution. Volume of sewage treated = 4.5 M-litres/day

Since suspended solids amount to 275 mg/l, we have the mass of suspended solids present in sewage.

$$= \frac{275 \times 4.5}{10^6} \times 10^6 \text{ kg/day} = 1237.5 \text{ kg/day}$$

Since 50% of solids are removed in sedimentation tank, we have
The mass of solids removed in sedimentation tank

$$= 1237.5 \times \frac{50}{100} = 618.75 \text{ kg/day.}$$

(a) When moisture content of sludge is 98%, then 2 kg of solids (dry sludge) will make

$$= 100 \text{ kg of wet sludge}$$

∴ 618.75 kg of solids (dry sludge) will make

$$= \frac{100}{2} \times 618.75$$

$$= 30937.5 \text{ kg} = 30940 \text{ kg (say).}$$

Hence, wet sludge or sludge produced per day

$$= 30,940 \text{ kg} = 30.94 \text{ tonnes. Ans.}$$

Assuming the sp. gravity of wet sludge (sludge) as 1.02, we have

$$\text{Unit wt. of sludge} = 1.02 \times 1 \text{ t/m}^3 = 1.02 \text{ t/m}^3$$

$$[\because \text{Unit wt. of water} = 1 \text{ t/m}^3]$$

∴ Vol. of wet sludge produced per day

$$= \frac{\text{Wt.}}{\text{Unit wt.}} = \frac{30.94}{1.02} = 30.33 \text{ m}^3$$

∴ Vol. of sludge (when its m.c. is 98%) = 30.33 m³. Ans.

(b) When moisture content is 96%, then

4 kg of solids will make

$$= 100 \text{ kg of wet sludge.}$$

∴ 618.75 kg of solids will make

$$= \frac{100}{4} \times 618.75 \text{ kg of wet sludge} = 15,470 \text{ kg (say) of wet sludge}$$

$$= 15.47 \text{ tonnes of wet sludge.}$$

Hence, wt. of sludge (when its m.c. is 96%) = 15.47 tonnes. Ans.

If sp. gravity of sludge is 1.02, then

$$\text{Vol. of sludge (when its m.c. is 96\%)} = \frac{15.47}{1.02} \text{ m}^3 = 15.17 \text{ m}^3.$$

Hence, the vol. of sludge at 96% m.c. = 15.17 cu. m. Ans.

Note. It shows that the sludge is reduced to half its volume when its m.c. is lowered from 98% to 96%.

Example 9.18. There is a sewage sludge with volume containing a certain moisture content p_1 (per cent). What will be the volume of this sludge if its moisture content is reduced to p (per cent).

Solution. Let the given sewage contains solids = W kg. Let its volume be V_1 at a moisture content of p_1 (per cent), and V at a moisture content of p (per cent).

At moisture content of p_1 , we have

$(100 - p_1)$ kg of solids will make

W kg of solids will make

$$= \frac{100 \cdot W}{(100 - p_1)} \text{ kg of wet sludge.}$$

or Wt. of sludge produced = $\frac{100 \cdot W}{(100 - p_1)} \text{ kg}$

∴ If γ_s is the unit wt. of sludge, in kg/m^3 , then

$$\text{Vol. of sludge produced} = \frac{100 \cdot W}{(100 - p_1)} \cdot \frac{1}{\gamma_s} \text{ m}^3.$$

or $V_1 = \frac{100 \cdot W}{100 - p_1} \cdot \frac{1}{\gamma_s} \quad \dots(i)$

At moisture content of p (per cent), similarly, we have

$$\text{Vol. of sludge produced (V)} = \frac{100 \cdot W}{100 - p} \cdot \frac{1}{\gamma_s} \text{ m}^3$$

or $V = \frac{100 \cdot W}{100 - p} \cdot \frac{1}{\gamma_s} \quad \dots(ii)$

From equation (i), we have

$$W = \frac{(100 - p_1) V_1 \cdot \gamma_s}{100} \quad \dots(iii)$$

From equation (ii), we have

$$W = \frac{(100 - p) V \cdot \gamma_s}{100} \quad \dots(iv)$$

Equating (iii) and (iv), we get

$$\frac{(100 - p_1) V_1 \cdot \gamma_s}{100} = \frac{(100 - p) V \cdot \gamma_s}{100}$$

or

$$V = V_1 \left[\frac{(100 - p_1)}{(100 - p)} \right] \quad \text{Ans.} \quad \dots(9.38)$$

Example 9.18. The moisture content of a sludge is reduced from 95 to 90% in a sludge digestion tank. Find the percentage decrease in the volume of sludge.

Solution. Using Eqn. (9.38), we have

$$V = V_1 \left[\frac{100 - p_1}{100 - p} \right]$$

or $V = V_1 \left[\frac{100 - 95}{100 - 90} \right] = V_1 \times \frac{5}{10} = \frac{V_1}{2}$

Thus, the volume at 90% moisture will be half of that at 95% moisture. Hence, the percentage decrease in moisture will be 50%. **Ans.**

9.26. Sludge Digestion Process

As pointed out earlier, the sludge withdrawn from the tank contains a lot of organic matter.

treatment, the organic matter may decompose, producing foul gases and a lot of nuisance, pollution, and health hazards. In order to avoid such pollutions, the sludge is, first of all, *stabilised by decomposing the organic matter under controlled anaerobic conditions**, and then disposed of suitably after drying on drying beds, etc. The process of stabilisation is called the *sludge digestion*; and the tank where the process is carried out is called the *sludge digestion tank*. In a sludge digestion process, the sludge gets broken into the following three forms:

(i) **Digested sludge.** It is a stable humus like solid matter, tarry black in colour, and with reduced moisture content, and, is therefore, having reduced volume (about $\frac{1}{3}$ times the undigested sludge volume). Moreover, the quality of digested sludge is much better than that of the undigested sludge, and it is free of pathogenic bacteria which are killed in the digestion process. It may still, however, contain cysts and eggs of bacteria, protozoa and worms.

(ii) **Supernatant liquor.** It includes the liquified and finely divided solid matter, and is having high BOD (about 3000 ppm).

(iii) **Gases of decomposition.** Gases like methane (65 to 70%), carbon dioxide (30%), and traces of other inert gases like nitrogen, hydrogen sulphide, etc. are evolved. They may be collected (particularly the methane which has a high calorific value) and used as a fuel.

The sludge gas, having 70% methane, has a fuel value of about 5800 kilo calories/cu. m (i.e. 650 Btu per cu. ft. app.). The amount of gas produced, on an average, is about 0.9 cu. m. per kg of volatile solids reduced in digestion. The gas produced thus varies with the sewage produced, and works out to about 14 to 18 litres per capita per day (usually 17 Ucd).

The digested sludge is *dewatered, dried up, and used as fertiliser*; while the gases produced are also used for fuel or for driving gas engines. The supernatant liquor contains about 1500 to 3000 ppm of suspended solids; and is, therefore, re-treated at the treatment plant along with the raw sewage.

9.27. Stages in the Sludge Digestion Process

Three distinct stages have been found to occur in the biological action involved in the natural process of sludge digestion. These stages are:

- (i) Acid fermentation;
- (ii) Acid regression; and
- (iii) Alkaline fermentation.

These stages are briefly summarised here:

(i) **Acid Fermentation Stage or Acid Production Stage.** In this first stage of sludge digestion, the fresh sewage-sludge begins to be acted upon by *anaerobic and facultative bacteria*, called *acid formers*. These organisms solubilize the organic solids through *hydrolysis*. The soluble products are then fermented to volatile acids and organic alcohols of low molecular weight like propionic acid, acetic acid, etc. Gases like methane, carbon dioxide and

*40 to 60% of the organic solids are converted by bacteria into carbon dioxide and methane gases. The organic matter which remains, is chemically stable and practically odourless.

hydrogen sulphide are also evolved. *Intensive acid production makes the sludge highly acidic, and lowers the pH value to less than 6. Highly putrefactive odours are evolved during this stage, which continues for about 15 days or so (at about 21°C). BOD of the sludge increases to some extent, during this stage.*

(ii) **Acid-Regression Stage.** In this intermediate stage, the volatile organic acids and nitrogenous compounds of the first stage, are attacked by the bacteria, so as to form acid carbonates and ammonia compounds. Small amounts of hydrogen sulphide and carbon-dioxide gases are also given off. The decomposed sludge has a very offensive odour, and its pH value rises a little, and to be about 6.8. The decomposed sludge, also, entraps the gases of decomposition, becomes foamy, and rises to the surface to form scum. *This stage continues for a period of about 3 months or so (at about 21°C). BOD of the sludge remains high even during this stage.*

(iii) **Alkaline Fermentation Stage.** In this final stage of sludge digestion, more resistant materials like proteins and organic acids are attacked and broken up by anaerobic bacteria, called methane formers, into simple substances like ammonia, organic acids and gases. *During this stage, the liquid separates out from the solids, and the digested sludge is formed. This sludge is granular and stable, and does not give offensive odours. (It has a musty earthy odour). This digested sludge is collected at the bottom of the digestion tank, and is also called ripened sludge. Digested sludge is alkaline in nature. The pH value during this stage rises to a little above 7 (about 7.5 or so) in the alkaline range. Large volumes of methane gas (having a considerable fuel value) alongwith small amount of carbon dioxide and nitrogen, are evolved during this stage. This stage extends for a period of about one month or so (at about 21°C). The BOD of the sludge also rapidly falls down during this stage.*

It is, thus, seen that several months (about 4½ months or so) are required for the complete process of digestion to take place under natural uncontrolled conditions at about 21°C. This period of digestion is, however, very much dependent upon the temperature of digestion, and other factors. If these factors are controlled, quicker and effective digestion can be brought about, as discussed below.

9.28. Factors Affecting Sludge Digestion and Their Control

The important factors which affect the process of sludge digestion, and are, therefore, controlled in a digestion tank, are :

1. Temperature ;
2. pH value ;
3. Seeding with digested sludge ; and
4. Mixing and stirring of the raw sludge with digested sludge.

Besides these important factors, certain other minor conditions like quality of water supply ; presence of copper, fluorides, and radio active substances, etc., may also affect the rate of digestion, but not to any appreciable extent. The important factors which are largely responsible for controlling the rate and effectiveness of sludge digestion are :

TREATMENT OF SEWAGE

(1) **Temperature.** The process of digestion is greatly influenced by temperature ; rate of digestion being more at higher temperatures and vice-versa. The effect of temperature on digestion period is shown in Fig. 9.27. In this figure, two distinct temperature zones are indicated ; i.e.

(i) **Zone of Thermophilic Digestion.** In this zone of high temperature, digestion is brought about by heat loving *thermophilic* organisms. The temperature in this zone ranges between 40 to 60°C. The optimum temperature in this zone is about 54°C, and at this temperature, the digestion period can be brought down to about 10—15 days only. However, thermophilic range temperatures are generally not employed for digesting sewage sludge, owing to odours and other operational difficulties.

(ii) **Zone of Mesophilic Digestion.** In this zone of moderate temperature, digestion is brought about by common *mesophilic* organisms. The temperature in this zone ranges between 25 to 40°C. The optimum mesophilic temperature is about 29°C ; and at this temperature, the digestion period can be brought down to about 30 days.

Hence, it can be concluded that the sludge can be quickly digested, if the temperature in the digestion tank is kept high. The best results are obtained

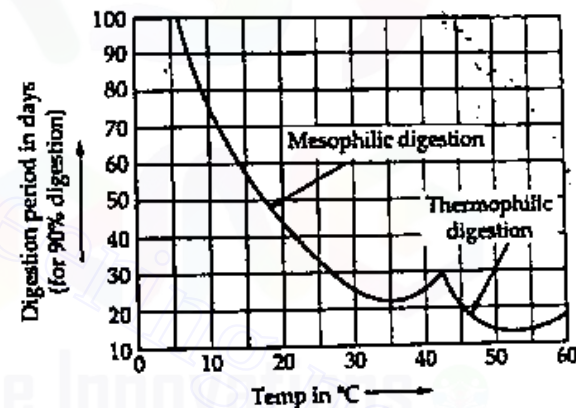


Fig. 9.27. Showing effect of temperature on sludge digestion period.

at about 29°C (i.e. the optimum mesophilic temperature) when about 90% of digestion takes place in about 30 days. But it may, however, be pointed out that it is difficult to control temperature in practice, as it mainly depends upon the prevailing local climatic conditions. Although external heating devices may sometimes be employed to control temperature in the digestion tanks, especially in cold countries.

(2) **pH Value.** It was pointed out earlier that during the digestion process, a lot of volatile organic acids are formed, as an intermediate step, in the breakdown of organic material. These volatile acids are then converted into methane gas by a specialised group of strictly anaerobic and slow growing bacteria, called methane formers. If the methane formers are not operating properly, an accumulation of volatile acids may occur, causing the pH to drop

during digestion, care must be taken to keep the acidity well under control, so that the pH during the digester start-up does not go below 6.5 or so, and thus to see that alkaline conditions (with optimum pH about 7.2 to 7.4) may prevail ultimately, in the final stage of digestion.

The acidity increases, (i) with the overdosing of raw sludge; (ii) with the over withdrawal of digested sludge; and (iii) with the sudden admission of industrial wastes. The remedy in such cases is to add hydrated lime in doses of 2.3 to 4.5 kg. per 1000 persons to the raw sludge. The weight of raw sludge to be added daily, for the maintenance of optimum value of pH, should also be limited to 3 to 5 per cent of the weight of the digested sludge removed.

(3) **Seeding with the Digested Sludge.** When a sludge digestion tank is first put in operation, it is highly beneficial to seed it with the digested sludge from another tank. Without seeding, it may take a few months to get a tank operating properly. Proper seeding will help attain quick balance conditions of reaction.

(4) **Mixing and Stirring of the Raw Sludge with the Digested Sludge.** Incoming fresh raw sludge should be thoroughly mixed with the digested sludge, by some effective method of agitation, so as to make a homogenous mass of raw as well as digested (or partly digested) sludge. In this way, the bacterial enzymes present in the digested sludge will get every opportunity to get mixed with the raw sludge, and to attack it for subsequent decomposition.

The mixing of raw and digested sludge achieved by stirring the sludge in the sludge digestion tank by slow moving mechanical devices; or the gases of decomposition may be used to set up agitation by circulating from bottom to top of the tank and *vice versa*, by means of a pumping device.

Excessive stirring may produce harmful effects, as it may kill the bacteria. The proper stirring however, results in even distribution of incoming sludge, breaks and reduces the scum, and helps in increasing the production of gases.

In cold countries, where it is necessary to heat the digestion tanks, so as to maintain optimum mesophilic temperature (about 29°C), the stirring may help in transmitting heat from the heating coils to the tank contents; and thus to attain uniform temperature throughout the tank.

9.29. Sludge Digestion Tank or Digestors

(Aerobic Suspended Culture)

9.29.1. Constructional Details. A typical sludge digestion tank is shown in Fig. 9.28. It consists of a circular R.C.C. tank with hoppers bottom, and having a fixed or a floating type of roof* over its top. The raw sludge is pumped into the tank, and when the tank is first put into operation, it is seeded with

*Floating type of roof rises or falls with the pressure of gas, and it keeps out air successively. It may also be enlarged to work as a gas holder. Such type of roof is useful for small installations.

Fixed type of roof is used when separate gas holders are provided. The arrangement in this case should be so made that when the working level of the tank falls due to the withdrawal of supernatant liquor or the digested sludge, the gas from gas holders returns to the tank. Such an arrangement will ensure that the gas is not lost.

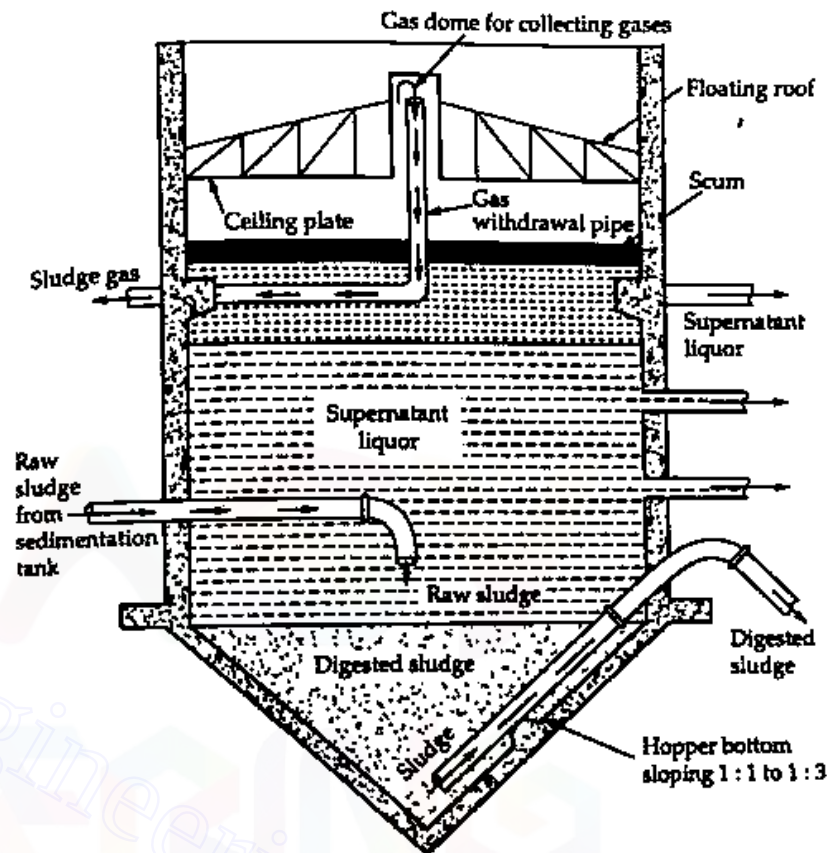


Fig. 9.28. Cross-section of a typical sludge digestion tank.

the digested sludge from another tank, as pointed out earlier. A screw pump with an arrangement for circulating the sludge from bottom to top of the tank or *vice versa* (by reversing the direction of rotation of the screw) is commonly used, for stirring the sludge. Sometimes, power driven mechanical devices may be used for stirring the sludge, although these are not very popular, at present.

In cold countries, the tank may have to be provided with heating coils through which hot water is circulated in order that the temperature inside the tank is maintained at optimum digestion temperature level.

The gases of decomposition (chiefly methane and carbon dioxide) are collected in a gas dome* (in smaller tanks) or collected separately in gas holders (in larger tanks) for subsequent use. The digested sludge which settles down to the hopped bottom of the tank is removed under hydrostatic pressure, periodically, once a week or so. The supernatant liquor lying between

*A gas dome is made of suitable metal, and is cylindrical in shape. It is fixed in the roof of

the sludge and the scum is removed at suitable elevations, through a number of withdrawal pipes, as shown. The supernatant liquor, being higher in BOD and suspended solids contents, is sent back for treatment along with the raw sewage in the treatment plant. The scum formed at the top surface of the supernatant liquor is broken by the recirculating flow or through the mechanical rakers called *scum breakers*.

9.29.2. Design Considerations. The digestion tanks are cylindrical shaped tanks (i.e. circular in plan) with *dia* ranging between 3 to 12 m. The bottom hopped floor of the tank is given a slope of about 1 : 1 to 1 : 3 (i.e. 1 H : 3 V). However, when the sludge is moved to the outlet by means of some mechanical equipment, the bottom slopes may be made relatively flat.

The *depth of the digestion tank* is usually kept at about 6 m or so. Deeper tanks are costlier, though more effective. Except in very large plants, it is usual not to provide more than 2 units.

The *capacity of the digestion tank* is a function of sludge production, digestion period, degree of digestion required, loss of moisture, and conversion of organic matter. If the progress of sludge digestion is assumed to be linear, then the capacity of the digestion tank (V) is given as :

$$V = \left(\frac{V_1 + V_2}{2} \right) t \quad \dots(9.39)$$

where V = Vol. of the digester, m^3

V_1 = Raw sludge added per day, m^3/d

V_2 = Equivalent digested sludge produced per day

on completion of digestion, $m^3/d = \frac{V_1}{3}$

t = Digestion period, d .

When the daily digested sludge could not be removed (even though digestion gets completed) due to the factors, such as monsoon season, winter season, etc. ; then separate capacity for its storage should be provided in the tank. This capacity eventually amounts to $V_2 \cdot T$, where T is the no. of days for which the digested sludge is stored, and is called the *monsoon storage*. The total digester volume is then given as :

$$V = \left(\frac{V_1 + V_2}{2} \right) t + V_2 \cdot T \quad \dots(9.39a)$$

However, when the change during digestion is assumed to be parabolic* rather than linear, the average volume of digesting sludge will be $\left[V_1 - \frac{2}{3}(V_1 - V_2) \right]$ and the required capacity of the digester will be given as :

$$V = \left[V_1 - \frac{2}{3}(V_1 - V_2) \right] t \quad \dots(9.40)$$

without monsoon storage

*Parabolic variation is more closed to realistic happenings in the tank, though it has lesser capacity. Hence, in order to be on the safe side, the capacity should be increased by 10%.

$$\text{or } V = \left[V_1 - \frac{2}{3}(V_1 - V_2) \right] t + V_2 \cdot T \quad \dots(9.40a)$$

with monsoon storage

The capacity of the sludge digestion tank calculated above, may also be modified for the following additional factors :

- amount of sludge withdrawn and its interval ;
- provision of adequate free-board at top ;
- storage for winter ;
- type of pre-treatment given to fresh sludge ;
- collection of gas ; etc.

Depending upon all these variable factors, digestion tanks are also designed on per capita basis. The capacity provided per capita may range between 21 to 61 litres per capita (taking into account the usual one month digestion period) as shown in Table 9.7.

Table 9.7. Design Capacities of the Digestion Tanks on Per Capita Basis

S. No.	Type of raw sludge to be digested	kg. of volatile solids present per cu. m. of sludge per month	Per capita capacity in cum./capita
1.	Primary sludge	8	0.021
2.	Mixture of primary sludge and secondary sludge from trickling filters (humus tanks)	7.36	0.036
3.	Mixture of primary sludge and secondary activated sludge	5.76	0.061
4.	Chemically coagulated sludge	—	0.056

As pointed out earlier, the amount of the *sludge gas* produced in the digestion tank, ranges between 14 to 28 litres per capita per day (usually 17 litres per capita per day or 900 litres per gm of volatile solids digested, is quite common). The gas collected may be utilised for operating gas engines, and for heating sludge to promote quick digestion. However, the gas collection and its utilisation is found fruitful only in case of large plants serving more than 50,000 persons or so, so as to produce at least about 800–1000 cu. m. of gas per day.

Example 9.20. Design a digestion tank for the primary sludge with the help of following data :

- Average flow = 20 Mld ;
- Total suspended solids in raw sewage = 300 mg/l ;
- Moisture content of digested sludge = 85%.

Assume any other suitable data you require.

(A.M.I.E. 1974)

Solution : Average flow = 20 Mld

∴ Mass of suspended solids in 20 Ml of sewage flowing per day

$$= \frac{300 \times 20 \times 10^6}{10^6} \text{ kg} = 6000 \text{ kg/day.}$$

Assuming, that 65% solids are removed in primary settling tanks, we have

Mass of solids removed in the primary settling tank

$$= 65\% \times 6000 \text{ kg/day} = 3900 \text{ kg/day.}$$

Assuming that the fresh sludge has a m.c. of 95%, we have

5 kg of dry solids will make = 100 kg of wet sludge

∴ 3900 kg of dry solids will make

$$= \frac{100}{5} \times 3900 \text{ kg of wet sludge per day}$$

$$= 78,000 \text{ kg of wet sludge per day.}$$

Assuming the sp. gravity of wet sludge as 1.02 (i.e. Density = 1020 kg/m³), we have

The volume of raw sludge produced/day

$$= V_1 = \frac{78000}{1020} \text{ m}^3/\text{day} = 76.47 \text{ m}^3/\text{day.} \quad \dots(i)$$

The volume of the digested sludge (V_2) at 85% m.c. is given by the formula (9.38) as

$$V_2 = V_1 \left[\frac{100 - p_1}{100 - p_2} \right]$$

$$\text{or } V_2 = V_1 \left[\frac{100 - 95}{100 - 85} \right] \quad \text{or } V_2 = V_1 \left[\frac{5}{15} \right]$$

$$\text{or } V_2 = \frac{1}{3} \times V_1 = \frac{1}{3} \times 76.47 \text{ cu. m/day} = 25.49 \text{ m}^3/\text{day.}$$

Now, assuming the digestion period as 30 days, we have the capacity of the required digestion tank, given by Eqn. (9.40) as :

$$\text{Capacity} = \left[V_1 - \frac{2}{3}(V_1 - V_2) \right] t$$

$$\text{or } = \left[76.47 - \frac{2}{3}(76.47 - 25.49) \right] 30$$

$$= \left[76.47 - \frac{2}{3} \times 50.98 \right] 30 = 1274.5 = 1275 \text{ cu. m.}$$

Now, providing 6.0 m depth of the cylindrical digestion tank, we have

$$\text{Cross-sectional area of the tank} = \frac{1275}{6} = 212.5 \text{ m}^2$$

$$\therefore \text{Dia of tank} = \sqrt{\frac{212.5}{\pi/4}} \text{ m} = 16.45 \text{ m ; say } 16.5 \text{ m.}$$

Hence, provide a cylindrical sludge digestion tank (typical section shown in Fig. 9.28) 6 m deep and 16.5 m diameter, with an additional slope of 1 : 1 slope for collection.

Example 9.21. Raw waste water is entering a treatment plant and contains 250 mg/l suspended solids. If 55% of these solids are removed in sedimentation.

(a) Find the volume of raw sludge produced per million litre of waste water. Assume that the sludge has a moisture content of 96%, and specific gravity of solids is 1.2.

(b) Find the unit weight of raw sludge.

(c) If 45% of raw sludge is changed to liquid and gas in the digestion tank, find the volume of digested sludge per million litre of waste water. Assume that the moisture content of the digested sludge is 90%.

Solution. (a) Suspended solids in waste water = 250 mg/l

Since 55% of these solids are removed in sedimentation, we have

The solids removed in sedimentation as sludge

$$= 55\% \times 250 \text{ mg/l} = 137.5 \text{ mg/l.}$$

If vol. of waste water is 1 million litre, then solids removed as sludge

$$= \frac{137.5}{10^6} \times 10^6 \text{ kg} = 137.5 \text{ kg.}$$

Sludge produced will, thus, have 137.5 kg solids, and the rest will be water. Now, since the moisture content of sludge is 96%, we have

4 kg of solids will produce 100 kg of wet sludge, by joining with 96 kg of water.

∴ Water contained in 4 kg of solids = 96 kg

$$\therefore \text{Water contained in } 137.5 \text{ kg of solids} = \frac{96}{4} \times 137.5 \text{ kg} = 3300 \text{ kg.}$$

Hence, volume of sludge produced per million litre of waste water

$$= \frac{\text{Mass of solids}}{\text{Density of solids}} + \frac{\text{Mass of water}}{\text{Density of water}}$$

$$= \left[\frac{137.5}{12 \times 1000} + \frac{3300}{1000} \right] \text{ cu-m}$$

$$[\because \text{Density of solids} = \text{sp. gravity of solids} \times \text{Density of water} = 1.2 \times 1000 \text{ kg/m}^3]$$

$$= 0.115 + 3.3 = 3.415 \text{ cu m.}$$

Hence, vol. of sludge produced per million litre of waste water

$$= 3.415 \text{ cu m. Ans.}$$

(b) Density of raw sludge

$$= \frac{\text{Mass of solids} + \text{Mass of water}}{\text{Volume of sludge}}$$

$$= \frac{137.5 + 3300}{3.415} \text{ kg/m}^3 = \frac{3437.5}{3.415} \text{ kg/m}^3 = 1007 \text{ kg/m}^3. \text{ Ans.}$$

(c) 45% of raw sludge is changed to liquid and gas, means that 45% of solids are consumed (digested).

∴ Mass of dry solids left in the digested sludge

$$= \frac{55}{100} \times 137.5 \text{ kg} = 75.625 \text{ kg.}$$

Since digested sludge contains 90% m.c., we have

The vol. of digested sludge

$$= \left[\frac{\text{Mass of solids left in digested sludge}}{\text{Density of solids}} \right] + \left[\frac{\text{Mass of water}}{\text{Density of water}} \right]$$

$$= \left[\frac{75.625}{12 \times 1000} + \frac{75.625 \times \frac{90}{100}}{1000} \right] \text{ m}^3 = 0.063 + 0.681 = 0.744 \text{ cu m}$$

Hence, the vol. of digested sludge per million litre of waste water

$$= 0.744 \text{ cu-m. Ans.}$$

Example 9.22. The sewage of a certain town contains 600 ppm of suspended matter. Assuming that 55% of this is settled down in plain sedimentation tank, and the sludge collected has a water content of 95%, calculate its quantity per million litre, both in bulk and weight. Assume sp. gr. 1.02.

Solution. Suspended matter in sewage = 600 ppm = 600 mg/l.

For 1 million litre of sewage, we have the suspended matter

$$= \frac{600}{10^6} \times 10^6 \text{ kg} = 600 \text{ kg.}$$

Now, 55% of this matter is settled as sludge, and therefore quantity of sludge solids

$$= 0.55 \times 600 = 330 \text{ kg.}$$

The sludge is having 95% m.c., which means 5 kg of dry solids will make 100 kg of wet sludge.

∴ 5 kg of dry solids make = 100 kg of sludge

∴ 330 kg of dry solids make = $\frac{100}{5} \times 330 = 6600 \text{ kg of sludge.}$

Hence, the mass of sludge formed per million litre of sewage = 6600 kg. Ans.

$$\therefore \text{Volume of sludge} = \frac{\text{Mass of sludge}}{\text{Density of sludge}} = \frac{6600 \text{ kg}}{1020 \text{ kg/m}^3}$$

$$\left[\because \text{Density of sludge} = \text{Sp. gr.} \times \text{Density of water} \right]$$

$$= 1.02 \times 1000 \text{ kg/m}^3 = 1020 \text{ kg/m}^3.$$

$$= 6.47 \text{ m}^3.$$

Hence, the vol. of sludge formed per million litre of sewage = 6.47 cu-m. Ans.

Example 9.23. Design a sludge digestion tank for 40,000 people. The sludge content per capita per day is 0.068 kg. The moisture of the sludge is 94%. The sp. gravity of the wet sludge is 1.02 and 3.5 per cent of the digester volume is daily filled with the fresh sludge, which is mixed with the digested sludge.

Solution. Dry sludge content produced by 40,000 persons

$$= 0.068 \times 40,000 \text{ kg} = 2,720 \text{ kg/day}$$

94% moisture content means that 6 kg of dry sludge will produce 100 kg of wet sludge.

∴ 6 kg of dry sludge produces wet sludge = 100 kg

$$2720 \text{ kg of dry sludge produces wet sludge} = \frac{100}{6} \times 2720$$

$$= 45333 \text{ kg} = 45.3 \text{ t/day}$$

Volume of wet sludge produced,

$$= \frac{\text{Mass of sludge}}{\text{Density of sludge}}$$

$$= \frac{45.3}{1.02} \text{ m}^3/\text{day}$$

$$\left[\because \text{Density of sludge in t/m}^3 = \text{Sp. gr.} \right. \\ \left. \times \text{Density of water (which is 1 t/m}^3) \right. \\ \left. = 1.02 \times 1 = 1.02 \text{ t/m}^3 \right]$$

$$= 44.4 \text{ m}^3/\text{day.}$$

44.4 m³ of fresh sludge is added to the tank daily, to fill 3.5% of the digester capacity.

$$\therefore \frac{3.5}{100} \times \text{Capacity of digester}$$

$$= \text{Volume of fresh sludge produced daily} = 44.4 \text{ m}^3$$

or Capacity of digester required

$$= \frac{44.4 \times 100}{3.5} = 1268.9 \text{ cu-m.}$$

Providing 30% additional capacity for fluctuations, we have

The required digester capacity

$$= 1268.9 \times 1.3 = 1650 \text{ cu-m (say).}$$

Now, providing 6 m depth of the cylindrical digestion tank, we have

The cross-sectional area of the tank

$$= \frac{1650}{6} = 275 \text{ m}^2$$

$$\therefore \text{Dia of tank} = \sqrt{\frac{275}{\pi/4}} = \sqrt{\frac{275}{0.785}} = 18.7 \text{ m.}$$

Hence, provide a cylindrical sludge digestion tank (typical section drawn in Fig. 9.28), 6 m deep and 18.7 m in diameter, with an additional hoppers bottom of 1 : 1 slope for collection of digested sludge. Ans.

Example 9.24. A waste water plant produces 1000 kg of dry solids per day at a moisture content of 95 percent. The solids are 70 percent volatile with a sp. gr. of 1.05, and the remaining are non-volatile with specific gravity of 2.5. Find the sludge volume after digestion which reduces volatile solid content by 50 percent and decreases the moisture content by 90 percent.

(Engineering Services, 2001)

Non-volatile solids = 30% T.S. = 300 kg.

Volatile solids removed in digestion

$$= 50\% \text{ volatile solids} = 50\% \times 700 \text{ kg} = 350 \text{ kg.}$$

Volatile solids left in digested sludge = 350 kg.

Non-volatile solids in digested sludge = 300 kg (as in original sludge)

$\therefore$ Mass of solids in digested sludge = 300 + 350 = 650 kg.

Mass of water in wet digested sludge = 90%

10 kg of solids make = 100 kg of wet sludge

$\therefore$ 10 kg of solids contain = 90 kg of water

$$\text{or } 650 \text{ kg of solids contain} = \frac{90}{10} \times 650 = 5850 \text{ kg of water}$$

$$\text{Density of volatile solids} = \rho_v \cdot S_v = 1000 \frac{\text{kg}}{\text{m}^3} \times 1.05 = 1050 \text{ kg/m}^3$$

$$\text{Similarly density of non-volatile solids} = 1000 \times 2.5 = 2500 \text{ kg/m}^3$$

$$\therefore \text{Vol. of volatile solids in wet sludge} = \frac{\text{Mass}}{\text{Density}} = \frac{350}{1050} \text{ m}^3 = 0.33 \text{ m}^3$$

$$\text{Vol. of non-volatile solids in wet sludge} = \frac{\text{Mass}}{\text{Density}} = \frac{300}{2500} \text{ m}^3 = 0.12 \text{ m}^3$$

$$\text{Vol. of water in wet sludge} = \frac{\text{Mass}}{\text{Density}} = \frac{5850}{1000} \text{ m}^3 = 5.85 \text{ m}^3$$

$$\therefore \text{Total volume of wet sludge} = 0.33 + 0.12 + 5.85 = 6.30 \text{ m}^3. \text{ Ans.}$$

Example 9.25. A trickling filter plant treats 1500 cum per day of sewage with a BOD₅ of 220 mg/l and SS of 250 mg/l. Estimate the total solid production assuming that primary clarification removes 30% of BOD and 60% of influent solids. Take the solid production in the trickling filter as @ 0.5 kg/kg of the applied BOD.

(Engineering Services, 2001)

Solution. Solids removed in primary clarification units of the trickling filter plant

$$= 60\% \text{ of SS applied}$$

$$= 60\% \times 250 \text{ mg/l} = 150 \text{ mg/l} = 150 \text{ g/m}^3$$

$$= \frac{150 \times 1500}{1000} \text{ kg/day (for 1500 cum of sewage)}$$

$$= 225 \text{ kg/day}$$

...(i)

BOD₅ removed in primary treatment = 30%

Balance BOD₅ applied to filters

$$= 70\% \times 220 \text{ mg/l} = 154 \text{ mg/l}$$

$$= 154 \text{ g/m}^3 = \frac{154 \times 1500}{1000} \text{ kg/day (for 1500 cum of sewage)}$$

$$= 231 \text{ kg/day.}$$

Solids production in filters

$$= 0.5 \text{ kg/kg of BOD applied}$$

$$= 0.5 \times 231 \text{ kg/day} = 115.5 \text{ kg/day}$$

...(ii)

Total solids produced daily in treating 1500 cum of sewage

$$= (i) + (ii)$$

$$= 225 + 115.5 = 340.5 \text{ kg/day. Ans.}$$

9.29.3. Estimated Gas Production. If it is possible to analyse the wastewater to be treated, and to determine the characteristics of the sludge, its gas producing ability may be estimated. When such data cannot be obtained, the following approximate values may be used as a basis for estimating the amount of gas produced by digestion:

About 60% of the suspended solids of sewage are removed by sedimentation; 75% by chemical coagulation and settling; and 90% by complete treatment, such as by the activated sludge or the trickling filters, preceded and followed by sedimentation.

About 70% of the suspended solids in the sewage are volatile, and the reduction of the volatile matter in sludge, is about 65%. In digestion, the amount of gas produced is about 0.6 cu. m per kg of volatile matter present in the sludge, or is about 0.9 cu-m per kg of volatile matter reduced. The gas produced usually contains 65% methane, 30% carbon dioxide, and trace amounts of other gases. The heat content of methane is approximately 36000 kJ/m³ (8800 kC/m³). The procedure in using this information is exhibited in the following examples:

Example 9.26. A sewage containing 200 mg/l of suspended solids is passed through primary settling tanks, trickling filters, and secondary settling tanks. How much gas will probably be produced in the digestion of sludge from one million litres of sewage?

Solution. Total suspended solids in sewage = 200 mg/l.

Assuming 90% removal of suspended solids in complete treatment, we have

The suspended solids removed

$$= 90\% \times 200 \text{ mg/l.} = 180 \text{ mg/l}$$

Assuming volatile solids to be equal to 70% of suspended solids, we have

Volatile solids removed

$$= 70\% \times 180 \text{ mg/l} = 126 \text{ mg/l.}$$

Now, assuming that the volatile solids (matter) is reduced by 65% in the sludge by digestion, we have

$$\text{Volatile solids reduced} = 65\% \times 126 \text{ mg/l} = 81.9 \text{ mg/l.}$$

$$\therefore \text{Volatile matter reduced per million litre of sewage} = 81.9 \text{ kg.}$$

Now, assuming that 0.9 cu. m. of gas is produced per kg of volatile matter reduced, we have

The gas produced per million litre of sewage

$$= 0.9 \times 81.9 \text{ cu.m.} = 73.71 \text{ cu.m.}$$

$$= 73,710 \text{ litres. Ans.}$$

Example 9.27. A sewage containing 200 mg/l of suspended solids is passed through primary settling tank. The solids from the primary settling tank are digested to recover the gas. Find the likely volumes of methane and carbon

dioxide produced in the digestion of the sludge from 10,000 m³ of sewage. Calculate the fuel value of the gas produced. State clearly the assumptions made. (A.M.I.E. 1975)

Solution.

Total suspended solids in sewage = 200 mg/l.

Assuming that 60% of suspended solids are removed in the primary settling tank, we have

The suspended solids removed as sludge
 $= 60\% \times 200 \text{ mg/l} = 120 \text{ mg/l}$.

Now, assuming that the volatile solids present are 70% of the suspended solids, we have

∴ The volatile solids removed
 $= 70\% \times 120 \text{ mg/l} = 84 \text{ mg/l}$.

Further, assuming that the volatile matter is reduced by 65% in sludge digestion, we have

Volatile matter reduced = $65\% \times 84 \text{ mg/l} = 54.6 \text{ mg/l}$

Hence, volatile matter reduced in 10,000 cu. m. of sewage

$$= 54.6 \times \frac{(10,000 \times 1000)}{10^6} \text{ kg} = 546 \text{ kg}.$$

Now, assuming that 0.9 cu. m. of gas is produced per kg of volatile matter reduced, we have

Total quantity of gas produced
 $= 0.9 \times 546 \text{ cu. m.} = 491.4 \text{ cu. m. Ans.}$

Assuming that the produced gas contains 65% methane and 30% carbon dioxide, we have

Methane produced = $0.65 \times 491.4 \text{ cu m} = 319.41 \text{ cu m. Ans.}$

Carbon dioxide produced = $0.30 \times 491.4 \text{ cu m} = 147.42 \text{ cu m. Ans.}$

Now, assuming that the methane in the sludge gas has a fuel value of 36000 kJ/m³, we have

The fuel value = $36,000 \times 319.41 \text{ kJ} = 11.50 \text{ MJ}$

Now, assuming a boiler efficiency of 80%, we have the amount of heat that can be furnished by the boiler

$$= 80\% \times 11.50 \text{ MJ} = 9.2 \text{ MJ. Ans.}$$

$$= \frac{9.2}{4.18} \text{ MkJ} = 2.253 \text{ Million kilo Calorie. Ans.}$$

9.29.4 Two Stage Digestion. While treating sewage on a large scale, two stage digestion of sludge is generally adopted instead of a single stage digestion. In two stage digestion, two digestion tanks, called *primary and secondary digestors*, are used.

Sludge is, first, admitted into the primary digestion tank (or primary digester) and is kept there for a period of about 7 to 10 days. The gas produced is collected in this unit. The partly digested sludge and supernatant liquor from this primary digester are then transferred to the secondary digestion

tank (or secondary digester), where they are kept for a period of about 20 days or so. The digested sludge and supernatant liquor from the secondary digester are then finally removed, and disposed of suitably in a sanitary manner.

Two stage digestion gives the following *advantages* compared to single stage digestion :

- (i) Two stage digestion is an effective method of preventing (or reducing greatly) any tendency for the sludge to *short-circuit*, as may happen in a single stage digester. The quality of supernatant liquor produced is, therefore, of much better quality here.
- (ii) Only the primary digester is provided with heating, stirring, gas collection arrangements ; while the secondary unit merely acts as a closed settling tank, so as to produce clear supernatant liquor, thus affecting economy in construction.
- (iii) Two stage digestion offers the freedom from large scum formations in any of the digestion tanks.
- (iv) It has been estimated that the total cost with two stage digestion may be less than that for two tanks operated in parallel.

9.30. Disposal of Digested Sludge

The digested sludge from the digestion tank contains a lot of water, and is, therefore, first of all, dewatered or dried up, before further disposal either by burning or dumping. In India, the water of sludge is removed by drying the sludge on *drying beds* ; whereas, in western countries, dewatering is generally done by *vacuum filters* or by using *high speed centrifuges*. These methods of dewatering the sludge, are discussed below :

9.30.1. Dewatering, Drying and Disposal of Sludge by Sludge Drying Beds. Drying of the digested sludge on open beds of land (called *sludge drying beds*) is quite suitable for hot countries like India, and is discussed below :

Sludge drying beds are open beds of land, 45 to 60 cm deep, and consisting of about 30 to 45 cm thick graded layers of gravel or crushed stone varying in size from 15 cm at bottom to 1.25 cm at top, and overlain by 10 to 15 cm thick coarse sand layer. Open jointed under-drain pipes (15 cm in dia) @ 6 to 7 m c/c spacing are laid below the gravel layer in valleys, as shown in Fig. 9.29, at a longitudinal slope of about 1 in 100. The beds are about 15 × 30 m in plan, and are surrounded by brick walls rising about 1 metre above the sand surface, as shown.

The sewage sludge from the digestion tank is brought and spread over the top of the drying beds to a depth of about 20 to 30 cm, through *distribution troughs* (Fig. 9.29) having openings of about 15 cm × 20 cm at a distances of about 2 m or so.

A portion of the moisture, drains through the bed, while most of it is evaporated to the atmosphere. It usually takes about two weeks to two months, for drying the sludge, depending on the weather and condition of the bed.

The required area for sludge drying beds normally ranges between 0.05 to 0.2 sq. m per capita, as shown in Table 9.8. In some instances, the required area is reduced by building a glass roof over the beds, to give protection against

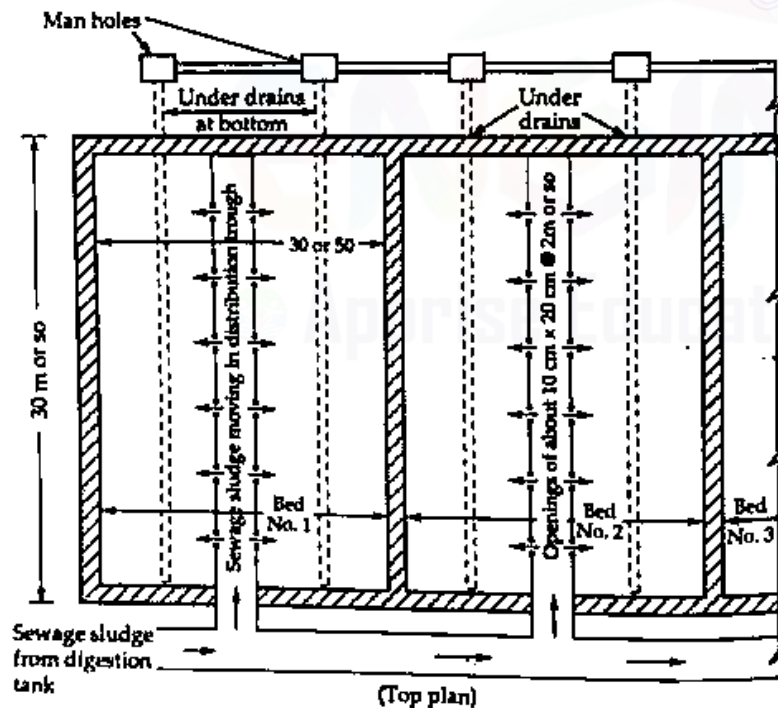
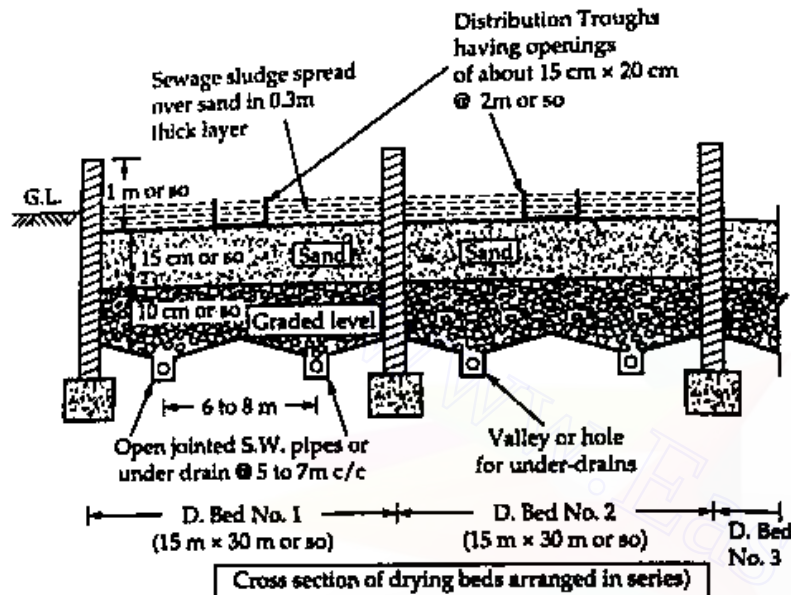


Table 9.8. Approximate area of Drying beds for different types of sludges

Sl. No.	Source of sludge	Area in m ² /capita	
		Open beds	Covered beds
1.	Primary clarifiers	0.1	0.08
2.	Intermittent sand filters	0.1	0.08
3.	Standard rate trickling filters	0.12	0.10
4.	High rate trickling filters	0.15	0.12
5.	Activated sludges	0.18	0.14
6.	Coagulated sludges	0.20	0.16

Sludge should never be applied to a bed until the preceding dose has been removed. Hence, several drying beds will generally be required, with their number increasing with an increase in the number of days for which the sludge is kept on the beds. Normally, sludge is removed from the beds after a period of about 7—10 days; as within this period, about 30% of the moisture goes away and the surface of sludge gets cracked. The sludge cakes are then removed by spades, and they are dumped into a pit for further drying. The dried sludge is generally used as manure in our country, as it contains 1.7% nitrogen, 1.5% phosphoric acid, and 0.5% potash. It may also be used for filling up low lying areas. It may sometimes be disposed of by burning (i.e. by incineration).

Example 9.28. (a) Calculate the area of land required for drying the sludge from the digestion tank for 40,000 population, designed in Example 9.23.

(b) Also design the dimensions of beds.

Solution. (a) The volume of wet sludge from the sewage of 40,000 population was worked out as 44.4 m³/day. Let it be spread in 22.5 cm thick layer (i.e. between 20 to 30 cm thick layer) on under-drained sand beds, then

The area of beds required

$$= \frac{44.4}{0.225} \text{ m}^2 = 197.3 \text{ m}^2/\text{day}.$$

Under tropical Indian conditions, the beds get dried out in about 10 days, and hence taking 2 weeks as average drying time including wet days of rainy

season, we can utilise the same bed = $\frac{52^*}{2} = 26$ times in a year*.

∴ Area of bed required

$$= \frac{197.3 \times 365}{26} = 2770 \text{ m}^2 \text{ (say).}$$

Making 100 per cent allowance for space for storage, repairs, and resting of beds, etc., we have

The total area of beds required

$$= 2 \times 2770 \text{ m}^2 = 5540 \text{ m}^2 = 0.554 \text{ hectares. Ans.}$$

(b) Now, using 15×30 m sized beds, we have the No. of beds required

$$= \frac{6540}{15 \times 30} = 12.3$$

So let us use 14 No. of beds :

$$\text{Then, Area of each bed} = \frac{5540}{14} = 395.7 \text{ m}^2$$

Using 15 m width of each bed

$$\text{Length of each bed} = \frac{395.7}{15} = 26.4 \text{ m.}$$

Hence, use 14 beds, of size $15 \text{ m} \times 26.4 \text{ m}$ in plan. The beds should be provided with under-drains and side walls, with typical section and plan, as shown in Fig. 9.29. **Ans.**

9.30.2. Mechanical Methods of Dewatering Sludge. In developed countries, digested sludge (sometimes even raw sludge), is often dried or dewatered by mechanical means, such as by vacuum filtration or by high speed centrifuges.

In vacuum filtration process, the sludge is first mixed with a coagulant such as ferric chloride, and then conveyed to a vacuum filter, consisting of a hollow rotating drum, covered with a replaceable filter cloth. The drum rotates partly submerging into the sludge. The vacuum created by a pump within the drum draws the moisture from the sludge through the cloth. The sludge cake which is formed on the outside of the drum is removed by a scraper, as the drum rotates. A typical vacuum filter is shown in Fig. 9.30.

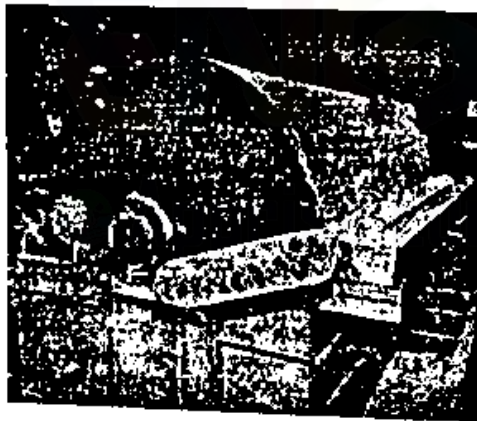


Fig. 9.30. Photographic View of a typical Vacuum filter for sludge dewatering.

High-speed centrifuges are also used for drying of raw or digested sludges, and are becoming more popular because of small area requirements. These methods may remove about 50% moisture.

Vacuum filtration or centrifugation of raw sludge is often adopted in situation where sludge is to be disposed of by incineration (i.e. burning). These mechanical methods of drying are generally used when the available area is less than that required for sludge drying by natural methods.

cold or at places where rains are frequent as not to permit natural drying, or as a preliminary to heat drying for making fertiliser.

9.30.2.1. Elutriation of sludge. Before the sludge is dewatered by vacuum filtration method, it is generally *elutriated*. Elutriation is the process of *washing the sludge water*, to remove the organic and fatty acids from it. Sometimes, before dewatering, the sludge is *thickened or conditioned*, and then elutriated.

During the sludge digestion process, the volatile acids, alcohols, and organic acids are formed, which if not removed, will interfere with coagulation process during dewatering by vacuum filtration. If elutriation is done before dewatering, it will reduce the quantity of coagulants considerably.

Sludge elutriation is carried out in sludge or multiple tanks by washing the sludge with water. During washing, the solids are continuously kept in suspension by air or by mechanical action.

Single stage, or multistage, or counter-current washing may be employed as one of the three-methods for washing. The choice of any of these methods will depend upon the availability of water, because *single stage elutriation* will require 2.5 times the water required for two-stage elutriation, and 5 times that required for counter-current washing, for the same alkalinity reduction.

In the elutriation process, sludge and water are mixed in a chamber fitted with mechanical devices, keeping it for 20 seconds (i.e. detention period). The sludge is then settled in settling tanks, and excess water is decanted. The maximum surface loading on settling tank may be $40 \text{ m}^3/\text{m}^2/\text{day}$ with a detention period of 4 hours.

Counter-current elutriation is generally carried out in twin tanks, similar to the sedimentation tanks, in which sludge and water enter at opposite ends. Piping and channels are so provided that wash water entering the second stage tank comes first in contact with sludge already washed in the first stage. The quantity of wash water required is about 2 to 3 times the quantity of sludge elutriated.

9.30.3. Disposal of Dewatered Sludge. The dewatered sludge obtained from mechanical devices in western countries, is generally heat dried, so as to produce fertilizers. As a matter of fact, the mechanical dewatering removes only about 50% of the moisture, and hence the mechanically dewatered sludge is actually heated, so as to fully remove the moisture from it. The dry residue is used as manure. This method is looked upon more as a method of producing fertilizer rather than as a method of sludge disposal, because if this method is adopted only for sludge disposal, it proves to be extremely costly, and thus feasible only for rich countries.

The wet sludge, after mechanical dewatering, is sometimes, directly disposed of either in sea or in underground trenches, or burnt, as discussed below :

9.30.3.1. Disposal by Dumping into the Sea. The dewatered wet sludge may, sometimes, be discharged at sea from hopper barges or through outfall sewers. This method can, however, be adopted only in case of cities situated on sea shores, and where the direction of the normal winds are such as to take the discharged sludge into the sea, away from the shore line.

9.30.3.2. Disposal by Burial into the Trenches. In this method, the digested sludge, without dewatering is run into trenches, which are 0.9 m wide $\times$ 0.6 m deep, and rectangularly spaced at 1 to 1.5 m apart in parallel rows. When the sludge has dried to a firm state, it is covered at top with a thin layer of soil. After about a month, the land is ploughed up with powdered lime and planted with crops.

9.30.3.3. Disposal by Incineration. The dewatered wet sludge produced in waste water treatment plant may also be disposed of by burning, in suitably designed incinerators, when sufficient space is not available for its burial near the plant site, or the sludge cannot be dried and used as manure. The following types of incinerators (furnaces) have primarily been designed and used for incinerating wet sludges :

- (1) Multiple-hearth furnace ;
- (2) Fluid-bed furnace ;
- (3) Flash-type of furnace ; and
- (4) Infra-red (Electric or Radiant heat) furnace.

Out of the above types, *multiple hearth furnace* is most widely used for sludge incineration in countries like USA ; although India does not incinerate the sludges of its waste water treatment plants, and generally uses them as manure, after drying in the sludge drying beds.

The above mentioned types of incineration systems are, however briefly discussed below :

(1) Multiple Hearth Incinerators. The multiple hearth furnace was originally developed for ore-roasting in the early 1900s. In 1930, it was adopted for sludge incineration. In USA, about 400 such furnaces are in existence, most of which are used for sludge incineration of waste water treatment plants.


A multiple-hearth furnace is a vertical structure, consisting of a series of circular refractory hearths, located one above the other, as shown in Fig. 9.31. The structure consists of a steel shell, lined internally with refractory. The hearths are self supporting, each acting as an arch supported from the refractory lining of the furnace shell. The hearths may be numbered as 1, 2, 3, 4, ... from top to the bottom. There may be five to nine hearths in a typical furnace and (commonly 6) ; they are normally built in diameters ranging from 3 to 7.5 m, or so.

Wet sludge (cake) is fed by gravity from the top of the furnace, by placing it on the top-most hearth, which passes downward, over the successive hearths, as explained below :

A vertical shaft is positioned in the centre of the furnace. Rabble arms are attached to the central shaft above each hearth, as shown. The central shaft rotates and drives the rabble arms. A series of rabble teeth on each rabble arm wipes the sludge across each hearth. The central shaft is driven at a speed of $\frac{1}{4}$ to 2 rpm by a variable speed driving mechanism provided at the bottom of the furnace. A bull and pinion gear system is normally used to drive the central shaft. Alternative hearths have a large annular opening between the hearth and

furnace, where sludge will drop off the edge of the refractory, landing on the hearth below, an out-hearth. The out-hearths allow the sludge to rabble "out" away from the centre of the furnace. A series of 'dropholes', shown in Fig. 9.31, are placed equidistant around the periphery of the out-hearths, to allow the sludge to drop down to an in-hearth, before it reaches the vertical furnace wall.

The rising hot air and flue gases of the furnace will dry and burn the wet sludge during its downward journey through the furnace. The sludge will eventually be dried due to evaporation of moisture at the upper hearths ; while burning (combustion) of sludge will occur in the middle hearths. In the lower hearths, the burnt sludge (ash) will get cooled, passing its heat to the flue gas. The dried ash is finally taken out and collected at the bottom of the furnace. The exhausted flue gas will escape out from near the top of the furnace, as shown. 10 to 20% of the non-combustible component of the sludge will also escape with the off-gas, and may need passing through an After-burner (subsidiary combustion chamber) to ensure its full combustion, and also through an air-pollution control equipment (scrubber) to catch the harmful particulate matter before discharging into the open atmosphere through a chimney stack.

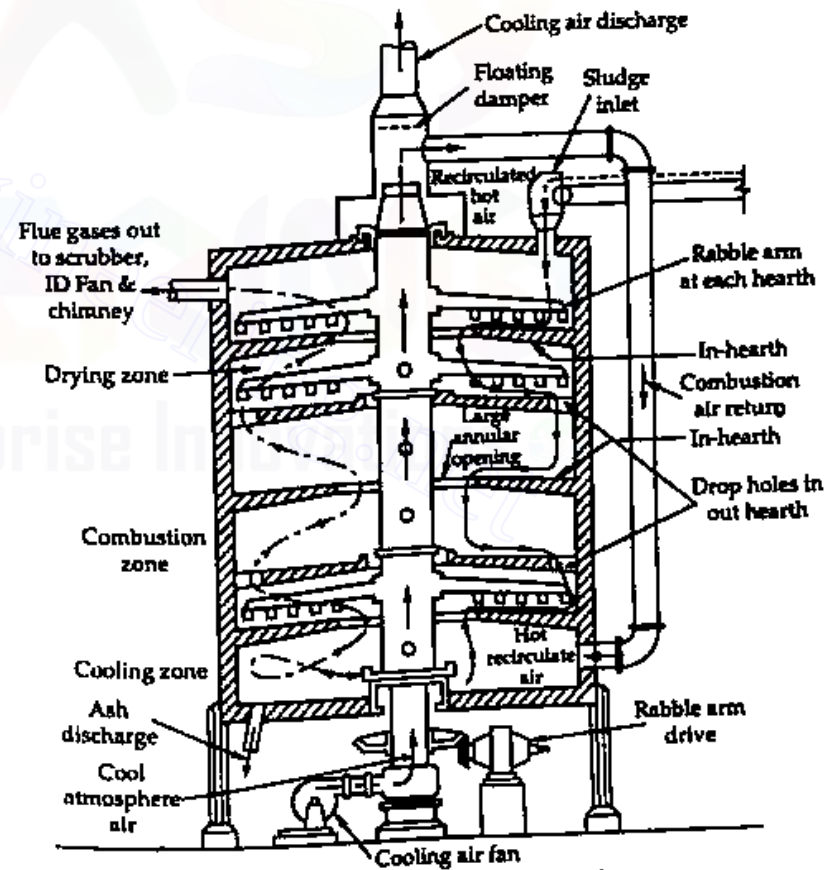



(b) Photoview of a Multiple-hearth Incinerator Installation

Fig. 9.31

Treatment plant sludge may require a minimum temperature of about 750°C and a retention time of at least 0.5 seconds to destroy the majority of organic material present in the sludge. In order to ensure that such a minimum temperature and retention time is maintained in a multiple-hearths furnace, a temperature of about 900°C should be kept above the two burning hearths (middle hearths). If the sludge is too dry (in excess of 25% solids content), an *After burner* would most probably be required. The purpose of the *After burner* is to maintain the entire off-gas stream at a controlled temperature for a specific retention time. Moreover, with a high solid or grease content in the sludge, combustibles would otherwise volatilize above the burning zone, and may exit the incineration system unburnt, causing smoke and odour emission. To check all such possibilities, an *After burner* becomes necessary, which may preferably be placed separate from the incinerator, immediately downstream of the incinerator exit, with one or more burners to provide the required temperature; or may sometimes be made as part of the furnace itself; in which case, it will be less efficient.

In order to *recycle and recover the heat energy* produced by the burning of the sludge, cold atmospheric air is circulated through the central shaft, which while moving up, becomes hot due to the heat produced by the combustion of the sludge; and the same air is recirculated and introduced at the bottom of the furnace, as shown in Fig. 9.31. The temperature of the 'sludge combustion air', usually varies between 120°C to 225°C , and will help in reducing the quantum of outside heat and fuel required.

The multiple-hearth furnace is maintained at a *negative pressure*, as to avoid leakage of hot gases from "out" of the furnace, but "into" the furnace. As a matter of fact, several leakage points exist in a multiple hearth furnace, such as at the access/observation doors (normally two per hearth), at the sludge inlet and outlet mechanisms, and at the top and bottom central shaft seals. Although the system is designed to minimise leakage, yet some leakage will occur. If draft (negative pressure) is maintained in the system by an I.D. fan (*Induced Draft fan*), then naturally, the leakage will occur 'into' the furnace, and hot gases will not leak out of the furnace.

The *Induced-Draft fan (I.D. fan)* is connected to the system after the scrubber (i.e. wet scrubber, called the cyclone scrubber). The scrubber removes majority of the particulate matter remaining in the off-flue gas stream, and discharges it into a spent water stream. The gas stream is also cooled to approximately 50°C in the scrubber, and is made to pass through an I.D. Fan, and is finally directed through a noise silencer to an *exhaust chimney (stack)* for discharging the off-gas into the open atmosphere.

The most important operating problem in a multiple-hearth furnace occurs when the furnace goes positive; i.e. when it losses draft. When this occurs, then naturally, hot dirty gases will find their way out, through the leakage points of the furnace, and such an uncontrolled leakage may cause serious damage to equipment and personnel damage to the persons working in and around the furnace.

(2) *Fluid-Bed Incinerators*. Fluid-bed or *Fluidized bed incinerator* systems are comparatively of modern origin, and consist of a furnace (reactor) having silica sand filled in its bottom portion (above the wind box—to be used for burning of fuel), as shown in Fig. 9.32, which figure shows the typical section of such a furnace. Complete details of installation of such an incinerator system are shown in Fig. 9.33.

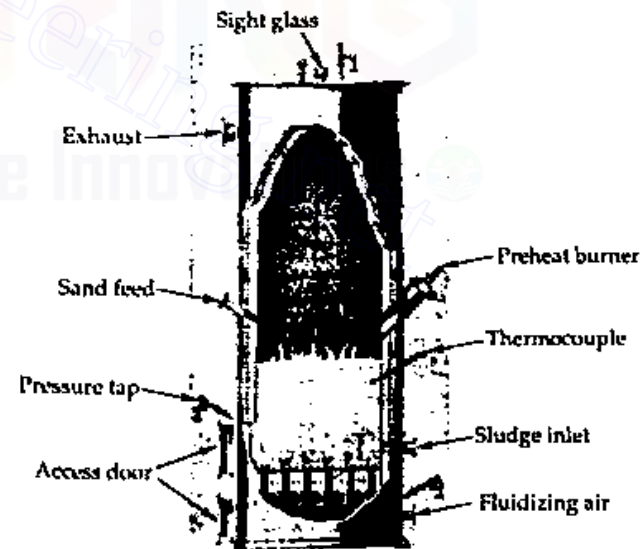


Fig. 9.32 (a) Perspective view of a typical fluidized bed furnace (Reactor)

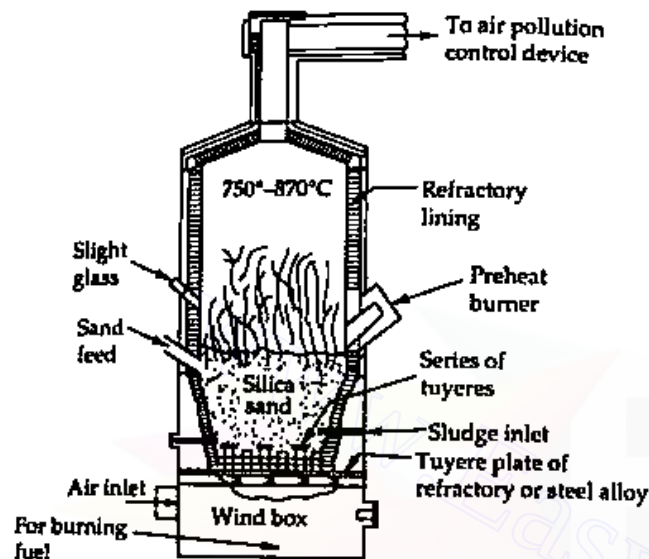


Fig. 9.32 (b) Section of a fluidized bed furnace

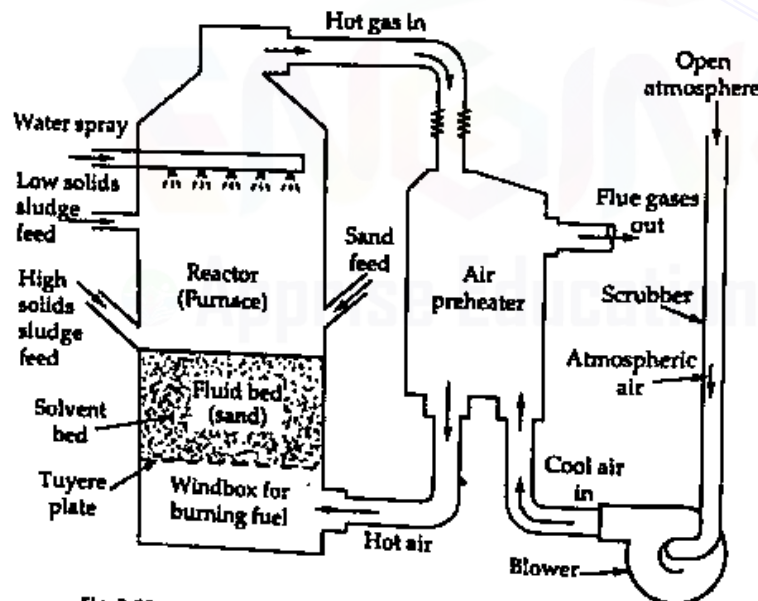


Fig. 9.33. A conventional fluid-bed incineration system installation.

The furnace consists of a vertical cylindrical steel shell, lined with refractory, having a supporting structure in its bottom portion, to hold the sand. This structure has a series of *tuyeres*, which allow the passage of air (to be passed under pressure) upward into the sand bed. The tuyeres rest on the *tuyeres plate*, which can be either in refractory or constructed of steel alloy.

The sand bed is kept in fluid condition by creating turbulence by an upflow of air, to be passed under a pressure of about 25-35 kPa*. The air is passed from an air blower through the wind box, up through the tuyeres plate, and into the sand bed. The sand bed is also pre-heated to approximately 650°C by using fuel oil or gas. The sand-bed, kept fluidized by the upmoving air, thus, acts as a reservoir of heat to promote uniform burning of sludge solids.

The depth of sand bed in a fluid-bed incinerator may usually vary from about 0.6 m to 2.4 m, or so. The depth of sand bed should, however, be maintained at a minimum value designed to be consistent with complete combustion and minimum excess air.

When dewatered sludge or waste to be burnt is introduced in the hot sand bed, rapid combustion occurs, maintaining an operating temperature of about 800°C (The operating temperature increases from the pre-heating temperature due to heat produced by the burning of sludge). Ash and water vapour, derived from the burning of the wet sludge, along with some sand, finally escape out with the flue gas coming out of the furnace. This off-gas is taken to a wet scrubber, where the ash and particulate matter is removed in a waste water-stream, and the cleaner air is discharged into the open atmosphere through a chimney (stack).

In most of the designs, the system is made air-tight and leak-proof, as a *positive pressure system*. This feature is useful in applications, where the furnace is required to operate on a non-continuous basis. However, if leakages cannot be prevented from the system, then the system will be made to have a *negative pressure*, by connecting the off-gas stream to an I.D. fan, after it comes out of the scrubber, as is done in a multiple-hearth furnace.

Since a certain amount of sand goes out with the off-gas stream, its deficiency will have to be occasionally made up in the furnace bed @ about 5% of bed volume at every 100 hours of incineration operation.

With the burning of the sludge waste, certain burnt ashes, salts, etc. may remain entrapped in the sand bed. These accumulated residuals will tend to increase the sand-bed volume. Some of the waste residues, particularly those from the metal salts, may also cause the sand bed particles to grow in size, and eventually to combine, or to cause *agglomeration* of particles. Clinkers may, thus, also be formed, which will reduce the fluidization of the bed, leading to bed-seizure. The *bed agglomeration*, can, thus, cause problems in the fluidized bed furnaces. The bed-agglomeration can, however, be detected through an increase in the differential pressure across the bed. Cleaning or replacement of sand bed, or addition of additives which may reduce agglomeration, may be used as remedies to the bed-agglomeration problems.

Since a fluid-bed incinerator offers a high degree of turbulence and large surface area for heat transfer, made available on the inert bed material, besides offering a continuous exposure of the heated sand to the waste, it results in highly efficient incineration with low excess air levels and a minimal temperature gradient through the bed.

The residence time of fluid-bed incinerator is in a high range from 5 to 8 seconds or more at a temperature of 750° to 870°C, or so, with a slight positive pressure. This long residence time further ensures a high *Destruction and Removal efficiency (DRE)** for the organic waste, and produces an inert ash, which can easily be disposed of in unhazardous land fills.

Due to its capacity to easily incinerate organic and hazardous wastes, a fluid-bed incinerator is not only useful for incinerating waste sludges of municipal sewage treatment plants, but is also useful for incinerating hazardous wastes of industrial plants and sometimes of hospitals and biomedical institutions.

(3) *Flash Type of Furnace.* A flash type of incinerator consists of a tower, which is heated in the beginning by burning fuel. The wet sludge is then thrown from the top of the tower, and the super-heated gases come up from the bottom of the tower. The rising hot gases remove the moisture from the sludge, and the water vapour will pass along with the hot gases. The dried sludge is collected at the bottom, and can be used as burning material for the tower, so as to reduce the cost of the external fuel required by the tower.

(4) *The Infra-red Furnaces.* The infra-red (i.e. Electric or Radiant heat) furnace (Fig. 9.34) is a conveyor belt system, passing through a long refractory-lined chamber. An induced draft fan (I.D. fan) maintains a negative pressure throughout the system. Combustion air is introduced at the discharge end of the conveyor belt. Air picks up heat from the hot burning sludge, as sludge and air, travel counter to each other.

Supplemental heat is provided by electric infra-red heating elements within the furnace above the belt (not shown in figure). Cooling air is injected into the incinerator chamber to prevent local hot spots in the immediate vicinity of the heaters, and is used as secondary combustion air within the furnace. The furnace is designed to provide and maintain a temperature of about 900°C in the space above the travelling conveyor.

Wet sludge cake is fed by gravity to the belt, which immediately gets levelled to a depth of approximately 2.5 cm due to motion of the belt. There is no other sludge-contact or sludge-handling mechanism on most of these units.

*Destruction and Removal efficiency (DRE) for an incinerator burning hazardous waste, for each hazardous constituent, is defined as:

$$DRE = \frac{W_{in} - W_{out}}{W_{in}} \times 100\%$$

where W_{in} = mass feed rate of one POHC (Principal organic hazardous constituent) in the waste stream.

W_{out} = mass emission rate of the same POHC present in the exhaust stream.

The belt speed and travel is selected to provide burn-out of the sludge without agitation. This feature results in relatively low level of particulate emissions.

Fossil fuel or electrical energy may be used to provide a supplemental fuel for start up of furnace, or to provide heat required to maintain combustion temperatures.

These furnaces provide a number of advantages, such as: (i) low particulate matter emissions; (ii) possible use for intermittent or infrequent loadings; (iii) non-production of additional flue gas by the heat generated by electric power / elements; etc.

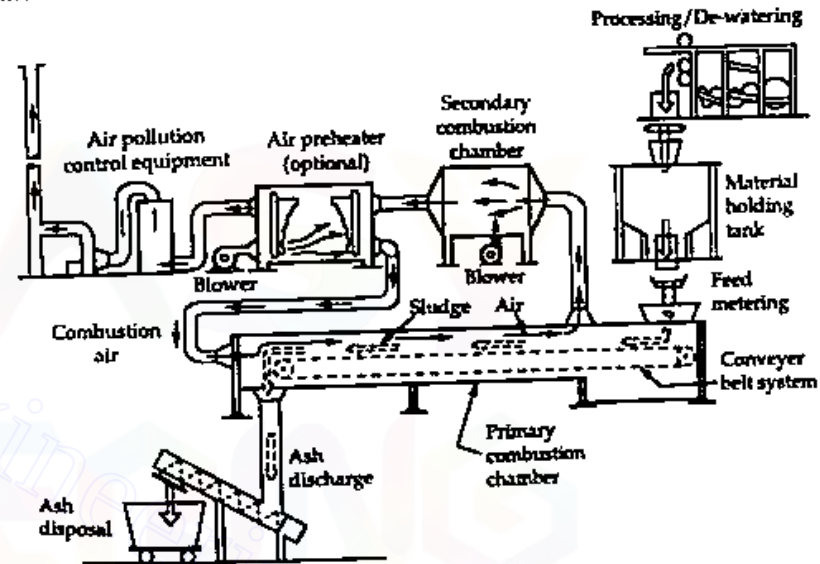


Fig. 9.34. Flow chart of an infra-red incineration system.

Disadvantages of incinerators. Incinerators are usually avoided for burning waste sludges of waste-water treatment plants, so long as alternative methods of drying them to manure, or by burial, are available; since they not only cause air-pollution but also consume a lot of fuel, and require continuous monitoring and upkeep. Their initial installation costs are also very high, besides the recurring costs.

The use of incinerators for burning municipal refuse (solid waste), and for burning hazardous hospital wastes, have further been discussed in articles 12.3.2 and 17.11.5, respectively.

9.31. Use of Lagoons for Disposal of Raw Sludge

This method is, sometimes, used at smaller places for disposing of raw sludge without digestion. In this method, the raw sludge is kept at rest in a large shallow open pond, called a lagoon. The detention period is 1 to 2 months, and may extend up to 6 months. During its detention in the lagoon, the sludge undergoes anaerobic digestion thereby getting stabilised. Due to this anaerobic decomposition of sludge, foul gases will be evolved from a lagoon;

the common winds should be such that the smells are not carried towards any localities.

A typical section for a lagoon is shown in Fig. 9.35. It is a shallow pit, 0.6 to 1.2 m deep, formed by excavating the ground. At the bottom of this pit, a 15 cm thick layer of ashes or clinker is placed. Agricultural tile drains of about 10 cm diameter are laid at bottom as *under-drains*. These are placed at about 3 m centre to centre spacings. Banks are formed on both sides of the pit from the excavated earth, as shown.

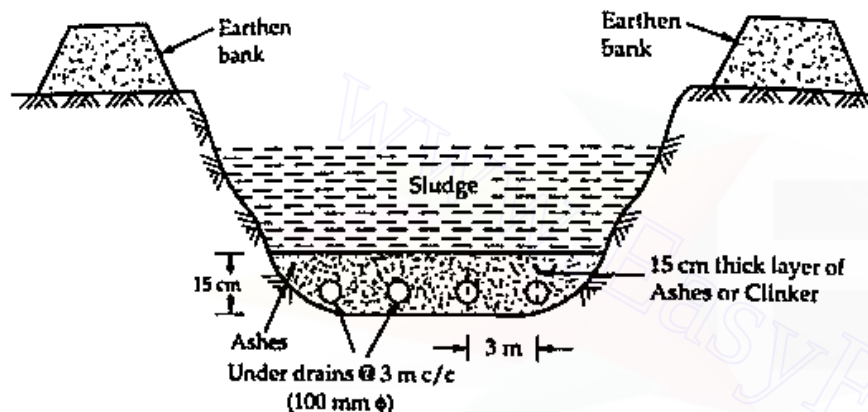


Fig. 9.35. Typical section of a lagoon for disposal of raw sludge.

After the sludge has been stabilised, and the moisture has been drained away or evaporated during its detention in the lagoon, the contents are dug out to about half of their original volume, and used as manure.

This method of sludge disposal is quite cheap (as no digestion tanks are required), but the greatest drawback is the evolution and eruption of foul gases, polluting the environment. Its use is, therefore, restricted only to non residential areas.

SECONDARY TREATMENT THROUGH ACTIVATED SLUDGE PROCESS

(Aerobic Suspended Culture)

* 9.32. Definition of Activated Sludge Process

The activated sludge process provides an excellent method of treating either raw sewage or more generally the settled sewage. The sewage effluent from primary sedimentation tank, which is, thus normally utilised in this process, contains a large concentration of highly active aerobic micro-organisms. The mixture enters an *aeration tank*, where the micro-organisms (coated around the sludge solids) and the sewage, are intimately mixed together, with a large quantity of air for about 4 to 8 hours. Under these conditions, the moving organisms will oxidise the organic matter, and the suspended and colloidal matter tend to coagulate and form a precipitate, which settles down readily in the secondary settling tank. The settled sludge (containing micro-organisms)

called *activated sludge*, is then recycled to the head of the aeration tank, to be mixed again with the sewage being treated. New activated sludge is continuously being produced by this process, and a portion of it being utilised and sent back to the aeration tank, whereas the excess portion is disposed of properly along with the sludge collected during primary treatment, after digestion.

The effluent obtained from a properly operated activated sludge plant is of high quality, usually having a lower BOD than that of a trickling filter plant. BOD removal is up to 80–95 per cent, and bacteria removal is up to 90–95 percent. Moreover, land area required is also quite less. But, however, in this process, a rather close degree of control is necessary in operation to ensure (i) that an ample supply of oxygen is present; (ii) that there is intimate and continuous mixing of the sewage and the activated sludge; and (iii) that the ratio of the volume of activated sludge added to the volume of sewage being treated is kept practically constant. Moreover, there is the problem of obtaining activated sludge, at the start of a new plant. Hence, when a new plant is put into operation, a period of about 4 weeks may be required to form a suitable return sludge, and during this period, almost all the sludge from the secondary sedimentation tank will be returned through the aeration tank. A new plant may also sometimes be seeded with the activated sludge from another plant, so as to quickly start the process in the new plant.

* 9.33. Various Operations and Units of an Activated Sludge Plant

9.33.1. Primary Treatment Units of an Activated Sludge Plant. A typical flow diagram for a conventional activated sludge plant is shown in Fig. 9.36. As pointed out earlier, the removal of grit and larger solids by *screening* in *grit chambers* and *primary sedimentation tanks* is generally considered necessary before *aeration*. The pre-removal of these settleable solids is helpful in preventing deposits on aeration devices, and thereby not reducing their efficiencies. Moreover, such materials, if not pre-removed, may settle down in

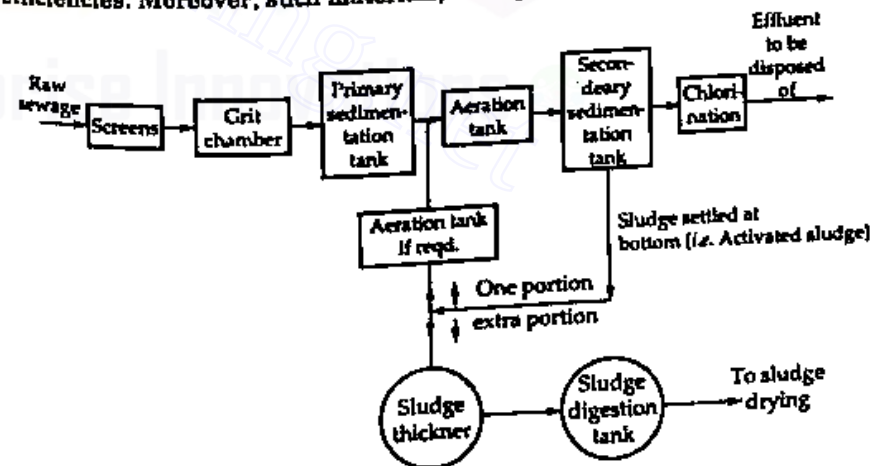


Fig. 9.36. Flow diagram for a conventional activated sludge plant.

the aeration tank, and by decomposition, interfere with the treatment process. Accordingly, grit removal, screening, and primary sedimentation are considered necessary for a conventional activated sludge process.

Since, in this process, it is very much desirable to keep the sewage as fresh as possible, a somewhat shorter detention period is provided in the primary sedimentation tanks than is required for most other treatment processes. This period of primary detention may vary with the size of the plant and the characteristics of sewage, but tank size will generally provide an overflow rate of about 40,000 litres per sq-m of plan area per day. For a depth of about 2.4 m, the detention time will be about 1.4 hours.

9.33.2. Aeration Tanks of an Activated Sludge Plant. From the primary sedimentation tank, the sewage flows to the aeration tank, and is mixed with the activated sludge. The aeration tanks (or aeration chambers, as they are sometimes called) are normally rectangular tanks, 3 to 4.5 m deep, and about 4 to 6 m wide. The length may range between 20 to 200 m, and the detention period between 4 to 8 hours for municipal sewages. Air is continuously introduced into these tanks.

Methods of Aeration. There are two basic methods of introducing air into the aeration tanks, i.e.

- (1) Diffused air aeration or Air diffusion; and
- (2) Mechanical aeration
- (3) Sometimes, a combination of both may also be used which may then be called as combined aeration.

These methods are discussed below :

(1) **Diffused Air Aeration.** In the diffused air aeration method, compressed air under a pressure of 35 to 70 kN/m² (0.35 to 0.7 kg/cm²), is introduced into the aeration chamber, through diffusion plates or other devices, called *diffusers*. The main criteria for selection of a particular diffuser is that it should be capable of diffusing air in small bubbles, so as to provide the greatest possible efficiency of aeration. Porous plates and porous tubes, made of quartz or crystalline alumina (Aluminium oxide) are generally used as diffusers. Plates are generally square in shape with dimensions of 30 cm × 30 cm, and they are usually 25 mm thick. These plates are fixed at the bottom of aeration tanks. Tube diffusers are generally 60 cm long with internal dia of 75 mm and thickness of wall equal to 15 mm. These tubes are suspended in the aeration tank, and can be taken out for cleaning, without emptying the tank. The effective areas for the above standard plate and tube diffusers work out to 780 cm² and 1160 cm², respectively.

Two types of aeration tanks are generally used. In one design, the tank is formed into a succession of ridges and furrows (Fig. 9.37), and air is forced upward through diffuser plates placed at the bottom of the furrows. Such a tank is called the ridge and furrow type of aeration tank. Another popular design is the spiral flow type of aeration tank (Fig. 9.38). In this tank, air is introduced near the side of the tank in such a way that spiral flow results in the tank, as shown. The compressed air, in such a tank, can be supplied either through a plate diffuser or a tube diffuser, although tube diffusers are most widely used. This type of tank requires small quantities of air, and at low

pressure. Spiral motion set up by the compressed air, released through the tube diffusers, causes the required aeration.

Quantity of air required in diffused aerators. In order to determine the capacity of the air compressor, it is necessary to determine the quantity of air that will be required. On an average, it may be assumed that about 4000 to 8000 m³ of free air will be required per million litres of sewage being treated. But this provision depends on the strength of sewage and various other factors. With respect to the BOD removal, the usual rate adopted is 100 m³/day of air per kg of BOD removed. Since only about 5% of oxygen in the air is actually involved in the biochemical action, the modern practice in design is to rationally calculate the oxygen requirement of the given wastewater and select aerator accordingly, as discussed in article 9.40.


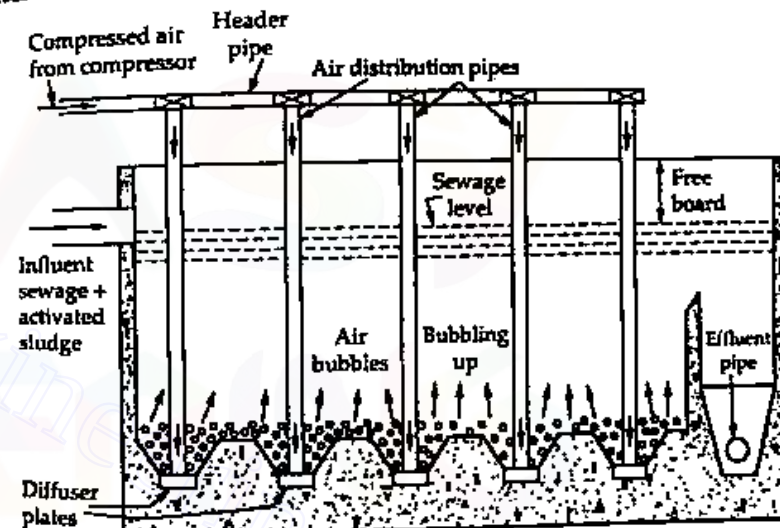


Fig. 9.37. L-section of a ridge and furrow type of an aeration tank (using compressed air).

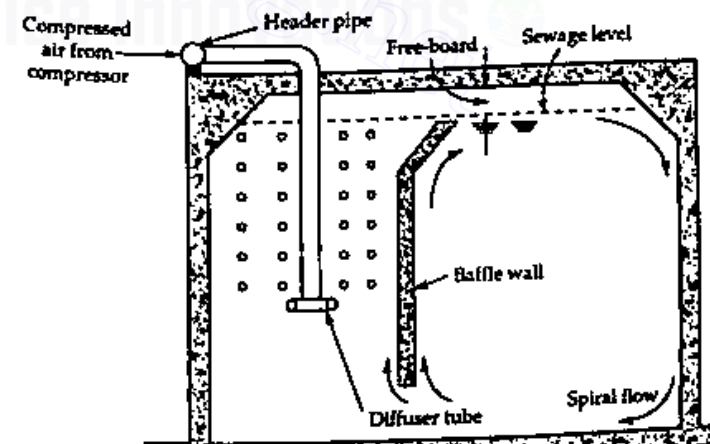

Volume of returned activated sludge. The volume of returned activated sludge from secondary clarifier to the aeration tank, mainly depends upon the extent of BOD desired to be removed. It is usually expressed as percentage of flow of sewage as $\frac{Q_R}{Q}$, where Q_R is the returned sludge rate in m^3/d , and Q is

the sewage inflow rate in m^3/d . Its rational computation is discussed in article 9.37, while its simple variation with the extent of desired BOD removal is shown in table 9.9 below :

Table 9.9. Volume of Returned Activated Sludge

Extent of BOD removal desired in ppm	Quantity of returned sludge as percentage of sewage flow
150	25
250	30
300	35
400	40
500	48
600	53

(2) **Mechanical Aeration.** In the air-diffusion method, as pointed out above, a lot of compressed air (90 to 95%) gets wasted, as it simply escapes through the tank without giving oxygen to the sewage ; although it helps in bringing about the required agitation of sewage mixture. In order to affect economy, atmospheric air is brought in contact with the sewage in the mechanical aeration method. In this *mechanical aeration method*, the sewage is stirred up by means of mechanical devices, like paddles, etc. (called *surface aerators*) ; so as to introduce air into it from the atmosphere by continuously changing the surface of sewage by the circulation of sewage from bottom to top. The only important requirement in this method is to have thorough agitation of sewage*, so as to bring it in intimate contact with the atmosphere. The *aeration period* depends on the mechanical process adopted for agitation. It generally varies between 6 to 8 hours. The *quantity of the returned sludge*, in mechanically aerated aeration tanks, is usually about 25 to 30 per cent of the flow of sewage.

Types of Surface Aerators. Various types of mechanical aerators have been designed, and are available in compact units, as patented devices. In most of these devices, the mixed liquor (i.e. sewage and activated sludge) is made to move slowly in channels, 0.9 to 1.2 m deep, and 1.2 to 1.5 m wide. During this forward motion of the mixed liquor, it is agitated by some mechanical means, such as paddles, which break the surface, and cause wave action exposing a new surface to the air, till the entire liquid gets sufficient oxygen.

In *Haworth system* of mechanical aeration, 1 m deep aeration tank is divided by thin walls in a series of long and comparatively narrow channels (70 m $\times$ 1.6 m plan area), and gives a total travel of about 1.5 km. At about midway of its

*If agitation of sewage is not done, the sewage will not be aerated.

length, two rows of paddles, revolving at 1.5 r.p.m. are provided with a horizontal shaft crossing each channel for the aeration of sewage. The liquid is imparted a velocity sufficient to keep the sludge in suspension. The detention period of these tanks is about 15 hours, and the returned sludge ranges between 15 to 20% of the sewage flow. This method is generally used at Sheffield in England ; and is hence also known as *Sheffield system of mechanical aeration*.

Another system of mechanical aeration, called *Hartley system*, is similar to the above Haworth system, with the modification that here the paddles are kept inclined at some angle with the vertical, and are fixed at the end of the channel. The diagonal baffles are provided across the channel to maintain spiral flow.

In a third method, known as *Simplex aeration method*, a tank square in plan with hopper bottom (Fig. 9.39) is generally used. Sometimes, a rectangular tank may also be used ; but in that case, it must be divided suitably, into square units. At the centre of the tank, a hollow *uptake tube* is suspended from the top with a distance of about 15 cm from the bottom of the tank. A steel cone with spiral vanes is provided at the top of the uptake tube, and it is driven by a motor placed at the top of the tank. The cone is revolved at a high speed (60 r.p.m.) which sucks the mixed liquor through the uptake tube by creating suction at the bottom, and sprays it at the surface towards the sides in the tank. Numerous air bubbles are formed in this process, which bring about satisfactory aeration of sewage. Sewage also gets thoroughly mixed up with the activated sludge during its downward journey.

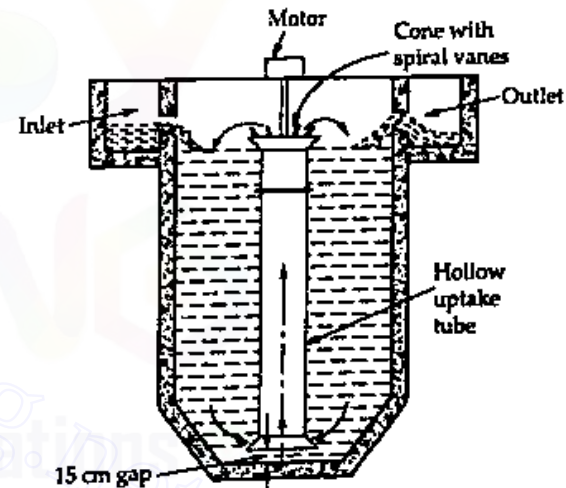


Fig. 9.39. Section of a simplex aerator.

The mechanical aerators have gained considerable popularity in recent years. Their simplicity and ease of maintenance has resulted in their increasing popularity, especially for smaller plants. They are, however, sensitive even to slight variations in water levels.

(3) **Combined Aeration.** In combined aerators, the diffused-air aeration as well as the mechanical aeration are combined together in a single unit. A well known type of such an aerator unit is called *Dorrego aerator*, and is shown in Fig. 9.40. In this type of an aerator, the aeration of sewage is achieved by diffusing air through bottom diffuser plates, as well as by rotating paddles @ 10 to 12 r.p.m., as shown. Spiral motion, so set up, brings about the required aeration.

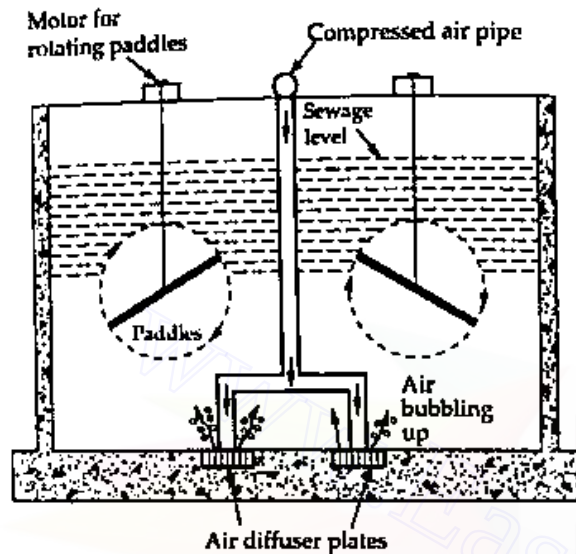


Fig. 9.40. Section of a Dorroco aerator or Imhoff aerator.

Such an aerator is very efficient, detention period is smaller (3 to 4 hours), and requires less amount of compressed air as compared to the diffused-air aeration.

9.33.3. Secondary Sedimentation Tank of an Activated Sludge Plant. From the aeration tank, the sewage flows to the final sedimentation tank. This tank will normally be of the general type (like a primary tank), with certain modifications. Since, there are no floating solids here, provisions for the removal of scum or floatage are not needed. The suspended particles in the aeration tank effluent are light in weight, and are thus, markedly influenced by currents. Therefore, in these secondary settling tanks, a considerable length of overflow weir is desirable, to reduce the velocity of approach. Good design, should provide a *weir overflow rate*, not exceeding $150 \text{ m}^3/\text{day}$ per lineal metre of weir. This value is based on average flow of sewage and not to the mixed liquor flow.

Solids loading is another important factor, which governs the design of secondary basin. This is because of the fact that *in the secondary tank, hindered settling occurs*, and hence the settling velocity of discrete particles may not govern its design, as in the case of a primary sedimentation tank. The *solids loading rate* based on mixed liquor flow to the settling tanks, may be kept at about $100\text{--}150 \text{ kg/m}^2$ per day at average flow, and should not exceed 250 kg/m^2 per day at peak flows. Such rates ensure adequate sludge thickening and concentrated sludge returns.

The surface area for activated sludge settling tanks should be designed for both overflow rate and solids loading rate, and larger value adopted.

The detention period for such a sedimentation tank may be kept between

The *length to depth ratio* of these tanks may be kept at about 5 for circular tanks, and 7 for rectangular ones. The depth may be kept in the range of 3.5 to 4.5 m.

Since final settling is always required in an activated sludge plant, so as to provide the return activated sludge, duplicate secondary settling tanks are generally considered necessary.

9.33.4. Sludge Thickener and Sludge Digestion Tank of an Activated Sludge Plant. The sludge which is settled in the primary sedimentation tank as well as the extra activated sludge i.e. the sludge from the secondary settling tank in excess of that required for recirculation, is digested as usual and described earlier, before drying and disposing it of. However, since the sludge obtained in a sludge digestion plant contains too much of moisture (98% to 99%), and is therefore very bulky, may sometimes be reduced in its moisture content by first sending it to a sludge thickener unit, also called a sludge concentrator unit.

The thickening of sludge can be carried out in three types of thickening units; i.e.,



- (i) *gravity thickeners*; *only name*
- (ii) *floatation thickeners*; and
- (iii) *centrifugal thickeners*.

The *gravity thickeners* are the simplest and most commonly adopted units, for thickening sludge. Such a thickener consists of a small circular open tank, similar to a conventional sedimentation tank except that it is deeper to accommodate a greater volume of sludge, and has a heavier raking mechanism.

Slowly rotating rake mechanism, like *deep trusses* (Fig. 9.41) or *vertical pickets*, are provided to stir the sludge gently, opening up channels for water to escape, thereby promoting densification of sludge. Incoming flow enters from behind an inlet wall in the centre of the tank, and is directed downward. The supernatant liquor continuously overflows a peripheral weir, while underflow of thickened sludge is drawn from a bottom sump in the tank.

Depending upon the characteristics of the sludge, these tanks may be designed for typical surface loading @ 15 to 35 m^3 per day of sludge per m^2 of tank area. They can also be designed based on the kg wt. of solids present in the coming sludge; say @ 20 to 40 kg per day per m^2 of tank area for activated sludge; and @ $90\text{--}120 \text{ kg}$ per day per m^2 of tank area for primary sludge (if at all a thickener is provided or used for that also). The capacity of the tank would be finally decided to obtain a detention period of 3 to 4 hours, thereby fixing its depth.

The thickened sludge, having reduced moisture content of 90–93% (say), and quite less in volume (say $\frac{1}{3}$ of original), is finally sent to sludge digestion, and sludge drying. The supernatant liquor, having properties similar to raw sewage, is sent back to join the plant influent.

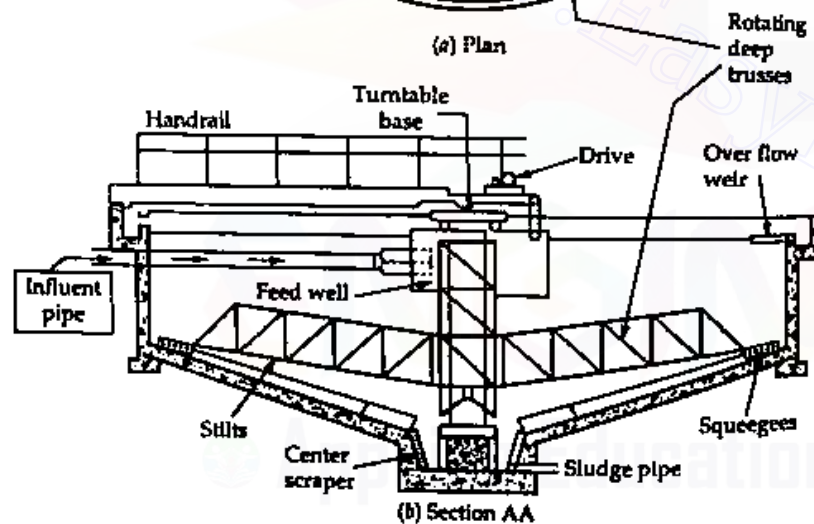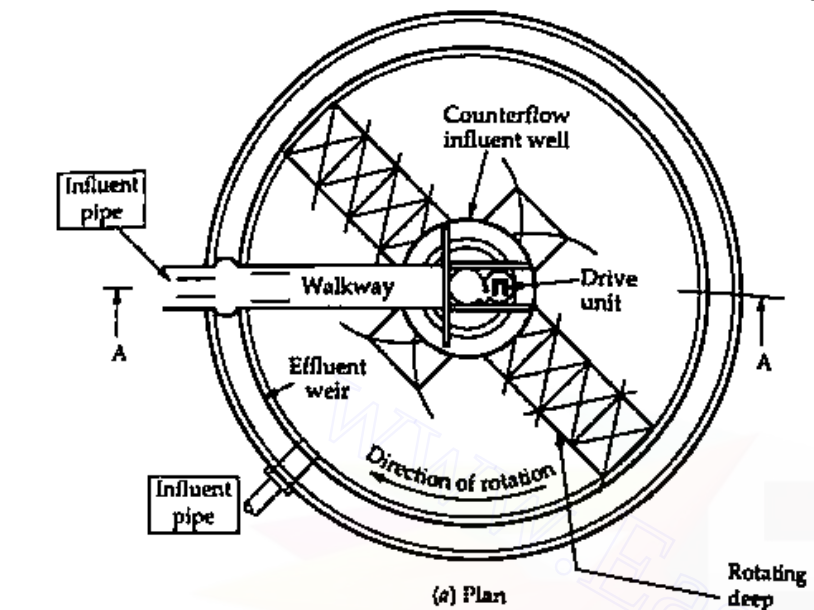

(c) Photoview of a gravity sludge thickener

Fig. 9.41. A typical gravity sludge thickener.

The process of sludge digestion, using a sludge thickener before the digestion tank, helps in reducing the capacity of the digestion tank; and by proper control of digestion conditions, lower detention periods are used, which further reduce their capacities, and the rate of digestion is also made high. Such a digestion, which is used in modern large sized plants, is called high rate digestion.

It may also be pointed out that in an activated sludge treatment plant, special provision must be made for removing the activated sludge quickly from the secondary settling tank (and for resending it to the head of the aerator), so as to prevent it from becoming anaerobic.

9.34. Bulking and Foaming Sludge in an Activated Sludge Treatment Plant

Foam formation and poorly settling sludge are the two most common problems of the activated sludge process. A sludge that exhibits poor settling characteristics is called a *bulking sludge*. Filamentous micro-organisms have been found to be responsible for a bulked sludge. Large surface area to volume ratios of these micro-organisms retard their settling velocities. Fungi are the most familiar filamentous micro-organisms. The vegetative structure of most fungi is composed of filaments, which actually contain a number of nuclei. Fungi, however, are not commonly significant in wastewater treatment. Some other bacteria, particularly of type 021 N bacteria are among the most frequently reported filamentous micro-organisms found in bulking sludges. These bacteria are usually found to develop in activated sludge systems which are characterised by the low or variable nutrient concentrations. These bacteria may live on variety of carbon and nitrogen sources present in the activated sludge system.

Organic acids form an important class of carbon sources for the growth of filamentous sulphur bacteria. These bacteria, however, do not develop well at low pH values. The other types of bacteria which are most commonly found in foaming and bulking sludges of activated plants are: *Nocardia amorae*, *Microthrix parvicella*, *N. amarae* like organisms, *N. pinensis* like organisms, and type 0092, etc. *Nocardia* growth is supported by high sludge ages, low $F:M$ ratios, and higher waste temperatures. The most successful methods to control these organisms, as per latest research, are:

(i) reduction of the sludge age* to less than 6 days; and

(ii) chlorination of return activated sludge.

Foam removal is also a logical and beneficial control measure, since *Nocardia* filaments are usually concentrated in foam compared to the mixed liquor.

Classical control measures like adjustment of the $F:M$ (Food : Micro-organism) ratio**, raising or lowering D.O., or applying a disinfectant (chlorine) are found to help in controlling filamentous bacteria. Carbohydrate-rich waters are more prone to give rise to filamentous populations. Exclusion of such wastewaters may, therefore, sometimes help in controlling sludge bulking.

Nutrient deficiencies as said above, cause growth of filamentous micro-organisms. One of the first check made on a bulking activated plant, therefore, is to measure concentrations to determine whether they are sufficient for the amount of sludge being produced. If not, the problem is readily solved by addition of nutrients to the waste water.

Rising Sludge. Another problem that is encountered in the secondary clarifiers of an activated sludge plant is the rising sludge caused by denitrification* in the secondary clarifier. Denitrification results in the formation of nitrogen gas bubbles, which lifts up the settled sludge, thereby deteriorating the quality of the clarified effluent.

Denitrification in the secondary clarifiers become a distinct possibility when the activated sludge process is nitrifying** the ammonia rich wastewaters, sending high nitrate concentrations of 6-8 mg/l in the influent of its secondary clarifier. High temperatures (above 20°C) do accelerate the rate of denitrification. Hence, when the nitrates concentration in the influent of the secondary clarifier of an activated plant exceeds 6-8 mg/l and temperatures are more, then enough nitrogen gas (due to denitrification) would be produced in the secondary clarifier during its usual 1 hour detention time, causing rising sludge. Plants in areas of warm climates will be susceptible to this problem; and the only practical solution to be problem is to denitrify the effluent of the activated sludge process before allowing its entry into the secondary clarifier.

DESIGN CONSIDERATIONS INVOLVED IN AN ACTIVATED SLUDGE PLANT

9.35. Aeration Tank Loadings

The important terms which define the loading rates of an activated sludge plant, include:

- (i) Aeration Period (i.e. Hydraulic Retention Time—H.R.T.)
- (ii) BOD loading per unit volume of aeration tank (i.e. Volumetric loading);
- (iii) Food to Micro-organism Ratio (F/M Ratio); and
- (iv) Sludge age.

All these loading terms are discussed below in details.

9.35.1. The Aeration Period or H.R.T. The aeration period (t) empirically decides the loading rate at which the sewage is applied to the aeration tank. For continuous flow aeration tank, this value is determined in the same manner as it is determined for an ordinary continuous sedimentation tank, as per equation (9.29) as:

$$\begin{aligned} \text{Detention period } (t) &= \frac{\text{Volume of the tank}}{\text{Rate of sewage flow in the tank}} \\ &= \frac{V \text{ in } m^3}{Q \text{ in } m^3/\text{day}} \end{aligned}$$

*Reconversion of nitrates into free nitrogen, as shown in Fig. 7.1 (c)

$$= \frac{V}{Q} \text{ day} \quad \dots(9.41a)$$

$$\text{or } t = \frac{V}{Q} \cdot 24 \text{ hour} \quad \dots(9.41)$$

where t = aeration period in hours

V = Volume of aeration tank

Q = Quantity of wastewater flow into the aeration tank, excluding the quantity of recycled sludge.

9.35.2. Volumetric BOD Loading. Another empirical loading parameter is Volumetric loading, which is defined as the BOD₅ load applied per unit volume of aeration tank. This loading is also called organic loading.

∴ Volumetric BOD loading or Organic loading

$$\begin{aligned} &\text{Mass of BOD applied per day to the aeration} \\ &\quad \text{tank through influent sewage in gm} \\ &= \frac{\text{Volume of the aeration tank in } m^3}{} \\ &= \frac{Q \cdot Y_0 (\text{gm})}{V (m^3)} \end{aligned} \quad \dots(9.42)$$

where Q = Sewage flow into the aeration tank in m^3 .

Y_0 = BOD₅ in mg/l (or gm/ m^3) of the influent sewage.

V = Aeration tank volume in m^3

This loading is quite similar to the BOD loading rate per cum of filter volume, as used and adopted in biological filtration, and discussed earlier in article 9.21.4 (ii).

9.35.3. Food (F) to Micro-organisms (M) Ratio. F/M ratio is an important rational organic loading rate, adopted for an activated sludge process. It is a manner of expressing BOD loading with regard to the microbial mass in the system. The BOD load applied to the system in kg or gm is represented as food (F), and the total microbial suspended solids in the mixed liquor of the aeration tank is represented by M.

∴ F/M ratio

$$= \frac{\text{Daily BOD load applied to the Aerator System in gm}}{\text{Total Microbial mass in the system in gm}} \quad \dots(9.43)$$

If Y_0 (mg/l) represents the 5 day BOD of the influent sewage flow of Q m^3 /day, then eventually,

The BOD applied to the Aeration system = Y_0 mg/l or gm/ m^3

∴ BOD load applied to the aeration system = $F = Q \cdot Y_0$ gm/day $\dots(i)$

The total microbial mass in the aeration system (M) is computed by multiplying the average concentration of solids in the mixed liquor of the aeration tank, called Mixed Liquor Suspended Solids (MLSS), with the volume of the aeration tank (V).

$$M = \text{MLSS} \times V$$

$$= X_T \cdot V$$

where X_T is MLSS in mg/l

...(ii)

Dividing (i) by (ii), we get

$$F/M \text{ ratio} = \frac{F}{M} = \frac{Q \cdot Y_0}{V \cdot X_T} \quad \dots(9.44)$$

F/M ratio for an activated sludge plant is the main factor controlling BOD removal. Lower the F/M value, the higher will be the BOD removal in the plant. The F/M ratio can be varied by varying the MLSS concentration in the aeration tank.

9.35.4. Sludge Age. The sludge age is an operation parameter related to the F/M ratio. It may be defined as the average time for which particles of suspended solids remain under aeration. It, thus, indicates the residence time of biological solids in the system. While aeration period (i.e. liquid retention time) may be as short as 3 to 30 h, the residence time of biological solids in the system is much greater, and is measured in days.

While sewage passes through the aeration tank only once and rather quickly, the resultant biological growths and the extracted waste organics (solids) are repeatedly recycled from the secondary clarifier back to the aeration tank, thereby increasing the retention time of solids. This time is called Solids Retention Time (SRT) or Mean Cell Residence Time (MCRT) or Sludge Age.

The most common method of expressing sludge age, usually represented by θ_c in days, is to express it as the ratio of the mass of MLSS in the aeration tank relative to the mass of suspended solids leaving the system per day.

∴ Sludge age (θ_c)

$$= \frac{\text{Mass of suspended solid (MLSS*) in the system (M)}}{\text{Mass of solids leaving the system per day}} \quad \dots(9.45)$$

For a conventional activated sludge plant, with the flow (Q), concentrations of solids (X_T), and BOD₅ (Y), as marked in Fig. 9.42, we can easily write:

(a) Mass of solids in the reactor

$$= M = V \times (\text{MLSS})$$

$$= V \cdot X_T \quad \dots(9.46)$$

where X_T is MLSS in the aeration tank (in mg/l).

(b) (i) mass of solids removed with the wasted sludge per day

$$= Q_W \cdot X_R \quad \dots(i)$$

(ii) mass of solids removed with the effluent per day

$$= (Q - Q_W) X_E \quad \dots(ii)$$

*MLSS represents the mixed liquor suspended solids (i.e. total suspended solids), while MLVSS represents the mixed liquor volatile suspended solids. MLSS is generally taken as an index of the mass of active micro-organisms in the aeration tank. However, these MLSS will contain not only the active micro-organisms but also dead cells as well as inert organic and inorganic matter derived from the influent sewage. For this reason, the term MLVSS

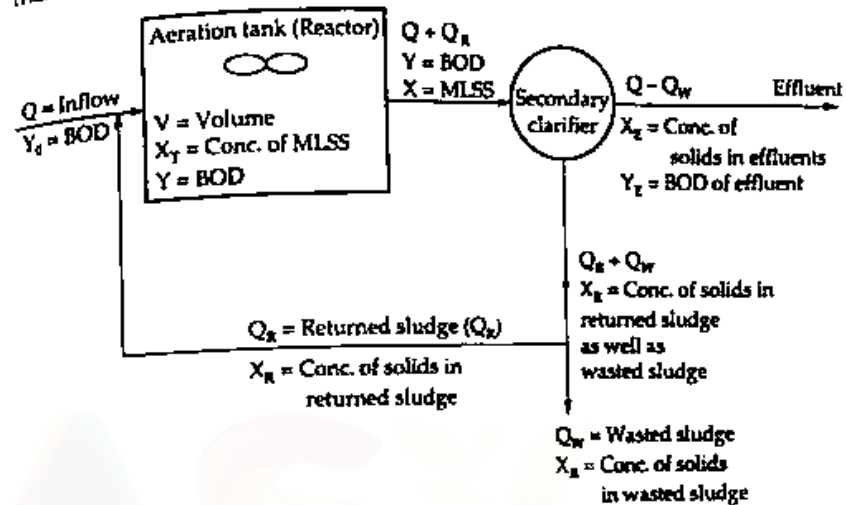


Fig. 9.42. Flow chart of conventional activated sludge plant.

∴ (b) Total solids removed from the system per day

$$= (i) + (ii)$$

$$= Q_W \cdot X_R + (Q - Q_W) X_E \quad \dots(9.47)$$

Now, Eq. (9.45) can thus be represented as:

$$\left[\text{Sludge age} = \theta_c = \frac{V \cdot X_T}{Q_W \cdot X_R + (Q - Q_W) X_E} \right] \rightarrow \text{actual formula} \quad \dots(9.48)$$

where X_T = Concentration of solids in the influent of the Aeration Tank, called the MLSS, i.e. Mixed Liquor Suspended Solids, in mg/l.

V = Volume of Aerator

Q_W = Volume of wasted sludge per day.

X_R = Concentration of solids in the returned sludge or in the wasted sludge (both being equal) in mg/l

Q = Sewage inflow per day

X_E = Concentration of solids in the effluent in mg/l

When the value of X_E (suspended solids concentration in the effluent of activated sludge plant) is very small, then the term $(Q - Q_W) X_E$ in Eq. (9.48) can be ignored, leading to:

$$\theta_c = \frac{V \cdot X_T}{Q_W \cdot X_R} \quad \dots(9.48 a)$$

In addition to using sludge retention time (θ_c) as a rational loading parameter, another rational loading parameter which has found wider acceptance is the specific substrate utilization rate (U) per day, and is

$$U = Q \cdot \frac{(Y_0 - Y_E)}{V \cdot X_T} \quad \dots(9.49)$$

Under steady state operation, the mass of wasted activated sludge is further given by

$$Q_W \cdot X_R = \alpha_y \cdot Q (Y_0 - Y_E) - K_d \cdot X_T \cdot V \quad \dots(9.50)$$

where α_y = max. yield coefficient

$$= \frac{\text{microbial mass synthesised}}{\text{mass of substrate utilised}}$$

K_d = Endogenous respiration rate constant (per day)

The values of α_y and K_d are found to be constant for municipal waste waters, their typical values being

$$\alpha_y = 1.0 \text{ w.r.to TSS (i.e. MLSS)}; \text{ and } 0.6 \text{ w.r.to VSS (i.e. MLVSS)}$$

$$K_d = 0.06 \text{ (per day)}$$

From the above equations, we can also work out as :

$$\frac{1}{\theta_c} = \alpha_y U - K_d \quad \dots(9.51)$$

Since both α_y and K_d are constants for a given wastewater, it becomes necessary to define either θ_c or U .

Eq. (9.51) is plotted in Fig. 9.43 for typical values of $\alpha_y = 0.5$ and $K_d = 0.06$ (per day) for municipal wastewaters.

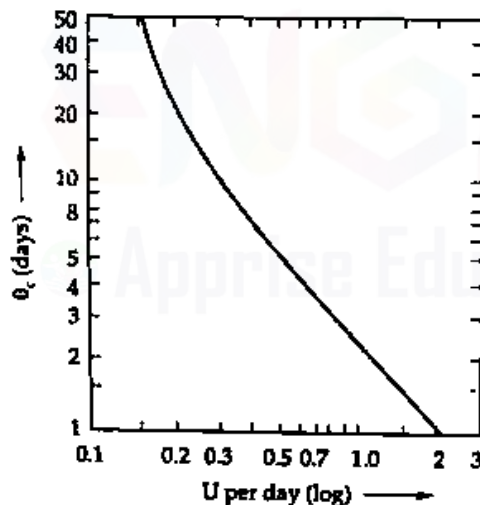


Fig. 9.43. Relationship between SRT (θ_c) and specific substrate utilization rate (U) for $\alpha_y = 0.5$ and $K_d = 0.06 \text{ d}^{-1}$.

The θ_c value adopted for the design controls the effluent quality and settleability and drainability of the biomass. Other parameters which are affected by the choice of θ_c values are oxygen requirement, and quantity of waste activated sludge. Fig. 9.44 gives θ_c values as a function of temperature

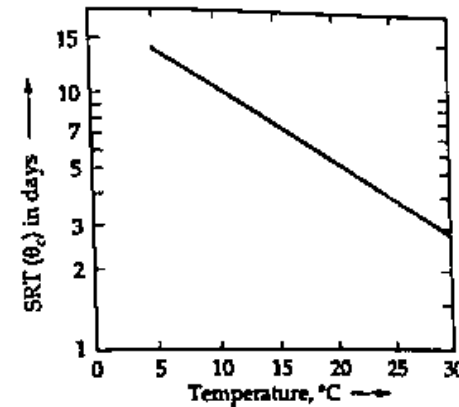


Fig. 9.44. SRT as a function of aeration basin temperature for 90-95% BOD removal.

Typical values of different types of loadings for a conventional as well as other types of Activated sludge plants are given in table 9.10.

Example 9.29. An average operating data for conventional activated sludge treatment plant is as follows :

(1) Wastewater flow	= 35000 m ³ /d
(2) Volume of aeration tank	= 10900 m ³
(3) Influent BOD	= 250 mg/l
(4) Effluent BOD	= 20 mg/l
(5) Mixed liquor suspended solids (MLSS)	= 2500 mg/l
(6) Effluent suspended solids	= 30 mg/l
(7) Waste sludge suspended solids	= 9700 mg/l
(8) Quantity of waste sludge	= 220 m ³ /d.

Based on the information above, determine:

- Aeration period (hrs)
- Food to microorganism ratio (F/M) (kg BOD per day/kg MLSS)
- Percentage efficiency of BOD removal
- Sludge age (days).

(G.A.T.E., 1993)

Solution. Given values are symbolised as :

$$Q = 35000 \text{ m}^3/\text{d}; \quad V = 10900 \text{ m}^3$$

$$Y_0 = 250 \text{ mg/l}; \quad Y_E = 20 \text{ mg/l}$$

$$X_T = 2500 \text{ mg/l}; \quad X_E = 30 \text{ mg/l}$$

$$X_R = 9700 \text{ mg/l}; \quad Q_W = 220 \text{ m}^3/\text{d}$$

These values are now used to calculate the desired factors, as below :

(a) Aeration period (t) in hr is given by Eq. (9.41) as

$$t = \frac{V}{Q} \cdot 24 = \frac{10,900}{35,000} \times 24 = 7.47 \text{ h}; \text{ say } 7.5 \text{ h. Ans.}$$

(b) F/M ratio F = Mass of BOD applied to aeration system

$$= Q \cdot Y_0 = 35000 \times 250 \text{ gm/day}$$

$$= \frac{35000 \times 250}{1000} \text{ kg/day} = 8750 \text{ kg/day}$$

M = Mass of MLSS

$$= V \cdot X_T = 10900 \text{ m}^3 \times 2500 \text{ mg/l (i.e. gm/m}^3\text{)}$$

$$= \frac{10900 \times 2500}{1000} \text{ kg} = 27,250 \text{ kg}$$

$$F/M \text{ ratio} = \frac{8750}{27,250}$$

$$= 0.32 \text{ kg BOD per day/kg of MLSS. Ans.}$$

(c) Percentage efficiency of BOD removal

$$= \frac{\text{Incoming BOD} - \text{Outgoing BOD}}{\text{Incoming BOD}} \\ = \frac{250 - 20}{250} \times 100\% = \frac{230}{250} \times 100\% = 92\%. \text{ Ans.}$$

(d) Sludge age in days (θ_c) is given by Eq. (9.48) as

$$\theta_c = \frac{V \cdot X_T}{Q_w \cdot X_R + (Q - Q_w) \cdot X_E} \\ = \frac{27250 \text{ kg}}{(220 \text{ m}^3/\text{d} \times 9700 \text{ mg/l}) + (35000 \text{ m}^3/\text{d} - 220 \text{ m}^3/\text{d}) 30 \text{ mg/l}} \\ = \frac{27250 \text{ kg}}{\frac{220 \times 9700}{1000} \text{ kg/d} + (35000 - 220) \frac{30}{1000} \text{ kg/d}} \\ = \frac{27250}{2134 + 1043.4} = \frac{27250}{3177.4} = 8.58 \text{ days. Ans.}$$

9.36. Sludge Volume Index (S.V.I.)

The term *sludge volume index* or *sludge index* is used to indicate the physical state of the sludge produced in a biological aeration system. It represents the degree of concentration of the sludge in the system, and hence decides the rate of recycle of sludge (Q_R) required to maintain the desired MLSS and F/M ratio in the aeration tank to achieve the desired degree of purification.

S.V.I. is defined as the volume occupied in ml by one gm of solids in the mixed liquor after settling for 30 minutes, and is determined experimentally.

The standard test, which is performed in the laboratory to compute SVI of an aeration system involves collection of one litre sample of mixed liquor from the aeration tank from near its discharge end in a graduated cylinder. This 1 litre sample of mixed liquor is allowed to settle for 30 minutes and the settled sludge volume (V_{ob}) in ml is recorded as to represent sludge volume. This volume V_{ob} in ml per litre of mixed liquor will represent the quantity of sludge in the liquor in ml/l.

The above sample of mixed liquor, after remixing the settled solids, is further tested in the laboratory for MLSS by the standard procedure adopted for measuring the suspended solids in sewage. Let this concentration of suspended solids in the mixed liquor in mg/l be X_{ob} . Then SVI is given by the

$$SVI = \frac{V_{ob} (\text{ml/l})}{X_{ob} (\text{mg/l})} = \frac{V_{ob}}{X_{ob}} \text{ ml/mg}$$

or

$$SVI = \frac{V_{ob}}{X_{ob}} \times 1000 \text{ ml/g} \quad \dots(9.52)$$

The usual adopted range of SVI is between 50–150 ml/gm and such a value indicates good settling sludge.

Note. When the given SVI value in ml/gm is divided by $10^3 \times 10^3$ (i.e. 10^6), we will get SVI value in l/mg. SVI value in l/mg will therefore be $\frac{SVI}{10^6}$.

SVI value in mg/l will, thus, be given by $\frac{10^6}{SVI}$.

9.37. Sludge Recycle and Rate of Return Sludge

The MLSS concentration in the aeration tank is controlled by the sludge recirculation rate and the sludge settleability and thickening in the secondary sedimentation tank. The relationship between sludge recirculation

ratio $\left(\frac{Q_R}{Q}\right)$ with X_T (MLSS in tank) and X_R (MLSS in returned or wasted sludge) is given as :

$$\frac{Q_R}{Q} = \frac{X_T}{X_R - X_T} \quad \dots(9.53)$$

where Q_R = Sludge recirculation rate in m^3/d

X_T = MLSS in the aeration tank in mg/l

X_R = MLSS in the returned or wasted sludge in mg/l

The settleability of sludge, as stated in the previous article, is determined by sludge volume index (SVI), which is determined in the laboratory.

If it is assumed that the sedimentation of suspended solids in the laboratory is similar to that in the sedimentation tank, then

$$X_R = \frac{10^6}{\text{S.V.I.}} \quad (\text{i.e. SVI value in mg/l}) \quad \dots(9.54)$$

Eq. (9.53) then becomes

$$\frac{Q_R}{Q} = \frac{X_T}{\left(\frac{10^6}{\text{S.V.I.}} - X_T\right)} \quad \dots(9.55)$$

Values of Return sludge ratios $\left(\frac{Q_R}{R}\right)$ adopted in different types of Activated sludge systems are shown in table 9.10. Its value for conventional sludge plant varies between 0.25 to 0.50.

The return sludge has always to be pumped, and the pump capacity should be designed for a sludge ratio of 0.50 to 0.75 for large plants

and 1.0 to 1.5 for smaller plants, irrespective of the theoretical requirement. The required capacity should be provided in multiple units to permit variation of return sludge ratio as found necessary during the operation of the plant.

9.38. Wasting of Excess Sludge (Q_w)

We know that the sludge generated in the aeration tank has to be partly discharged and wasted out of the plant to maintain a steady level of MLSS in the system. *The excess sludge quantity will increase with the increasing F/M ratio, and decrease with temperature.* In the case of domestic sewage, Q_w will be about 0.50–0.75 kg per kg BOD removed for the conventional sludge plants (having F/M ratio varying between 0.4 to 0.3).

Excess sludge may be wasted either from the sludge return line, or directly from the aeration tank as mixed liquor. The latter procedure is usually preferred, since the concentration of suspended solids will then be fairly steady in the waste discharge making the control easy.

In conventional plants, the wasted sludge is taken directly to a sludge thickener and digester, or to the primary settling tank for its disposal along with the primary sludge. In extended aeration plants, however, the excess sludge is directly taken to the sludge drying beds.

9.39. Modifications of the Basic Activated Sludge Process

In the basic activated sludge process, also called *conventional aeration process*, the recirculated activated sludge is added to the inlet end of the aeration tank as a single dose. The regime flow employed in the aeration tank is *plug flow* and not *mixed flow*. Plug flow implies that the sewage moves down progressively along the aeration tank, essentially unmixed with the rest of the tank contents. The other type of flow regime, called *complete mixed flow*, involves the rapid dispersal of the incoming sewage throughout the tank, and is adopted in the *extended aeration process* (described a little later).

In a conventional aeration tank (of plug flow type), the F/M ratio and the oxygen demand will be the highest at the inlet end, and will then progressively decrease. In the complete mix system on the other hand, the F/M ratio and oxygen demand will be uniform throughout the tank.

The plug flow regime is achieved in such an activated process by employing a long and narrow configuration of the aeration tank with length equal to 5 to 50 times the width. The sewage and the mixed liquor are let in at the head of the tank and withdrawn at its end. Because of the plug flow regime, the oxygen demand at the head of the aeration tank is high and then tapers down. However, air is supplied in the process at a uniform rate along the length of the tank. This leads to either oxygen deficiency in the initial zone or wasteful application of air in the subsequent reaches.

The conventional system is always preceded by primary settling. The plant itself consists of an aeration tank, a secondary settling tank, a sludge return line and an excess sludge waste line leading to digester. The BOD removal in this process is 85–92%.

The main limitations of the conventional system are that : (i) the aeration tank volume requirement is high ; and (ii) there is a lack of operational stability at times of excessive variations in the incoming sewage.

In order to overcome such difficulties posed by a conventional system plant, and to meet specific treatment objectives, several modifications of the conventional system have been suggested by modifying the process variables. The important modified processes are :

- (i) *Tapered aeration process ;*
- (ii) *Step aeration process ;*
- (iii) *Contact stabilisation process ;*
- (iv) *Complete mix process ;*
- (v) *Modified aeration process ;*
- (vi) *Extended aeration process ; and*
- (vii) *Activated aeration process.*

In spite of its various limitations, the conventional system for historical reasons, is the most widely used type of the activated sludge process. Plants up to 300 MLD capacity have been built in India. In addition to conventional activated sludge plants, the complete mixed plants and the extended aeration plants have also been found a wider acceptance in modern days, particularly for obtaining high BOD removals in smaller capacity plants.

We will now describe the above mentioned modifications of the basic activated sludge process.

9.39.1. Tapered Aeration Process. This process involves a very little modification of the conventional process, and ensures higher air supply at the inlet and in the initial length of the tank, as compared to the downstream length. The process is surely based on the fact that as the mixed liquor progresses through the aeration tank, its air requirement goes on reducing. Therefore, in a tapered aeration plant, compressed air is supplied at higher rates near the inlet end of the tank, and is gradually decreased as sewage moves towards the outlet end of the tank. Such a process therefore helps us in ensuring optimal application of air in the aeration tank.

Ordinarily, 45% of air is supplied to the first one-third length of the tank, 30% to the second one-third length of the tank, and the rest 25% to the remaining one-third length of the tank.

No. of diffuser plates are thus varied accordingly. Such a modification to the conventional activated plants using diffused air aeration, has now-a-days become a common feature, and is invariably adopted in all modern designs. The loading parameters of such a plant do not materially differ from a conventional one, and are given in Table 9.10.

9.39.2. Step Aeration Process. In the step aeration process, the sewage is introduced along the length of the aeration tank in several steps, while the return sludge is introduced at the head, as shown in Fig. 9.45.

Such an arrangement results in a uniform air requirement along the entire length of the tank, and hence the uniform air supply of the conventional plants, can be efficiently used. The process enables an appreciable reduction in the aeration tank volume, without lowering the BOD removal efficiency. Step aeration method has considerable capacity to absorb shock organic loadings. The method has found application for larger plants of capacities up to about 1000 MLD.

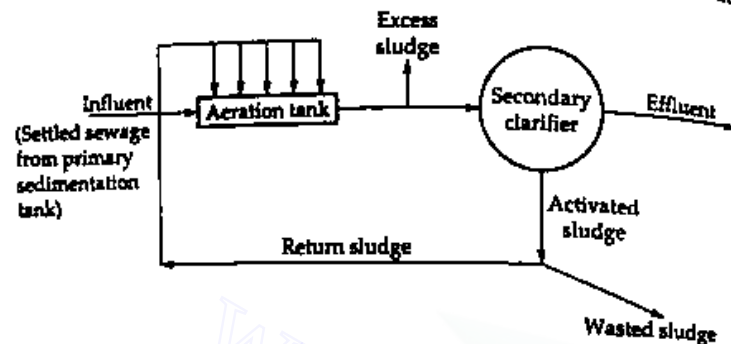


Fig. 9.45. Flow chart of step-aeration process.

The loading parameters of a such a plant are given Table 9.10.

9.39.3. Contact Stabilisation Process or Biosorption Process. This process has been designed for treating colloidal wastewaters.

In this process, the sewage and recycled or returned sludge are mixed and aerated for a comparatively shorter period of 0.5 to 1.5 hour in a special mixing tank, called *contact tank*. This mixing will allow the suspended and dissolved organic matter to be sorbed to the activated sludge floc. The sorbed organics and flocs are removed in the secondary settling tank, where the effluent from the contact tank enters. These settled sorbed organics and flocs are then transferred to a sludge aeration tank (called *stabilisation tank* or *aerodigester*) where the organics are stabilised over a period of about 3 to 6 hours before it is fed back into the contact aeration tank. The stabilised sludge is then mixed with the influent wastewater again, and the process is repeated. The flow diagram for this process is shown in Fig. 9.46, and the loading parameters are given in Table 9.10.

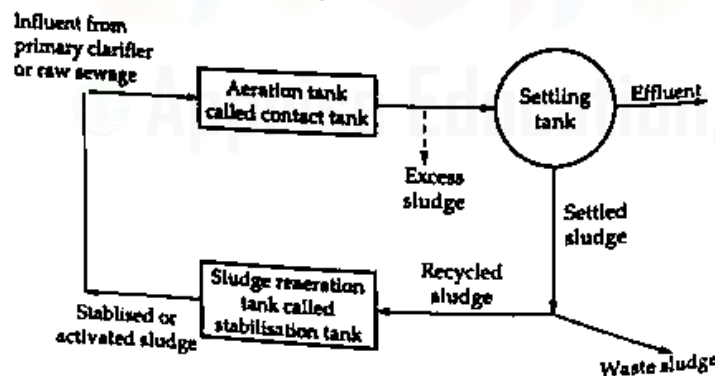


Fig. 9.46. Contact-stabilisation process.

The contact stabilisation process is quite effective in the removal of colloidal and suspended organic matter, but it is not very effective in removing soluble organics. The method is well suited for the treatment of fresh domestic sewage, containing only a low percentage of soluble BOD.

Table 9.10. Characteristics and Design Parameters of Different Activated Sludge Systems

Process type	Flow regime	MLSS mg/l (%)	MLVSS/MLSS	F/M	HRT hrs	Volume- tric Loading kg BOD ₅ per m ³	SRT (days) θ_c	Q _R /Q Return sludge ratio	BOD removal Percent or Efficiency (%)	kg of O ₂ reqd. per kg BOD ₅ removed	Air/Oxygen require- ment in m ³ per kg of BOD ₅ removed +
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)	(12)
Conven- tional	Plug	1500 to 3000	0.5	0.4 to 0.5	4 to 6	0.5 to 0.7	5 to 8	0.25 to 0.5	85 to 92	0.8 to 1.0	40 to 100
Tap- er aeration	Plug	1500 to 3000	0.5	0.4 to 0.5	4 to 6	0.5 to 0.5	5 to 8	0.25 to 0.5	85 to 92	0.7 to 1.0	50 to 75
Step aeration	Plug	2000 to 3000	0.5	0.4 to 0.5	3 to 6	0.7 to 1.0	5 to 8	0.25 to 0.75	85 to 92	0.7 to 1.0	50 to 75
Contact stabil- isation	Plug	1000 to 3000* 3000 to 6000**	0.5	0.5 to 0.5	0.5 to 1.5* 3 to 6**	1.0 to 1.2	5 to 6	0.25 to 1.0	85 to 92	0.7 to 1.0	50 to 75*
Complete mix.	Complete mix.	3000 to 4000	0.5	0.5 to 0.5	4 to 6	0.5 to 2.0	5 to 8	0.35 to 0.5	85 to 92	0.8 to 1.0	50 to 75
Modified aeration	Plug	300 to 500	0.5	3.0 to 1.5	1.5 to 3	1.2 to 2.4	0.2 to 0.5	0.05 to 0.15	60 to 75	0.4 to 0.6	25 to 50
Extended aeration	Complete mix.	3000 to 5000	0.5 to 0.8	0.15 to 0.10	12 to 24	0.3 to 0.4	10 to 35	0.5 to 1.0	95 to 98	1.0 to 1.2	100 to 155

* in contact aeration tank

** in sludge aeration tank

*divided equally between contact aeration tank and sludge reseration tank.

**Mixed Liquor Volatile Suspended Solids.

Compared to the conventional system, the contact stabilisation process has greater capacity to handle shock organic loadings, because of the biological buffering capacity of the sludge re-aeration tank. The process also presents greater resistance to toxic substances in the sewage as the biological mass is exposed to the main stream of sewage containing the toxic constituents only for a short time.

The air requirements of the process are the same as for the conventional system, the air supply being divided equally between the contact aeration tank and the sludge re-aeration tank. However, the total aeration tank volume required for both the aeration tanks is only about half of the volume reqd. in the single conventional sludge aeration tank. The process therefore presents an effective method of uprating the existing conventional plants, where sewage characteristics are satisfactory. Moreover, the total aeration time is considerably reduced, and the plant capacity is thereby increased.

The process has found application in medium sized plants with capacities up to 40 MLD.

9.39.4. Complete Mix Process. Complete mix activated sludge plants were developed particularly for smaller cities, where the hourly variations in sewage were quite high, and as such, conventional plants were experiencing serious problems of biological instability.

In such a plant, the plug flow regime of a conventional plant is replaced by a completely mixed flow regime. Such a flow regime can be achieved by thorough mixing of sewage and return sludge. Sewage and return sludge are therefore distributed uniformly along one side of the aeration tank, and the aerated sewage is withdrawn uniformly along the opposite side. Mechanical aerators are installed in the centre of a circular or square aeration tank, which may be used in such a plant. Such mechanical aerators must have adequate mixing capacity to ensure thorough mixing of sewage and return sludge. The flow chart for such a plant is shown in Fig. 9.47, and the loading parameters of a such a plant are given in Table 9.10.

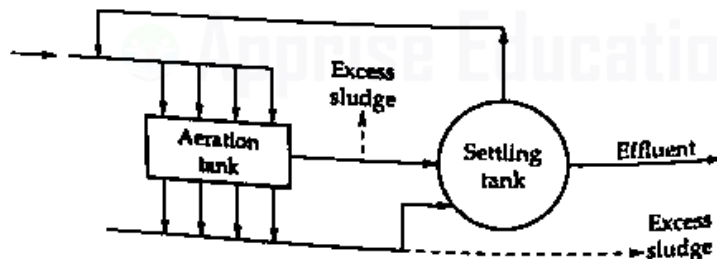


Fig. 9.47. Flow chart of a complete mix plant.

The complete mix plant possesses capacity to hold much higher MLSS concentration level in the aeration tank; say 3000 to 4000 mg/l as against 1500 to 3000 mg/l of a conventional plant. This helps in adopting smaller volume for the aeration tank. The plant has an increased operational stability at shock organic loadings, and also increased capacity to treat toxic biodegradable wastewaters like phenols. The process is also assisted by

Such plants have been widely used for smaller plant capacities of less than 25 MLD or so, particularly for the towns where municipal and industrial wastewaters flow together.

9.39.5. Modified Aeration Process. When an intermediate quality of effluent containing higher BOD is permissible, such as at a place where effluent is to be used for farming, this modified aeration plant may be adopted, as it leads to substantial savings in construction and aeration costs.

Such a process does not need any primary sedimentation tank, as is invariably required in a conventional plant. The process ensures short aeration period, high volumetric loading, high F/M ratio, low percentage of sludge return, low concentration of MLSS, as reflected in Table 9.10. The BOD removal is also low, say only 60–75% or so. The process has been employed mainly in large plants with capacities above 200 MLD.

9.39.6. Extended Aeration Process. The flow scheme of an extended aeration process and its mixing regime are similar to that of the complete mix process. Primary sedimentation is frequently avoided in this process, but grit chamber or comminutor is often provided for screenings.

As its name suggests, the aeration period is quite large and extends to about 12–24 hours, as compared to 4 to 6 hours in a conventional plant. The loading parameters for such a process are given in table 9.10. The process permits low organic loading, high MLSS concentration, and low F/M ratio. The BOD removal efficiency is also quite high, to say about 95–98% as compared to 85–92% of a conventional plant.

The air or oxygen requirement, is of course quite high, which increases the running cost of the plant considerably. The plant, however, offers another advantage, as no separate sludge digester is required here, because the solids undergo considerable endogenous respiration and get well stabilised over the long detention periods, adopted in the aeration tank. The sludge produced is, thus, capable to be directly taken to the sludge drying beds. Also, the excess sludge production is minimum. The operation is also simpler due to the elimination of primary settling and separate sludge digestion. The typical plant based on this principle is known as an oxidation ditch, and is described separately under article 9.46.

Such a process is quite suitable for small communities having sewage flows of less than 4 MLD or so.

9.39.7. Activated Aeration Process. In the activated aeration process, a pair of conventional activated sludge plants operating in parallel are used. Excess activated sludge from the secondary settling tank of one unit will supply to the aeration tanks of both units, and the sludge from the second unit is pumped to final disposal. This arrangement, although no modification of the conventional process in the strict sense, reduces the construction costs, and probably operating costs, but does not modify the operating results.

9.40. Size and Volume of the Aeration Tank

Eqs. (9.48 a) and (9.50) can be combined to yield

$$V \cdot X_T = \frac{a_y \cdot Q(Y_0 - Y_F) \theta_c}{1 + K_d \cdot \theta_c} \quad \dots(9.56)$$

This equation can be used to calculate the volume of the aeration tank (V) for an assumed value of X_T (MLSS concentration in aeration tank) and a selected value of θ_c . Alternatively, the tank volume can be determined from Eq. (9.45) for an assumed value of F/M ratio and tank MLSS (X_T).

It can be seen that economy in reactor volume can be achieved by assuming a higher value of X_T . However, it is seldom taken to be more than 5000 g/m³ (i.e. mg/L). A common range is between 1500 to 3000 g/m³ or mg/l (see Table 9.10). Considerations which govern the upper limit are :

- (i) initial and running cost of sludge recirculation system to maintain a high value of MLSS ;
- (ii) limitations of oxygen transfer equipment to supply oxygen at required rate in a small reactor volume ;
- (iii) increased solids loading on secondary clarifier which may necessitate a larger surface area to meet limiting solid flux ;
- (iv) design criteria for the tank and minimum H.R.T. (t) for the aeration tank for stable operation under hydraulic surges.

Except in the case of extended aeration plants and completely mixed plants, the aeration tanks are designed as long narrow channels. This configuration is achieved by the provision of round-the-end baffles in small plants when only one or two tank units are proposed ; and by constructing long and narrow rectangular tanks with common intermediate walls in large plants when several units are proposed.

In extended aeration plants (other than oxidation ditches) and in complete mix plants, the tank shape may, however, be kept circular or square when the tank capacity is small, and rectangular with several side inlets and equal number of side outlets when the plant capacity is large.

The width and depth of aeration channel for conventional plants, depend upon the type of aeration equipment used. The depth controls the aeration efficiency and usually ranges from 3 to 4.5 m. The higher value of depth of 4.5 m is found to be more economical for plants of more than 50 MLD capacity. Beyond 70 MLD, duplicate units are preferred. The width controls the mixing and is usually kept between 5 to 10 m. Width-depth ratio should be adjusted between 1.2 to 2.2. The length should not be less than 30 m and not ordinarily longer than 100 m in a single section length before doubling back. The horizontal velocity should be around 1.5 m/min. Excessive width may lead to settlement of solids in the tank. Triangular baffles and fillets are used to eliminate dead spots and induce spiral flow in the tanks. The free-board in the tank is generally kept between 0.3—0.5 m.

While designing the aeration tanks, due consideration should also be given to the need of emptying them for maintenance and repair of aeration equipment. Intermediate walls should be designed for empty conditions on either side. The method of dewatering should be considered in the design and provided for during construction.

The inlet and outlet channels of the aeration tank should be designed for empty conditions on either side. The method of dewatering should be considered in the design and provided for during construction. The inlet and outlet channels should be designed for empty conditions on either side.

velocity of 0.2 m/s to avoid deposition of solids. The channels or conduits and their appurtenances should be sized to carry the maximum hydraulic load to the remaining aeration tank units when any one unit is out of operation.

The inlet should provide for free fall into aeration tank when more than one tank unit or more than one inlet is proposed. The free fall will enable positive control of the flows through the different inlets. Outlets usually consist of free fall weirs. The weir length should be sufficient to maintain a reasonably constant water level in the tank. When multiple inlets or multiple tanks are involved, the inlets should be provided with valves, gates or stop planks to enable regulation of flow through each inlet.

9.41. Oxygen Requirement of the Aeration Tanks

Oxygen is required in the activated sludge process in the aeration tank for oxidation of part of the influent organic matter, and also for endogenous respiration of the micro-organisms in the system.

The total oxygen requirement may be computed by using the equation

$$O_2 \text{ required} = \left[\frac{Q(Y_0 - Y_E)}{f} - 1.42 Q_w \cdot X_R \right] \text{ gm/day} \quad \dots(9.57)$$

$$\text{where } f = \frac{BOD_5}{BOD_{\infty}} = \frac{5 \text{ day BOD}}{\text{Ultimate BOD}} = 0.68$$

$$1.42 = \text{oxygen demand of biomass in gm/gm.}$$

The above formula represents the oxygen demand for carbonaceous BOD removal and does not account for nitrification. The extra requirement of oxygen for nitrification is theoretically found to be 4.56 kg O₂/kg NH₃-N oxidised to NO₃-N.

The total oxygen requirement per kg BOD₅ removed for different activated sludge processes are given in table 9.10 in col. (11). The amount of oxygen required for a particular process will increase within the range shown in the table, as the F/M value decreases.

The aeration facilities of the activated sludge plant shall be designed to provide the calculated oxygen demand of the waste water against a specific level of D.O. in the wastewater. The aeration devices, besides supplying the level of D.O. in the wastewater, shall also provide adequate mixing or agitation, so that the entire MLSS present in the aeration tank will become available for the biological activity. The recommended D.O. concentration in the aeration tank is in the range of 0.1 to 1.0 mg/L for conventional activated plants ; and in the range of 1—2 mg/L for extended aeration type of activated plants ; and shall be above 2 mg/L when nitrification is required in the activated sludge plant.

Aerators are rated on the basis of the amount of oxygen (kg) that they can transfer to the tap water under standard conditions at 20°C, 760 mm Hg barometric pressure, and zero D.O., per unit of energy consumed.

The oxygen transfer capacity (N) under field conditions can be calculated from the standard oxygen transfer capacity (N_s) by the formula :

$$N = \frac{N_a \cdot (D_s - D_L) (1.024)^{T-20} \cdot \alpha}{9.17} \quad \dots (9.58)$$

where N = Oxygen transferred under field conditions in kg O_2 /kWh (or MJ*).

N_a = Oxygen transfer capacity under standard conditions in kg O_2 /kWh (or MJ*).

D_s = Dissolved oxygen-saturation value for sewage at operating temperature.

D_L = Operation D.O. level in aeration tank usually 1 to 2 mg/L

T = Temperature in degree C.

α = Correction factor for oxygen transfer for sewage, usually 0.8 to 0.85.

Oxygen may be supplied either by surface aerators or by diffused air aeration systems employing fine or coarse diffusers. In India, surface aerators are preferred because of easier maintenance. The oxygen transfer capacities of surface aerators, and fine and coarse diffused air systems, under standard conditions, lie between 1.2–2.4, 1.2–2 and 0.6–1.2 kg O_2 /kWh, respectively.

Example 9.30. Design a conventional activated sludge plant to treat domestic sewage with diffused air aeration system, given the following data :

Population	= 35,000
Average sewage flow	= 180 lpcd
BOD of sewage	= 220 mg/l
BOD removed in primary treatment	= 30%
Overall BOD reduction desired	= 85%.

Solution. Daily sewage flow

$$= Q = 180 \times 35000 \text{ l/day} = 6300 \text{ m}^3/\text{day}.$$

BOD of sewage coming to aeration

$$= Y_0 = 70\% \times 220 \text{ mg/l} = 154 \text{ mg/l}$$

($\because$ 30% BOD is removed in primary settling)

BOD left in effluent = $Y_E = 15\% \times 220 \text{ mg/l} = 33 \text{ mg/l}$

($\because$ Overall 85% BOD removal is desired)

$\therefore$ BOD removed in activated plant

$$= 154 - 33 = 121 \text{ mg/l}$$

$\therefore$ Efficiency required in Activated plant

$$= \frac{121}{154} = 0.79$$

From table 9.10, for efficiency of 85–92%, we use F/M ratio as 0.4 to 0.3, and MLSS between 1500 to 3000 for conventional activated plant. Since efficiency required is on lower side, we can use moderate figures for F/M ratio and MLSS.

TREATMENT OF SEWAGE

So let us adopt $F/M = 0.33$

Similarly adopt MLSS (X_T) = 2000 mg/l

Using equation (9.44), we have

$$\frac{F}{M} = \frac{Q \cdot Y_0}{V \cdot X_T}$$

where $F/M = 0.33$ (assumed)

$$Q = 6300 \text{ m}^3/\text{day}$$

$$Y_0 = 154 \text{ mg/l} = 154 \text{ gm/m}^3$$

$$X_T = 2000 \text{ mg/l (assumed)}$$

$$\therefore 0.33 = \frac{6300 \times 154}{V \times 2000}$$

$\therefore V$ = Volume of aeration tank

$$= \frac{6300 \times 154}{2000 \times 0.33} = 1470 \text{ m}^3.$$

(i) Check for Aeration period or H.R.T. (t)

Using Eq. (9.41), we have

$$t = \frac{V}{Q} \times 24 \text{ h} = \frac{1470}{6300} \times 24 \text{ h}$$

$$= 5.6 \text{ h (within the limits of 4 to 6 h) O.K.}$$

(ii) Check for S.R.T. (θ_c)

From equation (9.56), we have

$$V \cdot X_T = \frac{\alpha_y \cdot Q(Y_0 - Y_E)\theta_c}{1 + K_r \cdot \theta_c}$$

where $V = 1470 \text{ m}^3$

$$X_T = 2000 \text{ mg/L}$$

α_y = yield coefficient = 1.0 w.r.t. TSS or MLSS (as defined under Eq. 9.50)

$$Q = 6300 \text{ m}^3/\text{d}$$

K_r = Endogeneous respiration rate constant = 0.06 d^{-1} . (as defined under Eq. 9.50).

Y_0 = BOD of influent in aeration tank = 154 mg/L

Y_E = BOD of effluent = 33 mg/L

Substituting the values, we get

$$1470 \times 2000 = \frac{1.0 \times 6300(154 - 33)\theta_c}{1 + 0.06 \times \theta_c}$$

$$\text{or } 1 + 0.06\theta_c = \left(\frac{1.0 \times 6300 \times 121}{1470 \times 2000} \right) \theta_c = 0.275 \theta_c$$

$$\text{or } 1 + 0.06\theta_c = 0.275 \theta_c$$

$$\text{or } 1 = (0.275 - 0.06) \theta_c$$

$$\text{or } 1 = 0.199 \theta_c$$

$$N = \frac{N_s \cdot (D_s - D_L) (1.024)^{T-20} \cdot \alpha}{9.17}$$

...(9.58)

where N = Oxygen transferred under field conditions in kg O_2 /kWh (or MJ*).

N_s = Oxygen transfer capacity under standard conditions in kg O_2 /kWh (or MJ*).

D_s = Dissolved oxygen-saturation value for sewage at operating temperature.

D_L = Operation D.O. level in aeration tank, usually 1 to 2 mg/L.

T = Temperature in degree C.

α = Correction factor for oxygen transfer for sewage, usually 0.8 to 0.85.

Oxygen may be supplied either by surface aerators or by diffused air aeration systems employing fine or coarse diffusers. In India, surface aerators are preferred because of easier maintenance. The oxygen transfer capacities of surface aerators, and fine and coarse diffused air systems, under standard conditions, lie between 1.2–2.4, 1.2–2 and 0.8–1.2 kg O_2 /kWh, respectively.

Example 9.30. Design a conventional activated sludge plant to treat domestic sewage with diffused air aeration system, given the following data :

Population	= 35,000
Average sewage flow	= 180 lpcd
BOD of sewage	= 220 mg/l
BOD removed in primary treatment	= 30%
Overall BOD reduction desired	= 85%.

Solution. Daily sewage flow

$$= Q = 180 \times 35000 \text{ l/day} = 6300 \text{ m}^3/\text{day}.$$

BOD of sewage coming to aeration

$$= Y_0 = 70\% \times 220 \text{ mg/l} = 154 \text{ mg/l}$$

($\because$ 30% BOD is removed in primary settling)

BOD left in effluent = $Y_E = 15\% \times 220 \text{ mg/l} = 33 \text{ mg/l}$

($\because$ Overall 85% BOD removal is desired)

$\therefore$ BOD removed in activated plant

$$= 154 - 33 = 121 \text{ mg/l}$$

$\therefore$ Efficiency required in Activated plant

$$= \frac{121}{154} = 0.79$$

From table 9.10, for efficiency of 85–92%, we use F/M ratio as 0.4 to 0.3, and MLSS between 1500 to 3000 for conventional activated plant. Since efficiency required is on lower side, we can use moderate figures for F/M ratio and MLSS.

* 1 watt = 1 Joule/sec = 3600 J/h

1 kWh = 3600 kJ = 3.6 MJ.

So let us adopt $F/M = 0.33$

Similarly adopt MLSS (X_T) = 2000 mg/l

Using equation (9.44), we have

$$\frac{F}{M} = \frac{Q \cdot Y_0}{V \cdot X_T}$$

where $F/M = 0.33$ (assumed)

$$Q = 6300 \text{ m}^3/\text{day}$$

$$Y_0 = 154 \text{ mg/l} = 154 \text{ gm/m}^3$$

$$X_T = 2000 \text{ mg/l (assumed)}$$

$$0.33 = \frac{6300 \times 154}{V \times 2000}$$

V = Volume of aeration tank

$$= \frac{6300 \times 154}{2000 \times 0.33} = 1470 \text{ m}^3.$$

(i) **Check for Aeration period or H.R.T. (t)**

Using Eq. (9.41), we have

$$t = \frac{V}{Q} \times 24 \text{ h} = \frac{1470}{6300} \times 24 \text{ h}$$

$$= 5.6 \text{ h (within the limits of 4 to 6 h) O.K.}$$

(ii) **Check for S.R.T. (θ_c)**

From equation (9.56), we have

$$V \cdot X_T = \frac{\alpha_y \cdot Q(Y_0 - Y_E) \theta_c}{1 + K_r \cdot \theta_c}$$

where $V = 1470 \text{ m}^3$

$$X_T = 2000 \text{ mg/L}$$

α_y = yield coefficient = 1.0 w.r.t. TSS or MLSS (as defined under Eq. 9.50)

$$Q = 6300 \text{ m}^3/\text{d}$$

K_r = Endogeneous respiration rate constant = 0.06 d^{-1} , (as defined under Eq. 9.50).

Y_0 = BOD of influent in aeration tank = 154 mg/L

Y_E = BOD of effluent = 33 mg/L

Substituting the values, we get

$$1470 \times 2000 = \frac{1.0 \times 6300(154 - 33)\theta_c}{1 + 0.06 \times \theta_c}$$

$$\text{or } 1 + 0.06\theta_c = \left(\frac{1.0 \times 6300 \times 121}{1470 \times 2000} \right) \theta_c = 0.275 \theta_c$$

$$1 + 0.06\theta_c = 0.275 \theta_c$$

$$\text{or } 1 = (0.275 - 0.06) \theta_c$$

$$\text{or } 1 = 0.199 \theta_c$$

$$\theta_c = \frac{1}{0.199} = 5.02 \text{ days} = 5 \text{ days ; O.K., as it lies between 5 to 8 days. (Table 9.10)}$$

(iii) Check for volumetric loading

Using equation (9.42), we have

$$\begin{aligned} \text{Volumetric loading} &= \frac{Q \cdot Y_0}{V} \text{ gm of BOD/m}^3 \text{ of tank vol.} \\ &= \frac{6300 \times 154}{1386} \text{ gm/m}^3 = 700 \text{ gm/m}^3 = 0.7 \text{ kg/m}^3 \end{aligned}$$

(within the permissible range of 0.3–0.7 kg/m³) ; O.K.

(iv) Check for Return sludge ratio

Using equation (9.55), we have

$$= \frac{Q_R}{Q} = \frac{X_T (\text{i.e. MLSS})}{\frac{10^6}{\text{SVI}} - X_T}$$

where SVI = 100 ml/gm (assumed—since this value should be in the range of 50–150. Pl. see under Eq. 9.52)

$$X_T = 2000 \text{ mg/l}$$

$$\text{or } \frac{Q_R}{Q} = \frac{2000}{\left(\frac{10^6}{100} - 2000 \right)}$$

= 0.25 (i.e. within the prescribed range of 25 to 50%) ;

which is O.K.

We will, for conservative purposes, however provide 33% return sludge.

The adapted SVI with this return sludge ratio is then computed as :

$$0.33 = \frac{200}{\left(\frac{10^6}{\text{SVI}} - 2000 \right)}$$

$$\text{or } \frac{10^6}{\text{SVI}} - 2000 = \frac{2000}{0.33} = 6060$$

$$\text{or } \text{SVI} = \frac{10^6}{6060} = 125, \text{ which is O.K.}$$

The sludge pumps for bringing recirculated sludge from the secondary sedimentation tank will thus have a capacity = 33% × Q = 33% × 6300 m³/d = 2100 m³/d. Ans.

Tank Dimensions. Adopt aeration tank of depth 3 m and width 4.5 m. The total length of the aeration channel required

$$= \frac{\text{Total volume required}}{B \times D} = \frac{1470}{4.5 \times 3} \text{ m}$$

Provide a continuous channel, with 3 aeration chambers, each of 37 m length. Total width of the unit, including 2 baffles each of 0.25 m thickness = 3 × 4.5 m + 2 × 0.25 = 14 m. Total depth provided including free-board of 0.6 m will be 3 + 0.6 = 3.6 m.

Overall dimensions of the Aeration tank will be 37 m × 14 m × 3.6 m. Ans.

Rate of Air Supply Required. Assuming the air requirement of the aeration tank to be 100 m³ of air per kg of BOD removed*, we have

Air required i.e. blower capacity

$$= 100 \times \frac{121 \times 6300}{1000} \text{ m}^3/\text{day}$$

$$= 121 \times 630 \times \frac{1}{24 \times 60} \text{ m}^3/\text{min}$$

$$= 53 \text{ m}^3/\text{min. Ans.}$$

Let standard diffuser plates of 0.3 m × 0.3 m × 25 mm size, releasing 1.2 m³ of air / min / m² with 0.3 mm pores may be used. Then, the total No. of plates required

$$= \frac{53}{1.2 \times 0.3 \times 0.3} = 491 ; \text{ say } 500.$$

Let us now provide more plates in the initial length of the tank ; say provide 45% of plates in the 1st $\frac{1}{3}$ length ; 30% of plates in the 2nd $\frac{1}{3}$ length ; and 25% in the last $\frac{1}{3}$ length.

$$\therefore \text{Plates to be provided in the 1st chamber} = 45\% \times 500 = 225$$

$$\text{Plates to be provided in the 2nd chamber} = 30\% \times 500 = 150$$

$$\text{Plates to be provided in the 3rd chamber} = 25\% \times 500 = 125$$

The diffuser plates are now adjusted as to ensure a minimum clear distance of 0.9 m along the channel length, to avoid interference from the rising streams of bubbles. The minimum centre to centre spacing of plates along channel length, will therefore be 1.2 m, and hence in a channel of 37 m length,

we would be able to accommodate only about $\left[\frac{37}{1.2} (\text{i.e. No. of spacings} - 1) \right] = 31 - 1 = 30$ plates. In order to provide a total of 225 plates in this length of 37

m, we will have to use $\frac{225}{30} = 8$ plates in each row, placed side by side along the width of the chamber. Hence, use 8 plates placed along the width of each chamber, constituting as one row, and provide 30 such rows @ 1.2 m c/c distance with total 240 plates in total.

In the second chamber of 37 m length, we have to provide only 150 plates, and hence c/c spacing of rows (8 plates in each row)

$$= \frac{37}{\frac{150}{8}} = \frac{37 \times 8}{150} = 1.97 \text{ m ; say } @ 2 \text{ m c/c.}$$

In the 3rd chamber, No. of plates required is only 125 ; and hence spacing of rows in this chamber = $\frac{37}{125} = \frac{37 \times 8}{125} = 2.37 \text{ m}$; say 2.4 m.

Hence adopt 8 plates in each row ; and rows are placed @ 1.2 m c/c in the 1st chamber, @ 2.0 m c/c in 2nd chamber ; and @ 2.4 m c/c in the 3rd chamber. **Ans.**

Design of Secondary sedimentation Tank. Adopting a surface loading rate of $20 \text{ m}^3/\text{day}/\text{m}^2$ at average flow of $6300 \text{ m}^3/\text{day}$, we have

(i) Surface area required

$$= \frac{6300}{20} \text{ m}^2 = 315 \text{ m}^2$$

Adopting a solids loading of $125 \text{ kg}/\text{day}/\text{m}^2$ for MLSS of $2000 \text{ mg}/\text{l}$, we have

(ii) the surface area required

$$= \frac{6300 \times 2000}{1000} \times \frac{1}{125} \text{ m}^2 = 100.8 \text{ m}^2$$

The higher surface area of 315 m^2 is adopted.

Adopting a circular tank,

$$\text{dia of tank} = \sqrt{\frac{315 \times 4}{\pi}} = 20 \text{ m.}$$

Weir loading for a circular weir placed along the periphery of the tank having length 20π will be

$$= \frac{6300}{20\pi} \text{ m}^3/\text{day}/\text{m.} = 100.3 < 150 ; \text{O.K.}$$

Note. If weir loading exceeds the permissible value, we may provide a trough instead of a single weir at the periphery.

Hence, provide 20 m dia secondary settling tank. **Ans.**

Design of Sludge Drying Beds. In order to design sludge drying beds, the quantity of excess wasted sludge will be calculated by using the equation (9.48 a) as :

$$Q_c = \frac{V \cdot X_T}{Q_w \cdot X_R}$$

$$\text{or } 5.02 = \frac{1470 \times 2000}{Q_w \cdot X_R}$$

$$\text{or } Q_w \cdot X_R = \frac{1470 \times 2000}{5.02} \text{ gm}/\text{d} = 586000 \text{ g}/\text{d} = 586 \text{ kg}/\text{d}$$

For $10 \text{ kg}/\text{m}^3$ S.S. concentrating in secondary sludge, (i.e. $X_R = 10 \text{ kg}/\text{m}^3$),

the excess secondary sludge volume = $Q_w = \frac{586}{X_R} = \frac{586 \text{ kg}/\text{d}}{10 \text{ kg}/\text{m}^3} = 58.6 \text{ m}^3/\text{d}$.

Note. This secondary sludge volume of $58.6 \text{ m}^3/\text{d}$ shall be taken to sludge drying beds, along with the primary sludge. The volume of primary sludge can be calculated if the concentration of suspended solids in sewage is known.

given in this question, the quantity of primary sludge cannot be worked out ; and hence the design of sludge drying beds cannot be done with the given data.

9.42. Advantages and Disadvantages of an Activated Sludge Plant

The chief advantage of the activated sludge process is that it offers secondary treatment with minimum area requirements, and an effluent of high quality is obtained. The conventional process was somewhat difficult to operate and needed a lot of supervision. However, the modifications described earlier, have made the process less difficult to operate than formerly, with the result that most secondary treatment plants being installed today are of these types.

Compared to the trickling filter plant, the capital cost of an activated sludge plant is less, but the operating cost is more mainly because of high power consumption for operating air compressors and the sludge circulation pumps. Generally, the power requirement in an activated sludge plant varies between 55 to 110 H.P. per million litres of sewage.

Loss of head through the plant is also quite less, and there is no fly or odour nuisance here, as is there in a trickling filter plant. However, if there is a sudden increase in the volume of sewage or if there is a sudden change in the character of sewage, adverse effects are produced on the working of the process, producing inferior effluent. Moreover, the quantity of sludge obtained is larger, and needs suitable thickening and disposal.

9.43. Activated Sludge Process Vs Trickling Filter Process and the Choice of One

As discussed earlier, the conventional biological (secondary) treatment of sewage is usually carried out, either by using *trickling filters* or by using an *activated sludge process*. The basic difference between an activated sludge process and the action involved in a trickling filter is that ; whereas in a trickling filter, the bacterial film coating the grains of the filter media is stationary and likely to become clogged after sometime ; in the activated sludge process, on the other hand, the finer suspended organic particles of sewage (settled as activated sludge) are themselves coated with the bacterial film, which is kept moving by the constant agitation. In the activated sludge process, therefore, the sludge flocs are coated with bacteria, and they act like free moving organisms, which are being continuously swept through the sewage, and which in their search for food and work, oxidise the organic matter present in sewage in a much more efficient way than that carried out in a filter by the bacteria coated around the particles of filter media. As such, it can be stated that an activated sludge process is more efficient than a trickling filter.

The quality of the effluent obtained in a conventional activated sludge plant is also better than that of a trickling filter plant. But since a conventional activated sludge plant requires a lot of skilled attendance and supervision during its operation, the modified activated sludge processes are generally used these days (as discussed earlier).

Moreover, the modern plants are operated more rapidly at higher rates (than those adopted in conventional plants) with shorter detention periods in the aeration tanks (2 to 3 hours), smaller amounts of air ($3.13 \text{ m}^3/\text{m}^3$ of sewage treated), and lesser amount of returned sludge (10 to 25% of sewage flow). Such a high rate activated sludge plant* can produce sufficiently good quality effluent (removing 70 to 80% of suspended solids, and 80 to 85% of BOD from sewage), with the results lying in between those obtained by a conventional activated sludge plant and a high rate trickling filter plant; although the available finances and the technical development of a country is another major guiding factor.

In addition to giving a slightly better effluent, other advantages offered by an activated sludge plant are :

- (i) lesser land area is required ;
- (ii) the head loss in the plant is quite low ;
- (iii) there is no fly or odour nuisance ;
- (iv) capital cost is less ; and
- (v) greater flexibility of operation, permitting control on the quality of effluent, is possible.

The disadvantages of the activated plant, on the other hand, are also laudable, as :

- (i) high cost of operation, with greater power consumption ;
- (ii) a lot of machinery to be handled ;
- (iii) the sudden change in the quantity and character of sewage may produce adverse effects on the working of the process, thus producing inferior effluent ;
- (iv) bulking of sludge is a common trouble, which has to be controlled especially when industrial wastewaters with high carbohydrate content or antiseptic properties are present. In any case, if such bulking is not there, comparatively larger sludge volume is to be handled ; and
- (v) the quantity of returned sludge has to be adjusted every time, as and when there is a change in the quantity of sewage flow, thus making the operation a little cumbersome.

Since these advantages and disadvantages weigh against each other, it is therefore, suggested that before recommending any of these two methods, the following factors must be thoroughly studied.

- (i) availability of land for installing the treatment ;
- (ii) availability of suitable method of sludge disposal ;
- (iii) cost and availability of power ;
- (iv) availability and cost of machinery and its spare parts required for installing the plant ;
- (v) degree of flexibility required in the operation of the process ;

*The sludge settled in secondary tanks in a high rate activated process is much denser than the conventional activated sludge. The surface loading rate, therefore, is much higher.

(vi) the quality and quantity of sewage, and the chances of variation in its quality and quantity ; and wear and tear of civil works and machinery employed in the process.

Moreover, detailed estimates for both types of treatments should also be prepared for a particular project. The pros and cons of both methods for that project should also be reviewed and thoroughly considered. A final decision is then taken, keeping in consideration the economy as well as the comparative merits and demerits of each method, and their effects on the desired aims. Normally, it is found that for towns or small cities with medium sized plants, trickling filters are better ; whereas in big cities with large sized plants, the activated sludge plant is better.

SECONDARY TREATMENT THROUGH ROTATING BIOLOGICAL CONTACTORS

(Aerobic Attached Culture)

9.44. Rotating Biological Contactors (RBCs)

The Rotating Biological Contractor's method of secondary waste-water treatment has been recently developed and does not fit precisely in to either the trickling filter or the activated sludge categories, but does employ principle common to both of them.

A rotating biological contactor (RBC) is a cylindrical media made of closely mounted thin flat circular plastic sheets or discs of 3 to 3.5 m in diameter, 10 mm thick, and placed at 30 to 40 mm spacings mounted on a common shaft. Thinner materials can be used by sandwiching a corrugated sheet between two flat discs and welding them together as a unit, as shown in Fig. 9.48.

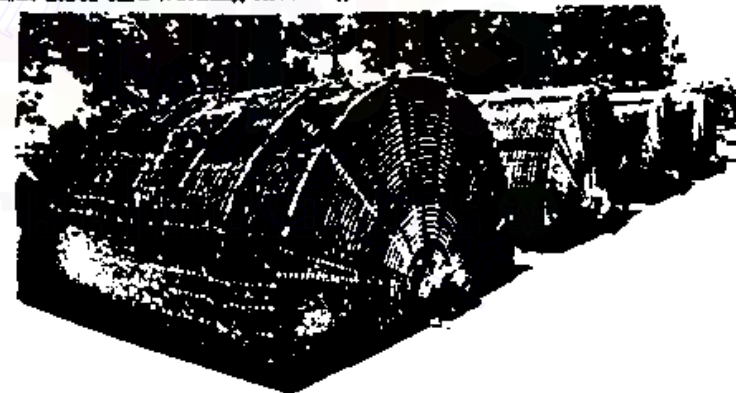


Fig. 9.48. Rotating Biological Contactors placed in series.

The R.B.C.'s are usually made in up to 8 m length, and may be placed in series or parallel in a specially constructed tank(s), through which the wastewater is allowed to pass. The RBC's are kept immersed in wastewater by about 40% of their diameter. The RBC's are rotated around their central horizontal shaft, at a speed of 1—2 rpm by means of power supplied to the shaft. Approximately 95% of the surface area is thus alternately immersed in the wastewater and then exposed to the atmosphere above the liquid.

When the process is operated, the microorganisms of the waste-water begin to adhere to the rotating surfaces and grow there, until the entire surface area of the discs gets covered with 1 to 3 mm layer of biological slime. As the discs rotate, they carry a film of wastewater into the air, where it trickles down the surface of the discs, absorbing oxygen. As the discs complete their rotation, this film mixes with the wastewater in the tank, adding to the oxygen of the tank and mixing the treated and partially treated wastewater. As the attached microorganisms pass through the tank, they absorb other organics for breakdown. The excess growth of microorganisms is sheared from the discs, as they move through the wastewater tank. The dislodged organisms are kept in suspension by the moving discs. This suspended growth finally moves down with the sewage flowing through the tank to a downstream settling tank for removal. The effluent obtained is of equal or even better quality than what is obtained from other secondary treatments. The quality of the effluent can further be improved by placing several contractors in series along the tank. The method can thus provide a high degree of treatment, including biological conversion of ammonia to nitrates.

As is evident, a given set of discs (i.e. an RBC) serves the following purposes:

- (i) They provide media for build up of attached microbial growth.
- (ii) They bring the growth of microbes in contact with the waste-water.
- (iii) They aerate the wastewater and the suspended microbial growth in the wastewater tank.

In this process, the attached growths are similar in concept to a trickling filter, except that here the microorganisms are passed through the wastewater, rather than the wastewater passing over the microbes, as happens in a trickling filter. This method realises some of the advantages of both the trickling filter and the activated sludge process.

The sludge produced in the process contains about 95–98% moisture, and may amount to about 0.4 kg per kg of BOD₅ applied. The theoretical model of the process is similar to that for trickling filter, but actual design is still empirical and based on the data from the successful working plants and as developed by the process manufacturers.

The hydraulic loading rates may vary between 0.04–0.06 m/day, and organic loading rates between 0.05–0.06 kg BOD₅/m² per day, based upon the disc surface area. Sloughing of biological solids is more or less continuous and the effluent contains a relatively constant concentration. The solids settle well and clarifier surface overflow rates of about 33 m³/m² per day are reported to be satisfactory.

AEROBIC STABILISATION UNITS (Aerobic Suspended Culture)

9.45. Oxidation Ponds and Stabilisation Ponds

Stabilisation ponds are open flow-through earthen basins, specifically designed and constructed to treat sewage and biodegradable industrial wastewaters. Such ponds provide comparatively long detention periods, extending from a few days to several days, during which time the wastes get

Stabilisation ponds may be classified as aerobic, facultative or anaerobic, depending upon the mechanism of purification.

In a totally aerobic pond, the stabilisation of wastes is brought about by aerobic bacteria, which flourish in the presence of oxygen. The oxygen demand of such bacteria in such a pond is met by the combined action of algae and other microorganisms, (such as bacteria and protozoa*), called algal photosynthesis, or algal-symbiosis. In this symbiosis, the algae (which are microscopic plants) while growing in the presence of sunlight, produce oxygen by the action of photosynthesis; and this oxygen is utilised by the bacteria for oxidising the waste organic matter. The end products of the process are carbon dioxide, ammonia and phosphates, which are required by the algae to grow and continue to produce oxygen.

In an anaerobic pond, however, the stabilisation of waste is mainly brought about by the usual anaerobic conversion of organic wastes to carbon dioxide, methane, and gaseous end products, with eruption of foul odours and pungent smells.

In a facultative pond, the upper layers work under aerobic conditions, while the anaerobic conditions prevail in the bottom layers. The upper aerobic layer of the pond acts as a good check against the evolution of the foul odours from such a pond. The treatment affected from such a pond is comparable to that of conventional secondary treatment processes.

The totally aerobic ponds will have to be of very small depths, such as below 0.5 m and still then may require occasional stirring, to prevent anaerobic conditions in the settled sludge. It is, therefore practically difficult to construct and use such purely aerobic ponds. The facultative ponds, with depths varying between 1.0 m to 1.5 m, are thus most widely used for treatment of sewage. Deeper ponds in the depth range of 2.5 m to 4 m may also sometimes be constructed to work anaerobically.

Treatment ponds have been used to treat wastewaters for many years, especially for small communities.

The term oxidation pond was originally referred to that stabilisation pond which received partially treated sewage; whereas the pond that received raw sewage was used to be called a sewage lagoon; but in recent years, the term oxidation pond has been widely used as a collective term for all types of ponds, and most particularly the facultative stabilisation ponds.

The results of the oxidation pond treatment are: the oxidation of the original organic matter and the production of algae, which are discharged with the effluent. This results in a net reduction in BOD, since the algae are more stable than the organic matter in wastewater, and degrade slowly in the river stream into which the effluent is discharged.

The oxidation ponds, throwing their effluents in rivers, just upstream of some lakes or reservoirs, are therefore, generally not preferred, as the discharged algae may settle in the reservoirs, and cause anaerobic decomposition and other water quality problems. However, the effluents from

*Aerobic bacteria are most commonly present, and protozoa may be present under certain loading conditions.

oxidation ponds can be easily used for land irrigation, particularly at places, where they cannot be discharged into river streams.) *Included diag.*

9.45.1. Constructional Details. A typical plan and section of an oxidation pond is shown in Fig. 9.49. It is an earthen pond, dug into the ground, with shallow depth. The pond should be atleast 1.0 m deep to discourage growth of aquatic weeds, and should not exceed 1.8 m or so, as otherwise the pond may turn into a deeper anaerobic pond rather than remaining facultative in character without giving foul odours. The detention time in the pond is usually 2 to 6 weeks, depending upon sun light and temperature. In cold countries, higher figure is to be adopted.

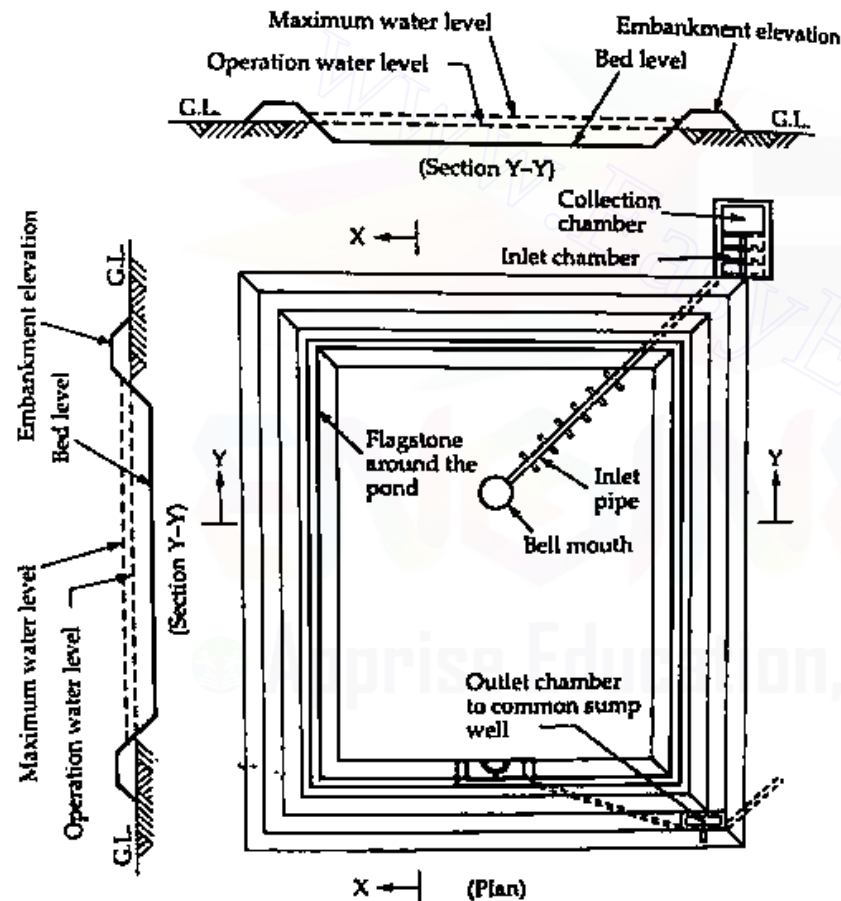


Fig. 9.49. Oxidation Pond.

Better efficiency of treatment is obtained, if several ponds are placed in series, so that the sewage flows progressively from one to another unit, until it is finally discharged.

The effluent should be entered at centre above or below the liquid surface of the pond, so that it is mixed with the oxygen saturated pond liquor.

The outlet should provide withdrawal of effluent from different depths of pond.

9.46.2. Design Criteria. The surface area of the tank may be worked out by assuming a suitable value of organic loading, which may range from 300—150 kg/hectare/day* or so in hot tropical countries like India to about 90—60 kg/hectare/day or so for colder countries situated at higher latitudes. Each unit may have an area ranging between 0.5 to 1 hectare.

The length of the tank may be kept at about twice the width. The depth may be kept between 1 to 1.5 m. A free-board of about 1 m may also be provided above a capacity corresponding to 20—30 day of detention period. It is found that with the above assumed organic loading, and a per capita daily BOD production of about 0.08 kg, one hectare land area will suffice for

$$\frac{300}{0.08} = 3750, \text{ to } \frac{60}{0.08} = 750 \text{ persons.}$$

IS 5811 recommends the following values of BOD loadings over different parts of the country, depending upon temperature, which in turn, depends on the latitude of the place, as given in table 9.11.

Table 9.11. BOD Loadings for Stabilisation Ponds

Latitude °N	BOD ₅ Loading in kg/ha/d
8	325
12	300
16	275
20	250
24	225
28	200
32	175
36	150

The detention period for the stabilisation pond as stated above, varies from 7 days to 42 days or so. It can be roughly estimated by using the formula :

$$\text{Detention period in days} = \frac{1}{K_D} \log_{10} \left(\frac{L}{L-Y} \right) \quad \dots(9.59)$$

where L = the BOD of the effluent entering the pond
 Y = the BOD removed ; say 90% of L or 95% of L , etc.

K_D at 20°C is approximately 0.1 per day, and at other temperatures, it can be determined by eqn :

$$K_{D(T)} = K_{D(20)} [1.047]^{T-20}$$

[Note. Since K_D value increases with temperature, the detention period will decrease with the increase in temperature.]

9.45.3. Results Obtained. Properly operated ponds may be as effective as trickling filters in reducing the BOD of sewage. The BOD removal is upto 90% and coliform removal is upto 99% or so.

9.45.4. Removal of Settled Sludge. During the designed detention period in an oxidation pond, the organic solids will either be oxidised or will settle down. The average sludge accumulation observed in several ponds is about 2 to 5 cm depth per year. At a max. of this rate, sludge removal is thus required, once in 6 years for 1.2 m deep ponds, and once in 12 years for 1.5 m deep ponds, so as to ensure a minimum liquid depth of 0.3 m all the time.

9.45.5. Advantages and Disadvantages. Oxidation ponds are quite suitable in hot dry countries like India, and places where 200 or more sunny days are expected per year; especially for small cities or towns where large land areas are cheaply available at about 0.5 to 1 km away from the habitation. The biggest advantage of an oxidation pond treatment is that it is very cheap, the capital cost being 10 to 30% of that of the conventional plant (using trickling filters or activated sludge process). Their maintenance cost is also very minor, and no skilled supervision is required at any stage of construction or operation. In addition, they are quite flexible, and do not get upset due to fluctuations in organic loading.

The main disadvantage of oxidation ponds, however, is the nuisance due to mosquito breeding and bad odours. To avoid mosquito breeding, the banks of the ponds should be kept clear of any grasses and bushes, etc. Similarly, to avoid bad odours, the oxidation ponds should be located sufficiently far from the residential areas. Odours may also be kept under control by avoiding the over-loading. However, when a pond gets over-loaded, the algae growth may be stimulated by adding sodium nitrate, which is both a plant food and an oxidising agent.

Example 9.31. Design an oxidation pond for treating sewage from a hot climatic residential colony with 5000 persons, contributing sewage @ 120 litres per capita per day. The 5-day BOD of sewage is 300 mg/l.

Solution. The quantity of sewage to be treated per day

$$= 5000 \times 120 = 6,00,000 \text{ litres}$$

$$= 0.6 \text{ M. litres} = 600 \text{ cu. m.}$$

The BOD content per day

$$= 0.6 \text{ Ml} \times 300 \text{ mg/l} = 180 \text{ kg}$$

Now, assuming the organic loading in the pond (in hot climates) as say 300 kg/hectare/day, we have

The surface area required

$$= \frac{180 \text{ kg/d}}{300 \text{ kg/ha.d}} = \frac{180}{300} \text{ ha} = \frac{180}{300} \times 10^4 \text{ m}^2 = 6,000 \text{ m}^2.$$

Assuming the length of the tank (L), as twice of its width (B), we have

$$2.B^2 = 6000$$

$$B = \sqrt{3000} = 54.7 \text{ m; say } 55 \text{ m.}$$

Using a tank with effective depth as 1.2 m; we have

$$\text{The provided capacity} = 110 \times 55 \times 1.2 = 7260 \text{ m}^3.$$

Now, Capacity = Sewage flow per day $\times$ Detention time in days.

$\therefore$ Detention time in days

$$= \frac{\text{Capacity in cu. m.}}{\text{Sewage flow per day in cu. m/day}} \\ = \frac{7260}{600} = 12.1 \text{ days; say } 12 \text{ days.}$$

Hence, use an oxidation pond with length = 110 m; width = 55 m; and overall depth = (1.2 + 1) = 2.2 m; and a detention period of 12 days. **Ans.**

Design of Inlet Pipe. Assuming an average velocity of sewage as 0.9 m/sec, and daily flow for 8 hours only,

$$\text{Discharge} = \frac{600}{8 \times 60 \times 60} \text{ cumecs.}$$

$\therefore$ Area of inlet pipe required

$$= \frac{\text{Discharge}}{\text{Velocity}} = \left(\frac{600}{8 \times 60 \times 60} \right) \frac{1}{0.9} \text{ m}^2 \\ = \frac{1}{7.2 \times 6} \text{ m}^2 = \frac{1}{43.2} \text{ m}^2 = 232 \text{ cm}^2$$

$\therefore$ Dia of inlet pipe

$$= \sqrt{\frac{4 \times 232}{\pi}} = 17.2 \text{ cm; say } 18 \text{ cm. } \text{Ans.}$$

Dia of outlet pipe may be taken as 1.5 times that of the inlet; say 27 cm. **Ans.**

Example 9.32. Stabilisation ponds for a town of 3000 population are provided to operate in series. The larger cell has an area of 60,000 m², and the smaller one 30,000 m². The average daily waste flow is 900 m³/day containing 200 kg of BOD (222 mg/l).

(i) For series operation, calculate the BOD loadings based on both the total pond area and the larger cell only.

(ii) Estimate the number days of winter storage available between 0.6 m and 1.5 m water levels, assuming an evaporation and seepage loss of 2.5 mm of water per day.

Solution. (i) (a) **BOD loading based on total pond area**

Total pond area of both cells joined in series

$$= 60,000 \text{ m}^2 + 30,000 \text{ m}^2 = 90,000 \text{ m}^2 = 9 \text{ hectares.}$$

Total BOD per day = 200 kg/day.

BOD loading in kg/ha/day

$$= \frac{200}{9} \text{ kg/day/ha} = 22.2 \text{ kg/ha/day. } \text{Ans.}$$

(i) (b) **BOD loading based on area of larger cell only**

Area of larger cell = 60,000 m² = 6 ha.

BOD loading in kg/ha/day

$$= \frac{200}{6} \text{ kg/day/ha} = 33.3 \text{ kg/ha/day. Ans.}$$

(ii) To calculate the number days of storage between WL 0.6 m and 1.5 m, we have

Depth available for storage = $1.5 - 0.6 = 0.9 \text{ m}$.

Total area = $90,000 \text{ m}^2$

$\therefore$ Volume of storage available = $90,000 \times 0.9 = 81,000 \text{ m}^3$.

Daily inflow of sewage = 900 cu. m/day

The sewage volume, which percolates and evaporates daily

= 2.5 mm depth

$$= \frac{2.5}{10} \times \frac{1}{100} \text{ m} \times \text{surface area of tanks.}$$

$$= \frac{2.5}{1000} \text{ m} \times 90,000 \text{ m}^2 = 225 \text{ m}^3.$$

$\therefore$ Net effective daily inflow of sewage

$$= (900 - 225) \text{ m}^3 = 675 \text{ m}^3/\text{day}.$$

$\therefore$ Winter storage available as days

$$= \frac{\text{Vol. of storage in m}^3}{\text{Daily net sewage inflow in m}^3/\text{day}}$$

$$= \frac{81,000}{675} \text{ days} = 120 \text{ days. Ans.}$$

9.46. Oxidation Ditches (Pasveer Type) or Extended Aeration Lagoons

The conventional activated sludge plant has been modified to eliminate the primary sedimentation tank, and sludge digestion tank, in a process, called *Extended Aeration*, which aims at providing an aeration tank with a longer aeration time. The flow chart for such a process, is shown in Fig. 9.50.

A common application of this process has been made in *Pasveer ditches*, which have been widely used in Europe and elsewhere, and also in "package plants", available for small installations.

Such an oxidation-ditch-plant has been found to be economical, up to say 1.5 lakh population, compared to the conventional activated sludge plant or trickling filter plant.

Such a plant, also proves better than an ordinary simple oxidation pond, in the sense that it requires only about one-fifth of the land area of that required for an oxidation pond.

The construction of an *oxidation ditch plant*, generally involves the construction of a number of ditch channels, placed together side by side, having depth of about 1 to 1.5 m*. The width of the ditches is limited to the type and availability of the aeration rotors used, and may vary between 1 to 5 m.

*The depth can be increased now a days to 2.5—4 m, by using vertical axis rotor in place of a horizontal axis cage rotor.

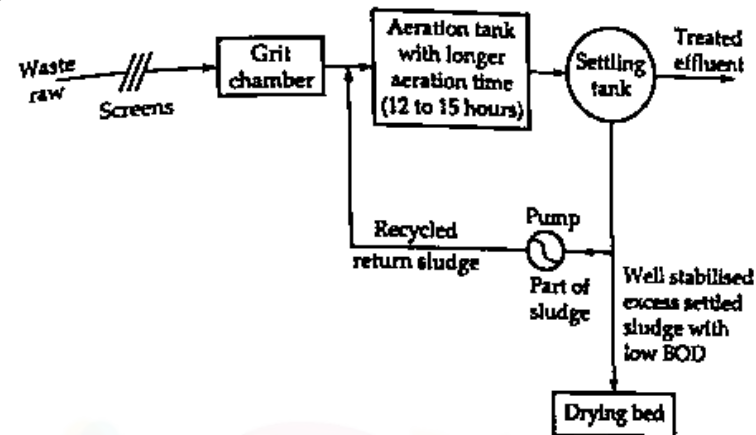


Fig. 9.50. Extended Aeration Process.

The length of the ditches is not too important, but some effort may be made to keep the perimeter of the walls to minimum, when two or more ditches are used side by side. The length may vary from, say, 150 m to 1000 m, or so.

The oxidation ditches may be constructed either in earthwork with earthen embankments or in brick or stone masonry with vertical walls. Brick or masonry walls are preferred, because they occupy lesser land area, and don't get eroded. Whether they are constructed in earthwork or masonry, *water-tightness is essential*, to ensure the desired immersion of the rotor.

Each ditch channel is usually equipped with a special type of horizontal axis rotor, which serves the purpose of agitating and circulating the sewage, and thereby oxygenating the same. The rotor, not only gives oxygen supply to the sewage, but also helps in keeping the sewage-solids in suspension (which act as carriers of aerobic bacteria), by imparting sewage a velocity of more than 0.3 m/sec. The thoroughly aerated sewage is then settled in a settling tank by stopping the rotors for about 2 hours, and then taking out the clear supernatant liquor at the time of no flow (i.e. during night hours in case of small communities). A part of the settled sludge is used for recirculation, and the excess settled sludge, which is well stabilised due to long detention, can be easily dried on sand

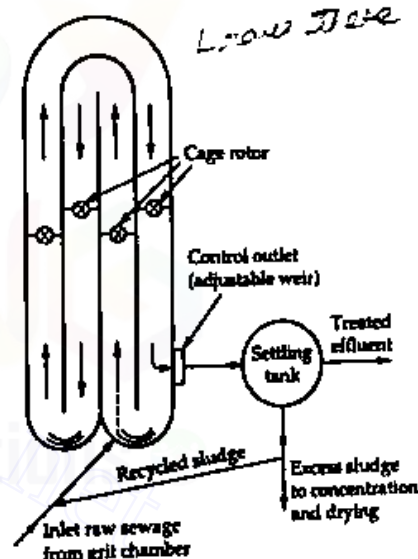


Fig. 9.51. Plan view of a typical Oxidation ditch.

beds, and disposed off suitably. A typical arrangement of an oxidation ditch is shown in Fig. 9.51. A photo view of such a plant, using a number of ditch channels, as constructed at Baroda in India, is also shown in Fig. 9.52.

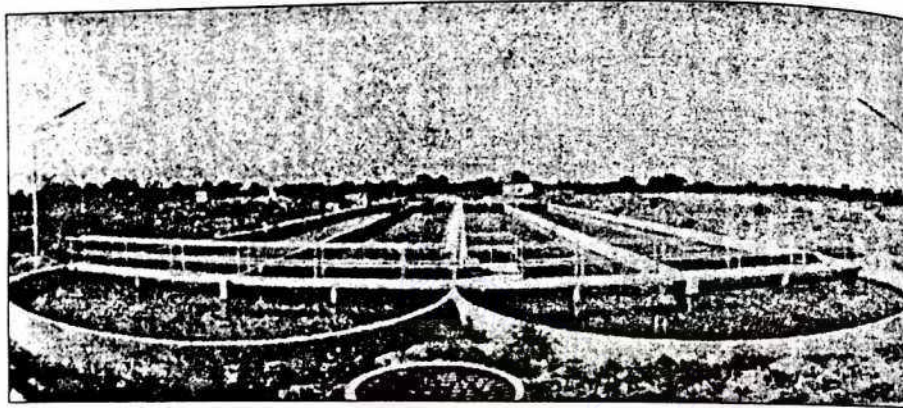


Fig. 9.52. Photoview of oxidation ditches constructed at Baroda (Gujarat) in 1975—the largest such ditches of India when constructed.

Design Considerations. The volume of the aeration channel required under Indian climates should be such as to give a detention period of 12 to 15 hours, or 800 to 2500 litres per kg of BOD load present in the sewage admitted. The concentration of the suspended solids in the mixed liquor should be high, say about 4000 to 5000 mg/l. The volume of the ditch approximates 120 to 150 cum per metre length of the rotor. The length of the standard horizontal axis cage type rotor used is 1 m. The rotor is in the form of a cylindrical cage of 0.7 m in diameter, and is rotated at a speed of 75 RPM, while dipping 10 cm into the liquid.

Results obtained. The quality of the effluent obtained is quite good, with suspended solids removal at about 95% and BOD removal at about 98%. The power consumed in the process, is however, more than what is required in an ordinary activated sludge process (i.e. about 4.4 kW per kg of BOD admitted). However, the extra cost due to this factor is compensated by elimination of primary settling tank and anaerobic digestion tank. This method however, requires skilled supervision.

The method can be advantageously used for treating small quantities of wastewaters at places where sufficient land is not available for constructing large sized oxidation ponds; but where sufficient funds and trained personnel are available. This method is preferably used for treating wastewaters from industries, like pharmaceuticals, canning, dairy, etc., located in densely populated areas.

9.47. Mechanically Aerated Lagoons

A mechanically aerated lagoon is a deeper oxidation pond, with oxygen introduced by mechanical aerators rather than relying on the photosynthetic oxygen production alone. As these ponds are deeper than the oxidation ponds,



Photo Fig. 9.1 (a) Enlarged photoview of two of the four grit channels (entry side) provided after the fine screens at the Ghatkopar Sewage Treatment Plant, Mumbai.



Photo Fig. 9.1 (b) Photoview of the two of the four grit channels (outfall end side) provided after the fine screens at the Ghatkopar Sewage Treatment Plant, Mumbai.

Grab and Crane machine arrangement provided to periodically remove the settled grit can be seen at the top of the photo.

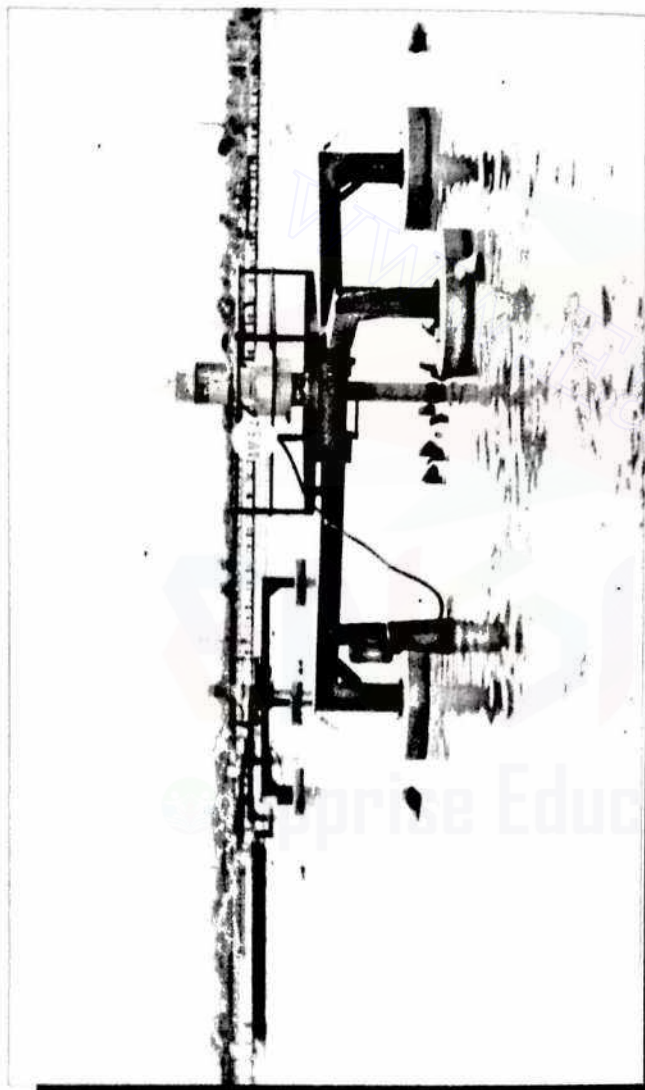


Photo Fig. 9.2. Photoview of one of 4 aerated oxidation lagoons (ponds) at Ghatkopar Sewage Treatment Plant, Mumbai

TREATMENT

The depth of these basins, normally ranges between 2.4 to 3.6 m, and detention time between 4 to 10 hours. The land area required is about 5 to 10% of that required for an equivalent oxidation pond. With the above detention period of 4 to 10 hours, the efficiency obtained ranges between 65 to 90%. The aerated lagoons are frequently used for treating industrial waste waters as well as city sewage.

A simple flow chart of such a lagoon is shown in Fig. 9.53.

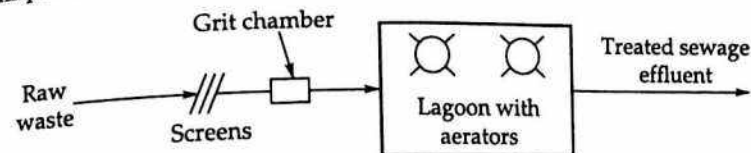


Fig. 9.53. Flowsheet for a mechanically aerated lagoon.

In India, aerated lagoons have been used in Mumbai city at *Ghatkopar Sewage Treatment Plant* of 690 MLD (150 MGD) capacity. At this plant, the city's sewage from Ghatkopar, Kurla, Vikhroli, Deonar area is received at the plant through a tunnel to the wet well of Influent Sewage Pumping Station (IPS), where 5 No. sewage pumps of 138 MLD (30 MGD) capacity each, are installed. The sewage is pumped from the wet well to the inlet of S.T.P. The lifted sewage is made to pass through 4 No. semi automatic screens of 1600 × 2000 mm size to arrest floating solids and to protect downstream units. The screening materials are disposed off by dumping in low lying area. The screened sewage is made to pass through 4 No. aerated grit chambers to settle out inorganic particles of sp. gravity = 2.6 and of size 0.2 mm and above. The spiral current within the grit is created by the use of defused air, being let into the grit channels through a compressor. The air supply rate is adjusted to create the velocity in the bottom, low enough to allow the grit to settle. The settled grit is removed by **Grab and Crane machinery** (Pl. see **Colour Photo Fig. 9.1** of the aerated grit chamber) and disposed off regularly. Each of the four rectangular grit channels, at its end length, are provided with a parshall flume section chamber, to measure discharge.

The sewage from the grit chamber through partial flume chamber finally enters into 4 Nos. of aerated lagoons (Pl. see **Colour Photo Fig. 9.2** of the aerated lagoon). There are 4 such ponds, each of size 230 m × 160 m × 4.5 m with 16 floating aerators of 50 HP installed in each pond. The detention period in each aerated lagoon is 43 hour (1.8 day). *The aeration increases D.O. in sewage and accelerates microbiological process of bacteria.* The settled sludge is required to be removed once in 6-8 years. The final effluent is let out into a creek.

The characteristic parameters of the influent and effluent sewage at this STP are as follows :

Parameters of Influent Sewage

$BOD_5 = 170-200 \text{ mg/L}$

BOD₅ = 30-40 mg/L

COD = 50-60 mg/L

TSS = 30 mg/L

ANAEROBIC STABILISATION UNITS

9.48. Anaerobic and Facultative Stabilisation Ponds

As stated under article 9.45, the deeper stabilisation ponds, usually operating under the action of anaerobic bacteria, are called the *anaerobic stabilisation ponds*. These ponds generally receive untreated sewage, and are deep enough to restrict the penetration of light to reduce the algae growth to a negligible level. The photosynthesis, which primarily causes stabilisation of wastes in an oxidation pond, can be reduced by decreasing the surface area and increasing the depth of the pond. Deeper ponds, usually in the depth range of 2.5 to 4.0 m are, therefore, sometimes used for anaerobic decomposition of wastes. The anaerobic conditions are further ensured by applying BOD load that exceeds oxygen production from photosynthesis.

Anaerobic treatment of complex wastes involves *two distinct stages*. In the first stage, known as *acid fermentation*, complex organic materials are broken down mainly to short-chain acids and alcohols. In the second stage, known as *methane fermentation*, these materials are converted to gases, primarily methane and carbon dioxide. The proper design of anaerobic ponds must result in environmental conditions favourable to methane fermentation.

Anaerobic ponds may primarily be used as a pre-treatment process, and are particularly suited for the treatment of high temperature, high strength industrial wastewaters. However, they have been used successfully to treat municipal wastewaters as well. Such ponds are, however, generally avoided, unless the process is used in a close bodied tank, due to evolution of foul odours in the process of anaerobic decomposition of wastes.

9.49. Septic Tanks

A septic tank may be defined as a *primary sedimentation tank**, with a longer detention period (12 to 36 hours, against a period of 2 hours in an ordinary sedimentation tank), and with extra provisions for digestion of the settled sludge. Since the digestion of the settled sludge is carried out by anaerobic decomposition process, the septic tank unit is generally classified under the units which work on the principle of anaerobic decomposition. Moreover, due to anaerobic decomposition of the settled sludge, foul gases will be evolved in the tank, and as such, a septic tank will be a completely covered tank, provided with a high vent shaft for escape of gases.

A septic tank, is thus, a horizontal continuous flow type of a sedimentation tank, directly admitting raw sewage, and removing about 60 to 70% of the dissolved matter from it. The effluent from such a tank will be sufficiently foul in nature, and will have to be disposed of either for sub-surface irrigation or in cress-pools or soak pits, or to be treated in trickling filters before disposing it of

in water courses, as will be discussed a little later. The sludge settled at the bottom of the tank, and the oils and greasy matter rising to the top surface of sewage as scum, are allowed to remain in the tank for a period of several months, during which they are decomposed by the anaerobic bacteria to form gases and liquids by the process of sludge digestion. The resultant sludge so obtained, will consequently be much less than that obtained in ordinary settling tanks (the quantity is reduced because of digestion). The digested sludge from the tank is periodically (at intervals of 6 to 12 months, and in no case exceeding 3 years) removed, and taken to a nearby sump, from where it may be pumped up to the ground, and disposed of in a sanitary manner, preferably after drying it.

Septic tanks are generally provided in areas where sewers have not been laid and for catering to the sanitary disposal of sewage produced from isolated communities, schools, hospitals, hotels, other public institutions, etc.

9.49.1. Construction Details. The plan and section of a typical septic tank are shown in Fig. 9.54. The tank is designed to prevent direct currents between the tank inlet and outlet. This ensures effective sedimentation, and is achieved by using pipe tees with submerged ends as inlet and outlet, as shown in Fig. 9.54 or alternatively, a better arrangement is to provide hanging baffles in front of inlet and before the outlet, as was shown in sedimentation tank of Fig. 9.12(a). The T-pipe or the baffle at the outlet will also help in retaining the scum (i.e., oily and greasy matter floating to the surface, due to evolution of gases produced by anaerobic decomposition of sludge at bottom) in the tank.

It may be noted that holding of scum in the tank not only frees the effluent from it, but is also desirable to hold back odours and to create a sort of heat insulation which aids the bacterial action. The tank is generally covered at top with a R.C.C. slab. Manhole covers are provided in the top slab, so as to permit inspection and maintenance. Sometimes, stairs or cast iron steps may also be provided to go into the tank, if needed. The R.C.C. cover prevents the escape of foul gases and odours from the tank on to the ground; prevents the chances of accidents due to falling of children or animals; and prevents wind agitation, thus keeping the sewage warm, and helping in bacterial activity. The foul gases produced by the anaerobic decomposition of deposited sludge are separately removed through a vent pipe projecting sufficiently high above the ground, so as not to cause any nuisance to the neighbouring areas. The sludge deposited and digested, is removed at an interval of 6 to 12 months, into a side sump-well through a pipe under hydrostatic head or with the help of a portable pump. In rural areas, and in case of small septic tanks, the sludge may be removed by manual labour. The sludge from the sump well is then lifted up by pumps, etc.; and disposed of suitably after drying, as pointed out earlier.

9.49.2. Design Considerations. The septic tanks will be designed like ordinary sedimentation tanks with the following data:

(i) *Capacity of Septic Tanks*. The volume of liquid which a septic tank can accommodate is called its capacity. A septic tank should be capable of storing the sewage flow during the detention period, and an additional volume of sludge for the periodicity of cleaning.

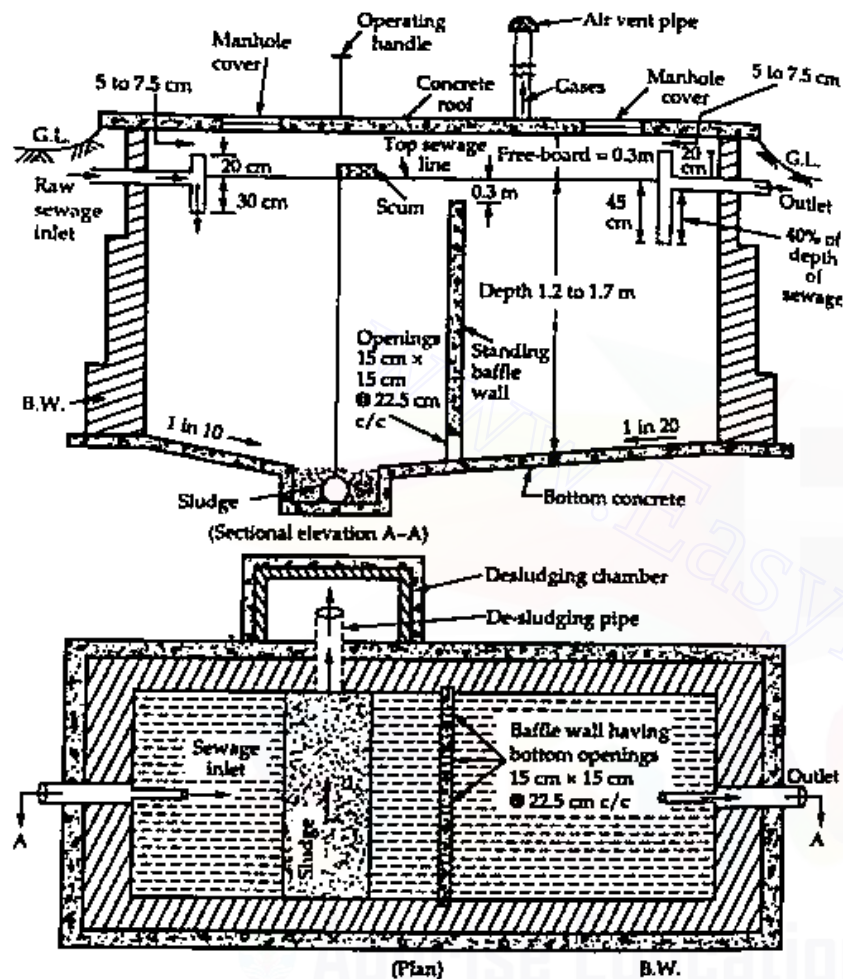


Fig. 9.54. Septic Tank.

If only water closets are connected to the septic tank, the sewage flow will be about 40—70 litres/capita/day. But when sullage is also discharged in to the septic tank, the sewage flow may be as much as 90 to 150 litres/capita/day. Where a large quantity of sludge is expected, it may separately be disposed of in the manner as the effluent from the septic tank.

The sludge and the scum will accumulate in the tank at varying rates, depending upon the characteristics of raw sewage, and the efficiency of the sedimentation and digestion. The rate of accumulation of sludge has been recommended as 30 litres/person/year.

The minimum capacity of a septic tank for about 8 to 10 persons, may be kept 2,250 litres (when all liquid wastes are discharged into the tank) and

Free-board. A free-board of about 0.3-0.5 m may be provided above the top sewage line in the tank. This will help accommodate the scum in the tank.

(ii) **Inlet and Outlet baffles, etc.** The baffles or tees should extend up to top level of the scum (about 20-22 cm above the top sewage line), but must stop a little below the bottom of the covering slab (by at least 7.5 cm or so) so as to allow for the free-movement of gases. Moreover, the inlet should penetrate by about 30 cm below the top sewage line, and the outlet should penetrate to about 40% of the depth of sewage. Further, the outlet invert level should be kept 5 to 7.5 cm below the inlet invert level.

(iii) **Detention Period.** The detention period for a septic tank generally varies between 12 to 36 hours, but is commonly adopted as 24 hours.

(iv) **Length to Width Ratio.** Septic tanks are usually rectangular with their length at about 2 to 3 times the width. The width should not be less than 90 cm. The depth of the tank generally ranges between 1.2 to 1.8 m.

Example 9.33. Design the dimensions of a septic tank for a small colony of 150 persons provided with an assured water supply from the municipal headworks at a rate of 120 litres per person per day. Assume any data, you may need.

Solution. The quantity of water supplied

$$= \text{Per capita rate} \times \text{Population}$$

$$= 120 \times 150 \text{ litres/day} = 18,000 \text{ l/day.}$$

Assuming that 80% of water supplied becomes sewage, we have

The quantity of sewage produced

$$= 18,000 \times 0.8 = 14,400 \text{ l/day.}$$

Assuming the detention time to be 24 hours, we have

The quantity of sewage produced during the detention period (i.e., the capacity of the tank)

$$= 14,400 \times \frac{24}{24} = 14,400 \text{ litres.}$$

Now assuming the rate of deposited sludge as 30 litres/capita/ year ; and also assuming the period of cleaning as 1 year, we have

The volume of sludge deposited

$$= 30 \times 150 \times 1 = 4,500 \text{ litres.}$$

$\therefore$ Total required capacity of the tank

$$= 14,400 + 4,500 = 18,900 \text{ litres} = 18.9 \text{ cu.m.}$$

Assuming 1.5 m as the depth of the tank, we have

The surface area of the tank

$$= \frac{18.9}{1.5} \text{ m}^2 = 12.6 \text{ m}^2.$$

If the ratio of the length to width is kept as 3 : 1, we have

$$3 \cdot B^2 = 12.6$$

∴ Provide width = 2.1 m ; and

Provide length of the tank = 6 m.

∴ Area of cross-section provided

$$= 6 \times 2.1 = 12.6 \text{ m}^2 \text{ (same as required)}$$

Thus, the dimensions of the septic tank will be

$$6 \text{ m} \times 2.1 \text{ m} \times (1.5 + 0.3) \text{ m overall depth}$$

[0.3 m used as free-board]

Hence, use a tank of size 6 m × 2.1 m × 1.8 m. Ans.

9.49.3. Disposal of the Effluent from the Septic Tank. The effluent coming out from a septic tank is no better than the effluent of an ordinary sedimentation tank. It contains large amount of putrescible organic matter (200 to 250 mg/l), and its BOD is quite high (100 to 200 mg/l). This effluent should, therefore, be disposed of carefully, so as to cause minimum nuisance or risk to the health of the people.

The following three methods of disposal of septic tank effluent are usually adopted :

- (i) Soil absorption system ;
- (ii) Biological filters ; and
- (iii) Upflow anaerobic filters.

These methods are discussed below :

9.49.3.1. Soil absorption system. The soil absorption system involves the disposal of effluent on land, and can be adopted only when sufficient land is available and the soil is sufficiently porous as to give a *percolation rate* not exceeding 60 minutes (per cm).

The *percolation rate* of a soil or a ground is defined as the time in minutes required for seepage of water through that ground by 1 cm. Higher percolation rate naturally would reflect less porous soil.

In case, sufficiently porous ground is not available, the effluent of the septic tank shall be subjected to a secondary treatment either in a *biological filter* or in an *upflow anaerobic filter*, before its final disposal either in a city sewer or drain, or for gardening purposes.

The *soil absorption system* may be of the following two types :

- (a) seepage pit or soak pit ; and
- (b) dispersion trench.

Both the above systems are explained below :

(a) **Disposal in Soak Pits.** A soak pit is a circular covered pit, through which the effluent is allowed to be soaked or absorbed into the surrounding soil. The soak pit (or sewage pit) may either be filled with stone aggregate as shown in Fig. 9.55 (a) or may be kept empty as shown in Fig. 9.55 (b). When the soak pit is empty, the pit is lined with brick, stone or concrete blocks with dry open joints. In addition to this, this lining is supported below the inlet level by at least 7.5 cm thick backing of coarse aggregate, as shown. The lining above the inlet level should be plastered with cement mortar, as shown. However, when the soak pit is filled with stone or brick aggregate, no lining is required except for top masonry ring constructed to prevent damage by

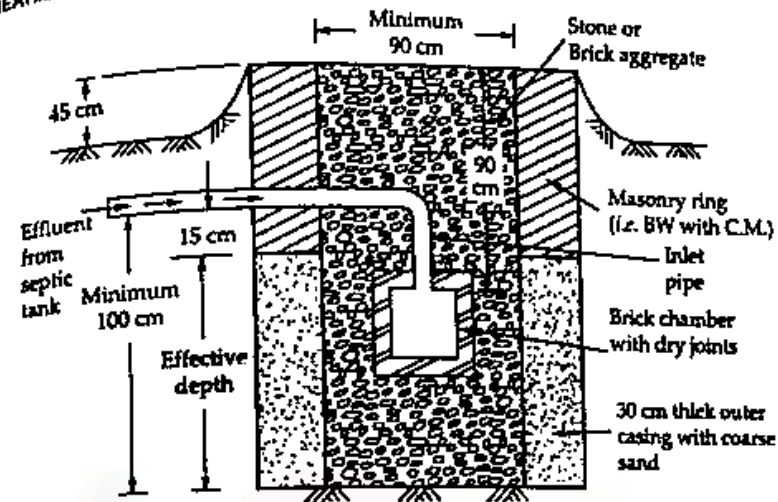


Fig. 9.55. (a) Unlined soak pit filled with stone or brick aggregates.

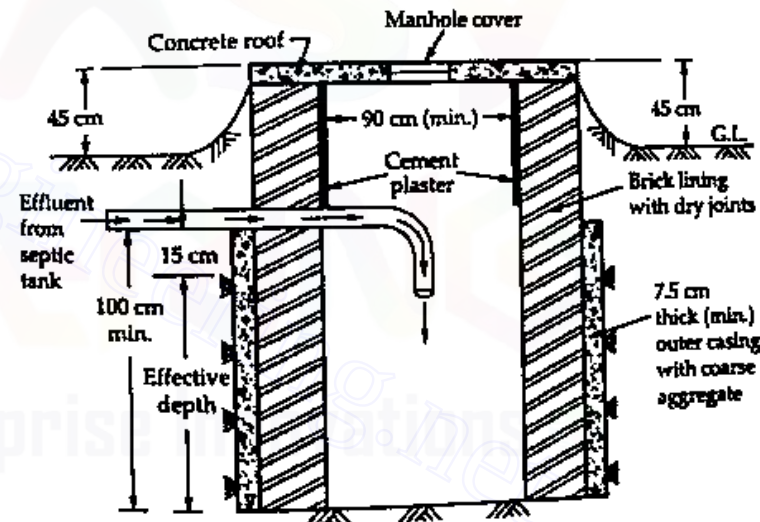


Fig. 9.55. (b) Lined soak pit.

flooding of the pit by surface run off [Fig. 9.55 (b)]. The inlet pipe may be taken down to a depth of 0.9 m from the top as an anti-mosquito measure.

For disposal in soak pits, the underground soil should be highly porous with percolation rate not exceeding 30 minutes.

(b) **Disposal in Absorption Trenches.** In this method, the septic tank effluent is allowed to enter into a masonry chamber (called distribution box), from where it is uniformly distributed through an underground network of open jointed pipes into absorption trenches, called the *dispersion trenches*, as shown in Fig. 9.56.

The suspended organic matter present in the effluent will be absorbed in the absorption trenches, which are filled with gravel and well graded aggregate, as shown (Fig. 9.56). The clearer water will seep down to the water-table. Plants are usually grown on the top of the absorption trenches, which get their irrigation water requirement fulfilled by capillarity from the seeping water in the absorption trenches.

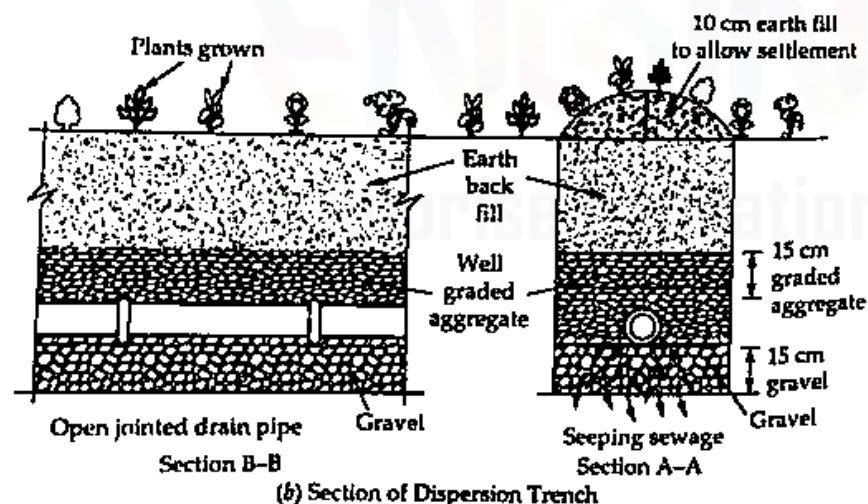
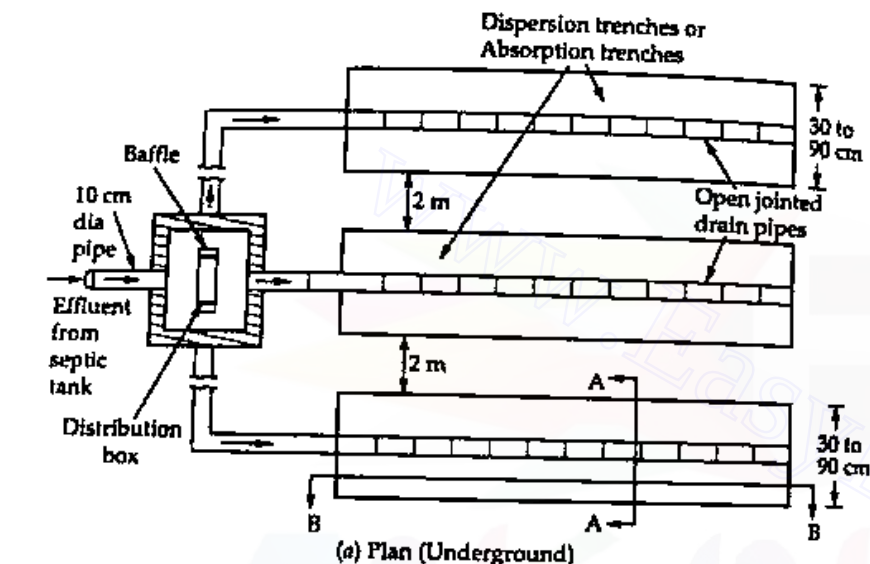


Fig. 9.56. Absorption trench method for disposal of septic tank effluent.

Dispersion trenches are not recommended in areas where fibrous roots of trees or vegetation are likely to penetrate the system and cause blockages.

Dispersion trenches may be adopted on soils having percolation rate not

The minimum absorption area of the pits or trenches required, shall be worked out on the basis of the max. allowable rate of effluent application (q), which can be computed by using the empirical equation

$$q = 130\sqrt{t} \quad \dots(9.60)$$

where q = max. rate of effluent application in $l/m^2/day$ of leaching surface

t = standard percolation rate in minutes

The standard percolation rate or percolation rate of the ground or soil is determined in a square or a circular test hole at the level of the proposed soak pit or trench. The test hole width (or dia) may be 10 to 30 cm. The rate is defined as the time in minutes required for the water to fall 1 cm. This rate is determined for the drop that occurs in the final 10 minutes of the test during a total 1 hour period of the test. At the start of the test, 30 cm water depth is impounded for 24 hour in the test hole (which is filled with 5 cm depth of gravel) to allow full swelling of soil to approximate its condition during rainy season.

The value of max. allowable rate of effluent application, as obtained from Eq. (9.60) which is given by "Manual on Sewage and Sewage Disposal" Govt. of India, is generally found to be on higher side; and hence BIS has, vide IS: 2470 (Part II) 1985, given another empirical equation for determining this rate, as:

$$q = \frac{204}{\sqrt{t}} \quad \dots(9.61)$$

where q and t have the same meaning as in Eq. (9.60).

The allowable rates of effluent application for certain selected values of percolation rates are given in table 9.12.

Table 9.12. Allowable Rates of Effluent Applications to Soil Absorption Systems

Standard Percolation rate in minutes	Maximum Rate of Effluent Application in $l/m^2/d$.
1 or less	204
2	143
3	118
4	102
6	90
10	65
15	52
30	37
45	33
60	26

Note 1. The absorption area for a dispersion trench is the trench bottom area.

Note 2. The absorption area for soak pits is the effective side wall area, effective depth being measured from 150 mm below invert level of inlet pipe to the bottom of the pit (Fig. 9.55).


Note 3. This is not applicable for soak pits.

Location of Sub-Surface Absorption System. A sub surface dispersion system shall not be installed closer than 18 m from any source of drinking water, such as a well, to mitigate the possibility of bacterial pollution of water supply. It shall also be as far away from the nearest habitable building as is economically feasible but not closer than 6 m, to avoid damage to the structures. The actual distance, however, shall be based on the soil conditions in relation to both percolation and bearing capacity. Care should be taken to see that the ground below the adjacent building is not likely to be affected by the effluent seeping into the soil.

In limestones or creviced rocks, the soil absorption system is not recommended, as there may exist channels in such formations, which may carry contamination over long distances.

9.49.3.2. Biological filters. Biological filters are suitable for treatment of septic tank effluent where the soil is relatively impervious (percolation rate > 60 minutes), or in water-logged areas, or where limited land area is available. In a biological filter, the effluent from septic tank is brought into contact with a suitable medium, the surfaces of which become coated with an organic film. The film assimilates and oxidises much of the polluting matter through the agency of micro-organisms.


The biological filter requires ample ventilation and an efficient system of under-drains leading to an outlet, as discussed earlier.

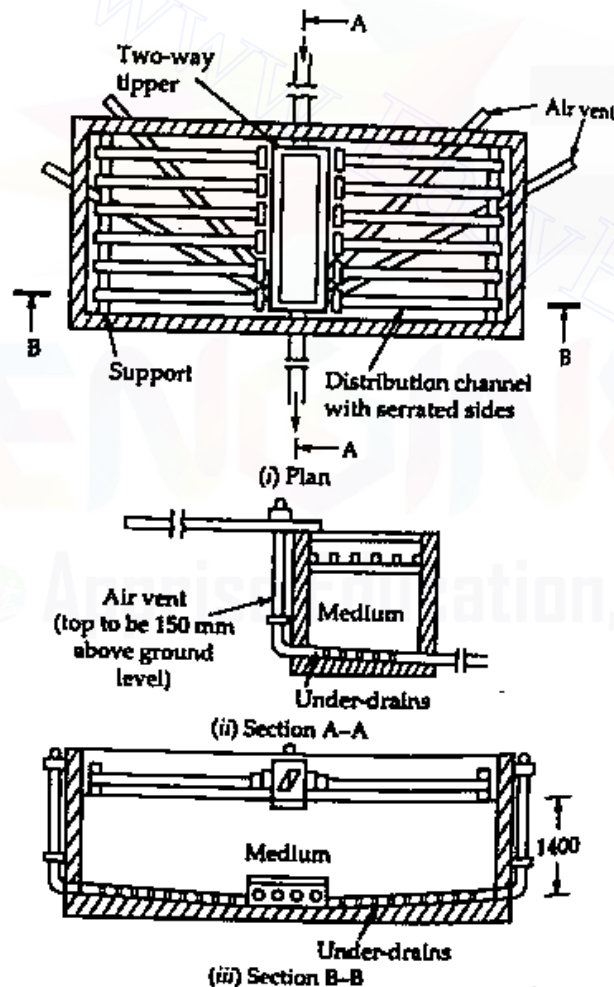

Note. Flexible joints may be required on inlet or out-

The depth of medium should be 1.4 m but never less than 0.9 m. The medium should be retained in position by walls of adequate trench. The filter should have a concrete floor, with a system of under-drains laid on it and consisting of half channels laid upside down and open-jointed, or special tiles discharging to the outlet.

Biological filters may either be rectangular or circular as shown in Figs. 9.57 (a) and (b) respectively. A series of fixed channels or rotating arm distributors may be used for distributing the effluent on the media. Adequate ventilation of biological filters is essential. Air vents communicating with the floor level of the filter should be provided. Where the filter is below the ground level, the vent pipes from the ends of the under-drains should be carried to 150 mm above the ground level outside the filter. Normally the filter should not be covered, but wire netting may be used to prevent falling of leaves fouling the surface of the filter or blocking the ends of the vent pipe.

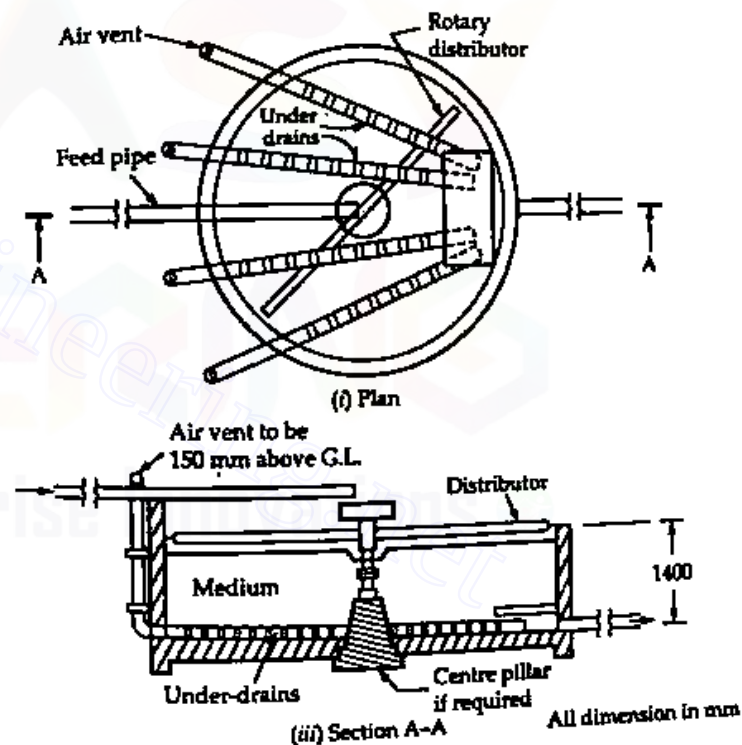

Note. Flexible joints may be required on inlet or outlet connections, where rigid pipes are used.

Fig. 9.57 (b) Circular biological filters.

It is essential that the volume of the filter medium is sufficient to allow for sewage flow which occurs with small installations, such variation being more pronounced if the smaller number of persons are served. For populations of upto 10 persons, the volume should be 1 m^3 of medium per head; for resident population of over 10 and up to 50 persons, 0.8 m^3 of medium per head; and for population of over 50 person the volume of media may be taken @ $0.6 \text{ m}^3/\text{head}$.

If pumping of the septic tank effluents forms part of the scheme, recirculation of final effluent to dilute the septic tank effluent may be introduced to reduce the volume of the filter.

The filter effluent is finally discharged into the city surface drain or sewer, or is evenly distributed over a grass plot from the system of channels. Where the effluent is likely to contaminate the water course, the effluent should be adequately disinfected.

9.49.3.3. Upflow anaerobic filters. The upflow type of filters (reverse filter) operating under submerged condition, as discussed in details in article 9.52, are also used for giving secondary treatment to the effluent of septic tank, before its final disposal. Such filters like biological filters, are used in areas which donot permit land disposal, such as in areas of high water-table, or in comparatively less porous areas, or at places where sufficient land is not available.

In such a filter, the septic tank effluent is introduced from the bottom and the microbial growth is retained on the stone media making possible higher rates and efficient digestion. The capacity of the unit is 0.04 to 0.05 m^3 per capita, or $1/3$ to $1/2$ the liquid capacity of the septic tank it serves. BOD removals of 70% can be expected and the effluent is clear and free from odour and nuisance.

Single and dpuble chambered type of rectangular upflow anaerobic filters, as shown in Figs. 9.58 (a) and (b) respectively, are generally used in conjunction with septic tanks.

In a *single chambered rectangular upflow tank* [Fig. 9.58 (a)], the chamber is packed with coarse material and the size of the packing media should be 20 mm. The stone media rests on a perforated concrete false bottom slab. The effluent from the septic tank enters the bottom of the filter chamber through a 150 mm dia pipe, and is distributed upward through the media from a perforated slab at the bottom.

The vertical inlet is fitted with a tee at the bottom, one branch of which leads to the filter and the other branch is kept plugged while the filter functions. The plug can be removed to facilitate emptying into an adjoining chamber and cleaning the filter where required. The effluent from the top of the bed is allowed to escape over a V-notch. The sill level is kept 150 mm above the top of the medium.

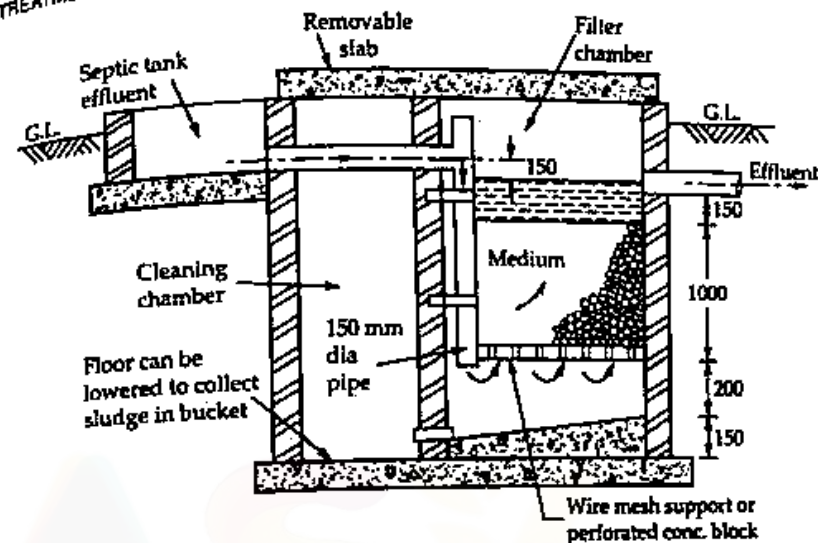


Fig. 9.58. (a) Single chambered rectangular upflow anaerobic filter.

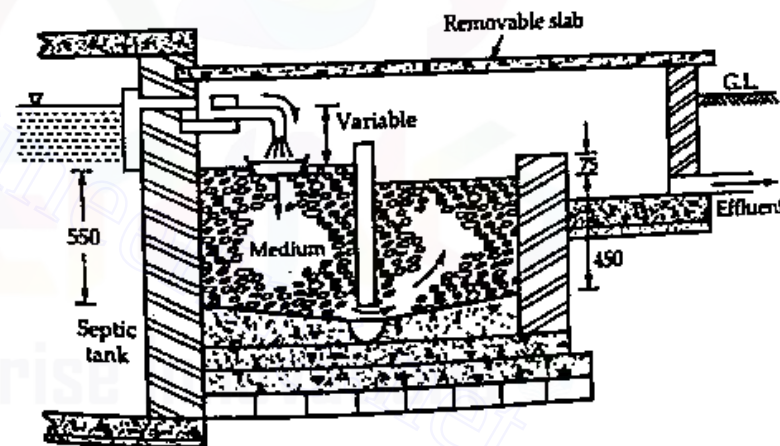


Fig. 9.58. (b) Double chambered rectangular upflow anaerobic filter.

In a *double-chambered rectangular type*, the filter consists of two inter-connected compartments. [Fig. 9.58 (b)]. The first chamber is filled to a depth of 0.55 m with 20 mm coarse medium. The second chamber is filled to a depth of 0.45 m with 20 mm size coarse aggregate. The septic tank effluent falls through a perforated tray over the medium in the first compartment and enters the second compartment directly from the bottom. The effluent passes up through the medium in the second chamber and escapes over a V-notch placed 75 mm above the top of the medium. By this arrangement, the time of travel of the effluent through the filter is lengthened.

9.49.3.4. Adoption of a particular method of disposal of septic tank effluent. The method of disposal will usually be governed

by the position of sub-soil water level, soil and sub-soil conditions, availability of sufficient land, etc. The recommended method of disposal for site conditions is shown in table 9.13.

Table 9.13. Recommended Method of Disposal for Effluents of Septic Tanks

Position of Subsoil water level (SSWL) below the ground level	Soil and Subsoil Condition		
	Porous soil with percolation rate		Dense and clayey soils with percolation rate exceeding 60 min.
	not exceeding 30 min.	exceeding 30 min. but not exceeding 60 min.	
≤ 1.8 m	Dispersion trench located partly or fully above the ground level in a mound.	Dispersion trench located partly or fully above ground level in a mound.	Biological filter partly or fully above ground level with under drains; or Upflow anaerobic filter. The final effluent is discharged into a city sewer or a drain, or used for gardening purposes.
> 1.8 m	Soak pit or Dispersion trench	Dispersion trench	Sub-surface biological filter with under-drains or Upflow anaerobic filter. The final effluent is discharged into a city sewer or used for gardening purposes.

Example 9.34. (a) Design a septic tank for the following data :

- No. of people = 100
 Sewage/capita/day = 120 litres
 De-sludging period = 1 year
 Length : width = 4 : 1. (A.M.I.E., Section B, 1976)

(b) What would be the size of its soak well if the effluent from this septic tank is to be discharged in it. Assume percolation rate through the soak well to be 1250 l/m³/d.

Solution. Quantity of sewage produced per day = 12,000 litres/day.

Assuming the detention period to be 24 hours, we have

The quantity of sewage produced during the detention period, i.e. the capacity of the tank

$$= 12,000 \times \frac{24}{24} = 12,000 \text{ litres.}$$

Now assuming the rate of sludge deposit as 30 litres/capita/year, and with the given 1 year period of cleaning, we have

The quantity of sludge deposited
 $= 30 \times 100 \times 1 = 3,000 \text{ litres.}$

Total required capacity of the tank
 $= 12,000 + 3,000 = 15,000 \text{ litres.} = 15 \text{ cu-m.}$

Assuming the depth of the tank as 1.5 m, the cross-sectional area of the tank

$$= \frac{15}{1.5} = 10 \text{ m}^2$$

Using $L : B$ as 4 : 1 (given), we have

$$4B^2 = 10$$

$$B = \sqrt{2.5} = 1.5 \text{ m.}$$

or

$$L = 4 \times 1.5 = 6 \text{ m.}$$

∴ The dimensions of the tank will be 6 m × 1.5 m × (1.5 + 0.3 m) as overall depth with 0.3 m free-board. Hence, use a tank of size 6 m × 1.5 m × 1.8 m. **Ans.**

(b) *Design of Soak-well*

The soak-well or soak-pit can be designed by assuming the percolating capacity of the filtering media as 1250 litres per cu-m per day (as given).

Sewage outflow = 12000 l/d

Percolation rate = 1250 l/m³/d

∴ Volume (of filtering media) required for the soak-well

$$= \frac{12000 \text{ l/d}}{1250 \text{ l/m}^3/\text{d}} = 9.6 \text{ m}^3$$

If the depth of the soak well is taken as say 2 m, then

Area of soak-well required

$$= \frac{9.6}{2} = 4.8 \text{ m}^2.$$

∴ Dia of soak-well required

$$= \sqrt{\frac{4.8 \times 4}{\pi}} = 2.47 \text{ m; say 2.5 m. Ans.}$$

Example 9.35. Estimate the size of a septic tank (length to width ratio 2.25, liquid depth 2 m with 300 mm freeboard), desludging intervals in years, and the total trench area (m²) of the percolation field, for a small colony of 300 people. Assume water supply of 100 litres per capita per day, waste water flow at 80% of water consumption, sludge production of 0.04 cubic metre per capita per year, and the retention time of 3 days at start up. Desludging is done when the tank is one-third full of sludge. A percolation test indicated an allowable hydraulic loading of 100 L per square metre per day. (GATE—1995)

Solution.

(i) Size of the tank = ?

(ii) Desludging interval in years = ?

(iii) Total trench area of percolation fields in m² = ?

Given : $\frac{L}{B} = 2.25$

$$D_w = 2 \text{ m}$$

Free-board = 0.3 m

Water supply = 100 L/c/day
 Waste flow = 80% of water supplied
 Sludge production = 0.04 m³/c/year
 Retention time = 3 days

Using the above data, we have

Water supply to the colony = 100 L/c/d × 300 persons = 30,000 L/d
 Sewage produced per day = 80% × 30,000 L/d = 24,000 L/d.
 Sewage produced in 3 days (i.e. during retention period at start up)
 = 3 × 24,000 L/d = 72,000 L = 72 m³.

Desludging is done when the tank is filled up to $\frac{1}{3}$ rd of its capacity (C).

Hence, sludge volume collected is $\frac{C}{3}$.

∴ Capacity (C) = Max. Sewage volume retained
 + Sludge volume retained

or $C = 72 \text{ m}^3 + \frac{C}{3}$

∴ $\frac{2}{3} C = 72 \text{ m}^3$

$C = 72 \times \frac{3}{2} = 108 \text{ m}^3$

Hence, the capacity of the tank = 108 m³

But $C = L \times B \times D$
 = (2.25B) (B) (2 m) = 108 m³

∴ $B^2 = \frac{108}{4.5} = 24$

$B = 4.9 \text{ m}$

$L = 2.25 \times 4.9 = 11.1 \text{ m}$ (say)

(i) Hence, the tank size

= 11.1 m × 4.9 m × (2 + 0.3 m) depth. Ans.

Sludge volume removed in desludging = $\frac{C}{3} = 36 \text{ m}^3$.

Sludge produced per year = $0.04 \frac{\text{m}^3}{\text{capita} \cdot \text{year}} \times 300 \text{ persons}$
 = 12 m³/year

36 m³ of sludge will therefore be produced in

= $\frac{1}{12} \times 36 \text{ years} = 3 \text{ years}$.

(ii) Hence, desludging interval = 3 years. Ans.

Hydraulic loading of percolation trench
 = 100 L/m²/day.

Outflowing sewage per 1 day = 24 m³ = 24,000 L/d.

(iii) ∴ Trench area reqd. = $\frac{24,000 \text{ L/d}}{100 \text{ L/m}^2/\text{d}} = 240 \text{ m}^2$. Ans.

Example 9.36. Design the absorption field system for the disposal of septic tank effluent for a population of 100 persons with sewage flow rate of 135 lpcd. The percolation rate for the percolation test carried out at the site of the absorption field may be taken as 3 minutes. (Civil Services, 1997)

Solution. Total sewage flow

= 135 lpcd × 100 persons = 13,500 l/day

For dispersion trench (Fig. 9.56), the maximum rate of effluent application, is given by BIS Eq. (9.61) as :

$q = \frac{204}{\sqrt{t}} \text{ l/d/m}^2$, where t is in minutes = 3 min

∴ $q = \frac{204}{\sqrt{3}} = 117.78 \text{ l/d/m}^2$

∴ Area of Trench required = $\frac{13,500}{117.78} \text{ m}^2 = 114.62 \text{ m}^2$

Using 0.75 m bottom width of the trench, the length of the trench

= $\frac{114.62}{0.75} = 153 \text{ m}$.

Depending upon the availability of space, we may use say 3 no. trenches,

each of length $\frac{153}{3} = 51 \text{ m}$, as per Fig. 9.56. Ans.

9.49.4. Advantages and Disadvantages of Septic Tanks. They are enumerated below :

Advantages

(i) Septic tanks can be easily constructed, and do not require any skilled supervision during construction. Moreover, there is no maintenance problem (except periodical cleaning) as there is no moving part in it.

(ii) Their cost is reasonable compared to the advantages and sanitation they offer in rural or semi-urban areas, where no sewage system has been laid.

(iii) An excellently functioning septic tank can considerably reduce the suspended solids and BOD from sewage.

(iv) The sludge volume to be disposed of is quite less, as compared to that in a normal sedimentation tank. The quantity is reduced due to digestion taking place in the tank itself. The reduction in volume is about 60%, and reduction in weight is about 30%.

(v) The effluent from the septic tank can be disposed of on land in a soak-pit or a cess-pool, without much trouble.

(vi) They are best suited for isolated rural areas, and for isolated hospitals, buildings, etc.

Disadvantages

(i) If the tank is not properly functioning, which happens many a times, then the effluents will be very foul, dark, and even worse than the influent.

- (ii) They require too large sizes for serving many people.
- (iii) Leakage of gases from the top cover of septic tank may cause bad smells and environmental pollution.
- (iv) Periodical cleaning, removal and disposal of sludge remains a tedious problem.
- (v) The working of a septic tank is unpredictable and non-uniform.

9.50. Imhoff Tanks

An Imhoff tank is an improvement over septic tank, in which the incoming sewage is not allowed to get mixed up with the sludge produced, and the outgoing effluent is not allowed to carry with it large amount of organic load, as in the case of a septic tank. An Imhoff tank is, in fact, a two storeyed tank, and was designed by a German scientist Mr. Karl Imhoff. They are sometimes also known as *Two-storey Digestion Tanks*.

9.50.1. Constructional Details. The typical details of an Imhoff tank are shown in Fig. 9.59. It is a double chamber rectangular tank. The upper chamber is called the *sedimentation chamber* or *flowing through chamber*, through which the sewage flows at a very low velocity; and the lower chamber is the *digestion chamber*, in which the sludge gets digested due to anaerobic decomposition.


The solids of the slowly moving sewage, settling down to the bottom of the sedimentation chamber, through the sloping bottom sides of the sedimentation chamber (slope being 1.25 vertical to 1 horizontal, as shown) will slide down into the digestion chamber through an *entrance slot* at the lowest point of a sedimentation chamber. The slot (with minimum width as 15 cm) is trapped or overlapped in such a way that the gases generated in the digestion chamber cannot enter the sedimentation chamber, and thus avoiding direct contact of sewage with the foul gases, and its consequent pollution.

A *Gas vent* also called *Scum chamber* is also provided above the digestion chamber and along side the sedimentation chamber to take care of the gases escaping to the surface. The chief gas is methane, having a considerable fuel value, and may, therefore, be separately collected for use.

In order to prevent the particles of sludge or scum from entering into the sedimentation chamber from the digestion chamber, the scum and sludge must be maintained at least 45 cm above and below the slots, respectively. This free or clear zone is called the *neutral zone*.

The digestion chamber (i.e. the lower chamber) is divided into a number of (three to four generally) interconnected compartments as shown. The bottom of each digestion compartment is made up in the form of an *inverted cone* or *hopper* with sides sloping 1 : 1, so as to concentrate the sludge at the bottom of the hopper. The digested sludge from the bottom of the hoppers is removed periodically (after 1 to 1½ months, depending upon the temperature of sludge) through the cast-iron de-sludging pipes provided in each compartment. The sludge is removed with flow under hydrostatic pressure of 1.2 to 1.8 m.

TREATMENT OF SEWAGE

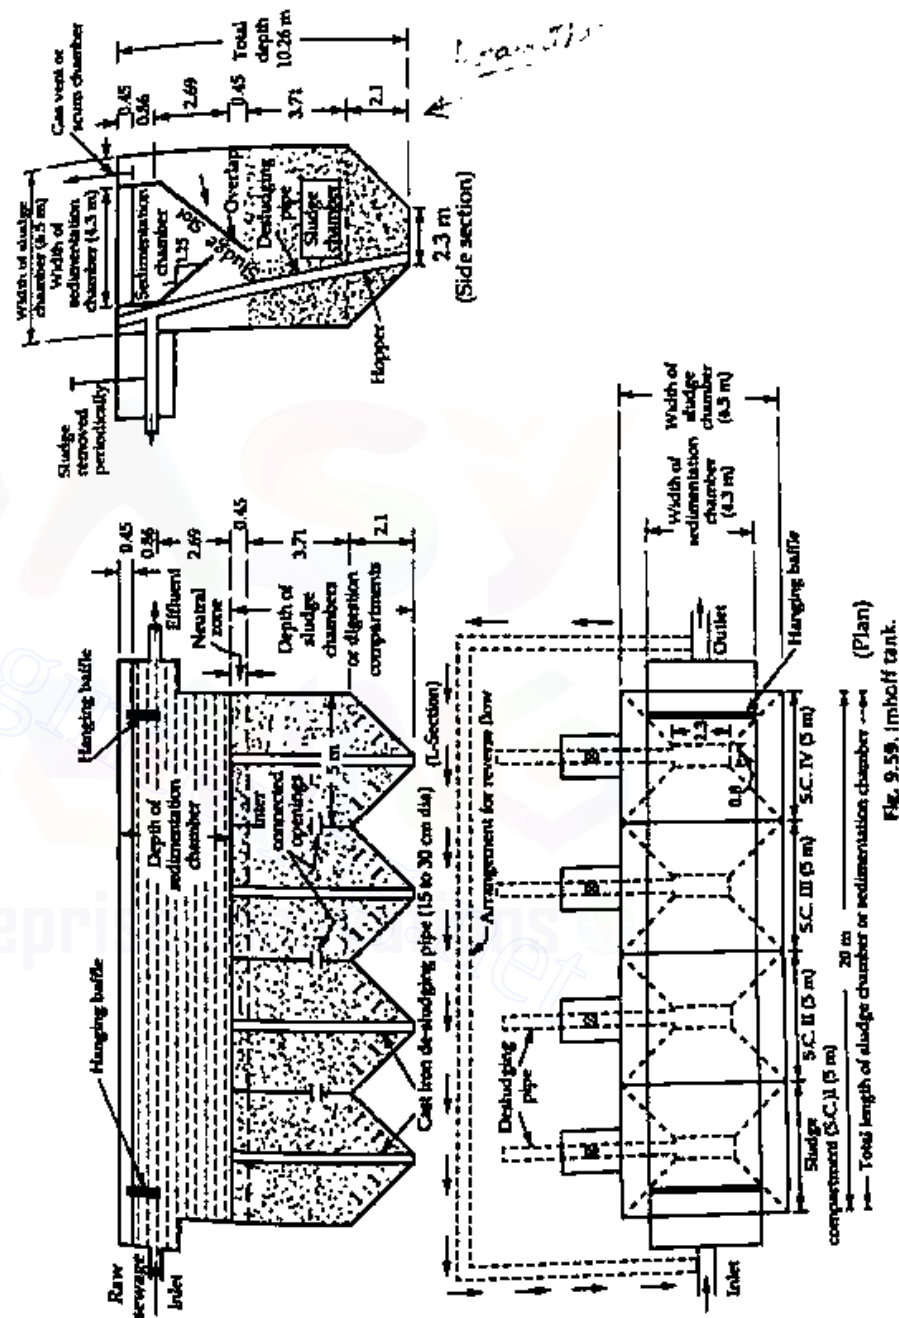

completely digested, are withdrawn, leaving some sludge to keep the tank seeded with anaerobic bacteria. The removed sludge may be dried and disposed of in a sanitary manner. Further, in order to ensure uniform distribution of solids in the different hoppers, the flow of sewage in the sedimentation compartment above, is reversed intermittently.

9.50.2. Design Considerations. In designing Imhoff tanks, the following important design points may be kept in mind :

(A) **Sedimentation Chamber.** It is rectangular in shape with the following specifications :

(i) Detention period = 2 to 4 hours (usually 2 hours)

(ii) Flowing through velocity = should not be more than 0.3 m/minute.

(iii) Surface loading = should not exceed 30,000 litres/m² of plan area/day. It may, however, be increased to about 45,000 l/m²/day for effluent coming from activated sludge plant, or where recirculation is adopted.

(iv) Length of the tank should preferably not exceed 30 m or so, as to provide good sludge distribution. Length to width ratio may vary between 3 to 5.

(v) Depth of this chamber should as far as possible be kept shallow, so as to permit sliding of the solids up to the slot before reaching the end of the sedimentation. In practice, a total depth of 9 to 11 m has been found sufficient for Imhoff tanks ; with the depth of sedimentation chamber as about 3 to 3.5 m or so. The free-board provided may be about 45 cm.

(B) **Digestion Chamber.** This chamber is generally designed for a minimum capacity of 57 litres per capita*. But in warmer climates, where shorter periods between sludge withdrawals are possible, it may be reduced to about 35 to 40 litres per capita.

(C) **Gas Vent or Scum Chamber.** The surface area of the scum chamber should be about 25 to 30 per cent of the area of the horizontal projection of the top of the digestion chamber. Sufficient area for escape of gases is necessary, so as to prevent troubles due to foaming. Moreover, the width of a vent should be 60 cm or more.

9.50.3. Advantages and Disadvantages of Imhoff Tanks. Imhoff tanks combine the advantages of both the septic as well as sedimentation tanks, and as such, they find use in case of small treatment plants requiring only primary treatment. They are quite economical, and do not require skilled attention during operations. The results obtained are quite good, with 60 to 65% removal of solids, and 30 to 40% removal of BOD. Moreover, there is no problem of sludge disposal, as in the case of sedimentation tanks. They suffer, however, from the following drawbacks :

(i) Depth of tank is more, which may make the constructions costlier, especially in hard rocks or quick sands. At such places, these tanks may, thus become uneconomical.

*This is larger than that provided in separate digestion tanks because of the lack of control on temperature of digestion (since there is no heating arrangement in Imhoff tanks) and

(ii) Imhoff tanks may give out offensive odours, when improperly operated.

(iii) They are unsuitable and do not function properly where sewage is highly acidic in character.

(iv) These tanks have a tendency to foam or boil. This may cause the scum to go up to the top of the tank, and it may also force the sludge particles to enter the sedimentation chamber through the slot. The foaming may, thus, adversely affect the quality of the effluent.

(v) There is no adequate control over their operation. This makes them unsuitable for use in large treatment plants, where separate sludge digestion tanks are preferred in addition to sedimentation tanks. Imhoff tanks are, therefore, useful only for small cities and institutions, where it is not possible or economical to install separate sludge digestion tanks. Mostly, however, they have become obsolete these days.

Example 9.37. Design an Imhoff tank to treat the sewage from a small town with 30,000 population. The rate of sewage may be assumed as 150 litres per head per day. Make suitable assumptions, wherever needed.

Solution.

Design of Sedimentation Chamber

The sewage discharge per day

$$= 30,000 \times 150 = 4.5 \text{ M. litres/day} = 4500 \text{ cu-m/day}$$

Assuming a detention period of sewage in the sedimentation chamber as 2 hours, we have

The volume of sewage entering in two hours, i.e. the capacity of the sedimentation chamber

$$= 150 \times 30,000 \times \frac{2}{24} \text{ litres} = 3,75,000 \text{ litres} = 375 \text{ cu-m.}$$

Assume an effective depth of 2.2 m (effective depth includes part of the bottom sloping walls of the chamber) and a width of 4.3 m (say).

The length of the sedimentation chamber

$$= \frac{375}{2.2 \times 4.3} = 39.64 \text{ m ; say } 40 \text{ m.}$$

This length is too large for a single tank. So let us adopt two tank units, each of length 20 m and width 4.3 m ; then

$$\frac{L}{B} = \frac{20}{4.3} = 4.65$$

which is between 3 to 5 and, therefore, satisfactory.

Now, discharge passing through each unit

$$= \frac{1}{2} \text{ of the total discharge} = \frac{4.5}{2} \text{ M. litres/day} = 2.25 \text{ M. litres/day}$$

Check for velocity

Length of tank = Velocity $\times$ Detention time

$$20 \text{ m} = \text{Velocity in m/min} \times (2 \times 60 \text{ min.})$$

∴ Velocity in m/min

$$= \frac{20}{2 \times 60} = 0.17 \text{ m/min} < 0.3 \text{ m/min};$$

and, therefore, Safe.

Check for Surface Loading

$$\text{Surface loading} = \frac{Q}{BL} = \frac{225 \times 10^6}{4.3 \times 20} = 26,162 \text{ l/m}^2/\text{day}$$

which is less than 30,000 l/m²/day ; and, therefore, satisfactory. Hence, the dimensions chosen can be accepted.

Now let us decide the depth of the rectangular and sloping portions of the sedimentation chamber with its effective depth as 2.2 m.

With 4.3 m width and bottom sides sloping at 1 H : 1.25 V, the height of the sloping bottom = $x = 1.25 \times 2.15 = 2.69 \text{ m}$ (Fig. 9.60).

Now, with effective depth of 2.2 m, the height of the vertical portion below the liquid surface (y) is given by

$$y = 2.2 - \frac{1}{2} (2.69)^* \\ = 2.2 - 1.345 = 0.855; \text{ say } 0.86 \text{ m.}$$

Adding 0.45 m for the free board, the total depth of the sedimentation chamber up to bottom at the entrance of the slot

$$= 0.45 + 0.86 + 2.69 = 4.00 \text{ m.}$$

Design of Gas Vent and Neutral Zone

Provide a neutral zone of 0.45 m below this depth of 4 m. The tank, in general, is of 20 m length, but below this 4.0 m depth, it shall be divided into a number of compartments, say 4, each of length

$$\frac{20}{4} = 5 \text{ m.}$$

The area of gas vent has now to be provided on both sides of the sedimentation chamber. This width should be about 25 to 30% of the total width of the tank. Using an overall width of 6.5 m, the total width of the gas vent (i/c both sides of sedimentation chamber), assuming 15 cm thickness of chamber walls

$$= 6.5 - 4.3 - 2 \times 0.15 = 1.9 \text{ m};$$

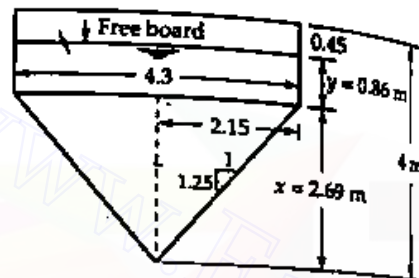


Fig. 9.60

This is about $\frac{19}{6.5} \times 100 = 29.23\%$ of the total width, and therefore, OK (between 25 to 30%). Hence, 0.95 m width of gas vent will be provided on either side of the sedimentation chamber.

Design of Digestion Chamber

Assuming the capacity of the digestion chamber @ 40 litres/capita, we have

The capacity of the digestion chamber

$$= 30,000 \times 40 = 12 \times 10^5 \text{ litres} = 1200 \text{ cu-m.}$$

Now, considering four compartments or units per tank (8 units in both tanks with 6.5 m width), we have

The capacity of each unit or compartment

$$= \frac{1200}{8} = 150 \text{ cu-m.}$$

Now, assume the depth of each hopper as 2.1 m, side slopes 1 : 1, and bottom section as

$$(6.5 - 2 \times 2.1 = 2.3 \text{ m}) \times (5 - 2 \times 2.1 = 0.8)$$

Capacity of each hopper

$$= \frac{h}{3} [A_1 + A_2 + \sqrt{A_1 A_2}]$$

where $h = 2.1 \text{ m}$

$$A_1 = 6.5 \times 5 \text{ m} = 32.5 \text{ m}^2$$

$$A_2 = 2.3 \text{ m} \times 0.8 \text{ m} = 1.84 \text{ m}^2 \text{ [See Fig. 9.61]}$$

∴ Capacity of each hopper

$$= \frac{2.1}{3} [32.5 + 1.84 + \sqrt{32.5 \times 1.84}] \\ = 0.7 [32.5 + 1.84 + 7.73] = 0.7 [42.07] = 29.45 \text{ m}^3.$$

Balance capacity to be provided by rectangular portion of section $6.5 \text{ m} \times 5 \text{ m}$

$$= 150 - 29.45 = 120.55 \text{ m}^3.$$

∴ Height of this portion

$$= z = \frac{120.55}{6.5 \times 5} = 3.71 \text{ m.}$$

∴ Total height of digestion chamber including neutral zone

$$= 0.45 + 3.71 + 2.1 = 6.26 \text{ m}$$

Total height of tank from top to bottom

= Height of sedimentation chamber

+ Height of sludge chamber

$$= 4 + 6.26 = 10.26 \text{ m.}$$

This height is well within the practical limits (of 9 to 11 m) and hence the design is O.K. The plan, L-section and cross-section of the tank with these dimensions are shown in Figs. 9.60, 9.61 and 9.62 respectively.

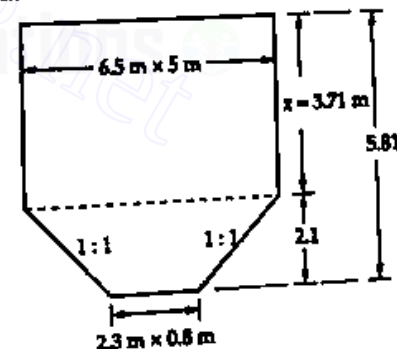


Fig. 9.61

Example 9.38. Design an Imhoff-tank to treat the sewage from a small town with 30,000 population, assuming that the suspended solids in the influent sewage are 200 ppm. Water content of sludge is 97 per cent. Design the tank for three months sludge storage. Rate of sewage is 135 litres per head per day. (Engg. Services, 1968)

Solution.

Design of Sedimentation Chamber

The sewage discharge per day = $30,000 \times 135$ litres
 $= 4.05$ M-litres/day = 4050 cu. m/day

Assuming a detention period for sewage in the sedimentation chamber as 2 hours, we have

The volume of sewage entering in two hours, i.e. the capacity of the sedimentation chamber

$$= 4050 \times \frac{2}{24} \text{ cu.-m.} = 337.5 \text{ cu.-m.}$$

Assuming an effective depth of 1.5 m (effective depth includes part of the bottom sloping walls of the chamber) and a width of 4.5, we have

The length of the sedimentation chamber

$$= \frac{\text{Capacity}}{\text{Area of X-section}} = \frac{337.5}{4.5 \times 1.9} = 39.5 \text{ m ; say } 40 \text{ m.}$$

This length is too long for a single tank. So let us adopt two units, each of length 20 m, and width 4.5 m. Then $\frac{L}{B} = \frac{20}{4.5} = 4.42$, which is between 3 to 5, and hence satisfactory.

Now, discharge passing through each unit

$$= \frac{1}{2} \text{ of the total discharge} \\ = \frac{4.05 \text{ M. litres per day}}{2} = 2.025 \text{ M. litres per day.}$$

Check for velocity in the sedimentation tank

Length of the tank = Velocity $\times$ Detention time

$$\text{or } 20 = V \times (2 \times 60)$$

$$\text{or } V = \frac{20}{2 \times 60}$$

$$= 0.167 \text{ m/minute} < 0.3 \text{ m/minute ;} \\ \text{and therefore satisfactory.}$$

Check for surface loading in the sedimentation tank

$$\begin{aligned} \text{Surface loading} &= \frac{Q}{BL} = \frac{2.025 \times 10^6}{4.5 \times 20} \\ &= 22,500 \text{ litres/m}^2 \text{ of plan area/day} \\ &= < 30,000 ; \text{ and, therefore, satisfactory.} \end{aligned}$$

TREATMENT OF SEWAGE

Hence, the dimensions chosen are satisfactory and acceptable.

Now, let us decide the depth of rectangular and triangular portions of the sediment chamber.

With 4.5 m width and bottom sides sloping at 1 H : 1.25 V, the height of the sloping triangular portion,

$$x = 2.25 \times 1.25 = 2.81 \text{ m.}$$

(Fig. 9.62)

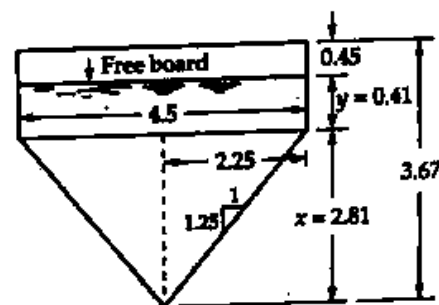


Fig. 9.62

Now, with effective depth of 1.9 m, the height of vertical portion below the liquid surface, i.e. y , is given as :

$$y = 1.9 - \frac{1}{2} (2.81)^2 = 1.9 - 1.405 = 0.405 \text{ m ; say } 0.41 \text{ m.}$$

Assuming 0.45 m free-board above the top liquid line, the total depth of the sedimentation chamber upto the bottom at the entrance of the slot

$$= 0.45 + 0.41 + 2.81 = 3.67 \text{ m.}$$

Design of Gas Vent and Neutral Zone

Provide a neutral zone of 0.45 m below this depth of 3.67 m. The tank in general is of 20 m length, but below this 3.67 m depth it shall be divided into a

number of compartments, say 4, each of length $\frac{20}{4} = 5 \text{ m.}$

The area of gas vent has now to be provided on both sides of the sedimentation chamber. This width should be about 25 to 30% of the total width of the tank. Using an overall width of 6.5 m, the total width of gas vent (including both sides of sedimentation tank), and assuming 15 cm thickness of chamber walls

$$= 6.5 - 4.5 - 2 \times 0.15 = 1.7 \text{ m.}$$

This is about $\frac{1.7}{6.5} \times 100 = 26.2\%$ of the total width, and therefore, O.K. (it is

between 25 to 30%). Hence $\frac{1.7}{2} = 0.85 \text{ m}$ width of gas vent, will be provided on either side of the sedimentation chamber.

Design of Digestion Chamber

The suspended solids present in sewage are 200 ppm. Hence in one tank in which the volume of sewage entering is @ 2.025 M. litre/day, the volume of sewage solids

$$= 2.025 \times 10^6 \times \frac{200}{10^6} \text{ litres/day} = 405 \text{ litres/day.}$$

Assuming 50% solid removal (given), the volume of sewage solids to be removed in each tank

$$= \frac{405}{2} = 202.5 \text{ litres/day.}$$

The water content of sludge is 97%, which means that 3 litres of solids will make 100 litres of sludge.

The volume of sludge containing 202.5 litres of solids

$$= \frac{100}{3} \times 202.5 \text{ litres/day} = 6750 \text{ litres/day.}$$

Assuming the volume of the digested sludge to be one third of that of the undigested sludge, we have

The volume of the digested sludge

$$= \frac{1}{3} \times 6750 = 2250 \text{ litres/day.}$$

The average of the undigested (new) and the digested sludge volumes in the tank, stored during 3 months (i.e. 3×30 days) is given by

$$C = \frac{(V_1 + V_2) \times t}{2}$$

$$= (6750 + 2250) \times \frac{1}{2} \times (30 \times 3 \text{ i.e. No. of days})$$

$$= 9000 \times \frac{1}{2} \times 90 = 4,05,000 \text{ litres} = 405 \text{ cu-m.}$$

Since the digestion chamber has 4 compartments (per tank) each of 6 m length,

The sludge capacity required per compartment

$$= \frac{405}{4} = 101.25 \text{ cu-m.}$$

Now, assume the depth of each hopper as 2.0 m, side slopes 1 : 1 and bottom section as $(6.5 - 2 \times 2.0 = 2.5 \text{ m}) \times (5 - 2 \times 2 = 1 \text{ m})$

Capacity of each hopper

$$= \frac{h}{3} [A_1 + A_2 + \sqrt{A_1 A_2}]$$

where $h = 2.0 \text{ m}$

$$A_1 = 6.5 \text{ m} \times 5 \text{ m} = 32.5 \text{ m}^2$$

$$A_2 = 2.5 \text{ m} \times 1 \text{ m} = 2.5 \text{ m}^2$$

∴ Capacity of each hopper

$$= \frac{2}{3} [32.5 + 2.5 + \sqrt{32.5 \times 2.5}]$$

$$= \frac{2}{3} [35 + 9] = \frac{88}{3} = 29.3 \text{ m}^3.$$

Balance capacity to be provided by rectangular portion

$$= 101.25 - 29.3 = 71.95 \text{ m}^3.$$

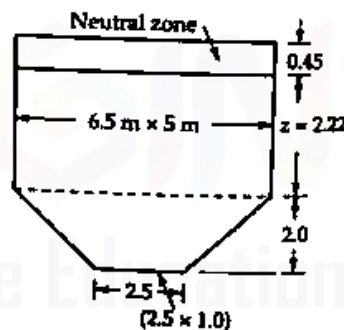


Fig. 9.63

TREATMENT OF SEWAGE

Height of rectangular portion

$$z = \frac{71.95}{6.5 \times 5} = 2.22 \text{ m.}$$

∴ Total height of the digestion tank including neutral zone
 $= 0.45 + 2.22 + 2.0 = 4.67$

∴ Total height of the Imhoff tank from top to bottom
 $= 3.67 + 4.67 = 8.34 \text{ m, which is within limits, and so O.K.}$

The tank cross-section is shown in Fig. 9.64.

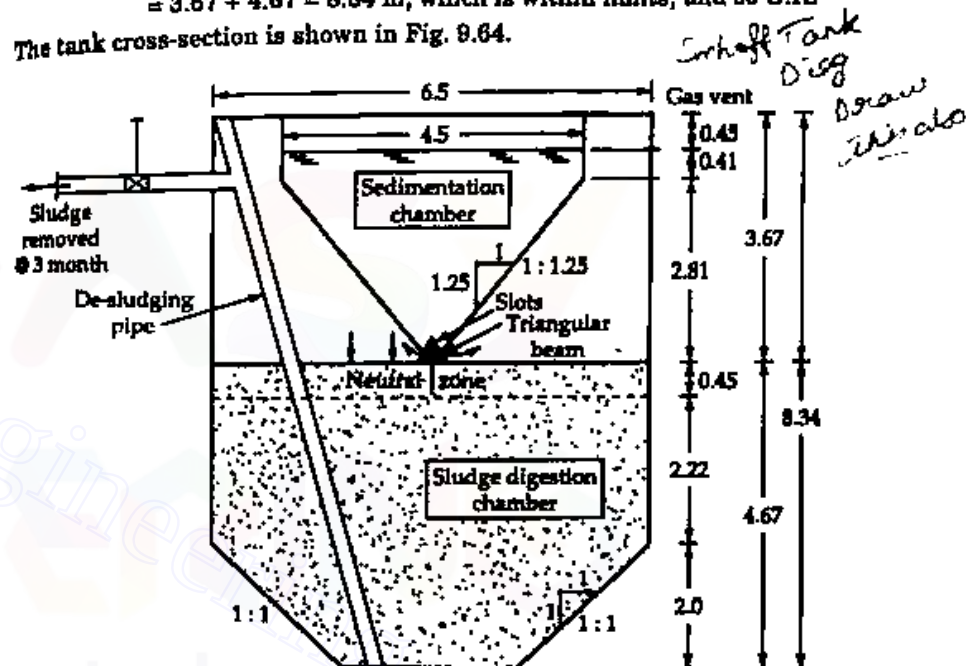


Fig. 9.64. Cross-section of Imhoff Tank of example 9.38 (2 Tanks of 20 m length etc.)

9.51. Clarigesters

Clarigesters are small patented circular Imhoff type double storé tanks, without bottom hoppers, and fitted with mechanical sludge and scum breaking equipment. Since the hoppers are omitted in them, their depth is generally less than 6 m or so, due to which they can be easily and economically constructed in areas where deep excavations are difficult.

These tanks function exactly like Imhoff tanks, with their upper compartment settling the sewage, and passing the sludge to the lower compartment. The sludge is digested in the lower compartment, and removed under hydrostatic pressure, from time to time.

Such small compact units are quite useful for treating limited sewage from small and isolated colonies, institutions, hospitals, etc. Effluents from such tanks are foul, and should be disposed of carefully, like those from Imhoff tanks.

9.52. High Rate Anaerobic Systems

Although the anaerobic treatment of wastewaters has been adopted since the beginning of the century, yet conventionally, the anaerobic process is considered to be a slow process, requiring digestors of large hydraulic retention time (HRT). In recent years, however, *high rate anaerobic systems* have been devised and constructed to treat concentrated industrial wastewaters and for direct treatment of municipal wastewaters.

Application of anaerobic treatment technology to municipal wastewaters is quite significant for a developing country like India, because of high energy savings and low capital and OMR costs involved in such technologies, as compared to those involved in the conventional aerobic systems.

High rates of conversion of organics into methane and carbon dioxide, by anaerobic treatment process, can be obtained by maintaining a high concentration of microbes in a reactor, and preventing them from escaping with the effluent. This concept is expressed by *Sludge Retention Time (SRT)*, being the ratio of the mass of biological solids in the system to that escaping from the reactor. Maximal SRT is therefore, desirable for the stability of an anaerobic system and for minimising sludge production. This will however, tend to increase the reactor volume, which will increase the capital cost, because minimal HRT minimises the reactor volume. Other requirements of high rate systems are: (i) intimate contact between the incoming wastewater and the detained biological solids in the reactor, and (ii) maintenance of sufficiently warm temperatures.

The various high rate anaerobic systems, that have been devised, include:

- Anaerobic contact (AC) process;
- Anaerobic filters (AF);
- Anaerobic fixed films (AFF) reactors;
- Fluidized bed (FB) reactor; and
- Upflow Anaerobic Sludge Blanket (UASB) reactor.

The basic configurations of these systems are shown in Fig. 9.63 (a) to (e).

All the above systems are briefly discussed below except the last one, which is discussed in more details, due to its successful working.

In any event, these reactors usually provide a little bit of incomplete treatment, bringing down the BOD and S.S. by 50 to 70% only. Their effluents may therefore need post treatment either by *aerobic filters*, *aerated lagoons*, etc.; or by *holding pond* of 1 day detention time, followed by *fish pond/aqua culture pond*.

9.52.1. Anaerobic Contact (AC) Process. The system involves a closed stirred tank reactor, in which the biomass leaving with the reactor effluent, is settled in a sedimentation tank and is recycled to the stirred tank, as shown in Fig. 9.65 (a), to increase SRT. Continuous and complete mixing in the reactor is not recommended, since this may adversely affect the settling characteristics of the sludge. On the other hand, inadequate mixing may lead to the formation of dead zones inside the reactor. This process has been

9.52.2 Anaerobic Filter (A.F.). In an anaerobic filter, a *stationary filter media*, consisting of crushed rock of 15–25 mm size, or plastic beads, etc. are packed in a closed tank, and the wastewater is entered from the bottom to move up the packing media, as shown in Fig. 9.65 (b). The sludge is entrapped in the void space between the packing material. The effluent is recycled to increase SRT of the reactor. The reactor is operated as an upflow submerged bed reactor.

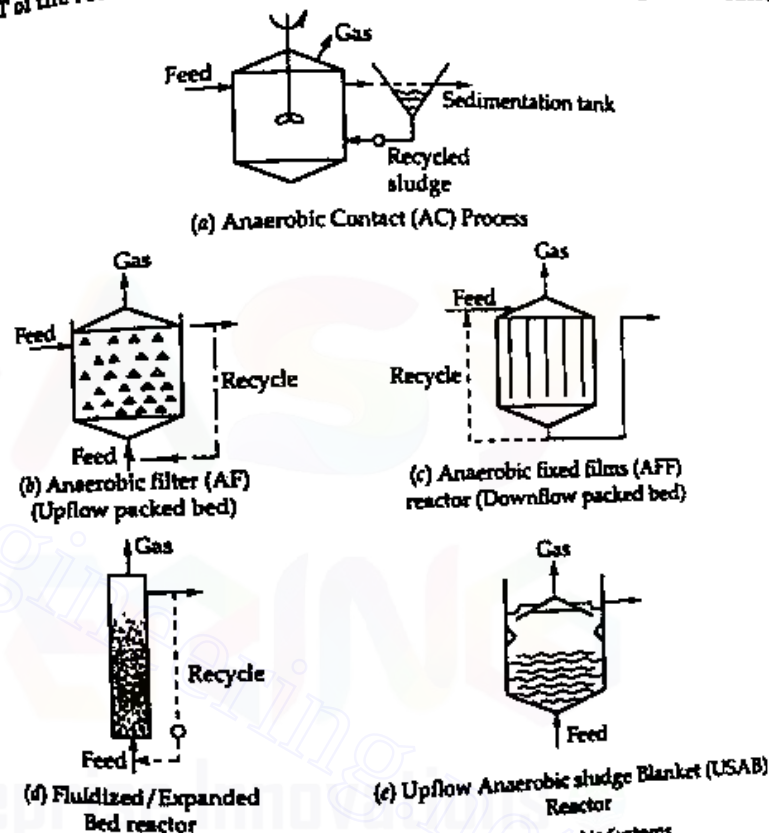


Fig. 9.65. Basic Configurations of High Rate Anaerobic Systems.

A number of such filters have been constructed for treatment of low strength municipal wastewaters. 65 to 75% efficiency in removal of BOD and SS, at volumetric organic loading of the order of 0.3–1.2 kg of COD/m³.d, has been obtained.

The organic matter in wastewater can be expressed in terms of BOD or COD. In anaerobic treatment systems, however, the COD value is finding greater usage, which lends itself directly to mass balance calculations. Reduction in COD for municipal wastewaters would normally correspond to approximately equivalent amount of reduction in ultimate BOD, since non-biodegradable solids are negligible in such wastewater.

SRT, which is a more rational design parameter, is however, difficult to be calculated for anaerobic reactors. For AC and UASB, it ranges between 15 to 30 days; while for other systems, it is estimated to be about 100 days or more giving them greater operational

9.52.3. Anaerobic Fixed Films (AFF) Reactors. Like an anaerobic filter (AF), this process is also characterised by the presence of a *stationary packing material* in the reactor, but here the aim is to avoid entrapment of suspended solids in the voids of the packing material. In order to prevent accumulation of solids in the reactor, the AFF reactor is worked with *downflow mode*, as shown in Fig. 9.65 (c). The reactor may be operated either in submerged or unsubmerged condition. The reactor packing is usually of modular construction, consisting of plastic sheets, providing a high void ratio. Such amount of suspended solids, such as screened manures.

9.52.4. Fluidized and Expanded Bed Reactors. A *fluidized bed reactor* as well as an *expanded bed reactor* [Fig. 9.65 (d)] are both characterised by the presence of *mobile packing material*, such as sand, clay, coal, etc. The organics and the microbes in the reactor get attached to these particles, with which the reactor tank is filled only to a part height. The wastewater is entered from the bottom of the tank with an upflow velocity to move (fluidize) the media particles, which act as *mobile biomass carriers*, causing digestion of the organics present in the wastewater.

In a *fluidized bed reactor*, the overflow velocity is kept higher, causing the entire bed material to move with the up moving sewage, thereby distributing the sludge, virtually almost over the entire reactor volume. Whereas, in an *expanded bed reactor*, the upflow velocity is kept lower, thereby confining the sludge mostly in the lower part of the reactor. The *expanded bed reactors*, therefore, do not aim at complete fluidization of the bed, permitting the use of lower upflow pressure on the wastewater, thereby consuming lesser electrical power. These reactors can be used for treating industrial as well as municipal wastewaters.

9.52.5. The UASB Reactor. The *Upflow Anaerobic Sludge Blanket* (UASB) reactor [Fig. 9.65 (e)] maintains a high concentration of biomass through the formation of highly settleable microbial sludge aggregates. The wastewater flows upwards through a layer of very active sludge to cause anaerobic digestion of organics of the wastewater. At the top of the reactor, three phase separation between gas-solid-liquid takes place. Any biomass leaving the reaction zone is directly recirculated from the settling zone. The process is suitable for both *soluble wastewaters* as well as *wastewaters containing particulate matter*.

The large scale adoption of this technique for treating municipal wastewaters is comparatively of recent origin, although the system was developed as late as in the year 1979 by a Netherland's scientist, Mr. Gotze Lettinga. The system, however, has proved very promising, and several such treatment plants have come into existence in countries like China, India, Pakistan, Bangladesh, and some Latin American countries. As far as India is concerned, this simple technique was first of all adopted in the year 1989, when a demonstration sewage treatment plant (STP) of 5 MLD capacity was installed at Kanpur (U.P.) under the *Ganga Action Plan*. This has been followed by the installation of a 36 MLD plant at Kanpur (U.P.), and 14 MLD plant at Mirzapur (U.P.). These plants have been successfully working since their commissioning. Many more such plants are proposed to be commissioned

The X-section of a typical UASB reactor is shown in Fig. 9.66. This reactor consists of an upflowing treatment tank, provided with a feed inlet distribution system at the tank bottom. A gas-solid-liquid separator (GSS) device is provided at the top to help provide a quiescent zone at the top of the reactor.

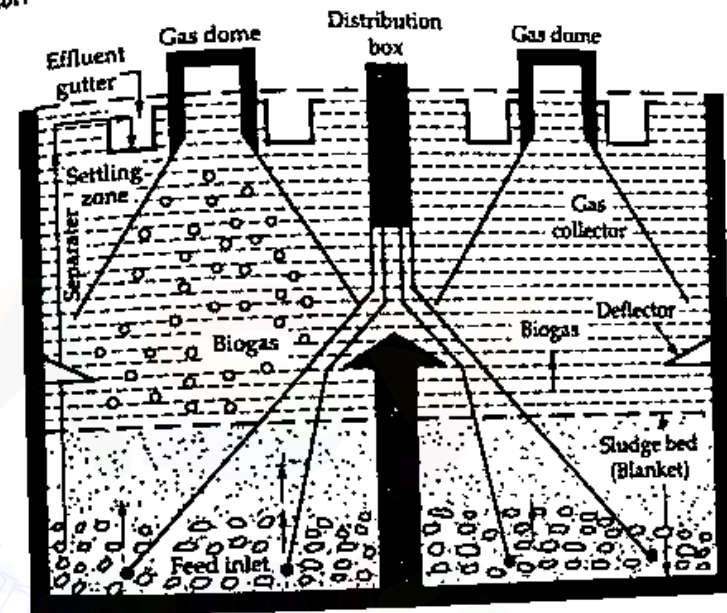


Fig. 9.66. X-section of a typical UASB reactor.

The wastewater enters the tank from the bottom, and flows upward through the sludge bed, which gets formed during the process itself. The sludge bed develops micro-organisms capable of flourishing in an oxygen deficient environment. The sludge bed (blanket) traps the suspended solids of the upmoving wastewater. The suspended solids trapped in the sludge bed are degraded by the anaerobic and anaerobically working facultative bacteria, producing methane and carbon dioxide (i.e. biogas, which is a mixture of 65–70% methane, and 30–35% carbon dioxide). The biogas produced during the anaerobic decomposition helps in providing gentle mixing and stirring of the biomass, thereby increasing the efficiency of decomposition, reducing the BOD and suspended solids of the wastewater.

The methane or biogas is collected at the top of the tank in a gas collector, from where it can be withdrawn for use as a by-product; while the water sludge mixture is made to enter a settling tank where the sludge settles down and flows back into the bottom of the reactor. The sludge will show good settling properties after an initial start up period, followed by granulation, forming a sludge blanket or sludge bed in the lower part of the reactor.

The UASB, evidently operates as a *suspended growth system*, with no packing material in the reactor. In this system, the microbes attach themselves to the suspended matter of

sewage, to form granules or agglomerates and ultimately the sludge bed (blanket). The gas produced in the process causes sufficient agitation to keep the sludge fully mixed.

Retention of the bacteria containing sludge in the reactor is one of the most important features of the UASB process. The bacteria in the sludge continue to perform their function of treating the incoming effluent. The continuous bacterial presence and activity enables retention time in the reactor to be reduced to about 6-8 hours, as compared to at least 30 hours, that is required in conventional sewage treatment systems.

The treated effluent is collected in gutters, and discharged out of the reactor. The sludge is periodically shifted into the drying beds, to be used as a soil enricher. The methane generated can be used as a gas for domestic or industrial use. It may also be used for generation of electricity for running the plant, after appropriate dehydration and cleaning.

This process can be reactivated even after the plant remains shut down for days or months, or after power breakdowns and interruptions in wastewater supply.

Like other high rate anaerobic systems, the various advantages offered by UASB system are summarised below :

Advantages of UASB System. The various advantages offered by UASB system over the Conventional Aerobic systems are given below :

(i) The space requirement of the system is quite comparable to that of an Activated sludge system ; i.e. about 0.5 acres per MLD, as compared to 2.6 acres per MLD required for Oxidation ponds, and 1.5 acres for Aerated lagoons.

(ii) The capital cost investment of such a plant is about ₹ 20 lakh/MLD as compared to about ₹ 35 lakh/MLD for an Activated sludge plant, ₹ 7.5 lakh/MLD for Oxidation ponds, and ₹ 15 lakh/MLD for Aerated lagoons.

(iii) The system requires lesser and simpler electromagnetic parts as compared to the ones required in an Activated sludge plant, leading to lower O and M (Operation and Maintenance) Costs.

(iv) Electricity consumption in this system, like all anaerobic systems, is quite low, and the system is quite capable of withstanding long power failures.

(v) The sludge production in this system is low, and the produced sludge is having quick dewatering characteristics.

(vi) The system enables quicker sludge digestion, as compared to the conventional digestors.

(vii) Biogas is produced in the system as a by-product, which can be used to produce electricity to run the system.

Limitations or Drawbacks of UASB System. The various drawbacks of the UASB system as compared to the Conventional Aerobic system are given below :

(a) The system helps to lower only two parameters of wastewaters; i.e. (a) BOD, and (b) Suspended solids. Eventually, the system does not help in the removal of toxic pollutants, like heavy metals, which may be present in some

subsidiary disposal system to remove the toxic pollutants, if present in the wastewater.

(ii) Like all other anaerobic high rate systems, UASB reactor also requires larger quantity of organic matter as compared to the aerobic reactors, because the growth of aerobic bacteria per unit of organic matter is about 10-20 times the growth of anaerobes. In order to support microbial growth and metabolism in UASB system, therefore, 20 to 30 times more of organic matter has to be metabolised, as compared to that in Aerobic systems. For the success of UASB, it therefore becomes necessary to ensure the presence of at least 10% of suspended solids in the wastewater. This requirement factor can not always be met by all types of wastewaters.

(iii) Some of the wastewaters may contain minerals, which may interfere with the efficiency of the anaerobic microbes. The system also does not respond well to the wastewaters of tanneries, which contain more than 500 auxiliary chemicals, offering varying response to the UASB technology.

(iv) The acids produced during the breakdown of organic matter in a UASB reactor, may cause corrosion of the reactor.

(v) The efficiency of BOD and S.S. removal is a little bit low, as compared to that in an Activated sludge plant. With generally adopted organic loadings of 1.0-2.0 kg COD/m³.d in UASB reactors, the achieved efficiency varies between 50 to 70% only. The effluent BOD of municipal wastewaters treated in UASB reactor system, will therefore be higher.

Say for example, the effluent BOD may be about 50 mg/l for influent BOD of 200 mg/l. For concentrated influents, the effluents BOD may still be higher. Direct disposal of effluent containing such high BOD may not always be permissible. Depending upon the situation, the effluent from a UASB system may have to be given further aerobic treatment in Aerated lagoons, or Oxidation ponds, or Filters. Where, enough space is not available, the post treatment may consist of using a *holding pond* of 1 day detention time followed by fish pond/aqua culture pond.

(vi) Pre-treatment of wastewater with screening and grit removal, are usually found necessary for direct anaerobic treatment.

(vii) The system responds well in high temperature climate areas, because the activity of methanogenic bacteria is strongly influenced by temperature, which approximately doubles for every 10°C rise in temperature in the range of 18°C to 38°C. However, high micro-organism concentration in high rate anaerobic reactors like a UASB, compensates the decreased activity of the anaerobic organisms at the lower temperatures.

(viii) The methanogenic bacteria do require iron, cobalt, nickel and sulphide, in addition to nitrogen and phosphorous. These elements are generally present in municipal wastewaters, but may have to be added to anaerobically treat some specific industrial wastewaters, which may have deficiency of these elements.

Conclusions. With all the above drawbacks, the UASB system has responded well for the treatment of high strength soluble wastewaters, like those from municipalities and industries like food processing, edible oils, distilleries, etc. and organic chemicals.

etc. It has been opined that the installation of a UASB plant should be made a mandatory requirement of developing every new colony or township, having a population of more than 5000 or so.

The UASB technology has, however, not become very popular so far, because there is a lack of awareness of this technology. Even the engineers of the Public Health Engg. Deptts. are usually unaware of this technology, and by the funding agencies (such as World Bank); or by the contractor firms, who undertake execution of plants on turn-key basis including the cost of design and technology, rather than deciding the technology on simplicity and cost benefit considerations. So much so that even in Delhi, the capital city of India, two extremely costly *biological filter* plants*, each of 10 MLD capacity and each costing about ₹ 4.5 crores, have recently been constructed to treat the sewage/sullage flows of Delhi Gate and Sen Nursing Home nalla, which shall not only require very high power consumption, but shall also require very high O and M expenses. Although of course, the adopted technology at these two plants shall produce effluent of low BOD (≈ 10 mg/l) and utilise lesser space (about 1.25 acres for 10 MLD plant), yet the adoption of such costly methods of sewage treatment must not remain undebatable. Be that as it may, many many more STP's are still needed even in this capital city of India, since at present about 630 MLD** of sewage is joining the Yamuna river, without being subjected to any kind of treatment.

CHLORINATION OF SEWAGE

9.53. Disinfection of Sewage by Using Chlorine

Sewage may be disinfected by adding chlorine to it, either before the treatment or after the treatment, as is done for disinfecting water supplies.*

When chlorine is added to the treated sewage as a final step in its treatment, it is called *post-chlorination*. This may be adopted where an effluent, low in bacterial count, is necessary. The disinfecting action of chlorine will, no doubt, reduce the bacteria, but, its oxidising action will also reduce the BOD to some extent.

Pre-chlorination of sewage before it enters the sedimentation tank may help in controlling odours, may prevent flies in trickling filters, and may assist in the removal of grease.

When chlorine is added to raw sewage in proper quantities, it will destroy the bacteria, which may breakdown the sulphur compounds in the sewage, and reduce the production of hydrogen sulphide. For this reason, chlorine is sometimes added into the main collecting sewers to prevent the destructive action of hydrogen sulphide on concrete pipes.

*In biological filters, the wastewater is filtered downward through a fully submerged bed of small stones, which help to form biofilms, and air is forced into the bed. No settler is used, but periodic back washing is required.

**At present, Delhi generates about 1900 MLD of sewage against an installed treatment capacity of 1270 MLD, leaving a gap of 630 MLD. The entire existing capacity is also not up to the desired secondary standards.

Chlorine may sometimes be added to sewage, both at the beginning as well as at the end of the treatment process, and this is known as *split-chlorination*.

The amount of chlorine required for chlorinating sewage may vary considerably*, but is always much greater than that required in water purification. Hence, it is a very costly process, and as such, generally not adopted in normal sewage treatment processes. Most of our sewage treatment plants are, therefore, generally not equipped with chlorination facilities, and even those plants which are provided with chlorinators often use them intermittently to relieve over-loads during peak flows. Chlorination may, however, be adopted, when needed, to prevent contamination of beaches, shellfish beds, and water supplies.

PROBLEMS

1. Give a list of methods available for treatment of sewage for both rural and urban conditions.
2. Give the flow diagram for 'the activated sludge process', and describe the working of the activated sludge plant.
3. Describe the aim of the following sewage treatment methods, using one or more appropriate key words given below :
 - (i) Screen ;
 - (ii) Activated sludge process ;
 - (iii) Sedimentation ;
 - (iv) Grit chamber.

Key words : Removal of—organic, inorganic, suspended or settleable solids ; organic, inorganic dissolved solids ; pathogenic, micro-organisms ; large floating solids.
4. (a) BOD removal by sedimentation of sewage can at best be 40 percent. Why ?
(b) What is the necessity of maintaining constant velocity in grit channel ?
5. Differentiate between aerobic and anaerobic treatment of sewage, giving major end products. Name one treatment method in each category.
6. Give the approximate reasonable values in percentage of the BOD removal of the following unit processes :
 - (i) Plain sedimentation ;
 - (ii) Activated sludge plus final sedimentation ;
 - (iii) Trickling filters plus final sedimentation ; and
 - (iv) Imhoff tank.
7. Give the approximate reasonable values of the detention time in hours of the sedimentation tanks, as noted below :
In waste treatment, (i) final sedimentation tank after activated sludge ; and
(ii) primary settling tank before activated sludge treatment.
8. Classify the following under aerobic or anaerobic processes :
 - (i) Sludge digestion tanks ;
 - (ii) Trickling filters ;
 - (iii) Activated sludge treatment ;
 - (iv) Intermittent sand filters ;
 - (v) Seepage tile bed following the septic tank ;
 - (vi) Lower compartment of Imhoff tank.

9. Indicate in appropriate space what effect an increase in variable A will have on variable B.

S. No.	Variable A	Variable B	Increase / Decrease / No Effect
(i)	Depth of tank	Overflow rate	
(ii)	Temperature of water	Settling velocity	
(iii)	Oxygen content	Rate of absorption of oxygen	
(iv)	Water temperature	Head loss in filter	

10. Discuss anaerobic digestion of sludge under the following heads :
- Definition and composition of sludge ;
 - Fundamental mechanism of anaerobic digestion ;
 - End products and their disposal.
11. Design an oxidation pond for treating domestic sewage of 10,000 persons supplied with 200 litres per capita water per day. The BOD and the suspended solids are each of 300 mg/l.
- Permissible organic loading for the pond is not less than 500 kg/ha/day. The detention period is not to exceed 8 days. Assume width of the pond to its length as 1 : 2 and the operational depth as 1.2 m. Assume any other suitable data.
12. With the aid of sketches, describe the principles involved in the design and construction of any three of the following :
- Grit chamber ;
 - Sludge digestion tank ;
 - Imhoff tank ;
 - Septic tank ;
 - Percolating filter.
13. (a) Explain with a neat sketch the working of a percolating filter (trickling filter). What are the principles on which it works ?
- (b) Compute the diameter of a circular trickling filter for 250 users. Dry weather flow is 120 litres per capita per day. Rate of filtration of trickling filter may be taken as 10 million litres per hectare/metre.
14. Design a septic tank for 200 users. Water allowance is 120 litres per head per day. Detention period may be taken as 8 hours. Draw a neat dimensioned sketch of the septic tank you design.
15. What do you understand by digestion of sewage sludge ? Give a neat sketch of separate digestion tank and explain its working.
16. What is meant by activated sludge ? Describe with sketches the treatment of sewage by activated sludge process. Mention the advantages and disadvantages of this system.
17. Give by a line diagram the outline of the method of purifying sewage in different steps from outfall sewer to the effluent discharge points in the river.
18. (a) Compare and contrast septic tank with Imhoff tank and clarigester, in scope, function and performance.
- (b) Design an Imhoff-tank to treat the sewage from a small town with 30,000 population, assuming that the suspended solids in the influent sewage are 200 ppm, water content of sludge is 97 per cent. Design the tank for three month sludge storage. Rate of sewage is 137 litres per head per day.
19. Write short notes on five of the following, illustrating your answers with neat sketches where needed :
- Grit chamber ;

- Dispersion trenches ;
 - Imhoff tanks ;
 - Sludge digester tank ;
 - Septic tank ;
 - Oxidation ditch ;
 - Oxidation pond ;
 - Sludge drying beds.
20. (a) Distinguish between primary treatment and secondary treatment. Draw the flow diagram for sewage treatment using activated sludge process.
- (b) Design standard rate trickling filter for the following :
- Average incoming flow = 350 m³/hr.
BOD of primary effluent = 210 ppm.
No. of units = 4.
21. (a) What is the object of sewage treatment ? Distinguish between fresh sewage, stale sewage, and septic sewage.
- (b) Explain how you would decide the type of treatment to be given for a particular sewage.
22. Design a septic tank for the following data :
- No. of people = 100
Sewage/capita/day = 120 litres
De-sludging period = 1 year
Length : width = 4 : 1.
23. (a) Distinguish between low rate (standard) trickling filters and high rate filters.
- (b) Design an activated sludge plant with diffuser plates, given the following particulars :
- Average inflow = 380 m³/hr.
Amount of return sludge = 25%
Aeration time = 6 hours.
24. (a) Compare and contrast septic tank with Imhoff tank in scope, function and performance.
- (b) Design a lagoon to serve for 5000 Persons at 100 l.p.c.d., B.O.D. of raw sewage is 200 ppm.
25. (a) Answer with respect to standard rate trickling filter :
- Size of filter media ;
 - Depth of filter ;
 - Hydraulic loading ;
 - B.O.D. loading ;
 - Effluent characteristics.
- (b) Mention the operational troubles of a standard rate trickling filter and their remedies.
26. (a) Mention the various methods of disposal of effluent from septic tank. Describe one of them in detail.
- (b) Mention merits and demerits of Imhoff tank.
- (c) Calculate the volume and number of aeration tanks and the rate of air supply for the following data of the activated sludge unit :
- Population = 35,000
Average sewage flow = 180 lpcd.
BOD of raw sewage = 220 mg/l
BOD removed in primary treatment = 30%
Overall BOD reduction desired = 85%.

27. Differentiate between the following pairs :
- Step aeration and tapered aeration in activated sludge process ;
 - Oxidation pond and oxidation ditch.
28. (a) Define sludge volume index. What is its importance in sewage treatment ?
(b) Sketch and explain the types of aeration systems in an activated sludge process.
29. (a) Discuss the effects of pH and temperature on sludge digestion.
(b) Mention the composition and uses of sludge gas.
(c) How will you compute the quantity of sludge gas and its fuel value.
30. (a) Discuss how a standard rate trickling filter differs from a high rate one.
(b) Design the activated sludge units for the following data :
- | | |
|-------------------------------------|----------------|
| Population served | = 60,000 |
| Average sewage flow | = 180 l.p.c.d. |
| B.O.D. of raw sewage | = 200 mg/l |
| Raw sewage suspended solids | = 300 mg/l |
| B.O.D. removal in primary treatment | = 35% |
| Overall B.O.D. reduction desired | = 80%. |
31. (a) Prove that the area and overflow rates rather than the detention period govern the design of a settling tank. (Engg. Services, 1976)
(b) In a continuous flow settling tank 3 m deep and 60 m long, what flow velocity of water would you recommend for effective removal of 0.025 mm particles at 25°C. The sp. gravity of particles is 2.65 and kinematic viscosity ν for water may be taken as 0.01 cm²/sec.
32. (a) Why coagulants are used in the sewage treatment ? Name a few common coagulants used. Describe a method of application of any one of the coagulants.
(b) Calculate kg of alum needed per day if alum dose is 28.6 mg/l and the flow is 18 ML/day.
33. Enumerate the various methods that can be used to dispose of the digested sludge. Discuss in details the working of any of these two important methods, which are useful in Indian conditions.
34. (a) Comment on the statement that the 20 days BOD is an approximation of the ultimate BOD.
(b) (i) Discuss the mechanism of working of a stabilisation pond.
(ii) Design a stabilisation pond to treat the night soil from a population of 10,000. The design temperature is 18°C. Give sketches where necessary.

—10

Process Design of a Complete Sewage Treatment Plant

In our previous chapter, we have discussed the designs of various types of treatment units, which are used for treating municipal wastewaters (sewage). In this chapter, we will give the typical design and detailing of the hydraulic design of a *complete sewage treatment plant (STP)*. The S.T.P. which we have chosen has been designed for treating a part of the sewage discharge of the *Dalhousie town* (a hill station in Himachal Pradesh State of India near Dharamsala).

10.1. Hydraulic Design and Detailing of a Complete Sewage Treatment Plant of 1.5 MLD (Average Annual Flow) to be Constructed at Block I of Dalhousie Townshir.

10.1.1. Basic Data for the Proposed S.T.P. The following basic data was first of all worked out and stipulated for the proposed sewage treatment plant, on the basis of population, per capita sewage produced, quality of sewage produced, and standards of effluent specified :

Average flow	= 1.25 MLD = 1250 m ³ /day	
Peak flow	= 3.125 MLD = 3125 m ³ /day	
Sewerage Characteristics	Influent	Effluent
BOD, 20°C	295 mg/l	20 mg/l
Suspended Solids	4653 mg/l	30 mg/l
PH	Around 7.5	Around 7.5
G.L. near plant (av) R.L. 1860 m above MSL formation level		
TWL in inlet chamber : 1863.50 m		
TWL in outlet channel of FST : 1861.30 m.		

10.1.2. Choosing the Type of Secondary Treatment. Since the desired quality of the treated effluent was of a high standard, and the available land area for construction of plant was limited, it was decided to design the S.T.P. using *activated sludge process* for the secondary treatment instead of using the trickling filters.

Moreover, considering the various advantages offered by the extended aeration process, specially for smaller plants up to 4 MLD capacity, as described in article 9.38.5, it was decided to use extended aeration type of activated sludge plant, which eliminates primary settling tank as well as sludge digestion tank.

(1) Design of Inlet Chamber

TWL in inlet chamber = 1863.50

Peak flow = $3125 \text{ m}^3/\text{day} = 0.038 \text{ m}^3/\text{sec}$

Plan dimension of inlet chamber = $1.3 \times 1 \text{ m}$

Free-board = 1.0 m

Top of Inlet chamber = RL 1864.50 m

Size of the Bye-Pass chamber by the side of Inlet Chamber
= $1.3 \times 1 \text{ m}$ (minimum size)

The outflow from the inlet chamber shall be taken to the screen chamber. A bye-pass channel $0.60 \text{ m} \times 1 \text{ m}$ or $400 \text{ mm } \phi$ pipe shall be provided from the bye-pass chamber up to final effluent channel to meet with any exigencies of the S.T.P.

(2) Design of Screen Chamber

2 Nos. screen chambers/channels shall be provided as per sound engineering practice.

The flow from the inlet chamber to the screen channels shall be controlled by C.I. penstock gates.

$$Q_{\text{max}} = 0.038 \text{ m}^3/\text{sec}$$

Assumptions :

Shape of Bar = M.S. Flats

Size = $10 \text{ mm} \times 50 \text{ mm}$ (10 mm facing flow)

Clear spacing between the bars = 20 mm

Inclination of bars with horizontal = 80° (Cleaning-manually)

Assuming velocity normal to screen = 0.8 m/sec

At peak flow, net inclined area required = $\frac{0.038}{0.8} = 0.047 \text{ sqm}$

Gross inclined area = $0.047 \times 1.5 = 0.070 \text{ sqm.}$

Gross vertical area required = $0.070 \times \sin 80^\circ = 0.069 \text{ sqm.}$

Provide submergence depth = 0.3 m

Width of channel = $\frac{0.069}{0.3} = 0.23 \text{ m}$; provide 0.30 m

Flow from screen channels shall be taken into Grit Chamber, provided in duplicate. 2 no. C.I. gates, one each at Inlet and Outlet, are provided for each Grit Chamber.

One more C.I. Gate shall be provided at the inlet to bye-pass channel in between two Grit Chambers.

$$\text{Design flow} = \frac{2.5 \times 1.25}{2} = 1.56 \text{ MLD} = 1560 \text{ m}^3/\text{day}$$

$$\text{Surface loading} = 1100 \text{ m}^3/\text{sqm}/\text{day}$$

To account for turbulence and short circuiting, reduce the Surface loading to about $800 \text{ m}^3/\text{sqm}/\text{day}$

$$\text{Area required} = \frac{1560}{800} = 1.95 \text{ sqm.}$$

Provide 1.70 m dia chamber, or 1.70×1.70 m square chamber.

Detention time = 60 sec.

$$\text{Volume} = \frac{1560 \times 60}{24 \times 3600} = \frac{156}{144} = 1.08 \text{ cum}$$

$$\text{Liquid depth} = \frac{1.08}{1.95} = 0.554 \text{ m}$$

Size of the Grit Chamber

$$= 1.70 \text{ m} \times 1.70 \text{ m (or 1.70 m dia)}$$

$$\times 1.2 \text{ m (i.e. } 0.554 + 0.6 \text{ FB} = 1.2 \text{ m) depth}$$

Check for Horizontal Velocity

Cross sectional area of Grit Chamber

$$= 1.7 \times 0.554 = 0.942 \text{ sqm}$$

$$\text{Velocity} = \frac{1560}{1.7 \times 0.554 \times 24 \times 3600} = 0.0192 \text{ m/sec.}$$

$$= 1.9 \text{ cm/sec} < 18 \text{ cm/sec. Hence O.K.}$$

Grit generation = 0.05 m^3 per 1000 m^3 of sewage flow (Assume)

Even though the grit is continuously raked, still 8 hrs. grit storage is provided for average flow.

$$\text{Storage Volume required} = \frac{1250 \times 8}{24} \times \frac{0.05}{1000} = 0.028 \text{ m}^3$$

$$\text{Grit storage area} = \frac{\pi}{4} \times 1.7^2 = 2.27 \text{ sqm.}$$

$$\text{Grit storage depth} = \frac{0.028}{2.27} = 0.012 \text{ m}$$

$$\text{Total liquid depth} = 0.554 + 0.012 = 0.566; \text{ say } 0.6 \text{ m}$$

$$\text{Provide grit chamber of size: } 1.7 \times 1.7 \times (0.60 + 0.60 \text{ FB}) \text{ depth, or} \\ = 1.7 \text{ m} \times 1.7 \text{ m} \times 1.2 \text{ m size.}$$

Outflow from grit chamber shall be carried to the aeration tanks through a 600 mm wide R.C.C. channel provided with *fine bar screen (manually operated)*. The clear spacing between the bars shall be 10 mm.

Note. Parshall Flume and measuring arrangement has not been proposed for two reasons viz :

(a) The measuring instruments are rarely working satisfactorily at any plant.

(b) The plant is very small, to economise the cost.

(4) Design of Aeration Tanks

No. of tanks = 2

$$\text{Average flow to each tank} = \frac{1.5 \text{ MLD}}{2} = 0.625 \text{ MLD}$$

$$\text{or } Q = 625 \text{ m}^3/\text{day.}$$

The total BOD entering S.T.P. = 295 mg/L

Assuming that negligible BOD is removed in screening and grit chamber (since it mainly removes inorganic solids), the BOD of sewage coming to aeration tank.

$$= Y_0 = 295 \text{ mg/L}$$

BOD left in the effluent

$$= Y_E = 20 \text{ mg/L}$$

∴ BOD removed in activated plant

$$= 295 - 20 = 275 \text{ mg/L}$$

∴ Minimum efficiency required in the activated plant

$$= \frac{275}{295} = 93\% ; \text{ O.K.}$$

since the adopted extended aeration process can remove BOD up to 95—98%.

Volume of the Aeration Tank can be designed by assuming a suitable value of MLSS and θ_c (or F/M ratio)

Let us assume MLSS

$$= 3000 \text{ mg/L; (between 3000—5000 mg/L)}$$

$$F/M \text{ ratio} = 0.12 \text{ (between 0.18 to 0.10)}$$

Now, using equation (9.45), we have

$$\frac{F}{M} = \frac{Q}{V} \cdot \frac{Y_0}{X_T}$$

$$V = ?$$

$$Y_0 = 295 \text{ mg/L}$$

$$X_T = 3000 \text{ mg/L (assumed)}$$

$$F/M = 0.12 \text{ (assumed)}$$

$$0.12 = \frac{625}{V} \times \frac{295}{3000}$$

$$\text{or } V = \frac{625 \times 295}{0.12 \times 3000} = 512 \text{ m}^3.$$

Aeration tank dimensions. Let us adopt an aeration tank of liquid depth 3.5 m and 9 m width. Then,

The length of the tank

$$= \frac{V}{B \cdot D} = \frac{512}{9 \times 3.5} = 16.25 \text{ m; say } 16 \text{ m}$$

$$\therefore \text{Volume (V) provided} = 16 \text{ m} \times 9 \text{ m} \times 3.5 \text{ m} = 504 \text{ m}^3.$$

(i) Check for aeration period or H.R.T. (t)

$$t = \frac{V}{Q} \cdot 24 \text{ h (From eqn. 9.41)}$$

$$= \frac{504}{625} \times 24 \text{ h} = 19.35 \text{ h, say } 20 \text{ hr; OK,}$$

since it lies between 10 to 25 h

(ii) Check for volumetric loading. From equation (9.43), we have volumetric loading

$$= \frac{Q \cdot Y_0}{V} \text{ gm of BOD}_5/\text{m}^3 \text{ vol. of tank}$$

$$= \frac{625 \times 295}{504} \text{ gm/m}^3$$

$$= 368 \text{ gm/m}^3$$

$$= 0.368 \text{ kg/m}^3. \text{ OK,}$$

since it should lie between 0.2 to 0.4

—See col. (7) of Table 9.10

(iii) Check for return sludge ratio (for SVI ranging between 50—150 ml/gm).

Using equation (9.54 a), we have

$$\frac{Q_R}{Q} = \frac{X_T}{\left(\frac{10^6}{\text{SVI}} - X_T \right)}$$

Using SVI = 100 ml/gm; and $X_T = 3000 \text{ mg/L}$, we have

$$\frac{Q_R}{Q} = \frac{3000}{\left(\frac{10^6}{100} - 3000 \right)} = \frac{3000}{7000}$$

$$= 0.43; \text{ but it should be within 0.5 to 1.0}$$

(please see col. (9) Table 9.10)

Hence, we will provide 50% sludge recirculation, giving SVI = 111, OK.
(iv) Check for S.R.T. (θ_c). From Eqn. (9.53), we have

$$V \cdot X_T = \frac{\alpha_y \cdot Q \cdot (Y_0 - Y_R) \cdot \theta_c}{1 + K_d \cdot \theta_c}$$

where $\alpha_y = 1.0$ (constant for municipal sewage w.r. to MLSS)

$K_d = 0.06 \text{ d}^{-1}$ (constant for municipal sewage)

$Y_0 = 295 \text{ mg/L}$

$Y_R = 20 \text{ mg/L}$

$V = 504 \text{ m}^3$

$X_T = 3000 \text{ mg/L}$

$Q = 625 \text{ m}^3/\text{d}$

$$504 \times 3000 = \frac{10 \times 625(295 - 20)\theta_c}{1 + 0.06\theta_c}$$

$$\text{or } 1 + 0.06\theta_c = 0.114\theta_c$$

$$\text{or } 0.054\theta_c = 1$$

$$\theta_c = \frac{1}{0.054} = 18.6 \text{ days ; OK}$$

since it is between 10 to 25 days,
please see col. 8 Table 9.10.

The adopted tank size is thus O.K. Hence, adopt an aeration tank having an overall size of $18 \text{ m} \times 9 \text{ m} \times (3.5 + 0.6) \text{ m}$ overall depth, with 0.6 m of free-board.

The outlet weir shall be of adjustable type.

The effluent from the aeration tank will be taken to the final (Secondary) clarifier. The inflow to the secondary clarifier shall be by means of 250 mm ϕ C.I. pipes, which will give a velocity of 0.78 m/sec at peak flow.

Aerators Sizing :

BOD₅ applied to each tank = 295 mg/l

Average flow in each tank = 625 m³/day

BOD₅ to be removed in each tank = $625 \times 0.295 = 184.375 \text{ kg/day}$
= 8 kg/hr (say)

Oxygen requirement = 1.2 kg/kg BOD applied

Peak oxygen demand = 125%

Oxygen transfer capacity of the aerator in standard conditions
= 1.9 kg/kWh = 1.41 kg/HP/hr

Oxygen transfer capacity of aerators at field conditions
= $0.7 \times 1.41 = 0.98 \text{ kg/HP/hr}$

Oxygen to be applied in each tank
= $1.2 \times 8 \times 1.25 = 12 \text{ kg/hr}$

H.P. of aerators required

$$= \frac{12}{0.98} \text{ H.P.} = 12.24 ; \text{ say } 14 \text{ H.P.}$$

Provide 2 Generators, each of 7 HP.

Check for Mixing Consideration

As per practice, power required for mixing = 0.02 kW/m³

Volume of each A.T. = 504 m³

SHP required = $0.02 \times 504 \text{ kW} = 10.08 \text{ kW}$

Providing 2 aerators, and considering gear efficiency as 97%

$$\text{H.P. of each aerator required} = \frac{10.08}{2 \times 0.97} = 5.2 \text{ HP}$$

Considering a power margin of 25% on motor rating

Motor H.P. required = $5.2 \times 1.25 = 6.50 ; \text{ say } 7$

Provide 2 no. of 7 H.P. motors/aerators in each tank.

The dimension of the tank selected on the basis of suitable aerator motor is the zone of influence.

The zone of influence for each aerator will be about 11 m sq. with 3.5 m depth. The suitable aerator be selected, and accordingly, the depth and size of aeration tank adjusted. The submergence of the aerator will be between 75 mm to 115 mm.

(5) Design of Secondary Clarifier

Secondary Clarifier :

No. of secondary clarifier = 1 No.

Average flow = 1250 m³/day

Recirculated flow, say 50% = 625 m³/day

Total inflow = 1875 m³/day

Provide hydraulic detention time = 2 hra.

$$\text{Volume of tank (exclusive of hopper portion)} = 1875 \times \frac{2}{24} = 156.25 \text{ m}^3$$

Assume liquid depth = 3.5 m

$$\text{Area (superficial)} = \frac{156.25}{3.5} = 44.64 \text{ m}^2$$

Surface loading rate of average flow = 15 m³/m²/day

$$\text{Surface area to be provided} = \frac{1250}{15} = 83 \text{ m}^2$$

(provide area greater of two i.e. 83 m²)

Dia of Circular tank (d)

$$d = \sqrt{\frac{83 \times 4}{\pi}} = 10.28 \text{ m ; say } 11 \text{ m.}$$

Actual area provided = 95 sq. m.

Check for Weir Loading :

Average flow = 1250 m³/day

Hopper slope shall be 1 in 12.

Free-board will be 0.3 m

Sludge will be withdrawn from the clarifier through a C.I. pipe. The sludge will be taken to the return sludge pump house. The treated effluent from the secondary clarifier can be disposed of in the nearby nallah valley.

Return Sludge Pump House :

Total return flow = $625 \text{ m}^3/\text{day} = 0.434 \text{ m}^3/\text{min}$

Detention time = 15 min

Volume of wet well = $0.435 \times 15 = 6.5 \text{ m}^3$

Provide wet well = $2.5 \text{ m} \times 1.5 \text{ m} \times 1.8 \text{ m}$ SWD

Provide dry well = $2.5 \text{ m} \times 2.5 \text{ m}$

Size of annexe control room = $2.5 \text{ m} \times 2.5 \text{ m}$

Provide 2 Nos. pumps, each of 0.625 MLD capacity in the dry well for returning the sludge to the aeration tank.

The return sludge pipe line shall be 150 mm ϕ .

Excess sludge shall be taken to the sludge drying beds by providing necessary fittings in the main return sludge header. The sludge feed line to the sludge drying beds shall be 150 mm ϕ C.I. pipe.

(6) Design of Sludge Drying Beds

Sludge applied to drying beds @ 100 kg/MLD

Sludge applied = 125 kg/day

Sp. gravity = 1.015

Solid contents = 1.5%


Volume of sludge = $\frac{125}{1.5\%} \times \frac{1}{1000 \times 1.015} = 8.2 \text{ m}^3/\text{day}$

Considering monsoon etc. total no. of cycle in one year = 33

Period of each cycle $\frac{365}{33} = 11 \text{ days}$

Volume of sludge/cycle = $8.2 \times 11 = 90.2 \text{ m}^3$

Spreading a layer of 0.3 m/cycle area of beds required = $\frac{90.2}{0.3} = 300.67$

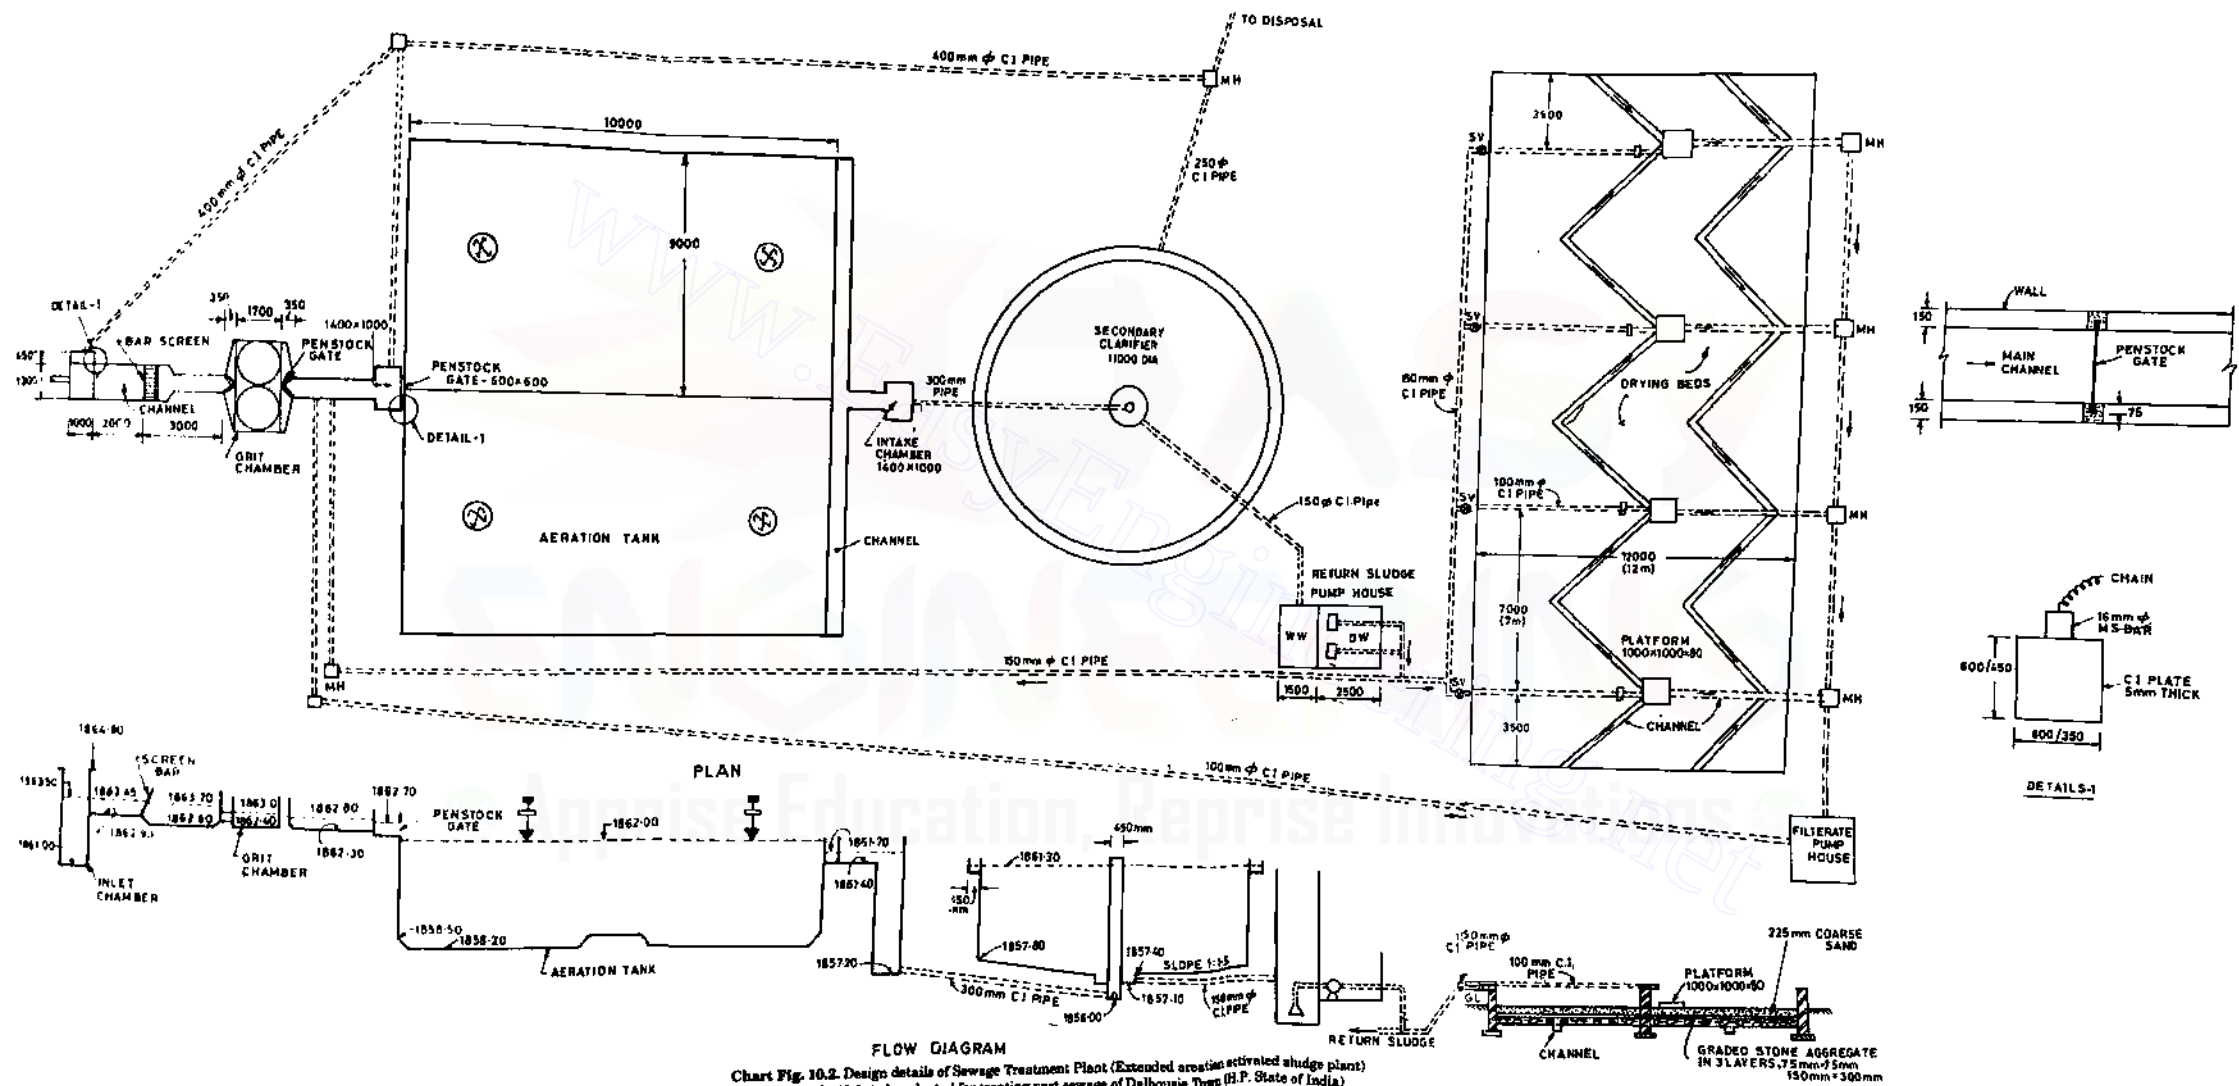

or $Q_w \cdot X_R = 18.6 - 81,250 \text{ g/d} = 81.3 \text{ kg/d}$

Thus, excess sludge produced = 81.3 kg/d.

Assuming the excess sludge to contain 1% solids and specific gravity = 1.015, we have

Volume of excess sludge

$$\begin{aligned} &= \frac{81.3}{1\% \times (1000 \times 1.015)} \text{ m}^3/\text{d} \\ &= \frac{81.3 \times 100}{1000 \times 1.015} = 8 \text{ m}^3/\text{d} = 0.34 \text{ m}^3/\text{hr}. \end{aligned}$$

Taking detention time as 8 hrs.

Volume of wet well = $8 \times 0.34 = 2.64 \text{ m}^3$ for 1% concentration.

Provide liquid depth = 1.0 m

Area required for 1% concentration of solids = $\frac{2.64}{1.0} = 2.64 \text{ m}^2$

Dia of wet well = $\sqrt{\frac{2.64 \times 4}{\pi}} = 1.83 \text{ m}$; Provide 2.0 m ϕ

Hence, provide 2 m ϕ of the wet well for (worst condition) filtrate sump with 1.2 m liquid depth below incoming pipe line. This will be covered on top and a 4 m high pump room shall be constructed over it. 2 No. vertical non-clog pumps, each of 1 H.P. capacity, shall be provided in this pump house. The filtrate from the pump house shall be pumped to the distribution chamber upstream of the Aeration Tank through 100 mm ϕ C.I. pipe line.

The details of the designed units are shown in Chart Fig. 10.2.

Treatment of Industrial Wastewaters

11.1. Introduction

Wastewaters obtained from industries are generally much more polluted than the domestic or even commercial wastewaters. Still, however, several industrialists try to discharge their effluents into our natural river streams, through unauthorised direct discharges. Such a tendency on the part of the industries may pollute the entire river water to a grave extent, thereby making its purification almost an impossible task. Sometimes, the industries discharge their polluted wastewaters into municipal sewers, thereby making the task of treating that municipal sewage, a very difficult and a costly exercise.

The industries are, therefore, generally prevented by legal laws, from discharging their untreated effluents. It, therefore, becomes necessary for the industries to treat their wastewaters in their individual treatment plants, before discharging their effluents either on land or lakes or rivers, or in municipal sewers, as the case may be.

11.2. Methods of Treating Industrial Wastewaters

Industrial wastewaters, as pointed out above, usually contain several chemical pollutants and toxic substances in too large proportions. The characteristics of the produced wastewater will usually vary from industry to industry, and also vary from process to process even in the same industry. Such industrial wastewaters cannot always be treated easily by the normal methods of treating domestic wastewaters*, and certain specially designed methods or 'sequence of methods' may be necessary.

In order to achieve this aim, it is generally always necessary and advantageous to isolate and remove the troubling pollutants from the wastewaters, before subjecting them to usual treatment processes. The sequence of treatment processes adopted should also be such as to help generate useful by-products. This will help economise the pollution-control measures, and will encourage the industries to develop such treatment plants.

*The normal biological treatment methods for sewage are dependent upon the bacterial activity within the sewage; and as the toxic chemicals present in the industrial wastewaters may hinder or destroy the bacterial activity, these normal methods may not suffice, unless modified and/or supplemented by additional techniques.

Depending upon the quantum, concentration, toxicity and presence of non-biodegradable organics in an industrial wastewater, its treatment may consist of any one or more of the following processes:

- (1) Equalisation;
- (2) Neutralisation;
- (3) Physical treatment
- (4) Chemical treatment; and
- (5) Biological treatment.

These processes are briefly discussed below:

11.2.1. Equalisation. Equalisation consists of holding the waste-water for some pre-determined time in a continuously mixed basin, to produce a uniform wastewater. Such an arrangement will, of course be necessary when the wastewater produced by the industry varies in characteristics and quantity over the entire day.

11.2.2. Neutralisation. Neutralisation means neutralising the excessive acidity or alkalinity of the particular wastewater, by adding alkali or acid, respectively, to the wastewater. This may be achieved either in the equalisation tank, where possible, or a separate neutralisation tank may be used.

11.2.3. Physical Treatment. Physical treatment consists of separating the suspended inorganic matter by physical processes, like sedimentation and floatation.

(i) **Sedimentation.** Sedimentation as we know, is employed to separate the heavier settleable solids, and hence sedimentation tank may be provided only when the wastewater contains a high percentage of such heavy inorganic solids.

(ii) **Floatation.** Floatation consists of creation of fine air bubbles in the waste tank, by introduction of air into the tank from the bottom. The rising air bubbles, attach themselves to the fine suspended particles, increasing their buoyancy, and finally lifting them to liquid surface for consequent removal by skimming.

11.2.4. Chemical Treatment. Chemical treatment is often necessary before the biological treatment, though sometimes, it may not be required at all. Sometimes, it may however, serve as the final stage of treatment*.

Since chemical treatment is a costly and expensive exercise, care should be taken to see, if it could be avoided altogether, to achieve our required goals.

The chemical treatment is used to recover the dissolved organic matter from the wastewater, and may consist of one or more of the following processes:

- (i) reverse osmosis or hyper filtration;
- (ii) electrodialysis;

*Chemical treatment was largely used in England during 1870 to 1930, when it was replaced by the advent of biological treatment methods. Since 1970 or so, it has again come up for isolated use on specific industrial wastewaters, and is increasingly being developed.

- (iii) chemical oxidation ;
- (iv) chemical coagulation or chemical precipitation ;
- (v) adsorption ;
- (vi) deionisation ;
- (vii) thermal reduction ; and
- (viii) air-stripping.

All these processes are briefly pointed out below :

(i) **Reverse Osmosis.** In reverse osmosis treatment process, the wastewater containing dissolved salts are filtered through semipermeable membranes at a pressure higher than the osmotic pressure, as discussed in article 9.29.6(3)—Vol. I. Such a treatment requires pre-treatments like : (a) activated carbon adsorption ; or (b) chemical precipitation followed by some kind of filtration.



(ii) **Electrodialysis.** In electrodialysis treatment process, dissolved salts from wastewater are separated by passing an electric current through the wastewater tank, installed with 'ion exchange membranes', as discussed in article 9.29.6(2)—Vol. I. This treatment process also requires some pretreatment, as is required in reverse osmosis process.

(iii) **Chemical Oxidation.** In chemical oxidation, chemicals like chlorine and ozone are used to reduce substances like ammonia and cyanide, etc. from the wastewater, in addition to reducing BOD load on biological treatments.


(iv) **Chemical Coagulation.** Chemical coagulation, as we know, is adopted in treating raw water supplies, and helps in sedimentation of unsettlable micro and colloidal impurities, which get absorbed in the gelatinous flocs, formed by the chemical reactions between coagulants, or between the coagulant and the alkalies present in raw water.

However, in treatment of industrial waste-waters, such chemicals are generally added to help out the precipitation of dissolved and troublesome impurities, such as phosphorous or phosphoric compounds, etc. This process is then popularly known as chemical precipitation.

The alum, or ferric salts like ferric chloride or ferric sulphate may be used to directly precipitate out phosphorous, as shown below :



Sometimes, lime is also used to precipitate out phosphorous ; wherein lime will initially react with natural bicarbonate alkalinity to precipitate CaCO_3 , and then excess lime will react with phosphorous to precipitate hydroxylapatite, as given in equation (11.3) below :



Chemical precipitation, though introduces additional chemicals in wastewater and produces larger quantity of sludge, yet is generally adopted these days for removing organic compounds like phosphorous, and also sometimes for removing nutrients like nitrogen from specific industrial wastewaters. Toxic metals may also sometimes be precipitated out by using and developing appropriate chemical processes.

(v) **Adsorption.** Adsorption is generally used to remove non-biodegradable organics (like synthetic detergents), colour and odour from the wastewater. The process involves passing the pre-treated wastewater through the beds of activated carbon, as discussed in article 9.25 (2) of Vol. I.

(vi) **Deionisation.** Deionisation involves a similar passage of wastewater through the beds of synthetic ion exchange resins, where some undesirable cations or anions of the wastewater get exchanged for sodium or hydrogen ions of the resin.

(vii) **Thermal Reduction.** Thermal reduction requires burning and consequent oxidation of some toxic and refractive substances, like organic cyanide, which may be present in certain specific industrial wastewaters.

(viii) **Air-stripping.** In air-stripping, the liquid waste is poured down through a packed tower, equipped with an air blower at the bottom. This method is a modification of aeration-process, used for removal of gases from the wastewater.

11.2.5. Biological Treatment. Biological treatment of industrial wastewaters is necessary, when they contain large quantities of biodegradable substances. Such biological treatment may be used either with or without acclimatisation.

Laboratory tests on wastewater for determining its $\frac{\text{BOD}}{\text{COD}}$ ratio, will help in

determining the type of treatment required. Say for example, if this ratio is more than 0.6, the wastewaters are biologically treatable without acclimatisation ; and if the ratio is less than 0.6 and upto 0.3, then acclimatisation is needed for biological treatment ; and if the ratio is less than 0.3, biological treatment may not be necessary.

Acclimatisation consists of the gradual exposure of the waste-water in increasing concentration to the seed or initial micro-biological population under a controlled condition.

The criteria for selecting a particular conventional biological treatment process*, may differ for different types of industrial wastewaters. The system parameters for a given type of industrial wastewater may be determined by laboratory experiments.

In the absence of any actual test data, the performance data of a similar type of industrial wastewater may be used for design.

*Conventional biological treatment may consist of : (a) aerobic units like : cheaper stabilisation ponds or aerated lagoons, or costlier units like trickling filters or activated sludge systems, (b) anaerobic units like : anaerobic lagoons and septic tanks.

It has also been observed that most of the industrial wastewaters do not contain sufficient nutrients for micro-biological growth; and hence nutrients like urea (containing nitrogen), *super phosphates* (containing phosphorous) etc. may have to be added to the reactors. For balanced growth of micro-organisms in a biological treatment reactor, the ratios of BOD : Nitrogen : Phosphorous should be 100 : 5 : 1 for aerobic systems, and 100 : 2.5 : 0.5 for anaerobic systems.

In certain cases, special types of micro-organisms are found to cause better biological oxidation, since commonly available micro-biological population may fail to achieve oxidation.

Acute Toxic wastewaters must be handled with special care and specific treatments. Say for example, toxic wastes, like cyanides, formaldehydes, phenols, etc. may need acclimatised-growth of special type of bacteria. Toxic metals, like copper, zinc, chromium etc. may need pre-separation chemically, as otherwise, they may interfere with the biological oxidation by tying up the enzymes, essentially required for microbial growth.

Segregation of strong wastewaters from weak wastewaters may also sometimes help in reducing problems in industrial wastewater treatment plants.

In conclusion, it can be stated that the selection of a sequence of particular treatment processes depends on the characteristics of the wastewaters, and also upon the permissible requirements of the effluents.

The treatment processes needed for different industries will, therefore, generally vary from one industry to another.

The attempts made for treating industrial wastewaters, simply by biological methods, though cheaper, have generally failed in the absence of making efforts for pre-recovery of certain pollutants or chemicals from the wastewater by using chemical methods. However, use of simple biological methods have fairly succeeded in industries, like *fruit processing, dairies, slaughter houses, and textiles*.

Physical and chemical treatments prior to biological treatment, for separation of troubling pollutants, like chromium, arsenic, cyanide, mercury, several nitrogenous substances, lignin, etc., is very necessary and important for industries like *fertilizers, dyes and pigments, pesticides, electroplating, paper and pulp*, etc. Suitable pre-treatments to the wastewaters of such industries, before subjecting them to the biological treatment, is thus, the prime requirement for designing and planning the treatment plant for a particular industry.

Possible large scale re-use of the treated water in the industry is another important factor, which must be considered, while deciding the sequence of treatment processes for a particular industry. Such a possible reuse, if can be made possible, will help in large scale economy in the industry.

The pollution characteristics of certain typical Indian industries along with suggested treatments with flow charts, are broadly reflected in Tables 11.1 and 11.2 so as to serve as a first hand guide to the design engineers. For detailed planning and design of the treatment works, however,

operations and stages involved in the given industry, study the characteristics of the wastewaters generated at different places in the industry, and to finally work out the most satisfactory and economical sequence of treatment processes for that industry, using his intuition, intelligence, experience, and of course, ingenuity.

Table 11.1. Pollution Characteristics of Certain Typical Indian Industries

Sl. No. (1)	Industry Type (2)	Pollution Characteristics (3)	Suggested Treatments (4)
1.	Dairy (Milk processing industry)	(i) moderate BOD (800—1000 mg/l) (ii) $\frac{\text{BOD}}{\text{COD}} = 0.6$ (iii) heavy oil and grease (200—300 mg/l) (iv) high dissolved solids (1000 mg/l or so) (v) high suspended solids (800 mg/l or so) (vi) high nitrogen Very strong, though bio-degradable.	Aerobic Biological treatment, either in the form of High rate trickling filters or Activated sludge plant will generally suffice for this industry. Still however, due to intermittent nature of wastewater discharge, an Equilisation tank with or without aeration may preferably be used. In unadvanced locations, Oxidation ditch or Aerated lagoon may also help ensure good disposal.
2.	Distillery and Brewery wastes. (Wines; alcohols, and brandy producing industry)	(i) extremely high BOD (12000—40000 mg/l) (ii) very high COD (28000—73000 mg/l) (iii) high chlorides and sulphates—dissolved solids (7000—10000 mg/l) (iv) highly coloured-brownish yellow.	Brewery wastewaters, being less strong, can be generally treated by two stage aerobic biological treatment units like High rate trickling filters, after screening and neutralisation (Fig. 11.1). But yeast sludge Distillery wastewaters generally make it highly polluted, as shown in col (3); thereby necessitating two stage treatment; consisting of biological anaerobic treatment followed by aerobic treatment (Fig. 11.2)

(Contd.)

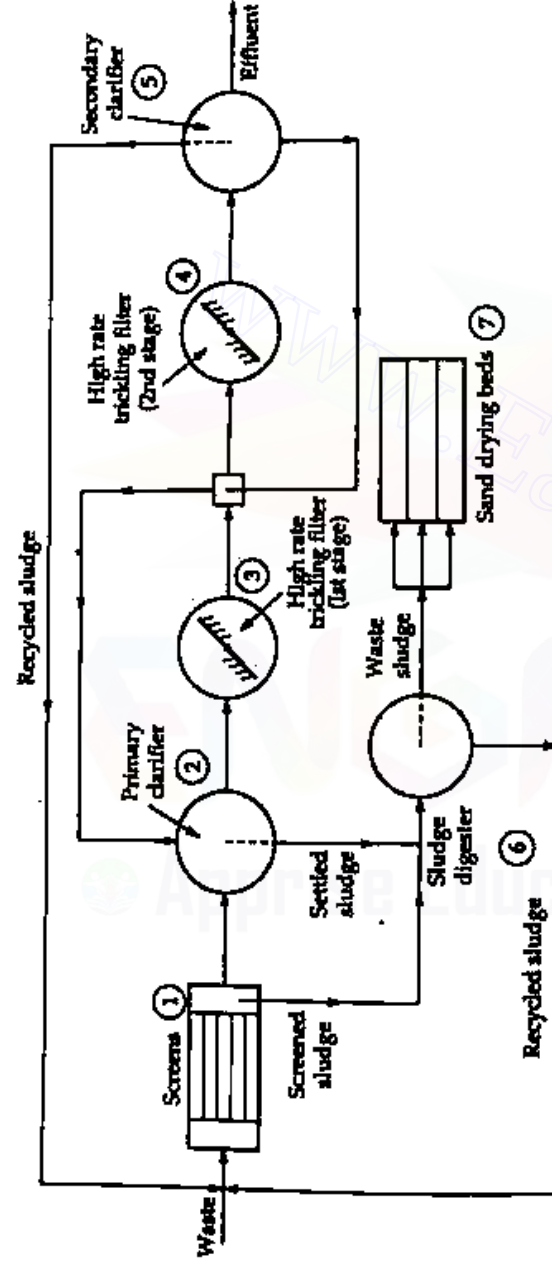


Fig. 11.1. Flow chart for treating liquid wastes of a Brewery Unit—Two Stage Aerobic Treatment suggested; 90–94% BOD removal.

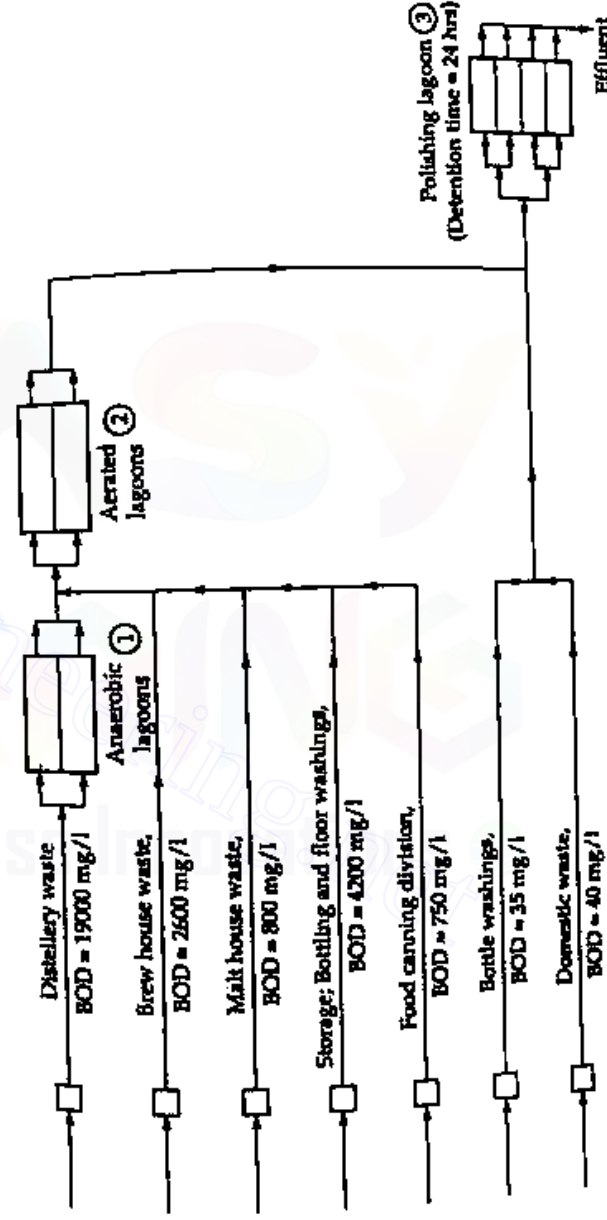


Fig. 11.2. Flow chart for treating wastewaters of a Complex Distillery Plant, containing brewery, distillery and fruit canning divisions—Both Aerobic and Anaerobic Treatments suggested.

(1)	(2)	(3)	(4)
3.	Fertilisers	(i) very high nitrogen content as Ammonia (700 mg/l or so) and Urea (600 mg/l or so); (ii) high phosphates (75 mg/l or so) and Fluorides (16 mg/l or so); (iii) high Arsenic (1.5 mg/l or so); and (iv) Oils	Oils are removed in a Gravity separator; arsenic is segregated after its concentration; phosphates and fluorides are segregated and chemically coagulated by lime; ammonia is then removed by Lagooning or by using an Air-stripped tower packed with red wool stakes. Biological nitrification and denitrification to remove ammonia can also be used. Urea does not get removed easily. Flow diagram is shown in Fig. 11.3.
4.	Oil Refineries	(i) very high free oils (2000–3000 mg/l). (ii) high emulsified oils (90–120 mg/l). (iii) high H_2S and RSH (10–220 mg/l). (iv) high phenolic compounds (12–30 mg/l)	(a) Physical separation of free oils in Gravity separators. Air floatation with or without flocculation may also be tried to remove oils in some special cases. (b) Chemical treatment consisting of Coagulation, Flocculation and Sedimentation to remove emulsified oils, etc. (c) Final biological treatment, such as Stabilisation pond or Aerated lagoon, or Trickling filter, or Activated sludge process. Flow diagram is shown in Fig. 11.4.

(Contd.)

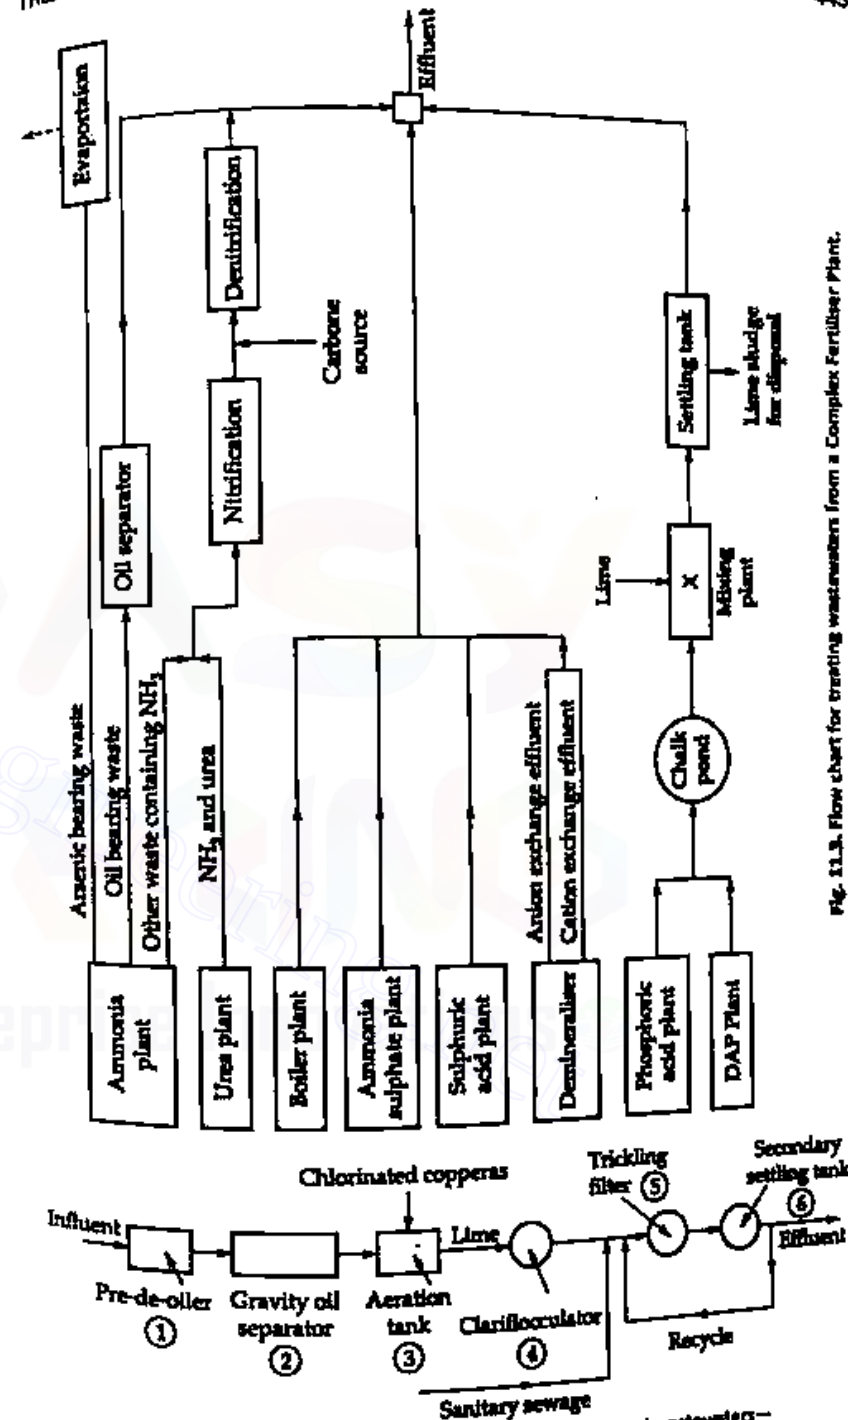


Fig. 11.3. Flow chart for treating wastewaters from a Complex Fertiliser Plant.

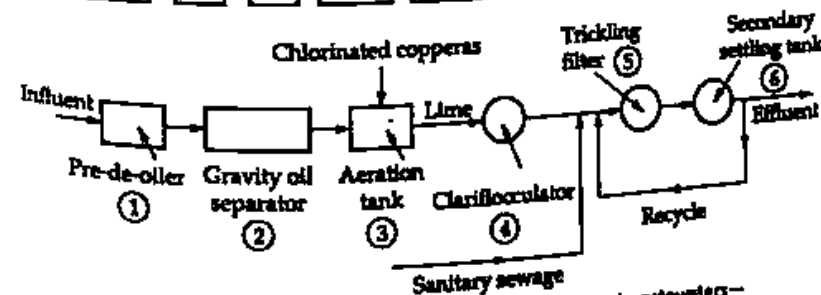


Fig. 11.4. Flow chart for treating Oil-Refinery (Petroleum) wastewater—

(1)	(2)	(3)	(4)
5.	Paper and Pulp Mills	(i) moderate BOD (150—1250 mg/l) (ii) Low $\frac{\text{BOD}}{\text{COD}}$ ratio (0.25—0.20) (iii) highly coloured (4000—8000 units) (iv) acidic for sulphite plants, and alkaline for other processes; (v) Lignin, which is highly resistant to biological treatment, is present in paper mill wastewaters, especially in plants based on "Sulphite-technology". (vi) Low nitrogen.	(a) Chemical Recovery of lignin (produced in plants using sulphite process), as a useful by product. (b) Chemical treatment for colour removal. Massive lime treatment process is widely used for this purpose. Activated carbon at pH lower than 3 is also found to serve as good colour remover. (c) Physical treatment like Mechanically cleaned circular clarifier is used for removing suspended solids. (d) Final Biological treatment for reducing BOD. Both conventional or low cost processes (such as Lagoons, Stabilization ponds, etc.) can be used. The process also helps in reducing colour. Flow diagram shown in Fig. 11.5.
6.	Petrochemicals	(i) high BOD (500—5500 mg/l) (ii) high COD (550—5000 mg/l) (iii) COD/BOD (1.4—2.0) (iv) high total solids (2000—15000 mg/l), (v) Hydrocarbons and their products, such as alcohols, aldehydes, ketones, esters, acids, alkalies, salts, phenolic compounds, and small quantities of emulsified	(a) Recovery of by-products by methods, such as Stripping, Scrubbing, Adsorption, and Distillation. Oxidation, Extraction and Crystallisation are also frequently required for recovery of valuable pollutants. (b) Aeration helps in reducing much of the BOD load. Toxic wastewaters may be concentrated and re-

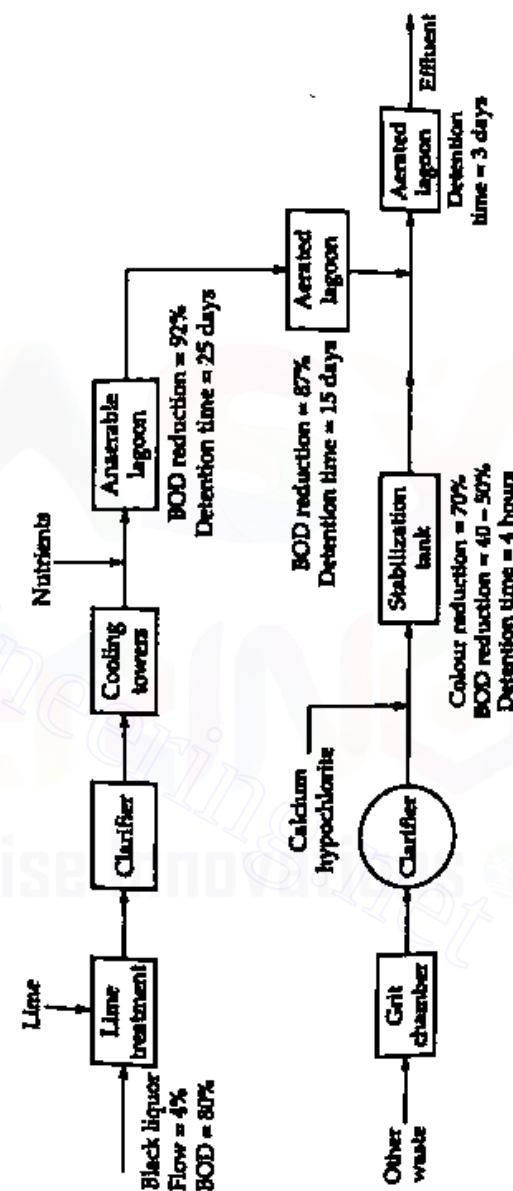


Fig. 11.5. Flow chart for treating wastewaters of a typical Pulp Mill.

(Contd.)

(1)	(2)	(3)	(4)
7.	Pharmaceuticals (a) Antibiotics (b) Synthetic drugs,	(i) moderate BOD (500—1000 mg/l) (ii) very high COD (5000—7000 mg/l) (iii) very low $\frac{\text{BOD}}{\text{COD}}$ ratio (0.10—0.13) (iv) high total solids (1000—5000 mg/l) (v) either acidic or alkaline	(c) To remove colloids and to control pH, Chemical treatment is used previous to biological treatment. (d) Final Biological treatment preceded by Sedimentation, Screening, Oil separation, etc. All modes of biological units, sometimes succeeded by secondary units may have to be used. Flow sketch shown in Fig. 11.6. (a) Equalisation, Neutralisation with lime, Clarifier, Anaerobic digestion + conventional Aerobic biological processes are used in a typical antibiotic plant (Fig. 11.7). (b) For synthetic drug plants, very careful planning is required due to excessive pollution potential. Highly specialised sequence of operations necessary.
8.	Sugar Industry	(i) moderate BOD (300—2000 mg/l) (ii) high COD (600—4400 mg/l) (iii) high volatile solids (400—2200 mg/l) (iv) low pH (4.6—7.1)	Anaerobic treatment using Digestors or Lagoons is found to be very effective and economical. Biological treatment, however, needs to be preceded by Screens and Grease traps. Where sufficient land is available, two stage biological treatment with Anaerobic lagoons followed

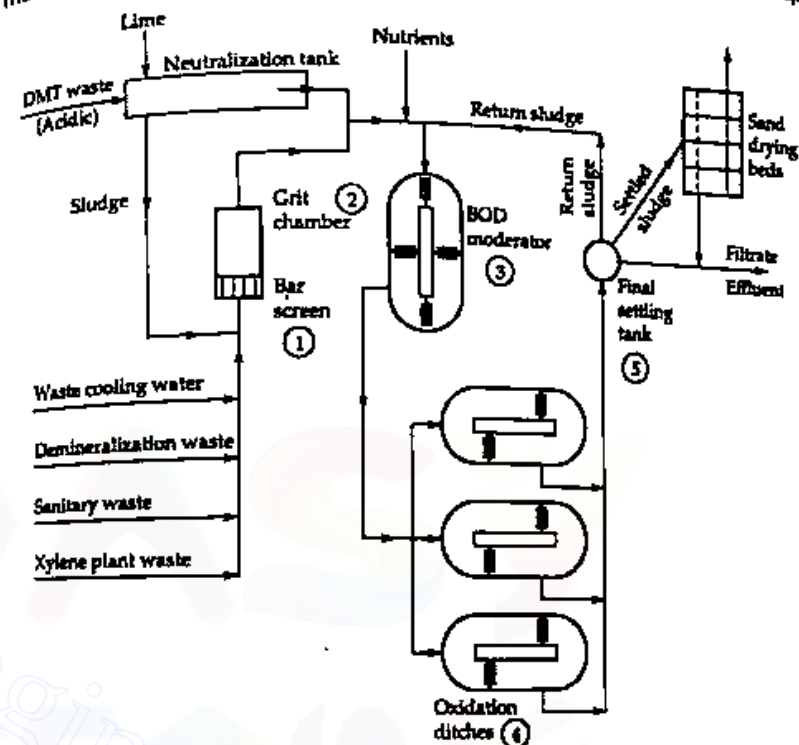


Fig. 11.6. Flow chart for treating Aromatic wastewaters of a Petrochemical Complex.

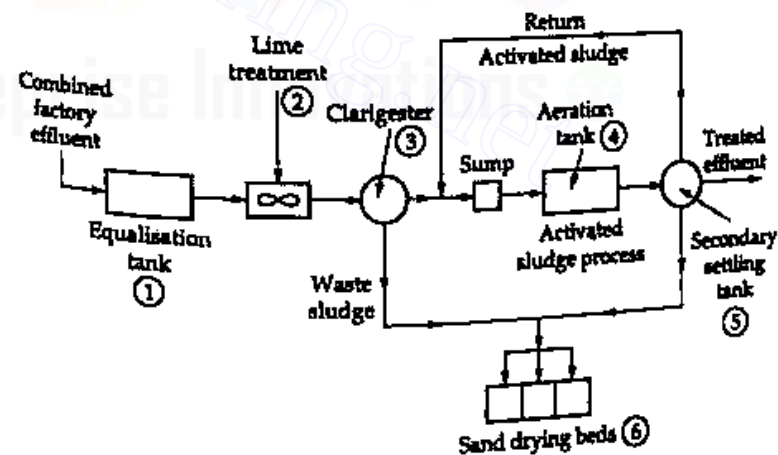


Fig. 11.7. Flow chart for treating wastewaters from a Pharmaceutical Plant, producing combined effluent.

(1)	(2)	(3)	(4)
9.	Tannery	(i) high BOD (1500—2000 mg/l) (ii) highly alkaline (iii) high suspended solids (iv) highly persistent colour from vegetable tanneries (v) chromium in chrome tanneries.	by Aerobic stabilisation ponds gives very good effluents for Indian conditions. Flow sketch shown in Fig. 11.8. (a) Physical treatment including Screening and Sedimentation is the most essential, and generally the only treatment given to Tannery wastes, in India. (b) For better effluents, further chemical treatment including chemical Coagulation, with or without Neutralisation, followed by Biological treatment is also required. Low cost biological units like Lagoons can be cheaply and easily used for smaller and isolated plants. To obtain better results, Anaerobic lagoon may be followed by an Aerated lagoon. Flow diagram is shown in Fig. 11.9.
10.	Textiles (Cotton and Woolen)	(i) moderate BOD (700—1000 mg/l) (ii) high COD (1400 mg/l or so) (iii) highly coloured (iv) high suspended solids (8000 mg/l or so) (v) too alkaline or sometimes too acidic (vi) Chromium (10—15 mg/l)	Textile wastewaters, when made free from toxic substances, can be handled more or less like domestic sewage, because such wastewaters contain sufficient nutrients like nitrogen and phosphorous. PH adjustments are, however, generally reqd. for most of these wastewaters.

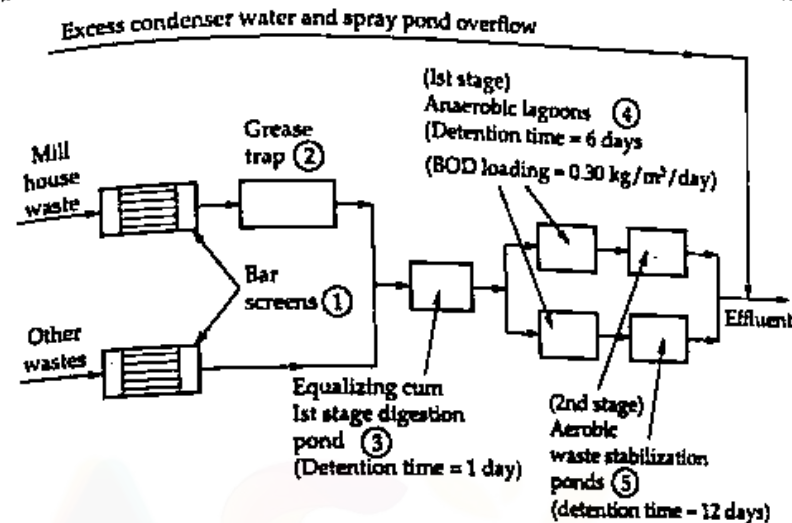


Fig. 11.8. Flow chart for treating wastewaters of a Sugar Mill—Anaerobic treatment followed by Aerobic treatment is suggested.

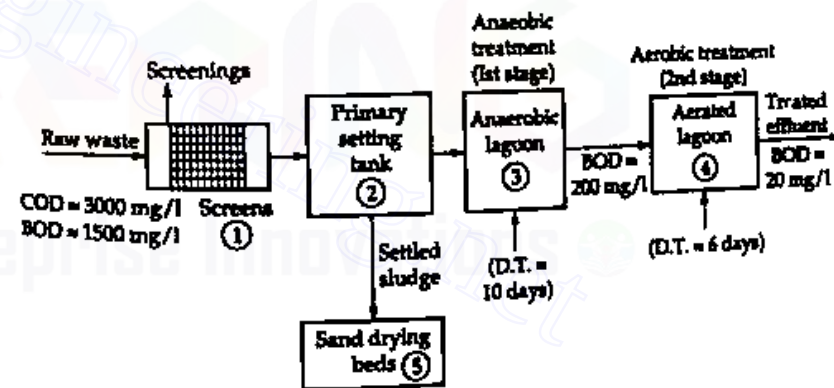


Fig. 11.9. Flow chart for treating Tannery wastewaters—Anaerobic treatment followed by Aerobic treatment is suggested.

(1)	(2)	(3)	(4)
			Conventional aerobic biological treatment units, like, <i>Trickling filters</i>, <i>Activated sludge process</i>, <i>Stabilisation ponds</i>, etc. have all been used for textile wastewaters, and found quite effective. <i>Extended aeration</i> has also given excellent results in treating strong textile wastewaters, even without equalisation and pre-treatment. It also removes the need of sludge digestion. Flow sketch for Cotton as well as Woolen textile industries are shown in Fig. 11.10 (a) and (b), respectively.

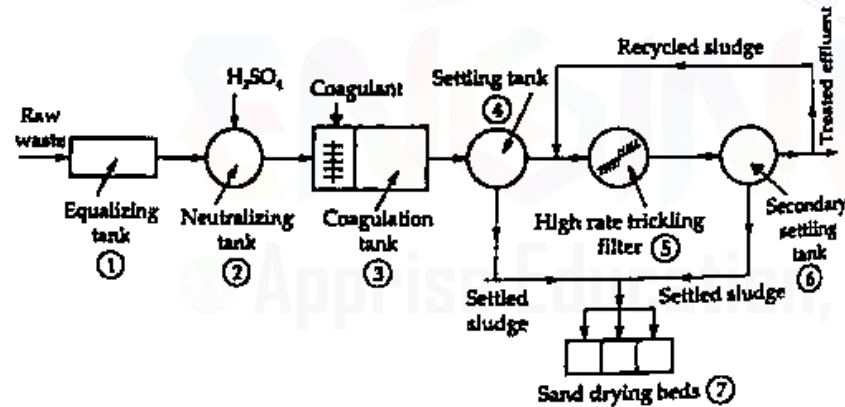


Fig. 11.10. (a) Flow chart for treating Cotton Textile mill wastewaters—mostly treated like domestic sewage.

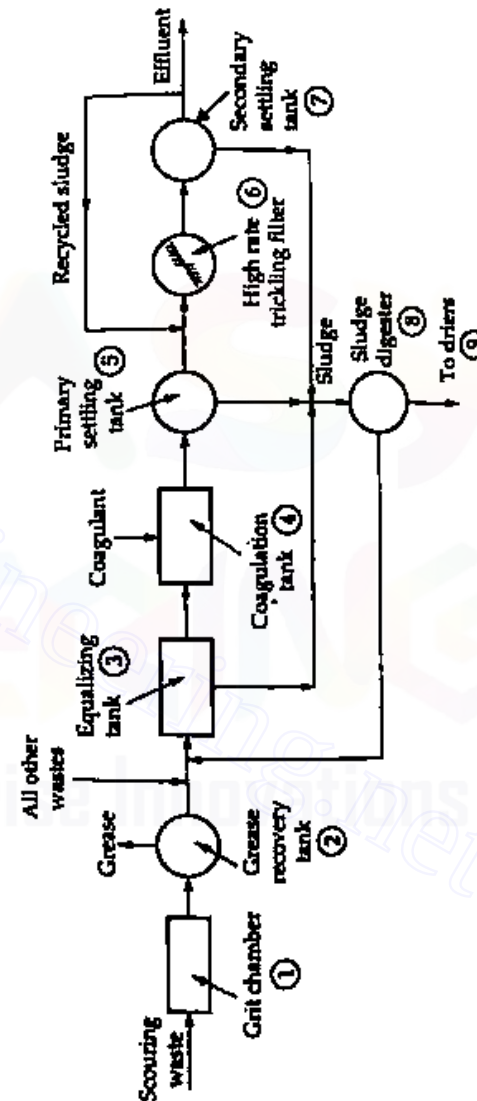


Fig. 11.10. (b) Flow chart for treating Woolen mill wastewaters—mostly treated like domestic sewage.

Table 11.2. Characteristics of Waste-Waters from Selected Industries in India

Name of Industry	Amt. of waste-water produced per unit of production	Unit of production	pH value	Suspended solids in mg/l	Typical BOD_5 value in mg/l	Typical COD value in mg/l	Typical $\frac{BOD_5}{COD}$ ratio	BOD load per kg of product	Other important characteristics
(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)
Dairy	7 m ³	m ³ of milk	7.2-8.0	700	800	1340	0.66	5.7	Oil and grease, readily putrescibility
Distillery	14 m ³	m ³ of rectified spirit	3.9-4.3	4500-12000	40,000	80,000	0.5	560	High TDS, Cl, SO ₄ , and putrescibility
Fertilizer (Ammonia)	9 m ³	tonne	7.5-9.5	3700	30	330	0.09	—	High Ammonia and urea nitrogen, high phosphates, high arsenic and oil
Oil Refinery	1.7 m ³	tonne of oil processed	—	200-400	200	—	—	0.34	High quantity of free and emulsified oils, H ₂ S, etc.
Pulp and Paper	300 m ³	tonne of paper	6.5-8.2	1000-3000	160	610	0.26	50	Lignin, colour, and suspended fibre

(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)
6.	Petro-chemical (Primary)	0.2-5.4 m ³	tonne	5.3-10.0	—	100-1000	500-3000	0.2-0.33		Phenol, oil and pH
7.	Pharmaceutical (Synthetic drugs)			6.5-7.0	—	500-1000	5000-7000	0.10-0.13		Either acidic or alkaline, high total solids, highly specialised sequence of operation necessary
8.	Sugar mills	3 m ³	tonne of cane crushed	4.6-7.1	220-800	300-2000	800-4400	0.7-0.6		Low pH, high volatile solids
9.	Tannery	3.2 m ³	tonne of hide	8-9	1000-2000	1700	3600	0.48	5.4	Cr ³⁺ = 0.4 kg/100 kg of hide, Cl = 4600 mg/l, tannin, colour
10.	Textiles (cotton)	25 m ³	1000 m of cloth	7-10	375	350	525	0.66	8.75	Colour, TDS = 300 mg/l, % sodium = 0.9
11.	Viscous Rayon	570 m ³	tonne	2.8-4.1	200	—	210	—	—	Zinc = 6 to 18 mg/l, poly sulphides

11.3. Thermal Pollution

Certain industries release hot waters directly into the natural streams or lakes, thereby polluting their water supplies due to *warming*. Although small amount of heat released into a water body may not have any serious repercussions, yet large quantities may certainly kill heat-intolerant plants and water animals. Elimination of heat intolerant species would lead to flourishing of *heat tolerant species*, which are usually *less desirable species*.

The warming of water also lowers the DO (dissolved oxygen) and increases its BOD, and at the same time increases the metabolic rate of aquatic organisms. Since metabolism requires oxygen, certain species may be entirely eliminated if the temperature of the water body rises by 10°C or so. Heated waters may also interfere with the movement of migratory fish and their spawning process; and similarly, too warm waters may not allow hatching of trout eggs. Warming of water also increases the susceptibility of aquatic organisms to parasites, toxins and pathogens, due to increased BOD.

The hot water discharges in water bodies, thus, drastically alter the aquatic ecosystem, thereby affecting the entire aquatic food chain. Excessive cold discharges in water bodies from industries may also similarly cause drastic changes in the biota of the waterbody. *Such pollution of water, which is caused by its abnormal warming or cooling, is known as thermal pollution.*

Sharp and sudden changes of temperature in a water body may even lead to large scale death of fish and other organisms, that fail to escape. Such an incident of sudden and heavy deaths of aquatic life is called a *thermal shock*. Evidently, a *thermal shock* may be caused by a new industry, which on a fine day, starts releasing its hot water from its cooling process; or a shut industry, which restarts its operation after remaining idle for a long time.

Thermal pollution is largely caused by the industries, which release hot waters from their cooling processes. The worst offending industries in this respect are:

nuclear power plants, steel mills, oil-refineries, paper mills, etc.

Thermal pollution can be controlled by constructing *cooling ponds* for collecting hot water for its cooling before its release into the nearby water body. Cooling towers are also constructed and used in modern days to dissipate heat energy before releasing the wastewater to avoid its hot discharge into the water body.

—12

Excreta Disposal in Unsewered and Rural Areas

12.1. General Introduction

Sewers, as we know, have not been laid in large part of India, due to non-availability of enough funds. The priority was first given to the piped potable water supply, education, industrialisation, etc. in comparison to sewerage. Hence, ever after more than 60 years of independence, we find the existence of unsewered trans-Yamuna colonies even in the capital of this country (i.e. in Delhi), where a large population is living. When the capital city of our country is having large population living with conservancy system of sanitation, one can easily imagine the fate of our town and village folks. Most of these places are without sewers, and are provided with conservancy system of sanitation.

Even the unsewered colonies can be divided into two types, i.e. (i) those which are provided with organised municipal water supplies; and (ii) those which are not provided even with such water supplies. Most of our cities and towns fall under the first category; whereas, most of our villages and other isolated dwellings, institutions and camping sites fall under the second category. In the absence of a sewerage system, various methods of the conservancy system are used to dispose of the sullage and human excreta. Due to nonavailability of large amounts of water, the waste obtained from such communities is generally small. Particularly, in the second category, only the human excreta requires disposal; whereas, in the first category, some amount of sullage will also need disposal.

Sullage in such areas is generally taken along side drains flowing along houses, and then finally discharged into some open surface drain or just left unattended into some outside pond, depression, etc. The human excreta, however is buried underground through the *latrines* (privies) of different designs. Sometimes, such latrines directly discharge their wastes into deep underground pits, or sometimes the wastes are collected by sweepers, carted manually as head load or in carts, and finally buried outside the town, and thus, composted.

Where comparatively, larger amount of water is available due to the availability of an organised municipal supply, however, septic tanks are constructed, provided land is also available. The sewage from individual houses, may also sometimes be disposed of for farming by subsurface irrigation. The design and construction details of septic tanks, alongwith the methods adopted for disposal of its effluents, have already been discussed in details in article 9.45. The sub-surface irrigation methods for disposal of

sewage or the septic tank effluents, have also been discussed in that article, and hence need not be repeated here.

We will, however discuss in this chapter, the various types of latrines, which have been designed and developed for use in such unsewered areas.

12.2. Privies of a Conservancy System of Sanitation

The different types of privies, which are used in such unsewered areas, are briefly discussed below :

12.2.1. Removable Receptacle Privy. This is the oldest and primitive type of a privy, still being used in India at various places, including various villages and smaller towns.

Fig. 12.1 shows the typical sketch of such a latrine. It essentially consists of a removable metal container placed below the simple squatting seat. The excreta is collected from this container daily by sweepers, and carted away for further disposal by composting, etc.

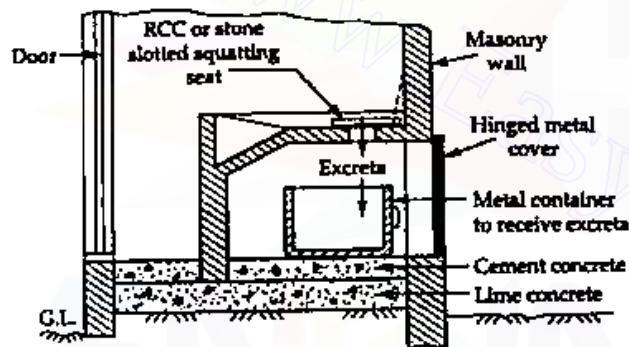



Fig. 12.1. Removable Receptacle Privy.

12.2.2. Bore-hole Privy (Dry Latrine or Soak Pit Privy). This type of a latrine consists of a 40 cm dia bore hole, normally drilled 4 to 6 m deep (but certainly 1 m above the water-table, to avoid pollution of ground water). The hole may either be lined or unlined from inside, but should preferably be lined.


The bore hole (or sometimes even a pit may be used), is connected at its top to the squatting seat. Either an ordinary slotted R.C.C. seat, as used in a removable receptacle privy, may be used here ; or to make things more sanitary and aesthetic, a pan and a trap arrangement may be used. Both these arrangements are shown in Fig. 12.2 (a) and (b) respectively.

In this type of latrine, the excreta directly goes into the pit, and gets digested in due course, while the liquid portion gets absorbed. The construction of such a latrine is simple and cheap. Since no human element is required for disposal of excreta, it is a much better type of a privy than the one described earlier.

The smell and fly nuisance will, however remain in the simple squatting plate type, which will also be eliminated in the improved type provided with pan and trap arrangement, which of course will require flushing cistern and

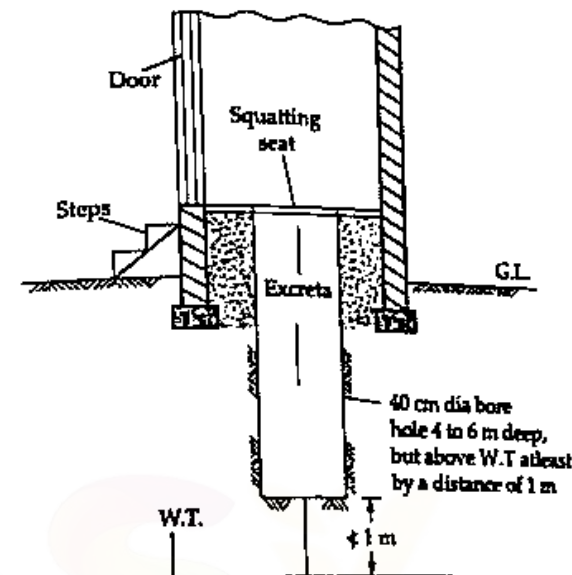

(a) Bore hole latrine with squatting plate

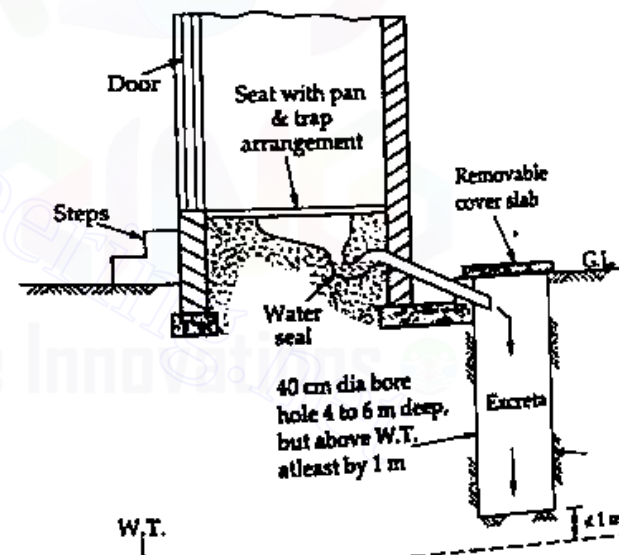

(b) Bore hole latrine with a pan and a trap arrangement

Fig. 12.2. Bore hole Latrines (Dry Latrines).

The biggest drawback with this type of latrine, however, is that the bore hole gets filled up after sometime, and a new bore hole will need to be excavated, thereby requiring shifting of the entire superstructure and accessories. Moreover, in areas of high water-table, the depth and hence the capacity of the

bore-hole will be very limited, needing frequent shifting. In such areas, the ground water is also susceptible to contamination.

12.2.2.1. Concrete vault privy. This is an improved form of bore hole privy, for areas of high water-table or in sandy soils. In sandy soils, the construction of a pit or a bore hole will be very difficult, and in areas of high water-table, there is a likelihood of its getting contaminated by bore hole privies. Hence, in such circumstances, a concrete vault privy is generally adopted.

A concrete vault privy (Fig. 12.3) essentially consists of a water-tight concrete vault (chamber) constructed under-ground. Squatting pan with compartment is placed over the concrete vault as shown. When the vault is filled up, it is emptied and cleaned through the manhole cover. To prevent bad odours, generally soil is thrown daily after use, over the excreta. Squatting pan should also be constructed in such a way that no water can enter the vault.

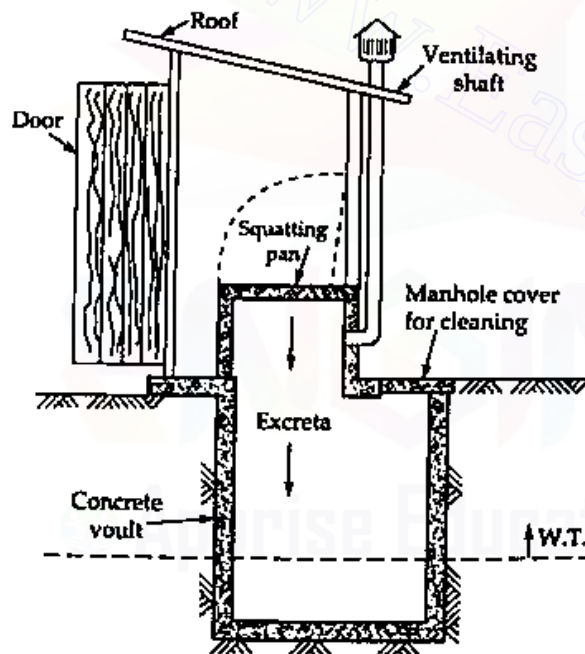


Fig. 12.3. Concrete Vault Privy.

12.2.2.3. Aqua Privy (Wet Latrine). The dry latrines, described above, are either temporary in nature or need frequent cleaning. The aqua privy, on the other hand, is an improved form of privy, and is a permanent arrangement. Such type of privies are very convenient and ideal for factories, hill stations, isolated colonies, villages, etc.

They are, however more costly and require certain good amount of attendance for obtaining good results.

about 10 cm below the flow line in the digestion chamber (A) to provide water seal. Human excreta (stools and urine) directly falls into the chamber (A), and is decomposed under anaerobic conditions. Gases formed during the decomposition are allowed to escape into the atmosphere through the vent pipe provided in the second chamber (B).

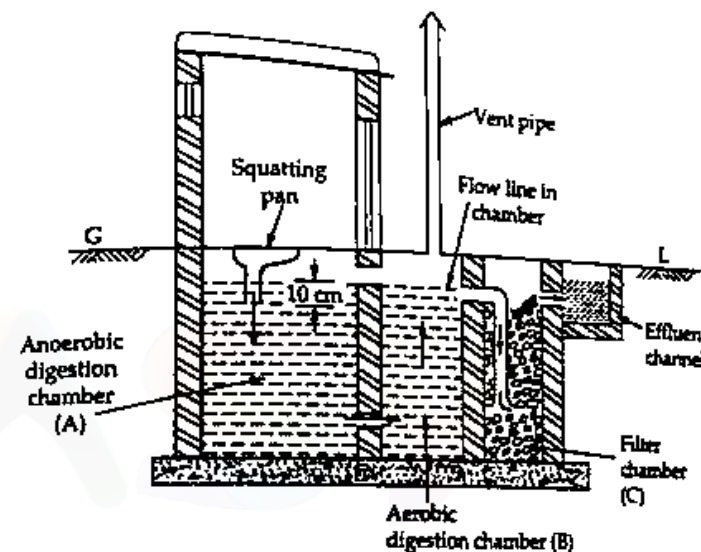


Fig. 12.4. Aqua Privy (wet latrine).

Since the second chamber (B) is connected to the atmosphere, the aerobic digestion takes place in this chamber. The digested sludge gets settled in both these chambers [i.e. (A) and (B)], and the effluent from the second chamber flows to the third chamber (C) through a pipe whose outlet is taken down, upto somewhat near the bottom of the third chamber. Chamber (A) and (B) are of equal size and the third chamber (C) is of smaller size, and is filled with clinker to act as filter media. Effluent, while rising up through the clinker, gets purified, and can be used for gardening or farming.

Such a privy was considered to be a very useful and economical method of disposal of human excreta, till the advent of *Sulabh Sauchalaya*s, for unsewered and rural areas.

12.2.4. Sulabh Shauchalaya (Hand-flush Water Seal Latrine). A *sulabh shauchalaya* (Fig. 12.5) is a modern answer to the old conservancy system of dry latrines, since it completely avoids the carriage of night soil as head load. Such a latrine is also considered to be a better choice than a septic tank latrine, since it neither involves periodic manual cleaning as is involved for a septic tank, nor it emits foul odours as are emitted by the vent pipe of a septic tank. Additionally, a *sulabh shauchalaya* requires about $\frac{1}{3}$ times the water required by a septic tank privy. Moreover, a *sulabh shauchalaya* can be constructed very easily by an ordinary mason, and is quite economical (costing about ₹ 5000-8000 only).

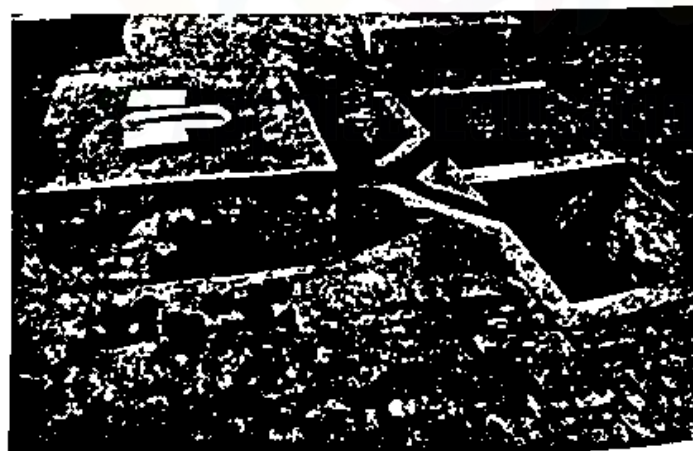
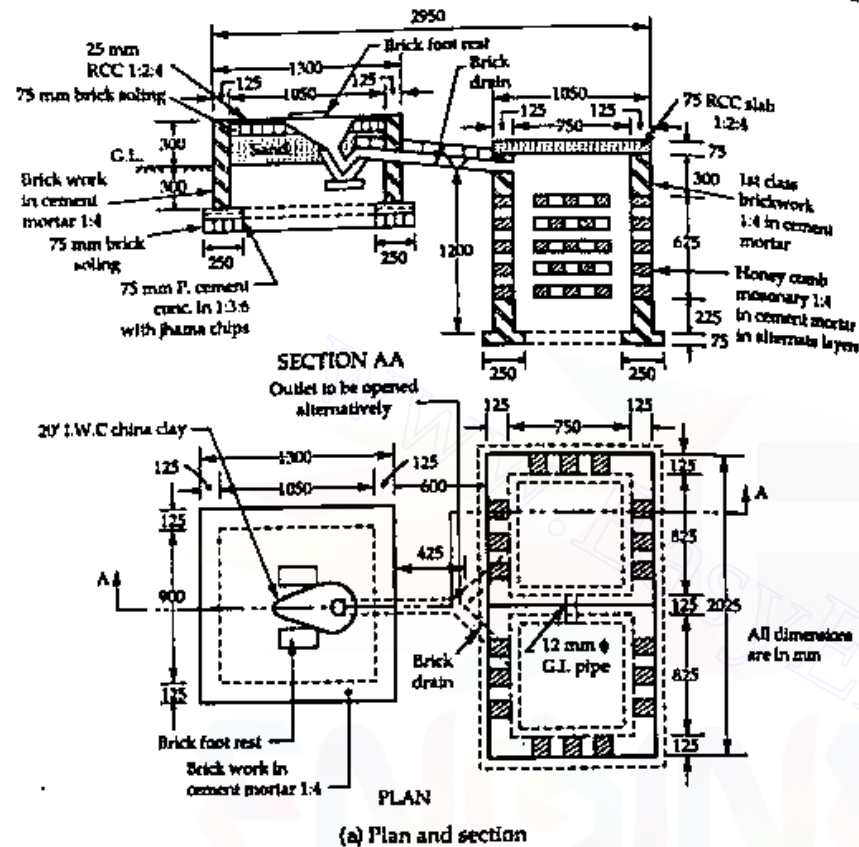


Fig. 12.5. Sulabh shauchalaya with rectangular tanks.

Sulabh latrines can be constructed either as isolated units for individual houses, or in groups for common use of a colony or for public conveniences. A sulabh latrine essentially consists of a specially designed 500 mm long W.C. pan, made of moulded mosaic or china clay, mounted on a 200 mm water seal with groove as shown in Fig. 12.6 (a) and (b).

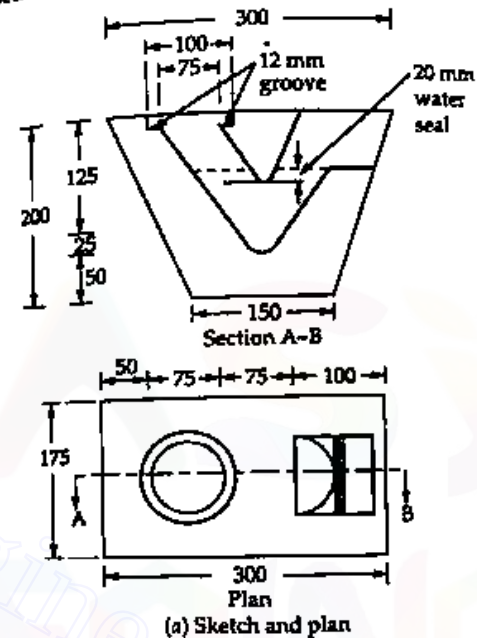


Fig. 12.6. Sulabh pan mounted on sulabh seal.

This pan is called a *sulabh pan*, and the seal is called a *sulabh seal*. The *sulabh pan*, mounted on the *sulabh seal*, is fixed in a raised pedestal to provide the W.C. seat, as shown in Fig. 12.5. The W.C. is connected to the two *underground tanks* by covered drain channels, as shown in Fig. 12.5 and 12.7.

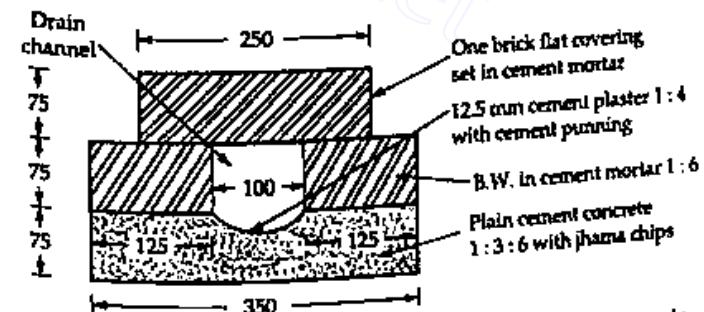


Fig. 12.7. Section of the drain channel connecting the w.c. pan with the tanks.

The two underground tanks are either circular (1 m dia $\times$ 1 m deep) or rectangular (1 m $\times$ 1 m $\times$ 1.2 m deep), and are used in turn. The rectangular tanks require lesser space, as the tanks can be adjusted side by side, as shown in Fig. 12.5. The use of circular tanks, is shown in Fig. 12.8 (a) and (b).

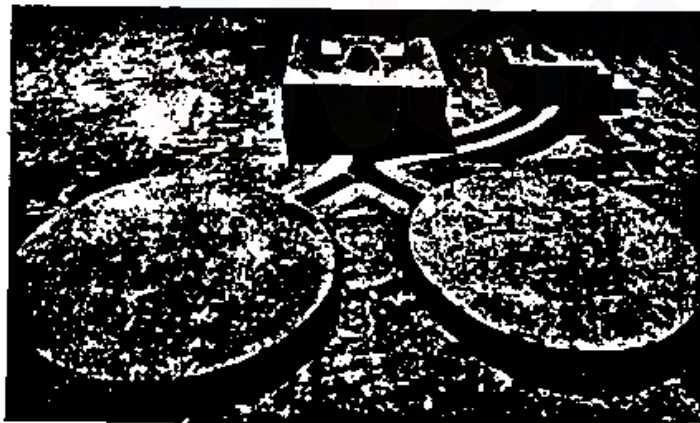
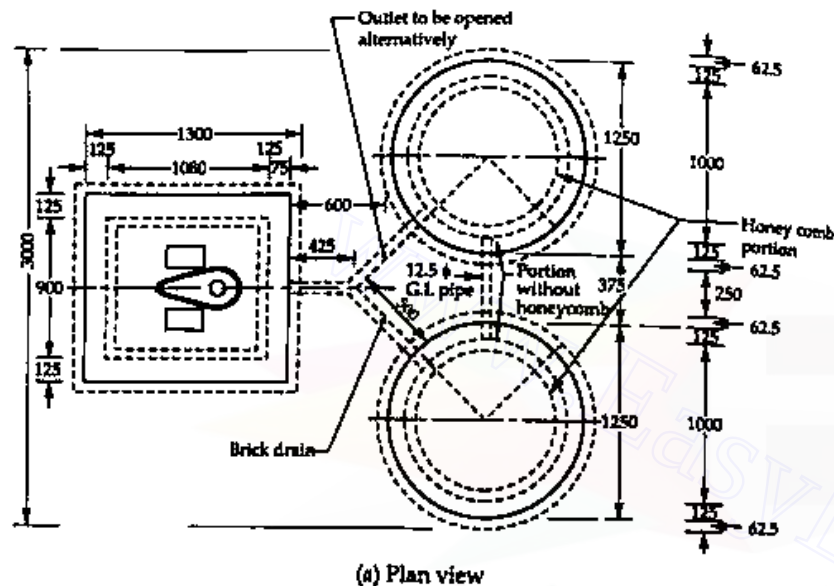


Fig. 12.8. Sulabh shauchalaya with circular tanks.

Both the tanks are interconnected by a 12 mm dia C.I. pipe near their top levels, so that the gases can pass from one tank to another. The walls of both the chambers are made of 125 mm thick brick masonry with 1 : 4 cement mortar on a 250 mm wide footing. The roof level of tanks are kept slightly higher than the adjacent ground level, so that the rain water may not enter

225 mm depth and top 300 mm height ; while the remaining height is made in honey-combed brick work (Jalli). The 4th side of each tank, which is adjoining each other, is made solid in brick work to avoid leakage of effluent from one tank to the other.

The bottom base of both the tanks are kept earthen, so that all the sewage water leaches out. The contact of earth with excreta also helps in easy decomposition and transformation of the excreta into organic manure by soil bacteria, which are found in abundance in the ground soil.

Both the tanks are covered at their tops by air-tight and water tight R.C.C. covers, which are provided with hooks for lifting at the time of opening the tank for removal of manure.

Although the W.C. is connected to both the tanks by covered drain channels, but only one of the two connections is to be opened for use at a time. In other words, only one of the two tanks shall receive the night soil at a time.

Scientific experiments have shown that the excreta starts decomposing as soon as it comes into contact with the earth, and its quantity goes on reducing as the anaerobic decomposition proceeds. Millions of anaerobic bacteria, thus, decompose this excreta, ultimately transforming it to manure.

Each tank will serve a family of 5 members for a period of 5 years ; after which time, the firstly used tank shall be closed by blocking its inlet drain, and the second tank will be put into use by opening its inlet drain. 2 years after the stoppage of the use of the first tank, the manure can be taken out preferably in summer season for remaking the first tank ready for reuse.

In this way, the tanks can be used alternatively for a total life period of about 100 years.

PROBLEMS

1. Enumerate and discuss the various types of privies that are used in conservancy system of sanitation. Draw neat sketches for any two types of these.
2. Differentiate between 'dry latrine' and 'wet latrine' drawing neat sketches of both. Also write down their merits and demerits in relation to their use in Indian conditions.
3. Discuss the various methods that are used to dispose of human excreta in areas where sewers have not been laid. Illustrate your answer with Indian examples.
4. What are sulabh shauchalayas ? Why are they finding increasing use in developing countries like India ? Draw a neat sketch to illustrate the working of a sulabh shauchalaya.
5. Differentiate between a septic tank privy and a sulabh shauchalaya, and discuss their merits and demerits.
6. Write short notes on :
 - (i) Aqua privy ;
 - (ii) Concrete vault privy ;
 - (iii) Bore hole privy ;
 - (iv) Sulabh shauchalaya.

—13

Sewage Collection from Houses and Buildings

13.1. General Introduction

The sewage produced in houses and buildings has to be conveyed and connected to the municipal sewers by the owners of the houses. The provision and construction of an efficient plumbing system, for collection and movement of the sewage produced in the building, till it is carried and discharged into the nearest municipal sewer, is an important aspect of building construction.

Many of us, who are living in areas provided with sewers, might have experienced the bad or improperly designed plumbing works, which everyday poses problems, in either the kitchen drain or the wash basin or the water-closet getting choked, or the foul smells escaping from somewhere or the other. A properly designed and carefully constructed plumbing system in buildings, is therefore, absolutely necessary to avoid such frequent troubles.

13.2. General Principles Governing the Design of a Sanitary Plumbing System

The various sanitary fittings provided in buildings, such as wash basins, bath tubs or bath rooms, kitchen sinks, urinals, latrines (with their flushing cisterns), etc. do contribute to the sewage, and hence a system of pipes should be laid and connected with the sanitary fittings in such a way that the sewage (or sullage) automatically flows by gravity through this system, and ultimately discharges into the municipal sewer. Such a plumbing system, should be designed keeping into consideration the following general principles:

(1) For better maintenance and easy repairs, the house sewer pipes should preferably be laid by the side of the building rather than in walls or underground. But in modern days in small houses, they are generally embedded in walls; and in large buildings, kept outside and accommodated in shafts, to avoid their bad appearance.

(2) Drains should be laid straight between the manholes (inspection chambers). All sharp bends and junctions, which tend to become dead-ends for collection of sewage solids, should be avoided except through manholes.

(3) The entire system should be properly ventilated from the start to the end.

(4) The house sewer should be connected to the public sewer, keeping the outfall level of the house sewer sufficiently higher than the water level of the public sewer* to avoid back flow and inefficient building drainage.

(5) The plumbing system should contain enough number of traps, at suitable points for its efficient functioning or to avoid evolution of foul smells.

(6) The house sewer should be disconnected from the public sewer by the provision of an intercepting trap, so as not to allow foul gases from public sewer to enter the house sewer.

(7) Joints of sewers should be water-tight, and should be properly checked so. Any leaking joint, especially when the pipe is buried in the wall or floor, will later-on pose serious problems, needing dismantling of walls and floors.

(8) Lateral sewers should be laid at sufficient slopes (gradients), so as to develop self cleansing velocities.

(9) The layout of house plumbing system should, as far as possible, be such as to permit easy cleaning in case of blockade, or repair in case of leakage, or additions if additional sanitary fittings are provided on a future date.

(10) High quality sewer pipes should be used in the system.

(11) Possibilities of formation of air-locks, siphonage, and due deposits, etc. should be properly studied, and remedies should be accommodated in the design to avoid them.

(12) The size of lateral sewers should be such that they will not overflow at the time of maximum discharge.

(13) Rain water from roofs or open courtyards should not be allowed to mix with house sewage or sullage, but should be separately discharged on road or street surface, for catch basins or inlets to convey it to the storm water drains, etc. The rain water is best used for rain water harvesting.

13.3. Functions and Types of Traps being used in Sanitary Plumbing Systems

13.3.1. Definition. Traps may be defined as fittings, placed at the ends of the soil pipes or the sullage pipes (waste pipes)** to prevent the passage of foul gases from the pipes to the outside. This is possible because traps do enclose or maintain water seal between the pipe and the outside. This water depth does not allow gases to escape to the outside of the pipe. The efficiency and effectiveness of a trap will depend upon the depth of the water seal. Greater is this depth, more effective the trap will be. This water seal generally varies from 25 mm to 75 mm; 50 mm being quite common in most of the traps.

13.3.2. Qualities. A good trap should possess the following qualities:

(i) It should provide sufficient water seal (50 mm—or so) with large surface area;

(ii) Its interior should be smooth, so as not to obstruct flow, and the trap should thus be self cleansing;

*The public sewers are of course, normally laid quite deep, compared to the general ground level of the area.

**Soil pipes are the pipes which carry the night soil, and sullage pipes are the pipes which carry the sullage from bathrooms and kitchens.

- (iii) It should be provided with an access door for cleaning ; and
- (iv) It should be made of some non-absorbent material.

13.3.3. Types. Depending upon their shapes, the traps may be of three types, i.e.

- (i) P-trap ;
- (ii) Q-trap ; and
- (iii) S-trap.

These three types of traps are shown in Figs. 13.1 and 13.2. A trap essentially consists of a U-tube, which retains water, acting as a seal, between the foul gases (inside the pipe) and the outside atmosphere. They are largely used for baths, sinks, and laboratories. In all such needs, they are made with enlarged mouth, so that the waste pipe may be thoroughly flushed out.

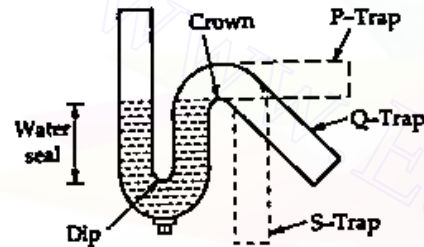


Fig. 13.1. P, Q and S Traps shown together.

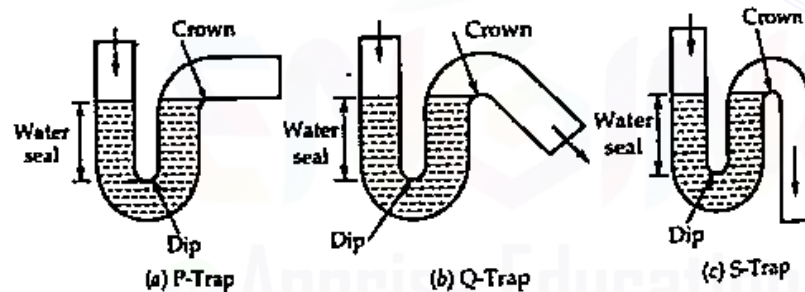


Fig. 13.2. P, Q and S Traps, shown separately.

Depending upon their use, the traps may again be of three types i.e.

1. Floor trap ;
2. Gully trap ; and
3. Intercepting trap.

These three different types of traps are briefly described below :

(1) **Floor Traps.** These traps are generally used to admit waste water (sullage) from the floors of rooms, kitchens, baths, etc. into the said room drain (sullage pipe). These are invariably provided with cast iron or galvanised or stainless steel gratings (Jallis) at the top, so as to prevent the entry of solid and larger sticky matter, into the drain pipe, to avoid frequent blockade. A

commonly used patented name of such a trap is **Nahni trap**. A floor trap is shown in Fig. 13.3.

(2) **Gully Traps.** A gully trap or a gully (Fig. 13.4) is often provided at the junction of a room or a roof drain and the other drain coming from bath, kitchen, etc. The foul sullage from baths, will enter through the side inlet (called back inlet), and the unfoul room washings or rain water from roof or courtyard will enter from the top.

The rain water pipes or sullage pipes discharging into drains, are often connected to them through such traps. Gully traps may either have a S-trap or a P-trap. The water seal is usually 50 mm to 75 mm deep. The top of the trap is covered by a C.I. grating to exclude the entry of coarser materials to avoid blockade.

(3) **Intercepting Traps.** An intercepting trap (Fig. 13.5) is often provided at the junction of a house sewer and a municipal sewer, so as to prevent the entry of the foul gases of the municipal sewer, into the house drainage system. This trap at such a junction is often provided in a small man-hole (Fig. 13.6) constructed just near the house, either outside in the street or in a corner inside the house boundary. This trap is provided near its top with an access gate or a plug, called *cleaning eye*, for removing silted matter from inside the trap in case of blockade. It has a high depth of water seal, say about 100 mm. It is interesting to note the merits and demerits of an interceptor, which are given below :

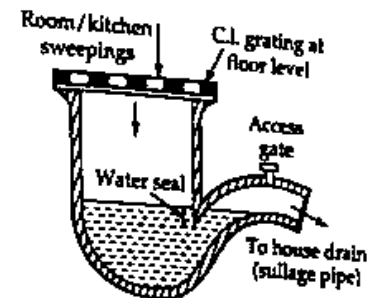


Fig. 13.3. Floor Trap.

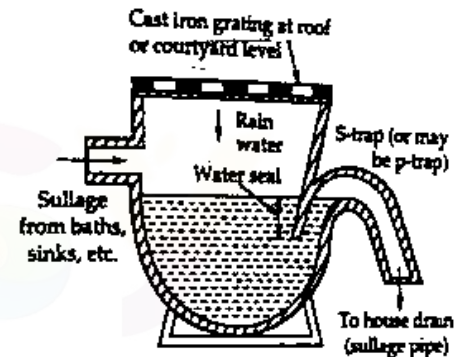
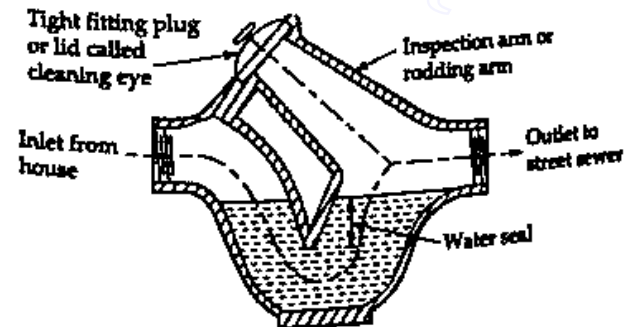


Fig. 13.4. Gully Trap.



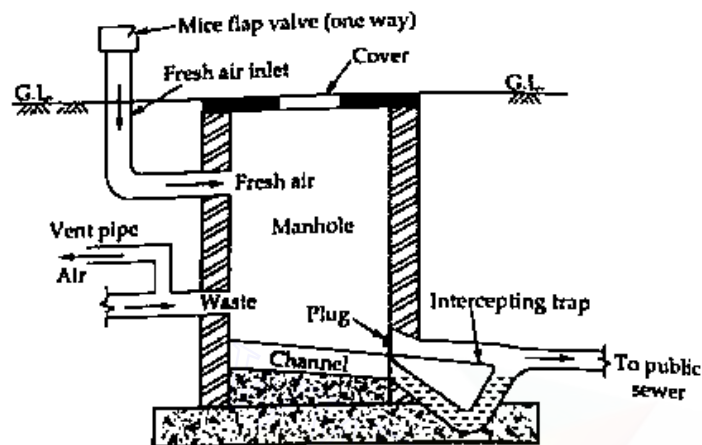


Fig. 13.6. Manhole with Intercepting trap.

Merits of interceptors. (i) Foul gases of public sewer cannot pass through the interceptor, and hence prevented from entering the house drainage system. If the interceptor is not provided, these gases will enter the vent pipes of the house drainage system, and spread around in the surrounding atmosphere, causing serious air pollution.

(ii) Harmful pathogenic bacteria contained in the public sewers are thus prevented from entering the house drains, due to the presence of the interceptor.

(iii) Properly designed and constructed interceptors can quickly remove the foul matter of the house drains into the public sewer.

Demerits of interceptors. (i) If the discharge from house drains is small, the solid heavy matter may be retained in the trap, and may start decomposing, producing foul gases. The basic purpose of interceptors of preventing foul gases, will then no longer be served.

(ii) If the lid or the plug is not fitted properly, or is broken, foul gases from public sewer will do enter the house drain.

(iii) Cleaning through the inspection arm of the trap is not easy.

(iv) Interceptor itself forms an obstruction to the normal flow of sewage.

(v) Omission of interceptors from house drainage is found not to present too serious a difficulty or a problem.

(vi) Presence of interceptors installed by house owners, is found to seriously affect the ventilation of public sewers, as in such cases, the foul gases of public sewers will find an outlet only through the ventilating columns, which are provided at the head of every branch sewer and at other key points in the city sewerage system. Hence, if interceptors are allowed, then public sewers will need greater ventilation arrangements, and hence involving more expenditure, consequently leading to greater taxes on the public.

In view of this difficulty, the city municipality itself decides whether to allow the house owners to install or not to install interceptors.

13.4. Systems of Plumbing

Following are the four principle systems adopted in plumbing of drainage work in a building:

- (1) Two pipe system;
- (2) One pipe system;
- (3) Single stack system; and
- (4) Partially ventilated single stack system.

These systems are discussed below:

(1) **Two pipe system.** This is the best and the most improved type of

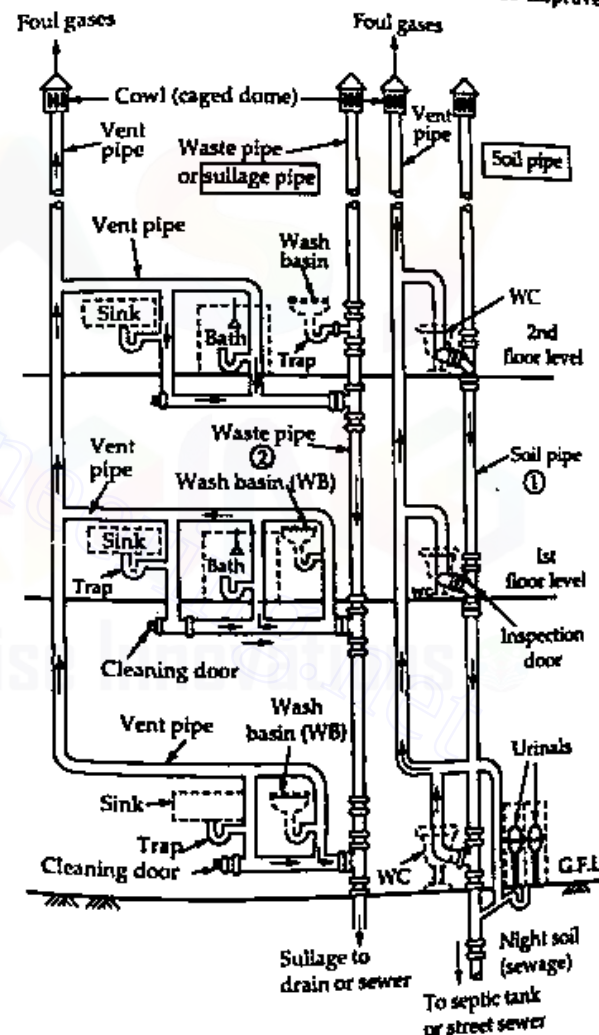


Fig. 13.7. Two pipe system of Plumbing.

system of plumbing. In this system, two sets of vertical pipes are laid, i.e., one for draining night soil, and the other for draining sullage. The pipes of the first set carrying night soil are called *soil pipes*, and the pipes of the second set carrying sullage from baths etc., are called *sullage pipes or waste pipes*.

The soil fixtures, such as latrines and urinals, are, thus, all connected through branch pipes (laterals) to the *vertical soil pipe*; whereas, the sludge fixtures such as baths, sinks, wash basins, etc. are all connected through branch pipes to the *vertical waste pipe*. The soil pipe as well as the waste pipe, are separately ventilated by providing separate vent pipes or antisiphonage pipes*, as shown in Fig. 13.7. This arrangement, thus requires four pipes.

This system, thus involves a large number of pipes, and is thus quite costly. In small houses, moreover, it becomes difficult to accommodate such a large number of pipes.

(2) **One Pipe System.** In this system, instead of using two separate pipes

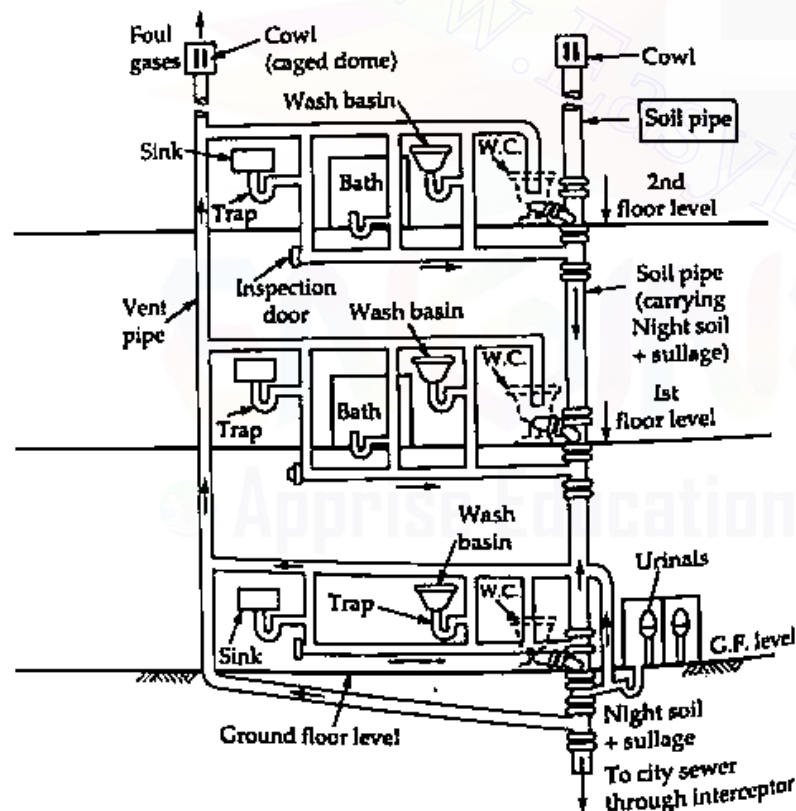


Fig. 13.8. One pipe system of Plumbing.

(for carrying sullage and night soil, as is done in the above described two pipe system), only one main vertical pipe is provided, which collects the night soil as well as the sullage water from their respective fixtures through branch pipes. This main pipe is ventilated in itself by providing cowl at its top, and in addition to this, a separate vent pipe, however, is also provided, as shown in Fig. 13.8. This system, thus, has two pipes, instead of four pipes of the two pipe system.

(3) **Single Stack System.** This system is a single pipe system without providing any separate ventilation pipe. Hence, it uses only one pipe, which carries the sewage as well as the sullage, and is not provided with any separate vent pipe, except that it itself is extended upto about 2 m higher than the roof level and provided with a cowl, for removal of foul gases, as shown in Fig. 13.9.

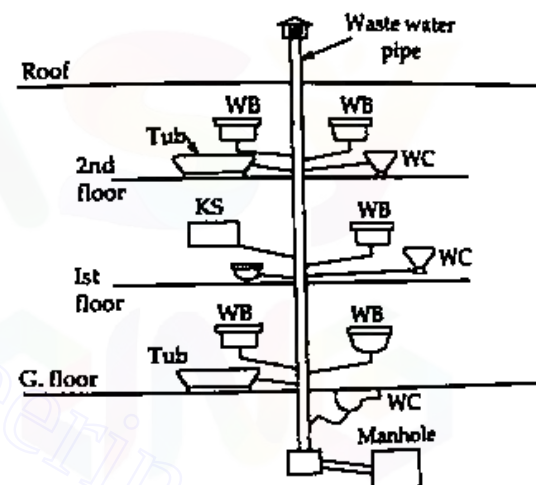


Fig. 13.9. Single stack system of Plumbing.

(4) **Partially Ventilated Single Stack or Single Pipe System.** This is an improved form of single stack system in the sense that in this system, the traps of the water closets are separately ventilated by a separate vent pipe called *relief vent pipe*. This system, thus, uses two pipes as in a single pipe system, but the cost of branches (laterals) is considerably reduced compared to single pipe system, because the sullage fixtures are not connected to the vent pipe. This arrangement is shown in Fig. 13.10.

Besides these systems, other combinations and permutations are also possible and may be adopted by some people.

13.4.1. Choice of a Particular System of Plumbing. As pointed out earlier, the two pipe system is the best system for efficient conveyance of sanitary house wastes with minimum use of traps, and is therefore, largely favoured, particularly for large and multistoreyed buildings. This system, and is hence

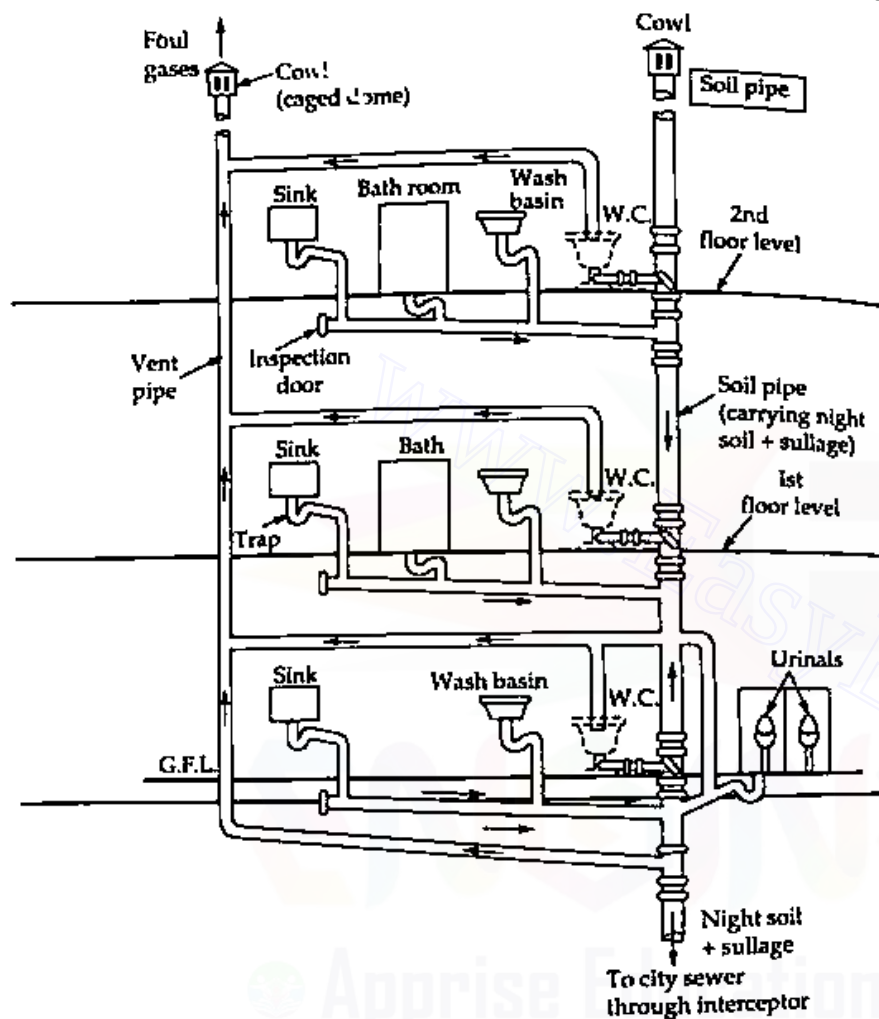


Fig. 13.10. Partially ventilated single pipe system.

costly. Moreover, it is also difficult to find suitable place for accommodating so many pipes in small houses and buildings. In that case, one pipe system is more economical and easy to accommodate, but requires sufficient safeguard to make the drainage effective, in the form of proper ventilation, adequate water-seals, and proper connections between the sanitary fixtures and the soil pipe. In multi-storeyed buildings, moreover, use of one pipe system, generally makes it imperative to place the lavatory blocks of various floors one above the other.

13.5. Sewerage Plans of Buildings and Design of Sewer Pipes

13.5.1. Quantity of Flow. The flow in the drainage pipes of a house sewerage system is also

small. The average rate of flow is usually based on a water supply of 135 litres per capita per day for average Indian conditions. The maximum flow may be taken as three times this average.

13.5.2. Pipe Sizes and Gradients. The usual pipe sizes for house drains and sewers are 100 mm, 150 mm and 230 mm; and in some extreme cases, 300 mm also. The lateral pipes should be laid with gradients sufficient to prevent any deposition of large amounts of solid matter to avoid blockade. The recommended gradients for sewers carrying maximum flow ($3 \times$ average flow) when running half full and with minimum self cleansing velocity of 0.75 m/sec, and the corresponding discharges are given in Table 13.1.

Table 13.1. Recommended Gradient and Discharge Capacity of House Sewers (Pipes)*

Dia. of Pipe sewer in mm	Gradient	Discharge in m^3/minute (m^3/day)
100	1 in 35	0.18 (259)
150	1 in 65	0.42 (605)
230	1 in 120	0.93 (1339)
300	1 in 200	1.66 (2390)

The commonly adopted sizes for house drains, for average condition, are as follows :

Soil pipe	= 100 mm ϕ
Sullage pipe (vertical)	= 75 mm ϕ
Sullage pipe (horizontal)	= 32 mm to 50 mm ϕ
Vent pipe	= 50 mm ϕ

13.5.3. Sewerage Plans of Buildings. It is generally convenient and sometimes necessary to prepare the detailed plans of house sewerage system and to get it approved from the municipalities. While preparing such plans, the following points need attention :

- The site plan of the building should be drawn to a convenient scale, and positions of gully traps (G.T.) should be marked on it, as shown in Fig. 13.11.
- The L-section of the proposed sewer (drain) should be drawn to a convenient scale. Generally, the L-sections of drains larger than 150 mm ϕ are only drawn. Such an L-section should show distances, ground levels, invert levels, depths of cutting, sizes of manholes, sizes and gradients of pipes, etc., as shown in Fig. 13.12.
- The position of public sewer should be clearly marked on the site plan as well as on the sewer L-section. It is advisable to join the house sewer to a manhole on public sewer line, if site conditions permit.


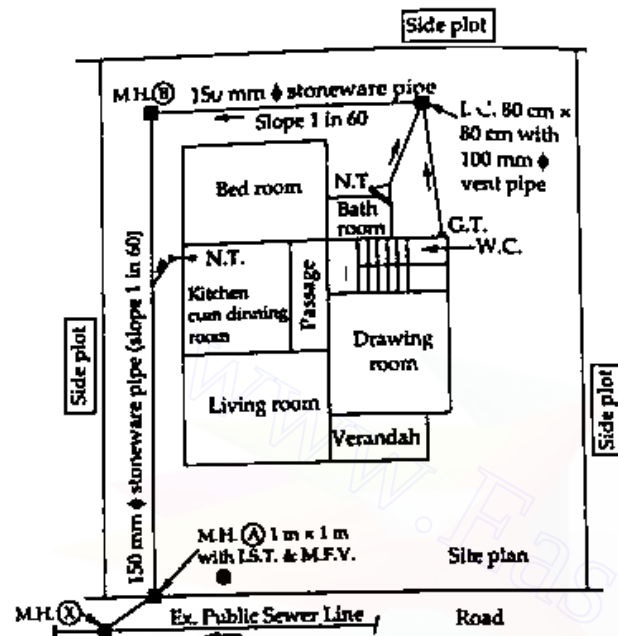


Fig. 13.11. General Sewerage Plan of a Building.

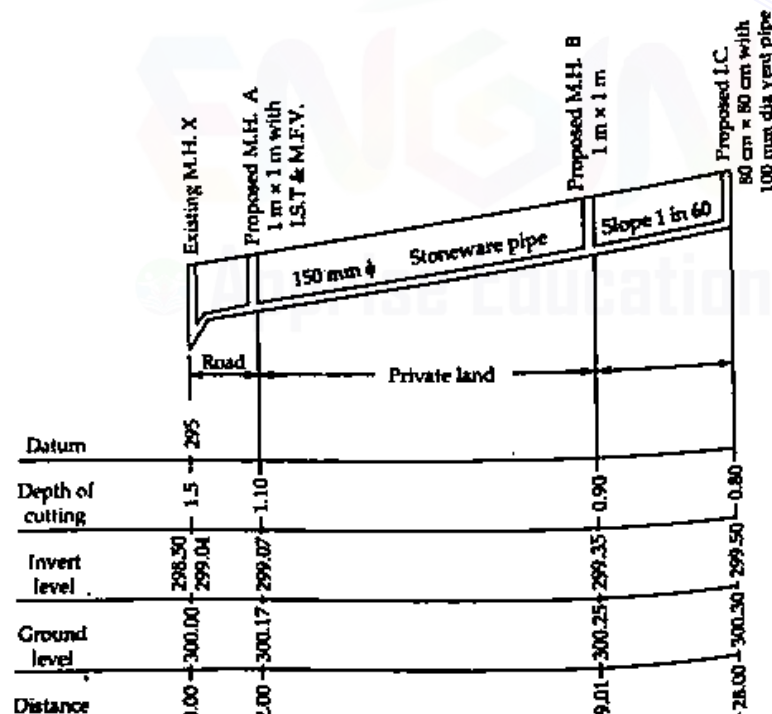

(iv) Detailed plans of different floors of building show the positions of floor traps, sanitary fittings, etc. They are to be connected by keeping in mind the general principles of house drainage.

(v) House drains are laid as per details on the approved sewerage plan of the building.

(vi) House drains are tested for water-tightness, and the trenches in walls or floors, are filled up only thereafter.

13.6. Testing of House Sewers

After the house sewers are laid and the pipes fitted in position, they are usually tested to ascertain the water-tightness of the joints. The sewers (drains) are usually tested in sections between successive chambers, and the vertical pipes are tested in groups, each group having one common inspection chamber. Three tests, are commonly performed to test house drains; viz.

- Air test;
- Hydraulic test or Water test; and
- Smoke test; as explained below;

(i) **Air Test.** Air test is generally used to test underground and vertical pipes. In this test, the particular section of the pipe to be tested, is plugged at upper and lower ends, and air is forced into the pipe with the help of a pump, etc. All the joints are coated with soap solution. The escape of air from the leaky joints will then form bubbles at the joint, which can be visually seen, and hence repaired.

(ii) **Hydraulic Test.** This test is most commonly used for testing underground house sewers. In this test, the drain (sewer) is plugged at the lower end, and water is filled in the pipe through the upper end manhole, to maintain a pressure of about 1 to 1.5 m depth of water. If there is found to be no drop in water level in this manhole in about 10 minutes time, then it can be safely assumed that no joint is leaking. However, if there is some drop in the water head, then the leaking joints have to be watched visually, and repaired.

(iii) **Smoke Test.** This test is generally performed to detect leakage of existing vertical sullage pipes or rain water pipes. In this test, smoke is forced in to the pipe with the help of a blower. Leakage can be easily detected by seeing or smelling over the emitted smoke at the leaky joints. The leaking joints can then be repaired.

13.7. Sanitary Fittings and Other Accessories

The sanitary fittings are the appliances used in a house plumbing system, to receive the human excreta and sullage waste of the house. Such fittings include:

(A) Soil Fittings

- Water Closets (W.C.); and
- Urinals.

(B) Ablution Fittings

- Flushing cisterns of water closets;
- Wash basins (WB);

- (3) Baths ; and
(4) Kitchen sinks.

All these fittings are briefly discussed below :

13.7.1. Water Closets (W.C.). A water-closet is a water-flushed plumbing fixture, designed to receive the human excreta directly, and is connected to the soil pipe by means of a trap. Sometimes, the term water-closet is applied not only to represent the particular sanitary fitting, but to the entire compartment or the room (toilet), in which this fixture is placed.

Two types of water-closets are in common use these days :

- (i) *The Squatting or the Indian type* ; and
(ii) *The Pedestal or the European type*.

These types are discussed below :

(i) **The Squatting or the Indian Type W.C.** The Indian type W.C. has a squatting pan 45 cm to 63 cm in overall length, and 45 to 60 cm in height. The pan is fitted either with a P-trap, or S-trap, which is then connected to the soil pipe [Fig. 13.13 (a)].

It is made of vitreous china or porcelain, and the pan (seat) and trap are in two different pieces and joined together, as shown in Fig. 13.13 (a). The trap has an opening for fixing an *anti-siphonage pipe* or a vent pipe. The pan has a *flushing rim* to spread the flush water. The excreta does not fall directly into

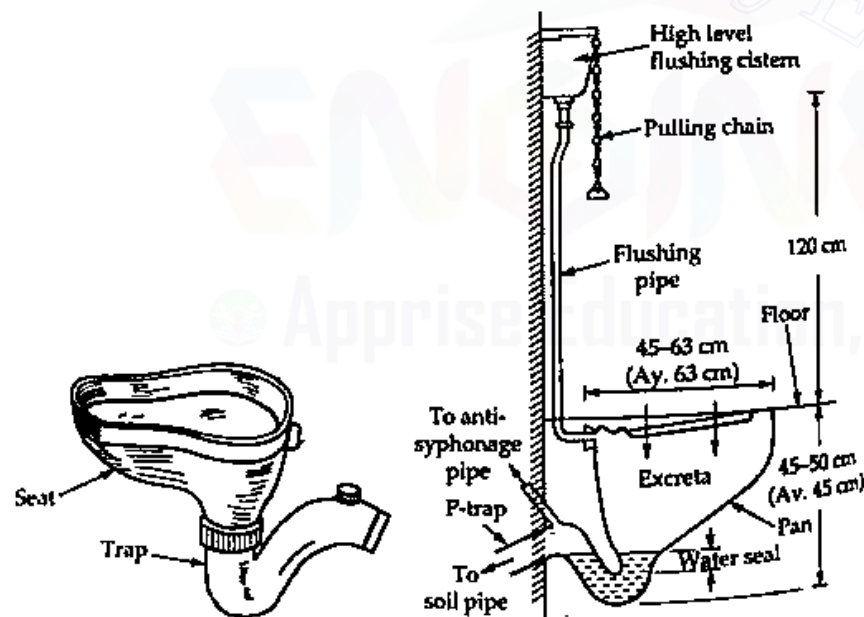


Fig. 13.13. (a) Indian Type W.C. Pan and Trap.

Fig. 13.13. (b) Section of an Indian type W.C. provided with a Flushing Cistern.

the trap, and needs to be forced into it and into the soil pipe, by flushing the pan with water released under pressure from the flushing cistern. The excreta may therefore become foul or get decomposed if not properly flushed. This W.C. requires 5-10 litres of water for proper flushing.

The pan is fixed in a squatting or *sitting* position at the floor level or at slightly raised level, and is usually provided with a pair of foot-rests for the convenience of defecating in a sitting position. A section of such a W.C. is shown in Fig. 13.13 (b).

This type of W.C. is largely used in Indian houses.

(ii) **The Pedestal or the European Type W.C.** The European type, sometimes called *wash-down type* of W.C. is mostly used in houses of western countries or in high class buildings and hotels in India. In modern days, however, most of city homes are also fitted with such European W.C.s. It is provided with a wide flushing rim and a 50 mm trap. It is one piece construction, in which the pan and the trap are not separate, as is there in an Indian type. It is provided with an inlet or a *supply horn* for connecting to the flushing pipe. The W.C. may be provided with a P-trap or a S-trap, as desired, depending upon the outlet existing in the wall or the floor, respectively.

These types of water-closets require less space than the Indian type, and can be located along with the bath in the same room as it won't look bad. They are normally flushed with a low level cistern. A section and a perspective view of such a water-closet is shown in Fig. 13.14 (a) and (b), respectively.

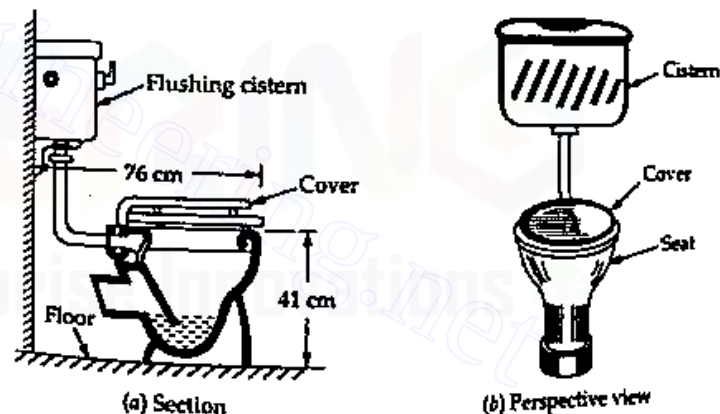




Fig. 13.14. Pedestal or European type W.C.

13.7.2. Urinals. Urinals can be of different forms and shapes. The common varieties are :

- (i) *the bowl type or the basin type* ; and
(ii) *the stall type or the slab type*.

The bowl type is generally used for private houses or buildings, and the stall type is generally used for public buildings and municipal toilets. A third type, called *squatting plate type*, is used specifically in ladies toilets, only in high classes.

The Bowl or Basin type urinals are shown in Fig. 13.15. This type of urinals are of one piece construction ; each urinal being provided with two fixing holes on each side, for fixing on the wall. This type of urinals are more costly but better in appearance and convenient to use, as compared to the slab type. They are made of glazed earthenware or vitreous china clay. They are usually flushed with siphonic type of flushing cisterns, which act automatically at desired intervals of time, say 10 to 15 minutes or so.

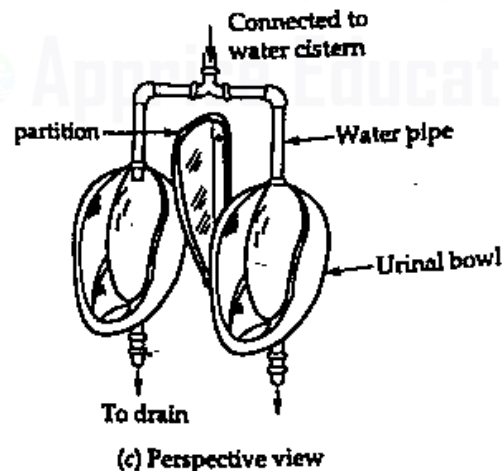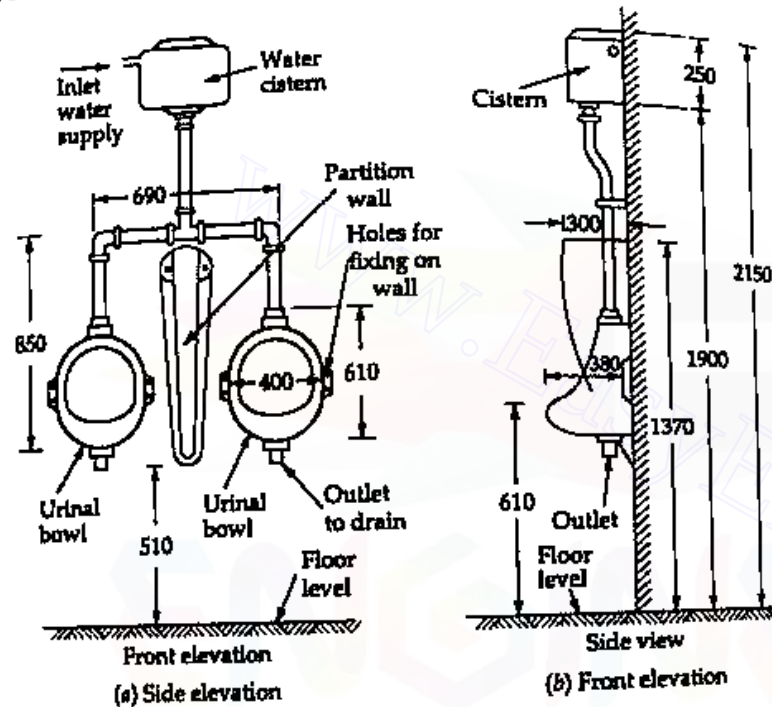

At the bottom of the bowl shaped vessel (i.e. urinal), an outlet horn is provided for connecting the urinal to the soil pipe through a floor trap (Nahai trap).

The Stall or Slab type urinals (Fig. 13.16) are cheaper and used in cinema houses, restaurants, municipal toilets, railway stations, offices, etc. The urinal system consists of simple compartments made by raising side walls, and the wall in front is glazed, against which the urine is passed by males.

At the bottom, a drain is made along the front wall in which the urine flows, and this is finally connected to the soil pipe through a floor trap. The flushing is provided in the usual manner, by a cistern.

The usual centre to centre spacing of units is kept at about 60 cm in both types of urinals.

The manufacture of glazed earthenware urinals in India is governed by Indian standard specification code : IS : 771—1963 ; and that of vitreous china clay urinals by I.S. : 2556 (Part VI)—1967.

13.7.3. Flushing Cisterns. A flushing cistern is a device which releases a fixed quantity of water, under pressure, so as to flush and clean the pan and trap of a water-closet or a urinal.

High level cisterns, are those which operate with a minimum height* of 1.25 m ; and the Low level cisterns are those which operate with a maximum height of 30 cm.



In Indian type water-closets, high level cisterns fixed at about 2 m above the floor level are generally provided ; whereas, in European type water closets, low level cisterns fixed at about 60 cm above the floor level are generally provided. The high level flushing cisterns used in India are normally made of cast iron ; whereas the low level cisterns are normally made of glazed vitreous ware. The former type, normally used in Indian homes, are operated by pulling a chain, whereas the latter type, usually used in public buildings or in modern western styled homes, looking decent in appearance, are operated by turning a handle.

Urinals are normally provided in India only in public buildings and not in private houses. They are normally flushed by providing cisterns, which release smaller quantities of water, automatically, at fixed interval of time.

The discharge capacities of cisterns are usually 5, 10 and 15 litres. They should discharge at an average rate of 5 litres in 3 seconds. Their construction and design in India, is governed by the BIS code IS : 774—1964.

A flushing cistern may either be of *siphonic type* (without any valves) or of *mechanical type* or *Flat bottom type* (provided with valves). Siphonic type of cisterns are, now a days, invariably used every where.

The **Bell type flushing cistern** (Fig. 13.17) is a well known example of the important *siphonic type* of cistern. It consists of a cast iron box of 10 to 15 litres (2 to 3 gallons) capacity, provided with a central outlet *stand pipe*, covered by a *bell shape C.I. vessel*. This *bell* is connected to a chain through a lever arm arrangement. When the chain is pulled, the bell receives a jerk and splashes some water. The water runs down the pipe, takes away some air with it, which causes a partial vacuum at the top of the bell shaped vessel (i.e. at its crown). This starts the siphonic action, and all the water inside the cistern is sucked rapidly through the large opening near the base of the bell. This emptying action takes only a few seconds, causing powerful flush in the water-closet below.

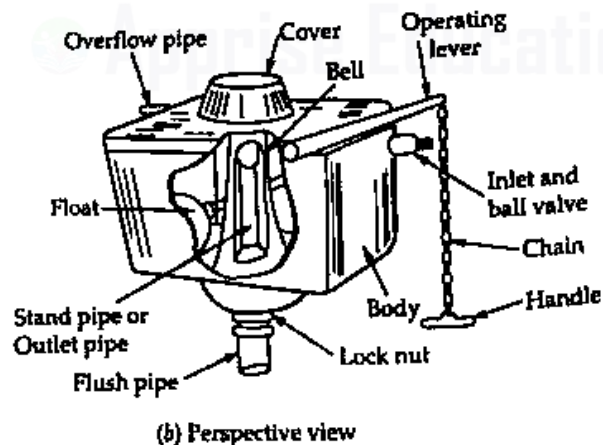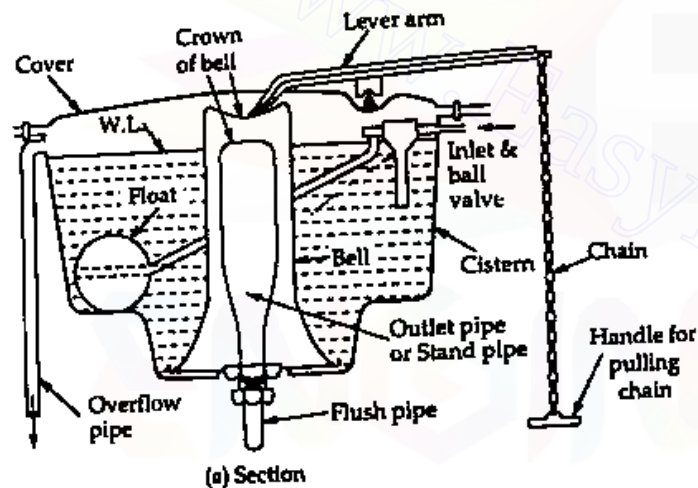

In this type of cistern, the chain should be released immediately after being pulled, to force the water out of the flush pipe. If this precaution is not taken, the partial vacuum developed by pulling of the chain may be destroyed by the entry of air from the flush pipe.

The cistern is supplied with water through a *ball valve arrangement*, so that the water inlet gets closed when the cistern is full with water upto the water line, and gets open when it is empty permitting entry of water. It is also provided with an overflow pipe, to drain out excess incoming water, if the ball cock gets out of order, so as to avoid spilling of water over the cistern in the toilet.

It is evident that this type of a cistern, releases a fixed quantity of water, even if some one simply urinates in the toilet, which could be washed down with a much smaller quantity of water. The problem becomes acute in areas where there is a shortage of water. There has, thus, been some demand in the past to find ways to reduce the quantity of water consumption. C.B.R.I. Roorkee has consequently developed dual flushing cistern, which allows the *fractional* or the *full* discharge of the cistern at a time. All the existing cisterns can be converted into dual flushing cisterns, by making arrangements to cut the vacuum seal at the fixed water level. Hence, to obtain the fractional discharge, the chain is pulled and left; whereas, for obtaining full discharge, the chain is kept pulled till full capacity is discharged.

For converting the existing cisterns into this type of dual cisterns, a 6 mm dia rubber tube is fixed in the bell at a fixed height. The other end of the tube is connected to a plastic pipe with a stop cock at the end, to control the entry of air. The cistern will give full discharge with stop cock closed, and partial discharge with stop cock open.

C.B.R.I. Roorkee has also developed an automatic flushing cistern for the urinals. This cistern has eliminated the use of copper fittings, which were being provided with the public urinal cisterns, and which are not only costly but also liable to be stolen. The new developed fittings consist of a U-tube, made of plastic pipe. When the water level in the cistern reaches the level of the bend, the siphonic action takes place and the water present in the cistern rushes to the urinals. This new automatic flushing cistern can be cheaply manufactured and easily fixed in position.

13.7.4. Wash Basins. A wash basin is a vessel used for washing hands or brushing teeth, etc. in a standing position. It is made of glazed earthenware or vitreous china clay. It is provided with one or two water taps at either ends. Sometimes, and in high class buildings, separate cold and hot connections are given, and mixed water comes out

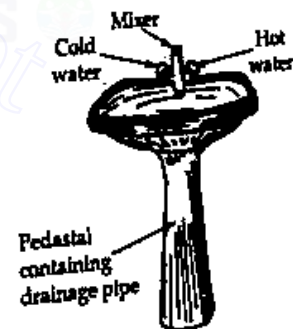


Fig. 13.18. Perspective view of a wash basin supported on a Pedestal provided with hot and cold mixer arrangement.

through a mixer arrangement. The hotness of the coming water can be adjusted upto the required extent, by opening the cold and hot taps to the desired extent. Perspective view of such a modern wash basin, provided with a mixer, is shown in Fig. 13.18.

The wash basins may either be supported on brackets fixed on wall, or supported on pedestals. Fig. 13.19 shows the former type and Fig. 13.18, shows the latter type.

The wash basins may either be of flat back pattern for mounting on walls, or angle back for fixing at the junction of two walls. Their usually available sizes are given in Table 13.2.

Table 13.2. Commonly available Sizes of Wash Basins

Pattern	Size
Flat back	650 × 450 mm
	650 × 400 mm
Angle back	600 × 480 mm
	400 × 400 mm

A central hole covered with a jalli is provided in the wash basin for draining the used water to the sullage pipe through a trap. For cleaning and for holding water in the basin, sometimes, a rubber plug attached with a chain secured by a stay is used to close this central outlet hole.

13.7.5. Baths and Bath Tubs. Bath rooms often provide waste water, either when one takes a bath or when one washes clothes. In normal Indian homes bath is taken without a bath tub, either under a shower or by using a bucket and a mug. Western countries, however, use a bath tub, in which one sits down or lies down. The tub can be filled with water, which can be drained out by opening the outlet plug.

A section of a bath tub is shown in Fig. 13.20. It is

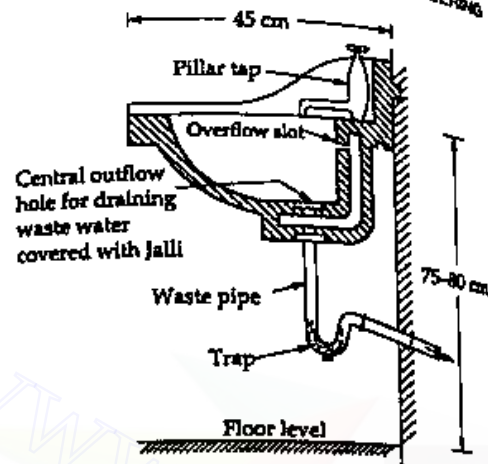


Fig. 13.19. Section of a wash basin (Flat back).

generally made of vitreous earthenware or of marble. It is provided with an outlet, 4 to 8 cm dia. and one inlet pipe for filling it. In modern days, two taps are provided, so as obtain hot and cold supplies both. It is provided with an overflow pipe also, to drain excess water, above the full supply level.

The waste outlet of bath tub is connected to the sullage pipe through a trap, so as to prevent the foul gases erupting in the bath. The usual dimensions of a bath tub are : 1.8 m length × 0.75 m width × 0.45 m depth near waste pipe (overall height with feet being about 0.60 m).

As stated above, in India, bath tubs are normally not used. Even in modern homes, the practice is not to provide a bath tub, but to provide a shower, which is provided with a mixer, bringing hot and cold water, the temperature of which can be adjusted to any desired extent. A geyser is provided for hot water supply.

The outlet drain of the bath room is always connected to the sullage pipe through a floor trap, so as to avoid escape of foul gases in the bath room.

13.7.6. Kitchens and Kitchen Sinks. Kitchen sinks are used to clean the utensils, and thus the waste water obtained from them is normally foul, as it contains a lot of food wastes. Kitchen sinks are normally used in western styled homes, and a normal Indian home uses the kitchen floor itself for washing utensils. In that case, the outlet drain of the kitchen room is provided with a floor trap, so as to avoid evolution of foul gases in the kitchen.

Kitchen sinks are rectangular shallow vessels, as shown in Fig. 13.21. It is a one piece construction provided with or without a rim. It is made of marble or vitreous earthenware or vitreous china clay or stainless steel. The floor of the sink is given a slope towards the waste outlet. The sinks are provided with circular waste hole. All the kitchen sinks are provided with a draining board, which is fixed on the right side of the user. Weir type overflow slots are also provided in some sinks. The usually available sizes of sinks are given in Table 13.3.


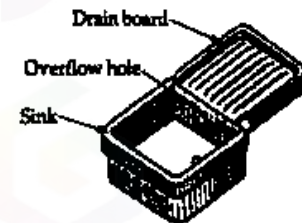


Fig. 13.21. Kitchen sink.

Table 13.3. Usual Dimensions of Kitchen and Laboratory Sinks

	Available size
Kitchen Sinks	600 × 450 × 150 mm
	600 × 450 × 250 mm
	750 × 450 × 250 mm
Laboratory Sinks	400 × 250 × 150 mm
	450 × 300 × 150 mm
	600 × 350 × 150 mm
	680 × 400 × 200 mm

The height of the top of the sink floor above the room floor should normally be 90 cm.

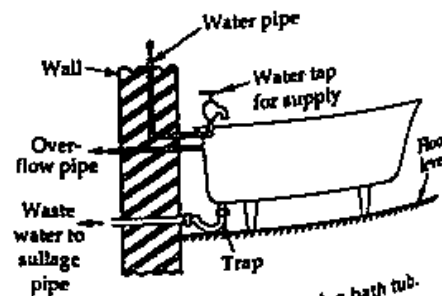

13.8. Ventilation of House Drains

As we know by now, the entire sewerage system of a house is ventilated by providing vent pipes, and antisiphonic pipes*, and sometimes by fresh air inlet. Such a ventilation system is required to serve the following purposes:

- (i) to relieve the pressure of foul gases developed in house drains, which may otherwise break the water seals of the shallow seal traps;
- (ii) to prevent breakage of trap's seals by siphonic action,* and
- (iii) to dilute the foul gases in the drains and to reduce their obnoxious effects, in case such gases happen to escape out into the house due to some reason or the other.

The ventilation is usually achieved by providing a fresh air inlet, connected to the house drain through the lower-most manhole (inspection chamber), as shown in Fig. 13.6. Fresh air from the atmosphere will enter through this inlet into the manhole, and finally goes out through the vent pipes provided in conjunction with soil or waste pipe, as shown in Fig. 13.6. This air along with foul gases will finally escape out from the cowl provided at the head of the vent pipe, at least 2 m above the roof level.

A mica flap valve is provided at the head of the fresh air inlet, with slits for admitting fresh air, which is so hinged at the top that it easily opens inside to admit fresh air, but it closes with the slightest back pressure of gases from the manhole, to avoid the escape of foul gases in the street or the house courtyard.

Such a ventilating pipe installation should normally be provided in an modern house drainage system, though may be avoided for very small installations.

13.8.1. Antisiphonage Pipes. Water seals of traps in multi-storeyed buildings or houses may sometimes get broken due to siphonic action, as explained below:

When waste water is suddenly discharged from a sanitary fixture A on the upper floor, it moves down rapidly through the soil (or the waste) pipe; and in its movement, it may suck some air from the lateral pipe connecting the soil pipe with the fixture at the lower floor, as shown in Fig. 13.22. This sucked air causes siphonic action, resulting in the flow of water from the trap of the fixture to the soil pipe and thus, breaking its water seal.

To overcome this difficulty, a separate pipe of smaller diameter is attached to the traps, which connects the trap with the vent pipe, as shown in Fig. 13.22. This pipe is known as *anti siphonage pipe* and it supplies air to the short branch pipe of the

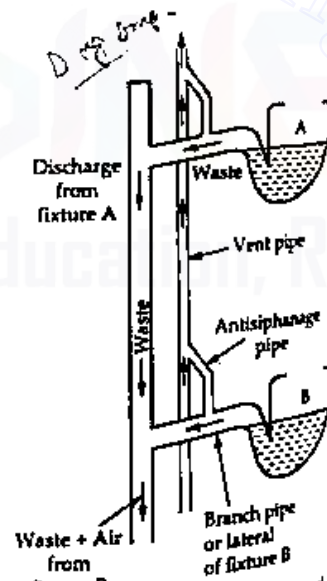


Fig. 13.22. Induced Siphonage and Anti-siphonage pipe.

lower fixture, at the time of suction; otherwise also, it acts as a vent pipe connection of the lower fixture. This pipe, thus will normally serve as a vent pipe, and as an antisiphonage pipe in case suction takes place, as explained above. Hence, some people get confused when antisiphonage pipes or vent pipes are sometimes described separately and sometimes written as one and the same thing.

13.9. Minimum Sanitary Fixtures Required for Different Types of Buildings

Minimum sanitary conveniences required as per Indian standards for different types of buildings, such as *Schools, Hostels, Hospitals, Factories, Cinema and Theatre halls, Art galleries, Libraries and Museums, Restaurants, Hotels, Railway Stations, Bus stands and Airports*, etc. are given in Table 13.4 to 13.12.

Table 13.4. Minimum Sanitary Conveniences Required for Schools, as per Indian Standards

Fittings	Nursery	Schools other than nursery schools		Boarding schools	
	Schools	For boys	For girls	For boys	For girls
Water closets	1 per 15 pupils or part thereof	1 per 40 pupils or part thereof	1 per 25 pupils or part thereof	1 for every 8 pupils or part thereof	1 for every 8 pupils or part thereof
Ablution taps	1 in each WC	1 in each WC	1 in each WC	1 in each WC	1 in each WC
Note: One Water tap with drainage arrangement shall be provided for every 50 pupils or part thereof in the vicinity of water-closets and urinals.					
Urinals		1 per 20 pupils or part thereof		1 for every 25 pupils or part thereof	
Wash-basins	1 per 15 pupils or part thereof	1 per 40 pupils or part thereof	1 per 40 pupils or part thereof	1 for every 8 pupils or part thereof	1 for every 8 pupils or part thereof
Baths	1 bath-sink per 40 pupils or part thereof			1 for every 8 pupils or part thereof	1 for every 8 pupils or part thereof
Drinking water fountains	1 for every 50 pupils or part thereof	1 for every 50 pupils or part thereof	1 for every 50 pupils or part thereof	1 for every 50 pupils or part thereof	1 for every 50 pupils or part thereof
Cleaner's sinks	1 per floor minimum				
Note: For teaching staff, the schedule of fittings to be provided shall be the same as in the case of office buildings (IS: 1173-1963).					

Table 13.5. Minimum Sanitary Conveniences Required for Hostels, as per Indian Standards

Fittings	For residents and residential staff		For non-residential staff		Room wherein outsiders are received	
	For males	For females	For males	For females	For males	For females
Water closets	1 for every 8 persons or part thereof	1 for every 6 persons or part thereof	1 for 1—15 persons ; 2 for 16—35 persons ; 3 for 36—65 persons ; 4 for 66—100 persons	1 for 1—12 persons ; 2 for 13—25 persons ; 3 for 26—40 persons ; 4 for 41—57 persons ; 5 for 58—77 persons ; and 6 for 78—100 persons	1 per 100 persons up to 400 persons ; For over 400 persons, add ① 1 for 250 persons or part thereof	2 per 100 persons up to 200 persons ; For over 200 persons, add ① 1 for 100 persons or part thereof
Ablution taps	1 in each WC					
	Note : One water-tap with draining arrangement shall be provided for every 50 persons or part thereof in the vicinity of water closets.					
Urinals	1 for 25 persons or part thereof	—	Nil up to 6 persons ; 1 for 7—20 persons ; 2 for 21—45 persons ; 3 for 46—70 persons ; 4 for 71—100 persons	—	1 per 50 persons or part thereof	—
Wash-basins	1 for 8 persons or part thereof	1 for 6 persons or part thereof	1 for 1—15 persons ; 2 for 16—35 persons ; 3 for 36—65 persons ; 4 for 66—100 persons	1 for 1—12 persons ; 2 for 13—25 persons ; 3 for 26—40 persons ; 4 for 41—57 persons ; 5 for 58—77 persons ; 6 for 78—100 persons	1 per each WC and urinal provided	1 per each WC provided
Baths	1 for 8 persons or part thereof	1 for 6 persons or part thereof	—	—	—	—
Cleaner's sinks	1 per floor minimum					
	Note : Besides above, there shall be at least one water-tap and arrangement for drainage in the vicinity of each water closet or group of water closets in all					

Table 13.6. (a) Min. Sanitary Conveniences Req'd. for Hospitals (Indoor patient wards), as per Indian Standards

Fittings	For males and females
1. W.C.	One for every 5 beds or part thereof.
2. Ablution taps	One in each W.C. plus one water tap with drainage arrangement in the vicinity of W.C. and urinals for every 50 beds or part thereof.
3. Wash-basins	Two upto 30 beds. Add one for every additional 30 beds or part thereof.
4. Baths	One bath with shower for every 5 beds or part thereof.
5. Bed Pan washing sinks	1 for each ward.
6. Cleaner's sinks	1 for each ward.
7. Kitchen sink (where kitchen is provided)	1 for each ward.

Table 13.6. (b) Min. Sanitary Conveniences Req'd. for Hospitals (Out-door patient wards), as per Indian Standards

Fittings	For males	For females
1. Water closets	One for every 100 persons or part thereof.	Two for every 100 persons or part thereof.
2. Ablution taps	One in each W.C.	One in each W.C.
	One water tap with draining arrangements should be provided for every 50 persons or part thereof in the vicinity of W.C. and urinals.	
3. Urinals	One for every 50 persons or part thereof.	Same as for males.
4. Wash basins	One for every 100 persons or part thereof.	Same as for males.

Table 13.6. (c) Minimum Sanitary Conveniences Req'd. for Hospitals (Administrative Buildings, Medical Staff Quarters and Nurses Homes)

Fittings	For administrative buildings		For medical staff quarters (Hostel type)		For Nurses Homes (Hostel type)
	Male	Female	Male	Female	
1. Water-closets	One for every 25 or part thereof.	One for every 15 or part thereof.	One for 4.	One for 4.	One for 4 or part thereof.
2. Ablution taps	One in each W.C.	One in each W.C.	One in each W.C.	One in each W.C.	One in each W.C.
	Note : One water tap with draining arrangements should be provided for every 50 persons or part thereof in the vicinity of W.C. and urinals.				

3. Urinals	Nil up to 6 ; 1 for 7—20 ; 2 for 21—45 ; 3 for 46—70 ; 4 for 71—100 ; for 101 to 200, add @ 3% ; and for over 200, add @ of 2.5%.				
4. Wash basins	One for 25 or part thereof.	One for 25 or part thereof.	One for 8 or part thereof.		
5. Baths with showers	One in each floor.	One in each floor.	One for 4 or part thereof.	One for 4 or part thereof.	One for 4 to 6 or part thereof.
6. Cleaner's sinks	One per floor minimum.				

**Table 13.7. Min. Sanitary Conveniences Req'd. for Factories
as per Indian Standards**

Fitments	For males	For females
1. W.Cs.	1 for 1—15 ; 2 for 16—35 ; 3 for 36—65 ; 4 for 66—100 ; From 101 to 200, add @ 3% ; For over 200, add @ 2.5%.	1 for 1—12 ; 2 for 13—25 ; 3 for 26—40 ; 4 for 41—67 ; 5 for 68—77 ; 6 for 78—100 ; From 101 to 200, add @ 6% ; For over 200, add @ 4%.
2. Ablution tap	One in each W.C.	One in each W.C.
	Note : One water tap with draining arrangements should be provided for every 50 persons or part thereof in the vicinity of water-closets and urinals.	
3. Urinals	Nil up to 6 ; 1 for 7—20 ; 2 for 21—45 ; 3 for 46—70 ; 4 for 71—100 ; from 101 to 200, add @ 3% for over 200, add @ 2.5%	Same as for males
4. Washing taps with draining arrangements	One for every 100 persons or part thereof.	
5. Drinking water fountains	One for every 100 persons with a minimum of one on each floor.	
6. Baths (Preferably showers)	As required for particular trades or occupations. Since for many trades of a dirty and dangerous character, more extensive provisions are required by law.	

**Table 13.8. Min. Sanitary Conveniences Req'd. for Cinemas,
Concert Halls and Theatres as per Indian Standards**

Fitments	For male Public	For female Public	For male staff	For female staff
1. W.Cs.	1 for 100 upto 400 ; for over 400, add @ one per 250 or part thereof.	Two per 100 upto 200 ; for over 200, add @ one per 100 or part thereof.	1 for 1—15 2 for 16—35 ;	2 for 1—12 2 for 13—35 ;
2. Ablution taps	One in each W.C.	One in each W.C.	One in each W.C.	One in each W.C.
	Note : One water tap with draining arrangements should be provided for every 50 persons or part thereof in the vicinity of W.Cs. and urinals.			
3. Urinals	One for 50 or part thereof.	Same as for males.	Nil upto 5 ; 1 for 7—20 ; 2 for 21—45 ;	Same as for males.
4. Wash basins	One for 200 or part thereof.	Same as for males.	1 for 1—15 ; 2 for 16—35	1 for 1—12 ; 2 for 13—25.

**Table 13.9. Min. Sanitary Conveniences Req'd. for Art Galleries,
Libraries and Museums, as per Indian Standards**

Fitments	Public		Staff	
	Male	Female	Male	Female
1. W.Cs.	One per 200, upto 400 persons ; For over 400, add @ one per 250 or part thereof.	One per 100 upto 200 persons ; For over 200, add @ one per 150, or part thereof.	1 for 1—15 ; 2 for 16—35.	1 for 1—12 ; 2 for 13—25.
2. Ablution taps	One in each W.C.	One in each W.C.	One in each W.C.	One in each W.C.
	Note : One water tap with draining arrangements should be provided for every 50 persons or part thereof in the vicinity of water-closets and urinals.			
3. Urinals	1 per 50	1 per 50	Nil upto 5 ; 1 for 7—20 ; 2 for 21—45	Same as for males.
4. Wash-basins	One for every 200 or part thereof. For over 400, add @ one per 250 or part thereof.	One for every 200 or part thereof. For over 200, add @ 1 per 150 or part thereof.	1 for 1—15 ; 2 for 16—35.	1 for 1—12 ; 2 for 13—25.
5. Cleaner's sinks	One per floor minimum			

In Tables 13.8 and 13.9, it has been assumed that two-thirds of the total are males and one-third females.

Table 13.10. Min. Sanitary Conveniences Req'd. for Restaurants, as per Indian Standards

Fittings	Public		Staff	
	Male	Female	Male	Female
1. W.Cs.	One for 50 seats upto 200 seats; For over 200, add @ one per 100 or part thereof.	Same as for males.	1 for 1-15; 2 for 16-35; 3 for 36-55; 4 for 56-100.	1 for 1-12; 2 for 13-25; 3 for 26-40; 4 for 41-57; 5 for 58-77; 6 for 78-100.
2. Ablution taps	One in each W.C.	One in each W.C.	One in each W.C.	One in each W.C.
	Note: One water tap with draining arrangements should be provided for every 50 persons or part thereof in the vicinity of W.Cs. and urinals.			
3. Urinals	One per 50 seats.	One per 50 seats.	Nil up to 6; 1 for 7-20; 2 for 21-45; 3 for 46-70; 4 for 71-100.	Same as for males.
4. Wash-basins	One for every W.C.			
5. Kitchen sinks with dish washers	One in each kitchen.			
6. Slop or Service sinks	One in the restaurant.			

Table 13.11. Min. Sanitary Conveniences Req'd. for Hotels as per Indian Standards

Fittings	For residential Public and staff	For public rooms		For non-residential staff	
		Males	Females	Males	Females
1. Water-closets	1 per 5 persons omitting occupants of the rooms with attached W.Cs. Minimum two if both sexes are lodged.	1 per 100 upto 400; add at the rate of 1 per 250 or part thereof.	Two for 100 up to 200; for over 200, add at the rate of one per 120 or part thereof.	1 for 1-15; 2 for 16-35; 3 for 36-55; 4 for 56-100.	1 for 1-12; 2 for 13-25; 3 for 26-40; 4 for 41-57; 5 for 58-77; 6 for 78-100.
2. Ablution Taps	One for each W.C.				
	Note: One water tap with draining arrangements should be provided for every 50 persons or part thereof in the vicinity of water-closets and urinals.				
3. Urinals		1 per 50 or part thereof.		Nil upto 6; 1 for 7-20; 2 for 21-45;	

4. Wash-basins	One per 100 persons omitting the wash basins installed in the room suite.	One per W.C. and urinal provided.	One per W.C. provided.	1 for 1-15; 2 for 16-25; 3 for 26-35; 4 for 36-45; 5 for 46-55; 6 for 56-65; 7 for 66-75; 8 for 76-85; 9 for 86-95; 10 for 96-100.	1 for 1-12; 2 for 13-25; 3 for 26-40; 4 for 41-57; 5 for 58-77; 6 for 78-100.
5. Baths	One for 10 persons omitting occupants of the room with bath in suite.				
6. Slop sinks	One per 30 bed rooms, one per floor minimum.				
7. Kitchen sinks and dish washers	One in each kitchen.				

(It has been assumed that two-thirds of the number are males and one-third females.)

Table 13.12. Min. Sanitary Conveniences Req'd. for Railway Stations, Bus Stands and Airports as per Indian Standards

Place (1)	W.C. for Males (2)	W.C. for Females (3)	Urinals for males only (4)
1. Junction stations, intermediate stations, and bus stations.	Three for first 1000 persons; and one for every subsequent 1000 persons or part thereof.	Four for first 1000 persons; one for every additional 1000 persons.	Four for first 1000 persons; and one for every additional 1000 persons or part thereof.
2. Terminal stations and bus terminals.	Four for first 1000 persons; and one for every subsequent 1000 persons or part thereof.	Five for first 1000 persons; and one for every subsequent 2000 persons or part thereof.	Six for first 1000 persons; and one for every additional 1000 persons or part thereof.
3. Domestic airports (minimum)	2	4	2
For 200 persons	5	8	6
For 400 persons	9	15	12
For 600 persons	12	20	18
For 800 persons	16	26	20
For 1000 persons	18	29	22
4. International airports			
For 200 persons	6	10	8
For 600 persons	12	20	15
For 1000 persons	18	29	22

Note: 1. Separate provision should be made for staff and workers at these traffic terminal stations.

13.10. Wastewater Recycling in Buildings

In water scarce urban areas having large building complexes or institutions, wastewater recycling can be resorted to, to reduce the consumption of fresh treated water supplies. In waste water recycling, the less polluted sullage is collected from the building(s), and is treated for resupply for non-potable uses, such as for gardening, construction, car washing, toilet flushing, and in scenic waters and fountains, etc. The fresh water is then used only for potable uses, such as for drinking, washing, etc.

The waste water recycling can be resorted to, throughout the year, to provide large scale saving of fresh water, or to reduce the daily requirement of fresh treated water. Reusing waste water also means cleaner rivers. Although the waste water recycling appears to be a costly exercise, yet actually, it works out to be cheaper, since the cost of production of treated fresh water is 4-5 times the cost of production of reusable waste water.

Contrary to the popular belief, recycling of waste water is a tried and tested method. Its technology for domestic units is readily available in the market. A two tier structure, comprising laying of two pipe system for draining sewage and sullage in a building, is ideal for practising water recycling. In this two pipe system, as explained earlier, one pipe system collects sewage from water-closets, and connects the same to the city's sewage system. The other set of pipes connects kitchens and bath rooms together to bring down the polluted sullage discharge into an R.C.C. sullage collection tank, from where it is passed on to the mini treatment plant installed for the purpose of treating the same. Such a mini treatment plant treats the sullage in the following four stages :

- (i) Stage 1. This stage consists of providing preliminary treatment to remove coarse solids and other large sized materials.
- (ii) Stage 2. This stage involves primary treatment, consisting of sedimentation, to remove settleable organic and inorganic solids. A part of biological oxygen consuming material is also removed in this process.
- (iii) Stage 3. This stage provides secondary treatment to oxidize the residual and suspended organic solids by aerobic microorganisms (principally bacteria).
- (iv) Stage 4. The water after secondary treatment from 3rd stage is finally disinfected before reuse, by chlorine.

The entire technique is shown in Fig. 13.23.

Compact waste treatment units based on the above principles, are nowadays being provided by companies, like Ion Exchange, etc.

Another method that is in use involves *plant-based treatment* of waste water. Here, waste water is filtered through a bed of plants. The only drawback of this system is that it requires larger space, which may be a very costly proposition in a big metro city like Delhi or Bombay.

Some institutions and hotels in Delhi are already practising waste water recycling to generate water for non-potable uses. Hyatt Regency, a five star hotel, for example, is recycling its waste water from laundry and kitchen for

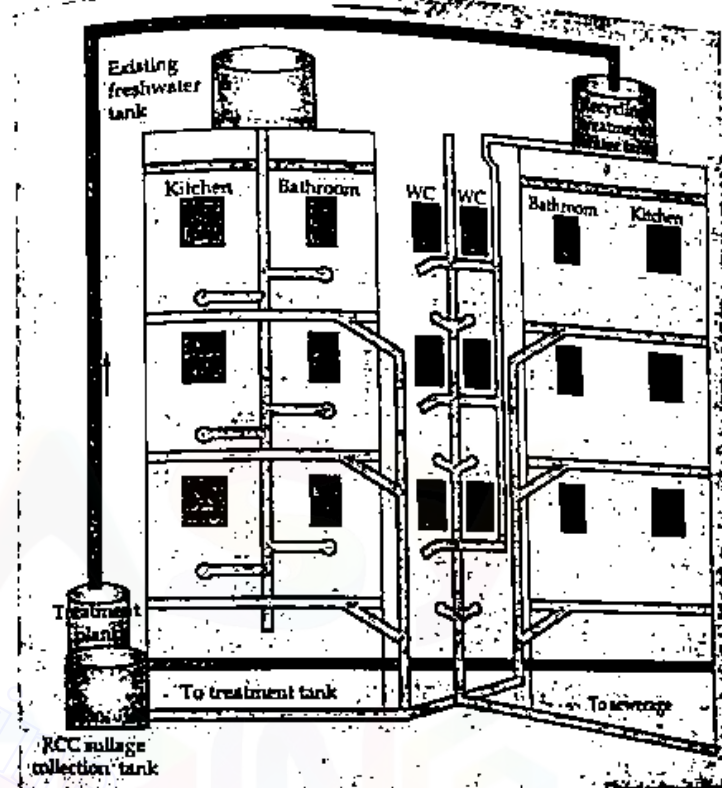


Fig. 13.23. Line diagram for Recycling of waste water from a building using two pipe system.

gardening purposes. Fig. 13.24 shows a photo view of the waste water treatment plant of Hyatt Regency hotel in Delhi. Certain other institutions like the Imperial hotel at Janpath in New Delhi, the Maurya Sheraton hotel at Diplomatic Enclave in New Delhi, the famous Netaji Subhash Institute of Technology (previously known as DIT) at Dwarka in West Delhi, are also recycling their waste water for horticulture purposes. The India Habitat Centre at Lodi Road, New Delhi, is also expected to follow suit.

As a matter of fact, the Union Ministry of Urban Affairs and Poverty Alleviation, GoI, has issued a notification on July 28, 2001, vide which not only rain water harvesting has been made compulsory for all the new buildings in Delhi, but has also made it compulsory for all the buildings and institutions to develop waste water recycling for horticulture purposes, in case their outflow discharge is 10,000 litres or more. Though this regulation is binding on only upcoming buildings and not the existing sprawl, yet it can go a long way in helping the capital city of NCT of Delhi to tide over its water shortages, provided the civic bodies implement this by law, effectively.

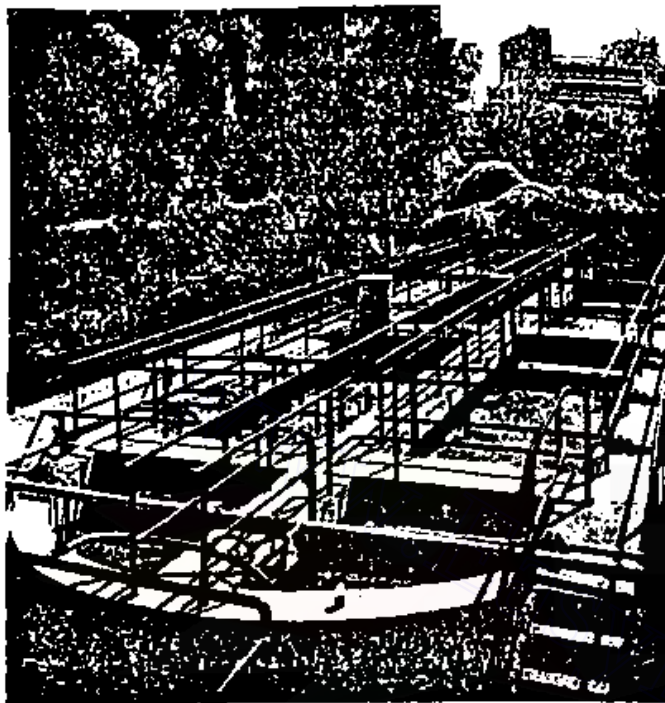


Fig. 13.24. Photoview of Waste water Recycling treatment plant at Hyatt Regency hotel in New Delhi.

PROBLEMS

- What are the principles adopted in providing an efficient and economical system of drainage in buildings?
Design a toilet block with modern conveniences for an office with 200 officials, of whom about a quarter are women, and indicate in plan various amenities you would provide.
Draw a cross-section of the water closets in a multi-storeyed building showing all the connecting pipes and fixture. The cross-section may be limited to the top two floors.
- (a) Sketch an Indian type water closet, with associated fittings and fixtures, and explain its working.
(b) Critically discuss one and two pipe systems of plumbing.
- (a) Differentiate between single pipe and single stack plumbing system.
(b) What is an intercepting trap, and when is it used in house plumbing system? Explain your answer with neat sketch.
- Draw a neat sketch showing water and sanitary fittings required for a building, and prepare a list of plumbing materials.
- (a) With the help of sketches, describe the following sanitary fittings :
(i) Indian type water closet ; and
(ii) Wash basin.

- Write short notes on :
(i) Automatic flushing tank ; and
(ii) Intercepting trap.
- What is meant by ventilation of house sewers, and how is it achieved ? Also discuss the uses of antisiphonage pipes in multistoreyed blocks.
 - (a) Name and explain with sketches, the different types of traps used in house sewer connections. What is the patented name of famous trap, used in India in kitchens or bath drains.
(b) Show by sketches the urinals generally used in high class public buildings and in municipal street toilets, in India.
 - Enumerate the various sanitary conveniences required in a public building. Indicate the minimum requirements of such conveniences for school of 500 boys and 50 girls.
 - Describe 'one pipe', two pipe', and 'single stack' system of plumbing for buildings, and state their merits and demerits. Which one of these would you recommend for the toilet blocks of students hostel in the campus of your university and why ?
 - Draw a typical floor plan of a house, showing the position of different sanitary fittings, traps, pipes, inspection chambers, etc., and indicate their approximate sizes. Draw a sketch to show its connection with the city sewer under the street, assuming that normal necessary slopes are available.
 - (a) What are traps, and why are they provided ? How can the water seal in traps be broken ? What methods are to be employed to maintain the seal ?
(b) When can traps be omitted in a certain section of a house drain ? How will you connect this section to the main drain ? Illustrate your answer with sketches.
 - Why it is necessary to provide 'ventilation' of the house drainage system ? Draw a sketch to show the typical ventilation arrangements including inlet, outlet, etc. to a house drainage system, and explain its working.
 - What is an intercepting trap, and where is it used in a house drainage system ? Explain its location with a neat sketch. Can you avoid the use of such a trap in a house drainage system ? And if yes, what will be the problems that may arise due to its absence.
 - Write short notes on any three of the following :
(i) Gully trap and S-trap ;
(ii) Anti-siphonage pipe ;
(iii) Automatic flushing cistern ;
(iv) One pipe system of plumbing ;
(v) Ventilation of house sewers ;
(vi) Intercepting trap, and its merits and demerits ;
(vii) Soil pipe, waste pipe, vent pipe and anti-siphonage pipe ; and
(viii) Testing of house drains.

-14

Disposal of Municipal and Industrial Solid Wastes

14.1. Definition, Introduction, and Necessity of Safe Disposal of Solid Wastes

The term **solid waste** includes all those solid and semi-solid materials that are discarded by a community. The solid waste generated through domestic and commercial activities is classified as **municipal solid waste (MSW)**, and is also called 'refuse'. The solid waste generated by industries is known as **industrial solid waste**. Solid waste may also be generated by agricultural activities, a large portion of which may also become a part of the municipal solid waste. The **biomedical waste** from hospitals and nursing homes, similarly, finds entry into the municipal solid waste, though is supposed to be disposed off separately as a **hazardous biomedical waste**. The animal excreta (gobar) and human excreta, also, does not stand included in the municipal solid waste, though a portion of this type of semi solid waste may also find entry into the municipal solid waste. In general, therefore, the solid wastes are usually divided into the following two categories ; i.e.

- (i) **municipal solid waste** ; and
- (ii) **industrial solid waste**.

The municipal solid waste is disposed of by the municipal corporations and such local bodies ; while the industrial solid waste is disposed off by the respective industries.

The **safe disposal of solid wastes** of a society was not a serious problem, as long as the population was small and the land available for assimilation of wastes was large. However, in olden societies, no proper collection and safe disposal practices for getting rid of the solid wastes were in vogue. The society's solid wastes used to be dumped on roads, unpaved streets, and vacant plots of land. Such practices prevailing in medieval towns, served to swell the population of rodents (like rats) and flies, which functioned as the carriers of germs and pathogenic bacteria. The outbreak of plagues starting with the **Black Death**-which killed 50% of European population in the fourteenth century, and claimed many more lives in subsequent years by repeated outbreaks, provide a grim testimony to the then prevailing standards of sanitation. Improper or poor collection and disposal of society's refuse also caused the outbreak of what was widely thought to be the pneumonic plague in September 1994 in Surat City of Gujarat State of India.

In addition to causing possible outbreaks of diseases and epidemics, the improper management of solid wastes causes adverse effects on ecology. For

example, dumping of solid wastes at a particular waste dumping site, may lead to the formation of **leachates** during rains, which may seep down and contaminate the ground water. This happens when the dumped refuse contains non-biodegradable and carcinogenic substances, such as plastics, unused medicines, paints, insecticides, sanitary napkins, etc. which may start troubling on coming in contact with the rain water seeping through the dumped garbage, producing a coloured liquid called leachate. This highly poisonous and polluted leachate, containing organic compounds like chlorinated hydrocarbons such as benzene, toluene, xylene, etc. ; and toxic elements such as arsenic, copper, uranium, etc. is likely to seep to the underground water-table to pollute the ground water, leading to diseases like cholera, typhoid, polio, etc.

Although the natural processes possess enough capacity to dilute, disperse, degrade, absorb, or otherwise dispose off the unwanted materials (wastes), but that capacity has now come under tremendous stress due to the enormous quantities of wastes being generated by the modern society. India, similarly, faces an uphill task of controlling pollution of all kinds, such as water pollution, air pollution, and land pollution, as may be caused by the solid wastes.

MUNICIPAL SOLID WASTE (MSW)

14.2. Composition and Quantity of the Generated Municipal Solid Waste (MSW) or Refuse

The municipal solid waste (MSW) is a heterogeneous mixture of various kinds of solid wastes-which are not transported with water as sewage, and may include biodegradable (putrescible) food wastes called **garbage**, and the non-putrescible solid wastes like paper, glass, rags, metal items, etc., called **rubbish**.

The **garbage** includes all sorts of **putrescible (bio-degradable) organic wastes** obtained from kitchens, hotels, restaurants, etc. All waste food articles, vegetable peelings, fruit peelings, etc., are thus, included in this term. These wastes are organic in nature, and thus, likely to decompose quickly, producing foul odours and health hazards. They may also result in breeding of flies, mosquitoes, insects, etc. Hence, garbage must be disposed of, properly and quickly. When it is scientifically processed and **composted**, then it is possible to obtain valuable products, like grease, hog wood, fertiliser, etc. from the garbage. The density of garbage usually varies between 450 to 900 kg/m³.

The **rubbish** can include a variety of materials, which may either be **combustible** (such as paper, plastic, textile, etc.) or **incombustible** (such as broken glass, crockery, metal, masonry, etc.). Most of these types of wastes are discarded on a regular basis from homes, offices, and small commercial establishments. The density of rubbish usually varies between 50 to 400 kg/m³.

In addition, the **incombustible ashes** from household hearths (**chulhas**), called **ashes**, may also stand included in the MSW, although its quantity is getting reduced in modern urban homes, due to increasing use of cooking gas, kerosene oil stoves, and lesser use of cooking coal or firewood. The density of ashes generally varies between 700 to 850 kg/m³.

Besides the above three important components, the municipal solid waste may also include the fine dust, silt and sand, obtained from street sweepings.

In addition to the above four usual components of refuse, certain special wastes such as construction debris, abandoned appliances and automobiles, etc. may also be collected at sporadic intervals from different places.

Not included in the components of municipal waste described above, there are many other solid wastes that are normally not the responsibility of the municipal bodies. These may include ashes from thermal power plants, sludges from water and waste-water treatment plants, wastes from animal feed lots (cattle dung), mine tailings, biomedical wastes, and other industrial solid wastes. All such wastes require separate arrangements for their disposal.

Although the amount of municipal solid waste is usually very small (say as less as up to 5% of the total solid wastes of all kinds), but it receives the greatest attention, because of the adverse effects its improper disposal can have on public health and on water supplies from both the surface water as well as ground water sources.

Besides the above technical classification of the components of the municipal solid waste, based on the type of generated waste, the refuse may also be classified depending on its source, as : (i) house refuse ; (ii) street refuse ; and (iii) trade refuse. All these terms are quite apparent, and known to all of us, and hence need no explanation.

The quantity of municipal solid waste (MSW) produced by a society depends upon the living standards of its residents. The degree of commercialisation, urbanisation, and industrialisation, in fact, has resulted in a vast increase in the amount of refuse generated per person. For example, the average per capita daily refuse production in United States is as high as about 2.8 kg ; whereas, the figure is only about 0.5 kg in India. That is why, a city like New York with a population of about 20 million produces MSW of about 50,000 tonnes/day ; while, a city like Delhi with about 15 million population produces MSW of about 6000 tonnes/day.

With the modernisation and industrialisation, new types of solid wastes have come in abundance. Say for example, cans, plastic bottles and containers, plastic toys and appliances, tyres and many other items are now being used and frequently discarded on a large scale. Packaging foils and films, cardboard boxes, and several such items are nowadays increasingly being used.

All such factors have increased the MSW by a large extent.

Although only a few reliable statistics are available on generation of solid wastes in India at national level, yet CPCB has estimated that the daily per capita solid wastes generation in India ranges from about 0.1 kg in small towns to about 0.5 kg in larger cities.

The quantity of refuse produced in a city not only depends upon the type of the city and on the living standards of the residents, but also depends upon the season. Say for example, in India, average summer refuse is about 25% higher than the yearly average, due to larger carriage and consumption of fruits, like mangoes, melons, etc.

The average composition of refuse (by weight) is estimated to be as shown in table 14.1.

Table 14.1. Average Composition and Other Properties of MSW (Refuse)

Sl. No.	Item / Constituent	App. Av. composition (% age by weight at disposal site)	
		For a typical Indian city	For a typical city of U.S.A.
1.	Garbage	45%	20%
2.	Rubbish (paper, glass, rags, etc.)	15%	50%
3.	Ashes	15%	15%
4.	Fine dust, silt and sand	25%	15%
	Density	400 to 600 kg/m ³	100 to 250 kg/m ³
	Calorific value* in kilo. Joule/kg**	5000-6600	15,000
*Heat, which garbage can generate. kJ/kg = 0.243 kC/kg.			

As can be seen from table 14.1, the presence of rubbish in Indian refuse, as compared to that in USA, is very small, as in India, large quantities of papers, cardboards, plastics, synthetic polymers, rags, etc. are picked up and removed enroute, by the rag pickers (men, women and children) before the refuse reaches the disposal site. This, in fact, reduces the calorific value of the Indian refuse. On the other hand, the quantity of garbage in U.S.A. is very small, because of the use of garbage grinders, and use of tinned and ready-made packed foodstuffs.

The density of Indian refuse is generally higher than that of the developed countries, and hence the Indian refuse can be carried efficiently and economically by mechanical transport (carrying more weight for the same volume), for land fillings. But since the calorific value of the Indian refuse is much smaller, and its moisture content is high, it cannot be easily burnt or incinerated, and hence the incineration method of refuse disposal, is not so suitable for India, as it is for the developed countries like U.S.A.

As pointed out earlier, although the biomedical wastes from hospitals and nursing homes are required to be collected and treated separately, but in most cities and towns of India, such wastes largely continue to form a part of MSW. However, after the notification of *Biomedical wastes (Management and Handling) Rules, 1998* enacted under the *Environment Protection Act 1986*, a great emphasis is being laid and pressure is being mounted on hospitals and nursing homes of the country to develop combined treatment plants or individual treatment and disposal plants to collect, treat, and dispose of their wastes, either individually or collectively, in accordance with the provisions of these

As a matter of fact, rules have also been notified for proper management of municipal solid waste under the *Environment (protection) Act, 1986*, so as to legally enforce proper collection and disposal of municipal solid wastes. These rules are called the *Municipal Solid Wastes (Management and Handling) Rules 2000*, and are discussed in article 14.8.2.

14.3. Collection and Transportation of Municipal Solid Waste (MSW)
In India, the refuse is generally collected in individual houses in small containers, and from there, it is collected by sweepers in small hand-driven lorries/carts, and then dumped into the masonry chambers constructed by the municipalities along roadsides. The refuse is finally carted away by municipal trucks, for further disposal during some day time. *The methods adopted here are highly unsatisfactory, and need tremendous improvements and changes.*

In fact, the house sweepers and street scavengers, do not bother much for carrying refuse properly, and they go on scattering it here and there, while carrying it up to the municipal chambers. Many of them do not bring hand lorries even. Even at the entrance point of the municipal refuse chamber, they just throw the refuse, scattered alround in and out of its gate. The street animals, would further scatter it, leading to all round scattering of the refuse, almost everywhere, resulting in highly insanitary conditions and health hazards.

Similarly, the municipal trucks, do not generally clear and clean the refuse chambers properly, and the residual refuse remains dumped for a long time, resulting in its decomposition and evolution of obnoxious gases, and consequently causing health hazards. Even municipal trucks, while carting refuse, are generally not closed-bodied, and hence go on throwing refuse on way, and also giving pungent smells. This is happening so, even in Delhi, the capital of India.

The process of refuse collection and its carriage, therefore, needs vast changes in this country. The refuse, should, therefore, in fact be collected by municipal trucks directly from the houses. *Roadside refuse collection masonry chambers, need complete elimination.* Municipal trucks should be completely closed, and should visit homes and houses, twice a day, once in the morning and once in the evening, to collect household refuse and street sweepings.

The transporting trucks (vehicles) should also be of high quality, of special design and be properly maintained. They should be strong, durable, and water-tight, and be made of stainless steel with smooth interior, having rounded corners and edges, for facility of cleaning. They should have a low loading line, say upto about 1.5 m, so that minimum of time and effort is required in filling them. They should have a cover, which should be made as a part of the body with hatches, which can be opened during collection. Mechanical devices should be installed in these vehicles, for lifting the body to the sides or back, or for pushing the refuse out, so that they can be quickly and easily emptied.

TERI (*The Energy Research Institute*, previously known as *Tata Energy Research Institute*) has, in fact, carried out a survey of the efficiency of the

It takes anywhere from 3 to 7 days for the solid wastes to be disposed of from the time it is generated. The collection, transportation and disposal of MSW in India are totally labour intensive activities, because modern automated systems are not used. The number of municipal workers employed on these jobs are also short, because of the general policy of the governments to restrict employment. As a result, on an average, less than three-fourth of the MSW is collected.

Not only the trucks deployed for cartage of MSW are of bad quality, their numbers are also very much less than the actual requirement. Considering an average per capita production of MSW of 0.5 kg, the expected mass of daily Municipal solid waste produced per million of population would be 5,00,000 kg with an average density of MSW as 500 kg/m³. The volume of MSW produced per million population would be 1000 m³. Assuming that a truck makes three trips a day, the minimum carrying capacity of deployed trucks should be about 333 m³/million population. A survey carried out by TERI, however, has shown that about 70% of the surveyed 44 No. of Indian cities, do have less than the minimum reqd. trucks (total capacity being less than 300 m³/million population), and only 6.8% of the cities had more than 400 m³/million population capacity (i.e., capacity of total deployed trucks), as shown in table 14.2.

**Table 14.2. Available Transport Capacity
in 44 Cities of India (1996)**

Available Capacity in m ³ /million population	Cities (%) Total 44 cities surveyed
< 100	4.5
100-200	34.6
200-300	29.6
300-400	25.0
> 400	6.8
	100.00

A part of the uncollected and untransported MSW, normally finds its way into sewers; some of it is eaten by cattle; while some portion of it continues to lie scattered for a few days before sweepers collect it together and burn it in the open.

14.4. Separation for Recycling and Reuse of Plastics, Paper, and Glass from the Municipal Solid Waste (MSW)

In a developing country like India, papers, plastics, glasses, rubbers, ferrous nonferrous metals, and other materials that can be recycled, are salvaged from the municipal solid wastes to produce low-cost products extensively used for lower-income groups of society. Recycling has been receiving increasing attention worldwide over the fast few years. Though the consumption of goods in India is very low compared to that in the developed world, recycling has always been a

Selling old newspapers, magazines, books, empty bottles of glass and plastic, metal cans, discarded appliances, etc. to the *Kabaris*, is a very common practice even amongst the richest homes in our country. Till a few years ago, the emphasis in India was on 'recover and reuse' which has now changed to 'recover and recycle'. The change from reuse to re-cycle has occurred due to changing lifestyles and attitudes of people to the kinds of products they use. Of all the wide varieties of recyclable material present in Indian household waste, it is the paper and the plastic that get maximum attention, because the two together form the single largest component of household wastes. The recycling of plastics, papers and glasses that are mostly adopted in India is briefly discussed below.

14.4.1. Recycling of Waste Plastics. Over the last four decades (1961-2000), the production and consumption of plastics in India has increased by more than about 100 times, increasing from the meagre 0.02 kg/capita/annum to about 2.0 kg/capita/annum, as shown in table 14.3.

Table 14.3. Annual Per Capita Consumption of Plastics in India

Year	Annual per capita consumption of plastics in kg
1960-61	0.02
1984-85	0.64
1986-87	0.71
1988-90	1.00
1990-91	1.06
1993-94	1.42
1994-95	1.62
1999-2000	2.00

Consequently, the share of plastics in Indian MSW has risen rapidly from about 0.7% in 1971 to about 5-10% in 2000. Nearly, all plastic waste is sold in India to *kabariwallahs*, who form the first link in the chain of recycling plastic. Small scale plastic recycling units have mushroomed in metro cities. These units are, in fact, using outdated technology and poor quality controls, causing several adverse environmental impacts. These units are producing wide range of plastic products like chappals, mugs, utensils, toys, etc. These units, although not complying with industrial area regulations and environmental laws, but are saving the scarce and valuable petro-based virgin raw material. Unfortunately, without any government support and specifications regarding the quality of the raw materials to be used for recycling, plastic waste recycling continues to be a disorganised and technically backward sector, with some of the units working in residential areas without even complying with the water pollution and air pollution control laws.

Overall, the annual consumption of plastic in India is estimated to be about 2 kg per person (2000), as compared with the world's average consumption of about 20 kg/person, and that of the developed-world of 80 kg/person. Moreover, India recycles about 40% of its plastic waste, as compared to 15 to 20% in the developed world. The developed world is, thus, primarily responsible for throwing or burning the non-bio-degradable harmful plastic waste, with India contributing to it only by a very small extent. However, given the current trends, with plastic consumption having been doubled in India during 1990-2000, the use of plastics in India is found to be increasing by a large extent; and considering the scarcity of petroleum products, there is an urgent need to organize the plastic recycling industry.

14.4.2. Recycling of Waste Paper. Over the past few decades, India has realised the disadvantages of cutting trees for manufacturing paper; and accordingly, the focus has changed from the paper made from wood pulp to the paper made from the *agricultural residues based pulp* and on paper made from *old waste paper*, as shown in table 14.4.

Table 14.4. Raw Material Inputs Used in India for Manufacturing Paper (% of Total Production) Over the Last Decades

S. No.	Raw material used	Year				
		1970	1985	1989	1992	1994/95
1.	Wood-based pulp	95	65	60	48	37.8
2.	Agro-based pulp	5	22	25	29	31.4
3.	Waste paper	Nil	13	15	22	31.0

It can be seen from table 14.4 that whereas in 1970, 95% of our total paper production was being derived from wood-pulp by cutting trees; in 1994-95, only 37.8% of our total paper production was being made by using wood pulp. Similarly, whereas no old waste paper was being used for manufacturing new paper in 1970, about 31% of our total paper production was being obtained from recycled paper waste in 1994-95. The increasing use of waste paper for manufacturing new paper indicates very good progress made by India, to save our valuable forest resources. However, many of our paper mills that use waste paper prefer to use imported waste paper, because domestic waste paper is of poorer quality, given its unorganised collection. So much so that about two thirds of waste-paper-based Indian paper mills use imported waste paper, because of its better quality in terms of fibre-strength, and also due to inadequate domestic supply.

Each tonne of imported waste paper can, in fact, produce as much as 0.9 tonne of recycled paper, which is considerably higher than the figure of 0.4 tonne for agro-pulp, and 0.5 tonne for wood-pulp. Moreover, the waste-paper-based production of new recycled paper is far less polluting. The BOD values of the waste water effluent discharged from a wastepaper mill is approximately 25 mg/L, which is far below the value of 150 mg/L for agro-based-paper mill and of 100 mg/L for wood-based paper plant. Not only a

wastepaper based paper mill produces far less polluting waste water, it also requires far less energy than the energy required by paper mills based on other raw materials.

With the current stress on liberalization, industrial growth, and changing life styles, consumption levels for paper are growing in India. That is why, the annual per capita consumption of paper in India has steadily risen from about 3.6 kg in 1986 to about 6 kg in 2004-05.

As a matter of fact, the consumption of paper in India has increased due to its increasing use for packaging. While the share of the packaging paper in India has been increasing over the last four decades, its conventional cultural share (for writing and printing) has shown a decline. That is why, the increasing percentage of paper has been observed in the municipal solid waste (MSW), since the packaging paper is generally not collected for recycling, although most of the old newspapers, magazines, books etc. do enter the recycling chain. At present, about 8 to 12% of the household waste consists of paper, which ends up being used for landfill along with most other types of wastes, because it is primarily the packaging paper, a large portion of which is not sorted and separated. Yet, however, a small percentage of this—what can be recycled and has not been soiled by other wastes—is still recovered by the vast network of rag pickers working especially in large towns and cities, and is finally used for recycling.

Unfortunately, we have not been able to increase the recovery, sorting and bailing of waste paper even in our metropolitan cities in India, since the recovery and recycling of paper has received little support, either institutional or governmental. In the absence of financial incentives and the latest technology, paper recycling industry in India remains an undeveloped industry.

14.4.3. Recycling of Glasses. Glass is the third important component of municipal solid waste that is normally recycled. It is usually picked up in our country by the rag pickers, and finally reaches the glass industry through dealers. The waste glass is generally used in manufacturing glass containers and hollow wares, for which the largest use (more than 99%) of glass is made in India. The proportion of waste glass in the raw material varies from 25% to 90%.

14.5. Disposal of Municipal Solid Waste (MSW)

The municipal solid waste, as stated earlier, is collected in India from houses, roads, streets, markets, and from the commercial office buildings by the private or municipal sweepers and scavengers in hand lorries, and carried and dumped into the municipal refuse chambers (popularly called *dhalao*). During the time the refuse is discarded and thrown away, and till the time it is loaded in trucks for transportation, a lot of recyclable materials like plastics, papers and glasses are removed by the rag pickers. After the wastes are loaded in trucks, it is taken for its final disposal either for dumping on low levelled land, or for *sanitary land filling*, or for *composting*, or for *incineration*, etc. As far as India is concerned, the MSW is normally brought and dumped

the city. About 90% of MSW is thus, disposed of by land dumping; about 8.5% is disposed of by composting; while the remaining about 1.5% is disposed of by other methods like pelletization, vermi-composting, etc.

The choice of a site for land filling is more a matter of what is available, than what is suitable. Only a few cities in India follow good scientific practices, such as organized tipping of wastes, using mechanised equipment for levelling and compacting the wastes, and covering the top layers with good earth before compacting further, as are required in *sanitary land filling*. Most of the land filling practices adopted in the country are, thus, confined only to carrying and dumping the waste rather than adopting the engineered land filling technique, which in future is going to be adopted more and more, with advancing technologies and shortage of land filling sites. In general, the following scientifically managed methods can be used for disposal of municipal solid waste (refuse):

- (1) *Sanitary land-filling*, also called *Controlled tipping*;
- (2) *Shredding and pulverisation*;
- (3) *Composting* including *Vermicomposting*;
- (4) *Incineration* and *Thermal pyrolysis*; and
- (5) *Barging it out into the sea*.

Out of these methods, only the methods given at S. No. (1) and (5) above, are complete in themselves, while all others require further disposal of some left out residues or by-products.

All these methods are described below:

14.5.1. Disposal of MSW (Refuse) by Sanitary Land Filling or Controlled Tipping Method. In this method of refuse disposal, refuse is carried and dumped into the low lying area (earmarked as the land fill site) under an *engineered operation, designed and operated in an environmentally sound manner*, as not to cause any public nuisance or hazards to public health or safety.

In this method, the refuse is dumped and compacted in layers of about 0.5 m thickness, and after the days work-when the depth of filling becomes about 1.5 m, it is covered by good earth of about 15 cm thickness. This cover of good earth is called the *daily cover*. Since the refuse is well compacted with bulldozers, trucks, rollers, etc. and is well covered daily with good-earth, it does not cause any public nuisance, like scattering of wind blown litter, and evolution of unpleasant odours and foul smells, as may be caused by an ordinary dumping of refuse on land.

The filling of refuse is actually done in sanitary land filling by dividing the entire land-fill area into smaller portions, called *cells*. These cells are initially filled with daily compacted refuse of about 1.5 m depth, in turn. After filling all the cells with first lift, the second lift is laid in about 1.5 m height, and covered with good earth cover of about 0.15 depth, called the *intermediate cover*. After all the cells have been filled up with second lift, the third and more lifts can be piled up in about 1.5 m depth each, all laid over by the intermediate earth covers, turn by turn. The process will continue till the top most lift is piled up. The final cover of about 0.6 m depth shall

be laid, and well compacted, to prevent the surface. This filling operation is usually also be installed over the top of the final

vents from burrowing into the Fig. 14.1. A cap-system* may

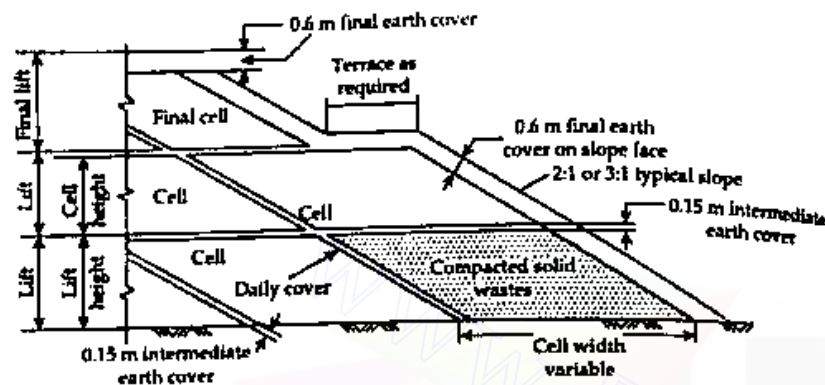


Fig. 14.1. Sectional view of a sanitary land fill.

With the passage of time, the filled up refuse will get stabilised due to the decomposition of organic matter and subsequent conversion into stable compounds. The land filling operation is essentially a biological method of waste treatment, since the waste is stabilised by aerobic as well as anaerobic bacterial processes.

Initially, the bacterial decomposition occurs under the aerobic conditions, because a certain amount of air is trapped within the landfill. However, the oxygen in the trapped air is soon exhausted within a few days and the long term decomposition occurs under anaerobic conditions.

The entire period of refuse stabilisation can in fact, be divided into five distinct phases: (i) During the first phase of operation, aerobic bacteria and fungi, which are dominant, deplete the available oxygen to effect oxidation of organic matter. As a result of aerobic respiration, the temperature in the fill

*The cap system or the cap, which is usually provided at the top of the sanitary land fill, after filling the same to full height, to avoid formation of leachates, consists of the following layers.

45 cm thick compacted clay layer (permeability less than 10^{-5} cm/s) is provided at the bottom, which is overlain by a 15 cm thick drainage layer consisting of sand (having permeability greater than about 10^{-2} cm/s); above the second layer of sand, is laid a geotextile filter membrane to protect the drainage layer from being clogged. Finally, 30 cm thick soil layer is laid at the top to promote vegetative cover and grassing. This top most soil layer is called the vegetative layer. This entire arrangement is known as the cap, and is provided over the final cover of about 0.6 m thickness.

The purpose of the cap is to prevent the rain water from reaching the solid waste (to avoid formation of leachate) which otherwise, is drained through the drainage layer. Gas wells may also be installed through this cap, which may be located in the top earth cover, and will extend up through the cap, up to the atmosphere, like chimneys.

If the sanitary land fill site is covered with a cap, it should be ensured that sufficient moisture is present in the waste fill, since moisture is necessarily required in anaerobic decomposition of the waste, which the waste has to undergo after the initial oxygen trapped

increases. (ii) In the second phase, anaerobic and facultative bacteria develop to decompose the organic matter; and H_2 and CO_2 gases are thus evolved through acidogenic activity. (iii) In the third phase, methanogenic bacteria develop to cause evolution of methane gas. (iv) In the fourth phase of decomposition, the methanogenic activity gets stabilised. (v) In the fifth stage, the methanogenic activity subsides, representing depletion of the organic matter; and ultimately, the system returns to aerobic conditions within the land fill.

For better biological degradation, the moisture content of the dumped material should be high, say not less than 60% or so, which is sometimes maintained by the aerobic decomposition brought out by fungi, or sometimes by sub-soil water.

The refuse, in managed landfills, may usually get stabilised generally within a period of 2 to 4 months, and settle down by 20–40% of its original height. The filled up land can, in fact, be used for developing some green land, parks, or other recreational spots. Unequal settlement and odour trouble, may however, be there, and hence, normally, for the first 1–2 years, the land is grassed or planted, fenced, and left out as reserved green land. This can, on a later date, be preferably used for developing some regular play grounds, or picnic spots. Such sites may also sometimes be used for constructing houses; though they are not generally preferred, because such constructions may prove to be costly due to their deeper foundations for avoiding unequal settlements. Such houses, may further pose problems like those of bad odours and cracks in walls and plasters, on a later date.

This method of refuse disposal is very suitable to the heavier type of Indian refuse, and also to the rural communities, hostels, camps, etc. Hence, it is widely adopted in our country. So much so, that about 90% of Indian refuse is disposed of in this manner.

The various advantages and disadvantages of this method of refuse disposal are given below:

Advantages: (i) This method is most simple and economical. No costly plant or equipment is required in this method, as is required in other methods of incineration or pulverization.

(ii) Separation of different kinds of refuse, as required in incineration method, is also not required in this method.

(iii) There are no residues or byproducts left out/evolved in this method, and hence no further disposal is required; this being a complete method in itself.

(iv) Low lying water-logged areas and odd quarry pits can be easily reclaimed and put to better use. The mosquito-breeding places are also, thus, eliminated.

Disadvantages: (i) Low lying depressions or dumping sites may not always be available; or even if they are available today, they may ultimately become scarce or unavailable in future, since the production of solid waste is a continuous process.


(ii) There is a continuous evolution of foul gases near the fill site, especially during the times the refuse is being dumped there. These gases may often be explosive in nature, and are produced by the decomposing or evaporating

organic matter. These gases, known as land fill gases, become a serious environmental problem at sanitary land fill sites. These gases need be estimated, and properly disposed off as discussed in article 14.5.1.1.

(iii) Since the dumped garbage may contain harmful and sometimes carcinogenic non-bio-degradable substances, such as plastics, unused medicines, paints, insecticides, sanitary napkins, etc., they may start troubling on a later date, particularly during rainy season, when excess water seeping through the area, may come out of the dump, as a coloured liquid, called leachate. This highly poisonous and polluted leachate, containing organic compounds like chlorinated hydrocarbons, benzene, toluene, xylene, etc.; is likely to seep to the underground water-table, to contaminate the ground water, leading to diseases, like cholera, typhoid, polio, etc. In order to avoid such harmful effects, the leachates may have to be scientifically assessed, collected, and disposal of, as discussed in article 14.5.1.2.

14.5.1.1. Gas production and its control at properly managed sanitary land fill sites. The rate of decomposition of solid waste in land fills, as measured by gas production, reaches a peak within the first 2 years, and then tapers off, continuing in many cases, for periods as large as up to 25 years or more.

The total volume of gases released during anaerobic decomposition can be estimated in a number of ways. If all the organic constituents in the refuse (with the exception of plastics, rubber and leather) are represented with a generalised formula of the form $C_a H_b O_c N_d$, then the total volume of gas can be estimated by using the equation (14.1), given below, with the assumption of complete conversion to carbon dioxide and methane:

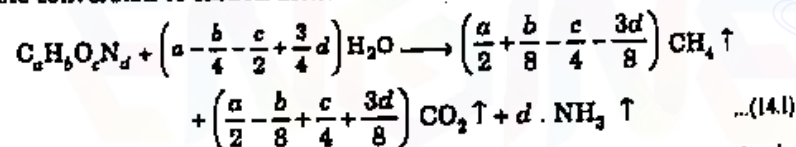

Under ideal conditions, the gases generated from a landfill should either be vented out to the atmosphere; or in larger landfills, it may be collected and supplied to houses for warming or cooking, or used for production of energy. In most cases, over 90% of the gas volume produced from the decomposition of solid wastes, consists of methane and carbon dioxide. Although most of the methane escapes to the atmosphere, both methane and carbon dioxide have been found in large concentrations, of say up to 40%, at lateral distances of up to 120 m from the edges of the landfills. Hence, if the gases are allowed to be released to the atmosphere in an uncontrolled manner (as happens in most of the cases in India), then methane may accumulate below buildings, or in enclosed spaces, or close to the sanitary land fill site (upto about 200 m), since the sp. gravity of methane gas is less than that of air. This methane collection may prove to be dangerous, as it may develop an explosive mixture with air, even when methane is present in 5-15% by volume.

On the other hand, carbon dioxide gas tends to move towards the bottom of the landfill, since carbon dioxide is about 1.5 times as dense as air, and is 2.8



portions of the landfills may remain high for years. Ultimately, because of its density, CO_2 will also move downward through the underlying formation, until it reaches the ground water. Because CO_2 is readily soluble in water, it usually lowers the pH of ground water, which, in turn, may increase the hardness and mineral content of the ground water, through the solubilization of calcium and magnesium carbonates.

The movement of gases in landfills, should therefore, be controlled with properly designed engineering methods, such as by constructing vents and barriers, and by gas recovery, as discussed below.

(i) **Control of Gas Movement with Vents and Barriers.** The lateral movement of gases produced in a landfill can be controlled by installing gas vents, made of materials that are more permeable than the surrounding soil. Typically, as shown in Fig. 14.2 (a) to (c), gas vents are constructed of gravel.

The gravel layer of a cell vent is laid directly above the daily cell cover. The spacings of cell vents [Fig. 14.2 (a)] depends on the width of the waste cells, but usually varies from 18 to 60 m. The thickness of the gravel layer should be such that it will remain continuous, even though there may be differential settling. A depth of about 0.3 m to 0.45 m is usually recommended.

In the trench vent, a trench is dug as deep as the solid wastes and filled with gravel, as shown in Fig. 14.2 (b).

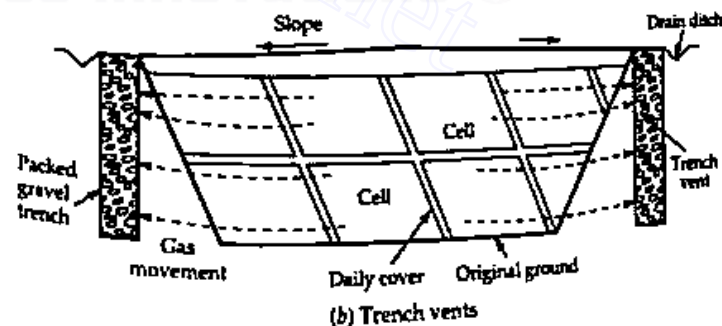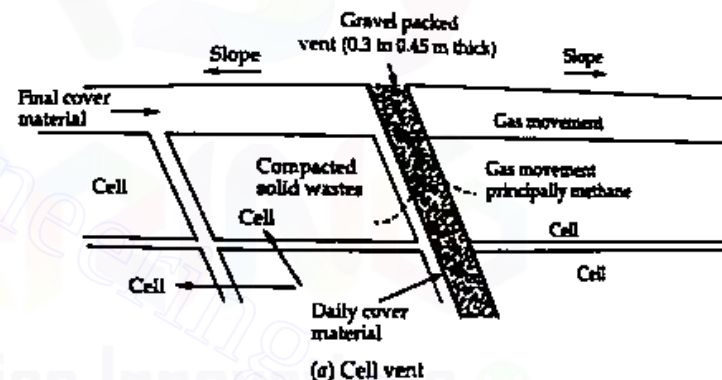

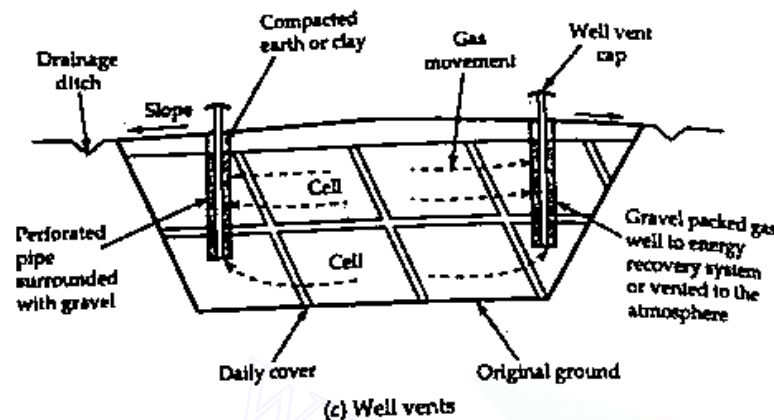


Fig. 14.2. Typical gravel gas vents installed in sanitary landfills for venting landfill gases.

A well vent, consisting of a perforated pipe surrounded with gravel, may also be installed through the waste fill, as shown in Fig. 14.2 (c), to control the lateral movement of gases. Such pipe vents will collect and convey the gases to riser pipes for venting. If the gases are to be collected for recovery for its heating value, then the riser pipe may be connected to a main for pumping, to the processing plant.

Control of downward movement of gases can be accomplished by installing perforated pipes in a gravel layer at the bottom of the landfill. If the gases cannot be vented laterally, it may be necessary to install *gas wells* and to vent the pumped gas to the atmosphere.

The movement of landfill gases through adjacent soil formations (neighbours lands) can be controlled by erecting vertical well barriers of materials that are more impermeable than the soil (Fig. 14.3). Some of the landfill sealants that are available for this use, are shown in table 14.5. Out of these available sealants, the *compacted clay* is most commonly used.

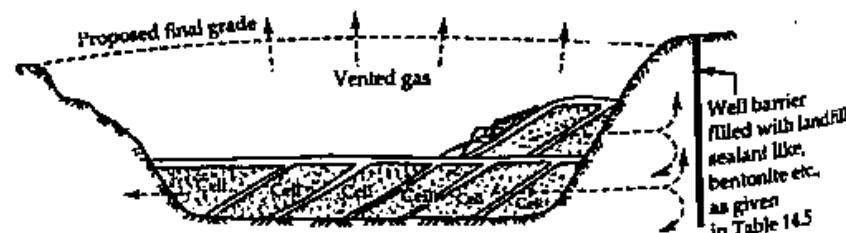


Fig. 14.3. Barrier wells or clay barriers.

Table 14.5. Landfill Sealants for the Control of Gas and Leachate Movement

Sealant		Remarks
Classification	Representative types	
Compacted soil		Should contain some clay or fine silt.
Compacted clay	Bentonites, illites, kaolinites	Most commonly used sealant for landfills; layer thickness varies from 0.15 to 1.2 m; layer must be continuous and not allowed to dry out and crack.
Inorganic chemicals	Sodium carbonate, silicate, or pyrophosphate	Use depends on local soil characteristics.
Synthetic chemicals	Polymers, rubber latex	Experimental, use not well established.
Synthetic membrane liners	Polyvinyl chloride, butyl rubber, hypalon, polyethylene, nylon-reinforced liners	Expensive, may be justified where gas is to be recovered.
Asphalt	Modified asphalt, asphalt-covered polypropylene fabric, asphalt concrete	Layer must be thick enough to maintain continuity under differential settling conditions.
Others	Gunite concrete, soil cement, plastic soil cement	

(ii) **Control of Gas Movement by Gas Recovery.** In large sized landfills, the gases evolved due to decomposition of refuse may be collected through installing gas recovery wells, as shown in Fig. 14.4. The recovered gas may be

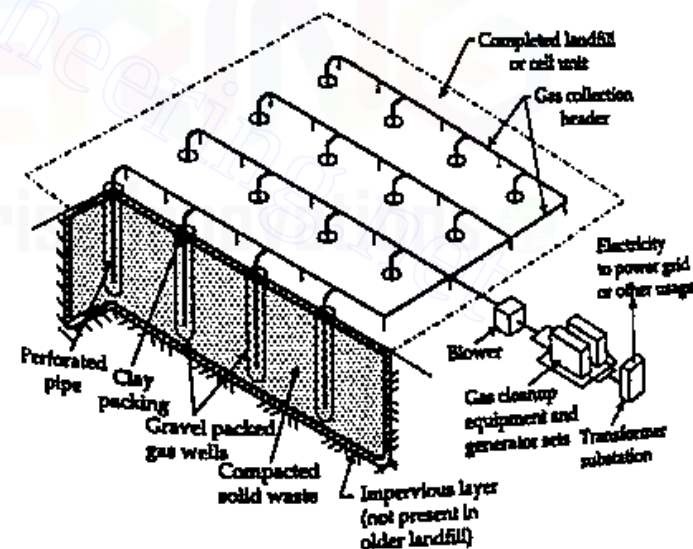


Fig. 14.4. Gas Recovery Well system used for the recovery of gases from large sized landfills.

used for generation of electric power or may be supplied to nearby houses for domestic use. Although gas recovery systems have been installed in some advance countries in some large municipal landfills, yet the economics of such operations are not well defined. The cost of cleaning of the generated gas and that of the processing equipment may limit the recovery of landfill gases, especially from small landfills.

14.5.1.2. Controlling the movement of leachate in properly managed sanitary landfill sites. Under normal conditions in hazardous landfills, leachate is found at the bottom of the landfills. From there, its downward movement occurs through the underlying strata, although some lateral movement may also occur, depending upon the characteristics of the surrounding soil.

The rate of downward seepage from the bottom of the landfill can be estimated by Darcy's law, by assuming that the material below the landfill to the top of the water-table is saturated, and that a small layer of leachate exists at the bottom of the fill. Under these conditions, the discharge rate of leachate per unit area is equal to the value of K (coefficient of permeability) expressed in m/day. This value will indicate the maximum amount of seepage* that would be expected, and this value can be used for designing a suitable system for controlling or collecting the leachate.

As leachate percolates through the underlying soil strata of the landfill, many of the chemical and biological constituents originally contained in it, will be removed by the filtering and adsorptive action of the soil strata. The degree of removal of pollutants from the leachate will usually depend on the characteristics of the soil strata, especially its clay content. However, because of the inherent potential risk involved in allowing leachate to percolate to the groundwater (even with the removal of some of its organics and chemicals), it is always better to either eliminate the production of leachate, or to collect and treat it separately, as stated earlier. The use of clay liners or synthetic liners like geotextiles** has been the favoured method for reducing or eliminating the percolation of leachate. Simultaneous use of clay lining and synthetic membrane liner, as shown in Fig. 14.5 may be required for all hazardous landfill sites, where hospital wastes are dumped frequently, and where chances of production of leachates are high. The use of synthetic liners may prove to be costly and require care as not to get damaged during the filling of refuse at the site over the liner, although such a lining layer proves to be quite effective in preventing the downward movement of the leachate to the groundwater. The leachate can also be collected over this layer through open jointed pipes, etc. as shown in Fig. 14.5.

For it to be an effective barrier, the thickness of clay liner with permeability not more than 1×10^{-7} cm/s, usually provided at the bottom of the fill, should be at least about 0.9 m or so. The synthetic liner with permeability not exceeding 1×10^{-12} cm/s may be acceptable for the upper liner.

*Under normal conditions, the actual rate would be less than the theoretical value (i.e. K m/d), because the soil column below the landfill would not be saturated.

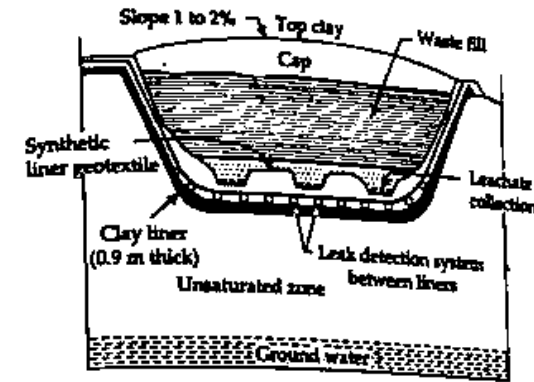


Fig. 14.5. Simultaneous use of clay lining and synthetic lining in hazardous landfills to prevent and control movement of leachate to ground water.

Another important method to control the production of leachate is to provide an impervious clay layer over the top of the fill, which should be appropriately sloped (1 to 2 percent) and provided with adequate surface drainage. This will prevent the infiltration of surface water, which is the major contributor to the total volume of the leachate.

14.5.1.3. Factors to be considered in the design and operation of a sanitary landfill site. Usually, the following factors must be considered for properly designing and managing a sanitary landfill site:

(i) *Access to the site.* The sanitary land fill site must be provided with suitable access roads for easy plying of trucks, carrying the city's solid waste (refuse) to the site.

(ii) *Cell Design and construction.* The design for piling the waste at the landfill site will largely depend upon the terrain and position of water-table, etc. of the landfill site, as well as on the type and quantum of daily waste required to be dumped at the filling site. Circumstances under which the different methods of land filling are to be adopted have already been discussed along with the arrangements required to be made for collecting gas and leachate, if required. Depending on the specific requirements, the arrangements may be designed and adopted to suit the specific needs of the given site.

(iii) *Cover Material.* Approximately 1 m^3 of cover earth (good earth) will be required to cover every 4 to 6 m^3 of refuse. Clayey soils would be preferable as covers or sealants. Such clayey earth should be available near the sanitary fill site, as otherwise, the same will have to be transported over distances. Bringing of such earth will have to be identified and arranged in advance, for properly managing a landfill site. Use of on site earth by excavation, may be maximised to avoid transport of outside earth by preferring the trench system of land filling.

(iv) *Equipment Requirements.* Heavy earth moving machinery to pile and compact the waste and the good earth will be required at the land fill site, and this requirement may vary with the size of the landfills.

(v) *Fire Prevention.* Non potable water outlets, if provided at site to be clearly marked and

distinguished. Proper cell separation by earthen embankments will surely help in preventing continuous fire, even if it occurs in one cell.

(vi) *Land Area.* Area for filling at the site should be large enough to hold all wastes for a minimum of 1 year but preferably for 5 to 10 years.

(vii) *Land filling Method.* Selection of method will vary with the terrain and available cover.

(viii) *Litter control.* Moveable fences may be used at the unloading areas; crews may be deployed to pick up litter atleast once per month, or as required.

(ix) *Unloading Area.* Unloading area should be kept small, generally under 30 m.

(x) *Drainage Arrangements.* In order to divert the surface run off (from rains, etc.) to avoid its percolation through the filled up site, *drainage ditches* shall be installed, and final top earth cover shall be smoothly finished with 1 to 2% slope to avoid ponding of water.

(xi) *Gas Recovery or Prevention of Gas Movement.* Arrangements for prevention of gas movement or gas recovery may be suitably designed and made, as discussed in article 14.5.1.1.

(xii) *Protection of underground water.* Underground springs, if any, may be suitably diverted. Sealant barrier for leachate control may be installed. Wells for gas and groundwater monitoring may also be installed.

(xiii) *Communications Facilities.* Telephones may be installed at the site to ensure proper communication in case of emergencies, like fires, etc.

(xiv) *Operational Records.* Proper personnel may be positioned to receive the city's refuse and solid waste. Tonnages, transactions, and billing may be installed, if any disposal fee is to be charged.

(xv) *Employees Facilities.* Restrooms and drinking water should be provided.

(xvi) *Days and Hours of Operation.* Usual practice is to adopt 5 to 6 days a week, with 8 to 10 h/day. Night shifts are also provided in big cities, since carriage of refuse is usually done during night hours.

(xvii) *Equipment Maintenance.* A covered shed or workshop at the site may be installed for field maintenance of equipment.

14.5.2. Disposal of MSW (Refuse) by Shredding and Pulverisation. The size and volume reduction of municipal solid waste (MSW) is accomplished by the physical processes of *shredding* and *pulverisation*. Shredding refers to the actions of cutting and tearing; whereas, pulverisation refers to the actions of crushing and grinding. Shredding and pulverising may help in reducing the overall volume of the original MSW, by as much as 40%. The shredding and pulverising not only helps in reducing the volume of MSW, but also helps in changing the physical character of the waste, which becomes practically odourless and unattractive to the insects.

The pulverised refuse, though contains fertilizing elements like potash, phosphorus, and nitrogenous materials, yet cannot be suitably used as manure. It has, therefore, to be further disposed of either by filling in trenches, or is digested in *open windrows* or *closed digestors*, as discussed in article 14.5.3.

The pulverisation of MSW is usually achieved in a hammer mill, where the raw solid waste is cramped with a force, sufficient to crush or tear individual components of the waste. Impact is provided by several hammers that rotate at high speeds (up to 1500 revolutions/minute) around a central horizontal or vertical shaft. The mill helps to produce a uniform or homogeneous mass of solid waste. Such a hammer mill proves to be a very versatile device for size reduction of solid wastes, because it accepts almost any type of solid waste material (except of course, very bulky or dense ones, such as tree stumps, or engine blocks, etc.). A hammer mill, thus, makes it possible to reduce the size of the various components of solid waste material, to uniform fragments of size 25 to 50 mm or so.

In order to further reduce the waste volume, and facilitate handling of the pulverised MSW, it is usually compacted to form *rectangular blocks* or *bails*. MSW bails are typically of about 1.5 m³ in size and weigh roughly 1 kN. The pulverised MSW is converted into bails by compacting the pulverised MSW under high pressures (of about 700 kPa) in either *vertical* or *horizontal presses*. This process is called *bailing of MSW*. The bails are frequently wrapped with steel wire to help retain their rectangular shape during handling. They may also be coated and stabilised with portland cement or hot asphalt, or tied with metal bands, depending upon the intended use, or the method of disposal. If moisture content and compaction pressures are high enough, the bails may retain their shape without being wire-wrapped or encased. Semi automatic horizontal presses can bail up to 36 kN of pulverised waste per hour. Volume reduction due to pulverising and bailing together, may occur by as much as 90% of the original waste volume.

The bailing process, thus, has significant advantages in decreasing the waste volume, and in providing an easy way for handling waste as blocks rather than as litter, thereby reducing the litter nuisance of scattering, etc.

14.5.3. Disposal of MSW (Refuse) by Composting. Composting of refuse is a biological method of decomposing solid wastes. This decomposition can be affected either under *aerobic conditions*, or under *anaerobic conditions*, or both. The final end product, is a manure, called the *compost* or *humus*, which is in great demand in European countries as fertilizer for farms.

Basically, composting is considered to be an *aerobic process*, because it involves piling up of refuse and its regular turning, either manually or by mechanical devices, so as to ensure sufficient supply of air and oxygen during its decomposition by bacteria, fungi and other microorganisms, like *actinomyces*. Initially, the process starts with the *mesophilic bacteria*, which oxidise the organic matter (in the refuse) to carbon dioxide and liberate heat. The temperature rises to about 45°C, and at this point, the *thermophilic bacteria* take over and continue the decomposition. During this phase, the temperature further rises to about 60°C, which has to be maintained for at least 3 days in order to destroy pathogenic bacteria. This temperature control is crucial, because optimal decomposition occurs between 55 and 60°C, but if the temperature exceeds 60°C, decomposition slows down. In about 4 to 5 weeks, the easily biodegradable fraction gets consumed and the temperature

of the compost mass starts falling. Complete stabilisation occurs after the compost is allowed to cure for another 2 to 8 weeks. During the active early decomposition phase, the thermophilic bacteria (mainly *Bacillus*, *Clostridium* and *Pseudomonas*) act as the principal decomposers; while fungi (such as *Mucor*, *Penicillium* and *Aspergillus*) are more active during the curing stage. The entire composting, thus, gets completed in about 3-4 months time. Volume reductions of the original organic material of up to 50% are achieved under ideal conditions. The finally produced compost usually, has earthy smell and a dark brown colour.

Moisture content of the compost mass should, however, be controlled to ensure optimum aerobic decomposition, because excessive moisture will make it difficult to maintain aerobic conditions, while deficient moisture inhibits biological life. A moisture content of about 55% should be established, so that aerobic biological activity may proceed at an optimum rate. It may, therefore, become necessary to add water to the compost mass during its turning, for maintaining satisfactory moisture content.

The Municipal Solid Wastes (Management and Handling) Rules, 2000 has laid down the following specifications (Table 14.6) for compost quality, to ensure its safe application.

Table 14.6. Composition/Quality Standards for Compost

S. No.	Parameter	Concentration not to exceed in mg/kg of dry compost, except for pH value and C/N ratio
1.	Arsenic	10.00
2.	Cadmium	5.00
3.	Chromium	50.00
4.	Copper	300.00
5.	Lead	100.00
6.	Mercury	0.15
7.	Nickel	50.00
8.	Zinc	1000.00
9.	C/N ratio	20-40
10.	pH value	5.5-8.5

In India, the composting is practised in rural areas on the mixture of night soil and refuse. Two methods, which are generally adopted here, are :

- Indore* process ; and
- Bangalore* process, as discussed below :

Indore method of composting uses manual turning of piled up mass (refuse + night soil), for its decomposition under aerobic conditions. In this method, layers of vegetable wastes and night soil are alternatively piled in depths of about 7.5 to 10 cm each, to a total depth of about 1.5 m in a trench ; or above the ground to form a mound called a *windrow*.

A windrow is a long mound or stack of the organic MSW (mixed with cattle dung and human excreta if needing disposal) dumped on land in a height of

about 1.5 m to 2 m, usually about 2.5 m to 3 m wide at the base. Most windrows are conical in cross-section and about 50 m in length. The composting waste is aerated by periodically turning the waste mix in the windrow, or in the trench, as the case may be. The manual turning with a pitchfork can be adopted at smaller installations ; while at larger plants, mechanical devices like self-propelled overcab loaders, rotary ploughs, etc. may be used to turn the refuse once or twice per week, which serves to introduce oxygen and to control the temperature. Bulldozers and Packlain machines are used for reshaping the stacks and for forming new ones. The moisture content of the turning mass is maintained at about 55% for getting optimal decomposition of the waste mass. This process of turning is continued for about 4 to 5 weeks, during which time, the readily biodegradable organics are consumed. The waste compost mass is finally allowed to cure for another 2 to 8 weeks without any turning. The entire composting process, thus, takes about 3-4 months time to complete, after which the compost becomes ready for being taken out for use or for sale.

The Bangalore method of composting, on the other hand, involves anaerobic decomposition of wastes ; and does not involve any turning or handling of the mass, and is, hence, cleaner than the Indore method. This method is, therefore, widely adopted by municipal authorities throughout India. The refuse and night soil, in this method, are, therefore, piled up in layers in an underground earthen trench (about 10 m × 1.5 m × 1.5 m). This mass is covered at its top by layer of earth of about 15 cm depth, and is finally left over for decomposition.

Within 2 to 3 days of burial, intensive biological action starts taking place, and organic matter begins to be destroyed. Considerable heat gets evolved in the process, which raises the temperature of the decomposing mass to about 75°C. This heat prevents the breeding of flies by destroying the larvae. After about 4 to 5 months (depending upon the season), the refuse gets fully stabilised and changes into a brown coloured odourless innocuous powdery mass, called humus. This humus is removed from the trenches, sieved on 12.5 mm sieves to remove stones, broken glass, brickbats, etc., and then sold out in the market as manure. The empty trenches can again be used for receiving further batches of refuse.

The initial C-N ratio* and moisture content of the compost heap are the two important controlling factors in the success of anaerobic digestion, which

*Carbon-Nitrogen ratio ; i.e. C/N of the input material in the compost heap is an important factor for the bacterial activity to continue, since the bacteria use nitrogen for building their cell structures (as proteins) and carbon for food (as energy). The anaerobic bacteria, developing in this digestion, use up carbon about 30-60 times faster than they use up nitrogen. Hence, for proper development of anaerobic digestion, C/N ratio of the digestive material should be between 30 to 50 for optimum digestion (i.e. carbon should be 30-50 times more than the nitrogen).

However, when there is too much of carbon, i.e. C/N is higher than the optimum, then nitrogen will be used up and carbon left over, thereby leaving the digestion of organic matter incomplete. The digestion will, thus, remain inefficient. Similarly, when there is too much of nitrogen, i.e. C/N ratio is lower than the optimum, then the carbon will soon get exhausted and fermentation stop, leaving nitrogen in the digester, which will combine with hydrogen to form ammonia (NH₃). This can kill or inhibit the growth of bacteria, especially the methane producing ones. Hence, anaerobic digestion will hence, require an optimum C/N ratio.

finally produces a compost free from pathogens and contains 1% N, 1.1% P (as P_2O_5), and 1.5% K (as K_2O) on dry basis, thus proving to be a valuable nutrient for the soils, along with producing biogas as a by-product.

Fully Mechanised Composting Plants involve mechanised receipt, segregation, and pulverization of the refuse, before its digestion in closed digestors. Closed digestors for digestion of pulverised waste are, however, a costly proposition, and are hence being used only in advanced developed countries of Western Europe, USA, Japan, Israel, etc., Rotterdam, in Holland (Netherland)*, for example, is having a major composting plant to complement its waste management programme. Although, the same interest in composting exists in third world countries like India, but in these developing countries, the digestion is usually not done in the costly closed digestors, but is carried out in open windrows by turning the compost mass by mechanical devices.

The procedures adopted for composting in mechanised plants are briefly discussed below :

(a) *Receipt of Refuse.* The refuse is received at the plant @ 2 to 6 tonnes per vehicle, and storage capacity at the plant should be about 25 to 50% of the daily arrival of refuse at the plant, pending segregation and grinding.

(b) *Segregation of Refuse.* Dry refuse is allowed to move along a belt conveyor, whereby the ferrous (iron) matter is removed by magnetic separators; and other non-compostable organic materials, such as paper, rags, card-boards, non-ferrous metals, etc. are also separated out, for recycling and reuse. The separation of such material can be done manually as well as by rotary and shaker screens.

(c) *Grinding or Pulverizing of refuse.* The remaining refuse is now pulverised by using different equipments, like hammer mill, rasping machine, dano grinder, etc.

(d) *Digestion or Fermentation of refuse.* The above refuse is finally digested under controlled conditions of temperature and moisture, in mechanical digestors. Vertical or horizontal cylinders, or Silo type digestors are the common types of closed digestors. Such closed digestors are the most hygienic and require minimum space, though costly, and hence largely adopted in developed countries. Digestion period in such digestors normally vary between

2 to 5 days for refuse containing low cellulose or low $\frac{C}{N}$ ratio; and 7 to 9 days for refuse having more quantities of cellulose and higher $\frac{C}{N}$ ratio.

Fig. 14.6 shows such a closed digester plant, where the refuse and garbage is processed in four stages; viz. (i) is taken to a grinder; (ii), then to a bucket conveyor; (iii) for segregation; and (iv) finally to a closed digester containing rotating mechanism for thorough mixing of the refuse for its aerobic digestion under controlled conditions of temperature and moisture.

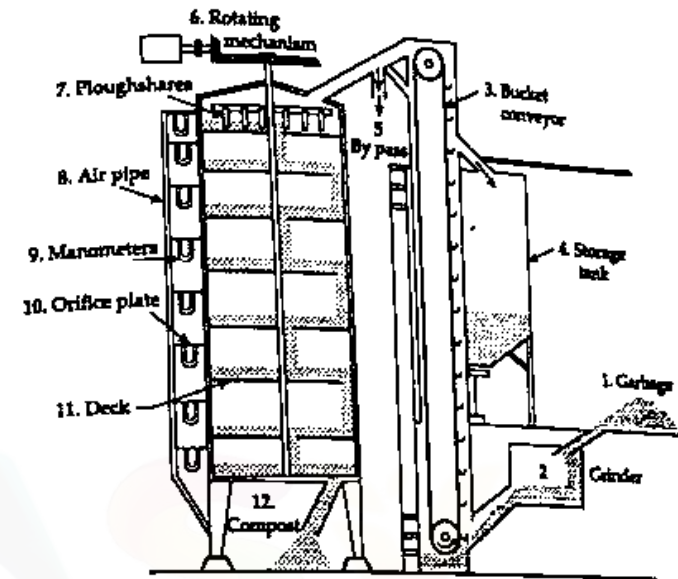


Fig. 14.6. Diagram of a large scale modern Refuse Digester Plant at Michigan (U.S.A.).

Such closed digestors, as stated earlier, may prove to be costly, and hence uneconomical for composting large quantities of refuse, particularly for developing countries, like India. In under-developed and developing countries, the refuse is segregated and pulverised by using different techniques, and finally digested in open windrows. The digestion process in open windrows, as explained earlier, will further digest and reduce the already reduced quantity of waste (through pulverisation) by about 50%. This finally stabilised humus can be collected, dried, sieved, and sometimes enriched by the addition of chemical nutrients like nitrogen and phosphorous (i.e., Urea and DAP, etc.), packed and sold in the market as manure or soil-conditioner. The compost (humus) can also be granulated or palletised for sale, instead of selling it in powder form.

The largest potential market for compost is the agriculture sector. It may also be used for land reclamation, and in landscaping.

14.5.3.1. *Vermi-composting.* Vermi-composting uses the natural composting process of decomposition of biodegradable organic matter by the soil bacteria-assistance of cultured earth worms, that are now produced commercially. These earth worms do help in quicker decomposition of the organic matter. The method helps in adopting the composting technique in individual bungalows and institutions, to dispose of the domestic waste, and more particularly for disposing of the yard and garden wastes, particularly the leaves and grass clippings, which cannot be thrown away with MSW in countries like USA. The various steps involved in applying the vermi-composting technique at individual domestic level are summarised below :

- (i) Dig a small pit-about 0.5 m square and 1 m deep.
- (ii) Line the pit with straw or dried leaves and grass.
- (iii) Organize the disposal of organic domestic waste (such as vegetable wastes) into the pit as and when generated.
- (iv) Introduce a culture of worms that is now produced commercially.
- (v) Cover the pit contents daily, by sprinkling of dried leaves and soil every day.
- (vi) Water the pit once or twice a week to keep it moist.
- (vii) Turn over the contents of the pit every 15 days.
- (viii) In about 45 days, the waste will be decomposed by the action of the microorganisms.
- (ix) The produced humus (soil) in the pit is fertile and rich in soil nutrients. It can, hence, be used in the garden.

14.5.4. Disposal of MSW (Refuse) by Incineration and Thermal Pyrolysis*. Burning of refuse at high temperatures in furnaces, called *incinerators*, is quite a sanitary method of refuse disposal, and is widely adopted in developed countries like USA, where the collected refuse is of high calorific value, and is, hence quite suitable to burning.

Normally, however, only the combustible matter, such as garbage, rubbish and dead animals are burnt, and the incombustible matter like broken glass, chinaware, metals, etc. are either left unburnt or are separated out for recycling and reuse, before burning the solid wastes. Prior separation of such materials will reduce the load on the furnaces, and shall more than compensate the cost of this separation.

The left out ashes and clinkers** from the incinerators along with the non-recycled incombustible materials may, however, measure as much as 10 to 25% of the original waste, which in any case, shall have to be disposed of either by sanitary land filling, or in some other productive manner. Say for example, the clinkers can be used as aggregates for making low grade concrete or as road metal, and the ashes can be used for making bricks.

The heat produced during burning of the refuse is used in the form of steam power for running turbines to generate electricity. The quantity of steam generated as a byproduct in this method, shall, however, be uncertain, as it will depend on the moisture and calorific value of the refuse. Hence, the power so generated will fluctuate and will need stand-by diesel units to obtain continuous and assured power.

Incinerators, besides being useful for burning city refuse, are also quite useful for burning the hazardous solid and liquid wastes of the hospitals and the industries. *Rotary kiln type* of incinerators and *liquid waste incinerators* are widely used for disposal of hazardous biomedical and industrial wastes. Incinerators are also used for disposing of the wet waste sludge of waste-water

*Thermal pyrolysis is the burning of refuse in the presence of very sparse air or oxygen, so that the wastes do not completely burn, but only smoulder to produce charcoal

treatment plants, where sufficient land for converting it into manure or burying it underground for land filling, is not available.

Conventional Incinerator for Incinerating Municipal Solid Waste. The basic arrangement of a conventional incinerator, which is widely used for incinerating municipal solid waste, is shown in Fig. 14.7.

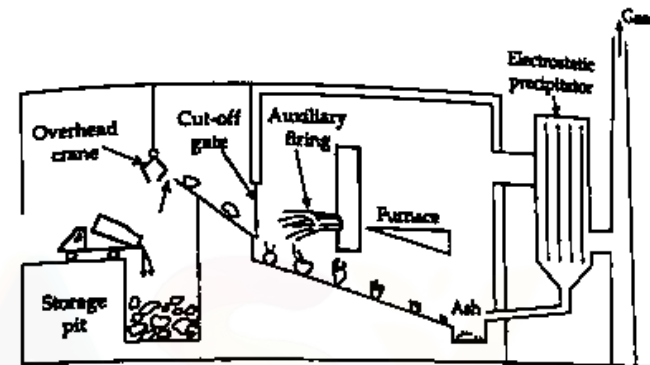


Fig. 14.7. Schematic sketch of a conventional incinerator (travelling grate type), to be used for incinerating municipal solid waste (refuse).

Since the solid wastes reaching the incinerator plant are generally quite wet, in spite of their being of high calorific value, it is generally found necessary to dry them out before burning. Conventionally, auxiliary fuel is used for initial drying of these wastes. Electrostatic precipitators are also installed in the incineration plant to reduce air pollution, caused by the escaping furnace gases, as shown in the figure. Still, however, large scale air pollution, particularly due to the emissions of dioxins, remains a serious problem with the incinerators. Moreover, the produced fly ash from the incinerators is often found to be highly contaminated with substances like lead, and, hence, has to be treated as a *hazardous waste*, and be treated before being disposed of in *hazardous waste land fills*.

Due to air pollution problems, the incineration plants should generally be located in sparsely populated areas and on the leeward side of the city, so that any foul or combustible gases, either emanating from the burning or due to any bad working of the plant, may not adversely affect the residents on a larger scale.

Large sized incinerators are called *destructors*, and they can burn 100 to 150 tonnes of refuse per hour. A destructor consists of a *furnace chamber*, *combustion chamber*, *expansion chamber*, and a *tall chimney* (25 m or so in height). The ancillary works consist of *ash-pit*, *charging apparatus*, etc. *draft apparatus*, *pre-heating arrangements*, *steam generating apparatus*, etc.

While operating the incinerators, the following points should be carefully observed :

- (a) The charging should be thorough and rapid.
- (b) Each batch of refuse entering the furnace should be well mixed, and the proportion of the fuel in the charge be adjusted to provide complete combustion.

Refuse containing 80% garbage and 20% rubbish, will normally burn without any auxiliary fuel, if air supplied for combustion is pre-heated to about 150°C. Whereas, the refuse containing 50 to 60% garbage and 40 to 50% rubbish will burn satisfactorily, without any pre-heated air. If the percentage of garbage is less than 50%, flashy fire may result.

When moisture contents of the refuse are high, such as during monsoons, auxiliary fuels, like wood, coal, or oil will be required.

(c) The minimum temperature in the combustion chamber should be sufficient (normally larger than 670°C), so as to incinerate all organic matter and oxidise foul smelling gases. If steam is to be generated, a temperature of about 1000°C is required to be produced in the combustion chamber.

The various merits and demerits and limitations of this method are given below :

Merits. (i) This is the most sanitary method of refuse disposal, and ensures complete destruction of pathogenic bacteria and insects.

(ii) There is no odour trouble or dust nuisance.

(iii) Some cost can be recovered by selling the steam power and clinkers.

(iv) The disposal site can be conveniently located within the city near the outskirts, and transportation problems sorted out easily.

(v) It requires very less space for refuse disposal.

Demerits and Limitations. (i) It is a very costly method, and requires a lot of technical know-how.

(ii) Solid wastes to be burnt should have a high calorific value.

(iii) Smoke, odour, and ash nuisance may result due to the improper and incompetent operation of the plant, particularly if substances like plastic, giving high calorific value to the wastes, are present in the wastes.

(iv) Transport vehicles are required in slightly large numbers, as there may occur delays in their emptying near the incinerators.

Use of Incinerators in India. Incinerators for waste disposal, as stated earlier, have been widely constructed and used in developed countries like U.S.A. So much so that more than 100 such plants are working in USA alone. Developing countries like India, however, do find this method to be a costly affair, and the one needing a lot of technical know-how. Still, however, a medium sized incineration plant to dispose of 300 tonnes of daily refuse, was installed in Delhi (near Timarpur) at a cost of about ₹ 18 crores. This plant was set up by BHEL (Bharat Heavy Electricals Limited) with Danish assistance (extended in the form of interest free investment to be returned over 35 years). The plant was designed to produce 3.75 Mega watt (MW) of electricity ; out of which, about 3 MW power was to be utilised by the Wazirabad Water-Works, and the rest was to be consumed in running the plant itself.

The commissioning of the plant, in fact, was completed by the end of year 1986 ; but the operational tests found the choking of the apron conveyor, due to settlement of silt and sand on the apron conveyor*. This problem arose due

to the presence of huge quantity of silt and sand found in the refuse of Delhi city. Devising of remedial measures to overcome this trouble delayed the operation of the plant by about 2 years. The plant has, however, still generally remained out of order, mainly because the calorific value of the city refuse is found to be hardly 600–800 kJ/kg (2500–3300 kJ/kg), while the plant is designed to burn wastes with calorific value of 1500 kJ/kg (6200 kJ/kg) or more.

This North Delhi plant is having a huge refuse bunker, 21 m high, 9.5 m long and 19 m wide, in which four trucks could unload garbage at a time, and refuse housed for two-three days. Two large mechanical polygrabs, each having a capacity to lift 1.5 tonnes of garbage at any time, are used to hold the garbage, lifted to the bunker with the help of cranes operating from the top, and unloaded through funnel-shaped hoppers, directly into the furnace. The furnace consists of a grate made of small metallic slabs which could be moved up and down, and also sideways by hydraulic power. Through this churning, sufficient air would pass through even the smallest bits of the garbage, and complete combustion would thus take place. There are three such grates through which the garbage would pass. The garbage from the grates would go for further combustion into the rotary kiln. Bulky and carbonaceous wastes requiring high retention time would be completely burnt here. The hot flue gases, being generated during the combustion, would heat the water in the boiler, which in turn, would generate steam to drive the turbines and the generators, for producing electricity. To make this plant pollution free, the gases are to be passed through an electrostatic precipitator before being released from the chimneys. The dust level of the emitted gas would be 150 mg/cum, and the total quantity emitted through chimneys would be 24000 cum/hour.

14.4.4.1. Pyrolysis. Upon heating in closed containers in oxygen free atmosphere, most of the organic substances of solid waste can be split through a combination of *thermal cracking* and *condensation reactions* into gaseous, liquid and solid fractions. This process is known as *pyrolysis* or *thermal pyrolysis*.

In contrast to the combustion process which is highly *exothermic* (releasing heat on burning in the presence of oxygen), the pyrolysis is highly *endothermic* (consuming heat). That is why, this process is also known as *destructive distillation*.

When the organic solid waste is pyrolysed, we obtain the following three types of products at different stages or temperatures :

(i) a *gas stream*, which primarily contains hydrogen, methane, CO, CO₂, and other gases, depending upon the organic character of the solid waste being pyrolysed ;

(ii) a *liquid fraction*, consisting of a tar and/or an oil stream, which is a liquid at room temperature and is found to contain chemicals such as acetic acid, acetone, and methanol ; and

(iii) a *solid fraction*, consisting of charcoal like product of almost pure carbon plus any inert material that may have entered the process.

The respective quantum of three end products (i.e. gas, oil and charcoal) is found to depend upon the temperature of pyrolysis. Under conditions of maximum gasification, the energy content of the resulting gas is found to be about 28000 kJ/m³ ; and that of the resulting oil to be about 23000 kJ/kg.

Pyrolysis may be used for reducing the quantities of sludge produced in a water or a wastewater treatment plant, before their ultimate disposal by methods like *landfill* and *land application*.

14.5.5. Disposal of MSW (Refuse) by Barging it Out into the Sea. This method had been used in the past to dispose of refuse by throwing it away into the sea, after carrying it at reasonable distance from the coast (say 18 to 20 kilometres inside the sea) on barges. The sea depth at such disposal point should not be less than 30 m or so, and the direction of the currents should be such as not to bring it back towards the shore. This method may, however, have a limited use, and that too only in a few coastal towns:

This method, however, proves to be quite cheap and simple, but possesses the following disadvantages:

- (i) The bulky and lighter parts of the refuse do not settle down, remain floating, and tend to return to the shores, especially during high tides;
- (ii) This method requires ships or barges for taking the refuse into the interior of the sea, the movement of which may be difficult during monsoons and stormy weathers. During such periods, the refuse will either have to be collected or disposed of by some other method;
- (iii) Even in spite of the best care and efforts, some refuse, in this method, returns to the shores, spoiling their beauty.
- (iv) The dumping of refuse in sea may cause pollution of sea, leading to large scale fish kills, if the refuse happens to contain any toxic material.

Due to such disadvantages and due to general ban imposed on dumping of wastes into the sea under the International Treaty of *Law of the Sea* (described in article 14.3.2), this method has now become obsolete.

INDUSTRIAL SOLID WASTES

14.6. Classification of Industrial Solid Wastes, and Extent of Generation of These Wastes in India

The solid wastes produced by industries can be broadly divided into the following two categories:

- (1) *Non-hazardous solid wastes*; and
- (2) *Hazardous solid wastes*.

Both these types of solid wastes are discussed below:

14.6.1. Non-hazardous Solid Wastes. The non-hazardous solid wastes generated by various industries can be further sub-divided into the following two categories.

- (i) *Biodegradable wastes*; and
- (ii) *Non-biodegradable wastes*.

(i) **Biodegradable wastes.** The major industries in urban areas that generate substantial amounts of biodegradable non-hazardous solid wastes are: fruit processing, cotton mills, paper mills, sugar mills, textile factories, etc.

(ii) **Non-biodegradable wastes.** The non-biodegradable non-hazardous solid wastes of industries are usually referred to as the *industrial solid wastes*. They are usually produced by industries like thermal power plants—which produce coal ash; integrated iron and steel plants—which produce blast furnace slag and steel melting slag; nonferrous industries like

aluminium, zinc, and copper—which produce red mud and tailings; fertilizer and allied industries—which produce phospho-gypsum. Together, these industries produce huge amounts of wastes in India, as shown in table 14.7.

Table 14.7. Annual Generation of Industrial Solid Wastes in India in Million Tonnes

S. No.	Type of Solid Waste	Quantity generated in million tonnes (Mt)
1.	Fly ash	45.0
2.	Slag	8.5
3.	Phospho-gypsum	5.0
4.	Lime sludge	4.0
5.	Red mud	3.5

Source: Confederation of Indian Industries 1996 and TERI 1996.

14.6.2. Hazardous Solid Wastes. Some of the wastes generated by industries are deemed to be 'hazardous wastes', because they contain substances that are toxic to plants, animals, and humans, or are flammable, corrosive, explosive, or highly reactive chemically.

The major industries that produce hazardous wastes include metals, chemicals, drugs and pharmaceuticals, leather, pulp and paper, electroplating, refining, pesticides, dyes, rubber goods, etc. Table 14.8 shows the amount of wastes generated by such industries per unit output.

Table 14.8. Quantum of Hazardous Wastes Produced from Select Industries (In tonnes per tonne of production)

S. No.	Industry/Industrial produce	Solid waste generation (tonne/tonne of product)
(i)	Caustic soda	0.03
(ii)	Drugs and pharmaceuticals	0.04
(iii)	Dye and dye intermediates	1.36
(iv)	Fertilizer	0.085
(v)	Inorganic chemicals	0.4
(vi)	Organic chemicals	0.15
(vii)	Pesticides	0.07
(viii)	Petrochemicals	1.38
(ix)	Refinery	1.015
(x)	Textile processing	0.02/1000 m (2 gram/metre)

Source: Confederation of Indian Industries, 1996

Wastes which are classified to be 'hazardous' under the 'Hazardous Wastes (Management and Handling) Amendment Rules 2002' are listed in table 14.10. Waste substances exceeding their prescribed concentration limits becoming hazardous, as specified in these Rules, are also shown in table 14.11.

It is estimated that currently the Indian industrial sector generates about 100 million tonnes of non-hazardous solid wastes, and 2 million tonnes of hazardous wastes, per year.

14.7. Storage, Transportation, and Disposal of Industrial Solid Wastes
Management of industrial wastes have generally remained somewhat neglected in India. Of late, slag from steel industry and fly ash from thermal power plants have been utilised by cement industry. However, only 1–2% of fly ash and 30–60% of blast furnace slag are being utilised by cement industry.

The disposal of huge fly ash has always remained a big headache in India. The use of fly ash bricks and use of fly ash in land reclamation projects have, however, now been made compulsory by the Ministry of Environment and Forests GoI, in all areas located within 100 km of an existing coal or lignite based thermal power plant*. Under these regulations, every construction agency carrying out building works has to use fly ash bricks in all building works up to 100% wof 31.8.06 for places located within 50 km of thermal power plants, and 50% and 100% wof 31.8.05 and 31.8.07 respectively, for places located within 100 km of the thermal power plants.

Some serious drawbacks noticed in collection, storage, transport, and disposal of industrial solid wastes in India are listed below :

(i) No municipal corporation (or any other public body) is assigned the duty of safe collection, transportation, and disposal of industrial wastes. The responsibility lies totally with the industrial units and is largely neglected.

(ii) Wastes are shovelled into storage containers and loaded into lorries manually.

(iii) Useful items from the wastes are salvaged by factory workers, who usually handle the wastes without gloves.

(iv) Wastes piled against a wall or on open ground is a common sight in factories.

(v) Concrete bays or disused drums are often used for storage.

(vi) Wastes are rarely covered.

(vii) Wastes are transported in open trucks, which often spill the wastes.

(viii) Drivers are not advised about the precautions to be taken.

Industrial solid wastes pose a serious threat to the environment in India, because their disposal is largely uncontrolled. The responsibility of their safe disposal lies solely on the industrial units ; and when there exists an enormous number of small scale industrial units even in unconfirmed areas, then how can one expect these units to ensure safe disposal of their wastes ?

*These instructions are contained in the MoEF notification No. SO 879 (E) dated 27.08.2003, amending the earlier notification No. SO 763 (E) dated 14.09.1999, issued under Section 3(2) (1) (d) of the Environment (Protection) Act, 1986 and Section 5 (3) (d) of the Environment (Protection) Act, 1986.

Even where the laws have been enacted to obtain compliance for safe disposal of the specific industrial wastes, the actual compliance is much less than required. Majority of the industrial units, thus, continue to throw and dump their solid wastes on public land, or make them a part of the municipal solid wastes. The practices, which are being adopted by certain select industries, for treating and disposing of their solid wastes, are shown in table 14.9, which shows the clear cut highly unsatisfactory prevailing position in this respect in India.

Table 14.9. Existing Methods of Waste Disposal in India for Certain Select Industries

S. No.	Industry	Disposal of wastes
(i)	Petrochemicals	All sludge and solid wastes from a plant are collected and sent to a disposal site outside the plant.
(ii)	Paints, varnish, lacquers	Solid waste is collected at point of generation in barrels and given to a contractor for disposal. Date expired paints are sold off. Waste treatment sludge is disposed of along with other solid wastes.
(iii)	Dye intermediates (naphthalene-based), H acid, G acid, peracids	Manually collected and dumped in low-lying areas
(iv)	Ethanolamine	Put in drums and stored underground, or incinerated
(v)	Orthochlorine	Burnt in open pits

Highly toxic wastes are sometimes destroyed by controlled incineration, but more commonly, small quantities of sludges are burnt along with factory garbage in open pits. Secured land-filling of containers of wastes, again, is not as common as uncontrolled dumping, which is the most common practice. Industrial waste is disposed along with municipal solid waste in industrial agglomerations.

EXISTING LEGISLATION TO MANAGE SOLID WASTES

14.8. Existing Laws to Regulate and Control the Disposal of Municipal and Industrial Solid Wastes in India

Management of municipal solid waste is essentially the duty and responsibility of municipal committees and corporations in India, and the constitution and powers of municipal corporations are a subject included in the 'State List' in the Seventh Schedule of the Indian Constitution. As a result, India, until recently, did not have any Central act, specifically dealing with the management of solid wastes. Though each State has its own Municipal Act, by and large, these acts have been framed on similar lines. The municipal corporations have a wide range of subjects to look after : health and sanitation, primary education, construction and maintenance of roads and

bridges, health-care, registration of births and deaths, inspection and licensing of food, and so on. *Management of solid wastes has, therefore, been low on the priority list of municipal authorities and seldom funded adequately.*

Although, most of the municipal acts have all the necessary legal provisions to (i) take action against the civic officials if they fail to provide a clean and safe environment to the general public; and (ii) to penalize those who spoil the environment; yet in the absence of proper enforcement of all these laws, municipal and industrial wastes have been disposed of with little regard to the environment, resulting in serious environmental problems. The situation has deteriorated to the point where 'public-interest litigations' are being filed in the Supreme Court to legally compel the corporations to provide effective civic amenities.

In order to bring the overall deteriorating environmental degradation under control, the Govt. of India, enacted the *Environment (Protection) Act, 1986* under Articles 253 of the Indian Constitution. This article empowers the Central Govt. to make any law for implementing any international treaty, agreement, or decisions taken in any international conference. The enactment of this Central law to protect environment could become possible only after decisions to protect the environment in general, were taken at the *United Nations Conference on Human Environment* held in Stockholm, in June 1972.

Rules for disposal of hazardous industrial wastes and for municipal wastes were, thereafter, enacted in 1989 and 2000, respectively, as discussed below:

14.8.1. Hazardous Wastes (Management and Handling Rules), 1989. Under the Environmental Protection Act, 1986, these rules were notified by GoI on 28.07.1989. These rules have subsequently been amended twice, vide amendment notifications dated 6.1.2000 and 23.5.2003. *Schedule 1 to these amended rules* lists the various hazardous wastes. 122 types of wastes generated from 36 types of industrial operations have been listed here, as shown in Table 14.10. In *Schedule 2*, to these Rules, different kinds of waste substances with concentration exceeding the specified values, have been categorised as hazardous, under class A to class E, depending upon their reducing hazard. These substances are listed in table 14.11.

Schedule 3 to the rules further lists various types of hazardous wastes, the imports and exports of which have some sorts of restrictions. 29 hazardous wastes are also mentioned in *Schedule 8* to these Rules, which are banned for imports and exports. *Schedules 4, 5 and 6* to these Rules provide the following lists:

Schedule 4: List of wastes applicable for registration with CPCB.

Schedule 5: Specifications for used oil, fit for re-refining.

Schedule 6: Waste oil specifications.

Table 14.10. List of Hazardous Wastes Under Schedule I of the Hazardous Wastes (Management and Handling) Amendment Rules 2002

S. No.	Processes	Hazardous Wastes
(1)	(2)	(3)
1.	Petrochemical processes and pyrolytic operations.	1.1 Furnace/reactor residue and debris* 1.2 Tarry residues 1.3 Oily sludge emulsion 1.4 Organic residues 1.5 Residues from alkali wash of fuels 1.6 Still bottoms from distillation process 1.7 Spent catalyst and molecular sieves 1.8 Slop oil from wastewater 1.9 ETP sludge containing hazardous constituents
2.	Drilling operation for oil and gas production	2.1 Drill cuttings containing oil 2.2 Sludge containing oil 2.3 Drilling mud and other drilling wastes*
3.	Cleaning, emptying and maintenance of petroleum oil storage tanks including ships.	3.1 Oil-containing cargo residue, washing water and sludge 3.2 Chemical-containing cargo residue and sludge 3.3 Sludge and filters contaminated with oil 3.4 Ballast water containing oil from ships.
4.	Petroleum refining/re-refining of used oil/ recycling of waste oil.	4.1 Oily sludge/emulsion 4.2 Spent catalyst 4.3 Slop oil 4.4 Organic residues from process 4.5 Chemical sludge from waste water treatment 4.6 Spent clay containing oil.
5.	Industrial operations using mineral/synthetic oil as lubricant in hydraulic systems or other applications.	5.1 Used/ spent oil 5.2 Wastes residues containing oil
6.	Secondary production and/or use of zinc.	6.1 Sludge and filter press cake arising out of zinc sulphate production. 6.2 Zinc fines/tailings/ skimmings (dispersible form) 6.3 Other residues from processing of zinc ash/skimmings 6.4 Flue gas dust and other particulates*

*Unless proved otherwise by the occupier based on sampling and analysis carried out by a laboratory recognised under the Act, not to contain any of the constituents mentioned in Schedule 2 to the extent of concentration limits specified therein.

(1)	(2)	(3)
7	Primary production of zinc/lead/copper and other non-ferrous metals except aluminium	7.1 Flue gas dust from roasting* 7.2 Process residues 7.3 Arsenic-bearing sludge 7.4 Metal bearing sludge and residue including jarosite 7.5 Sludge from ETP and scrubbers
8	Secondary production of copper	8.1 Spent electrolytic solutions 8.2 Sludges and filter cakes 8.3 Flue gas dust and other particulates*
9	Secondary production of lead	9.1 Lead slag/Lead bearing residue 9.2 Lead ash/ particulate from flue gas
10	Production and/or use of cadmium and arsenic and their compounds.	10.1 Residues containing cadmium and arsenic
11	Production of primary and secondary aluminium	11.1 Sludges from gas treatment 11.2 Cathode residues including pot lining wastes 11.3 Tar containing wastes 11.4 Flue gas dust and other particulates* 11.5 Wastes from treatment of salt slags and black drosses*
12	Metal surface treatment, such as etching, staining, polishing, galvanizing, cleaning, degreasing, plating, etc.	12.1 Acid residues 12.2 Alkali residues 12.3 Spent bath/sludge containing sulphide, cyanide and toxic metals 12.4 Sludge from bath containing organic solvents 12.5 Phosphate sludge 12.6 Sludge from staining bath 12.7 Copper etching residues 12.8 Plating metal sludge 12.9 Chemical sludge from waste water treatment
13	Production of iron and steel including other ferrous alloys (electric furnaces; steel rolling and finishing mills; Coke oven and by product plant)	13.1 Process dust* 13.2 Sludge from acid recovery unit 13.3 Benzol acid sludge 13.4 Decanter tank tar sludge 13.5 Tar storage tank residue
14	Hardening of steel	14.1 Cyanide-, nitrate-, or nitrite-containing sludge 14.2 Spent hardening salt

*Unless proved otherwise by the occupier based on sampling and analysis carried out by a laboratory recognized under the Act, not to contain any of the constituents mentioned in Schedule I.

(1)	(2)	(3)
15.	Production of asbestos or asbestos-containing materials	15.1 Asbestos-containing residues 15.2 Discarded asbestos 15.3 Dust/particulates from exhaust gas treatment
16.	Production of caustic soda and chlorine	16.1 Mercury bearing sludge 16.2 Residue/sludges and filter cakes* 16.3 Brine sludge containing mercury
17.	Production of acids	17.1 Residues, dusts or filter cakes* 17.2 Spent catalyst*
18.	Production of nitrogenous and complex fertilizers	18.1 Spent catalyst* 18.2 Spent carbon* 18.3 Sludge/residue containing arsenic 18.4 Chromium sludge from water cooling tower 18.5 Chemical sludge from waste water treatment
19.	Production of phenol	19.1 Residue/sludge containing phenol
20.	Production and/or industrial use of solvents	20.1 Contaminated aromatic, aliphatic or naphthenic solvents not fit for originally intended use. 20.2 Spent solvents 20.3 Distillation residues
21.	Production and/or industrial use of paints, pigments, lacquers, varnishes, plastics and inks.	21.1 Wastes and residues 21.2 Fillers residues
22.	Production of plastic raw materials	22.1 Residues of additives used in plastic manufacture like dyestuffs, stabilizers, flame retardants, etc. 22.2 Residues of plasticizers 22.3 Residues from vinylchloride monomer production 22.4 Residues from acrylonitrile production 22.5 Non-polymerised residues
23.	Production and/or industrial use of glues, cements, adhesive and resins	23.1 Wastes/residues (not made with vegetable or animal materials)*

*Unless proved otherwise by the occupier based on sampling and analysis carried out by a laboratory recognized under the Act, not to contain any of the constituents mentioned in Schedule I.

(1)	(2)	(3)
7.	Primary production of zinc/lead/copper and other non-ferrous metals except aluminium	7.1 Flue gas dust from roasting* 7.2 Process residues 7.3 Arsenic-bearing sludge 7.4 Metal bearing sludge and residues including jarosite 7.5 Sludge from ETP and scrubbers
8	Secondary production of copper	8.1 Spent electrolytic solutions 8.2 Sludges and filter cakes 8.3 Flue gas dust and other particulates*
9.	Secondary production of lead	9.1 Lead slag/Lead bearing residues 9.2 Lead ash/particulate from flue gas
10.	Production and/or use of cadmium and arsenic and their compounds.	10.1 Residues containing cadmium and arsenic
11.	Production of primary and secondary aluminium	11.1 Sludges from gas treatment 11.2 Cathode residues including pot lining wastes 11.3 Tar containing wastes 11.4 Flue gas dust and other particulates* 11.5 Wastes from treatment of salt slags and black drosses*
12.	Metal surface treatment, such as etching, staining, polishing, galvanizing, cleaning, degreasing, plating, etc.	12.1 Acid residues 12.2 Alkali residues 12.3 Spent bath/sludge containing sulphide, cyanide and toxic metals 12.4 Sludge from bath containing organic solvents 12.5 Phosphate sludge 12.6 Sludge from staining bath 12.7 Copper etching residues 12.8 Plating metal sludge 12.9 Chemical sludge from waste water treatment
13.	Production of iron and steel including other ferrous alloys (electric furnaces; steel rolling and finishing mills; Coke oven and by product plant)	13.1 Process dust* 13.2 Sludge from acid recovery unit 13.3 Benzol acid sludge 13.4 Decanter tank tar sludge 13.5 Tar storage tank residue
14.	Hardening of steel	14.1 Cyanide-, nitrate-, or nitrite-containing sludge 14.2 Spent hardening salt

*Unless proved otherwise by the occupier based on sampling and analysis carried out by a laboratory recognized under the Act, not to contain any of the constituents mentioned in Schedule 2 of the Environment Protection Act, 1986.

(1)	(2)	(3)
15.	Production of asbestos or asbestos-containing materials	15.1 Asbestos-containing residues 15.2 Discarded asbestos 15.3 Dust/particulates from exhaust gas treatment.
16.	Production of caustic soda and chlorine	16.1 Mercury bearing sludge 16.2 Residue/sludge and filter cakes* 16.3 Brine sludge containing mercury
17.	Production of acids	17.1 Residues, dusts or filter cakes* 17.2 Spent catalyst*
18.	Production of nitrogenous and complex fertilizers	18.1 Spent catalyst* 18.2 Spent carbon* 18.3 Sludge/residue containing arsenic 18.4 Chromium sludge from water cooling tower 18.5 Chemical sludge from waste water treatment
19.	Production of phenol	19.1 Residue/sludge containing phenol
20.	Production and/or industrial use of solvents	20.1 Contaminated aromatic, aliphatic or naphthenic solvents not fit for originally intended use. 20.2 Spent solvents 20.3 Distillation residues
21.	Production and/or industrial use of paints, pigments, lacquers, varnishes, plastics and inks.	21.1 Wastes and residues 21.2 Fillers residues
22.	Production of plastic raw materials	22.1 Residues of additives used in plastic manufacture like dyestuffs, stabilisers, flame retardants, etc. 22.2 Residues of plasticisers 22.3 Residues from vinylchloride monomer production 22.4 Residues from acrylonitrile production 22.5 Non-polymerised residues
23.	Production and/or industrial use of glues, cements, adhesive and resins	23.1 Wastes/residues (not made with vegetable or animal materials)*

*Unless proved otherwise by the occupier based on sampling and analysis carried out by a laboratory recognized under the Act, not to contain any of the constituents mentioned in Schedule 2 of the Environment Protection Act, 1986.

(1)	(2)	(3)
24.	Production of canvas and textiles	24.1 Textile chemical residues* 24.2 Chemical sludge from waste water treatment
25.	Industrial production and formulation of wood preservatives	25.1 Chemical residues 25.2 Residues from wood alkali bath
26.	Production or industrial use of synthetic dyes, dye-intermediates and pigments.	26.1 Process waste sludge/residues containing acid or other toxic metals or organic complexes. 26.2 Chemical sludge from waste water treatment 26.3 Dust from air filtration system
27.	Production or industrial use of materials made with organo-silicone compounds	27.1 Silicone-containing residues 27.2 Silicone oil residues
28.	Production/formulation of drugs/pharmaceuticals	28.1 Residues and wastes* 28.2 Spent catalyst/spent carbon 28.3 Off specification products 28.4 Date-expired, discarded and off-specification drugs/medicines 28.5 Spent mother liquor 28.6 Spent organic solvents
29.	Production, use and formulation of pesticides including stock-piles.	29.1 Wastes/residues containing pesticides 29.2 Chemical sludge from waste water treatment 29.3 Date-expired and off-specification pesticides
30.	Leather tanneries	30.1 Chromium bearing residue and sludge 30.2 Chemical sludge from waste water treatment
31.	Electronic Industry	31.1 Residues and wastes* 31.2 Spent etching chemicals and solvents
32.	Pulp and Paper Industry	32.1 Spent chemicals 32.2 Corrosive wastes arising from use of strong acid and bases. 32.3 Sludge containing adsorbable organic halides

(1)	(2)	(3)
33.	Disposal of barrels/containers used for handling of hazardous wastes/chemicals.	33.1 Chemical-containing residue from decontamination and disposal. 33.2 Sludge from treatment of waste water arising out of cleaning/disposal of barrels/containers. 33.3 Discarded containers/barrels/liners used for hazardous wastes/chemicals
34.	Purification processes for air and water	34.1 Flue gas cleaning residues* 34.2 Toxic metal-containing residues from ion exchange material in water purification. 34.3 Chemical sludge from waste water treatment. 34.4 Chemical sludge, oil and grease skimming residues from common industrial effluent treatment plants (CETPs) and industry-specific effluent treatment plants (IETPs) 34.5 Chromium sludge from cooling water treatment
35.	Purification process for organic compounds/solvents	35.1 Filters and filter material which have organic liquids in them, e.g. mineral oil, synthetic oil and organic chlorine compounds. 35.2 Spent catalyst* 35.3 Spent carbon*
36.	Waste treatment processes, e.g. incineration, distillation, separation and concentration techniques.	36.1 Sludge from wet scrubbers 36.2 Ash from incineration of hazardous waste, flue gas cleaning residues. 36.3 Spent acid from batteries 36.4 Distillation residues from contaminated organic solvents.

*Unless proved otherwise by the occupier based on sampling and analysis carried out by a laboratory recognised under the Act, not to contain any of the constituents mentioned in Schedule 2 to the limits specified therein.

Table 14.11. List of Hazardous Substances
(i.e. Waste Constituents exceeding the specified concentration limits*)
as specified under Schedule-2 of the Hazardous Wastes
(Management and Handling) Amendment Rules, 2002

Class A

Concentration limit: ≥ 50 mg/kg

- A1 Antimony and antimony compounds
- A2 Arsenic and arsenic compounds
- A3 Beryllium and beryllium compounds
- A4 Cadmium and cadmium compounds
- A5 Chromium (VI) compounds
- A6 Mercury and mercury compounds
- A7 Selenium and selenium compounds
- A8 Tellurium and tellurium compounds
- A9 Thallium and thallium compounds
- A10 Inorganic cyanide compounds
- A11 Metal carbonyls
- A12 Naphthalene
- A13 Anthracene
- A14 Phenanthrene
- A15 Chrysene, benzo (a) anthracene, fluoranthene, benzo (a) pyrene, benzo (K) fluoranthene, indeno (1, 2, 3-cd) pyrene and benzo (ghi) perylene.
- A16 Halogenated compounds of aromatic rings, e.g. polychlorinated biphenyls, polychloroterphenyls and their derivatives.
- A17 Halogenated aromatic compounds
- A18 Benzene
- A19 Organo-chlorine pesticides
- A20 Organo-tin compounds

Contd...

*Waste constituents and their concentration limits given in this list are based on RAGS (the Netherlands Environment Protection Agency) List of Hazardous Substances. In order to decide whether a specific material listed above is hazardous or not, following points be taken into consideration:

- (i) If a component of the waste appears in one of the five risk classes listed above (A, B, C, D, or E) and the concentration of the component is equal to or more than the limit for the relevant risks class, the material is then classified as hazardous waste.
- (ii) If a chemical compound containing a hazardous constituent is present in the waste, the concentration limit does not apply to the compound, but only to the hazardous constituent itself.
- (iii) If multiple hazardous constituents from the same class are present in the waste, the concentrations are added together.
- (iv) If multiple hazardous constituents from different classes are present in the waste, the lowest concentration limit corresponding to the constituent (s) applies.
- (v) For substances in water solution, the concentration limit for dry matter must be used.
- (vi) If the concentration is less than 0.1% by weight, the concentration limit, reduced

Table 14.11. Continue

Class B

Concentration limit: $\geq 5,000$ mg/kg

- B1 Chromium (III) compounds
- B2 Cobalt compounds
- B3 Copper compounds
- B4 Lead and lead compounds
- B5 Molybdenum compounds
- B6 Nickel compounds
- B7 Inorganic Tin compounds
- B8 Vanadium compounds
- B9 Tungsten compounds
- B10 Silver compounds
- B11 Halogenated aliphatic compounds
- B12 Organo Phosphorus compounds
- B13 Organic peroxides
- B14 Organic nitro- and nitroso-compounds
- B15 Organic azo- and azoxy compounds
- B16 Nitriles
- B17 Amines
- B18 (Iso- and thio-) cyanates
- B19 Phenol and phenolic compounds
- B20 Mercaptans
- B21 Asbestos
- B22 Halogen-silanes
- B23 Hydrazine (s)
- B24 Fluorine
- B25 Chlorine
- B26 Bromine
- B27 White and red phosphorus
- B28 Ferro-silicate and alloys
- B29 Manganese-silicate
- B30 Halogen-containing compounds which produce acidic vapours on contact with humid air or water, e.g., silicon tetrachloride, aluminium chloride, titanium tetrachloride.

Class C

Concentration limit: $\geq 20,000$ mg/kg

- C1 Ammonia and ammonium compounds
- C2 Inorganic peroxides
- C3 Barium compounds except barium sulphate
- C4 Fluorine compounds
- C5 Phosphate compounds except phosphates of aluminium, calcium and iron
- C6 Bromates, (hypo-bromites)
- C7 Chlorates, (hypo-chlorites)
- C8 Aromatic compounds other than those listed under A12 to A18

Contd...

Table 14.11. Continue

- C9 Organic silicone compounds
- C10 Organic sulphur compounds
- C11 Iodates
- C12 Nitrates, nitrites
- C13 Sulphides
- C14 Zinc compounds
- C15 Salts of per-acids
- C16 Acid amides
- C17 Acid anhydrides

Class DConcentration limit: $\geq 50,000$ mg/kg

- D1 Total sulphur
- D2 Inorganic acids
- D3 Metal hydrogen sulphates
- D4 Oxides and hydroxides except those of hydrogen, carbon, silicon, iron, aluminium, titanium, manganese, magnesium, calcium.
- D5 Total hydrocarbons other than those listed under A12 to A18.
- D6 Organic oxygen compounds
- D7 Organic nitrogen compounds expressed as nitrogen
- D8 Nitrides
- D9 Hydrides

Class E

Regardless of concentration limit: Classified as hazardous wastes at all concentrations.

- E1 Flammable substances
- E2 Substances which generate hazardous quantities of flammable gases on contact with water or damp air.

These rules of 1989 are, thus, applicable to the hazardous industrial wastes as specified in the Schedules, but are not applicable to the following types of wastes, where other specific laws have been enacted :

(i) Waste water and exhaust gases as covered under the provisions of *Water (Prevention and Control of Pollution) Act, 1974*, and *Air (Prevention and Control of Pollution) Act, 1981* and rules made there under.

(ii) Wastes arising out of the operation from ships beyond five kilometres, as covered under the provisions of *Merchant Shipping Act, 1958*, and the rules made there under.

(iii) Radioactive wastes as covered under the provisions of *Atomic Energy Act, 1962*, and rules made there under.

(iv) Biomedical wastes covered under the *Biomedical Wastes (Management and Handling) Rules, 1998*, made under the Act (i.e. *Env. Protection Act, 1986*).

(v) Wastes covered under the *Municipal Solid Wastes (Management and Handling) Rules, 2000*, made under the Act (i.e. *Env. Protection Act, 1986*), and

(vi) The Lead Acid Batteries covered under the *Batteries (Management and Handling) Rules, 1988*.

Any person or establishment generating or handling any of the listed hazardous wastes under the *Hazardous Wastes (Management and Handling) Rules*, is called an occupier or an operator. Such an occupier or an operator is supposed to obtain an authorisation to handle such wastes, from the concerned *State Pollution Control Board (SPCB)* in case of a State, or from the concerned *State Pollution Control Committee (SPCC)* in case of UTs— including NCT of Delhi. The authorisation granted to an occupier or an operator to handle a given hazardous waste can be cancelled, if the said occupier or operator fails to fulfil the conditions laid down in the authorisation so granted, to take adequate steps while handling hazardous wastes to contain contaminants, limit accidents, and to provide adequate training and equipment to the staff to handle the hazardous wastes, as not to cause adverse effects on humans and the environment in general.

Under these Rules, the hazardous wastes shall be collected, treated, stored, and disposed of only in such facilities as may be authorised by SPCB or SPCC. An occupier or recycler handling hazardous wastes, not having hazardous waste treatment and disposal facility of his own, can be allowed to become a member of a common treatment, storage and disposal facility existing in the area. Such an occupier will send his wastes to this common facility for proper treatment and disposal, as otherwise, his authorisation is liable to be cancelled.

These Rules further provide guidelines for packaging, labelling and transport of hazardous wastes. The occupier or operator of any waste facility is further supposed to identify, design and set up proper treatment and disposal site/facility. Guidelines are also given for imports and exports of hazardous wastes, listed in Schedule 3 to these Rules.

The occupier, transporter and operator of a facility is further liable for damages caused to the environment due to improper handling and disposal of hazardous wastes. Provision of imposition of fines for violations of these rules is also made in these rules. However, no provision is made for any kind of imprisonments under these rules for violations of the rules. Evidently, these rules only provide a sort of guidelines for obtaining licenses and authorisations, rather than providing any deterrents against defaulters. That is why accidents continue to occur frequently, and hazardous wastes are occasionally continued to be mishandled and thrown at public places to become a part of MSW. Some hue and cry is, of course, made when some serious accident occurs, but after a few days things return to their ordinary normal course.

14.8.2. The Municipal Solid Wastes (Management and Handling) Rules, 2000. Under the *Environment (Protection) Act, 1986*, the Govt. of India has also notified these rules on 3.10.2000, to provide some kind of responsibility on the municipal bodies for proper collection and disposal of municipal solid wastes. Schedule 1 to these Rules provided target dates to municipal authorities for : (i) setting up waste processing and disposal facilities (31.12.2003) ; (ii) improving existing land fill sites as per provisions of these rules (31.12.2001) ; (iii) identifying land-fill sites for future use and making these sites ready for operation (31.12.2002) ; and (iv) for constant monitoring of the performance of waste processing and disposal facilities (once in six

months). Although all the target dates have elapsed, but no compliance is visible even in our metro cities, what to talk of small cities, towns, and villages.

Under these Rules, Secretary Urban Development of the concerned State is the nodal agency—who is given the overall responsibility for enforcement of the provisions of these rules in metro cities. The Dy. Commissioners or the District Magistrates of the concerned districts are further responsible for implementing the provisions of the rules in their respective districts. The CPCB, SPCBs and SPCCs shall monitor the compliance of the standards laid down in these rules regarding ground water, ambient air, leachate quality, compost quality, including incineration standards, as specified under these rules. The SPCBs and SPCCs shall also grant authorisation to the municipal authorities for setting up any waste processing disposal facility, including land fills. The proposals of local authorities shall be examined by SPCBs and SPCCs by taking into consideration the views of other agencies like the State Urban Dev. Deptt.; the Town and Country Planning Deptt., the Air Port or Air Base authorities, the Ground Water Board, etc., prior to issuing the authorization.

In *Schedule II*, these Rules further lay down guidelines on collection, segregation, storage, transportation, processing, and disposal of MSW. Specifications for land fill sites are given in *Schedule III*, whereby standards for ground water quality and ambient air quality in the vicinity of land fill sites are also laid down. *Schedule IV* to these rules, provide standards for composition of compost (to ensure its safe use); standards for disposal of treated leachates in public sewers and for land disposal (to avoid contamination of disposal sources); and operating as well as emission standards for incinerators.

Evidently, the Rules appear to be more like a BIS Code, than an anti-pollution law. No remedial measures or punitive actions are specified in these rules for violations of the rules, or for not making necessary arrangements for safe collection and disposal of the society's solid wastes.

In can, hence, be concluded that there is no law at present in India, which can force the municipalities to perform their duties effectively, and to make them promptly collect and dispose of the MSW and the solid wastes thrown by individual smaller industrial units spread all around our cities. The worst sufferers are the smaller cities having a lot of industrial and commercial activities. Even metro cities are no better. The city of Mumbai, for example, was seen by the authors in 2004, to be littered with refuse, which was lying even on major roads. The position is also not much better in NCT of Delhi (the capital of India), where only VIP areas are usually found to be completely free of refuse. The city of Chandigarh, on the other hand, has most convincingly and impressively implemented the penalty clauses of the Punjab Municipal Act for many years, thus, earning the honour of being the cleanest Indian city.

It is, however, heartening to see that the industries have now started realising the advantages of minimising the generation of wastes, rather than disposing them of after generation. Such technology improvement measures are, infact, rewarded by the resource conservation and quality improvement, to provide monetary benefits. An initiative in this direction was taken by the National Productivity Council.

voluntary groups of entrepreneurs in the small scale sector, whose, industrial units manufacture similar products and employ the same processes. These circles (i.e., groups of industrialists) meet periodically and regularly in the premises of each member, in turn. This group analyses the current operations of the host unit to identify the sources of waste generation, and work out ways to implement measures for minimizing the generated wastes. Such projects need be promoted by the government also, on a large scale.

INTERNATIONAL TREATY ON IMPORTS AND EXPORTS OF HAZARDOUS WASTES

14.9. Basel Convention

The *Basel Convention* provides international guidelines to control the transboundary movements of hazardous wastes between different countries. It is an international treaty designed to reduce the movements of hazardous wastes between nations and specifically to prevent transfer of hazardous wastes from developed to less developed countries (LDCs). This treaty, however, does not cover the movement of radioactive wastes. This convention is also intended to minimize the amount of toxicity of the generated wastes, to ensure their environmentally sound management as closely as possible to the source of generation and to assist the less developed countries in their environmentally sound management of the hazardous and other wastes they generate.

This convention was opened for signatures on March 22, 1989, and came into force on May 5, 1992, 90 days after the ratification by atleast 20 signatory States (nations). India signed the treaty on June 24, 1992. There are 173 parties to this Convention*. Afghanistan, Haiti and U.S.A. have signed the convention but have not yet ratified it.

14.9.1. History and Necessity of Basel Convention. The necessity for enforcing an international legislation on the subject arose because the developed countries were found to be moving their hazardous wastes to the less developed countries (LDCs) on a large scale at a price, to avoid incurring of huge costs on their safe treatment and disposal in their respective nations. The globalization of shipping made the transboundary movement of wastes more accessible, and people in many less developed nations (including India) were quite eager to receive such wastes for recycling or recovery of costly components, parts, precious, metals, etc., to make profits in the trade, irrespective of the pollution caused to the people and the environment by their crude recovery methods.

The trade in hazardous wastes, consequently, increased to a large extent, causing large scale health hazards in LDCs and pollution of the global environment in general.

One of the incidents, which led to the creation of the Basel Convention, was the *Khian Sea Waste Disposal Incident*, in which a ship carrying incinerator ash from the city of Philadelphia in the USA, after having dumped half of its load on the beach in Haiti, was forced away where it sailed for many

* A complete list of parties to the convention and their ratification status can be seen on the Basel Secretariat's web page (<http://www.basel.int/ratification.htm>.)

months, changing its name several times. Unable to unload the cargo at any port, the crew is believed to have dumped much of it at sea. Similarly, in 1988, 5 ships from Italy were found to have transported 8000 barrels of hazardous waste to the small town of KOKO in Nigeria, in exchange for 100 U.S. dollar monthly rent, which was paid to a Nigerian resident for use of his farmland.

The adoption of such practices by the various companies of the developed nations to move their industrial wastes to the less developed countries, created a lot of criticism from the environmentalists, NGOs, and the Governments of the less developed nations. It was also stressed by the environmental experts that environmental pollution caused anywhere over the globe will ultimately affect the entire global environment in general, and that it is important to safely treat and dispose of the hazardous waste near the point of its production rather than transporting it over long distances to other places, irrespective of the high costs involved in safe treatment and disposal of such wastes in the developed countries themselves.

The practice of transboundary movements of their wastes by the developed countries was termed as "Toxic colonialism", by many developing countries. This forced the developed world to sit and work out a treaty to put guidelines and some controls on the transboundary movement of the hazardous wastes from one country to another. This finally resulted in signing and ratification of the Basel convention.

14.9.2. Definitions of Hazardous Waste under the Basel convention. A waste will be termed as hazardous waste under the Basel convention, if it falls within the listed categories in Annex-1 of the convention (Table 14.12), and it does exhibit one of the hazardous characteristics such as being explosive, flammable (liquids or solids), oxidizing, poisonous infectious, corrosive, or toxic. The other way that waste may fall under the scope of the convention is if it is defined as or considered to be a hazardous waste under the laws of either the exporting country or the importing country, or of the countries of transit. Other Wastes are listed in Annex-II as household wastes and residue that comes from incinerating household wastes.

Table 14.12. Annex 1 of the Basel Convention Listing the Hazardous Wastes to be Controlled under the Convention

Category	Type of Waste
(1)	(2)
	Waste Streams
Y1	Clinical wastes from medical care in hospitals, medical centres and clinics.
Y2	Wastes from the production and preparation of pharmaceutical products.
Y3	Waste pharmaceuticals, drugs and medicines.
Y4	Wastes from the production, formulation and use of biocides and phytopharmaceuticals.
Y5	Wastes from the manufacture, formulation and use of wood preserving chemicals.
Y6	Wastes from the production, formulation and use of organic solvents.

(1)	(2)
Y7	Wastes from heat treatment and tempering operations containing cyanides.
Y8	Waste mineral oils unfit for their originally intended use.
Y9	Waste oils/water, hydrocarbon/water mixtures, emulsions.
Y10	Waste substances and articles containing or contaminated with polychlorinated biphenyls (PCBs) and/or polychlorinated terphenyls (PCTs) and/or polybrominated biphenyls (PBBs).
Y11	Waste tarry residues arising from refining, distillation and any pyrolytic treatment.
Y12	Wastes from production, formulation and use of inks, dyes, pigments, paints lacquers, varnish.
Y13	Wastes from production, formulation and use of resins, latex plasticizers, glues/adhesives.
Y14	Waste chemical substances arising from research and development or teaching activities which are not identified and/or are new and whose effects on man and/or the environment are not known.
Y15	Wastes of an explosive nature not subject to other legislation.
Y16	Wastes from production, formulation and use of photographic chemicals and processing materials.
Y17	Wastes resulting from surface treatment of metals and plastics.
Y18	Residues arising from industrial waste disposal operations.
	Wastes having metals as Constituents
Y19	Metal carbonyls.
Y20	Beryllium; beryllium compounds
Y21	Hexavalent chromium compounds
Y22	Copper compounds
Y23	Zinc compounds
Y24	Arsenic; arsenic compounds
Y25	Selenium; selenium compounds
Y26	Cadmium; cadmium compounds
Y27	Antimony; antimony compounds
Y28	Tellurium; tellurium compounds
Y29	Mercury; mercury compounds
Y30	Thallium; thallium compounds
Y31	Lead; lead compounds
Y32	Inorganic fluorine compounds excluding calcium fluoride
Y33	Inorganic cyanides
Y34	Acidic solutions or acids in solid form
Y35	Basic solutions or bases in solid form
Y36	Asbestos (dust and fibres)
Y37	Organic phosphorus compounds
Y38	Organic cyanides
Y39	Phenols; phenol compounds including chlorophenols
Y40	Ethers
Y41	Halogenated organic solvents
Y42	Organic solvents excluding halogenated solvents
Y43	Any congener of polychlorinated dibenzo-furan
Y44	Any congener of polychlorinated dibenzo-p-dioxin
Y45	Organohalogen compounds other than substances referred to in this Annex (e.g., Y39, Y41, Y42, Y43, Y44).

14.9.3. General Obligations of the Parties to the Basel Convention

The obligations of the Parties to this convention, as specified in Article 4 of the convention are listed below:

1. (a) Parties exercising their right to prohibit the import of hazardous wastes or other wastes for disposal shall inform the other Parties of their decision pursuant to Article 13.

(b) Parties shall prohibit or shall not permit the export of hazardous wastes and other wastes to the Parties which have prohibited the import of such wastes, when notified pursuant to subparagraph (a) above.

(c) Parties shall prohibit or shall not permit the export of hazardous wastes and other wastes if the State of import does not consent in writing to the specific import, in the case where that State of import has not prohibited the import of such wastes.

2. Each Party shall take the appropriate measures to:

(a) Ensure that the generation of hazardous wastes and other wastes within it is reduced to a minimum, taking into account social, technological and economic aspects;

(b) Ensure the availability of adequate disposal facilities, for the environmentally sound management of hazardous wastes and other wastes, that shall be located, to the extent possible, within it, whatever the place of their disposal;

(c) Ensure that persons involved in the management of hazardous wastes or other wastes within it take such steps as are necessary to prevent pollution due to hazardous wastes and other wastes arising from such management and if such pollution occurs, to minimize the consequences thereof for human health and the environment;

(d) Ensure that the transboundary movement of hazardous wastes and other wastes is reduced to the minimum consistent with the environmentally sound and efficient management of such wastes and is conducted in a manner which will protect human health and the environment against the adverse effects which may result from such movement;

(e) Not allow the export of hazardous wastes or other wastes to a State or group of States belonging to an economic and/or political integration organization that are Parties, particularly developing countries, which have prohibited by their legislation all imports or if it has reason to believe that the wastes in question will not be managed in an environmentally sound manner, according to criteria to be decided on by the Parties at their first meeting;

(f) Require that information about a proposed trans-boundary movement of hazardous wastes and other wastes be provided to the States concerned, according to Annex V A, to state clearly the effects of the proposed movement on human health and the environment;

(g) Prevent the import of hazardous wastes and other wastes if it has reason to believe that the wastes in question will not be managed in an environmentally sound manner;

(h) Co-operate in activities with other Parties and interested organizations,

information on the transboundary movement of hazardous wastes and other wastes, in order to improve the environmentally sound management of such wastes and to achieve the prevention of illegal traffic.

3. The Parties consider that illegal traffic in hazardous wastes or other wastes is criminal.

4. Each Party shall take appropriate legal, administrative and other measures to implement and enforce the provisions of this Convention including measures to prevent and punish conduct in contravention of the Convention.

5. *A Party shall not permit hazardous wastes or other to be exported to a non-Party or to be imported from a non-Party.*

6. The Parties agree not to allow the export of hazardous wastes or other wastes for disposal within the area south of 60° South latitude, whether or not such wastes are subject to transboundary movement.

7. Furthermore, each Party shall:

(a) Prohibit all persons under its national jurisdiction from transporting or disposing of hazardous wastes or other wastes, unless such persons are authorized or allowed to perform such types of operations;

(b) Require that hazardous wastes and other wastes that are to be the subject of a transboundary movement be packaged, labelled and transported in conformity with generally accepted and recognized international rules and standards in the field of packaging, labelling and transport, and that due account is taken of relevant internationally recognized practices;

(c) Require that hazardous wastes and other wastes be accompanied by a movement document from the point at which a transboundary movement commences to the point of disposal.

8. Each Party shall require that hazardous wastes or other wastes to be exported, are managed in an environmentally sound manner in the State of import or elsewhere. Technical guidelines for the environmentally sound management of wastes subject to this Convention shall be decided by the Parties at their first meeting.

9. Parties shall take the appropriate measures to ensure that the transboundary movement of hazardous wastes and other wastes only be allowed if:

(a) The State of export does not have the technical capacity and the necessary facilities, capacity or suitable disposal sites in order to dispose of the wastes in question in an environmentally sound and efficient manner; or

(b) The wastes in question are required as raw material for recycling or recovery industries in the State of import; or

(c) The transboundary movement in question is in accordance with other criteria to be decided by the Parties, provided those criteria do not differ from the objectives of this Convention.

10. The obligation under this Convention of States in which hazardous wastes and other wastes are generated to require that those wastes are managed in an environmentally sound manner may not under any circumstances be transferred to the States of import or transit.

11. Nothing in this Convention shall prevent a Party from imposing additional requirements that are consistent with the provisions of this Convention and are in accordance with the rules of international law, in order to protect human health and the environment.

12. Nothing in this Convention shall affect in any way the sovereignty of States over their territorial sea established in accordance with international law and the sovereign rights and the jurisdiction which States have in their exclusive economic zones, and their continental shelves in accordance with international law, and the exercise by ships and aircraft of all States of navigational rights and freedoms as provided for in international law and as reflected in relevant international instruments.

13. Parties shall undertake to review periodically the possibilities for the reduction of the amount and/or the pollution potential of hazardous wastes and other wastes which are exported to other States, in particular to developing countries.

14.9.4. Basel Ban Amendment. After the initial adoption of the Convention, some LDCs and environmental organizations argued that it did not go far enough. Many nations and NGOs argued for a total ban on shipment of all hazardous waste to LDCs. In particular, the original Convention did not prohibit waste exports to any location except Antarctica but merely required a notification and consent system known as "prior informed consent" or PIC. Further, many waste traders sought to exploit the good name of recycling and began to justify all exports as moving to recycling destinations. Many believed a full ban was needed including exports for recycling. These concerns led to several regional waste trade bans, including the *Bamako Convention*.

Lobbying at the 1995 Basel conference by LDCs, Greenpeace and key European countries such as Denmark, led to a decision to adopt the *Basel Ban Amendment to the Basel Convention*. *Not yet in force, but considered morally binding by signatories, the Amendment prohibits the export of hazardous waste from a list of developed (mostly OECD) countries to developing countries. The Basel Ban applies to export for any reason, including recycling.* An area of special concern for advocates of the Amendment was the sale of ships for salvage, shipbreaking. The Ban Amendment was strenuously opposed by a number of industry groups as well as nations including Australia and Canada. This Ban Amendment is still not ratified. The European Union, however, fully implemented the Basel Ban in its Waste Shipment Regulation (EWSR) making it legally binding in all EU member states. Norway and Switzerland have similarly fully implemented the Basel Ban in their legislation.

ENVIRONMENTAL IMPACTS OF SOLID WASTES

14.10. Impacts of Improper Disposal of Solid Wastes on Human Health and Environment

Improper removal and disposal of solid wastes is a proven cause of health hazards, which may even spread epidemics, like plague, and water borne diseases. The main diseases that may spread out and infect people, arises from the breeding of flies and rats. It has been estimated that in warm

of garbage dump per week. The refuse dumps also serve as a source of food for rats and small rodents, which quickly proliferate and spread to neighbouring areas.

The flies, as you all know, are basically responsible for spreading various kinds of diseases, as they carry the human feces and other infections to food or water, which finally infect the humans, and even animals. The most common cause for bacillary dysentery, amoebic dysentery and diarrhoeal diseases in India is the transmission of these disease vectors by flies. The rats, similarly infect us by direct bite and spread various diseases, like plague, endemic typhus, salmonellosis, and trichinosis, besides destroying the stored grains, clothes, and other household items.

Apart from causing diseases, for which flies and rats act as carriers, the handling and transfer of biological waste pose an infection threat to the workers, as well as to those who come in contact with such infected workers. The infections to the workers may pass from the waste through direct contact with the waste, through infection of sores or through vectors.

The hazardous wastes, thus, prove injurious to human health. Some wastes may produce acute ill-effects, while others may cause diseases after prolonged period of exposure. Improper disposals of municipal solid wastes have resulted in spread of epidemics, causing large scale human deaths, through contamination of water supplies or crops.

The environmental damage caused by solid wastes mostly pertains to aesthetics, and is a cause of choking of the storm water drains leading to rain water stagnation and flooding in case of heavy rains, as happened in Mumbai city in 2006. Uncontrolled dumping of urban refuse eventually destroys the beauty of the country side, as the wastes are taken away by high winds to far and wide. The garbage dumps lying unattended for a number of days may also contaminate the ground water, as the rain water seeping through the garbage may become poisonous leachate, as it may leach the toxic heavy metallic compounds from the solid wastes. Such leachate may also contaminate surface water sources, as it may flow along with rain runoff and join the surface sources. In addition, uncontrolled burning of solid wastes may cause air pollution.

PROBLEMS

- (a) Define 'municipal solid waste' and explain the necessity of its safe disposal.
 - (b) Explain the term 'refuse', and give its composition and classification. Describe various methods employed for the collection and disposal of the refuse.
- (a) Describe and explain the importance of 'recycling and reuse' in disposal of solid waste (MSW) of a society. Which items are generally recycled from the MSW?
 - (b) Write a brief note on the status of collection and transportation of municipal solid waste (MSW) in India.
- Enumerate the various methods which can be used for disposal of municipal solid waste, and explain the two most widely adopted methods in India.
- What do you understand by 'sanitary land filling' and how is it practised? Draw a neat sketch and explain the filling process adopted in such filling practices. In this context, clearly explain the use of intermediate and final earth covers, and of the cap system. Also explain the digestion process involved in such land fills, and their adverse environmental impacts.

5. (a) What do you understand by the term 'leachate'? What problems are posed by leachates and how are they overcome?
- (b) Differentiate between 'composting' and 'vermi-composting', and explain their utilities in disposal of society's solid wastes.
6. Explain the term 'composting'. Give the different types of compostings in use, and describe with the aid of sketches, their working.
7. Differentiate between refuse and garbage.
Mention the most significant property of the city refuse which guides the adoption of each of the following methods of refuse disposal.
 - (i) Incineration
 - (ii) Sanitary land fill
 - (iii) Composting.

[Ans. (i) high calorific value; (ii) high density; (iii) high organic garbage content.]
8. (a) Tabulate the quantitative and qualitative characteristics of refuse from an Indian town.
- (b) Write short notes on :
 - (i) Indore method of refuse disposal;
 - (ii) Bangalore method of refuse disposal;
 - (iii) Incineration method of disposal of MSW;
 - (iv) Mechanised composting plants;
 - (v) Vermi-composting.
9. Critically debate and discuss the methods being adopted in India for collection and disposal of refuse. What changes would you recommend in these methods, so as to make the process more hygienic and aesthetic, particularly for big metropolitan cities like Delhi.
10. Explain and describe in details the incineration method of disposal of municipal solid waste (MSW), drawing a line diagram of a conventional incinerator which is usually adopted for the disposal of MSW. List out the various adverse environmental impacts of such a plant.
11. Explain and describe the aerobic as well as the anaerobic methods of composting of the organic solid wastes of a society, giving details of the digestion process of each method and their environmental impacts.
12. (a) What is the importance of C-N ratio and moisture content of a compost heap mass of the organic solid waste to be used for anaerobic composting process?
- (b) Briefly describe the working of a fully mechanised composting plant.
- (c) Define and explain the term 'thermal pyrolysis,' and its use.
13. (a) How had the solid wastes of a society been disposed off in the sea, and why and how the practice has been phased out?
- (b) Differentiate between the hazardous and non-hazardous industrial solid wastes, giving approximate quantities of generation of various types of industrial solid wastes in India.
- (c) How are industrial solid wastes disposed off in India, and what are their drawbacks.
14. Write a detailed essay on the existing laws and legislations of India in regard to disposal of solid wastes. What are the limitations and short-comings of these laws?
15. (a) Explain the salient provisions of the Municipal Solid Wastes (Management and Handling) Rules 2000, indicating their limitations.
- (b) Explain the impacts of improper disposal of solid wastes on human health and the environment in general.

—15

Disposal of Environmentally Hazardous Biomedical, Radioactive, and E-Wastes

BIOMEDICAL WASTES

15.1. Biomedical Wastes and Their Impacts on Health and Environment

The wastes (solid wastes as well as liquid wastes) produced by hospitals, nursing homes, clinics, research laboratories, diagnostic centres, veterinary hospitals, etc., are potential sources of health hazards, and need to be specially treated and disposed of.

Approximately 1.45 kg of waste is generated per patient per day in Indian hospitals; whereas it is much higher in developed countries. In western countries, approximately 15-20% of this total waste is found to be hazardous and infected, whereas the percentage of hazardous and infected waste in India is usually much higher, since we do not have proper waste segregation practices in all the hospitals except in some big hospitals.

The greatest risk of clinical waste is from the *infectious* and *sharp* components like needles, syringes, etc. Health care workers and people associated with the hospital waste disposal, often get needle prick injuries and can even get AIDS/HIV or other types of infections, like Hepatitis B & C, through skin route. In one survey, it has been found that every second nursing staff gets needle prick or cut during their work every week, which may increase their chances of getting infection, if proper handling of waste is not ensured. *In addition to its infectivity, the medical waste is highly toxic and may possess variable radioactivity.*

15.2. Legislative Laws on Management of Biomedical Wastes in India

Keeping in view its potential hazardous effects on humans living in the surrounding of the medical wastes, the Indian Union Ministry of Environment and Forests has notified "*Biomedical Waste (Management and Handling) Rules 1998*". These rules have been notified under the *Environment (Protection) Act 1986*. Under these rules, every health care institute, big or small, will have to make arrangements to ensure that their produced waste is handled and managed without causing any adverse health effects on human beings and the environment. In case of non-compliance with these rules, the occupier, i.e. the head of such institution, shall be liable to be punished under the *Environment (Protection) Act, 1986*.

In order to safely and economically dispose of the medical wastes, it is necessary to collect the wastes by suitable segregation, as to label the same into hazardous and non-hazardous categories. These hazardous and non-hazardous wastes can then, be suitably transported and treated for final disposal.

The various steps involved in safe collection and disposal of medical wastes are discussed in the following articles.

COLLECTION AND TREATMENT OF BIOMEDICAL WASTES

15.3. Colour Coding of Biomedical Wastes and Their Collection in Different Coloured Bins or Bags

The various types of medical wastes are divided into different categories, and collected in different coloured bins or containers, as to help in segregation of hazardous and non-hazardous wastes, needing different types of treatments. The process is known as *waste segregation*. The correct classification for collection of different waste items in different coloured dust bins, is to be done by the various hospitals, and it is the duty of the hospital doctors and nurses to ensure correct disposal of different waste items in their respective dust bins or containers. The system of using different coloured bins and bags to collect different types of solid medical wastes, is known as *colour coding*. Such a system, eventually helps in separately collecting the non-hazardous medical waste items, such as the uncontaminated packaging materials like plastics, paper, card-board, food and kitchen waste, garden waste, etc. Such non-hazardous waste can, then, easily and economically be disposed of by *landfill*, but only if it is free of biomedical waste that would cause adverse effects on human health and environment.

Proper segregation of wastes helps in the following ways :

- (i) It minimises the amount of potentially hazardous waste that requires the specialised and costly treatment and disposal ;
- (ii) It facilitates proper packaging and labeling of wastes ;
- (iii) It reduces occupational health and safety risks to the health care workers and rag-pickers ;
- (iv) It improves infection control within the hospital, and
- (v) It helps in establishing uniform waste management practice, and to comply with the the national laws and legislations.

According to the 1998 Indian Rules notified for the disposal of biomedical wastes, such wastes are to be segregated in the bins or containers of the following colours :

1. *Yellow*
2. *Red*
3. *Blue/white ; and*
4. *Black.*

The type of medical wastes, which are to be separately kept in the above mentioned coloured containers, are shown in table 15.1.

The most important aspect of management of biomedical waste is that the hazardous

general waste. In order to achieve this, different types of wastes in hospital should be collected in different coloured bins and containers, and disposed of suitably. If a large number of colour coding is going to create confusion, then one may decide to divide the wastes into the following three categories only :

(A) *Yellow bin wastes.* These wastes need to be *incinerated or buried deep*, and may include : human anatomical wastes, animal wastes, pathological wastes, micro-biological wastes, sharp wastes, discarded medicines, cytotoxic drugs, and solid wastes.

(B) *Red bin wastes.* These wastes will have to be *autoclaved, disinfected with chemicals, or microwaved.* They may include : plastic wastes, and disposable items like tubes, catheters, blood or urine bags, gloves, etc.

(C) *Black bin wastes.* These wastes can be sent for disposal to *secure landfills/burials*, and may include, *chemical solid wastes and incinerated ash*, etc.

The classification, colour coding, treatment and disposal of biomedical wastes is summarised in table 15.1.

Table 15.1. Classification, Colour Coding, Treatment and Disposal of Biomedical Wastes

Category	Waste Type	Colour Coding	Treatment and Disposal Method
(1)	(2)	(3)	(4)
1.	Human Anatomical wastes	Yellow	Incineration/Deep Burial
2.	Animal Wastes	Yellow	Incineration/Deep Burial
3.	Micrological and Biotechnology wastes	Yellow/Red	Local Autoclaving/Microwaving/ Incineration
4.	Waste Sharps	Blue/White	Disinfection ; Auto-claving/ Microwaving and Mortification/ Shredding
5.	Discarded medicines and drugs	Cytotoxic Black	Incineration/Secure Landfill
6.	Solid Wastes	Yellow	Incineration/Auto-claving/ Microwaving
7.	Disposable solid wastes like tubes, catheters, blood or urine bags, gloves, etc.	Red/Blue	Disinfection, Multitiation/ Shredding
8.	Liquid Wastes	Red/Blue	Disinfection and Discharge in Sewers
9.	Incinerated Ash	Black	Landfills
10.	Chemical solid wastes	Black	Disinfection and Discharge into sewers for liquids, and secured landfills for solids.

15.4. Collection of Sharp Wastes

In collection of various types of biomedical wastes, special attention is required to be given to the sharp wastes, as they constitute a unique category of medical wastes, and always pose a risk factor of many infectious pathogens. Sharps may be defined as objects that are capable of puncturing or cutting due to any points or protuberances, and may include : syringes, needles, scalpels, blades, pasteur pipettes, and broken glasses or plastics. As a matter of fact, 98% of all health facilities generate sharp wastes.

During medical procedures, health care workers get a large number of injuries due to sharps. Similarly, a significant amount of injuries are caused by sharp wastes to the solid waste workers, who handle their collection.

To ensure their safe handling, manufacturers must develop mechanisms to render the syringes 'non-sharp', immediately after use. This will reduce the needle stick injury, by preventing the punctures. Self-sheathing syringes, self-blunting blood collection needles, and even needleless syringes are, hence, gaining popularity.

No loose sharp wastes should be disposed of into plastic bags, as these bags can get punctured or cut by the sharps, which may cause injuries to the waste handlers, or the content of the bag may spill during transportation. The sharp wastes should, therefore, be placed in puncture-resistant containers or should be mutilated at the point of generation by some *needle destroyer*.

15.5. Labelling for Identification of Bio-medical Wastes

Labelling is essential for the correct identification and safe management of medical wastes. Labelling makes the identification and handling of different types of medical wastes, easier. It will also warn the workers, patients, and the public about the existence of the wastes and their potential health hazards.

All labelling and sign posting should follow the international symbols and colour coding. All the infected, soiled, pathological, human and sharp wastes, should be marked with *biohazard symbol* in black colour, representing *cytotoxic wastes*. The *symbol of cytotoxic hazard*, i.e. C in a triangle (Δ) is used for this labelling. Labelling of the wastes at the generation point should be in the form of tag or adhesive label, attached to the collection bag or container, prior to it being collected by the cleaning staff. This *waste tagging system* will allow *waste audits* conducted at the treatment/disposal site, to identify those areas that are in compliance or non-compliance with the required hospital waste management practices. If needed, a corrective action can then be easily initiated. It would be better, if the bags and bins provided are already labelled with the appropriate hazard symbol.

15.6. Storage of Bio-medical Wastes

According to the rules, the infectious waste cannot be stored for more than 48 hours. However, hospital wastes may need to be stored, if immediate treatment and disposal cannot be done. These wastes should be *refrigerated on site* to prevent rotting and evolution of offensive smells. These wastes may then be carted and stored in off-site storage facilities, built in R.C.C. in notified areas, away from the general public. These storage houses must be

15.7. Transportation of Bio-medical Wastes to the Treatment and Disposal Sites

Wastes in hospitals should be frequently lifted from well marked designated collection points in hospital wards or rooms. Open trolleys are often used to collect wastes from individual bins. In all such cases, each bin and each trolley must be thoroughly cleaned and disinfected with 1% solution of bleaching powder (hypochlorite) at least once a week. The movement of the sanitation staff should be prevented or minimised through the designated clean areas of the hospital. Automated waste handling and transport system is much better than the manual ones. The vehicles used for waste transport to the disposal sites should not be used for any other purpose. Such vehicles should be labeled and designated for the purpose by the authorities.

15.8. Treatment and Disposal of Biomedical Wastes

All the plastic disposable items contained in medical wastes are vulnerable for reuse without proper sterilization, unless destroyed completely. Several cases of repacking, supply and sale of syringes, catheters, etc. just after washing, or after low temperature autoclaving in unauthorised factories, have been reported in the recent past in the country and even in the capital city of Delhi. This practice is highly risky for the health of patients, for whom these *used and repacked items* are used. It has, therefore, been made mandatory to mutilate and shred such items at the generation point itself. The wastes should also be disposed of in a manner which does not cause any harm to the people or their environment.

The various methods which may be used for disposing of the hazardous wastes from hospitals include :

(1) <i>Chemical disinfection</i> ;	(Chemical process)
(2) <i>Autoclaving</i> ;	(Thermal processes)
(3) <i>Hydroclaving</i> ;	
(4) <i>Microwaving</i> ; and	
(5) <i>Incineration</i>	

In addition to the above methods, *land filling* may also sometimes be used for disposal of some particular types of biomedical wastes, as stated in table 15.1. The landfill site should, however, always be away from the residential areas, as it could be dangerous for the community health. Landfill or burial of hospital wastes may pose the following problems :

- difficulty posed in safe transport
- difficult availability of waste landfill site
- potential source of air, soil and groundwater contamination
- health threat to the community
- potential risk to the scavenger-animal birds and rag pickers.

Due to the above demerits, bio-medical wastes are generally not taken for burial, but are usually disposed of by thermal processes, like *autoclaving*, *hydroclaving*, *microwaving*, and *incinerating*.

Chemical disinfection followed by *mutilation* or *shredding* may also sometimes be adopted for disposal of the waste items like syringes, needles, globes, etc.

15.8.1. Chemical Disinfection. In this method, the waste is disinfected by using chemicals like *chlorine compounds*, such as bleaching powder, etc. Other chemicals like iodine, alcohols, phenolic compounds, hexachlorophene, formaldehydes, etc. may also sometimes be used. However, 1% solution of hypochlorite (bleaching power) is most commonly used. All such chemicals shall be used in aqueous solutions, in which the waste items shall be kept submerged. Many of the waste items may even need shredding before disinfection, as to help in providing sufficient contact between the waste and the disinfectant. The disinfected waste will usually be shredded.

In this method, the shredded wet wastes containing disinfectant chemicals will need final disposal. The method can hence be used for disposing solid waste items like tubes, catheters, blood or urine bags, globes and sharps like needles, syringes etc. which can be buried after disinfection and shredding; or for disposing certain types of liquid wastes which can be discharged into the sewers after disinfection.

15.8.2. Autoclaving. Autoclaving (steam sterilization) is a *low heat thermal process**, and is designed to bring steam into direct contact with the wastes, in a controlled manner and for sufficient duration to disinfect the wastes. The three basic types of steam autoclave systems are:

- (i) *gravity system*
- (ii) *pre-vacuum system*; and
- (iii) *retort system*.

These three types of autoclave systems are briefly indicated below:

(i) **Gravity type autoclaves.** They are those in which pressure of steam alone is used to evacuate air from the treatment chamber. They operate with steam temperatures of about 121°C. These systems require a cycle time of approximately 60-90 minutes in order to achieve full steam penetration into the most densely packed waste loads.

(ii) **Pre-vacuum type autoclaves.** They are those which evacuate air from the treatment chamber using vacuum pumps. This enables them to reduce cycle time to about 30-60 minutes, as the time to heat the air within the chamber is eliminated. These systems operate at about 132°C.

(iii) **Retort type autoclaves.** They consist of large volume treatment chambers designed for much higher steam temperatures and pressures; and hence their cycle times can be substantially lower than those of the other systems.

After autoclaving the wastes, they are shredded and disposed of suitably. The items which can be disposed of in this manner are indicated in table 15.1.

15.8.3. Hydroclaving. An innovation of the autoclave is the hydroclave. Here, indirect heating is done by providing steam into the outer jacket of a double walled container, while the waste inside the inner container is turned on by a suitable mechanism. This causes the waste to be fragmented and continuously tumbled against the hot vessel walls. The moisture content of the waste changes into steam, and the vessel starts to pressurise. In the absence of enough moisture in the waste to pressurise the vessel, a small

amount of steam is added until the desired pressure is reached. The treatment time is hardly 15 minutes at 132°C or 30 minutes at 121°C. In the process, sufficient sterilization occurs, and the resultant waste is fragmented and dehydrated with reduction in volume and weight.

15.8.4. Microwave Treatment. In the thermal treatment systems described above, the waste is heated externally; while in microwave, heating occurs inside the waste material. This process involves pre-shredding the waste, injecting it with steam, and heating it for 25 minutes at 25°C, under a series of microwave units.

Microwave radiation is designated as that portion of the electromagnetic radiation spectrum lying between the frequencies of 3000 MHz to 3,00,000 MHz and the microbial inactivation occurs as a result of thermal effect of radiation, and not from any intrinsic non-thermal property.

Microwaving, however, cannot be used for human organs or tissue wastes. This technique does not reduce the volume of waste, also.

15.8.5. Incineration. Incineration systems involve high temperature combustion, under controlled conditions, to convert wastes containing infections and pathological material to inert mineral residues and gases. The following two types of incinerators are generally used for treatment of hazardous liquid and solid wastes, like those of hospitals, industries, etc.

- (i) *Liquid waste incinerators*; and
- (ii) *Rotary kiln type of incinerators*.

Almost 90% of all the hazardous waste incinerator installations belong to the above two categories. The rest about 10% are the *fluidized beds* and *starved air/pyrolysis* systems, which are primarily used for incinerating sludge wastes of sewage treatment plants and city refuse, respectively.

The *liquid waste incinerators* are used for burning liquid wastes. The line between liquid and non-liquid waste is now well defined; *since a material is considered liquid, if it can be pumped to a burner and atomized, i.e., fired in suspension. Atomization is a function of nozzle type and liquid viscosity.* Such an incineration system will involve injecting the liquid waste at 350 to 700 kPa through an atomizing nozzle into the combustion chamber (furnace). The liquid waste, passing through the nozzle, ejects in the form of fine droplets, which volatilizes in the hot gas stream, oxidizing the gas. Efficient destruction of liquid hazardous wastes requires minimising unevaporated droplets and unreacted vapour. Temperature, residence time, and turbulence are optimised to increase destruction efficiency. The liquid flow injections may be horizontal, vertical, or tangential in different incinerator designs. Vertical units are less likely to experience ash, build up. Tangential units have a much higher heat release and generally superior mixing.


The *rotary kiln incinerators* are the most versatile of all the types of incinerators, as they can be used to burn solid, liquid, gaseous, and sludge* wastes. Throughout the world, more rotary kiln incinerators are used for destruction of non-liquid hazardous wastes than any other incinerator;

*Sludges are materials with semi-liquid consistency that comprise small particles within a liquid matrix, as opposed to slurries, which are large particles in a liquid medium (usually water).


although of course, the kilns can be designed to incinerate aqueous* as well as non-aqueous wastes.

Considering their wide spread use for hospital waste incineration, we herein describe, the conventional rotary kiln type of incinerators, and the variations of the kiln design, in greater details.

15.8.5.1. Conventional rotary kiln incinerators and their variations. A typical arrangement of a conventional rotary kiln system is shown in Fig. 15.1 (a), while Fig. 15.1 (b) shows the photoview of such a conventional rotary kiln.

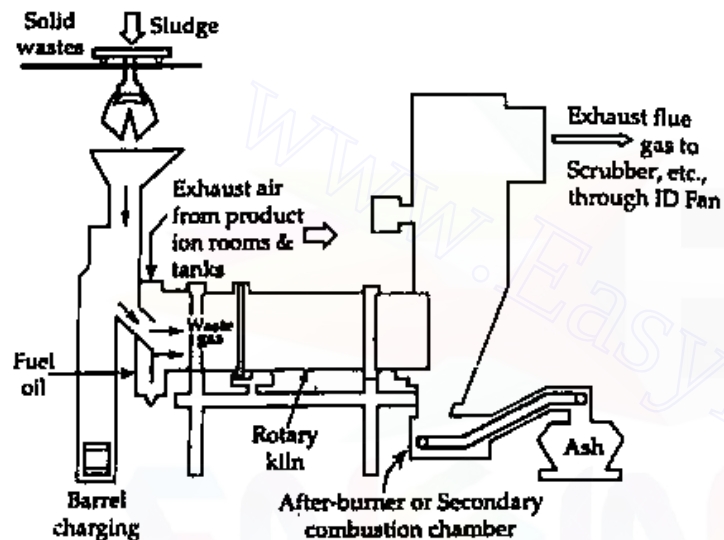

(a) Typical section of a rotary kiln system

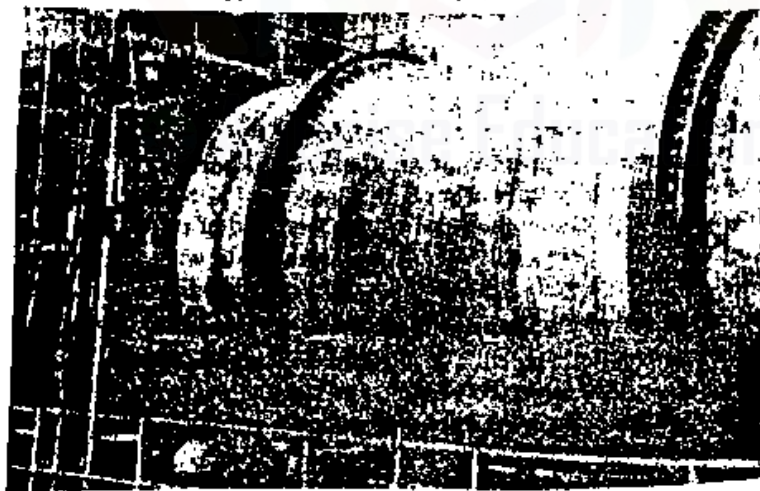

(b) Photoview of a conventional rotary kiln

Fig. 15.1

The rotary kiln is a horizontal cylinder, lined inside with refractory. The kiln is capable to rotate about its longitudinal axis @ $\frac{3}{4}$ to 4 rpm. The waste is deposited in the kiln at one end, and the waste burns out to ash by the time it reaches the other end.

The entire system assembly consists of a waste feed, an air injection, the kiln itself, an afterburner (a secondary combustion chamber), and an ash collection system. The gas discharge from the afterburner is directed to an air emission control system, to reduce air pollution impacts.

As shown in Fig. 15.1 (a), there are a number of areas within the system, where leakages can occur. The feeding ports, for example, cannot be completely sealed; the kiln seals are also the areas of potential leakage. Similarly, although the ash system is usually provided with a water seal, but with dry ash collection, there will always be some leakage.

In order to ensure that the leakage occurs into the system rather than out of the system (i.e. from the kiln to the outside atmosphere), the kiln is maintained with a negative pressure (draft). An induced draft fan is, hence, provided into the system, and is sized to maintain a negative pressure in the entire system, as to ensure leakage into the system, rather than out of it.

The conventional kiln is mounted on its frame at a slight incline from the horizontal plane, at about 2 to 4% slope $\left(\frac{1}{4} \text{ to } \frac{1}{2} \text{ inches per foot of length} \right)$, with the higher end at the feed end of the kiln.

Some other designs, particularly adopted for treating liquid wastes, may have a zero or slightly negative rake (slope) with lips at the input and discharge ends. Such kilns are operated in the slagging mode*, with the internal kiln geometry designed to maintain a pool of molten slag between the kiln lips.

Most kiln designs use smooth refractory lining on the kiln interior. Some designs, particularly those for the processing of granular material (dirt or powders) may have internal vanes or paddles to encourage motion along the kiln length, and to promote turbulence of the feed. Provision of baffles need a lot of care, since with certain material consistencies, such as soils with 10-20% moisture content, baffles may lead to retard the movement of material through the kiln.

The kiln is supported by atleast two trunnions. One or more sets of trunnion rollers are idlers. Kiln rotation can be caused by a set of powered trunnion rollers; or by gear drive around the kiln periphery; or through a chain, driving a large sprocket around the body of the kiln.

A source of heat like gas or diesel is required to bring the kiln up to the operating temperature, and to maintain its temperature during incineration of the waste feed. Supplemental fuel is normally injected into the kiln through a conventional burner or a ring burner, when gas fuel is used.

*A kiln designed to operate at very high temperature as to produce ash in molten form is called a slagging kiln, as explained a little later in this article.

There occurs a number of variations in kiln design, including the following common ones :

- (a) *Parallel (i.e. Co-current) or Counter current flow types ;*
- (b) *Slagging or Non-slagging types ;*
- (c) *Refractory, or Bare wall types.*

The most commonly used kiln design, called the conventional kiln, is a *parallel flow, non-slagging, refractory lined system.*

The differences between various types of kilns, mentioned above, are clarified below :

(a) **Parallel and Countercurrent Kilns.** When the gas flow through the kiln is in the same direction as the waste flow, the kiln is said to have *parallel or co-current flow*, as indicated in the conventional kiln in Fig. 15.1 (a). The burner(s) is placed at the front of the kiln, i.e. the face of the kiln, from which the air gas mixture originates. The waste is introduced in this type from the front end of the kiln.

A counter-current kiln is generally used when an aqueous waste is to be incinerated. With *counter current flow*, the gas flows opposite to the direction of the flow of the waste. Waste is introduced at the end of the kiln far from the burner. The gases exiting from the kiln will then dry the aqueous waste, and its temperature will drop. If aqueous waste were dropped into the kiln with parallel flow, water would be evaporated at the feed end of the kiln. The feed end would then be the end of the kiln at the lowest temperature, which would require much longer kiln for burning of the wastes.

Wastes containing a light volatile fraction (containing greases, for example), should use a kiln with parallel flow. These volatiles will likely be released from the feed, immediately upon entering the kiln. The parallel kiln provides residence time that a counter-current kiln would not, for the burn-out of these volatiles.

(b) **Slagging and Non-slagging Kilns.** When a kiln, like the conventional one, is designed to produce ash in dry or powder form, it is known as a *non-slagging kiln*. However, with higher temperatures, the dry ash can be converted into molten ash ; and hence, when a kiln uses such high temperatures, then it is termed as a *slagging kiln*.

At temperatures in the range of 1100—1200°C, the ash starts to deform ; and as the temperature increases, the ash will melt. The temperatures at which these things will actually happen will depend upon the chemical constituents present in the ash. It is also a function of the presence of oxygen in the furnace. When a kiln is designed to operate at such high temperatures as to generate and maintain molten ash during operation, then it is known as a *slagging kiln*. Operation in a *slagging mode* provides a number of advantages over non-slagging operation. However, if slagging occurs in a non-slagging kiln (designed as such), then it is undesirable and must be eliminated.

The construction of *slagging kiln* is more complex than that of a non-slagging one, requiring a lip at the kiln exit to contain the molten material. A non-slagging kiln, on the other hand, will have a smooth transition with no

slagging kiln is given a raking (2 to 4% slope to horizontal), while a slagging kiln is either kept horizontal or is given a negative rake (i.e. the surface of the kiln at the feed end is kept lower than the kiln surface at the discharge end), as to permit accumulation of more slag in the kiln than with zero or positive rake.

A *slagging kiln* can be used to destroy metal drums and salt laden wastes, which cannot be incinerated in a non-slagging kiln, since they need higher temperatures for molting ; and the dropping of the drums in a conventional kiln may damage its refractory lining, since molten slag to absorb the impact will not be available, as will be available in a slagging kiln. The temperature in a slagging kiln, as stated above, must be very high to maintain the ash in the molten-slag. Temperatures as high as 1400-1550°C are quite common for slagging kilns ; while a non-slagging kiln usually operates at temperature below 1100°C.

The kiln will burn out solids and will volatilize the organics. All the organics will generally not be incinerated in the kiln, and will require that a high temperature be maintained at a specific residence time for destruction. For this purpose, a *secondary combustion chamber*, also called an *Afterburner*, is normally placed immediately downstream of the kiln, as shown in Fig. 15.1 (a). It is a stationary piece of equipment that is designed to maintain the temperature of the gas stream exiting the kiln at a pre-selected temperature of destruction for a specific period of time. The released volatiles, in fact, will exit the kiln in the flue gas and will enter the After-burner. The After-burner will normally contain at least one burner to provide the supplemental fuel required for burn out of the organics in the gas stream. In some of the kiln system designs, the volatiles released from the kiln, may have enough heating value, and they may not require any external source of supplemental fuel for complete combustion. In these designs, the Afterburner does not require supplemental fuel, and it acts as an extension of the kiln, providing the residence time for burn-out of the organics. This secondary combustion chamber would be initially heated by hot gases from the kiln.

The Afterburner required for slagging kiln can often be much smaller than that required for a non-slagging kiln. Similarly, the other downstream equipment, such as the exhaust gas scrubber or the induced draft fan, can be reduced in a slagging kiln, since a slagging kiln represents a more stable and a predictable system, because it will maintain a relatively more constant temperature profile under rapid changes in the kiln loading, due to the presence of massive melt in it.

The tumbling action of a rotating kiln encourages the release of particles to the gas stream. Thus, from 5 to 25% of the non-volatile solids in a feed stream may become air-borne with the use of a conventional non-slagging kiln. Since the molten slag in a slagging kiln acts, as does the fluid ash in a P.C. (pulverized coal) burner, the slag will absorb particulate matter from the gas stream. The particulate emissions from a slagging kiln will, therefore, be

reduced to about $\frac{1}{4}$ to $\frac{3}{4}$ of that produced by a non-slagging kiln. On the other hand, NO_x emissions may be more in a slagging kiln, since such NO_x

generation is usually insignificant so long as the process temperature does not exceed 1100°C or so. At 1450°C, the generation of NO_x is almost ten times as great as its generation at 1000°C.

The molten slag from a slagging kiln is finally dropped in a wet sump, where it immediately hardens into a granular material, called the frit. The frit has the appearance of dark glass. The ash from a non-slagging kiln, on the other hand, is collected wet or dry. Thus, the end product of a slagging kiln can be much easily disposed of, as it is much less leachable than the ash of a non-slagging kiln.

Refractory linings for slagging kilns will, however, need to be much more durable and costly, as to withstand higher temperatures and impact and corrosive action of waste drums, etc.

The destruction of organic compounds in a rotary kiln furnace is achieved by a combination of high temperature and residence time. Generally, the higher is the temperature, the lower will be the residence time required for destruction of wastes. For this reason, the residence time for a slagging kiln will usually be less than that for a non-slagging kiln, since temperature in a slagging kiln will be higher than that in a non-slagging kiln.

The residence time, or the waste retention time of a particular kiln, depends upon its geometry and kiln speed, and is connected by the equation :

$$t = \frac{0.19}{D.S.N} \quad \dots(15.1)$$

where t = mean residence time in minutes

L = Length of the cylindrical kiln in m. The typical values may range between 3 to 10 m

D = Dia of the cylindrical kiln in m. Typical values may range from 1.5 m to 4 m

S = Kiln rake or slope in m per m length of kiln

N = Rotational speed of the kiln in revolutions per minute (rpm). Typical values of rotational speed may range from 0.5 to 2.5 cm/sec.

From the above equation, it can be easily stated that for a given rotary kiln with given values of $\frac{L}{D}$ and S , the solid residence time (t) will be inversely proportional to the kiln speed. Thus, by doubling the speed of the kiln, the residence time can be reduced to half.

15.8.5.2. Modern Advancements in Incineration. In order to incinerate the hazardous organic liquid wastes, the modern research has led to the development of some such systems, called the Plasma Arc Systems. Such a system uses extremely high temperatures developed within a plasma stream to destroy the hazardous organic matter. Such an incinerator, which can even be made mobile on a self contained trailer, is preferably used to destroy

are generally not used for destroying solids, but may eventually be used to destroy sludge wastes, containing fine solid particles.

Steam reforming and Electrical heating types of incinerators are also being developed in modern days for treating hazardous wastes.

15.8.5.3. Air Polluting Effects of Incinerators. While selecting biomedical wastes for incineration, care must be taken to exclude all the chlorinated plastic materials or products, since they liberate harmful and carcinogenic gases, which may pollute the environment, and affect human and animal health. Chlorinated plastics are often used in medical equipments ; and after being used, they become heavily contaminated with free flowing body fluids. The burning of such plastics cause an increased risk of production of dioxine(s) & furan-which are carcinogenic, and harmful chlorine compounds, which get liberated more when the waste is burnt on low temperatures.

Due to their potential of causing serious air pollution problems, many people do oppose the installation of incinerators, particularly within the hospital premises, although incineration has been found to be the most effective method of destroying infection and toxic materials, as well as for volume and weight reduction of waste. The incinerator system also helps to produce energy and electric power which itself can be used to run the incineration plant. The incineration plant can, however be used with great advantage, if an off-site comprehensive system of waste treatment is developed for a city, where the plant is installed away from the residential areas, and the waste is carried upto the plant through careful and safe methods in closed containers.

15.8.6. Minimising Biomedical Waste. Good bio-medical waste management desires that the waste should be reduced and minimised by its re-use and recycling. The use of disposable items should therefore, be minimised, and the use of long lasting reusable items like syringes, etc. with proper sterilization, should be promoted, except where their use becomes absolutely essential in performance of necessary procedures. Reduction in waste could ultimately be beneficial for the environment.

15.8.7. Human Resource Management Issues in Disposal of Biomedical Wastes. The management of a hospital or a nursing home must develop a commitment for safe disposal of its wastes. A detailed plan should be prepared indicating each step of waste management, extending from procurement of materials, waste generation, collection, handling, storage, transport, treatment, and disposal. Biomedical waste management requires system approach involving all procedures necessary for waste management that should minimise the risk to health and environment. At the same time, it should not put extra burden on health care staff in their duties. Devoted and trained personnel become more important than the technology. Almost any treatment and disposal which is operated by well trained and devoted staff can eventually provide more protection for the staff, patients, and the community in general, than an expensive or a sophisticated system which is managed by staff having no free altitude and who do not understand the risk

15.8.7.1. Training and Research. Each person in every health care establishment should be made aware of the potential risk of mishandling of the hospital wastes. The management of medical wastes requires diligence and care from the chain of people, starting from doctors, nurses, sanitary staff, labourers and persons who dispose of the residue after final treatment.

The staff in the hospital must be trained to properly segregate and collect the hazardous wastes separately, at the point of its generation. The staff should also be trained in proper packaging and labeling of various types of wastes. Colour coded bags and containers may be adopted for such segregation of wastes, as discussed earlier. The staff should also be advised to minimise the use of disposable items, which automatically will reduce the quantity of waste.

15.8.7.2. Community Awareness. People visit hospitals from all sections of the society, starting from the very poor to the very rich, and from the illiterate to the highly educated. Many of them do not have any knowledge about the risk involved in the hospital environment. Patients and their relatives go on changing everyday. Education of general public, therefore, becomes an important issue in proper management of biomedical wastes. Through press and TV advertisements, the general public should be taught to behave and take care of the wastes being produced by them during their stay in the hospital with their patient relative. Health care staff alone cannot look to the sanitation aspects, unless the people co-operate, either through education or through compulsions.

Implementation of the environmental laws and safe practices is not only the responsibility of the government alone, but active participation of the people is essential. National level educational programme for the masses about proper waste management is hence called for, in any good waste management system. The public awareness programme should be continuous and consistent, and should not last for a limited time. It should also be wide spread over the country, as a whole.

15.8.8. Conclusions. Environmental pollution has become a major concern with respect to the present as well as the future life on our planet. Health care facilities do contribute significantly to this pollution. It is the legal duty of the management of every health care institution to ensure safe disposal of their wastes, as not to cause any adverse impacts on human health or the environment. The authorities in the government or Pollution Control Boards are responsible to ensure the implementation of the legal laws and the statuses, concerning such important pollution issues.

RADIOACTIVE WASTES

15.9. Radioactive Isotopes or Radionuclides

An atom, as you know, is the smallest unit of an element. An atom, in most cases, is made up of a nucleus containing protons and neutrons,

only in the nucleus, since the electrons are considered weightless, though they occupy a large space to increase the volume of the atom.

The chemical properties of an atom are governed by the number of protons, which also indicates the atomic number of that element. *This means that the atomic number (i.e., the number of protons) contained in one atom of an element, will determine as to what that element is. Eventually, a change in the number of protons (i.e., atomic number) will change the very element itself.*

In the nucleus of an ordinary atom, the number of neutrons usually equals to the number of protons. Such a balanced nucleus of an atom of an element, containing equal number of protons and neutrons, is a stable nucleus, and the atoms of most of the elements do occur in such stable forms. The sum of the number of protons and the number of neutrons in the nucleus is known as the atomic mass number (which approximately equals the atomic mass in amu*). However, atoms of *radioactive elements* may release or absorb some neutron(s), and to become unstable isotopes, called radioactive isotopes or radioactive nuclides. The radioactive isotope of a radioactive element is, thus, formed due to the excess or shortage of neutrons in its atoms, as compared to the number of neutrons contained in the balanced atoms of that element. Evidently, the number of neutrons in an atom of such an element shall not be equal to the number of protons, but will be more or less. This changed number of neutrons (from the balanced atom) will eventually change the atomic mass number, *which shows that the isotopes of an element will have different atomic mass (i.e., atomic mass number) but the same atomic number.* For example, a normal carbon-12 atom has 6 protons and 6 neutrons along with 6 revolving electrons; but its radioactive isotope, carbon-14 has 8 neutrons instead of the normal 6.

Atoms of such radioactive isotopes, due to having disproportionate number of neutrons, possess unstable nucleus, which tries to become stable by disintegration. This disintegration can take place in different ways, with the release of radiations of different types (i.e., α , β and γ radiations). It can, hence, be concluded that the radioactive nuclides, when present in the natural environment, will disintegrate, releasing ionised radiations or rays**. These emitted radiations (alpha particles, beta particles, and gamma rays) are very powerful, and contain enormous energy. Some of these rays are even capable of penetrating through thick steel sheets.

Radioactive nuclides, thus, continue to disintegrate (or decay) with the passage of time, releasing *radioactive radiations* or *radioactivity*. One of the important parameters to characterise the radio-nuclides is their half life,

* mass of 1 proton = 1.0088925 amu (amu is atomic mass unit)
mass of 1 neutron = 1.0088665 amu
1 amu = 1.6608×10^{-24} gm.

**When atoms of radioactive isotopes disintegrate, ionising particles (alpha and beta particles) are given off, and in some cases, ionising electromagnetic radiations (gamma rays) are also evolved. The most important characteristic of these radioactive radiations is their ionising nature; i.e., they possess enough energy to expel the electrons from the atoms or the molecules on which they strike. This ionising characteristic (i.e., the capability to produce an ion or to excite a molecule) of radioactive radiations causes damage to the living matter.

which is the time required for 50% of the total atoms to decay. The half life periods (usually denoted as $T_{1/2}$) of radioactive nuclides can vary from a few seconds to thousands of years. Accordingly, radioactive nuclides with higher half life periods may continue to release harmful radioactive radiations for a very long period of time, and may, hence, continue to cause hazards to biological life for very long periods.

Most of the present day man-made nuclear programmes are based on nuclear fission, in which process, the heavier radio isotope such as Uranium-235 (or say Plutonium-239) is bombarded with neutrons, resulting in its split in to two smaller and lighter atoms (lighter because the atomic mass of the original isotope will be equal to the sum of the atomic masses of both the fission fragments). *These smaller atoms of fission products are beta or gamma emitters only, since they are too small to emit alpha particles.* This splitting is accompanied with the release of neutrons and energy, as explained in article 15.10. These newly released neutrons, in turn, attack the fresh Uranium atoms, causing their splitting, with the release of more neutrons and energy. In this way, a chain reaction starts, which is self-sustaining with respect to neutrons, and lasts until the whole Uranium is exhausted. In this manner, a tremendous amount of cumulative energy is generated. This huge generated heat energy is exploited in a closed nuclear reactor to produce steam for running turbines to produce nuclear power, or to use this energy for any other beneficial uses in a controlled manner. However, when these reactions undergo in an uncontrolled manner in the open, they cause devastations, as in the case of nuclear weapons.

The elements or their isotopes which emit characteristic radioactive radiations are called radioactive elements, or radio-nuclides, as stated above. More than 42 elements have been identified as having naturally occurring radioactive isotopes, and more than 1100 radioactive isotopes (usually called radioisotopes) are known. Out of these 1100 known isotopes, only about 60 are found in nature, while others may be man made. A list of a few commonly occurring radionuclides is given in table 15.2.

Table 15.2. Commonly Occurring Radionuclides

Radio Isotope	Emitted Particles	Half-life period
Americium (Am)-237	Alpha	433 yr
Americium (Am)-243	Alpha	7,370 yr
Bismuth (Bi)-210	Beta	5 days
Carbon (C)-14	Beta	5730 yr
Cobalt (Co)-60	Beta	5.27 yr
Cesium (Cs)-135	Beta	3×10^6 yr
Cesium (Cs)-137	Beta	30.17 yr
Curium (Cm)-246	Alpha	8500 yr
Iodine (I)-129	Beta	1.6×10^7 yr
Iodine (I)-131	Beta	8 days
Krypton (Kr)-85	Beta/gamma	10.7 yr


Contd...

Lead (Pb)-210	Beta	22.3 yr
Polonium (Po)-210	Alpha	138.4 yr
Plutonium (Pu)-239	Alpha	24,000 yr
Plutonium (Pu)-240	Alpha	6570 yr
Radium (Ra)-226	Alpha	1630 yr
Radon (Rn)-222	Alpha	3.82 days
Strontium (Sr)-90	Beta	28.8 yr
Technetium (Tc)-99	Beta	2.14×10^5 yr
Thorium (Th)-230	Beta	80,000 yr
Tin (Sn)-128	Beta	10^5 yr
Tritium (H)-3	Beta	12.33 yr
Uranium (U)-234	Alpha	2.45×10^5 yr
Uranium (U)-235	Alpha	7.04×10^8 yr
Uranium (U)-238	Alpha	4.47×10^9 yr
Xenon (Xe)-133	Beta/gamma	5.25 days

15.10. Nuclear Fission and Generation of Nuclear Power

15.10.1. Nuclear Fission. Tremendous heat energy can be obtained from certain fissionable radio-isotopes, like Uranium-235, Plutonium-239, or Uranium-233, which are arranged in such a way in a nuclear reactor, as to get a self-sustaining chain reaction. The process involved is known as *nuclear fission*. The process of nuclear fission is accomplished by bombarding the nuclei of some fissionable heavy radio-isotope (commonly Uranium-235) with neutrons. This action causes the uranium nuclei to split into smaller lighter nuclei (fission fragments) and to emit neutrons and heat energy. In one splitting of an atom of U-235, atleast one of the produced neutrons must remain available to produce another fission, instead of escaping from the assembly, or being used up in some other nuclear reaction. This newly available neutron, ejected from the first splitting of an atom of U-235, will bombard the nuclei of the second uranium atom, splitting it into fission products with ejection of two or three neutrons. These newly ejected neutrons will again split other atoms of the U-235. This will create a chain reaction to split various atoms of U-235.

In such a fission reaction of U-235, the nucleus of a U-235, atom will capture a neutron (introduced into the reactor from outside neutron producing mass), making the nucleus of this atom unstable, causing it to break. Since the atomic mass number (A) of a neutron is 1, the sum of the atomic mass numbers of the product species (fission fragments) must be $235 + 1 = 236$. One possible fission reaction is shown below :



The fission fragments are, infact, simply lower elements (having lower atomic mass numbers). There are commonly two fission fragments from each nucleus with release of energy of the order of 200 M. eV*, shared between them. *The uranium nucleus infact does not split into the same two fragments*

each time. The break up is far from symmetrical and can occur in more than 30 different ways. The most commonly produced isotopes are grouped around the mass numbers 95 and 139. The fragments formed from the fission process have very large neutron-to-proton ratios, highly unstable. Many more splittings will, hence, occur, before a stable nucleus is finally achieved. These successive decays or disintegrations will give rise to a decay chain.

The process of capturing of a neutron by an atom of U-235 and its fission (splitting) happens very very quickly. The time taken in splitting of one atom is of the order of pico-seconds (10^{-12} sec). The fission of a single atom of U-235 releases as much as 200 MeV of energy*. Since the finite used amount of U-235 will have enormous number of its atoms (1 gm of U-235 will have 2.55×10^{21} atoms), the generated heat energy will also be tremendous. An incredible amount of heat energy, is thus, released by the fission, and is accompanied with the release of gamma radiation. The two new atoms of the fission fragments, later in stabilisation stage, release beta and gamma emissions of their own, as well.

15.11. Radioactive Disintegration and Radioactive Radiations

The above explained disintegration of a radio-nuclide, often called as the *radioactive disintegration*, may be defined as the spontaneous break up of the nucleus of an atom of a radioactive element or its isotope. The break up of the nucleus itself is important here, as compared to that of the entire atom or the molecule, as may happen in other types of hazardous wastes. In dimensions of radioactivity, the nucleus of a radioactive atom itself, is too large, making it unstable. This unstable nucleus breaks up, and the atom changes to the atom of some other element, which is lower in mass. The radiations or the radioactivity generated due to such break up of the nucleus of the radioactive atom, which is found to be extremely hazardous to life, may be of three types; i.e.; (i) *alpha particles*; (ii) *beta particles*; and (iii) *gamma radiations*, as discussed below:

(i) **Alpha Radiations.** The release of alpha radiations from the nucleus of a radioactive element is equivalent to the release of positively charged helium nucleus, consisting of *two neutrons and two protons*. This release causes the parent atom to lose four atomic mass, (since an atomic mass is the sum of the number of protons and the number of neutrons in the nucleus); while the loss caused in atomic number in such a break up will be equal to 2 only (because atomic number is equal to the number of protons in the nucleus).


Disintegration of Uranium-238 (atomic number 92) to release alpha particles, given by eq. (15.3) can be quoted as an example of this type of break up of a radioactive element, which is explained below:

When U-238 releases the alpha particles, the atomic number decreases by 2, and atomic mass (or atomic mass number) decreases by 4. The atomic number of Uranium is 92. From the periodic table (given at the end of the book as Appendix Table A-8), the atom with an atomic number of 90 is Thorium

*MeV (million electron volt) = 10^6 eV

where $1 \text{ eV} = 1.602 \times 10^{-19} \text{ Joules} = 1.602 \times 10^{-13} \text{ ergs}$

(Th). Hence, the new element formed will be Thorium. This reaction equation is written as:

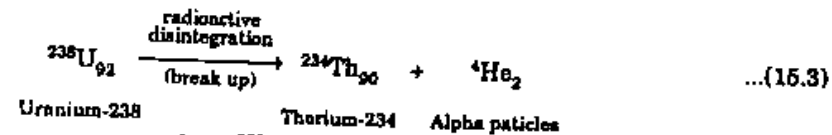


where ${}^{238}_{92}\text{U}$ = Uranium having atomic number = 92, and atomic mass number = 238


${}^{234}_{90}\text{Th}$ = Thorium having atomic number = $92 - 2 = 90$; and atomic mass number = $238 - 4 = 234$

${}^4_2\text{He}$ = Helium having atomic number = 2 and atomic mass number = 4

Likewise, Plutonium-239 (atomic number 94) disintegrates to Uranium-235 (atomic number 92) with the release of an alpha particle, as per equation (15.4) given below:



Likewise, Radium-226 is transformed into Radon-222, as per equation (15.5):




[Note. In the above equations, the pre-exponent is the atomic mass number, and the subscript is the atomic number.]


Alpha particles released in the above equations, are *slow moving ionising particles*, having an average velocity almost 10 times lesser than that of light. These particles can travel not more than 10 cm in air, and have a weak penetration power. They can be stopped even by a thin sheet of paper. Since the alpha particles cannot penetrate the barrier of skin, they also have insignificant effects on the body from outside. However, they can be extremely dangerous when emitted by the ingested radioactive alpha emitters, since they cause an intense ionisation in the biological molecules:

(ii) **Beta Radiations.** Beta radiations are the release of electrons from a radioactive nucleus, caused by the break up of neutron into a proton and an electron. Due to this break up of one neutron, the nucleus will have one increased proton, and hence one increased positive charge or one increase in its atomic number. Since the mass of the released electron is very small, the reaction will not change the atomic mass, which equals to the number of protons and number of neutrons (here the total number of neutrons and protons remains unchanged, since one neutron is changed into one proton with the release of one electron). However, due to change in charge (increased charge), the parent atom changes to another atom of higher atomic number. Being an electron, beta radiation has a negative charge.

Disintegration of Strontium-90 (having atomic number = 38) to produce Yttrium-90 with the release of a beta particle, given by eq. (15.6) can be quoted as an example of this type of disintegration of a radioactive element :

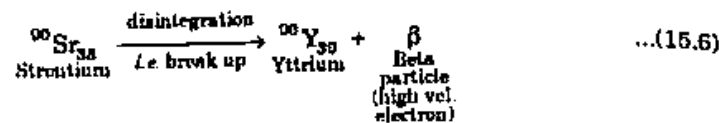

Likewise, Xenon-139 (with atomic number 54) is converted into Cesium-139 (with atomic number 55), after emitting a beta particle, as indicated by equation (15.7).



Gamma rays may or may not be released with beta particles in this type of disintegrations. Beta particles are the released high velocity electrons having velocity ranging from 30% to 99% of the speed of light, which is more than the spread of electrons moving in an electric current. *The penetration power of beta particles varies with their velocities, and may range from a few millimetres to a centimetre under the skin. However, because of their lower mass, beta particles possess a lower ionising power than alpha particles. Hence, beta particles, though can prove to be hazardous to body as an external radiation, but may not cause that much harm as may be caused by alpha particles—if produced internally from an ingested radioactive element.*

(iii) **Gamma Radiations.** Gamma radiation or gamma ray, as it is also called, has no charge or mass, being simply an electromagnetic radiation that travels at the speed of light. Gamma rays are normally produced where an electron in an atom of a radioactive nuclide, moves from a higher energy level (excited state) to the lower stable energy level. An analogous phenomenon also occurs in a nuclear reaction; wherein, a nucleus in an excited state releases the gamma rays when it transforms into a more stable lower form. Gamma radiation may accompany either alpha or beta radiation. X-rays are also a sort of gamma rays.

Gamma rays are, hence, defined as very high frequency photons.

Being an electromagnetic radiation, gamma radiation may be thought of as a wave or a massless photon, having a very short wave length in the range of 10^{-3} to 10^{-7} μm . Because of their shorter wave lengths, gamma rays possess very high energy, and greater penetrating power, which increases with the decrease in wavelength. *Gamma radiation has got a high capability of ionisation, and are highly damaging to biological life.*

15.12. Impact of Radioactivity on Biological Environment

When the radioactive radiations strike a particular material or body, they cause ionisation of the atoms or the molecules of that material, or of any material present in that body.





For example, when +vely charged alpha particles pass through an

the molecules of that material, leading to a rise in their energy levels; which, in many cases, forces the electrons completely out of the atoms, thus, bringing about the ionisation in the molecules.

Similarly, when the -vely charged beta particles pass through the electron orbits of the atoms of the molecules of the absorbing material, the force of repulsion between the two, increases the energy level of the electrons, pushing them to higher energy orbits or completely out of the atom. Beta ionisations are usually encountered less frequently than the alpha ionisations.




The ionisation caused by the fast moving highly energetic gamma rays involves a direct collision with the orbital electrons, due to which, the electrons are ejected free of their respective atoms. The net result of radiation on the molecules and atoms is to form positive ions and free electrons. Gamma radiations, especially those having very high energy, can even be absorbed by the nucleus, leading to the release of neutrons.

Any atom or molecule in a biological body can be ionised by such radioactive radiations, when they happen to strike that biological body (such as human body). Since the body of a living being (i.e., biological life) normally contains huge amount of water-constituting more than 80% of most tissues, it has the maximum chance of being ionised by radioactive radiations. The ionisation of the water of the various tissues of the biological body, causes formation of various radicals and compounds, which possess great properties of oxidation and reduction, and can readily interact with the biological molecules, bringing about tissue damage, death, or even mutagenic effects. The equations showing ionisation of water and associated reactions are indicated and explained below :





The hydroxyl ion (OH⁻) may, on loosing an electron due to radiation, exists as hydroxyl free radical (OH[•]) – which is short of one electron. The hydroxyl radical (OH[•]) is a highly reactive radical*, in search of one electron, thereby acting as a strong oxidising agent. Similarly, the Hydrogen free radical (H[•]) wants to lose its sole electron to form a stable hydrogen ion (H⁺), and, therefore, acts as a strong reducing agent. The radiation, thus, leads to formation of these OH[•] and H[•] radicals, along with formation of some other radicals like HO₂ and H₂O₂, as per reactions indicated below :

*A radical in chemistry, as you may be knowing, is a group of two or more charged or neutral atoms that have atleast one unpaired electron. Molecular oxygen, O₂, for example, has two unpaired electrons, and is a common radical. Most radicals are extremely reactive, and combine with other atoms or radicals to form compounds or ions. However, some radicals, called free-radicals, may exist for relatively short times, unbound to any other group. Radicals play a major role in certain chemical reactions of commercial or medical significance.




All these free radicals, (i.e., $\text{OH} \cdot$, $\text{H} \cdot$, $\text{HO}_2 \cdot$ and $\text{H}_2\text{O}_2 \cdot$) cause many oxidising and reducing reactions to occur in the biological molecules of a living body, with the further formation of more free radicals and oxidised molecules, as indicated below :



Besides, these free radicals may also interact with the double bonds, hydrogen bonds, and sulphahydroxyl group (SH) present in proteins, DNA, RNA, and other bio-molecules.

In certain cases, the free neutrons when absorbed in the body can transmit some elements into others, as indicated below :



The net result of all such reactions and interactions leads to deactivation of enzymes and destruction of nucleic acid and other biologically active molecules in living tissues, which ultimately may lead to cell division, disruption of cell membranes, and overall damage to the biological tissues, causing death and mutagenic effects.

It can, hence, be concluded that the ionization produced by radiation disrupts the normal chemical processes of living cells*, causing the cells to grow abnormally or to die. The seriousness of the biological damage depends on the density of the ions formed. Cells can, in fact, repair the damage produced by only a few ions, but they generally do not recover from a high density of ionisation.

The various types of ionizing radiations, thus, produce different degrees of biological damage. The cell damaging capacity of radiations are, hence, compared by using a term called the relative biological effectiveness (RBE) or the Quality factor (Q). The RBE of a particular radiation, thus, indicates the extent to which it damages the body cells, compared with equal doses of other ionizing radiations. For example, dense track of ions formed by alpha particles causes about 20 times as much damage as is being caused by a thin ion trail generated by electrons. Thus, alpha particles will have an RBE or Q of 20, if electrons have an RBE of 1**.

The amount of radiation dose absorbed by a substance (including a body) is measured in unit, called rad. A rad is defined as a dose of $\frac{1}{100}$ joule of radiation energy per kilogram mass of material absorbing the radiation. The

*cells from tissues.

new S.I. unit of absorbed radiation is Gray (Gy), which replaces rad, and is defined as that dose of ionizing radiation that imparts one Joule of energy to 1 kg of absorbing material.

Naturally $1 \text{ Gy} = 100 \text{ rad}$... (15.8)

Another unit, called rem, measures the biological damage produced in the human body by different types of ionizing radiations. The number of rems of radiation equals the number of rads multiplied by the RBE of the radiation involved. The new S.I. unit replacing rem is Sievert (Sv), which equals the radiation dose in gray multiplied with the RBE of the radiation involved.

Evidently, $1 \text{ Sievert} = 100 \text{ rem}$... (15.9)

The rem or sievert, thus, directly indicates the damaging capacity of a dose of a particular type of radiation. A person can receive a radiation dose of up to 25 rem without showing any immediate effects. A dose of 100 rem (i.e., 1 Sv) may produce radiation sickness. People exposed to doses between 300 to 800 rem (i.e., 3 to 8 Sv) experience severe radiation sickness. Radiation dose of more than about 800 rem (8 Sv) are always fatal.

Over a life time, a person receives 7 to 14 rem of radiation exposure from natural sources of radiations, such as from the radioactive rocks and minerals in the Earth and from the sun and other objects in space, including cosmic rays, which probably arise from the sun or even beyond it. A single exposure of 5 to 75 rem of radiation, usually produces a few observable symptoms. Vomiting, fatigue, and loss of appetite may, however, accompany radiation exposures of 75 to 200 rem, and recovery may take a few weeks. Severe changes in blood cells and hemorrhage may occur with exposures of more than about 300 rem. Above 600 rem, additional symptoms include loss of hair, and loss of body's ability to fight infections, usually resulting in death.

Other adverse effects of radiation may become evident late in life. These include a shortened life span and an increased probability of developing cancers and cataracts. Radiation can also damage a person's genes. Damaged genes can transmit harmful traits to the person's off-springs.

On the community level, especially in aquatic ecosystems, fish eggs have been found to be extremely sensitive to even low levels of radioactivity. Fish species, particularly those with low fecundity, are badly affected by the radioactivity present in water. Fish and other biological life (including animals, plants, and humans) are also susceptible to mutational effects, leading to birth of abnormal organisms. In general, fishes are the most sensitive organisms in water to radioactive radiations (i.e., irradiation), followed by crustaceans, mollusks, algae (except cyanophyceae), and protozoa.

Besides the radiations emitted by the natural sources in the environment-exposing humans to such radiations, a smaller amount may come from the testing of nuclear weapons. Certain amount of exposure may also come from medical and dental X-rays; while a certain amount may come from items, such as colour television sets, smoke detectors, airport baggage X-ray machines, etc. The operation of nuclear power plants account for only a tiny

amount of total normal radiation exposure. In USA, the average annual radiation dose received by a person has been estimated to be about 180 milli rem (1 milli rem = $\frac{1}{1000}$ rem = 10^{-5} Sv).

The nuclear fall-outs from the explosions of nuclear weapons and accidental discharges from the nuclear power reactors, as well as the radioactivity emanating from the solid and liquid wastes of nuclear power plants, may cause very harmful radioactive exposures on humans and other animals. Three isotopes produced from fission reactions taking place in the nuclear reactors and atomic explosions, and, thus, occurring in the nuclear fallouts and in the wastes of nuclear reactors, have been particularly signaled out for their adverse effects on human health. Strontium (Sr)-90, Cesium (Cs)-137, and Iodine (I)-131 are these three highly dangerous radioactive isotopes. Strontium-90 is made even more dangerous than Cesium-137 due its ability to behave like calcium, and getting incorporated into the bones. As such, the milk produced by animals into whose bodies Sr-90 has been concentrated, may become radioactively contaminated.

Iodine-131 is also a highly dangerous isotope, as this element can enter the food chain at any level, and become concentrated in human body, consuming such contaminated food. Once within the body, it can damage white blood cells, bone marrow, spleen lymph nodes, and can cause lung tumours, skin cancers, sterility, defective eye sights, etc. The accidental discharges of such radio-isotopes from nuclear power stations due to causes like over-heating, melting and vaporisation of the fuel, etc., should, therefore, need to be prevented by providing very high safety levels.

A summary of exposure to organs from various radio-nuclides* is given in table 15.3, which also shows the probable means of exposure.

Table 15.3. Type of Exposure from Typical Radio-Nuclides in the Environment

Radio nuclide	Half-life	Critical organ	Form	Probable cause of exposure
H(T)-3	12.3 y	Total body	HTO	Water intake
Mn-54	300 d	Total body	Insol. particle	External
Fe-55	2.6 y	Lung	Insol. particle	Inhalation
Zn-65	245 d	Total body	Sol. particle	Dietary intake
Kr-85	10.8 y	Total body	Gas	Immersion
Sr-89	52 d	Bone	Sol. particle	Dietary intake
Sr-90	28 y	Bone	Sol. particle	Dietary intake
Y-91	59 d	Lung	Insol. particle	Inhalation
Zr-95	65 d	Total body	Insol. particle	External
Nb-95	35 d	Total body	Insol. particle	External

Contd...

Ru-103	40 d	Total body	Insol. particle	External
Ru-106	1.0 y	Total body	Insol. particle	External
Sb-125	2.7 y	Total body	Insol. particle	External
I-131	8.1 d	Thyroid	Vapour particle	Dietary intake
Xe-133	5.3 d	Total body	Gas	Immersion
Cs-134	2.0 y	Total body	Sol. particle	Dietary intake
Cs-137	30 y	Total body	Sol. particle	Dietary intake
Ba-140	12.8 y	Total body	Insol. particle	External
Ce-144	28.4 d	Total body	Insol. particle	External
Pm-147	2.6 y	Lung	Insol. particle	Inhalation
Th-232	1.4×10^{10} y	Lung	Insol. particle	Inhalation
U-233	1.6×10^5 y	Lung	Insol. particle	Inhalation
U-235	7×10^8 y	Lung	Insol. particle	Inhalation
U-238	4.5×10^9 y	Lung	Insol. particle	Inhalation
Pu-238	86 y	Lung	Insol. particle	Inhalation
Pu-239	2.4×10^4 y	Lung	Insol. particle	Inhalation
Pu-240	6.6×10^3 y	Lung	Insol. particle	Inhalation
Pu-241	13 y	Lung	Insol. particle	Inhalation

Whether the radio-isotopes are natural or man-made, their danger to the environment depends on the following factors :

1. Physical properties, such as half-life ($T_{\frac{1}{2}}$), type of emissions emitted, and energy of emission.
2. Their ability to enter the food chain.
3. Their tendency to become concentrated in animal tissues.

Some of the physical properties of a few radio-nuclides are listed in table 15.4, together with the approximate energies of emission.

Table 15.4. Energy Emission Levels of Certain Radio Nuclides

Radio nuclide	Half life ($T_{\frac{1}{2}}$)	Energy of emission E (MeV)	Type of emission
Carbon-14	5,700 y	0.15	Beta
Phosphorus-32	14 days	1.7	Beta
Iodine-131	8 days	0.8, 0.08	Beta
Strontium-90	28 y	0.5	Beta
Cesium-137	30 y	0.6	Beta
Plutonium-238	86 y	5.5	Alpha
Plutonium-239	24,000 y	5.1	Alpha
Uranium-235	7×10^8 y	204	Beta/gamma

It can be observed from this table that the high energy of emission with the presence of alpha particles make Plutonium-238 (with half life of 86 years) particularly toxic. These particles base particularly dense trails of ionization inside living cells, which might take up the isotope.

In order to ensure that such radiations do not cause harmful effects on the body, it is necessary that the quantum of these radiations, to which the body is subjected to, be restricted to safe standards. *International Commission on Radiological Protection*, by their research and past experience on the use of X-rays and radium, has stipulated the limiting radiation exposures per year per normal person.

These standard values of annual permissible radiation exposures to different organs of human body are given below in table 15.5.

Table 15.5. Annual Permissible Radiation per Year per Person

S. No.	Part of the body	Annual permissible radiation per year per person
1.	Blood forming organs, and gonads like ovaries, testies, etc.	5 rem*
2.	Bone, skin, and thyroid	30 rem
3.	All other organs of the body	15 rem
4.	Hands, forearms, feet, and ankles	75 rem
	For pregnant ladies	
	(i) during the initial 2 months of pregnancy	< 1 rem
	(ii) during the remaining 7 months	≥ 1 rem

British Medical Council (BMRC) has specified a dose, called the Emergency Reference Level (E.R.L.), which has been defined, as the concentration of radioactivity, which different parts of the body can tolerate, varying from 10 to 60 rem. This reference level is a guide to initiate counter measures like evacuation, etc., as and when the radioactivity in a particular area is detected to be more than the reference level. Other counter measures, like giving anti-atomic drugs to remove the bad effects of radioactivity may also sometimes be adopted; say for example, contamination of Iodine-131 may be removed by treating the affected people with ordinary iodine tablets**.

Larger concentrations of radioactivity not only cause adverse impacts on humans and other animals & birds, but it also affects the trees and plants. Deadly effects of gamma radiations have been observed, leading to complete destruction of trees-subjected to gamma rays for a period of 6 month, in an experimental verification. Since radioactivity causes adverse effects on all forms of biological life, it becomes imperative for man to watch and control the presence of such dangerous radiations in the environment.

Fortunately, radioactivity released in the natural environment, under normal conditions, known as the back ground radiation, is found to be hardly 100–200 milli rem, a value much lower than the tolerance limits. However, in case of accidental nuclear discharges, anti-radioactivity measures may have to be initiated, as pointed out above.

*It would be worthwhile to mention here that an ordinary chest X-ray subjects our body to a radiation of 1 rad, which equals to 1 rem for X-rays, since Q for X-rays is equal to 1.

15.13. Sources of Radioactivity in the Environment

The sources of radioactivity can be broadly divided into the following two categories:

- (1) *Natural sources*; and
- (2) *Man-made sources*.

These are discussed below:

15.13.1. The Natural Sources of Radioactivity. The natural sources of radioactivity include the following sources:

- (i) cosmic rays;
- (ii) radioactive rocks and minerals contained in the body of the Earth, or present in the environment;
- (iii) radionuclides present within the bodies of the organisms.

(i) The cosmic rays are of extra-terrestrial origin that originate from the sun and other objects beyond, in outer space. These high-energy particles include electrons, protons, helium nuclei, hydrogen nuclei, and the nuclei of such heavier elements as carbon and oxygen. Cosmic rays travel at tremendous speeds with many rays travelling near the speed of light which is 2,99,792 km/sec. Large quantities of the cosmic rays originate from exploding stars, called *supernovae*, and extremely dense stars known as *pulsars*. The sun releases cosmic radiation during spectacular radiations called *solar flares*. These cosmic rays, which originate in space, are also called *primary cosmic rays* or *primaries*. Every second, about three to six cosmic rays strike each square inch (6.25 cm²) of the Earth's upper atmosphere. However, only a few of them reach the Earth's surface. Some cosmic rays, which otherwise would enter the Earth's atmosphere, are reflected back into the space by the magnetic field of the Earth. The Earth's magnetic field can be pictured as a system of imaginary lines, called *flux lines*, that curve from the Earth's north magnetic pole to the south magnetic pole. Only particles with extremely high energies can penetrate the magnetic field near the equator, because they have to cut across the flux lines. Near the poles, even rays with low energies can travel along the flux lines and enter the atmosphere. Thus, the quantity of cosmic rays that enter the atmosphere is lowest at the equator, and increases towards the poles.

The cosmic rays entering the atmosphere collide with the gas molecules present in the upper atmosphere, bringing about intense ionization in gases. The collision of primary cosmic rays with the atomic nuclei (oxygen and nitrogen nuclei) in the atmosphere also causes the formation of *secondary cosmic rays* or *secondaries*. When a primary cosmic ray as well as the atomic nucleus it strikes, break into these smaller particles (called *secondaries*), energy is released. Some of this energy is converted into matter, creating more secondaries. A number of new particles collide again, resulting in even more particles. These collisions produce a shower of secondaries that includes all types of subatomic particles. Secondaries lose energy to the atmosphere, and so only a small fraction of them reach the Earth's surface. Still however, every minute, an average of about six particles, strike each square inch (6.25 cm²) of the Earth's surface.

The secondary cosmic rays mainly composed of neutrons, mesons, and gamma rays. Eventually, a complex mixture of particles reaches the Earth as cosmic rays. These particles also form substantial quantities of ^3H (tritium) and ^{14}C (carbon-14) in the atmosphere. Such radioactive substances, generated naturally in the Earth's atmosphere by cosmic rays, are washed out slowly, or absorbed in the precipitation to reach water bodies. The gaseous radio-nuclides from the atmosphere can also be transported to the water bodies by direct chemical reaction to form H_2O , or by their simple dissolution in water on coming in contact with the water bodies due to their movement by winds.

(ii) The radionuclides contained in the Earth's body (i.e., in the lithosphere and hydrosphere), or those handled on the Earth, provide another important source of natural radiations. All the elements above the atomic number of 82 (i.e., Pb_{82}) are radioactive in nature and emit a variable quantity of radiation. The most abundant naturally occurring radionuclides on the Earth are thorium, uranium, and potassium-40. Soils, rocks and even building materials contain small quantities of ^{40}K (i.e., K-40), and tiny amounts of Uranium and its daughter products.

(iii) Amongst the radionuclides naturally present within the bodies of living organisms, potassium-40 (K-40) is the most important, besides others like tritium (H-3), carbon-14, radium, polonium (especially contained in bones), and radon (especially contained in lungs).

The average annual radiation released by all these natural sources like cosmic rays, and radionuclides present internally in the body or existing externally on Earth, is estimated to be about 100 milli rem, though there may be variations up to the tune of 400% in different parts of the world, depending upon the altitude and local concentration of the natural radioactivity. These radiations caused by natural sources are called the background radiation.

15.13.2. Man-made Sources of Radioactivity. Man-made radiations may enter into the environment through various sources, including appliances of daily use, like colour TV sets, luminous clocks, watches, and even telephone dials, etc.; all of which may contribute to about 1% of the total background radiation received by a person. Besides, humans are significantly exposed to radiations received from medical use of X-rays and radioactive isotopes; and from use of X-rays at baggage check points at airports, etc. A small amount of radioactivity is also introduced into the environment by the use of radionuclides in industry, medicine and research. However, the most important man-made sources of radioactivity are the nuclear explosions and the nuclear power plants. Both these important man-made sources of radioactivity are briefly discussed below:

15.13.2.1. Nuclear Explosions and Nuclear fallouts as sources of radioactivity. The nuclear explosions are carried out by man for testing of nuclear weapons, and for beneficial uses like mining and excavation of harbours, canals, etc. Such nuclear explosions release huge quantity of radio-nuclides along with heat in the open environment. These radioisotopes fused

radioactive fall-out. The radionuclides in this fall-out differ from those in other radioactive wastes in that they remain fused with iron, silica and dust; and become insoluble. They look like marble particles of different colours, having different sizes, varying from a few microns to as big as snow particles.

The radio-nuclides resulting from nuclear explosions may include those that originate directly from fuel as fission products (such as Sr-90 and Cs-137, etc.), and those that are formed by the absorption of released neutrons by the ambient elements and molecules (such as Fe-59, Mn-54, Co-60, Zn-65, etc.).

In the nuclear fall-out resulting from a nuclear explosion, while the larger sized particles start reaching the Earth within a few hours by gravity, the smaller sized particles stay in the atmosphere for quite some times, till swept down by rain or snow. These smaller sized particles, usually adhere strongly to the leaves of vegetation, from where they are passed on to the herbivores, and finally to man through milk or meat. The most significant food chain transfer in this manner has been reported for Sr-90 and Cs-137, as pointed out earlier.

In aquatic ecosystems, several fall-out nuclides, such as Fe-59, Mn-54, Co-60, Zn-65, Ce-144, Rn-160, and Zn-95 form complexes with organic detritus, from where they are readily transferred to the aquatic organisms.

15.3.2.3. Nuclear power plants as sources of radioactivity. The nuclear power plants use the heat energy released from the fission reaction of the nuclear fuel; uranium being the most commonly used fuel. The uranium to be used in a nuclear power plant has to be prepared fit for such a use, through several processes, right from its mining to its inception into the nuclear reactor. Besides, the spent materials obtained from the reactors are also reprocessed to recover unburnt uranium, plutonium, and some other important fission isotopes, which can be used in medicine, research, etc.

The entire operation, starting from the mining of the fuel to the final disposal is called the *uranium fuel cycle*—when uranium fuel is used in the nuclear reactor; or the *nuclear fuel cycle*—when any other fuel such as thorium or plutonium is used as a fuel.

At almost every stage of the *nuclear fuel cycle*, liquid, gaseous and solid radioactive wastes are generated. These wastes have a great potential to contaminate the environment, and, hence, have to be disposed of very carefully, to avoid harmful effects on biological life, and the environment in general.

The important processes involved in a uranium fuel cycle are shown in Fig. 15.2. These processes start from mining of the ore, followed by its milling, and then uranium concentration into its oxide (U_3O_8) by chemical extraction process, leaving behind the crushed material containing several radioactive daughter isotopes of uranium, called *uranium mill tailings*. A low activity liquid waste is produced from chemical extraction of uranium, whereas, the uranium tailings cause radioactive pollution of air due to wind action, and pollution of water by run off, seepage, and leaching. After the concentration of uranium into its oxide (U_3O_8), it is converted by chemical conversions to uranium hexa-fluoride (UF_6), a form of uranium suitable for its enrichment and further conversion to uranium or its oxide for use as fuel.

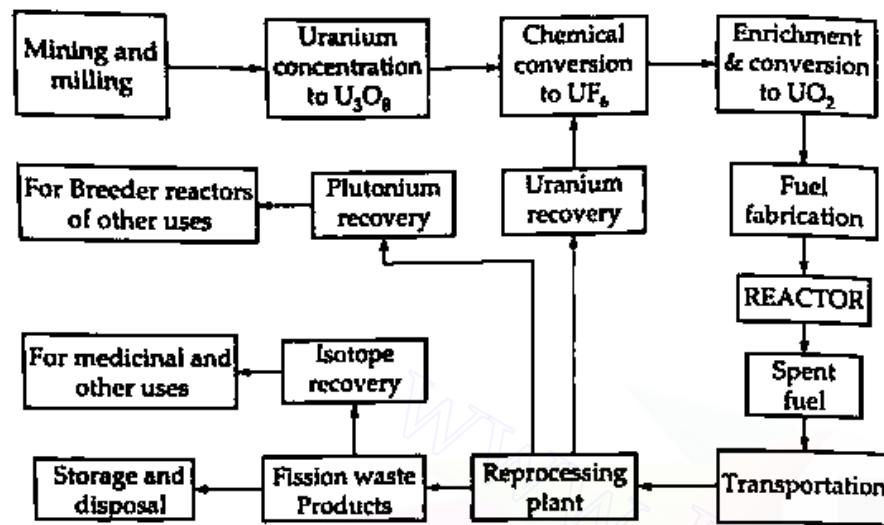


Fig. 15.2. Uranium fuel cycle.

The uranium obtained from its ore like pitchblende, as you know, is mainly U-238, with only 0.7% of U-235, which is not enough to work as a nuclear fuel. To make this uranium fit for use as fuel, the concentration of U-235 has to be increased from about 0.7% to about 2-3% in the uranium fuel, to obtain the final useful uranium, called the *enriched uranium*. The enriched uranium is finally converted into uranium or its oxide (UO_2) by chemical processes. This material is, then, powdered and fabricated into pellets to be used in the reactors.

The chemical conversion processes for enrichment of uranium and fuel fabrication process, produce a small quantity of gaseous radioactive waste, and significant quantities of liquid and solid wastes of low radioactivity, which need suitable disposal to avoid water pollution.

The fabricated fuel pellets are assembled in the fuel rods, which along with the control rods are loaded in the reactor core immersed in water. In the beginning, ^{235}U is attacked by the neutrons, resulting in its fission by release of neutrons and energy. Some of the released neutrons are absorbed by ^{238}U , converting it into ^{239}Pu – that acts like ^{235}U and breaks down into smaller elements (fission fragments) with the release of further neutrons and energy. This ultimately results to the formation of a mixture of isotopes, numbering nearly 80, and usually ranging from atomic number 30 to 63. A small quantity of some heavier elements is also present in the mixture. The fuel once introduced into the reactor core, runs for about 2-3 years, after which it needs replacement with new fuel. The *spent fuel*, called *irradiated fuel*, is stored for a few months at the reactor site in water ponds, and then transported to the *reprocessing units*.

In a radioactive fuel reprocessing plant, uranium and plutonium are chemically separated from the spent fuel, together with some other important radio-nuclides. The remaining solid mixture, which is still highly radioactive,

is stored for several years to decay, before its final disposal. The reprocessing units also produce other radioactive wastes, such as from evaporated condensates, plant floor drains and laundry, and also from decontamination operations.

Besides the liquid and solid radioactive wastes generated in the preparation and loading of fuel, as well as in the reprocessing of the spent fuel, the nuclear power plants also release radioactive waste-waters in their day to day operations. These waste-waters, containing variable quantities of radioactivity, emanate from different units. These waste-waters should be given proper treatment before their final discharge into the nearby water bodies or on land. The major liquid discharges originate during core exchanges (i.e., exchanging the core water); routine maintenance and clean-up operations; control of primary coolant chemistry; samplings; blow down of the steam generators; expansion water obtained when the plant goes from cold operation to hot operation; decontamination of clothing of workers, components, tools and surfaces; and regeneration of demineralised resins. Other units producing such radioactive waste-waters include cooling ponds, laundries & bathrooms, and radiochemical laboratories. These waste-waters, usually, have low levels of radioactivity.

Accidental discharges of radioactive radiations from accidental explosions in nuclear reactors may also lead to sudden rise of radioactivity concentrations in the environment, which may prove quite harmful not only to humans, but also to plants, animals and birds. The most prominent example of release of such dangerous radioactive radiations is offered by the *chernobyl atomic accident* that occurred in Russia on April 26, 1986. As a matter of fact, the chernobyl nuclear reactor accident was the second such nuclear accident. Prior to this accident, the *three mile island (TMI) nuclear accident* has occurred on March 28, 1979 near Middletown Pennsylvania, U.S.A., because of a series of minor errors that started with a malfunctioning valve in the nuclear reactor, which was compounded with the fact that no one discovered it for a long time. The fuel rods started to melt, but the whole situation was finally brought under control after two weeks and no casualties occurred, except that some radioactive gas and water was discharged into a nearby river. The *chernobyl nuclear accident of 1986*, however, proved a disaster, as it resulted into a full scale explosion, due to the over-heated melted uranium reacting with steam. *The roof of the reactor was blown off releasing radioactive radiations 200 times more than those released by the Hiroshima and Nagasaki nuclear bombings together—in the second world war**. This explosion had scattered radio-active radiations over a vast area, as far as Europe. So much so that the radiation levels in Scotland (UK) were found to be 10,000 times more than the normal, for a while. Though the immediate explosion killed only around 30 people, yet the large scale *genetic effects* of the resulting radio-activity shall continue for generation, and some estimates put the death toll of clean-up workers alone at 7,500.

*In the second world war, U.S.A. has dropped atomic bombs on Japan, killing more than 2 lakh people, forcing Japan to surrender. The first bombing on Hiroshima was done on

In spite of several measures taken to avoid the long range genetic effects of radioactivity in these areas, and more than 50 lakh people being constantly undergoing regular medical check ups, the crisis of confidence is growing up, as birth defects in farm animals and increased ill health among children and villagers, are being reported.

The accidents in nuclear reactors or nuclear stations differ from the explosions of atomic bombs, since a nuclear reactor cannot explode with uncontrolled chain reaction like an atomic bomb. This is because of the fact that uranium fuel in an atomic bomb is much more enriched than the uranium fuel present in a regular commercial nuclear reactor. What happens in a nuclear reactor is, that due to insufficient coolant, the temperature becomes so high in the core of the reactor that the fuel rods actually melt to liquid state. In a complete reactor melt down, the extremely hot (about 2700°C) molten uranium fuel rods melt through the bottom off the reactor, and actually sink as deep as 50 ft into the earth, beneath the power station. The molten uranium reacts with the ground water, producing large explosions of radio-active steam and debris that would affect nearby towns and population centres.

15.14. Classification of Radioactive Wastes and Their Disposal

The radioactive wastes are usually classified into the following three categories, depending upon their radioactivity levels :

- (i) *High Level Wastes (HLW)* ;
- (ii) *Intermediate Level Wastes (ILW)* ; and
- (iii) *Low Level Wastes (LLW)*.

The *high level wastes* are those which have radioactivities measured in *curies* per litre* ; *intermediate level wastes* may have radioactivities measured in *millicuries per litre* ; and the *low level wastes* have their radioactivities in *microcuries per litre*. The intermediate level category, however, is usually ignored, and only High Level and Low Level radioactive wastes are referred to.

15.14.1. High Level Radioactive Wastes and Their Disposal. High level solid wastes are produced in nuclear power plants in the form of used or spent fuel. This irradiated nuclear fuel is in solid form, consisting of small fuel pellets in long metal tubes. The spent fuel is produced after about 2-3 years, when the reactor fuel is changed by fresh fuel. This spent fuel is usually stored for about 3-4 months at the reactor site, and later transported to the *reprocessing units*. This temporary storage of the spent fuel for a few months at the reactor site helps in decaying those radionuclides that do have short half lives. The transportation of this solid waste to the reprocessing plant has to be done with extreme care in shielded casks.

*Curies (Ci) or Becquerel (Bq) represent the No. of disintegrations per second of the given radioactive material, and hence the radioactivity of a material is measured in these units. The Bq represents one disintegration per second (dps) ; while Ci represents 3.7×10^{10} disintegrations per second.

$$1 \text{ Ci} = 3.7 \times 10^{10} \text{ Bq}$$

$$1 \text{ Pico Curie} = 1 \text{ P.Ci} = 10^{-12} \text{ Ci} = 3.7 \times 10^{-2} \text{ Bq} = 0.037 \text{ Bq}$$

The high level solid waste emanating from the nuclear reactor, usually contains plutonium 239, which is formed when uranium-238 (the principal component of nuclear fuel)* captures a neutron. Since plutonium-239 has a very long half life of about 24000 years, the nuclear waste poses great difficulties in disposal, since it is likely to remain a great radioactive hazard for a very long period, unless plutonium-239 is separated out from this waste. Although, it has been possible to separate the plutonium-239 isotope in the reprocessing plant, and then to use it for breeder reactors of other uses (Pl see Fig 15.2), yet this technology is just not easily available, as is the case with the technology of uranium-enrichment (when content of U-235 has to be increased from about 0.7% as available in the ore - to about 2 to 3%). The nuclear club countries can not easily dispense with these technologies, since plutonium-239 is a critical ingredient in the production of *nuclear bombs* (or atomic bombs) ; and hence the world could be in the danger of proliferation of nuclear weapons, if the technology for isotope separation falls into the wrong hands. The plutonium waste, due to its long half life, thus, always poses great problems of disposal, in nuclear power generation.

When the technology of isotope separation is available, then the used fuel from the nuclear reactor is taken to the reprocessing plant, where uranium and plutonium isotopes along with some other radio-nuclides are separated chemically from the spent fuel. The recovered uranium isotopes are recycled to make the fuel for the nuclear power reactor, while plutonium-239 isotope is used as a fuel for breeder reactors of other uses. Other recovered radio-nuclides are also sent for medical and other uses.

Even after certain isotopes are recovered from the spent fuel, the left out mixture still contains high levels of radioactivity, and represents a *high level solid waste*. Moreover, during various stages of the reprocessing plant, a lot of high level radioactive waste-water is produced. This *high level liquid waste* need careful handling and treatment for ultimate conversion to solid form for final disposal. Before they are solidified, these high level waste-waters are usually stored in underground multi-layered thick concrete tanks for about 5 years.

As these waters have high temperatures and remain boiling, cooling is provided by coils for condensation of the vapours of the boiling waste-waters.

Extreme care is taken to prevent leakage from these underground tanks, called *holding depositories (vaults)*. The liquid wastes, after being stored in the underground tanks for about 5 years, are solidified by using advanced technological methods. These waste-waters are usually calcined in a fluidised bed process, and the calcinated powder is then incorporated into glass. The spray calcination processed liquid waste is atomised by spraying steam or compressed air in a stainless steel column, which is kept at about 600 to 800°C. The calcine so formed is then melted with borosilicate glass to be converted into solid mass.

All the high level radioactive solid wastes are kept in especially designed containers and transported for burial to the permanent deep disposal sites under the ground. The favoured sites are some special geological formations like bedded salt, basalt, gneiss, or schist, where it is believed that these

*The fissile isotope U-235 which provides the energy in the nuclear fuel is only about

wastes will maintain their integrity, and will remain in place for geological periods of time.

As a matter of fact, different sites are identified for holding high level and low level radioactive wastes. The only site identified for long time holding of high level wastes in USA is in the *Yucca Mountains in the Nevada desert*.*

This lone high level waste site of USA is designated as a monitored, *retrievable storage facility*, which implies that the waste is to be retrieved after a long period of time, when its radioactivity dies down and reaches a safe level. Some high level solid wastes, having comparatively lesser half life (say only a few centuries) can, sometimes, be kept in safe leak proof containers, and disposed of by shallow burial or sea dumping.

Every year, the world's 442 nuclear power plants and reactors** produce about 12000 tonnes of high level radioactive waste, which is needed to be disposed of safely. The nuclear power production is further likely to grow in future, which will further increase the production of nuclear waste.

15.14.2. Low Level Radioactive Wastes and Their Disposal. Low level radioactive waste-waters are produced frequently in *day to day operations of nuclear power plants*, in various operations, such as during : core water exchanges, maintenance and clean up operations, samplings, blowing down of steam generators, washings of contaminated tools, components, clothings, etc. Low level radioactive solid and liquid wastes are also produced when the uranium is extracted and prepared for nuclear fuel. The *mill tailing wastes* are the residues, remaining after the processing of natural ore to extract uranium and thorium. The radioactivity in the resulting solid and liquid wastes is generally high enough, but is lower than those of high level wastes. These intermediate level wastes are produced in large quantities, and finally disposed of with low-level wastes after giving some treatment.

Low level wastes are also produced from *research laboratories, hospitals, diagnostic centres, army ammunition plants, etc.* The low level wastes, besides contaminated waste-waters, may contain solid wastes like protective clothings, tools, filters, rags, medical tubes, and many such waste items.

Very low level radioactive waste-waters are usually produced in high volumes, which do not permit their complete containment, and are, hence, usually disposed of into the open environment including water bodies, with or without any treatment. Care must, however, be taken to see that the discharged radio-active isotopes do not concentrate in the food chain, or raise the background radiation levels to any appreciable value.

The low-level radioactive waste-waters are generally treated by the usual waste-water treatment methods, such as *flocculation, precipitation, filtration, ion exchange, and thermal evaporation*. The *precipitation* of radio-nuclides can be achieved by using aluminium salts, iron salts, tannic acid with lime, phosphate with lime, ferrocyanides, and excess lime-soda ash. While the decanted effluent is disposed of in any manner, the radioactive sludge so formed is sent to the special burial sites.

*This site was selected in 1987 after hectic search for 47 years, and was approved as the final disposal site for spent nuclear fuel, by the House of Representatives, USA.

The *ion-exchange* procedure can be followed in case the volume of waste-water is small, and the total solids content is up to 1000 mg/L, and when a simultaneous final polishing of wastes is also required.

The *thermal evaporation* involves continuous evaporation of waste-waters in evaporators, made of special stainless steel. The condensed vapour (condensate) is discharged as usual, while the concentrated radionuclides remaining in the evaporators are taken to the burial sites.

The concentrates or sludges obtained from the above mentioned conventional treatments of low level radioactive waste-waters can, sometimes, be disposed of in hydro-fractures in the ground by mixing the waste with cement, etc. In this technique, a well is drilled to the desired geological formation and provided with a casing. The casing is perforated at desired levels. The pressure is applied through the perforated casing, as to fracture the desired geological formation. The radioactive waste sludge, mixed with cement, fly ash, attapulgite, illite, beta gluconolactone and tributyl phosphate is then injected in to the fractured rocks, which spreads in the rock fractures in thin sheets and forms a dense solid for permanent retainment of wastes under the ground at selected isolated sites.

In addition to the above mentioned conventional methods used for reducing the volumes of low activity waste-waters, various new methods are being developed for *volume reduction* of intermediate level waste-waters, such as those emanating from army ammunition plants. Such highly contaminated waste-waters can now be treated to remove depleted uranium (DU) through a newly discovered process, called the *Meta Lock process*, developed by KEECO, an environmental company of USA that offers water management systems based on its silica micro encapsulation process. *Meta-Lock* is highly specific towards radioactive ions and is able to reduce high volumes of diluted radioactive effluents to a small quantity of radioactive sludge and non-radioactive water. The volume of radioactive material is reduced by 95-98%. The process involves a calcium and silica based powder composed of various chemically active groups that result in the encasing of the radioactive contaminants into an inert sludge, when brought into contact with moisture or waste water. The process is controlled by using pH as the primary process parameter. Water treated by *Meta-Lock* has a concentration of uranium below 1 ppm (instrument detection limit) and is also non-radioactive. The universal adoption of the process, however, is still under initial stages.

Invariably, all such new processes are very complex and expensive.

Low level or Intermediate level wastes may, for safe disposal, be kept in containers, which can be stored in *water-tight R.C.C. vaults*, which are properly designed from engineering considerations, and are constructed either above the ground or below the ground. *Before being placed in containers, the radioactive wastes must, however, be reduced in volume by techniques like evaporation (for liquid wastes), and incineration and compression (for solid wastes).*

The important low level waste depository sites in USA are : *Maxey Flats-Kentucky, Sheffield-Illinois, West Valley-New York, etc.*

open sea, although the emphasis is always on *recycling* and *containment* in containers placed in safe deposit vaults, as stated earlier. While discharging such waste waters in oceans, one should, however, at least make sure that the discharged isotopes do not settle down and get trapped in the sea bed, as may happen with plutonium-239, which gets bound in the sediment. Moreover, the radioactivity concentrations in such water bodies, should be continuously watched to keep their radio-activity levels at much-much below the limiting standards.

15.14.3. Disposal of Nuclear Wastes in India. The position of disposal of nuclear wastes in India is, though not very acute at present, but is liable to become so in future, as our nuclear programme gets momentum. We have three sources of nuclear wastes ; i.e. (i) *the nuclear mines* ; (ii) *the nuclear power plants* ; and (iii) *the nuclear research reactors*.

Our nuclear mines for extracting uranium ore are located at Jaduguda village in Bihar State. Once the uranium ore is extracted at these mines, it is sent to a facility centre in Hyderabad for processing to secure uranium. Earlier, the waste water from the processing plant was being dumped in a nearby pond, but since it contaminated some nearby wells and residents protested, the waste is now returned to Jaduguda mines and dumped inside the mine campus.

The wastes from our nuclear power plants are presently being dumped in each power plant. The spent fuels, from which weapon grade uranium and plutonium are produced after reprocessing, are also being stored at the plants site, until it is removed for reprocessing. *This waste is kept for years in chilled water, to cool.* The nuclear waste after reprocessing has to be suitably disposed of. According to one estimate, India has so far produced about 17000 tonnes of high level waste from reprocessing on spent nuclear fuel.

Our nuclear research reactors, which are controlled by the Bhabha Atomic Research Centre (BARC) Trombay are also producing nuclear wastes.

In spite of India producing a lot of nuclear waste, it still needs a safe site to store the nuclear wastes generated by its vast establishment, but the problem is that no country in the world has found a totally safe fool-proof way to keep the deadly waste buried safely. The Bhabha Atomic Research Centre is presently having a *solid waste storage surveillance facility* in operation at Tarapur, Maharashtra. This facility is used for the interim storage of solidified high-level radioactivity waste products, produced in the waste immobilisation plant at the Tarapur nuclear power station. A waste immobilisation plant is also under construction at Trombay, and work has begun on another plant at Kalpakkam, Tamil Nadu.

In its search for a safe underground storage facility for the radioactive wastes, BARC had once (in 1990s), examined the possibility of using an abandoned gold mine in Kolar Gold Fields in Karnataka (one of the deepest mines in the world). It even set up a laboratory to simulate the high temperature conditions, which are likely to be generated by the nuclear wastes. But due to the presence of underground water, the site was abandoned. The BARC is still searching for a deep site, within the thick granite rock deposits (upto 1 km thick) of Rajasthan, in barren land of the

site, Pokhran. After several failures, this place has been selected as the most suitable place for setting up a laboratory in preparation for the site, which could be used to store nuclear wastes from various nuclear units. The granite rock samples upto 160 m depth, which were excavated/drilled in the area were, infact, thoroughly studied for heat resistant and hydrological characters before declaring this area as a fit place for developing the country's nuclear waste depository. Such surveys and testing is essential, since the rocks of the depository have to withstand the high temperatures of radioactive wastes, and the area should not have any ground water source, as not to cause its contamination by the wastes. Keeping all such factors into view, the Indian Govt. in August 1999, has declared that the country's nuclear waste would be deposited in parts of Rajasthan and Madhya Pradesh's granite belts. The selection of the site in village Sanawada near Pokhran, was, however, opposed by the local NGOs and the villagers, and the drilling/sampling work in second phase below 160 m depth, was suspended by the Govt. The notification of safe depository for Indian high level radioactive wastes, thus, still continues to be a dream.

Disposal of nuclear wastes may, thus, continue to be a serious problem with every country, including India, since no country wants a disposal site on its land.

An international effort is, therefore, on for cooperative disposal. In July 2004, the Russian President, Mr. Vladimir Putin, called for regional disposal sites, which suggestion was readily accepted by the *International Atomic Energy Association (IAEA)*. However, no country, except Russia, offered such a dumping site on their land. Russia offered to store spent fuels of other countries at its *Mayak Chemical Combine Facility* in the Southern Urals. The cost demanded for such an offer was, however, exorbitantly high. There were no takers for the offer, since Russia through this offer, hoped to secure 20 billion dollars for modernising its nuclear establishments. No country has accepted this offer so far.

The requirement of such storage facilities will however, increase in future, as the USA's initiative for dismantling of nuclear weapons gets momentum. Keeping this in mind, the Russian Parliament, in the year 2001, has legalised the import of nuclear spent fuel. Russia is also intending to import and store such fuels in future, at a heavy price, of course. The Russia is also busy in searching new sites in its country to offer storage facilities for spent nuclear fuel, in future, on a large scale.

Krasnokamensk city, 7000 km east of Moscow, has been suggested as a new possible site for major spent fuel repository. Russia intends to earn huge money through such storage facilities. USA alone, is going to spend about \$450 million under its *Global Threat Reduction Initiative (GTRI)*, which envisages call back of all the highly enriched uranium, which was supplied by the former USSR to 17 nations. The spent fuel of the uranium will be retrieved by the year 2010. Both will be shipped to Russia for storage—a huge project, on which USA will spend about \$450 million. USA, infact, especially after the terrorist attack of 9/11 on its World Trade Towers, is very keen to trace and retrieve all the nuclear fuel that was supplied by the USSR ; a daunting task indeed.

15.14.4. Discharge of Low Level Radioactive Wastes in to the Sea. Inspite of the fact that more and more emphasis is now being laid on reprocessing and concentrating the radioactive wastes for their safe disposal in expensive containers to prevent it from reaching the open environment, yet because of the high cost of chemical reprocessing and non-availability of technology, smaller amounts of radioactive wastes have customarily been released into the sea in carefully controlled amounts off the west coast of Britain. For example, the radio isotopes like ^{90}Zr , ^{90}Nb , ^{106}Ru , ^{137}Cs , ^{144}Ce , $^{238,239,240}\text{Pu}$, have been released in fresh sea over the past thirty five years. The amounts of these isotopes are, however, limited in accordance with the rules of *International Commission for Radiological Protection (ICRP)*. The amounts must be low enough to fulfill the following objectives :

- Regardless of cost, the public must never be exposed to levels above the ICRP recommended limits.
- Regardless of cost, the entire population must not receive radiations more than 1 rem per person over 30 years.
- Keeping the cost in mind, doses should be kept as far below the mandatory limits as possible.

When radioactive waste is discharged into the sea, one must make sure that the discharged isotopes do not become trapped or concentrated in the sea bed, as happens with Plutonium-239, almost whole quantity of which, gets bound in sea bed near the point of outfall, as shown in table 15.6.

Table 15.6. Concentration of Plutonium-235 in Sea Bed

Distance from outfall in km	Concentration of Plutonium-235		Concentration factor in sediment
	in water pCi/l	in sediment pCi/g	
1	0.48	36	7×10^4
9	0.46	12	3×10^4
110	0.04	0.04	0.1×10^4

The discharge of Plutonium-235 must, therefore, be absolutely minimised, or completely stopped.

It is possible to monitor the amount of radioactive isotopes in the sea by making use of *biological monitoring organisms*, which live attached to the sea bed for long periods in the same area. In Finland, the authorities are studying *mussels (mytilus)* in order to obtain an early warning of any environmental danger from their nuclear power programme.

The back ground radiation in the sea also needs observations, as it is significantly affected by nuclear waste discharge. The normal level of this background radiation is about 360 milli rem per year. In the Irish sea near the Windscale reprocessing plant, the background radiation has been observed to be as high as about 600 milli rem per day. Controlling the background radiation in the sea becomes very important for fish and sea animals, since higher radiation levels (such as about 10 rem) may bring about mutation or genetic changes ; and still higher levels (of the order of 100 rem) may lead to large scale mortality.

The legislation which controls the handling and disposal of radioactive

E-WASTE

15.15. Definition of E-Waste

Electronic waste, popularly known as *E-waste*, can be defined as electronic and electrical equipments/products (including the connecting power plugs and batteries), which have become obsolete due to

- changes in fashion, style and status ; and
- nearing the end of their useful life.

15.16. Classification of E-Waste

E-waste encompasses ever growing range of obsolete electronic devices, such as computers, servers, main frames, monitors, TVs and display devices, telecommunication devices such as cellular phones and pagers, calculators, audio and video devices, printers, scanners, copiers and fax machines besides refrigerators, air conditioners, washing machines, and microwave ovens. E-waste also covers recording devices such as DVDs, CDs, floppies, tapes, printing cartridges, military electronic waste, automobile catalytic converters, electronic components such as chips, processors, mother boards, printed circuit boards (PCB's), industrial electronics such as sensors, alarms, sirens, security devices, automobile electronic devices, etc.

15.17. Adverse Health and Environmental Impacts of E-waste and its Improper Disposal

Electronic and electrical equipments are made up of several components, many of which contain toxic substances, like *lead, chromium, mercury, beryllium, cadmium, acids, and plastics*, etc. These toxic substances can have highly adverse impacts on human health and the environment, if not handled properly. Often these hazards arise due to improper recycling and rudimentary processes used for disposal of E-waste.

For example, *Cathode Ray Tubes (CRTs)* of Television sets have high content of carcinogens such as *lead, cadmium, barium, phosphor and other heavy metals*. When disposed carefully in a controlled environment, they do not pose any serious health or environmental risk. However, breaking, recycling or disposing CRTs in an uncontrolled environment without the necessary safety precautions can result in harmful side effects for the workers and release toxins into the soil, air and groundwater.

Similarly, improper breaking or burning of *printed circuit boards (PCBs)* and switches may lead to the release of *mercury, cadmium and beryllium* which are highly toxic to human health.

Another dangerous process is the recycling of components containing hazardous compounds such as halogenated chlorides and bromides used as flame-retardants in *plastics*, which form persistent dioxins and furans on combustion at low temperatures (600-800°C). Copper, which is present in printed circuit boards and cables, acts as a catalyst for dioxin formation when flame-retardants are incinerated. The PVC sheathing of wires is highly corrosive when burnt and also induces the formation of dioxins. A study on burning printed wiring boards in India showed alarming concentrations of dioxins in the surroundings of open burning places, reaching 30 times the Swiss guidance level.

Land-filling of e-waste, one of the most widely used methods of disposal, is prone to hazards because of leachate which often contains heavy water resources. Even state-of-the-art landfills which are sealed to the long-term are not fully safe. Older landfill sites and uncontrolled dumps, however, pose a much greater danger of releasing hazardous emissions. Mercury, Cadmium and Lead are among the most toxic leachates. Mercury, for example, will leach when certain electronic devices such as circuit breakers are destroyed. Lead has been found to leach from broken lead containing glass, such as the cone glass of cathode ray tubes from TVs and monitors. When brominated flame retarded plastics or plastics containing cadmium are landfilled, both PBDE and cadmium may leach into soil and groundwater. In addition, landfills are also prone to uncontrolled fires which can release toxic fumes.

An overview of the toxic substances released along with their adverse health effects, due to improper operations involved in rudimentary disposal methods generally adopted for disposal of E-Waste, are shown in table 15.7.

Table 15.7. Environmental and Occupational Hazards posed by Disposal of Certain Categories of E-waste

S. No.	Component	E-waste product and operation involved in disposal	Adverse Health Effects
(1)	(2)	(3)	(4)
1.	Lead	Mechanical breaking of Cathode Ray Tubes (CRTs) and Removal of solder from microchips, releasing lead as powder and fumes.	A neuro-toxin that affects the kidneys and the reproductive system. High quantities can be fatal. It affects mental development in children.
2.	Chromium	Used to protect metal housings and plates in a computer from corrosion.	Inhaling hexavalent chromium or chromium VI can damage liver and kidneys, and cause bronchial malady, including asthmatic bronchitis and lung cancer.
3.	Beryllium	Found in switch boards and printed circuit boards.	It is a carcinogen and causes lung diseases.
4.	Mercury	Released while breaking and burning of circuit boards and switches.	Damages brain and kidneys, Impairs foetus growth and harm infants through mother's milk. Mercury in water bodies can form methylated mercury through microbial activity, which is toxic and can enter human food chain through aquatic life forms.

(1)	(2)	(3)	(4)
5.	Cadmium	It is released as powder while crushing and milling of plastics, CRTs and circuit boards.	A carcinogen, long term exposure causes itai-itai, which affects kidneys and softens bones. It may be released with dust, entering surface water and groundwater.
6.	Plastics	Found in circuit boards, cabinets and cables. Burning PVC a component of plastics also produces dioxins. Even the dust on computer cabinets contains BFR.	They contain carcinogens. BFRs or Brominated Flame Retardants give out carcinogenic brominated dioxins and furans. Dioxins can harm reproductive and immune systems.
7.	Acids	Sulphuric and hydrochloric acids are often used to separate metals from circuit boards.	Fumes contain chlorine and sulphur dioxide which cause respiratory problems. They are corrosive to the eye and skin.

15.18. Menace of E-Waste in India

India produces about 4,00,000 tonnes of electronic waste each year of its own. In addition, undefined quantities of E-waste are received in this country through legal or illegal transboundary movements from abroad, particularly in the form of computer waste, as reusable components.

With the extensive and increasing use of computers, mobile phones and other electronic equipments, and people dumping old obsolete goods for new improved ones, the amount of E-waste generation in this country has been steadily increasing. So much so that India generated about 3,30,000 tonnes of E-waste in 2007, which is equivalent of 110 million laptops. About 10% of the E waste generated every year is recycled and the remaining is refurbished.

Due to the lack of government legislations on E-waste and the absence of any standards for their handling, recycling or disposal, these toxic hi-tech products mostly end up in the hands of informal operators for recycling and recovery of metals and other costly byproducts, through rudimentary and risky processes, under unhygienic uncontrolled and open environment. During these processes, open burning of plastics and use of acids for recovery of metals, are often used, causing a lot of air pollution through the evolution of dioxines and discharge of acidic and other wastes into the rivers or in landfills. Seelampur colony in Delhi and Moradabad town in U.P. have become the hubs of such informal operators who are breaking and burning various electronic parts to extract metals, causing a lot of air, water and noise pollution, besides endangering the health of workers, who are involved in these manual operations.

In spite of the fact that such a huge quantity of E-waste is being generated or handled in the country, there does not exist many organised formal operators, having proper handling and recycling facilities. The first such facility has of course been created by a company called the Attero Recycling, which has established its recycling plant near Roorkee. The company claims it

developed in their laboratories. There are various units in its plant, like shredder, separator, smelter, and electro-refinery, with research and development facility. This plant can process up to 36000 tonnes of E-waste in a year, though at present, it is getting only 600 tonnes of E-waste. Table 15.8 highlights the major differences between an informal recycler and a formal organised recycler in their operations involved in dismantling and disposal of a discarded computer.

Evidently, the cost incurred by an organised formal recycler will be much higher than that incurred by an informal recycler, while the pollution and hazard potential of a formal operator is much less than that of an informal operator. Unless the Government comes out with a law, which forces the informal operators to unite, organise and form societies to create factories and plants for safe, proper and scientific disposal of E-waste, the imminent threat to human health and environment will not abate.

Table 15.8. Informal Vs Formal Recyclers in their Operations Adopted for Disposal of a Dismantled Computer

Note : Dismantling a computer into its basic parts is not Hazardous. Then begins the dirty work	
Informal Recycler/Operator	Formal Recycler/Operator
• Cathode ray tubes' (CRTs) are broken down manually to separate its components—glass, metal and copper. The glass, comprising lead, is sold to bakeries or bangle makers. Since it retains heat, the glass goes into the base of ovens. Phosphors, if inhaled can be toxic. The old CRTs are also sometimes sold to non-branded television makers.	• Components of cathode ray tubes are separated by heating in a closed chamber, which sucks out phosphors from the components. They are then crushed in shredder machines. The glass that contains lead is sold to companies that manufacture CRT's.
• Circuit boards have gold-plated brass pins, microchips and condensers. Heating separates these components. Fumes released during heating are toxic. Gold-plated brass pins are soaked in acid to recover the gold and brass separately. Microchips and condensers are heated in big containers filled with acid to extract metallic parts.	• Circuit boards are crushed in shredder machines. They are sent to approved smelters abroad, where after smelting, at 1200°C, the metals in the circuit board collect together. The plastic gets burnt. Since smelting is carried out in closed chambers at high temperature, it is not hazardous. The metals—lead, copper, nickel, tin, gold, silver, palladium—are then separated by electro-refining.
• No safety precautions are followed. Informal recyclers paid ₹ 200-300 daily in Seelampur; ₹ 100-150 in Moradabad to their workers.	• Protective equipments—gloves, masks, shoes, caps—are provided to employees. ₹ 5,000 per month paid to unskilled workers.
• Minimal capital investment required. Cost includes price of purchased scrap, bribes given to transfer it across state borders, Cost incurred on set up and shops, and rent for the work space.	• Investment for a dismantler is about ₹ 30 lakh and for a recycling plant, it may be as high as about ₹ 25 crore.

Reacting to the above necessity of urgent action needed on behalf of the government, the Ministry of Environment and Forests, GoI, has notified the *E-waste (Management and Handling) Rules, 2011*, on May 12, 2011, one year after the Draft Rules were published for public response on May 14, 2010. These rules have come in to effect wef May 01, 2012, one year after they were notified. The one year gap was given to the various stakeholders, including manufacturers, collectors, dismantlers and recyclers, a chance to put their mechanisms of e-waste management in place.

These Rules fix responsibilities of the Producers, Collection centres, Consumers or Bulk Consumers, Dismantlers, Recyclers separately. These rules also provide for seeking Authorization and Registration for handling E-wastes from the State Pollution Control Boards or Pollution Control Committees in U.Ts. State Pollution Control Boards and Committees are given powers to suspend or cancel such authorizations. These rules also describe the procedure for grant of registration.

These rules also have chapters on Storage of e-wastes; Reduction in the use of hazardous materials in the manufacture of electrical and electronic equipments, etc.

Certain salient provisions of these Rules are shown in Table 15.9.

Table 15.9. Salient Provisions of the E-waste (Management and Handling) Rules, 2011

• Producers extended responsibilities include collecting e-wastes generated from the end of life of their products, and to ensure that such e-wastes are channelized to registered dismantlers or recyclers. Producers, shall hence ensure such collection and channelisation by their authorised collecting agencies or by their collection centres, and shall finance and organise a system to meet the costs involved in the environmentally sound management of e-wastes generated from the 'end of life' of its own products and historical wastes available on the date from which these rules come in to force. The financing arrangement shall be transparent. The producers may choose to establish such a system either individually or by joining a collective scheme. They shall also create public awareness of such facilities and collection centres. • Producers need to comply with the threshold limits specified for the use of certain hazardous substances like Lead, Mercury, Cadmium, Chromium, Polybrominated biphenyl or diphenyl ethers, in the production of electrical and electronic items. However, manufacturing of electrical and electronic equipment for the use of defence and other such strategic applications are excluded from this provision. • Every dismantler and recycler shall have to be registered with State Pollution Control Board or Pollution Control Committee. • State Pollution Control Boards or Committees, responsible for grant of authorization, monitoring compliance of authorization and registration conditions, will take action against violations of rules. However, there is an emphasis on the need to hear out the other party-the violator-before any action is taken against that party. The Central Pollution Control Board shall monitor the compliance conditions stipulated for granting registration.

These rules, however, lack in listing out environment friendly technologies to be used while disposing of e-wastes. This is primarily because such

*Complete text can be seen on website:

http://moef.nic.in/downloads/rules-and-regulations/1035_e_eng.pdf

technologies are in the evolving and experimental stages. It is also expected that the producers(manufacturers) of electrical and electronic equipments & components shall also gear up to bring changes in the compositions of their products to reduce the use of harmful metals and substances, and will certainly try to develop their own methodologies for recycling and reusing their own obsolete products to make gains.

Reputed companies like "DELL" claims to have already established a thorough mechanism for dealing with its own electronic wastes, even in the absence of any legislative compulsions. In 2006, Dell started a programme in India, which involved picking up the unit that needs to be recycled from the consumer. In another effort to encourage recycling of personal computers, Dell has launched a discount coupon where consumers can send their old computers to the firm for free recycling and redeem a coupon of ₹ 1000/- on the purchase of their next Dell computer. All such measures need to be initiated by even smaller companies of electrical and electronic components to encourage general public to return their obsolete items at some token price to the producers rather than selling them over to the kwariwallas.

PROBLEMS

- Define and explain the term 'biomedical wastes.'
 - How are bio-medical wastes endanger biological life including the humans?
 - How are bio-medical wastes managed successfully, as to avoid their harmful effects on humans?
- Explain the term 'colour coding' as is used in relation to the biomedical wastes, and how does it help in safe disposal of bio-medical wastes?
 - How are sharp wastes taken care of in safe collection of bio-medical wastes.
 - How are hazardous biomedical wastes labelled for easier identification?
 - How are biomedical wastes stored on site till they are transported for treatment?
- Enumerate and explain the various methods which are used for safe disposal of hazardous solid and liquid wastes from hospitals and nursing homes.
- Write brief notes on the following :
 - Autoclaving method of disposal of biomedical wastes.
 - Microwaving method of disposal of biomedical wastes.
 - Hydroclaving Vs. Microwaving treatment methods for disposal of biomedical wastes.
- How are hazardous solid and liquid wastes disposed of by incineration? Name and describe the working of the two widely used types of incinerators which are used for incinerating the liquid and solid wastes.
- Differentiate between solid wastes and liquid wastes.
 - How are liquid wastes incinerated?
 - Name and describe the working of a conventional rotary kiln incinerator, which is used for disposal of solid hazardous wastes : Can such an incinerator be designed to incinerate aqueous wastes, and if yes, then how?
- Draw a neat sketch and explain the working of a conventional kiln incinerator ; and indicate and describe possible variations.
- Differentiate and explain between the :
 - Parallel and counter current flow types of kiln incinerators ;
 - Slagging and non-slugging types of kiln incinerators.
 - Write down an equation which can be used to compute the waste retention time of a rotary kiln of an incinerator.

- Describe the air polluting effects of incinerators which are used for disposal of hospital wastes.
- Discuss the importance of human resource management in the disposal of biomedical wastes.
 - How can you minimize biomedical wastes?
 - Enumerate the various methods which are used for disposal of biomedical wastes, and what are the environmental impacts of each of these methods of disposal.
- Write brief notes on :
 - Colour coding and proper collection of hospital wastes.
 - Methods of disposal of hospital wastes.
- Define the following :
 - Atom
 - Atomic number of an element
 - Atomic mass number of an element
 - Radioactive isotopes
 - Half life of radio-nuclides.
 - Explain the various types of radioactive radiations. How are they evolved and what are their properties? How do these radiations impact the biological environment?
- Define and explain 'radionuclides', indicating their characteristic features.
 - What is nuclear fission? How does it help in producing nuclear electricity?
- Define and explain radio-activity and radioactive radiations.
 - What are the old and new S.I. units of absorbed radiation, and how are they related?
 - How is the damage produced in human body by radioactive radiations, measured? Indicate the relation between the old and new units which are used to indicate such a damage.
 - What types of diseases are caused by radioactive radiations in human beings, and how and when such exposures occur?
- Enumerate and briefly explain the various sources of radioactivity in the environment.
- How are radioactive wastes generated in production of nuclear power? Explain the uranium fuel cycle in this context.
 - How are radioactive wastes classified depending upon their levels of radioactivity, and how are these different level wastes disposed off?
- Differentiate between high level and low level radioactive wastes, indicating the methods of safe disposal of both these types of wastes. How are radioactive wastes being disposed off in India?
- Write notes on the following :
 - Radioactive isotopes, their characteristics, and life spans.
 - Radioactive disintegration and radio-active radiations.
 - Storage of high level radioactive wastes.
 - Impacts of radioactivity on biological environment.
 - Basel convention.
- Define and explain the following terms :
 - Relative Biological effectiveness (RBE) of a radiation
 - Annual permissible radiation exposure on humans, and Emergency Reference level
 - Cosmic rays
 - Background radiations
 - Holding depositories and vaults.

(ii) Similarly, fresh air normally contains about 0.04% of carbon dioxide ; whereas the exhaled air contains as high as 50% of carbon dioxide. On an average, about 17 litres per hour of CO_2 is exhaled by an adult human being through respiration.

CO_2 is not toxic, and its smaller concentrations upto about 0.04% rather stimulates respiration ; but the higher concentrations of about 1.5% cause nausea, depression, and headache. When CO_2 concentration rises to about 2.5% or so, it may even extinguish a burning candle. Still higher concentrations of the order of 5% may cause fainting and prove fatal.

To avoid such CO_2 excesses in a building, it is necessary to provide sufficient entry of fresh air, through proper ventilation.

(iii) A person, on an average, produces about 300 B.Th.U. ($\approx 69 \text{ kC}$) of heat per hour. A large part of this heat is lost by leakage through the rooms. In spite of such leakage, the room temperature may considerably rise, if it is occupied by many persons. This is because of the reason, that about 38 B.Th.U. (8.7 kC) of heat can raise the temperature of about 38 cum-sized room ($4 \text{ m} \times 3 \text{ m} \times 3 \text{ m}$, approximately) by about 1°C .

The heat so produced by occupants of the room is either to leak out to the atmosphere, or is to be ultimately absorbed by their bodies. And since a body temperature is to be maintained at 37°C (98.4°F), this extra heat has to be continuously dissipated by the occupants themselves. Higher outside temperatures retard this dissipation, reduces leakage, and thereby causing discomfort to the occupants. If things become severe, it may lead to heat exhaustion, heat cramp, and finally heat stroke. Continuous supply of fresh air through proper ventilation is, therefore, very necessary to avoid heat effects.

(iv) Moisture, in the form of water vapour, is released by inhabitants of a building @ about 1.08 kg per day (45 gm per hour). This increases the humidity of the room/building, thereby decreasing evaporation and cooling of the bodies of the inhabitants, and thus causing them discomfort. This moisture, supported by the dust particles, also acts as carrier of germs and pathogenic bacteria from one person to another, causing water borne diseases.

(v) Organic matter and odours are released by human beings from their skins, clothings, and mouths. The increase of these in an enclosed space, occupied by several persons, may cause nausea, headache, and may even aggravate ones existing illness.

In fact, the water vapour (moisture), released by the inhabitants of a building, is the biggest carrier of bacteria and germs, and therefore is responsible for many airborne diseases like influenza, flu, viral fever, tuberculosis, etc. The dust particles present in the room, also help the water vapour in carting organic matter, odours, and diseases from one person to another.

Even serious diseases like scarlet fever, whooping cough, measles, and lung diseases, etc. get spread through crowded buildings and shops. In order to avoid such bad effects of occupancy of a building, it is absolutely necessary to design it in a manner to ensure proper and sufficient ventilation, thereby avoiding all the above bad effects of contamination of existing air, by ensuring

16.4. Purpose of Ventilation

Ventilation, as stated earlier, is meant for supply of fresh air, and to replace the old hot used up (exhausted) air. The ventilation ensures the removal of bad effects of occupancy of an enclosed space :

- (i) by providing necessary oxygen to remove oxygen deficit caused by respiration ;
- (ii) by removing and diluting CO_2 in the air ;
- (iii) by lowering down the temperature by removing hot used up air and replacing it by colder fresh air ;
- (iv) by reducing humidity ; and
- (v) by reducing body odours.

16.5. Extent of Ventilation Required and Ventilation Standards

In olden days, it was thought that the poisonous CO_2 released by inhabitants is mainly responsible for causing pollution in houses and other public buildings. It was also thought that CO_2 content increasing beyond 0.06% in the room, would cause very harmful effects. Accordingly, the ventilation standards were framed on limiting the CO_2 of the used up air to 0.06%, as against the normal content of 0.04% of fresh air.

This purification standard of 0.06% of CO_2 means that the air gets contaminated when its CO_2 content increases from 0.04% to 0.06%. In other words, addition of 0.02% of CO_2 in the air by respiration will contaminate the air, which further means that the addition of 0.02 cum of CO_2 will contaminate the air of a room of 100 cum capacity.

Moreover, since an adult person releases 17 litres (0.017 cum) of CO_2 per hour, we can, conclude that 0.02 cum of CO_2 will be released by an adult in $\frac{0.02}{0.017} \times 60 \text{ min} = 70.6 \text{ minutes}$. Hence, an adult person, if kept in a closed room of 100 cum volume, will contaminate its air in 70.6 minutes.

If we consider a room of an average size $10 \text{ ft} \times 10 \text{ ft} \times 10 \text{ ft}$, i.e. $1000 \text{ ft}^3 = 28 \text{ cum}$ volume, we find that such a room of 28 cum capacity will be contaminated by a single adult in

$$= 70.6 \text{ min.} \times \frac{28}{100} = 20 \text{ min.}$$

In other words, a room of 28 cum volume will be contaminated by the presence of a single individual in 20 minutes, and hence air of this room will need to be changed at every 20 minutes ; i.e. 3 changes per hour will be required, with total air requirement of $3 \times 28 = 84 \text{ cum per hour}$.

This will, however, be true only if there is no automatic ventilation through the loose door and window fittings, and also the ventilation that takes place when the doors of a room are occasionally opened. Due to such automatic ventilations, the requirement of air will get reduced. On the other hand, the requirement of air will increase if the number of inhabitants is more than 1, or if the room volume occupied per person is less than 28 cum. Moreover, this requirement of air is based upon the assumption that 0.06% CO_2 content will start causing discomfort to the inhabitants, needing air replacement ;

whereas, infact, in these days, it has been established that CO_2 contents upto 1% or so, can be easily withstood. Due to these reasons, the air requirement was considered much more in olden times than in modern days. The air requirement of as high as 50 cum per hour per person* was not considered infrequent in olden days. This requirement has, nowadays, not only been toned down to about 15–30 cum/hr, but rather the entire concept of ventilation has undergone a change.

Now-a-days, it has been established that maximum air change is required not for keeping CO_2 under control, but is to ensure proper heat dissipation and cooling of the human body, as explained below :

[The metabolism in all living beings produces heat, which is partly (20%) consumed in their different physical and chemical activities. The remaining 80% heat, has to be dissipated through conduction, convection, and evaporation, so as to maintain the thermal equilibrium of the body.

The blood in the body carries the heat to fine capillaries near the skin, and from there, it dissipates into the atmosphere by conduction. Due to this, the temperature of the surrounding air rises, which sets up the convection currents. Fresh air comes nearby, and carries away heat. If the rate of its passage is slow, the body feels discomfort ; whereas if this passage is accelerated through fans, etc. more relief is secured.

During summer season, the temperature difference between the body (at 37°C) and the surrounding air, becomes very low, and the heat gradient becomes very flat, and hence the rate of conduction falls down. Mechanical ventilation then becomes most essential.

When the surrounding temperature increases even beyond the body temperature, as happens in a tropical country like India, where 40 to 45°C temperature is quite common during summers, both conduction and convection stops functioning. The evaporation of the body sweat can only cause cooling. The rate of this evaporation also reduces when humidity is high. Hence, on a hot and humid day, body feels more discomfort. The comfort can then be increased by increasing the air movement by using fans, and also by increasing the surface area of evaporation by removing clothings. Lungs also help in removal of heat through convection and evaporation. In hot weather, deeper and frequent breathing expels more heat.

It thus becomes evident that ventilation** is mainly required to control the body heat, and not to overcome CO_2 alone. The rate of ventilation required for body cooling exceeds the rate required for removing other bad effects of occupancy., such as decrease of O_2 , increase of odours etc.

Hence, the air changes are required and provided these days on the basis of body cooling alone, and not on the consideration of CO_2 .

On this consideration and in actual practice, the fresh air is supplied at the rate of 15 to 30 cum per hour per person, depending upon the type of building. When the number of occupants cannot be easily determined, the rate of air supply may be based upon the number of air changes to be provided.

Table 16.1 gives some common accepted standards in this regard.

Table 16.1. Requirements of Air Supply and Air Changes with Mechanical Ventilation

S. No.	Type of Buildings	Air required per person per hour in cum.	No. of air changes required per hour
1.	Kitchens	60	10 to 40
2.	Factories and Workshops :		
	(i) Workshops with flumes	30–40	20 to 30
	(ii) Closely occupied	20–30	6 to 8
	(iii) Open type	15–30	1 to 4
3.	Hospitals :		
	(i) Operation theatres	15–40	10
	(ii) X-ray rooms		10
	(iii) Treatment rooms		6
	(iv) Open wards,		3
4.	Lavatories and Laboratories	30–40	6 to 12
5.	Assembly Halls, Crowded dining places, Public halls, Lecture rooms, Meeting rooms, etc.	35–40	6 to 10
6.	Restaurants, Shops, and Canteens	30	6
7.	Schools (Class rooms)	20–25	3 to 6
8.	Living rooms and Bed rooms	15–25	2 to 5
9.	General offices and Libraries	15–30	3

16.6. Systems of Ventilation

A good ventilation system should generally fulfil the following requirements :

(i) It should admit sufficient quantity of fresh air, and remove the requisite used up or vitiated air.

(ii) Admitted air should be properly controlled with respect to its quantity as well as velocity of movement.

(iii) The system should be capable of changing the old air thoroughly, without leaving any stagnant pockets in the room.

(iv) Should avoid draughts, for which maximum permissible velocity of admitted air should not exceed 15 m/min i.e. 0.25 m/sec.

(v) The system should admit clean and humid air.

(vi) The system should also be capable of controlling the temperature of admitted air.

The ventilation systems can be broadly divided into two categories ; viz.

(i) Natural ventilation ; and

(ii) Artificial mechanical ventilation.

*As against the theoretical value of 84 cum worked out above, considering no automatic ventilation.

**Strictly speaking, mechanical ventilation.

16.6.1. Natural Ventilation. Natural ventilation is based upon providing suitable openings in a room, at lower levels for admitting free atmospheric air, and also at upper levels for removing the warmer and lighter used-up air. Doors and windows near the floor level, thus, admit fresh air, and ventilators near the ceiling, take out the vitiated air from a room.

In order to ensure privacy of a room, windows are generally provided at about 0.75 to 0.9 m above the floor level, for admitting fresh outside air into the room. The size and the number of the windows provided, will depend upon the size of the room, number of occupants, the purpose and use of the room, etc. Besides admitting fresh air, the windows help in admitting natural day light.

On minimum side, a window area of 0.052 m^2 per person* should generally be provided, so as to ensure admission of at least 28 cum— (i.e. 1000 cft) of air per hour with a velocity not greater than 9 m/min^* . Another recommendation is

to provide about $\frac{1}{10}$ to $\frac{1}{15}$ th of the floor area in the living rooms for windows.

Every room should preferably be provided with at least 2 windows, and at least one of them should face open space or a varandah. Kitchens must be provided with more window area.

Provision of deflectors (also called *fan lights*) of 30 cm height at the bottom or top of a window, *opening inward*, permits the ventilation of the room, even when windows are closed, as shown in Fig. 16.1 (a) and (b).

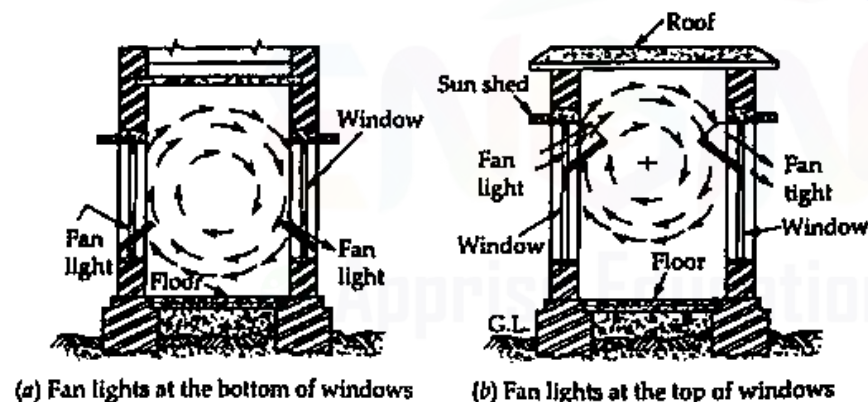


Fig. 16.1. Fan lights located in the windows at bottom or at top to ensure natural ventilation.

In case of sloppy roofs, ridge ventilators may be provided, as shown in Fig. 16.2. Such ventilators are useful in taking out used vitiated air from large halls.

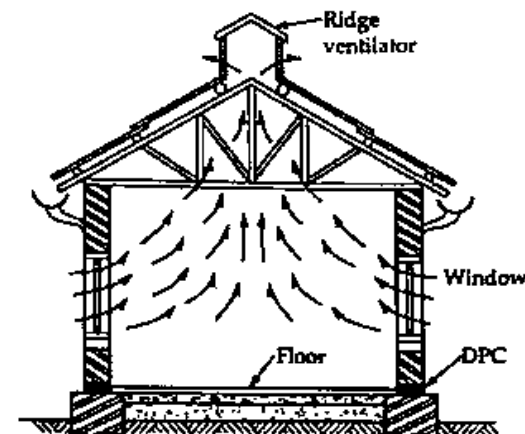


Fig. 16.2. Ridge ventilator.

In hot summer months, during day time, hot outside air may be warmer than the inside room air, and the ventilators may then reverse their functions. In other words, the bottom openings may start letting out the room air, whereas the top openings may start admitting outside air to fill up the partial vacuum created thereby. The inside of room will, therefore, become worse, unless the admitted air is cooled down by some method. *Khas* curtains may, therefore, be hanged at the roof level ventilators to cool the air by evaporation. But during night time, when outside temperature falls, all windows and ventilators may have to be kept open for allowing them to function in a normal manner.

In a hot and humid climate like that of India, natural ventilation fails to provide the requisite comfort, and hence artificial ventilation methods are adopted.

16.6.2. Mechanical Ventilation. The artificial ventilation system can be broadly divided into :

- (1) The extraction or vacuum system ;
- (2) The propulsion or plenum system ; and
- (3) The air conditioning system.

The air conditioning is sometimes dealt separately, and not considered as a part of mechanical ventilation.

16.6.2.1. The Vacuum system is one in which the used-up vitiated air is thrown out to the outside atmosphere, by means of suitable exhaust fans or blowers, installed near the top ventilators. This exhaustion of the warmer air from the room, causes lower pressure inside the room, thereby permitting inward leakage of new fresh atmospheric air through the doors, windows, and walls.

Various types of fans are used for this purpose. They are usually of the rotary type, fixed in a convenient part of the ductwork, and driven usually by electric motors, though diesel and steam power may be used when electricity

This system is simple and cheaper, but contains a number of demerits, such as :

- (i) there is no control on the quality of the incoming air. It can, hence, be installed only where outside area is not contaminated and over crowded.
- (ii) It is also apt to cause draughts.

In spite of these demerits, this system is largely used for kitchens, public halls, industrial plants, etc.

In kitchens, the system helps in exhausting smokes and odours ; in public halls, the system helps in exhausting out the ill effects of heavy occupancy ; and in industrial plants, the system helps in exhausting out dusts and fumes, etc.

16.6.2.2. The Plenum system involves forcing or pumping in fresh air, and causing the vitiated air to be exhausted out either by itself or through an exhaust fan placed at the outlet. The outlet exhaust fan is of smaller power than the inlet force fan.

Due to larger rate of incoming air, a slight pressure is created, which allows an outward leakage of vitiated air through the outlets.

Provision of a cooler at a window, with or without an exhaust fan at a ventilator, provides an example of such a plenum system of ventilation, largely adopted these days.

In larger buildings, such a plenum system may consists of distributing the incoming forced air at different points in the building through a system of ducts and grills.

Advantages. (i) This system enables us to control the quality, humidity, and temperature of the incoming air. And hence, this system is largely adopted these days for cinema houses, theatres, and even for individual homes.

(ii) It obviates the risk of draughts, because of outward leakage, and by making outlets less powerful than the inlets.

Moreover, such a system may either work normally upward with entry at floor level and exhaust at ventilator level ; or may work downward, with exhaust at floor level and entry at upper level.

Disadvantages. (i) The downward system, when adopted by providing air inlet ducts at roof level, is opposed to natural laws, and necessitates vitiated air to be rebreathed, causing discomfort.

(ii) The normal upward system when adopted, becomes costlier, as entry of air is provided at floor level under the seats, as is provided in some cinema halls, etc.

(iii) The air ducts require careful design in order to prevent draughts. This may involve using separate dampers for each room. The movement of air at the inlet as well as at the outlet needs to be properly controlled. This arrangement is quite costly. These objections may be overcome by (i) employing the upward system ; or (ii) by air-conditioning the buildings.

16.6.3. The Air Conditioning System. The atmosphere in the modern cities contains highly polluted smokes, fumes, dirt, germs, and bacteria, etc. In such environments, natural ventilation or even ordinary mechanical

serve us any useful purpose. In such conditions, it is necessary to completely control the temperature and quality of the outside air, before it is admitted into the room, and also to remove the heavy vitiated air at the optimum rates.

All these problems have been solved in these modern days, by air-conditioning the buildings, in which all the doors, windows, and ventilators are kept closed.

The air-conditioning may be defined as the process of controlling the temperature, humidity and distribution of air in a building, with simultaneously removing the dirt, bacteria and toxic matter from the air. Air-conditioning, thus, provides a comfortable and whole-some ventilation to the buildings.

However, as the atmospheric conditions vary, the requirements of occupants also vary with respect to season. In other words, during summer season, an air-conditioning system will be required to produce cool air inside the building ; and in winter season, it will be required to produce warmer air in the building. Accordingly, an air-conditioning system is required to work two ways.

We will now briefly discuss as to how a summer Air-conditioner and a winter Air conditioner, work.

(1) Summer air-conditioner. In summer season, the external atmospheric temperature is high, and the hot air has to be cooled before it can be distributed in the building. During the process of cooling, however, the humidity of this air increases, because at lower temperatures with the same amount of moisture, the relative humidity increases. Hence, after cooling, it becomes necessary to reduce the humidity of this air, by drying it through a dehumidifier. A dehumidifier is in the form of a hygroscopic substance like ammonia, calcium chloride, etc., or the air is cooled and dried through the process of condensation.

The clean, cooled, and dried air is then finally forced out into the space to be conditioned. A line diagram of this system is shown in Fig. 16.3 (a).



Fig. 16.3. (a) Summer A.C.—Line Diagram.

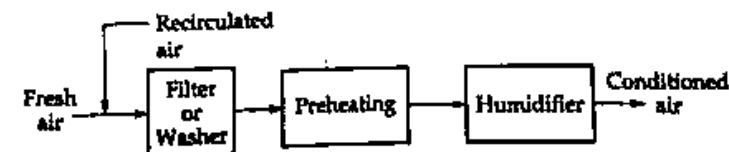


Fig. 16.3. (b) Winter A.C.—Line Diagram.

The various steps involved in this conditioning are briefly given below :

(i) **Filtration.** Fresh outside air as well as the vitiated reused air (*recirculated air*) is, first of all, passed through a filter, so as to remove the dust and other soot particles from it. *Dry filters* and *viscous filters* are the two types of filters, used for the purpose. *Dry filters*, made of close grained felt or cloth or jute are more commonly used. As a modern advancement on filter technique, *electric precipitators* are also, now-a days, sometimes used, though only rarely and particularly where absolutely dust free air is required, as for hospitals, etc. Such precipitators work on the principle of producing *high-intensity ionizing field* with a secondary field, where the dust gets precipitated and thus, removed.

(ii) **Cooling and Drying (Dehumidification).** This can be done by first lowering the temperature of the filtered air below the dew point, condensing out necessary amount of moisture, and then reheating the same with dry heat upto the desired temperature. Cooling of the air may be done in several ways ; two of which are (i) cooling by *mechanical refrigeration* : and (ii) cooling by *water spray method*.

Mechanical refrigeration cools the air like a household refrigerator, and is more suitable to tropical countries, where temperatures are to be lowered substantially. This method helps in cooling of air without wetting the same, with the help of a *compressor* and *metal coils* (tubes).

A *liquid refrigerant*, such as *freon*, enters the metal coils under high pressure, as soon as the machine is switched on. This liquid absorbs the heat from the coils and gets evaporated, thereby extracting heat from the metal coils and causing cooling of the coils. This gas refrigerant is then converted into liquid by the *condensor coils* and the *compressor*. This liquid again evaporates by absorbing heat from the coils, causing further cooling of the coils. The process continues till the cooling is caused upto the desired level.

The hot air coming in contact with these cooled metal coils, also gets cooled easily, upto the desired level.

This type of plants are known as *refrigeration plants*.

In the second type of plants, which cause cooling of the incoming air by *water spray method*, water is first of all, cooled either with the help of a refrigerant or by ice, and this cooled water is then sprayed on the hot air coming out of the filters. The air, thus, gets cooled by evaporation. This method increases the humidity of the air, and is generally not found suitable for humid climates.

Both the cooling methods, however, are used to cool the air upto *dew point*, so as to extract some desired moisture from it, and the balance air is reheated upto the desired temperature* for final distribution through fans and ducts in the space to be conditioned.

Refrigerating plants are often rated on ton basis. 1 M-ton being equivalent to heat removal at the rate of 100 C.H.U. (i.e. 180 B.Th.U.) per minute. As a rough rule, the power required to drive refrigerating plants is 1 B.H.P. per M. Ton.

*In summer, the most comfortable effective temperature is found to be 21.7°C : whereas

Individual air conditioning machines, called *room air conditioners*, are fitted on the windows of rooms ; whereas, for larger spaces, *central air-conditioning* may be adopted.

In a *room air conditioner*, the conditioned air comes out through a grill opening, as it is forced out by a fan. On the other hand, in *central air conditioning*, the conditioned air is produced by keeping the plant in one separate room, and *distribution ducts* are carried to individual rooms, and at various points in a big hall, for distributing the conditioned air, through fans and blowers, as shown in Fig. 16.4.

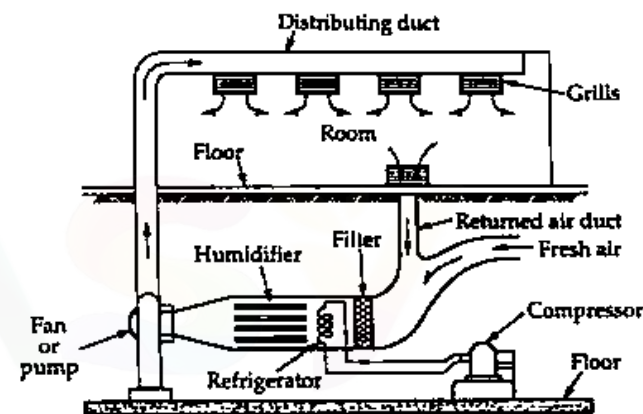


Fig. 16.4. Central system of air conditioning.

Recirculation of Air. During summer season, the temperature of room air is lower than the temperature of the outside air. And since an air conditioner has to cool down the hot air, it should be economical for it to cool the room air rather than the outside atmospheric air, if it becomes available to it. Moreover, in any case, the vitiated room air has to be removed by it.

On these two considerations, air conditioners are designed to extract and avail the vitiated room air at optimum rates, and to take from the outside atmosphere, only that much quantity of air, as is necessary to prevent concentration of odours. This air, which is withdrawn by an air conditioner from the conditioned room, and is recirculated through the filters and other cooling units, is known as *circulated air*, and the process is called *recirculation of air*.

(2) **Winter air-conditioner.** In winter season, the external atmospheric temperature is low, and this cold atmospheric air has to be heated up before it can be dispersed in the conditioned room, as shown in the line diagram of a winter AC in Fig. 16.3 (b) During this process of pre-heating*, however, the humidity of the air *reduces*, because at higher temperatures with the same amount of moisture, the relative humidity decreases. Hence, after heating, it *becomes necessary to increase the humidity of this air*, by carrying it through a *humidifier*, where air, may be mixed with the water vapour, by throwing

*Preheating in a winter air conditioner may be done by admitting the air through a

water over the air with the help of spray nozzles. This humidified air is then passed through eliminator plates, so as to remove the water droplets, if any, in the humidified air.

The clean, hot and optimally humid air is finally forced out into the space to be conditioned.

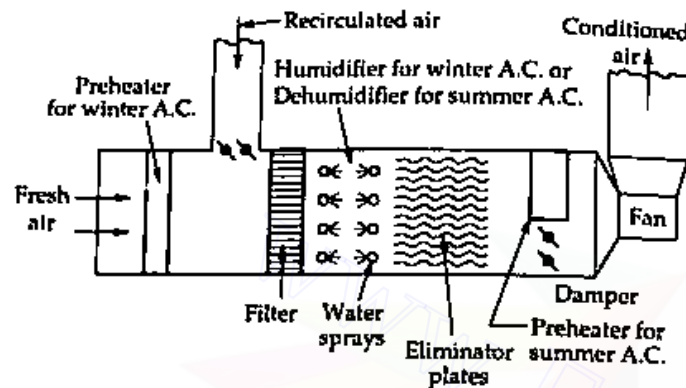


Fig. 16.5. Flow diagram of a complete two way air conditioner.

Recirculation of air is done in the winter A.C. also, as is done in the summer A.C., because room air is to be heated up to lesser extent than the outside air, which causes economy.

The flow diagram of a complete two way, air conditioner is shown in Fig. 16.5.

Example 16.1. A copy machine is to be installed in a small room (volume 19.82 m^3). There is a concern that ozone level inside the room would be high during operation of the machine. To maintain the proper air quality inside the room ventilation (namely, air changes @ 30 per hour) is recommended. Determine the capacity of exhaust fan.

Solution. No. of air changes required per hour = 30

Volume of air in the room needing to be changed = 19.82 m^3

Total volume of air required to be changed per hour
 = $30 \times 19.82 \text{ m}^3 = 595 \text{ m}^3/\text{hr}.$

Hence, the minimum required capacity of the exhaust fan
 = $595 \text{ m}^3/\text{hr}.$ Ans.

Example 16.2. In a small hall (volume 500 m^3), occupants (capacity 50 persons) are smoking @ 1.2 cigarettes per head per hour. To maintain proper ventilation, fresh air is pumped @ $1250 \text{ m}^3/\text{hr}$ and the stale air is pumped out at the same rate. Estimate the concentration of formaldehyde inside the hall. Assume the process to be ready and complete mixing; cigarette contains 1.30 mg of formaldehyde per cigarette?

Solution. 50 occupants consume cigarettes @ 1.2 No. per hr per head

Total No. of cigarettes consumed per hour = $50 \times 1.2 = 60$

Since each cigarette contains 1.3 mg of formaldehyde the total

$$= 60 \times 1.3 \text{ mg} = 78 \text{ mg}$$

The 78 mg/hr of formaldehyde gets mixed in $1250 \text{ m}^3/\text{hr}$ of fresh air being injected in the room. Hence, the concentration of formaldehyde in the room air

$$= \frac{78 \text{ mg}}{1250 \text{ m}^3} = 0.624 \text{ mg/m}^3. \text{ Ans.}$$

PROBLEMS

- Define and explain indoor air pollution. What adverse effects are caused by indoor air pollution?
 - Define and explain ventilation. How is it achieved in public buildings? Discuss the merits and demerits of an ordinary mechanical system of ventilation and the latest air conditioning method of ventilation.
- What are the ill effects of occupancy in an enclosed space? How do these effects come about? How does ventilation help in alleviation of these effects? How do these effects affect humans?
- Indicate the number of air changes, per hour recommended for the following occupancies :
 (1) General offices ; (2) Restaurants and Canteens ; (3) Lavatories ; (4) Assembly Halls ; (5) Factories and workshops ; (6) Living rooms and residences ; (7) Kitchens ; (8) Cinema Halls. Indicate or justify your answer with a single line reason for adopting high or low values for these cases.
- Why is it necessary to provide ventilation in buildings? What arrangements are usually made to obtain ventilation by natural means? Illustrate your answer by drawing suitable sketches and explain the merits and demerits of the different arrangements.
- Explain what is meant by air-conditioning and mention its advantages. Draw a neat flow diagram showing and explaining the functioning of a summer air conditioner. What additional parts will be required in your summer air conditioner if it is proposed to make it useful for winter also?
- Differentiate between the vacuum system and the plenum system of ventilation of buildings, indicating their relative merits and demerits.
 - Explain the provision of fan lights and ridge ventilation in buildings, drawing neat sketches for the same.
- Write short notes on :
 (i) Impact of occupancy on environmental pollution
 (ii) Natural and artificial ventilation of buildings
 (iii) Fan lights and Ridge ventilators
 (iv) Air conditioning of Buildings
 (v) Indoor air pollution, its effects and status.

The Environment, Its Pollution, and Present Status

17.1. Biosphere and Environment

From our knowledge of Geology, we know that the solid Earth and its interior is known as lithosphere, and the gaseous layers surrounding the Earth upto a distance of about 500 km, composes the atmosphere. The atmosphere is further sub-divided into (i) troposphere ; (ii) stratosphere ; and (iii) thermosphere, depending upon the distance of the gaseous layers from the surface of the Earth, as shown in Fig. 19.2.

The entire collection of water over the Earth as well as inside the Earth is called the hydrosphere.

A relatively narrow belt of lithosphere and atmosphere, a little below and above the surface of the land, and in water and air, which largely contains living organisms (such as plants and animals, including human life), is called the biosphere. Biosphere is, therefore, that particular zone on Earth, where the lithosphere, the hydrosphere, and the atmosphere come into contact with one another. It is, in fact, that portion on the Earth, where alone, life is in existence.

There is a continuous exchange of matter between these three elements (i.e. lithosphere, hydrosphere, and atmosphere). Say for example, plants draw their food from the nutrients and moisture found in the soil layers of the lithosphere. Similarly, plants use carbon dioxide from the atmosphere, and sunlight for their growth. Dead plants and animals are decomposed by bacteria and become soil nutrients. Some of this may be dissolved by the running water and added to the hydrosphere. The evaporation of water from the hydrosphere, and subsequent condensation of water vapour in the atmosphere and consequent rainfall on the Earth, provide water supply for the organisms in the biosphere.

17.2. Physical and Biological Environment

The four major elements, i.e. (i) land, (ii) water, (iii) air, and (iv) living organisms (plants and animals), together ; constitute what is known as environment or ecosystem.

Environment can be further sub-divided into :

- (i) Physical environment ; and
- (ii) Organic or Biological environment.

The non-living (abiotic) components like land, water, and air together, in fact, forms one group of environment, called the physical environment ;

whereas, the living organisms (biotic component), form another group of environment, called the biological environment.

While the physical environment (land, water and air) is essential for the existence of life in various forms ; the biological environment provides the necessary food, so very essential for the sustenance of life on the Earth.

17.3. Ecosystem and Ecological Balance of Nature

The various living organisms* constituting the biological environment, are, in fact, dependent upon each other for their survival, and each, in turn, depends on the physical environment of the area in which it lives. Ecosystem, as stated earlier, is the physical environment together with the organisms, which live therein. Ecology is the science which deals with the inter-relationships between the various organisms and their relationship with the physical environment.

Plants growing on land and in water provide food for herbivorous animals (generally smaller and weaker, plant-eating organisms including elephant) ; and these herbivorous animals, in turn, become the food for the carnivorous animals (flesh eating animals, like lions) as well as for the omnivorous animals (i.e. animals who eat plant food as well as meat). The relative number of these different types of organisms in the biosphere is, however, such that there is no scarcity of food for any organism. The smaller organisms are much more in number, and their growth and reproduction is also much faster than those of larger organisms, which are fewer in number and reproduce slowly. This ensures the availability of sufficient food for larger animals.

In the natural environment, in the biosphere, there, in fact, exists a perfect balance or equilibrium between the various organisms, and this is known as ecological balance. In this equilibrium state, the relative numbers of different organisms in a particular environment remain constant. This ecological balance may, however, get disturbed, when changes take place in the natural environment**, which may consequently change the relative numbers of the different organisms in the biosphere. If the numerical ratio balance between the different organisms is disturbed, then naturally, there becomes a dearth of food for certain particular organisms, which may ultimately lead to large scale mortality of those particular organisms. A new equilibrium is finally re-established under the changed conditions. In this period of readjustment, evidently, certain old species get extinct, and new species may be born. This process of evolution of new species and extinction of old species is a continuous process.

The present existing pattern of organisms in the biosphere has been reached as a result of gradual evolution and extinction over several million years of earth's history. During the changing physical environment, various organisms adapted themselves, and survived ; but still however, various

*It includes all types of plants and animals, starting from the minutest microscopic size like bacteria, fungi, etc. to huge trees, whales, and elephants. Strictly speaking, man is also a type of animal, who was formed during a particular type of physical environment, in the process of extinction of old species and evolution of new species.

**i.e. changes in physical factors, such as in temperature, precipitation, evaporation, light intensity, salinity of sea waters, etc.

particular species which could not tolerate the changing environment, died out, and became extinct. New species were also born in the new changing environment. *Man, in fact, came into existence, as a result of large scale environmental changes that took place about one to two million years ago.*

17.4. Impact of Man on Biosphere

After the arrival and reproduction of man on the earth, a large scale impact has been caused on the biosphere, due to his unchecked actions. Say for example, *large scale deforestation* of forests for residential and agricultural land uses, has changed the habitat of organisms living in the forests. His *hunting of animals*, has led to the extinction of certain animal species. He has also developed new types of domesticated animals as well as plants to serve his own needs. His using pesticides and insecticides in the agriculture farms has also affected the relative proportion of various organisms in the biosphere. Such continuing imbalances in the biosphere, if not checked, will certainly prove disastrous to the very existence of man himself, because *it is the biosphere, on which depends, the life as well as the progress of human civilisation**.

17.5. Pollution and Conservation of Environment

The development of civilisation and rapid industrialisation by man has caused a great damage to the ecosystem. Things have worsened because no attention or a very little attention has been paid towards protecting the environment, while executing industries and other developmental projects.

Associated with any development, there is bound to be some amount of environmental degradation. An ecological survey, and effective measures for protecting the environment, are therefore, essentially required, before any developmental project is undertaken. But unfortunately, while developing industries or commercial or even urban properties, we have not bothered to look at the environmental degradation, likely to be caused by those establishments, either through our ignorance or through our sheer greed, for not spending any money on things which do not immediately affect us, individually. *There are, in fact, people among us who believe that there is more money in destroying the environment (such as those who fell trees, and kill wild animals, unauthorisedly), rather than in conserving it. Tomorrow is not their immediate concern.*

Several examples of man's interference with the natural equilibrium may be mentioned. The excessive use of coal, petroleum, and natural gas for industries, automobiles, and power generation, has created enormous problems of pollution of environment.

Pollution of air is strikingly marked in the industrial and congested cities of U.S., Europe, Japan, and even in India, causing acid rains in many regions.

The *smokes* from factories, coke ovens and furnaces, steam engines, etc.; *exhaust fumes* from automobiles, power plants, etc., *injurious chemical fumes* from oil-refineries, zinc refineries, chemical industries, metallurgical plants, iron and steel plants, incineration plants, etc.; evolution of radioactive gases and suspended radioactive dusts from atomic explosions and accidental discharges from nuclear reactors, etc. have polluted the air *locally, regionally*, as well as *globally*, to such an extent that special steps are now essentially required at several places (with international cooperation) for reducing such air pollutions.

For example, the increase in CO_2 content of the environment has been responsible for gradual heating up of our globe, by a process called *green-house effect*. The CO_2 layer, in fact, acts like a glass cover used for a *green-house**, which allows the outside heat to enter the green house, but does not allow the inside heat to go out. *Similar to a glass house, CO_2 layer is transparent to short wave radiation from the sun, but absorbs the longer wave radiation from the Earth.* The net result is gradual heating up of the Earth. It is feared that by the year 2100, CO_2 in our atmosphere will be doubled, leading to 4°C rise in the world temperature. Such continuous warming of Earth may cause the glaciers to recede and ice to melt at poles. This may cause a rise in sea level by about 0.65 m, which ultimately may submerge most of our islands and coastal cities.

The salty sea water spreading to land may also lead to infertility of soil and spoil the underground water. Such global warming may also trigger severe climate changes, which will be discussed in detail in our next chapter.

Depletion of ozone in the stratosphere due to increasing release of chlorofluorocarbons (CFCs) due to human activities is another dreaded aspect of the global extent of environmental pollution. The presence of ozone in the upper atmosphere (i.e. stratosphere) in fact, cuts off the most harmful ultraviolet radiations (released by the rays of the sun) from reaching the surface of the Earth. Any appreciable reduction in ozone layer is likely to allow entry of harmful U.V. rays of sun, causing serious diseases like cataracts and skin cancers in humans. All such regional and global impacts caused by the pollution of our air environment, shall be discussed in detail in our next chapter.

Pollution of water is another aspect of environmental pollution. The waters of rivers, lakes, and oceans are, now-a-days being polluted on a large scale, by the outflow of effluents from factories and industries. Water pollution also results from the disposal of soiled urban wastes, such as *plastics***, *rubbers***, paper, untreated wastewaters and sewage, etc. Water pollution also interferes with the growth of organisms living in the water bodies, thus, retarding the natural purification process caused by such organisms.

*All the food needs of man are met by plants and animals. Plants also provide fibres, such as cotton, jute, medicinal herbs, dyes, etc. Timber, resins, latex, gums, etc. are also obtained from forests. Plants and animals, thus, provide raw materials for various industries. Even the most essential power resources like coal, mineral oils, etc. are the

*Glass or plastic covered green houses are generally used in cold countries to provide moderately heated environment to plants in nurseries or for growing out of season fruits and vegetables.

**Plastics and rubbers are very notorious wastes, as they cause cancers, unless properly collected, recycled, and reused.

All such environmental pollutions, lead to the spread of diseases through polluted air and water. The use of insecticides and pesticides has led to the concentration of DDT and other harmful chemicals in plants and animal food products, which when consumed by man, cause diseases.

In order to check such drastic ill-effects of environmental pollution on the health of the people as well as on the plants and the animals, it is extremely necessary that we wake up from our long slumber, and initiate some drastic remedial measures to protect our natural wholesome environment. Legislative laws and their effective implementation, supplemented with spread of environmental education and awareness, is most important to stop the greedy and/or ignorant people from spoiling our environment.

17.6. Status of Administrative Control on Environment in India

In our country, no attention was paid for controlling the environmental effects of developmental projects, almost till the year 1968 or so. It was in the 4th five year plan period (1968—1973), when, for the first time, environmental aspects were introduced for harmonious development.

In the year 1970, the Government of India appointed a committee under the chairmanship of Pandit Pitamber Pant (a member of the planning commission), which prepared a country report for presenting in the U.N. Conference on Human Environment, in 1972. Soon thereafter, a National Committee on Environmental Protection and Coordination was set up in the Deptt. of Science and Technology, for advising the GoI on environmental matters.

The 5th five year plan (1973-1977) continued to stress upon the environmental considerations. During this plan period, a Central law was enacted, under the name of Water (Prevention and Control of Pollution) Act, 1974*. Under this Act, The Water (Prevention and Control of Pollution) Rules, 1975 were notified by GoI on 27.2.1975. This law was meant for checking and preventing water pollution, which had become quite prominent at the time of enactment of this law, at several places in the country.

As a result of this legislative enactment of 1974, a Central board, called Central Board for the Prevention and Control of Water Pollution, was constituted for monitoring and detecting pollutions of water bodies, and for initiating remedial measures, including prosecutions in courts, so as to prevent the influential industrialists and municipalities from throwing their industrial wastes and sewages into our precious water bodies.

This act of 1974 also stipulated that the various States of India will separately constitute such pollution control boards in their respective States, and the Central board will serve as a watchdog body to advice and watch the performance of State boards, besides exercising its separate authority in respect of union territories, which are directly governed by the Centre. This Act, however, was made applicable only in 12 States, which authorised the Union Govt. to do so, since water was a State subject under the Indian Constitution.

Another important Act, called the Water (Prevention and Control of Pollution) Cess Act, 1977*, was also passed by the parliament. Under this Act, The Water (Prevention and Control of Pollution) Cess Rules 1978 were notified by GoI on 24.7.1978. This law has proved quite effective in reducing the quantities of industrial wastes, as the act promotes recycling and reuse of the wastewaters. This Act was made applicable to all the States of the country, unlike the water pollution Act.

Protection of environment was further stressed in the 6th five year plan (1980—1985), which contained a separate chapter on 'Environment and Development'. During this plan period, a separate Department of Environment was set up on November 1, 1981, at the level of central cabinet. Air pollution was also recognised, and a Central legislation, called Air (Prevention and Control of Pollution) Act, 1981*, was enacted. Under this Act, The Air (Prevention and Control of Pollution) Rules 1982 were notified by GoI on 18.11.1982. The Water Pollution Control Boards were given the additional charge of looking after air pollution control also.

A third act, called The Environment (Protection) Act, 1986* was subsequently promulgated by the Parliament after the occurrence of the Bhopal gas tragedy. This act extends to whole of India, and the Central Government has been empowered for taking any measures, which in its opinion, are necessary for improving and protecting the environment. Under section 9 of this act, it has also been made obligatory on the part of industries to prevent and mitigate environmental pollution, which may be caused due to any accident or unforeseen act at their industry. Under section 10 and 11 of this act, Government officers, empowered by the Central Government, may now enter the premises of the industries and collect samples, and/or carry out any reasonable action deemed fit for environmental protection.

Severe fines and penalties, including imprisonments upto 5 years have been prescribed for failures and continued failures on the part of industries failing to comply with the act, under section 5 of the act.

Under this important Environment (Protection) Act 1986, GoI has notified the following Rules :

- (i) The Environmental (Protection) Rules, 1986
- (ii) Hazardous Wastes (Management and Handling) Rules, 1989
- (iii) The Manufacture, Storage and Import of Hazardous Chemicals Rules, 1989
- (iv) The Rules for the Manufacture, Use Import, Export and Storage of Hazardous Micro-organisms/Genetically Engineered Organisms or Cells, 1989
- (v) The Chemical Accidents (Emergency Planning, Preparedness and Response) Rules, 1996
- (vi) The Biomedical Waste (Management and Handling) Rules, 1998
- (vii) The Plastic Manufacture, Sale and Usage Rules, 1999
- (viii) The Noise Pollution (Regulation and Control) Rules, 2000
- (ix) The Ozone Depleting Substances (Regulation and Control), Rules, 2000

*Salient provisions of this Act are explained in "Ecology and Environmental Studies" by

(x) *The Municipal Solid Wastes (Management and Handling) Rules, 2000*

(xi) *The Batteries (Management and Handling) Rules, 2001.*

Note : All the above Rules are available in compiled form together in "Universal's Environment & Pollution Laws", 2004 ed ; published by Universal Law Publishing Co. Pvt. Ltd, Delhi.

Moreover, in order to check the emitted smokes from badly maintained automobiles, containing too much of lead, carbon monoxide and particulate matter, a fourth legislation, called Motor Vehicles Act, 1988, has been passed by the parliament. The implementation of exhaust standards framed under the Central Motor Vehicles Rules 1989, was to come into force w.e.f. 1-7-1989. However, due to non-availability of monitoring equipments, like smoke-meters and gas-analysers, for checking the quality of exhaust emissions, and also due to political and other influences, this act largely remains on the statue books of the country.

Even after fifteen years of the enactment of this legislation, nothing serious is being done to check and prevent the polluting vehicles, barring a few pollution checks carried out on private cars, and that too only in the capital city of Delhi. The authorities are thus, simply relaxing, blaming interference from the politicians and the courts.

In order to prevent loopholes in the effective implementation of these environmental laws, the Government is now thinking to constitute special environmental courts, for speedy trial of the offenders of anti-pollution laws ; and also to carry out annual environmental audits, to easily detect disobedience of such laws by individual industries. *The earlier it is done-the better.*

17.7. Status of Water Pollution—Monitoring and Control in India

According to the assessment made on the subject, there are 14 river systems in India, which cover 83% of its physical area, 80% of its population, and 85% of its surface run off.

In order to monitor the water pollution in our country, it therefore becomes essential to watch out the waters of all these 14 river basins.

Several bodies have been engaged in the task of collecting and analysing water samples from these river basins, so as to work out the water quality profiles* for all the river basins.

State Governments collect water samples from about 50 river stations for analysis in the laboratories of CWC (Central water Commission). Central

*The water quality profile for our most important Ganga river has shown that the water quality of the Ganga is generally good in West Bengal (except for a small reach below Calcutta), as well as in Bihar. In U.P., the water quality is also found to be good, between Rishikesh and its confluence with river Kali near Kannauj ; with BOD < 2 mg/l and DO > 8—9 mg/l ; but the river water is found to be highly polluted at the city of Kanpur (with BOD between 10 to 55 mg/l, and DO between 4 to 6 mg/l). At Dalmau (50 km downstream of Kanpur), the water quality is again found to have considerably improved, the pattern is repeated at the cities of Allahabad, Varanasi, and Patna, where the river is highly polluted, followed by clear water stretches beyond about 50 km from each city. Untreated wastes from human settlements are found to be the major cause for deterioration in the water

Board for Prevention and Control of Water Pollution has also established a monitoring network for sweet water bodies on a three tier basis (i.e. 40 stations under the Global Environmental Monitoring Systems, 61 stations under Monitoring Indian National Aquatic Resources, and additional 120 stations under Minimal Action Programme).

On the basis of assessments made so far, it has been established that in our country, about 85% of wastewater (by volume) is being generated by the domestic and household sector, whereas, the balance about 15% is being contributed by the industries. In terms of BOD, domestic as well as industrial sectors are both contributing about 50% pollution load, each.

In view of the above findings, it becomes abundantly clear that pre-treatment of domestic as well as industrial wastewaters before disposal should receive our highest priority, if at all we want to control water pollution, and preserve public health, since more than 80% of diseases in our country are found to be water borne. Besides this, situations peculiar to our country like Kumbh Mela, which is found to increase the river coliforms from a few hundred to several thousands, need to be properly watched, and remedial measures devised to avoid heavy and large scale infections to the devotees taking bath in the holy rivers.

In order to monitor the water quality of surface sources w.r.t. different possible uses, and for their proper classification, the BIS (Bureau of Indian Standards) has vide IS 2296-1982, classified the waters into the following five categories :

1. **Category A** : Surface waters which can be used as drinking water sources without conventional treatment but after disinfection.
2. **Category B** : Surface waters for outdoor bathing.
3. **Category C** : Surface waters for use as drinking water sources with conventional treatment followed by disinfection.
4. **Category D** : Surface waters for use for fish culture and wild life propagation.
5. **Category E** : Surface waters for irrigation, industrial cooling or control waste disposal.

The BIS standards in respect of the physical and chemical, characteristics of all these categories of waters are shown in table 17.1. The physical, chemical and bacteriological standards laid down by the 'Central Board for Control and Prevention of Water Pollution' for these five categories of waters are shown in table 17.2.

The existing status of water quality at various monitoring stations on our rivers have shown the water quality to be either of category C or below.

The river Ganga is found to be polluted in stretches of 480 km, out of its total length of 2035 km.

The river Yamuna is found clean only in stretches of 522 km, out of its total length of 1044 km.

The quality of water at Godavari river at Mancherial and Polavaram, the Krishna at Vijaywada, the Tungbhabhadra at KRS dam and Sathayalam, is however, found to be confirming to the desired levels.

The general water quality of all the rivers in Gujarat State is below category C due to high concentration of total coliforms in these rivers.

Table 17.1. BIS (ISI) Water Quality Standards for Classifying Surface Water Sources

S. No.	Characteristic	Tolerance Limit				
		Class A	Class B	Class C	Class D	Class E
(1)	(2)	(3)	(4)	(5)	(6)	(7)
1.	pH value	6.5—8.5	6.5—8.5	6.5—8.5	6.5—8.5	6.5—8.5
2.	Dissolved oxygen, mg/l, min.	6	5	4	4	—
3.	BOD (5-days at 20°C, mg/l, min.	2	3	3	—	—
4.	Total coliform organism, MPN/100 ml, max.	50	500	5000	—	—
5.	Colour, Hazen units, max.	10	300	300	—	—
6.	Odour	10	300	300	—	—
7.	Taste	Tasteless	—	—	—	—
8.	Total dissolved solids, mg/l, max.	500	—	1500	—	2100
9.	Total hardness (as CaCO ₃), mg/l, max.	300	—	—	—	—
10.	Calcium hardness (as CaCO ₃), mg/l, max.	200	—	—	—	—
11.	Magnesium hardness (as CaCO ₃), mg/l, max.	100	—	—	—	—
12.	Copper (as Cu), mg/l, max.	1.5	—	1.5	—	—
13.	Iron (as Fe), mg/l, max.	0.3	—	0.5	—	—
14.	Manganese (as Mn), mg/l, max.	0.5	—	—	—	—
15.	Chlorides (as Cl), mg/l, max.	250	—	600	—	600
16.	Sulphates (as SO ₄), mg/l, max.	400	—	400	—	1000
17.	Nitrates (as NO ₃), mg/l, max.	20	—	50	—	—
18.	Fluorides (as F), mg/l, max.	1.5	1.5	1.5	—	—
19.	Phenolic compounds (as C ₆ H ₅ OH), mg/l, max.	0.002	0.005	0.005	—	—
20.	Mercury (as Hg), mg/l, max.	0.001	—	—	—	—

(1)	(2)	(3)	(4)	(5)	(6)	(7)
21.	Cadmium (as Cd), mg/l, max.	0.01	—	0.01	—	—
22.	Selenium (as Se), mg/l, max.	0.01	—	0.05	—	—
23.	Arsenic (as Se), mg/l, max.	0.05	0.2	0.2	—	—
24.	Cyanide (as CN), mg/l, max.	0.05	0.05	0.05	—	—
25.	Lead (as Pb), mg/l, max.	0.1	—	0.1	—	—
26.	Zinc (as Zn), mg/l, max.	15	—	15	—	—
27.	Chromium (as Cr ⁶⁺), mg/l, max.	0.05	—	0.05	—	—
28.	Anionic detergents (as MBAS) mg/l, max.	0.2	1	1	—	—
29.	Polynuclear aromatic hydrocarbons, (as PAH), mg/l	0.2	—	—	—	—
30.	Mineral oil, mg/l, max.	0.01	—	0.1	0.1	—
31.	Barium (as Ba), mg/l, max.	1	—	—	—	—
32.	Silver (as Ag), mg/l, max.	0.05	—	—	—	—
33.	Pesticides	Absent	—	Absent	—	—
34.	Alpha emitters, μ C/ml, max.	10 ⁻⁹	10 ⁻⁹	10 ⁻⁹	—	—
35.	Beta emitters, mC/ml, max.	10 ⁻⁴	10 ⁻⁴	10 ⁻³	10 ⁻⁴	10 ⁻⁴
36.	Free ammonia (as N), mg/l, max.	—	—	—	1.2	—
37.	Electrical conductance at 25°C, μ hos, max.	—	—	—	1000 $\times$ 10 ⁻³	2250 $\times$ 10 ⁻³
38.	Free carbon dioxide (as CO ₂), mg/l, max.	—	—	—	61	—
39.	Sodium absorption ratio	—	—	—	—	26
40.	Boron (as B), mg/l, max.	—	—	—	—	—
41.	Percent sodium, max.	—	—	—	—	—

Table 17.2. Water Quality Standards for Surface Water Sources as per CPCB (New Delhi)

Category or class	Designated Best use	Parameters affecting	Quality Criteria
(1)	(2)	(3)	(4)
A.	Drinking Water Source, without conventional treatment but after disinfection	1. Coliform MPN 2. Turbidity 3. Colour 4. BOD 5. DO 6. Toxicants (including pesticides) 7. Plate Count 8. Floating Matter 9. Taste or Odour	< 50/100 < 10 units < 10 units < 2 mg/l > 6 mg/l No acute toxicity to be present < 50/100 ml Absent Not perceptible
B.	Bathing, Swimming and Recreation	1. Coliform MPN 2. Turbidity 3. Colour 4. BOD 5. DO 6. Toxicants (including pesticides) 7. Floating Matter 8. Taste or Odour	< 500/100 ml < 25 units < 10 units < 3 mg/l > 6 mg/l No acute toxicity to be present Not noticeable Not perceptible
C.	Drinking Water Source after conventional treatment	1. Coliform MPN 2. Colour 3. BOD 4. DO 5. Toxicants	< 5000/100 ml < 25 ml < 3 mg/l > 4 mg/l No acute toxicity to be present
D.	Propagation of Wild Life Fisheries	1. Coliform MPN 2. BOD 3. DO 4. Toxicants	< 5000/100 ml < 6 mg/l > 4 mg/l No acute toxicity to be present
E.	Irrigation, Industrial Cooling and Controlled waste disposal	1. TDS 2. (Ca + Mg) 3. Sodium Ratio 4. Chlorides 5. Boron	< 1000 mg/l < 100 mg/l < 0.5 < 250 mg/l < 2 mg/l

The BOD level at Ahmedabad on the Sabarmati ranged between 1.7 and 285 mg/l with an average value of about 70 mg/l, while the acceptable limit is less than 3 mg/l.

On an average, the water temperature of rivers in Kerala State were observed to be on the higher side than the other rivers of the southern region. The concentration of TKN was also observed to be comparatively higher in the

The water quality of Subarnarekha at Ranchi is worse than at Jamshedpur. The probable reason for bad quality of water at Ranchi is low flow.

17.8. Status of Air Pollution—Monitoring and Control in India

Air pollution was not very visible in our country, only upto a few decades ago. However, due to rapid urbanisation, commercialisation, and industrialisation, it has now acquired a threatening posture, although of course, the problem has become gigantic only in some of our big cities and towns, where either the industries are concentrated or there are too many automobiles.

In order to legally control air pollution, a Central legislation was passed by Indian parliament, and this act, called "The Air (Prevention and Control of Pollution) Act 1981", came into force from May 16, 1981. This act is applicable to whole of the country, unlike the water pollution act of 1974, which is applicable only in 12 States, which had adopted it.

Under the above act, the Central Board for Control and Prevention of Water Pollution, popularly called the Central Pollution Control Board (CPCB) has been given the additional duties for looking after the administration of this air pollution control act, 1981, also. States where water pollution control boards were earlier constituted, have been asked to give air pollution control works also to these boards, as additional duties. However, States, where no such water pollution control boards were constituted earlier, have been asked to constitute separate air pollution control boards.

The CPCB, thus, has to exercise Central control on State Pollution Control Boards, and to act as State Pollution Control Boards in Union Territories, including NCT of Delhi.

As provided in this Act, the CPCB has formulated and notified the Air (Prevention and Control of Pollution) Rules, 1982 w.e.f. 18.11.1982. Most of the States have also notified their Boards and Rules. Some of the States have even notified their air pollution control areas. Ambient air quality standards have also been evolved for monitoring air quality, and notified under Environment (Protection) Act, 1986, and the Rules framed thereunder.

As a matter of fact, a large scale work has been done on air pollution by the National Environment Engineering Research Institute Nagpur (NEERI), under a national air monitoring programme, suggested and assisted by World Health Organisation (WHO), which had chosen our country as nodal point in South-East Asia for air monitoring in the year 1978. The main purpose of this programme was to alert the public and the authorities about abnormal increase in pollution levels, and to ultimately activate the local agencies to take up the programme into their hands.

Under the above mentioned National Air Monitoring programme, NEERI conducted the first survey of prevailing air quality in 9 major cities of India, in the year 1981. The results obtained in this survey are shown in Table 17.3.

*Amended by The Air (Prevention and Control of Pollution) Amendment Act,

This survey considered the following four air pollution parameters:

- (i) Total suspended particulate matter (TSPM)* in microgram per cubic metre of air ($\mu\text{g}/\text{m}^3$);
- (ii) Sulphur dioxide (SO_2) in $\mu\text{g}/\text{m}^3$;
- (iii) Sulphation rate (SR) as $\text{MgSO}_4/100 \text{ cm}^2/\text{day}$; and
- (iv) Dust fall (DF) in $\text{t}/\text{km}^2/\text{month}$.

Table 17.3. Annual Survey of Air Quality for Indian Cities for the year 1981

S. No.	City	TSPM $\mu\text{g}/\text{m}^3$ (annual average)	SO_2 mg/m^3 (annual average)	SR (Sulphation rate) $\text{MgSO}_4/100 \text{ cm}^2/\text{day}$ (annual average)	DF (Dust fall) $\text{t}/\text{km}^2/\text{month}$ (annual average)
1.	Ahmedabad	217	31	0.10	91
2*	Bombay	184	38	0.45	11
3.	Calcutta	522	900	0.45	34
4.	Delhi	433	31	0.20	31
5.	Hyderabad	143	30	—	—
6.	Jaipur	308	6	0.18	19
7.	Kanpur	432	13	0.19	34
8.	Madras	155	8	0.33	—
9.	Nagpur	199	12	0.22	34

The above survey clearly established that the air of most of the Indian cities were found to be highly polluted as far as total suspended matter was concerned, since its existing average annual value was found to be much more than the national standard of $140 \mu\text{g}/\text{m}^3$ (annual average). The existence of SO_2 , however, was found to be exceeding the maximum tolerable value of $80 \mu\text{g}/\text{m}^3$, only at Calcutta. The dust fall rate was also found to be quite high at Calcutta, Delhi, Kanpur and Nagpur. Realising this air pollution in the country, the Air (Prevention and Control) Act 1981 was passed by Indian Government and made effective wef May 16, 1981, although, initially, it virtually remained on the statue books of the country, without any effective implementation.

Due to non-implementation of effective anti air pollution measures, the air pollutants continued to increase in various cities of India, as were detected in a survey conducted in 1989, the results of which are shown in table 17.4.

Considering the harmful effects of NO_x in air, this survey also included measurements of NO_x , which was found to be exceeding the tolerable limit for urban areas of $60 \mu\text{g}/\text{m}^3$ in almost all the 5 cities surveyed, with Kolkata and Ahmedabad showing maximum pollution. This, survey also reflected excessive particulate pollution in Delhi and Kolkata.

*It includes natural particulates like pollen, spores, bacteria, Viruses, protozoa, fungi, plant fibers, rusts, volcanic dusts, etc. as well as anthropogenic particulates like fly ash.

Table 17.4. Air Quality Data of Certain Indian Cities for the Year 1989

S. No.	City	TSPM $\mu\text{g}/\text{m}^3$			SO_2 $\mu\text{g}/\text{m}^3$			NO_x $\mu\text{g}/\text{m}^3$		
		Min.	Max.	Mean	Min.	Max.	Mean	Min.	Max.	Mean
1.	Delhi	56	1082	331	*	42	13	16	56	33
2.	Madras	76	302	169	*	54	7	1	69	23
3.	Bangalore	21	478	141	7	104	27	8	70	23
4.	Ahmedabad	72	514	232	1	123	2	50	188	50
5.	Kolkata	90	1093	554	5	230	33	88	363	108

The excessive (serious) presence of TSPM (Total suspended particulate matter) in Bombay, Delhi and Calcutta was subsequently confirmed in a survey carried out by WHO in the year 1995, the results of which are shown in table 17.5. This survey placed Bangkok at the top of the 12 most polluted cities of the world, with three Indian cities Bombay, Kolkata and Delhi getting 3rd, 4th and 5th place, as shown in table 17.5.

Table 17.5. Most Polluted Cities of the World (WHO—1995)

S. No.	Name of the city	Pollution Problem in respect of					
		SO_2	TSPM	NO_2	CO	Pb	O_3
1.	Bangkok	L	S	L	L	M	L
2.	Beijing	S	S	L	—	L	M
3.	Bombay	L	S	L	L	L	—
4.	Kolkata	L	S	L	—	L	—
5.	Delhi	L	S	L	L	L	—
6.	Karachi	L	S	—	—	S	—
7.	Los Angeles	L	M	M	M	L	S
8.	Manila	L	S	—	—	M	—
9.	Moscow	L	M	M	M	L	—
10.	New York	L	L	L	M	L	M
11.	Rio de Janeiro	M	M	—	L	L	—
12.	Tokyo	L	L	L	L	—	S

S = Serious, M = Moderate, L = Low, — = Data not available

With continuing advancements, it has further been realised that the smaller sized respirable particles present in the total suspended particulate matter (TSPM) are extremely harmful to human health**, and hence, needs to be monitored separately. Accordingly, smaller sized particles upto 10 micron in size, known as Respirable suspended particulate matter (RSPM) or PM 10- are now a days also monitored in urban air, along with total suspended particulate matter (TSPM).

* Below detection limits.

** These can trigger lung cancer, respiratory and heart problems.

+Even smaller particles of upto 2.5 micron size, called PM 2.5, are also, nowadays, being monitored in developed countries, due to their excessive health hazards.

residents. So much so that almost 7.5-10 percent of males in Delhi suffer from various respiratory diseases. Another about 10 percent suffer from breathlessness, with functioning of their lungs found to be way below the expected levels. Similarly, a study in Bangalore has shown that 24.5 percent residents here suffer from asthma, while 69 percent traffic police personnel suffer from this disease. The result of Kolkata study shows that 47 percent adults have defective lung functions, whereas the lungs of about 10 percent of growing children are showing grave signs of degeneration. The results of TSPM and RSPM measurements and inflicting diseases caused by air pollution over the entire country are shown in Fig. 17.2.

In spite of such a serious air pollution situation across the entire country (32 out of 59 cities monitored showing critical pollution in terms of TSPM), the Indian Government is doing very little to remedy the situation, leaving implementation of all the anti-pollution laws to the Supreme Court of India, alone. Will these studies ring a bell in the Government's ears? Let us pray to our rulers to react positively to these emerging evidences, rather than leaving the people to their helpless fate.

17.8.1. National Ambient Air Quality Standards in India. The national ambient air quality standards in India were first notified in 1994, under the Environmental (Protection) Rules, 1986.

These standards have, however, been recently revised by notifying much tougher air quality standards on 16.11.2009, under which, unlike the old norms, the residential and industrial areas will have the same standards. Additionally, as compared to the regulation of only five pollutants under the old standards, now 12 pollutants are required to be monitored. The highly dangerous pollutants, like *PM 2.5*, *ozone gas* (ground level ozone), *lead*, *benzene*, *benzo(a) pyrene*, *arsenic* and *nickel* have been included for regulation under the new norms. The old pre-revised standards which still continue to be in practice are given in table 17.6; while the new revised standards are shown in Table 17.7.

In spite of the fact that these standards have been notified under the legally enforceable Environment Protection Act, these cannot be legally enforced, because the public cannot file suit against the State for any defiance of its provisions, as is possible in United States. These standards are, hence, meant only for guidance and awakening the Governments in power, to take actions for reducing concentration of industries in critically polluted areas. That is why, the MoEF has notified these standards without preparing for their implementation strategy.

What to talk of implementation of these revised tougher standards, the Indian Governments have failed even to implement and enforce the pre-revised relaxed air quality standards. It can, in fact, be observed that all the five metropolitan cities of India, with the exception of Madras, *do exceed* even the old relaxed standards in SPM pollution; and Kolkata and Ahmedabad exceed limiting values in SO_2 and NO_2 pollution also. Other important cities, like Hyderabad, Jaipur, Kanpur, Nagpur, etc. are also full of dust, smoke, and other pollutants.

Table 17.6. Pre-Revised National Ambient Air Quality Standards (NAAQS) of India

S. No.	Pollutants	Time weighted Average	Max. Permissible Concentrations in Ambient Air For				Method of measurement
			Industrial Areas ($\mu\text{g}/\text{m}^3$)	Residential, Rural and Other areas ($\mu\text{g}/\text{m}^3$)	Sensitive Areas ($\mu\text{g}/\text{m}^3$)		
(1)	(2)	(3)	(4)	(5)	(6)	(7)	
(1)	Sulphur Dioxide (SO_2)	Annual Average* 24 hours**	80 120	80 80	15 30	— —	Improved West and Gaeke method — Ultraviolet Fluorescence
(2)	Oxides of nitrogen as NO_2	Annual Average* 24 hours**	80 120	80 80	15 30	— —	Jacob and Hochheiser modified (Na-Arsenite) method — Gas Phase Chemiluminescence
(3)	(i) Total Suspended Particulate Matter (TSPM)	Annual Average* 24 hours**	360 500	140 200	70 100	— —	High Volume Sampling — Average flow rate not less than $1.1 \text{ m}^3/\text{minute}$

* Annual Arithmetic mean of minimum 104 measurements in a year, taken twice a week 24 hourly at uniform interval.

** 24 hourly/8 hourly values shall be met 98% of the time in a year; 2% of the time, it may exceed but not on two consecutive days.

(1)	(2)	(3)	(4)	(5)	(6)
(5)	Ozone (O_3), $\mu\text{g}/\text{m}^3$	8 hours** 1 hour**	100 180	100 180	— UV photometric — Chemiluminescence — Chemical Method
(6)	Lead (Pb), $\mu\text{g}/\text{m}^3$	Annual* 24 hours**	0.50 1.0	0.50 1.0	— AAS/ICP method after sampling on EPM 2000 or equivalent filter paper — ED-XRF using Teflon filter
(7)	Carbon Monoxide (CO), mg/m^3	8 hours** 1 hour**	02 04	02 04	— Non Dispersive, infrared (NDIR) — Spectroscopy
(8)	Ammonia (NH_3), $\mu\text{g}/\text{m}^3$	Annual* 24 hours**	100 400	100 400	— Chemiluminescence — Indophenol blue method
(9)	Benzene (C_6H_6), $\mu\text{g}/\text{m}^3$	Annual*	05	05	— Gas chromatography based continuous analyzer — Adsorption and Desorption followed by GC analysis
(10)	Benzo(a) Pyrene (BaP)-particulate phase only, ng/m^3	Annual*	01	01	— Solvent extraction followed by HPLC/GC analysis

* Annual Arithmetic mean of minimum 104 measurements in a year at a particular site taken twice a week 24 hourly at uniform intervals.

** 24 hourly or 08 hourly or 01 hourly monitored values, as applicable, shall be complied with 98% of the time in a year; 2% of the time, they may exceed the limits but not on two consecutive days of monitoring.

(Contd.)

(1)	(2)	(3)	(4)	(5)	(6)
(11)	Arsenic (As), ng/m^3		06	06	— AAS/ICP method after sampling on EPM 2000 or equivalent filter paper
(12)	Nickel (Ni), ng/m^3		20	20	— AAS/ICP method after sampling on EPM 2000 or equivalent filter paper
* Annual Arithmetic mean of minimum 104 measurements in a year at a particular site taken twice a week 24 hourly at uniform intervals. ** 24 hourly or 08 hourly or 01 hourly monitored values, as applicable, shall be complied with 98% of the time in a year; 2% of the time, they may exceed the limits but not on two consecutive days of monitoring. Note: "Whenever and wherever monitoring results on two consecutive days of monitoring exceed the limits specified above for the respective category, it shall be considered adequate reason to institute regular or continuous monitoring and further investigation." the Rules made thereunder, for various atmospheric pollutants.					

Note. The various air quality surveys have established that the suspended particles of waste matter in the urban environment in this country are found to be 2 to 6 times more than that in the advanced western countries.

The urban city air pollution has been primarily caused by automobiles, industries, thermal power plants, and burning of domestic coal or firewood.

So for example, Delhi alone releases about 2500 tonnes per day of pollutants into the atmosphere, consisting of about 12% of CO, 10% of NO, 70% of HC, and 8% of SO₂. About 64% of this total pollution load is caused by vehicular emissions, 16% by thermal plants, 12% by industry, and 8% by domestic sector. As a matter of fact, the pollution caused by thermal power plants has largely been reduced over the past years, due to the installation of Electro Static Precipitators (ESPs) at the city's three power plants (at Badarpur, Indraprastha and Rajghat), which have reduced the particulate matter from 720 tonnes in 1987 to 302 tonnes in 1992. These plants, however, continue to emit huge quantities of harmful SO₂ in the atmosphere. Pollution caused by industries has, however, not shown any disproportionate increase over the years due to installation of pollution control devices by about 400 large and medium sized industrial units. More than 10,000 small units, however, continue to cause air as well as water pollution.

The vehicular pollution has, however, increased quite disproportionately and alarmingly over the past years, to a level of about 1600 tonnes in 2005 from 870 tonnes in 1987. The total number of vehicles in Delhi has also gone up to a frightening figure of about 44 lakh in 2005 as against 2.35 lakh in 1976 and 5.62 in 1981, with continuing daily addition of about 600-700 new private vehicles*. Two wheelers constitute about 61% of total motor vehicles registered in Delhi, and hence constitute one of the major sources of air pollution. Not only the number of vehicles is high, but many of them are old and poorly maintained, emitting about four times more CO than those emitted in advanced countries. Installation of catalytic converters in all the new motor cars to be registered in Delhi, has therefore, been made a mandatory requirement in this capital city.

All these factors have made Delhi, as the 5th most polluted city of the entire world. With such a high degree of prevailing air pollution, with excessive particulate matter and CO in the air, Delhi, the capital of India, has become a very unhealthy place to live, with different kinds of viruses always infecting its residents, and the incidence of bronchitis being 6-14 times more than the average elsewhere in India. The situation is, in fact, no good in other metropolitan cities of India, with Bombay and Calcutta gaining 3rd and 4th place among the 12 most polluted cities of the world (Pl. refer table 17.5) in over a few past years. The situation is, in fact, becoming bad to worse with every passing day.

PROBLEMS

1. "Biosphere is an ecosystem", discuss critically this statement, explaining the essential components of the biosphere.
2. (a) Define Ecology and Ecosystem.
(b) Explain the Ecological balance of nature.
3. (a) Define and explain the biotic and abiotic components of an ecosystem.
(b) Explain in brief the impact of humans on the biosphere.
4. Write an essay on pollution and conservation of environment.
5. Explain the status of administrative control on environment in India.
6. What is the status of water pollution in India, and how is it monitored and controlled?
7. Write a note on the status of air pollution in India, and explain as to how it is monitored and controlled.
8. Mention the national ambient air quality standards of important air pollutants prescribed in India under the Environment (Protection) Act, 1986, for different categories of areas.

*The total number of vehicles in Delhi has further gone up to 64.52 lakh as on March 2011, with an average daily addition of 1000 new vehicles. This is more than the combined total number of vehicles in Mumbai, Madras and Kolkata.

Engineering of Air Pollution, Its Control, and Monitoring

18.1. Definition of Air Pollution

Air is one of the most important constituents of our environment. An average human being requires about 12 kg of air each day, which is nearly 12 to 15 times greater than the amount of food consumed. Eventually, even a small concentration of pollutants present in the air becomes more harmful to human health, in comparison to similar concentrations of pollutants present in food. The clean and pure air, free from outside solid, liquid or gaseous polluting substances (called pollutants), is evidently very essential for human health and survival. Any change in the natural and normal composition of the air (either qualitative or quantitative), that may adversely affect the living system, particularly the human life, invariably causes air pollution.

Air pollution is, therefore, defined as the presence of any solid, liquid, or gaseous substance (including noise) present in the atmosphere in such concentrations that may or tend to be injurious to human beings, or other living creatures, or plants; or property, or enjoyment. The solid, liquid, or gaseous substances, which when present in air, cause harmful effects on the abiotic and biotic components of our environment, are eventually called the air-pollutants. When the quantum of air pollutants exceed the self cleansing properties of the ambient air, and start causing harmful effects on the human health and his surrounding abiotic world, then the air is said to be polluted.

18.2. Natural and Man-made Air Pollution

Air pollution, may be caused by the naturally occurring events, like volcanoes—which release huge amounts of ash, dust, sulphur, and other gases into the air-atmosphere; or by forest fires—that may occasionally be caused by lightning; etc. In addition, the air pollution may be caused by human activities, such as burning of fossil fuels, intentional burning of forests to clear land for urbanisation or agriculture, etc. Whereas, the air pollutants caused by the natural hazardous events tend to remain in the atmosphere for a short time; the air-pollutants released by human activities may continue to stay in the air environment for long periods, and may even lead to permanent atmospheric changes. One of the reasons for this is the fact that the natural hazardous events causing air pollution do occur very infrequently; while the man-made releases of air pollutants is an ongoing continuous phenomena on daily basis.

Since the air pollution caused by the natural hazardous events is very infrequent and is automatically taken care of by the environment, we generally ignore this type of air pollution, and whenever we think of air pollution, we always mean the air pollution caused by the human activities.

18.3. History and Causes of Air Pollution

The air pollution on Earth originated when the man started using firewood for cooking and heating purposes. Hippocrates, a well-known ancient physician, who practised medicine on the Greek Island of Cos, at about 400 BC and is considered to be the father of the medicine for his 80 written medical works, had written about the air pollution prevailing even in those ancient times. With the discovery and increasing use of coal, air pollution has gone on becoming more and more pronounced, especially in urban areas. Smoke pollution in London became so pronounced at about 1200 AD, that King Edward I was prompted to order the first anti-pollution law in the year 1273 to restrict people from using coal for domestic heating. In the year 1300, another law was enacted in London, banning the use of coal, and prescribing capital punishment for defiance of this law. In spite of such harsh measures, air pollution assumed gigantic proportions in London during the *Industrial Revolution*, due to widespread use of coal in industries. So much so that a major disaster caused by 'London smog' occurred in December 1952, which caused the death of about 4000 people due to accumulation of air pollutants over the London city for five consecutive days. By the middle of 19th century, barks of many trees in Europe, were blackened by smoke, due to which, the *peppered moths* (insect worms living on trees, like caterpillars) of all colours other than the black coloured varieties, were easily picked up by birds, as they failed to camouflage on black tree bark, as they did when on a clean lichen-covered tree. Thus, although the normal pepper-patterned moths continued to survive in clean non-industrial areas, only black-coloured moths could survive in industrial areas, as they alone could successfully camouflage. Thus, with the increased air pollution, only black coloured moths could survive, and other species started to become extinct. *This is a classic example of air pollution, leading to adaptations and environmental imbalances caused in various biological species.*

Air pollution further began to increase in the beginning of the 20th century with the development of transportation systems, and large scale use of petrol and diesel in automobiles. The use of coal and diesel for running trains, use of petrol or diesel for running auto vehicles, and use of aviation fuel for running aeroplanes, have largely contributed to air pollution in modern days.

Air pollution caused by the emissions of *smokes* from factories, coke ovens, furnaces, steam engines, etc.; *exhaust fumes* from automobiles, power plants, etc.; *injurious chemical fumes* from oil-refineries, zinc refineries, chemical industries, metallurgical plants, iron and steel plants, incineration plants, etc.; *evolution of radioactive gases and suspended radioactive dusts* from atomic explosions and accidental discharges from nuclear reactors, etc. have polluted our natural air environment to such an extent that special steps are

With the development of industries and increasing number of automobiles in its various towns and cities, India is now no longer left with its natural clean air. Air pollution disasters have, therefore, been occurring from time to time in India, as they used to occur in the presently developed countries in their initial years of development. The greatest Indian industrial disaster, leading to serious air pollution, took place in Bhopal on 03.12.1984, where the extremely poisonous Methyl Isocyanide (MIC) gas was accidentally released from the pesticide manufacturing plant of Union Carbide, a U.S. MNC.

18.4. Various Pollutants Causing Pollution of Air

The atmospheric air may contain hundreds of air pollutants from the natural or the anthropogenic (manmade) sources. All these pollutants, which are emitted directly from the identifiable sources, either from the natural hazardous events like dust storms, volcanoes, etc.; or from human activities like burning of wood, coal, oil in homes or industries or automobiles, etc.; are called the primary pollutants. The following five primary pollutants contribute to about 90% of the global air pollution:

The Important Primary air pollutants are:

1. Oxides of sulphur, particularly the sulphur dioxide (SO_2);
2. Oxides of carbon like carbon monoxide (CO) and carbon dioxide (CO_2), particularly the carbon monoxide (CO);
3. Oxides of nitrogen, like NO , NO_2 , NO_x (expressed as NO_x);
4. Volatile organic compounds, mostly hydrocarbons; and
5. Suspended particulate matter (SPM).

Certain less important primary pollutants are hydrogen sulphide (H_2S); hydrogen fluoride (HF) and other fluorides; methyl and ethyl mercaptans, etc.; which are usually rarely found in our general atmosphere, although if present, may prove quite harmful.

These primary pollutants often react with one another or with water vapour, aided and abetted by the sunlight, to form entirely a new set of pollutants, called the secondary pollutants. These secondary pollutants are the chemical substances, which are produced from the chemical reactions of natural or anthropogenic pollutants or due to their oxidation, etc., caused by the energy of the sun. These new pollutants are often more harmful than the original basic chemicals that produce them.

The important secondary pollutants are:

- (i) Sulphuric acid (H_2SO_4);
- (ii) Ozone (O_3);
- (iii) Formaldehydes; and
- (iv) Peroxy-acyl-nitrate (PAN); etc.

H_2SO_4 is formed by the simple chemical reaction between SO_2 and H_2O vapour, and is a much more toxic pollutant than SO_2 , having far reaching effects on environment, since it causes acid rains (discussed in detail in article 19.1).

Other secondary pollutants like ozone, formaldehyde, PNA, etc. are formed by the *photochemical reactions*, caused by sun light between two primary pollutants. Say for example, O_3 is formed due to the photochemical reaction between hydrocarbons (HC) and nitrogen oxide (NO). Similarly, aldehydes may be formed by photochemical oxidation of hydrocarbons in the atmosphere.

All these major air pollutants are now discussed below in details, mentioning their hazardous effects on human body, alongwith their sources of origin.

18.4.1. Oxides of Sulphur. Sulphur dioxide (SO_2) is the basic air pollutant amongst all the oxides of sulphur. SO_2 is an irritant gas, and when inhaled, affects our mucous membranes. It increases the *breathing rate* and causes *oxygen deficits* in the body, leading to *bronchial-spasms* in some of the affected persons. *Patients of asthma are very badly affected by this pollutant.*

Some quantity of atmospheric sulphur dioxide (SO_2) may oxidise to form sulphur trioxide (SO_3), which when inhaled, may dissolve in the body fluids to form sulphuric acid (H_2SO_4), which is a very strong corrosive acid. SO_3 , thus, causes high and worse irritation even at lower concentrations, leading to *severe broncho-spasm*.

SO_2 is also responsible for causing acidity in fogs, smokes, and in rains, and hence is the major source of corrosion of buildings and metallic objects.

SO_2 mainly originates in the atmospheric air from the : *refineries and chemical plants, smelting operations, and burning of fossil fuels.* Thermal power plants may emit SO_2 quantities, as high as $\frac{1}{10}$ th of the coal burnt by them. *Open burning of garbage* as well as *municipal incineration plants* may also emit sulphur dioxide in the air.

The new revised Indian ambient air quality standards (Table 17.7) prescribe the permissible maximum annual average concentration of SO_2 for residential areas, as equal to $50 \mu g/m^3$, which approximates to 0.019 ppm* at $20^\circ C$.

*The concentrations of suspended particles and gaseous pollutants are generally expressed as micrograms per cubic metre ($\mu g/m^3$) at atmospheric temperature and pressure. The reason for expressing the pollutant's presence as mass per unit volume of air is that : *living things breathe air by volume but are affected by the mass of the pollutants absorbed by them.*

When the concentration of a pollutant is expressed in cum per million cum of air, we call it as ppm. The relation between ppm and $\mu g/m^3$ is given by the formula :

$$1 \mu g/m^3 = \frac{1 \text{ ppm} \times \text{molecular mass of pollutant}}{\text{L/mol of pollutant at the given temperature and pressure } (V_2)} \times 10^3 \text{ L/m}^3.$$

The value of L/mol (i.e. volume in litres occupied by one molecule of pollutant gas) at $0^\circ C$ and 1 atmospheric pressure i.e., 760 mm Hg) is equal to 22.4. At other values of temperature and pressure, its value is governed by the Combined gas law as :

$$\frac{P_1 V_1}{T_1} = \frac{P_2 V_2}{T_2}$$

where $P_1 = 760 \text{ mm Hg}$

$V_1 = \text{Vol. at } 0^\circ C \text{ and 1 atm pressure} = 22.4 \text{ L/mol}$

$T_1 = 0^\circ C = 273^\circ K$

The value of V_2 at the given temperature (T_2) and pressure (P_2) can be easily determined and used.

Thus, at $20^\circ C$ and at 1 atmospheric pressure,

$$\frac{760 \text{ mm of Hg} \cdot V_1}{273 \text{ K}} = \frac{760 \text{ mm of Hg} \cdot V_2}{(273 + 20) \text{ K}}$$

$$\text{or } V_2 = \frac{293}{273} \times V_1 = \frac{293}{273} \times 22.4 \text{ L/mol} = 24.04 \text{ L/mol}$$

$$\therefore 1 \mu g/m^3 \text{ of } SO_2 = \frac{1 \text{ ppm} \times 64 \text{ g/mol}}{24.04 \text{ L/mol}} \times 10^3 \text{ L/m}^3$$

$$50 \mu g/m^3 \text{ of } SO_2 = \frac{SO_2 \text{ in ppm} \times 64 \times 10^3}{24.04}$$

$$\text{or } SO_2 \text{ in ppm} = \frac{50 \times 24.04}{64 \times 10^3} = 0.019 \text{ ppm.}$$

18.4.2. Carbon Monoxide (CO). Carbon monoxide is a colourless, odourless, and toxic gas, produced when organic materials like natural gas, coal, or wood are incompletely burnt. Vehicular exhausts are the single largest source of carbon monoxide, as the number of vehicles have increased and is increasing by leaps and bound over the world. Poorly maintained vehicles and those having inefficient engines, without being fitted with adequate pollution control devices, release greater amounts of carbon monoxide. Carbon monoxide possesses about 200 times affinity for blood-haemoglobin (H_b) than oxygen. Eventually, when inhaled, CO replaces O_2 from the haemoglobin, and forms what is known as carboxy-haemoglobin ($CO.H_b$). This carboxy-haemoglobin is of no use for respiratory purposes; and hence, CO inhalation impairs normal oxygen transport carried out by the blood. Low levels of CO inhalations produce symptoms like headache, dizziness, reduction in reaction time, etc. Higher levels of CO inhalations may cause nausea, heart palpitations, difficulty in breathing, etc. In extreme cases, when about half of the haemoglobin of the blood is used up in forming carboxy-haemoglobin, death becomes a certainty.

Persons dying of carbon monoxide inhalations exhibit characteristic bright pink colour of the flesh due to the presence of pink coloured carboxy-haemoglobin in their bloods.

Presence of carbon monoxide in pregnant woman's blood has been attributed as a possible cause of still births and deformed offsprings.

Fortunately, however, carbon monoxide (CO) is not a permanent pollutant, since natural processes do convert carbon monoxide to other compounds that are not harmful. Therefore, the atmosphere can be cleared of carbon monoxide, if no new carbon monoxide is introduced into the atmosphere.

In cities having higher numbers of automobiles and industries, however, CO is found in as high concentrations as up to 60 mg/m^3 (64 ppm) with still

the running automobiles, as against the maximum permissible concentration of about 10 mg/m^3 .

The new revised national ambient air quality standards in India prescribe the maximum permissible concentration of CO, on hourly weighted average basis, as equal to 4 mg/m^3 for residential areas, as shown in Table 17.7.

18.4.3. Oxides of Nitrogen (NO_x). Atmospheric nitrogen may combine with oxygen at high temperatures, as generated during fuel combustion, to form nitric oxide (NO). The nitric oxide (NO) at low levels is relatively harmless, but at high concentrations may cause asphyxiation and respiratory discomfort, because it combines about 3 lakh times faster with haemoglobin than oxygen. Larger concentrations may cause quick deaths.

The nitrogen oxide further readily combines with the atmospheric oxygen, to form nitrogen dioxide (NO_2), which again is a very harmful compound for human health, as it is responsible for causing eye and nasal irritations, respiratory discomforts, and even deaths, as caused by NO. Prolonged exposures to somewhat higher concentrations of NO_2 exceeding the permissible concentration, has also been attributed to having caused serious diseases like *emphysema* (swelling due to air in body tissues), increased susceptibility to pneumonia, and even lung cancer.

Under the now revised national ambient air quality standards prescribed in India (Table 17.7), the maximum average annual concentrations of oxides of nitrogen as NO_2 for residential areas is $40 \text{ } \mu\text{g/m}^3$, which approximates to 0.021 ppm.

Very high concentrations of oxides of nitrogen, such as about 40 to 50 mg/m^3 of NO_2 , may cause great respiratory discomfort, leading to quick deaths. For example, many deaths are reported to have occurred in a fire in a clinic in Cleveland in USA in May 1929 due to evolution of NO_2 from the burning of X-ray films.

The oxides of nitrogen originates into the atmosphere from automobile exhausts, incineration plants, furnace smokes, etc.; all involving high temperatures due to combustion of fuel.

Oxides of nitrogen become more significant, as they are involved in the formation of secondary air pollutants, such as ozone.

18.4.4. Hydrocarbons (HC). Hydrocarbons are the group of compounds consisting of carbon and hydrogen atoms. They are either evaporated into the atmosphere from the petroleum fuel supplies (such as petrol, diesel, etc.) or are emitted out in the automobile exhausts as the remnants of petroleum fuel that did not burn completely. The hydrocarbons may, therefore, also be contained in the smokes of incinerators using petroleum fuel for burning. They may also be contained in the fumes of oil refineries.

Hydrocarbons are washed out of the air when it rains, and run into surface water. Their presence in water causes an oily film on the water surface.

In low concentrations and when washed away in quick succession by rains, they do not generally cause much harm; but at high concentrations, they may cause irritation of eyes and respiratory tract, and at least eight of them have

The hydrocarbons are generally divided into two categories, i.e.

- (i) *aliphatic group* of hydrocarbons; and
- (ii) *aromatic group* of hydrocarbons.

The aliphatic hydrocarbons include: alkanes (methanes), alkenes (olefins), and alkynes. Out of these three varieties of aliphatic hydrocarbons, only the alkenes (olefins) are found to be harmful, as they are unsaturated and highly reactive in the atmosphere through photochemical reactions. Alkanes (methanes) are simply inert hydrocarbons and do not react photochemically. The third variety i.e., the alkynes, though quite reactive, is generally not found present in the atmosphere, and hence is of no importance to us in the air pollution studies.

Due to this photochemical reactionary property of the alkenes (olefin) type of hydrocarbons, it has become very important to study and monitor the presence of such hydrocarbons in the air.

The presence of hydrocarbons in the city air, is, therefore, attracting a lot of attention, because the olefin type of hydrocarbons react with other pollutant gases, forming new pollutants, which are even more harmful than the individual original pollutants.

Hydrocarbons are chiefly released into the atmosphere by automobile exhausts. Paraffins and olefins have been found to be the chief hydrocarbons present in large quantities in the air of Los Angeles city of U.S.A., where heavy number of automobiles ply every day.

The specified standard for non-methane types of aliphatic hydrocarbons under U.S. Ambient Air Quality Standards is $160 \text{ } \mu\text{g/m}^3$ (0.24 ppm).

The benzene and its related poly nuclear group of aromatic hydrocarbons are also considered to be very important in air pollution studies, because many of these compounds have been shown to be carcinogenic (likely to produce cancers). Increase in lung cancers in cities have been blamed on these hydrocarbons, caused by automobile exhaust emissions. Out of many varieties of such hydrocarbons, Benzo (a) pyrene has been found to be the most carcinogenic hydrocarbon, followed by Benzo (e) acephenanthrylene, and Benzo (j) flouroranthene. Various other varieties, with less carcinogenic properties are also known.

The Ambient Air Quality Standards adopted by the Environment Protection Agency (EPA) of USA, does not specify any particular standard for these aromatic hydrocarbons. However, considering their harmful potential, the new revised air quality standards of India has imposed limits on annual concentrations of Benzene and Benzo (a) Pyrene for not to exceed $5 \text{ } \mu\text{g/m}^3$ and 1 ng/m^3 , respectively. (Pl. see Table 17.7)

Aldehydes and ketones may also be considered under hydrocarbons, because they are formed by the photochemical oxidation of hydrocarbons, as secondary pollutants in the atmosphere, although they may also be released by automobiles and incinerators along with hydrocarbons. Substances like formaldehydes cause irritation of eyes, skins and lungs; and hence, may be quite injurious to health.

The presence of hydrocarbons in the environment may prove to be quite hazardous, and hence needs to be properly monitored.

18.4.5. Suspended Particulate Matter (SPM). The particulate matter in air may occur largely in *solid form* as particles of dust, smoke, fume, etc. ; and also in *liquid form* as mist and fog. The particles larger than a molecule but small enough to remain suspended in air are called **aerosols**.

The meanings of various types of solid and liquid particles, constituting total suspended particulate matter (TSPM) in air, are indicated below in table 18.1.

Table 18.1. Types of Particulates in Suspended Matter

S. No.	Term	Meaning	Examples
(A)	Liquid particles		
1.	<i>Mist</i>	Aerosols consisting of liquid droplets.	Sulphuric acid mist.
2.	<i>Fog</i>	Aerosols consisting of water droplets.	
(B)	Solid particles		
1.	<i>Dust</i>	Aerosols consisting of solid particles that are blown into the air, or are produced from larger particles by grinding them down.	Dust storm.
2.	<i>Smoke</i>	Aerosols consisting of solid particles or a mixture of solid and liquid particles produced by chemical reaction, such as by fires.	Cigarette smoke, smoke from burning of garbage, etc.
3.	<i>Fumes</i>	Generally means the same as smoke, but often used to indicate aerosols produced by condensation of hot vapour of metals.	Zinc/lead fumes.

The various types of suspended particles in air w.r. to their relative sizes are shown in Fig. 18.1.

The suspended particulate matter in the atmosphere is a variable component, and is introduced either through natural phenomena like winds, volcanic eruptions, pollens and spores, decomposing particles of organic matter, etc., or through human activities like mining, burning of fossil fuels, industrial processes, etc.

The suspended particulate matter in air may prove to be harmful to human health, inspite of the fact that the human respiratory system has a number of mechanisms for protecting the lungs from the entry of particles from air along with respiration. Infact, the bigger particles ($> 10 \mu$) can be trapped by the hairs and sticky mucus in the lining of the nose (Pl. see Fig. 18.2). Smaller suspended particles of up to 10 microns (μ)* can, although reach tracheo-bronchial system, but get trapped there in the mucus. They are sent back to the throat by beating of hair like cilia, from where they can be removed by spitting or swallowing. However, very small suspended particles may still reach the lungs, and damage the lung tissues, causing diseases like asthma, bronchitis, and even lung cancer, when such particles bring with them toxic

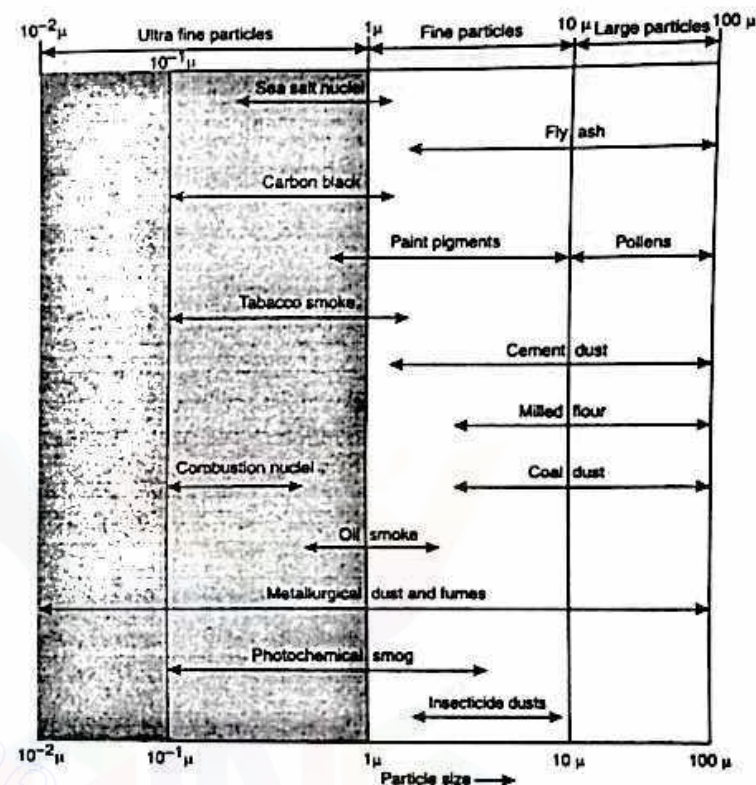


Fig. 18.1. Various types of suspended particles in air w.r. to their relative sizes.

During air pollution monitoring, it, therefore, becomes necessary as to not only study and control the total suspended particulate matter (TSPM), but also the more harmful smaller **Respiratory suspended particulate matter (RSPM)**. The smaller sized particles of up to 10 micron in size are designated as RSPM or PM 10.

The old national ambient air quality standards (in India) prescribed the maximum annual average concentrations of TSPM = $140 \mu\text{g}/\text{m}^3$; and of RSPM = $60 \mu\text{g}/\text{m}^3$, for residential areas, as shown in table 17.6.

Further advancements in air pollution studies have also shown that the particles which are smaller than 10 micron in size, prove to be much highly dangerous to human health. Such smaller particles of sizes up to 2.5 micron, called PM 2.5, are hence being also monitored in modern days. Considering their importance, the revised national ambient air quality standards of India (Table 17.7) have specified max. annual concentrations of PM 10 and PM 2.5 to be $60 \mu\text{g}/\text{m}^3$ and $40 \mu\text{g}/\text{m}^3$, respectively.

Allergic agents. Various microscopic particulate substances, called **aero-allergens**, may also be present in air, and may cause allergic reactions in sensitive human bodies.

The reactions to such substances occur in our body mainly in the skin and the respiratory tract. Sneezing is one symptom of allergy, followed by *skin troubles and/or bronchitis, asthma, etc.*

Such organic allergens have been largely found to originate from living things like plants, animals, etc., although, however, finely powdered industrial materials may also sometimes cause allergic reactions in sensitive persons.

Pollen grains and fungal spores from local plants are one of the worst allergens. About 20 micro metre in diameter, *ragweed pollen* is usually deposited within 90 m of the parent plant, and hayfever and asthma sufferers coming within that range are liable to suffer severe allergic reactions and asthma attacks.

The high degree of allergy caused by *pollens and spores*, originating from the local plants, makes our beautiful city of Bangalore, a dreaded place for asthmatics and allergic persons. Instances have even been cited, where not only the asthmatics have had asthma attacks on them in Bangalore, but even normal persons who had never exhibited asthma tendencies earlier, got attacks of asthma in this city of fine climate. The *Asthma-Research Society* has in fact, identified 75 types of air-borne pollens and 120 types of spores here; among which the pollen of *parthenium plant* was found to be the highest (41%), followed by *grass pollen* (28.8%), and *pollens of cassia species* (11.8%).

Besides the pollens and spores, other important allergens are: *animal hairs, furs, feathers, dusts, spices, cotton flakes, flour, tobacco*, etc. besides certain chemical compounds. Say for example, SO_2 and compounds of cobalt and beryllium are found to cause allergic reactions in certain sensitive persons. Similarly, commercial fur dye—*paraphenylenediamine* is an allergic agent, capable of causing dermatitis in addition to bronchial asthma. Factories processing the castor beans for oil extraction, release a powdery material into the air, which is a strong allergen.

18.4.6. Lead is another major air pollutant that remains largely unmonitored, and is emitted by vehicles. High lead levels have been reported in the ambient air in our metro cities. Leaded petrol is the primary source of air-borne lead emissions in Indian cities. The compulsory use of unleaded petrol in cities like Delhi, has, however, reduced the lead menace from the atmospheric air here in this city. The revised air quality standards of India (Table 17.7) have prescribed a general annual concentration of $0.50 \mu\text{g}/\text{m}^3$.

18.4.7. Photochemical Smog and Production of PAN and Ozone. Smog is a mixture of smoke and fog. It can be of two types; i.e. photochemical and coal induced. The atmospheric conditions favourable for formation of *photochemical smog* are: the presence of high concentrations of hydrocarbons and nitrogen oxides in the atmosphere; (ii) air stagnation, as not to cause dispersal of air pollutants; and (iii) abundant sunlight. The formation of photochemical smog is restricted to highly motorised cities. The photochemical smog was first observed in Los Angeles (USA) in mid 1940; and since then, this phenomenon has been detected in most of the major metropolitan cities of the world. Smog is caused by the interaction of some

giving rise to the formation of dangerous *peroxy-acetyl-nitrate (PAN)*. The main constituents are nitrogen oxide, PAN, hydrocarbons, carbon monoxide, and large quantity of ozone. While PAN in itself is an extremely harmful gas, the ozone gas is also quite harmful to the respiratory system, as it may enter deeper into the lungs (lower lobes) than even the oxides of sulphur. At concentration of about 0.3 ppm, cough and chest discomfort is increased. People suffering from chronic respiratory diseases are particularly susceptible.

The new revised national ambient air quality standards of India prescribe the maximum permissible concentration of O_3 , on hourly weighted average basis, as equal to $180 \mu\text{g}/\text{m}^3$ for residential areas, as shown in Table 17.7.

A very prominent example of occurrence of photochemical smog is offered by the London smog, which occurred over the city of London during 5th and 8th December, 1952, in which the residents were choked and more than 4000 people died due to suffocation. It is understood that this incident occurred due to a combination of fog and smoke pollution containing sulphur dioxide released due to large scale burning of coal and oil, domestically as well as in fossil fuel power plants. At the time of this occurrence, the environment became stable without much wind movement, since an *anticyclone* reached London from the North-West and became stationary, with the result that the whole of London came under the pool of cold stagnant air, with a warm dense layer of air lying over the cooler air below, causing *subsidence inversion* [explained in article 18.6.2].

18.5. Effects of Air Pollution

One of the most obvious local effects of particles in the atmosphere is a *reduction in visibility*. Soot and smoke is usually quite apparent in highly industrialised and motorised cities. The reduction in visibility often causes slowdown of air-traffic, needing costly instrument-guided landing systems.

The presence of gases in the atmosphere has been causing the most prominent effect of producing *objectionable odour, taste, or obvious corrosive or chemical effects on objects*. Due to their chemical and corrosive effects, the air pollutants have been damaging the exteriors of buildings and cars by breaking down the paint emulsions, causing heavy economical losses. The air pollutants have been quickly spoiling the fabric and leather dresses worn by human beings, along with causing skin damages on their exposed body parts. Several monuments and old beautiful buildings made in exposed stone and marbles, have been badly spoiled and damaged by the acidic fumes. In addition to such apparent damages caused to the various objects, air pollution causes several adverse health effects on humans as well as plants and animals, besides affecting the goods and services, as discussed below:

18.5.1. Effects of Air Pollution on Human Health. The adverse effects of air pollution on human health has remained the prime consideration in air-pollution studies and research for obvious reasons. Although initially, the specific pollutants generating the observed adverse health effects, could not be clearly identified, but sufficient information could be gathered to implicate certain pollutants as the significant contributors to those adverse effects and diseases caused in humans. The research was, therefore, concentrated on

As indicated earlier, the upper human respiratory system (nasopharyngeal) is quite efficient in filtering the larger particles of air we breath. Particles smaller than 5 microns ($5 \mu\text{m}$), however, can penetrate to the lungs, and be deposited in the alveoli. Fig. 18.2 shows the percentage of particles of various sizes deposited in the respiratory system, using an aerodynamic model.

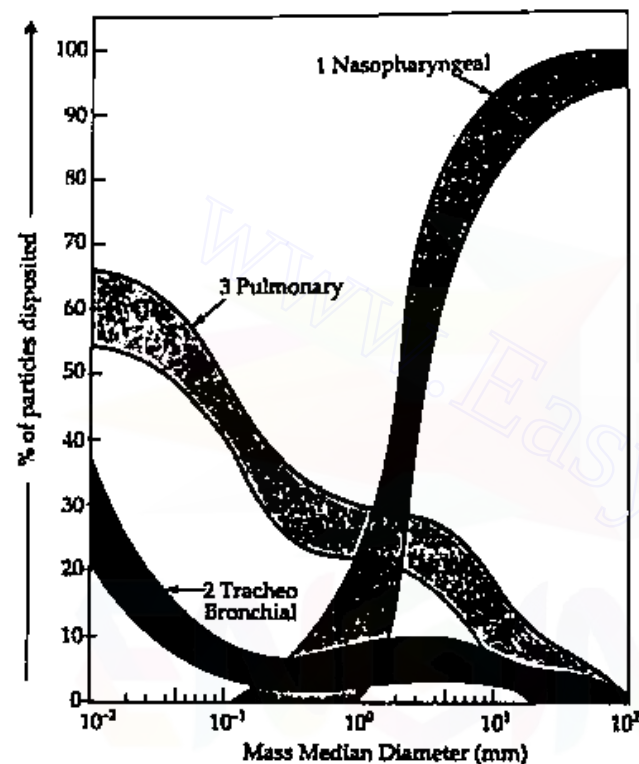


Fig. 18.2. Percentage of particles of different sizes deposited in the respiratory tract—consisting of (i) nose and throat region—called nasopharyngeal; (ii) tubes leading to lungs—called tracheobronchial; and (iii) lung regions—called pulmonary.

It can be seen from this figure that the smaller is the size of the particles, the greater percentage of the same will get deposited in the lung (pulmonary); whereas the larger sized particles will remain in the upper respiratory regions. This research led to the start of monitoring of smaller sized particles of sizes up to 10 micron (PM 10), called the Respiratory suspended particulate matter (RSPM) in 1987 in the United States, as compared to the previous monitoring of only the total suspended particulate matter (TSPM), as it was recognised that particles smaller than 10 micron are better indicator of potential adverse health effects of particulate air pollution. For example, cigarette smoke particles are smaller than 1 micron, and, hence, more than 25% of them get deposited in the lungs (Pl. see Fig. 18.2).

Some particles in the air are particularly damaging, because they absorb or adsorb gases, which cause more intense irritation locally. Gases also

body through the respiratory system can affect the gastro-intestinal system. Some chemicals such as lead, can enter the human blood stream either from the digestive system (ingestion) or by passing through the lung membranes (the respiratory system). Some other particles like tritium, systematic pesticides or herbicides, and a few other chemicals can even enter the blood stream through the skin.

Each pollutant affects the human body differently. The time of exposure is also an important consideration, as short term exposures to high concentrations of pollutants may cause *acute effects*; while the long term exposures may cause *chronic effects*.

A brief description of the health effects caused by the different types of airborne pollutants, though indicated while describing different pollutants, is again summarised in table 18.2.

Table 18.2. Effects of Air-Pollutants on Human Health

S. No.	Pollutant	Characteristics if any	Source	Health Effects
(1)	(2)	(3)	(4)	(5)
1.	Suspended Particulate matter.	Solid particles like dust, smoke and fumes; liquid particles like mist and fog.	Dust ¹ storms; cigarette smoke; smoke from burning of garbage, fossil fuel; and fumes like those of zinc or lead, etc.	Effects on breathing and respiratory systems, aggravation of existing respiratory and cardiovascular diseases, alteration of body's defence systems against foreign materials, damage to lung tissues, carcinogenic effects, and premature mortality (still births). Elderly people and children are most sensitive.
2.	Sulphur dioxide (SO_2)	Colourless gas; Taste threshold at about 0.3 ppm; and Odour threshold at about 0.5 ppm.	Combustion of oil, and coal in power stations or automobiles.	Effects on breathing, respiratory illness, breakdown of lung defences, aggravation of existing respiratory and cardiovascular diseases and death. Asthmatics and those suffering from chronic lung and cardiovascular diseases are sensitive to SO_2 exposure. Elderly people and children are greatly affected. It may lead to photochemical smog in some areas by oxidising the hydrocarbons.
3.	Carbon monoxide gas (CO)	Colourless, tasteless, odourless gas at atmospheric concentrations.	Incomplete combustion of coal and oil (diesel, petrol, etc.) fuels.	The health threat of CO is maximum to those having cardiovascular diseases, because it reduces oxygen delivery to organs and tissues. At elevated concentrations, CO impairs visual perception, manual dexterity, and mental ability. Under short term exposure, it causes drowsiness and headaches. It also leads to formation of photochemical smog in some areas.

(1)	(2)	(3)	(4)	(5)
4	Nitrogen oxides (NO_x)	NO is a reddish-brown highly reactive gas. Odour threshold is at about 0.2 ppm.	High temperature combustion in automobiles (cars, etc.) and to some extent in thermal power stations.	NO plays a major role in tropospheric ozone formation. NO_2 irritates the lungs, causes bronchitis and pneumonia, lowers resistance to respiratory infections. Asthmatics are most susceptible, and increases susceptibility to viral attacks. It also plays a major role in tropospheric ozone formation.
5	Lead	Colourless vapour. Consumed through inhalations. Lead compounds may also be consumed with food.	The major source is leaded petrol used by cars. Ingestion and inhalation may also occur from food, water, soils or dust.	High lead exposures can cause seizures, mental retardation, and behavioral disorders. Fetuses, infants and children are especially susceptible to low doses, resulting in disorders of central nervous system. Lead uptakes may be a factor in high blood pressure and heart disease.
6	Ozone (O_3)	Colourless gas. Threshold odour is about 0.3 ppm.	A secondary pollutant produced by photochemical pollution, being the largest constituent of photochemical smog along with PAN, etc.	Ozone reduces lung function, and is associated with coughing, sneezing, chest pain, and pulmonary congestion. It may affect all healthy people as well as the asthmatic people with impaired respiratory systems.
7	Carbon dioxide gas (CO_2)	Colourless gas found in air.	Combustion of coal, petrol and diesel.	Increasing concentrations over the years cause green house effect, leading to global warming and climate changes.
8	Nuclear waste	Invisible radioactive emissions and gases.	Nuclear power plants, nuclear weapon testing, wars, etc.	Causes radioactivity contamination of areas; cancers, mutations, deaths.

18.5.2. Effects of Air-pollution on Plants. The adverse impacts of air pollution are not limited to human health alone, but plants and animals are also detrimentally affected by air pollutants. The most prominent air pollutant, which causes severe damage to the plants is fluorine. Fluorine is emitted from factories manufacturing aluminium, glass, phosphate fertilizers, etc.; and in some clay baking operations. The concentrations of fluorine in excess of about $0.3 \mu\text{g}/\text{m}^3$ cause *Phyto-toxicological effects* on plants. Frequently, the plant damage is observed on the fruit or on the flower, either of which significantly lowers the value of the crop. The plants are, in fact, adversely affected by fluorine at much lower concentrations than what may be harmful to human health.

The most obvious damage caused by the general air pollutants like SO_2 , H_2F , HCl , Cl_2 , O_3 , NO_x , NH_3 , Hg , H_2S , H_2N , PAN, herbicides, smog, etc., to the

plants and vegetation occurs in the leaf structure; as the pollutants clog the stomata of the leaf, thereby reducing the intake of CO_2 , which adversely affects the photosynthesis. These adverse impacts may range from reduction in growth rate to the total death of the plant.

Different plants and animals, however, have different susceptibilities to air pollutants. For example, *sugar maple* can tolerate relatively higher concentrations of sulphur dioxide alone, but it is susceptible to damage under the combined exposure of SO_2 and O_3 together; *white pine* on the other hand is very sensitive to damage from either pollutant alone.

Plants also absorb low concentrations of pollutants like fluorine, and heavy metals like arsenic, lead, mercury, cadmium, etc.; which prove very harmful to cattle and animals grazing on these vegetations, even when the plants may not even show any signs of damage.

18.5.3. Effects of Air-Pollutants on Live-stock Animals. The adverse health effects of air-pollutants on farm animals occur, when animals eat the plants, grasses, fodder, and other vegetation, which has been contaminated by the air pollutants. Important contaminants that affect the live-stock are: (i) fluorine; (ii) arsenic; and (iii) lead. These pollutants originate either from the industries situated nearby; or from dusting and spraying. Out of these contaminants, fluorine proves to be the worst pollutant, since cattle and sheep are found to be more susceptible to consumption of fluorine. The cattle grazing on vegetation that has been contaminated with fluorine may develop *fluorosis*, even when the contaminated plants do not show signs of damage. Symptoms of advanced fluorosis in animals include: lack of appetite, general ill-health due to malnutrition, lowered fertility, reduced milk production, and growth retardation.

Arsenic from dusts and insecticide sprays falling on the plants can similarly be accumulated by the plants, and when such contaminated vegetation is eaten by cattle, they may suffer from *arsenic poisoning*, with leading symptoms like salivation, thirst, vomiting, uneasiness, feeble and irregular pulse and respiration.

Lead contamination of the atmosphere occurs on account of various industries, such as smelters, coke ovens, and other coal-based industries. The lead fumes absorbed by the vegetation from the atmospheric air, contaminates the vegetation, which accumulates lead within itself. The lead-contaminated vegetation when eaten by live stock animals may cause *lead poisoning*, which may cause symptoms like inability to stand and staggering, prostration, etc.; besides complete loss of appetite, paralysis of digestive tract, and diarrhoea.

18.5.4. Effects of Air-Pollutants on Materials and Services. Air pollutants cause deteriorating effects on metallic surfaces, glass surfaces, painted surfaces, building stones, rubber surfaces, etc. along with damaging the paper and fabric.

Oxides of sulphur and nitrogen react in the atmosphere with water vapour to form acidic fumes, which attack and damage the metal surfaces, a problem that has been particularly acute for the computer, switch gear, and communications industries.

Fluorine is highly reactive, and at high atmospheric concentrations, may even cause etching of glass on windows, etc.

Hydrogen sulphide (H_2S) in the ambient air reacts with lead oxide in white paint, to form lead sulphate, due to which white painted surfaces in doors, windows, walls in buildings tend to acquire brownish tint overnight.

Accelerated aging of rubbers and synthetic fabrics due to exposure to the atmospheric oxidants have been causing very quick cracking of rubber tyres, and ageing and discolouration of synthetic fabrics. This was, in fact, actually observed in 1940s in Los Angeles city of USA, where the air became so polluted that people started complaining for formation of cracks on their car tyres within a year, and the clothes worn by them started to wear out quickly along with showing discolouration in a short time.

Another peculiar impact of air pollution was noticed on electric cables and electricity poles, resulting in power leakage from high voltage electric cables. This was caused due to deposition of particles, which are good conductors of electricity, on insulators on electrical poles, resulting in leakage from high tension lines. In places like Windsor and North York, Ontario, it, therefore, becomes necessary to pressure-wash the insulators during extended dry periods, as to prevent electricity leakages, which in extreme cases, may even cause fires.

It is extremely difficult to estimate the financial loss caused by air pollution due to accelerated deterioration of materials and aesthetic items, such as the exteriors of the buildings, statues, monuments, or horticulture plantings; or the cost of materials or service loss. It is, however, generally agreed that the annual damage from the atmospheric pollution runs into billions of dollars.

18.5.5. Effects of Air Pollutants on Aquatic Life. Air pollutants mixing up with rain can cause acidity in fresh water lakes, affecting aquatic life, especially the fishes. Some of the fresh water lakes have experienced total extinction of fish life.

18.5.6. Effects of Air Pollutants on Global and Regional Environment. Air pollutants may cause acid rains, ozone depletions, and global warming, thereby adversely affecting the environment at regional or global levels. These issues are discussed in the next chapter.

PREDICTING CONCENTRATIONS OF AIR POLLUTANTS

18.6. Dispersion of Air Pollutants into the Atmosphere

When once a pocket of smoke, containing air pollutants, is released into the atmosphere from a source like an *automobile* or a *factory chimney*, it gets dispersed into the atmosphere into various directions depending upon the prevailing winds and temperature and pressure conditions in the environment.

From our knowledge of meteorology and hydrology, we know that the temperature conditions of the environment are defined by a technical term, called *lapse rate*. For easier understanding, we will discuss lapse rate here, before discussing its effects on the dispersion of the pocket of polluted smoke (called plume).

18.6.1. Lapse Rate. In the *troposphere*, the temperature of the *ambient* (surrounding) air normally decreases with an increase in the altitude (height). This rate of change of temperature is called the *lapse rate*. This rate will differ from place to place, and from time to time even at the same place. Hence, the prevailing lapse rate at a particular time and the particular place, which can be determined by sending up a balloon equipped with a thermometer and a self recording mechanism, is known as the *prevailing lapse rate*, or the *ambient lapse rate*, or the *environmental lapse rate* (ELR).

The graphical illustration of the lapse rate is shown in Fig. 18.3.

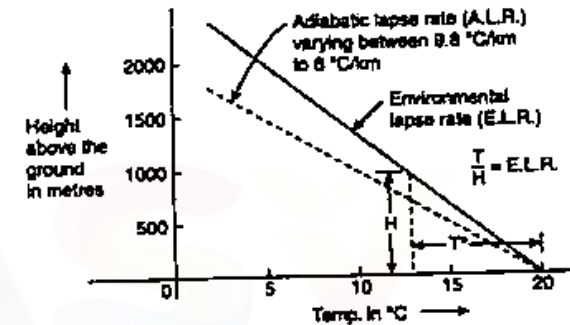


Fig. 18.3. The change of temperature with height in the environment, called E.L.R.

Under the prevailing environmental conditions, when a parcel of air, which is hotter and lighter than the surrounding air, is released, then naturally it tends to rise up, until of course, it reaches to a level, at which its own temperature and density becomes equal to that of the air surrounding it, at that height. Hence, when a pocket of artificially heated air (i.e. *automobile exhaust* or *stack gas*) is emitted into the environment, it rises up, *expands**, becomes lighter, and gets cooled. The rate at which the temperature decreases, as this parcel gains height (i.e. *lapse rate*), may be considerably different from the environmental lapse rate (ELR) of the air through which the smoke parcel moves. Hence, it is *very necessary to differentiate between the environmental lapse rate and the internal temperature change which occurs within the rising parcel of air gases*.

This internal decrease of temperature (cooling) with height, which occurs in the rising parcel of air mass, can be theoretically calculated, by assuming the cooling process to be *adiabatic***. In other words, as the air parcel moves up, its temperature decreases as its own heat energy is expanded due to increase in the volume of the air parcel. Using the *law of conservation of energy and gas laws*, therefore, it has been possible to mathematically calculate this rate of decrease of temperature with height, called *adiabatic lapse rate*, as shown for dry air in article 18.6.2.

*As we go up, the atmospheric pressure reduces, because the weight of air above us becomes less due to the reduced height of atmospheric air above us. Due to reduction in pressure, the volume of rising air increases, which means that the air expands.

**i.e. a process occurring without the addition of outside heat or loss of its own internal heat.

Dry air, expanding and cooling adiabatically cools @ 9.8°C per km, and it is called the dry adiabatic lapse rate. In saturated (wet) air, this rate is calculated to be 6°C per km, and is known as wet adiabatic lapse rate.

Since a rising parcel of emitted smokes, will, normally, neither be fully dry nor fully saturated, the *actual adiabatic lapse rate* (ALR), representing cooling of the emitted smokes, will be somewhere between the dry adiabatic rate ($9.8^{\circ}\text{C}/\text{km}$) and wet adiabatic rate ($6^{\circ}\text{C}/\text{km}$). This adiabatic lapse rate (ALR) is marked on the environmental lapse rate (ELR) diagram—Fig. 18.3, in a dotted line, for comparison of the two lapse rates. Depending upon the relative positions of the two lines (i.e. ALR line and ELR line) on the graph sheet, the *stability of the environment* is determined.

The three major relative positions of ELR line with reference to ALR line, are discussed below.

(a) When the ELR (say 15°C per km) is more than the ALR (say 8°C per km) as shown in Fig. 18.4 (a), then the environment is said to be *unstable*. In such a case, the rising parcel of air will always remain warmer than the surrounding environment. This is so because, as we go up, the environment is getting cooler more quickly than the rising parcel of lighter air, and hence the rising parcel of air will always remain warmer than the environment. The reverse is also true, and hence a descending parcel of heavier air will always remain cooler than the surrounding air, because as we move down, the environment is getting warmer more quickly than the parcel of air.

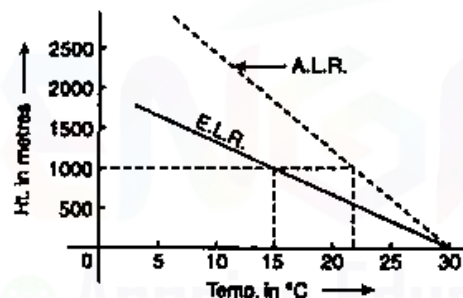


Fig. 18.4 (a)

It, therefore, follows that in such a case, when the environment lapse rate is more than the adiabatic lapse rate, a rising parcel of warmer lighter air will continue to lift up; whereas a parcel of heavier cooler air will continue to come down. In other words, the parcel of air will continue to accelerate in the direction of displacement. In such circumstances, the environment is *unstable*, and the dispersion of pollutants will be rapid due to marked vertical mixing of the air, although, however, the high degree of turbulence may even sometimes bring the smokes touch the ground, under the pressure of the downward moving heavier air.

The prevailing environmental lapse rate (ELR) in such a condition, is known as *super adiabatic lapse rate*, as it is more than the adiabatic lapse rate.

(b) In the reverse case, when ELR is less than the ALR, as shown in Fig. 18.4 (b), the environment is said to be *stable*, and this prevailing environmental lapse rate is called the *sub-adiabatic lapse rate* (as it is less than the adiabatic lapse rate).

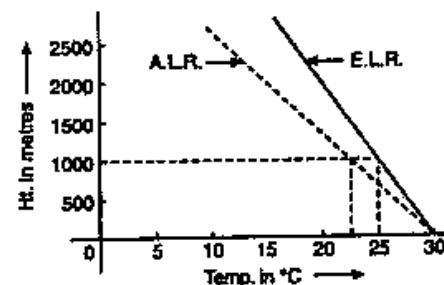


Fig. 18.4 (b)

(c) The third case would be the one, when ELR equals the ALR, and both the lines coincide. The environment in such a case is called *neutral*.

18.6.2. Mathematical Expressions for Dry Adiabatic Lapse Rate. Lapse rate, as stated above, is defined as the rate of change of temperature (T) with

height (z). The factor $\frac{dT}{dz}$ eventually represents the lapse rate. The lapse rate

(LR) is usually represented by the symbol γ or α or T . We will, however, indicate Dry Adiabatic Lapse Rate as DALR, and Wet Adiabatic Lapse Rate as WALR. The mathematical equation for DALR is derived below:

A mathematical relation between the temperature (T) and altitude or height (z) can be obtained by considering the air to be an ideal gas, as discussed below:

(i) Let us first consider the *hydrostatic equilibrium of the atmosphere*, and derive the equation of hydrostatic equilibrium.

(ii) **Equation of Hydrostatic Equilibrium:**

Consider a thin vertical slice of the atmosphere of cross-sectional area A , which starts at height z above the ground level and extends to a height of $z + dz$. The upward force exerted on this slice from the gas below is $P_{(z)} \cdot A$, where $P_{(z)}$ is the air pressure at height z . Likewise, the downward force exerted by the gas above the slice is $P_{(z+dz)} \cdot A$. The net upward force is clearly $[P_{(z)} - P_{(z+dz)}] \cdot A$. In equilibrium, this upward force must be balanced by the downward force due to the weight of the slice, which equals to $(A \cdot dz) \cdot (\rho g)$ (i.e. vol. $\times$ unit wt.), where ρ is the density of the gas and g is the acceleration due to gravity. Eventually,

$$[P_{(z)} - P_{(z+dz)}] A \uparrow = [A \cdot dz \cdot \rho \cdot g] \downarrow$$

or

$$[P_{(z)} - P_{(z+dz)}] A = -[A \cdot dz \cdot \rho \cdot g]$$

(-ve sign for reverse directions of forces)

Change in pressure ($P_{(z)} - P_{(z+dz)}$) can also be expressed by dP .

$$\therefore dP = -dz \cdot \rho \cdot g$$

$$\text{or } \frac{dP}{dz} = -\rho g \quad \dots(18.1)$$

Now, let us use the *perfect gas law* as below :

The **Perfect Gas Law*** states that

$$PV = n \cdot R_u \cdot T \quad \dots(18.2)$$

where P = Pressure in Pascal, P_a (N/m^2) of the gas

V = Vol. in m^3 of the gas

n = No. of moles of gas

T = Absolute temp. of gas in kelvin (K)

$$= ^\circ C + 273$$

R_u = The universal gas constant

$$= 8.314 \text{ Nm/mol. K}$$

The Eq. (18.2) can further be modified to mass form in place of number of moles (n), since,

$$\text{No. of moles of gas } (n) = \frac{\text{Mass of gas } (m)}{\text{Molecular mass of gas } (M_0)}$$

$$\text{or } n = \frac{m}{M_0} \quad \dots(18.3)$$

But mass = Volume $\times$ Density

$$\text{or } m = V \cdot \rho \quad (18.4)$$

$$\text{or } n = \frac{V \cdot \rho}{M_0} \quad (18.5)$$

Substituting the above value of n in Eq. (18.2), we get

*The various gas laws are

$$(i) \text{ Boyle's law: } V \propto \frac{1}{P}$$

[Vol. of a gas of a given quantum is inversely proportional to its pressure at a constant temperature]

$$(ii) \text{ Charles's law: } V \propto T$$

[Vol. of a gas of a given quantum is directly proportional to its temperature at a given pressure]

$$(iii) \text{ Avogadro's law: } V \propto n$$

[Vol. of a gas is proportional to its amount i.e. number of moles (n) at a given pressure and temperature]

Combining all the above laws, we get the *Perfect gas law* as

$$V \propto \frac{n \cdot T}{P}$$

$$PV = n \cdot T$$

$$PV = n \cdot R_u T$$

$$PV = \frac{V \rho}{M_0} R_u \cdot T$$

$$\text{or } P = \rho \left(\frac{R_u}{M_0} \right) \cdot T \quad \dots(18.6)$$

where $\frac{R_u}{M_0}$ is a new constant called the *gas*

constant or the *specific gas constant*. Let us represent it by the symbol R for air (or dry air). The value of R for dry air is found = 287 J/kg.K. The value of R for water vapour, represented by R_w = 462 J/kg.K.

Eq. (18.6) then becomes

$$P = \rho \cdot R \cdot T$$

$$\text{or } \rho = \frac{P}{R \cdot T} \quad (18.7)$$

Substituting this value of ρ (i.e. Eq. 18.7) in Eq. (18.1), we get

$$\frac{dP}{dz} = -\rho g = -\frac{P}{R \cdot T} \cdot g$$

$$\frac{dP}{dz} = - \left[\frac{P \cdot g}{R \cdot T} \right]$$

$$\text{or } \boxed{\frac{dP}{P} = \left[\frac{-g}{R \cdot T} \right] dz} \quad \dots(18.8)$$

The above equation is the equation of hydrostatic equilibrium.

Now, we can consider the *adiabatic atmosphere* :

(ii) *Equation of the Adiabatic Atmosphere*. Imagine a packet of air which is being swirled around in the atmosphere. It would be expected to remain at the same pressure as its surroundings, otherwise it would be mechanically unstable. Moreover, the air packet moves so quickly that it cannot exchange heat with its surroundings, mainly because air is a poor conductor of heat. Eventually, the air in the packet remains in *adiabatic state* (i.e. it neither receives heat nor loses its own heat). In a *steady-state* atmosphere, as the air packet moves upwards, it expands due to reduced pressure, and cools adiabatically, its temperature always remains the same as that of its immediate surroundings. This means that we can use the *adiabatic gas law* to characterize the cooling of the atmosphere with increasing altitude. The most common form of the *adiabatic law for adiabatic expansion of gases*, from thermodynamics, is given as :

$$P \cdot \rho^{-k} = \text{Constant}$$

...(18.9)

$$\text{where } k^* = \frac{C_p}{C_v} = \text{Ratio of sp. heats}$$

$$= \frac{\text{Sp. heat for constant pressure}}{\text{Sp. heat for constant volume}}$$

But $\rho = \frac{P}{RT}$ (i.e. Eq. 18.7)

Eq. (18.9) then becomes

or $P \cdot \left(\frac{P}{RT}\right)^{-k} = \text{Constant}$

or $(P)^{1-k} \cdot T^k = \text{Constant}$

...(18.10)

Eq. (18.10) is an important useful form of adiabatic law.

Rearranging the above equation, we get

$$(P)^{1-k} = \text{Constant (say } C) \times T^{-k}$$

Differentiating, we get

$$(1-k)(P)^{(1-k)-1} dP = C \times -k \cdot T^{-k-1} dT$$

or $(1-k)(P)^{-k} \cdot dP = C(-k) T^{-k-1}$

Substituting the value of C as $(P)^{1-k} \cdot T^k$, we get

$$(1-k)(P)^{-k} \cdot dP = (P)^{1-k} \cdot T^k (-k) T^{-k-1} dT$$

or $dP = \frac{(P)^{1-k}}{(P)^{-k}} \left(\frac{-k}{1-k}\right) T^{-k-1+k} \cdot dT$

or $dP = P \left(\frac{k}{k-1}\right) T^{-1} = P \left(\frac{k}{k-1}\right) \frac{1}{T} \cdot dT$

or $\boxed{\frac{dP}{P} = \left(\frac{k}{k-1}\right) \frac{dT}{T}}$... (18.11)

Combining Eq. (18.11) with the equation of hydrostatic equilibrium (i.e. Eq.

18.8), we get the DALR as $\frac{dT}{dz}$ as :

$$\left(\frac{k}{k-1}\right) \frac{dT}{T} = \left[\frac{-g}{R \cdot T}\right] dz$$

or $\boxed{\frac{dT}{dz} = -\frac{g(k-1)}{k \cdot R}}$ (18.12)

*Two specific heats are defined for gases ; i.e. one for constant pressure (C_p) and one for constant volume (C_v).

The ratio of specific heats (k) = $\frac{C_p}{C_v}$ equals to 1.68 for ideal monatomic gas, and it is

1.4 for diatomic gas, which is a diatomic gas.

This is the required final mathematical equation for computing the dry adiabatic lapse rate (DALR).

Using the above equation and substituting values of k and R for air as:

$$k = \frac{C_p}{C_v} = 1.4 \text{ for air}$$

R = Specific gas constant for air

$$= \frac{R_u}{M_0} = \frac{\text{Universal gas constant}}{\text{Molecular mass of air}}$$

where $R_u = 8314 \text{ J/kilomole. K}$

$M_0 = 28.964 \text{ kg/kilomole}$

$$\therefore R = \frac{8314}{28.964} \text{ J/kg.K}$$

$$= 287 \text{ J/kg.K.}$$

$\therefore$ Dry adiabatic Lapse Rate is hence given as :

$$\frac{dT}{dz} = \frac{-g \cdot (1.4 - 1)}{1.4 \times 287 \text{ J/kg.K}} = \frac{-9.81 (\text{m/sec}^2) \left(\frac{0.4}{1.4}\right)}{287 \text{ J/kg.K}}$$

or $\frac{dT}{dz} = (-) 9.77 \times 10^{-3} \frac{\text{kg}}{\text{J}} \cdot \text{K} \left(\frac{\text{m}}{\text{sec}^2}\right)$

or $\frac{dT}{dz} = (-) 9.77 \times 10^{-3} \cdot \frac{\text{kg} \cdot \text{K}}{\text{N.m}} \left(\frac{\text{m}}{\text{sec}^2}\right)$ [$\because 1 \text{ J} = 1 \text{ N.m}$]

$$= -9.77 \times 10^{-3} \frac{\text{kg} \cdot \text{K} \cdot \left(\frac{\text{m}}{\text{sec}^2}\right)}{\text{kg} \frac{\text{m}}{\text{sec}^2} \cdot \text{m}}$$

$$\left[\because N = \text{kg} \frac{\text{m}}{\text{sec}^2}\right]$$

$$= -9.77 \times 10^{-3} \text{ K/m}$$

$$= (-) 9.77 \text{ K/km} = 9.8 \text{ K/km} = 9.8 \text{ K/Km} = 9.8^\circ\text{C/Km}$$

[-ve sign indicates that T decreases as Z increases]

Hence, the dry adiabatic lapse rate is app. equal to 9.8°C/km .

The final equation for DALR i.e. Eq. (18.12) can be further simplified as:

$$\frac{dT}{dz} = (-) \frac{g(k-1)}{k \cdot R} \quad (\text{i.e. Eq. 18.12})$$

or $\frac{dT}{dz} = (-) g \cdot \frac{\left(\frac{C_p}{C_v} - 1\right)}{\frac{C_p}{C_v} \cdot R}$ [$\because k = \frac{C_p}{C_v}$]

or $\frac{dT}{dz} = -g \left(\frac{C_p - C_v}{C_p \cdot R}\right)$... (18.13)

But we know that

$$C_p - C_v = R \quad \dots(18.14)$$

$$\therefore \frac{dT}{dz} = -g \cdot \frac{R}{C_p \cdot R} = \frac{-g}{C_p}$$

or

$$\frac{dT}{dz} = \frac{-g}{C_p} \quad \dots(18.15)$$

Hence, the dry adiabatic lapse rate can also be represented by equation (18.15) in addition to being represented by Eq. (18.13). The value of DALR when computed by Eq. (18.15) works out as:

$$\text{DLRL} = \frac{-g}{C_p} \quad (\text{i.e. Eq. 18.15})$$

$$\text{where } C_p = \text{Sp. heat for dry air in J/kg.K} \\ = 1005 \text{ J/kg K} \quad (\text{Appendix Table A-5})$$

$$= \frac{-9.81 \text{ m/sec}^2}{1005 \text{ kg} \cdot \frac{\text{m}}{\text{sec}^2} \cdot \text{m/kg.K}} \quad \left[\because J = \text{Nm} = \text{kg} \frac{\text{m}}{\text{sec}^2} \cdot \text{m} \right]$$

$$= \frac{-9.81}{1005} \text{ K/m}$$

$$= -9.8 \text{ K/km} = -9.8^\circ\text{C/km}$$

18.6.3. Negative Lapse Rate and Inversion. In an unusual case, when the temperature of the environment (i.e. ambient air) increases with altitude, then the lapse rate becomes *inverted* or *negative* from its normal state. Negative lapse rate curve would then be of the type shown in Fig. 18.5, in comparison to the normal lapse rate line.

Negative lapse rate occurs under conditions, usually referred to as *inversion*, a state in which the warmer air lies over the colder air below. Such temperature inversions represent a *highly stable environment*.

There are two types of inversions; viz.

- (i) radiation inversion; and
- (ii) subsidence inversion.

(i) The radiation inversion is a phenomenon occurring from the unequal cooling rates for the Earth and the air above the Earth. In other words, when

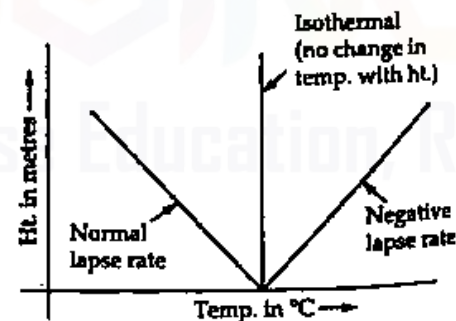


Fig. 18.5

the Earth cools rapidly and more quickly than the air above it*, then naturally the temperature in the environment will be less at the Earth and will increase above it*, causing negative lapse rate and inversion conditions.

This type of inversion may extend a few hundred metres into the friction layer, and is characteristically a nocturnal phenomenon that is likely to break up easily with the rays of the morning sun. Such an inversion in the environment, helps in formation of fog when air is wet, and simultaneously catches gases and particulate matter, as it stops their upward lifting, thereby creating concentration of pollutants in our close environment. This type of inversion is more common in winter than in summer, because of the longer nights. Valley areas may also have such inversions frequently, because of the absence of horizontal movement of air due to surrounding high ground.

(ii) The subsidence inversion is usually associated with a high pressure system, and is caused by the characteristic sinking or subsiding motion of air in a high pressure area surrounded by low pressure area (i.e. anti-cyclone). The air, circulating around the stationary high pressure, descends gently @ about 1000 m per day. As the air sinks, it is compressed and gets heated to form a warm dense layer over the cooler air below. Such inversion layers may be formed from the ground surface to around 1600 m or so. Such an inversion layer, by stopping the upward movement of polluting smokes, will cause the concentration of the pollutants in our immediate environment. When the thickness or height of this inversion layer is less than 200 m or so, extreme pollution would occur. Such an inversion may be more dangerous than the radiation inversion, and may occur at modest altitudes and may often remain for several days.

Sometimes, both the radiation as well subsidence inversions may occur simultaneously, causing what is known as double inversion.

18.6.4. Impact of Winds on Dispersion of Pollutants. The moving air is known as *wind*. Such a movement in the air is caused by the unequal distribution of atmospheric temperature and pressure over the Earth's surface, and is largely influenced by the rotation of the earth. The direction of winds is always from high pressure areas to low pressure areas, but the *coriolis force* tends to deflect the air currents out of these expected patterns.

Regional and local geographical and topographical features may also affect the direction and speed of winds.

The quicker heating and cooling of the Earth as compared to the neighbouring sea, may also cause the flow of *sea breezes* from sea to land during day time, and flow of *land breezes* from land to sea during nights after sun set, respectively. Such a wind pattern may also contribute to air pollution problems. Los Angeles city of U.S.A., frequently experiences this wind pattern, which carries the air pollutants towards the sea in the evenings and nights, and brings them towards the city in the morning, as the sun advances.

In the *friction layer*** at the Earth's surface, winds are generally gusty and changeable, primarily due to locally generated mechanical or thermal turbulence.

*As may happen at nights, when the Earth may lose heat by radiation, and thereby cooling the surrounding air.

**Zone of atmosphere beneath 700 to 1000 m above the Earth's surface.

Wind speed is usually measured by an anemometer at a height, say Z_0 . Knowing the wind velocity (u_0) at anemometer height (Z_0), we can work out the velocity u at any other height Z by using the formula

$$u = u_0 \left[\frac{Z}{Z_0} \right]^k \quad \dots(18.16)$$

where k is a constant = $\frac{1}{3}$ for large lapse rates, and $\frac{1}{4}$ for marked inversions, average normal value being $\frac{1}{2}$.

The direction and speed of surface winds primarily govern the drift and diffusion of polluted gases and particulate emissions from automobiles and factories, etc. emitted near the ground levels. The higher the wind speed at or near the point of emission, the more rapidly the pollutants would be carried away from the source. The pollutants so dispersed, will not exist at the same concentration, but will rapidly be diluted with greater and greater volumes of air.

On the other hand, when wind speeds are low, the pollutants tend to concentrate near the area of their emission; and the longer the duration of such light winds, the larger will be the concentration of pollutants.

Gustiness, which is directly proportional to the wind speed, is another important characteristic of surface winds and determines the extent to which the pollutants are mixed and diluted with the ambient air.

Wind speed, can, thus, be related to the concentration of pollutants, both being inversely proportional to each other. This simple relationship is, however, complicated by various other factors, like atmospheric turbulence and stability, geographical barriers in the flow of winds, presence of moisture in the environment, etc.

18.6.5. Lapse Rates and Dispersion of Air Pollutants. We have pointed out in the previous article that the diffusion of pollutants into the environment is governed by the environmental lapse rate as well as the adiabatic lapse rate. By comparing these two lapse rates, it is possible to predict to some extent, as to what will happen to gases emitted from a source; the emitted gases being known as a plume, and their source of origin as a stack.

Typical types of environmental conditions, characterised by different relative positions of environmental lapse rate and adiabatic lapse rate lines, which are generally encountered in the lower atmosphere (less than 300 m above the ground) are shown in Fig. 18.6 (a) to (g). The manner in which the emitted plume behaves under each of these seven conditions are also shown in these figures, and explained below:

(a) **Looping plume.** Looping plume [Fig. 18.6 (a)] has a wavy character and occurs in super-adiabatic environment; which produces highly unstable atmosphere, because of rapid mixing. During the high degree of turbulence, the dispersion of plume would be rapid, yet higher concentrations near the ground may occur due to turbulence, before the dispersion is finally completed. Hence, in areas where environment is generally super-adiabatic,

the ground. Such conditions will then ensure a very good dispersion of pollutants; but automobile exhausts cannot be dispersed well, because they are released at lower levels.

(b) **Neutral plume.** Neutral plume is the upward vertical rise of the plume from the stack, as shown in Fig. 18.6 (b), which occurs when the environmental lapse rate is equal to or very near to the adiabatic lapse rate. The upward lifting of the plume will continue till it reaches an air of density similar to that of the plume itself.

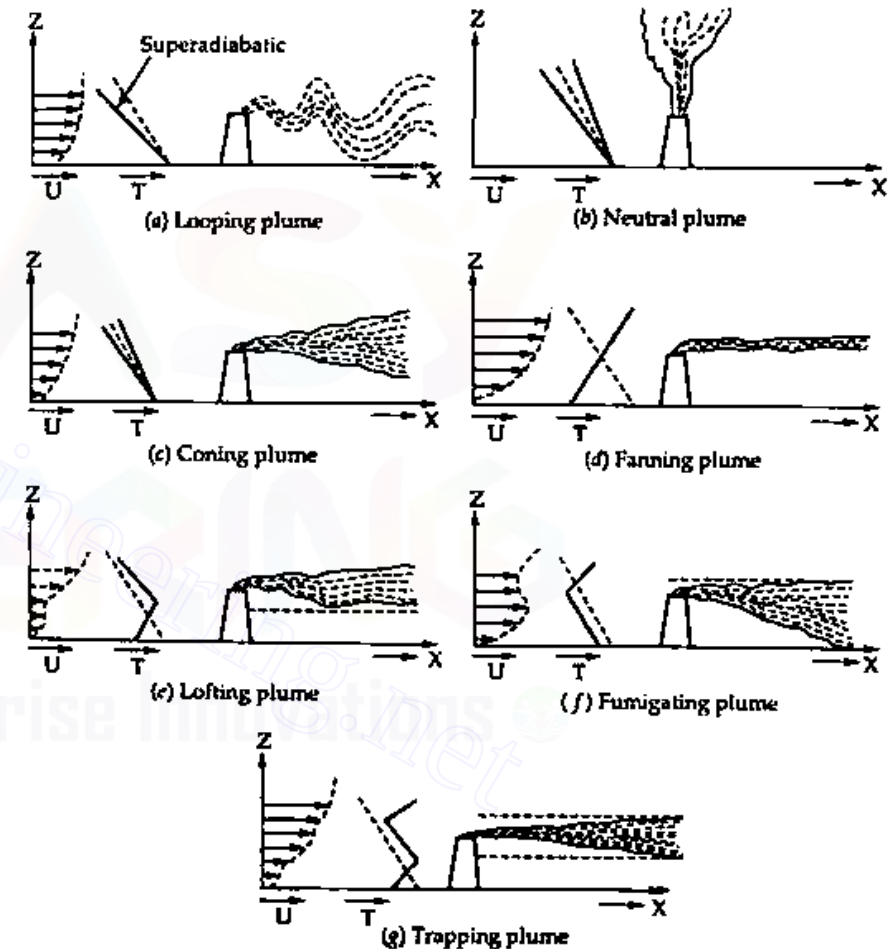


Fig. 18.6. Different types of plume behaviours.

(c) **Coning plume.** The neutral plume tends to cone as shown in Fig. 18.6 (c), when the wind velocity is greater than 32 km/hr, and when cloud cover blocks the solar radiation by day and terrestrial radiation by night.

Coning plume also occurs under *subadiabatic conditions* (i.e., when environmental lapse rate is less than the adiabatic lapse rate). Under such conditions, the environment is slightly stable, and there is a limited vertical mixing, thereby increasing the probability of air pollution in the area. The plume dispersion is known as coning, because the plume makes a cone like shape about the plume line, as shown in Fig. 18.6 (c).

(d) **Fanning plume.** Under extreme inversion conditions, caused by negative environmental lapse rate, from the ground and upto a considerable height, extending even above the top of the stack, the emission will spread only horizontally, as it cannot lift due to extremely stable environment. In such a case, there will be no vertical mixing, and the plume will simply extend horizontally over large distances, as shown in Fig. 18.6 (d). Such a plume pattern is called a *fanning plume*.

In areas, where such conditions are caused by *radiation inversions*, high-rise stacks, rising higher than the usual inversion layer, may be adopted. But, in areas, where subsidence inversions are of frequent occurrence, even such a step is not practical and economical, because subsidence inversions usually extend to much greater heights.

(e) **Lofting plume.** When there exists a strong super adiabatic lapse rate above a surface inversion, then the plume is said to be 'lofting'. Such a plume has minimum downward mixing, as its downward motion is prevented by inversion, but the upward mixing will be quite turbulent and rapid. The dispersion of pollutants will therefore, be rapid, and no concentrations will touch the ground. Hence, this would be the most ideal case for dispersion of emissions.

(f) **Fumigating plume.** When an inversion layer occurs at a short distance above the top of the stack, and super adiabatic conditions prevail below the stack, then the plume is said to be *fumigating* (Fig. 18.6 f). In such a case, the pollutants cannot escape above the top of the stack because of inversion layer, and they will be brought down near the ground due to turbulence in the region above the ground and below the inversion, caused by strong lapse rate. This represents quite a bad case of atmospheric conditions for dispersion.

(g) **Trapping plume.** When inversion layers exist above the emission source, as well as below the source, then naturally, the emitted plume will neither go up, nor will it go down, and would remain confined between the two inversions, as shown in Fig. 18.6 (g). Such a plume is called a *trapping plume*, and is considered a bad condition for dispersion, as the dispersion cannot go above a certain height.

18.6.6. Impact of Atmospheric Pressure on Dispersion of Air Pollutants. While discussing the subsidence inversion, we have earlier explained that the formation of high pressure system over an area, if continues for several days, could build up serious air pollution problems, due to formation of inversion conditions. Hence, *high pressure systems* (anticyclones), which are accompanied by *clear skies, light winds, and*

On the other hand, *low pressure systems* (cyclones)*, which are associated with highly unstable atmospheric conditions, generally lead to good mixing and rapid dispersion of pollutants. Hence, such cyclonic atmospheric conditions, which are usually accompanied by rains and storms, prove to be better for dispersion of pollutants.

However when a *warm front* overtakes a low pressure cell, conflicting influences are produced. Initially, warm front will reduce the pollutant load mainly due to storm activity along its leading edge; but as the warm front develops, more stable conditions will form with an accompanying increase in the air pollution potential.

18.6.7. Impact of Moisture and Precipitation on Dispersion of Air Pollutants. The moisture content, and the form in which it is present in the atmosphere, may considerably affect the quality of air at a particular region.

The presence of water vapour (humidity) in the air affects the air quality, primarily by *blocking* and obstructing the solar radiation reaching the ground, and also the heat radiation reflected from the surface. Humidity also leads to formation of fogs, and increases the Earth's corrosive action of air pollutants.

Excessive moisture in the atmosphere will finally lead to rains, which are helpful in improving the quality of the ambient air, because they wash down the pollutants to the Earth, to be ultimately drained out with rain-run off.

The process of removal of atmospheric SO_2 through rain, may, however, cause problems due to reaction of SO_2 with water, forming H_2SO_3 or H_2SO_4 , leading to fall of acid rain, which increases the rate of corrosion where air pollutants are present: and in addition, decreases the pH of rivers and streams, adversely influencing the algae and plant life of such water bodies.

18.7. Predicting Pollutants' Concentrations Through Dispersion Models and Equations

Mathematical approach has been applied to the problem of dispersion of pollutants into the atmosphere, although of course, the process of dispersion is quite complicate, and depends upon several meteorological factors, as discussed earlier. Moreover, the dispersion is generally three dimensional, which makes the mathematical solution a little more difficult. However, with the present day advent of computer modelling techniques, the problems can be solved with a little ease in these modern days.

Several empirical equations have been developed by several investigators. These equations or models do estimate the concentrations of pollutants in the plume at any distance x , y , and z , in horizontal down-wind direction, horizontal cross-wind direction, and vertical direction, respectively.

All such equations are based on Fick's law of turbulent diffusion. Assuming K_x , K_y , and K_z , as *eddy diffusivity coefficients* in three directions, and applying continuity principle, one gets:

$$\frac{\partial c}{\partial t} = \frac{\partial}{\partial x} \left(K_x \cdot \frac{\partial c}{\partial x} \right) + \frac{\partial}{\partial y} \left(K_y \cdot \frac{\partial c}{\partial y} \right) + \frac{\partial}{\partial z} \left(K_z \cdot \frac{\partial c}{\partial z} \right) + Q_{x,y,z} \quad \dots (18.17)$$

where $Q_{x,y}$ represents the source or sink, expressed in appropriate terms.

While this equation will be comprehensive and general, it would not be amenable to direct integration, and can only be solved on a computer. Moreover, K_x , K_y , and K_z will also vary with location and time both, which will make the solution more difficult and complex.

On the basis of the above fundamental law, and based on the knowledge of the shape of the concentration distribution for a continuous single emission source, a simple statistical equation has been developed by Gaussian to compute turbulent transport of pollutants. The equation, known as **Gaussian Distribution***, is given as :

$$C_{x,y} = \frac{Q}{\pi u \sigma_x \cdot \sigma_y} (e)^{-\frac{1}{2} \left(\frac{H^2}{\sigma_z^2} + \frac{y^2}{\sigma_y^2} \right)}$$

$$\text{or } C_{x,y} = \frac{Q}{\pi u \sigma_x \cdot \sigma_y} (e)^{-\frac{1}{2} \frac{H^2}{\sigma_z^2}} \cdot e^{-\frac{1}{2} \frac{y^2}{\sigma_y^2}} \quad \dots(18.18)$$

where C = the concentration of pollutant in gm/m^3

Q = the pollutant emission rate in gm/sec

u = mean wind velocity in m/sec

x and y = downwind and cross-wind horizontal distances, respectively in m

σ_y = Plume's Standard deviation in cross-wind direction in m

σ_z = Plume's Standard deviation in vertical direction in m

H = Effective height of stack.

when concentration is required only along x -direction, i.e. in the downwind horizontal direction along the centre line of the plume, then naturally $y = 0$. Then, equation (18.18) becomes

$$C_{x,0} = \frac{Q}{\pi u \cdot \sigma_x \sigma_y} (e)^{-\frac{1}{2} \left(\frac{H^2}{\sigma_z^2} \right)} \quad \dots(18.19)$$

when the smokes are omitted at ground level, the effective stack height (H) is zero, then the above equation (18.19) gets further simplified, as

$$C_{x,0} = \frac{Q}{\pi u \cdot \sigma_x \cdot \sigma_y} \quad \dots(18.20)$$

Values of σ_y and σ_z are not only a function of downwind distance (x) but are also a function of atmospheric stability. Values of σ_y and σ_z for various values of x and different types of atmospheric stabilities, are given in Figs. 18.7 and 18.8 respectively.

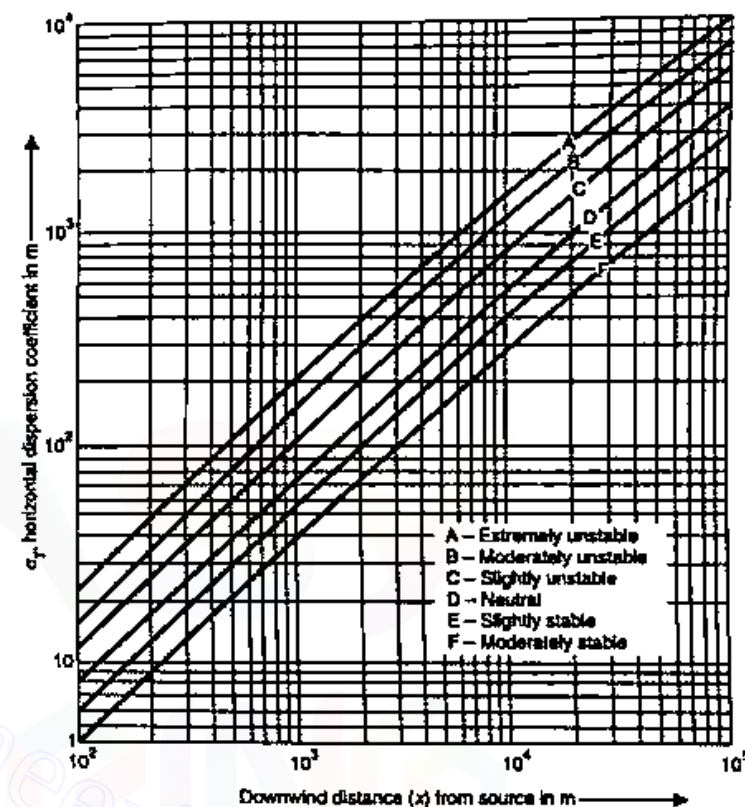


Fig. 18.7. σ_y Vs x for different atmospheric stabilities.

The generalised environment stability categories, mentioned in Figs. 18.7 and 18.8, such as A, B, C, D, E and F are detailed in Table 18.3.

Table 18.3. Pasquill Stability Types

Surface wind speed in m/sec	Day			Night	
	Incoming solar radiation			Mostly overcast	Mostly clear
	strong	moderate	weak		
< 2	A	A-B	B	—	—
2	A-B	B	C	E	F
4	B	B-C	C	D	E
6	C	C-D	D	D	D
> 6	C	D	D	D	D
Category A—extremely unstable B—moderately unstable C—slightly unstable D—neutral E—slightly stable F—moderately stable					

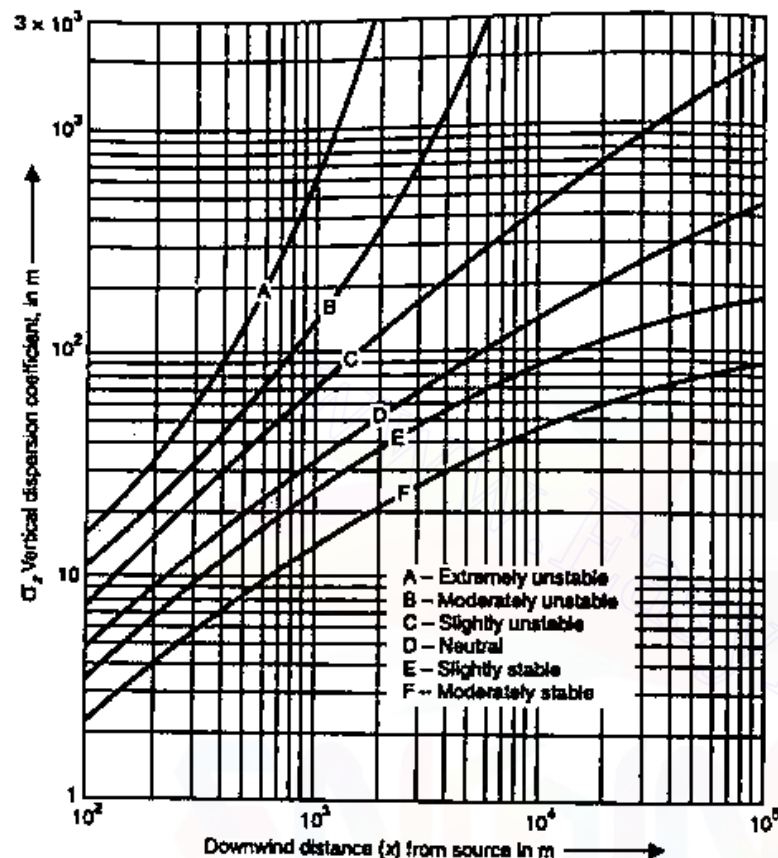


Fig. 18.8. σ_z Vs x for different atmospheric stabilities.

The maximum ground level concentration occurs where $\sigma_z = 0.707H$, provided $\frac{\sigma_z}{\sigma_y}$ is constant with downwind distance x .

Example 18.1. A coal-fired thermal power plant burns 6.25 tonnes of coal per hour, and discharges the combustion products through a stack having an effective height of 80 m. The coal has a sulphur content of 4.7%, and the wind velocity at the top of the stack is 8.0 m/sec. Atmospheric conditions are moderately to slightly unstable. Determine the maximum ground-level concentration of SO_2 and the distance from the stack at which this maximum occurs.

Solution. Emission rate for SO_2 :

Coal burnt per hour = 6.25 t = 6250 kg

Sulphur content of coal = 4.7%

$\therefore$ Sulphur produced per hr = $6250 \times \frac{4.7}{100}$ kg = 293.75 kg

the molecular mass of both S and O_2 is 32, and they combine on a one to one mass basis.

$\therefore$ 293.75 kg of S + 293.75 kg of O_2 = 587.5 kg of SO_2 per hour

Emission rate of SO_2 in gm/sec = $\frac{587.5 \times 1000}{60 \times 60}$ gm/sec = 163.19 gm/sec.

The maximum ground level concentration occurs where $\sigma_z = 0.707H$, provided $\frac{\sigma_z}{\sigma_y}$ is constant with x .

For the given atmospheric conditions of *moderately to slightly unstable*, we have the stability class as B to C. (Table 18.3). For conservative designs, let us assume it to be class C.

The max. ground level concentration would occur where

$$\sigma_z = 0.707H = 0.707 \times 80 = 56.6 \text{ m.}$$

From Fig. 18.8, we can find that σ_z will reach a value of 56.6 m at $x = 850$ m (for C class of course).

Hence, max. concentration would occur at $x = 850$ m, provided $\frac{\sigma_z}{\sigma_y}$ is constant upto this distance. It can be confirmed from the chart (Fig. 18.8) that for class C conditions, $\frac{\sigma_z}{\sigma_y}$ is constant for distances (x) up to 1 km from the stack.

Hence, $x_{\max} = 850$ m.

Now, to determine concentration at $x = 850$ m, we use the eqn. (18.19), as

$$C(x, 0) = \frac{Q}{\pi u \cdot \sigma_z \cdot \sigma_y} (e)^{-\frac{1}{2} \left(\frac{H^2}{\sigma_z^2} \right)}$$

From Fig. 18.7, $\sigma_y = 88$ m at $x = 850$ m (C class)

$$\begin{aligned} C_{\max} &= \frac{163.19}{3.14 \times 8 \times 56.6 \times 88} (e)^{-\frac{80^2}{2(56.6)^2}} \text{ gm/m}^3 \\ &= 4.8 \times 10^{-4} \text{ gm/m}^3 = 480 \mu \text{ gm/m}^3. \text{ Ans.} \end{aligned}$$

Example 18.2. From the data given in example 18.1, determine the ground level concentrations at a distance of two km downwind at : (a) The centre line of the plume ; and (b) at a crosswind distance of 0.5 km on either side of the centre line.

Solution. (a) Concentration at $x = 2$ km along centre line of plume, means $y = 0$ and $x = 2$ km. This concentration is given by equation (18.19) as :

$$C(x, 0) = \frac{Q}{\pi u \cdot \sigma_z \cdot \sigma_y} (e)^{-\frac{1}{2} \left(\frac{H^2}{\sigma_z^2} \right)}$$

where $\sigma_z = 130$ (from Fig. 18.8 for $x = 2$ km and C class)

$\sigma_y = 220$ (from Fig. 18.7 for $x = 2$ km and C class)

$$\begin{aligned}
 \therefore C_{(2,0)} &= \frac{163.19}{3.14 \times 8 \times 130 \times 220} (e)^{-\frac{80^2}{2 \times (130)^2}} \text{ gm/m}^3 \\
 &= 2.27 \times 10^{-4} \times (e)^{-0.189} \text{ gm/m}^3 \\
 &= 2.27 \times 10^{-4} \times \frac{1}{(e)^{0.189}} \text{ gm/m}^3 \\
 &= 2.27 \times 10^{-4} \times \frac{1}{1.208} \text{ gm/m}^3 \\
 &= 1.878 \times 10^{-4} \text{ gm/m}^3 = 187.8 \mu \text{ gm/m}^3. \text{ Ans.}
 \end{aligned}$$

(b) Concentration at $x = 2$ km and $y = 0.5$ km (i.e., 500 m) is given by eqn. (18.18) as :

$$\begin{aligned}
 C_{(x,y)} &= \frac{Q}{\pi u \cdot \sigma_x \cdot \sigma_y} \cdot (e)^{-\frac{H^2}{2 \cdot \sigma_x^2}} \cdot (e)^{-\frac{y^2}{2 \cdot \sigma_y^2}} \\
 &= \frac{163.19}{3.14 \times 8 \times 130 \times 220} (e)^{-\frac{80^2}{2 \times (130)^2}} \times (e)^{-\frac{(500)^2}{2 \times (220)^2}} \text{ gm/m}^3 \\
 &= (1.878 \times 10^{-4}) \cdot (e)^{-2.583} \text{ gm/m}^3 \\
 &= 1.878 \times 10^{-4} \times 0.0755 \text{ gm/m}^3 \\
 &= 0.142 \times 10^{-4} \text{ gm/m}^3 = 14.2 \mu \text{ gm/m}^3. \text{ Ans.}
 \end{aligned}$$

18.7.1. Effective Height of a Stack. The value of H used in equation (18.18) is the effective height of the stack (chimney) and not its actual height. This effective height consists of actual height (h) plus the height (Δh) to which the plume rises above the stack before levelling out, as shown in Fig. 18.9.

$$\therefore H = h + \Delta h \quad \dots(18.21)$$

where h = actual height of stack in m

Δh = Plume height in m.

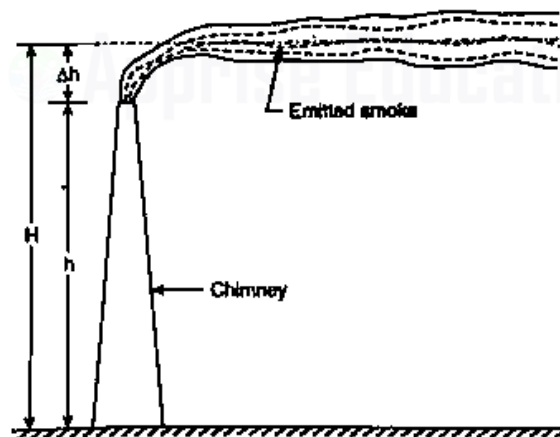


Fig. 18.9. Effective stack height.

There exists several equations for calculating the plume height Δh ; out of which, *Holland's equation* (18.22) is often used and is given as :

$$\Delta h = \frac{v_s \cdot D}{u} \left[15 + 2.68 \times 10^{-3} \text{ P.D.} \left(\frac{T_s - T_a}{T_s} \right) \right] \quad \dots(18.22)$$

where Δh = rise of plume above the stack in m

v_s = stack gas velocity i.e. efflux emission velocity from the stack in m/sec

D = inside exit dia. of stack in m

u = wind speed in m/sec

P = atmospheric pressure in milli-bars

T_s = stack gas temperature in °K

T_a = air temperature in °K.

Equation (18.22) is quite suitable for computing Δh from neutral conditions. For unstable conditions, the above value of Δh should be increased by 10 to 20%, and for stable conditions, it should be decreased by 20 to 10%.

Another frequently used equation for computing Δh is given by *Davidson and Bryant*, as :

$$\Delta h = D \cdot \left(\frac{v_s}{u} \right)^{1.4} \cdot \left(1 + \frac{T_s - T_a}{T_s} \right) \quad \dots(18.23)$$

All the terms used in this equation have the same meaning as for equation (18.22).

The *Bureau of Indian Standards* (BIS), earlier known as ISI, has, through their code No. IS : 8829—1978 suggested the following empirical formulas for computing plume rise (Δh) :

(a) For hot effluents with heat release of the order of 10^6 cal/sec or more :

$$\Delta h = 0.84 (12.4 + 0.09 h) \frac{Q_H^{1/4}}{u} \quad \dots(18.24)$$

where Q_H = heat release in calories per second,

h = height of the chimney in m

u = wind velocity in m/sec

(b) For not very hot releases, and which can be counted as momentum sources above :

$$\Delta h = \frac{3v_s \cdot D}{u} \quad \dots(18.25)$$

where v_s and D have the same meaning as in Eq. (18.22).

Example 18.3. Determine the effective height of a stack, with the following given data :

(a) Physical stack is 180 m tall with 0.95 m inside diameter.

(b) Wind velocity is 2.75 m/sec.

(c) Air temperature is 20°C.

(d) Barometric pressure is 1000 millibars.

(e) Stack gas velocity is 11.12 m/sec.

(f) Stack gas temperature is 160°C.

Solution. The given data is symbolised as below :

$$h = 180 \text{ m}$$

$$D = 0.95 \text{ m}$$

$$u = 2.76 \text{ m/sec}$$

$$T_a = 20^\circ\text{C} = 20 + 273 = 293 \text{ K}$$

$$P = 1000 \text{ millibars}$$

$$v_s = 11.12 \text{ m/sec}$$

$$T_s = 160^\circ\text{C} = 160 + 273 = 433 \text{ K.}$$

Using equation (18.22), we have

$$\begin{aligned} \Delta h &= \frac{v_s \cdot D}{u} \left[1.5 + 2.68 \times 10^{-3} PD \left(\frac{T_s - T_a}{T_s} \right) \right] \\ &= \frac{11.12 \times 0.95}{2.76} \left[1.5 + 2.68 \times 10^{-3} \times 1000 \times 0.95 \times \frac{433 - 293}{433} \right] \\ &= \frac{11.12 \times 0.95}{2.76} \left[1.5 + \frac{2.68 \times 0.95 \times 140}{433} \right] = 8.92 \text{ m} \end{aligned}$$

or $\Delta h = 8.92 \text{ m}$

H = Effective height of stack

$$= h + \Delta h$$

$$= 180 + 8.92 = 188.92 \text{ m. Ans.}$$

18.7.2. Design of Stack Height. The height of a chimney can, of course, be designed by utilising empirical equations connecting maximum concentrations of pollutants with stack height, and limiting the max. concentrations to permissible values. Such a thing would be possible, if there is only one stack, emitting effluents. There would, however, be several stacks in the area, which may cumulatively discharge their effluents, and hence, have to accounted for, properly.

Moreover, the meteorological conditions in the area would be variable throughout the year.

The emissions from tall stacks may also cause the fallout of contaminants at far off distances from the stacks.

Positions and locations of nearby buildings may also cause mechanical turbulence, and thus, bringing the plume to the ground level, especially when the stack is downwind of the building and wind speeds are high. To avoid this problem, stack height should be 2 to 2½ times the height of nearby structures.

Moreover, the dispersion equations are generally derived for flat level topographic areas, and provision must be made for irregular terrain, when such areas are encountered.

Considering the Gaussian Plume Model with a number of assumptions, and such variable factors, Central Board for Prevention and Control of Water Pollution, New Delhi, has regulated the minimum chimney height for Indian

(July 1984) Part I* as well as under its publication titled "A Method to Determine the Minimum Chimney Height** :

$$(1) \quad h = 74 (Q_p)^{0.27} \quad \dots(18.26)$$

where h = chimney height in m

Q_p = Particulate matter emission in tonne/hr

$$(2) \quad h = 14 (Q_s)^{0.27} \quad \dots(18.27)$$

where Q_s = SO_2 emission in kg/hr.

The maximum of the two heights calculated by the above equations, should be considered for adoption. The Board has further specified that the calculated chimney height for a given particulate matter and SO_2 , by the above two equations, should be further subjected to the following minimum values :

(i) For Chimneys adopted for industries in

general (except thermal power plants)

...30 m

(ii) For Thermal Power Plants

(a) Above 200 MW and below 500 MW capacity

...220 m

(b) Above 500 MW capacity

...275 m

As per these standards, the minimum stack was to be 30 m, but later on, the Board, has relaxed these provisions for chimneys of Boilers and Diesel Generator Sets to lower minimum values, as per their latest guidelines contained in "Emission Regulations Part IV". According to these provisions, the minimum stack height for a boiler, generating steam @ less than 2 t/hr will be 9 m ; and that for a boiler producing steam @ 30 t/hr, it will be 30 m. Intermediate minimum values for intermediate capacities are specified between 9 to 30 m.

Similarly, for diesel generator sets of different capacities (KVA) ; the minimum stack height to be kept is only 1.5 to 3.5 m more than the height of the building, and is to be worked out by using the equation

$$H = H' + 0.2 \text{ KVA} \quad \dots(18.28)$$

where H = stack height

H' = height of the building KVA is the capacity of generator.

Example 18.5. An industry utilises 0.3 MI of oil fuel per month. It has also been estimated that for every 1 MI of fuel oil burnt in the factory, per year, the quantities of various pollutants emitted are given as :

Particulate matter = 2.9 t/yr

SO_2 = 60 t/yr

NO_x = 8 t/yr

HC = 0.4 t/yr

CO = 0.5 t/yr.

Calculate the height of the chimney required to be provided for safe dispersion of the pollutants.

*These publications are available for sale at the Board's office at Privesh Bhawan, Sastri Nagar (Trans Yamuna area), Delhi.

Solution. Using equation (18.26), we have

h = height of chimney

$$= 74 (Q_p)^{0.27}$$

where Q_p = emission of particulate matter in t/yr.

In the given case, the particulate matter emission

$$= 2.9 \text{ t/yr/MI of fuel burnt}$$

$$= 2.9 \times (12 \times 0.3) \text{ t/yr}$$

$$= 10.44 \text{ t/yr}$$

$$(\because \text{fuel burnt per yr.} = 12 \times 0.3 \text{ MI})$$

$$\text{Now, } Q_p = \frac{10.44}{300 \times 24} \text{ t/hr}$$

(assuming 300 working days in the yr with 24 hr working)

$$\text{or } Q_p = 1.45 \times 10^{-3} \text{ t/hr.}$$

Using equation (18.26), we have

$$h = 74 (Q_p)^{0.27}$$

$$= 74 \times (1.45 \times 10^{-3})^{0.27} \text{ m}$$

$$= 12.67 \text{ m}$$

... (i)

It means that only 12.67 m high chimney is required for effective disposal of particulate matter.

Let us now calculate the height of the chimney required for effective disposal of SO_2 by using equation (18.27) as :

$$h = 14 (Q_s)^{1/3}$$

where Q_s = SO_2 in kg/hr.

SO_2 emission = 60 t/yr/MI of oil burnt

$$= \frac{(60 \times 1000)}{(300 \times 24)} \text{ kg/hr/MI of oil}$$

$$= \frac{60 \times 1000}{300 \times 24} \times (12 \times 0.3) \text{ kg/hr}$$

$$= 30 \text{ kg/hr.}$$

$$\therefore h = 14 \cdot (30)^{1/3} = 43.45 \text{ m ; say } 43.5 \text{ m.}$$

Since the above requirement of 43.5 m is more than the minimum requirement of 30 m, 43.5 m high chimney is required for effective disposal of pollutants. **Ans.**

Notes. Since the concentrations of NO_x , HC, and CO are generally much less than that of SO_2 in all industries, as in the above example, these pollutants have not been specified by the Board for considerations of chimney heights, and hence are ignored.

Example 18.6. A coal fired 1000 MW power plant is operating around 38% efficiency. The ash and sulphur content in the coal used respectively are 35% and 3%, and the calorific value of 21 MJ per kg of coal. Find the emission rate of SO_2 from the plant.

Solution. The electrical energy produced by 1000 MW power plant

$$= 1000 \text{ MJ/s}$$

(million joule per second)

Since the efficiency of the power plant is 38%, the heat energy required to be produced to generate 1000 MJ/s of electrical energy

$$= \frac{1000 \text{ MJ/s}}{0.38} = 2632 \text{ MJ/s}$$

Consumption of coal in producing 2632 MJ/s of heat energy

$$= \frac{2632 \text{ MJ/s}}{\text{Calorific value of coal in MJ/kg}} = \frac{2632 \text{ MJ/s}}{21 \text{ MJ/kg}} = 125.33 \text{ kg/s}$$

Sulphur content of consumed coal, i.e. sulphur produced per second

$$= 3\% \times 125.33 \text{ kg/s} = 3.76 \text{ kg/s}$$

Now, $\text{S} + \text{O}_2 = \text{SO}_2$

The molecular mass of both S and O_2 is 32, and they combine on a one to one basis:

$$\therefore 3.76 \text{ kg of S} + 3.76 \text{ kg of } \text{O}_2 = 7.52 \text{ kg of } \text{SO}_2/\text{sec}$$

$$\therefore \text{Emission rate of } \text{SO}_2 \text{ in kg/sec} = 7.52 \text{ kg/s. Ans.}$$

Example 18.7. A coal fired 1000 MW power plant generates daily huge quantum of flyash, bottom slurries, besides particulate matter present in the burnt coal. Estimate the quantum of bottom ash, flyash and particulates generated daily by the plant. Also, suggest eco-friendly method of disposal of the flyash and bottom ash. Following information are available: Calorific value of the coal (ash content 35%) burnt 21 MJ/kg; 60% of ash discharged as flyash, and 75% of flyash and 90% of the bottom ash generated may be recovered; overall efficiency of the plant is 40%.

Solution. Since 1 watt (W) is equal to 1 Joule/sec (1 J/s), we have

1000 MW power plant equals production of energy

$$= 1000 \text{ MJ/s}$$

Since the efficiency of the power plant is 40%, the total heat energy utilised by the power plant

$$= \frac{1000 \text{ MJ/s}}{0.4} = 2500 \text{ MJ/s}$$

Consumption of coal having calorific value of 21 MJ/kg

$$= \frac{2500 \text{ MJ/s}}{21 \text{ MJ/kg}} = 119.05 \text{ kg/s}$$

Since the coal used has an ash content of 35%, the total ash produced by consumption of 119.05 kg/s of coal

$$= 119.05 \text{ kg/s} \times 0.35 = 41.667 \text{ kg/s}$$

Hence, total ash produced per day

$$= 41.667 \times (24 \times 3600) \text{ kg/d} = 3.6 \times 10^6 \text{ kg/d} = 3600 \text{ t/d. Ans.}$$

The best eco-friendly use of flyash generated by the plant can be made for manufacturing flyash bricks.

Example 18.8. During rush hour on a busy road crossing, nearly 1200 vehicles ply per hour at an average speed of 20 kmph. Of these, about 70% cars use leaded petrol. The average fuel consumption is one litre for an average of 8 km of travel. Considering that 70% of the lead present in the fuel is emitted in the form of particulate aerosol, find the emission rate of lead aerosol in the ambient air. (Given : concentration of lead in the fuel 0.4 $\mu\text{g/L}$; assume bright day with light wind).

Solution. No. of vehicles passing per hour on the road
= 1200

Since 70% cars use leaded petrol, the no. of lead emitting vehicles passing per hour on the road
= $1200 \times 70\% = 840$

Average fuel consumption per hour by each vehicle
= $\frac{1 \text{ Litre}}{8 \text{ km}} \times 20 \text{ km} = 2.5 \text{ litres (L)}$

Total fuel consumption by 840 vehicles per hour
= $840 \times 2.5 \text{ L} = 2100 \text{ L/h}$

Since the concentration of lead in fuel = $0.4 \mu\text{g/L}$
The total lead contained in 2100 L/h of used fuel
= $0.4 \mu\text{g/L} \times 2100 \text{ L/h}$
= $840 \mu\text{g/h}$

Since 70% of lead present in the fuel is emitted as particulate aerosol, the lead aerosol released in air
= $840 \mu\text{g/h} \times 0.7 = 588 \mu\text{g/h}$

Hence, $588 \mu\text{g/h}$ of lead is released in air as particulate aerosol. **Ans.**

AIR POLLUTION CONTROL

The atmosphere, like a river, do possesses self-cleansing properties, which continuously clean and remove the pollutants from the atmosphere under natural processes. So long as the pollutants discharged by man into the environment, is lower than the natural cleansing capacity of the environment, we live happily without any air pollution problem. But as and when the discharged pollutants exceed the natural cleansing capacity, our environment becomes polluted, giving us diseases, spoiling our clothes, plants, eatables, buildings, etc. Attempts are then made to reduce the emission of pollutants from the automobiles or factories by adopting mechanical means, or by using high rise chimneys for better dispersion and dilution of pollutants over a longer range of environment. The natural self-cleansing process of the environment, and the engineering measures adopted to artificially clean the industrial and vehicular gases, before they are emitted into the environment are discussed in the following articles.

18.8. The Natural Self-Cleansing Properties of the Environment

The various natural properties, which continuously clean the environment, automatically, are :

- (i) *dispersion* ;
- (ii) *gravitational settling* with or without *flocculation* of particles ;
- (iii) *absorption* including *washout* and *scavenging* ;
- (iv) *rainout* ; and
- (v) *adsorption*.

All these processes, naturally, clean the air thereby

18.8.1. Dispersion. Dispersion of pollutants by winds reduces the concentration of air pollutants at one place, although in the strict sense, it does not remove them from the environment as a whole. This mechanism is therefore, a *diluting* mechanism only.

Ironically, we have been stressing extremely hard on providing long chimneys for causing effective dispersion of pollutants, although however, in the strict sense, these long chimneys are only a means of spreading our own pollutants around our neighbours. The dispersion through long chimneys, therefore, helps us in diluting the air pollutants near their sources only, and does not reduce their long term undesirable effects on the community as a whole. For example, it has been estimated that SO_2 emitted in other countries, particularly in Great Britain, leads to *acid rains* in Sweden, whose environment is found to contain 15 to 50% of transported outside SO_2 .

18.8.2. Gravitational Settling. Gravitational settling is the most important natural mechanism, under which large heavy particles from the ambient air settle down on buildings, trees and other objects. This generally happens for the particles which are larger than 20 in size.

This process also helps in removing flocculated particles formed by uniting of smaller particles over larger particles, till a floc particle, large and heavy enough to settle out under gravity, is formed.

18.8.3. Absorption. In the natural absorption process, the gaseous as well as particulate pollutants from the air get collected in the rain or mist, and may settle out with that moisture. This phenomenon takes place below the *cloud level*, when falling raindrops absorb pollutants, and is also known as *washout* or *scavenging*. The process, however, does not help in removing particles smaller than $1 \mu\text{m}$ in size.

The gaseous pollutants are removed in dissolved state with moisture, either with or without chemical changes.

18.8.4. Rainout. Rainout is the process involving precipitation above the cloud level, where submicron particles present in the atmosphere in the clouds, serve as *condensation nuclei*, around which drops of water may form, and fall out as raindrops. This phenomenon helps in increased rainfall and fog formation in urban areas, containing huge quantities of such particles, rising high above the cloud level.

18.8.5. Adsorption. Adsorption is the phenomenon in which the gaseous, liquid, or solid pollutants present in the ambient air are kept *attracted*, generally *electrostatically*, by a surface, where they are concentrated and retained. Natural surfaces, such as soils, rocks, leaves, blades of grass, buildings, and other objects can adsorb and retain pollutants. The particles may come in contact with such surfaces either by *gravitational settling* (as stated earlier) or by *inertial impaction*, under which the pollutants are carried to such surfaces by winds. *Impaction* is particularly effective for particles of size 10 to $15 \mu\text{m}$.

18.9. Dilution Method for Controlling Air Pollution from Stationary Sources (Factories)

As stated in the earlier paragraph, the emitted smokes can be spread over a larger area, through the use of high rise chimneys, thereby transporting the pollutants over larger distances, and, thus, reducing the pollution near the emission source.

This method is largely adopted in developing countries, because here, the pollution is generally confined over smaller environment near cities and industrial towns only. The neighbouring environment, which is free from emissions, is thus made to share some of the pollutants burden, thereby causing somewhat equitable distribution of the pollutants. Nevertheless, this method only reduces the concentration of pollutants at particular place(s), rather than reducing or removing the pollution load from the total environment, as a whole.

18.10. Controlling Air Pollution from Stationary Sources by Installing Engineering Devices

In order to reduce the pollution load entering the environment from stationary sources, several measures may be taken; out of them, replacement of burning fuel by electricity or solar energy is by far, the best method, as it will eliminate the very production of pollutants in the combustion process. Besides, this, we can use better quality of fuels and efficient engines, for reducing pollution loads from emissions. Say for example, LPG (liquid petroleum gas) and LNG (liquefied natural gas) may be used in industries in place of coal, as they will produce much less pollutants in the emissions. Replacement of old obsolete processes in industries with the new efficient processes may also lead to reduced pollution emissions. Besides such innovations and precautions, certain mechanical devices may be installed in the industrial processes, which may help in reducing the emission of pollutants.

Such mechanical devices, are generally divided into two categories; i.e. (i) those devices which help in reducing particulate matter; and (ii) those devices which help in reducing gaseous pollutants. These devices are discussed below:

18.10.1. Control of Particulate Pollutants in Industries. The important devices, which are used to control particulate matter, are:

- Gravitational settling chambers.
- Centrifugal collectors including cyclone collectors and dynamic precipitators; and
- Wet Scrubbers (collectors) including spray towers, wet cyclone scrubbers and venturi-scrubbers.
- Electrostatic precipitators; and
- Fabric filters.

The sizes of particles removed by these mechanical devices, their working principles, comparative merits, demerits, and uses are summarised in table 18.4. Their detailed designs are, however, beyond the scope of this book.

Table 18.4. Comparative Study of Various Mechanical Devices Used in Particulate Emission Control

S. No.	Name of Mechanical Device	Minimum particle size that can be removed in μm	Efficiency %	Merits	Demerits	Principle of Working and Uses
1.	Gravitational Settling Chambers (Fig. 18.10)	> 50 μm	< 50%	Simple to design and maintain, and low pressure loss.	Requires large space, and collection efficiency is also low. Only large sized particles are separated out.	The emitted smokes, when made to pass through a settling chamber (Fig. 18.10), drop some of their larger sized particles in the chamber, under Stoke's law. The largest size particle (d) that can be removed with 100% efficiency in such a chamber of length L and height H is given by equation $d = C \cdot \sqrt{\frac{18\mu \cdot v_s \cdot H}{g \cdot L \cdot \rho_p}} \quad \dots (18.29)$ where v_s = horizontal velocity of gas passing through the chamber, between 0.5 to 2.5 m/sec. ρ_p = density of particles removed. μ = viscosity of air, at the given temperature in kg/m. sec C = correction factor for existing non-quiescent conditions in the gas flow through the chamber, generally taken at equal to 2.

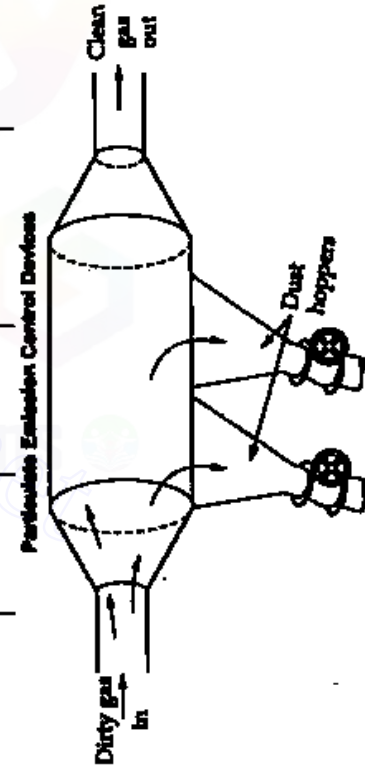


Fig. 18.10. Gravitational settling chamber.

(1)	(2)	(3)	(4)	(5)	(6)	(7)
2.	Centrifugal Collectors including Cyclone collector or separator (Fig. 18.11) and Dynamic precipitator (Fig. 18.12)	5–25 μm	50 ~ 90%	Relatively inexpensive, simple to design and maintain; requires less floor area; ensures dry continuous disposal of collected dusts; low to moderate pressure loss (2.5 to 20 cm); can handle large volumes of gases at temperatures upto 90°C. Cyclones are widely used in industries producing larger quantities of gas containing larger sized particles, like, Cement and Fertiliser plants, Petroleum refineries, Asphalt, mixing plants, Grain mills, Cotton gins, etc.	Requires much head room; collection efficiency is low for smaller particles, quite sensitive to variable dust loadings and flow rates.	A cyclone collector (Fig. 18.11) is a specially designed closed chamber, in which the velocity of the inlet gas is transformed into spinning vortex, and the particles from the gas are thrown out under the centrifugal force. The particles thrown out on the walls of the chamber, slide down to the hopper, and, are thus removed. Its efficiency depends on the generated centrifugal force, which in turn, depends on mass of the particles (M_p), inlet gas velocity (v_i), and radius of cyclone (R), and is given by the equation $F_c = \text{centrifugal force generated} = M_p \cdot \frac{v_i^2}{R} \dots (18.30)$ A dynamic precipitator (Fig. 18.12) imparts centrifugal force to the entering gas with the help of rotating vanes, and is, thus, about 7 times more effective than an ordinary Cyclone. Such a unit can work as an exhaust fan as well as a dust collector. They are widely used in Ceramics, Food and Pharmaceutical, and Wood working industries. They cannot, however, handle wet fibrous material, which tend to accumulate on the moving vanes. A photoview of such a device is shown in Fig. 18.12.

Contd.

Particulate Emission Control Devices

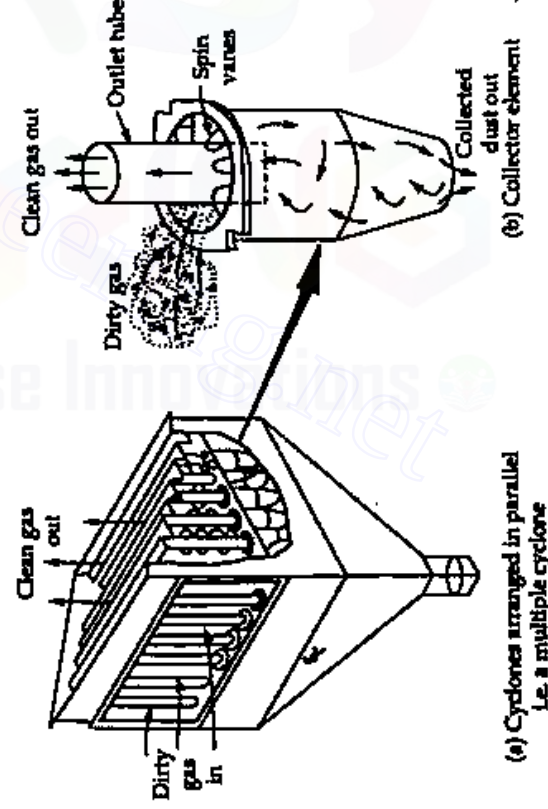


Fig. 18.11. Cyclone collector (Cyclone Separator).



Fig. 18.12. Photoview of a Dynamic Precipitator.

(1)	(2)	(3)	(4)	(5)	(6)	(7)
3.	Wet Scrubbers or Collectors, including Spray tower (Fig. 18.13) Wet-Cyclone scrubber (Fig. 18.14) Venturi-scrubber (Fig. 18.15)	> 10 μm > 2.5 μm > 0.5 μm	< 80% < 80% < 99%	(i) The Spray tower and Venturi scrubber can be made to remove gaseous pollutants also, along with removing particulate matter. (ii) Hot gases can be cooled down. (iii) Corrosive gases can be recovered and neutralised. (iv) The separated gases through contact with aqueous chemicals may produce such useful byproducts, as chemicals and fertilisers.	(i) A lot of waste-water needing disposal may be produced. (ii) Maintenance cost is high, when corrosive materials are collected. (iii) Wet outlet gases cannot rise high from the stack. (iv) Frost freezing problems in cold countries. (v) Plume may sometimes be visible in the sky due to the presence of water vapour.	In these devices, the flue gas is made to push up against a down falling water (liquid) current. The particulate matter mixes up with water droplets and, thus, falls down and gets removed. Water solutions, when replaced with other aqueous chemical solutions, like lime, potassium carbonate, slurry of MnO and MgO, etc. do help in removing gaseous pollutants also from the flue gases.

Particulate Emission Control Device

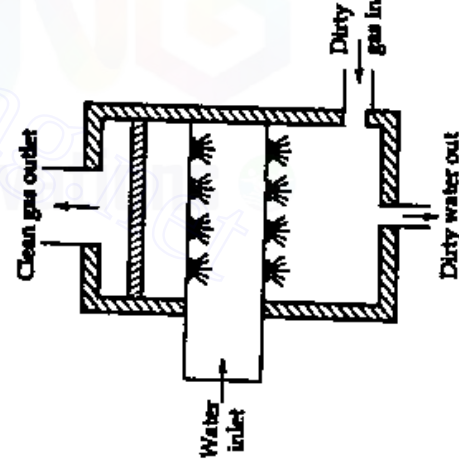


Fig. 18.13. Spray tower (Also used for removing gaseous pollutants).

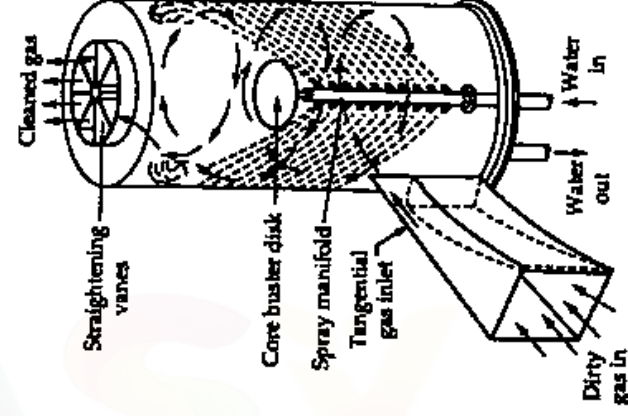


Fig. 18.14. Wet-Cyclone scrubber.

(1)	(2)	(3)	(4)	(5)	(6)	(7)
4.	Electrostatic Precipitators [Fig. 18.16 (a) and (b)]	> 1 μ m	95–99%	(i) Particles may be collected wet or dry. (ii) 99% and plus efficiency can be obtained. (iii) Even small particles can be removed. (iv) Maintenance is nominal, unless corrosive and adhesive materials are present in flue gases. (v) They contain a few moving parts. (vi) They can be operated at high temperatures upto 300–450°C.	(i) Higher initial costs. (ii) Sensitive to variable dust loadings and flow rates. (iii) They use high voltage, and hence may pose risk to personal safety of the staff. (iv) Collection efficiency reduces with time.	In electrostatic precipitators, the flue gas is made to pass through a highly ionised zone, where the particles get electrically charged and are separated out from the gas, with the help of electromagnetic forces in the powerful electric field. They are widely used in Thermal power plants, Pulp and Paper industries, Mining and Metallurgical industries, Iron and Steel plants, Chemical industries, etc.

(Contd.)

Particulate Emission Control Device

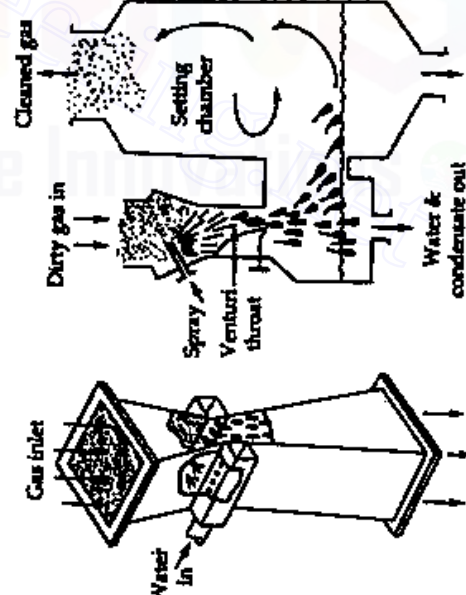


Fig. 18.15. Venturi-scrubber (also used for removing gaseous pollutants).

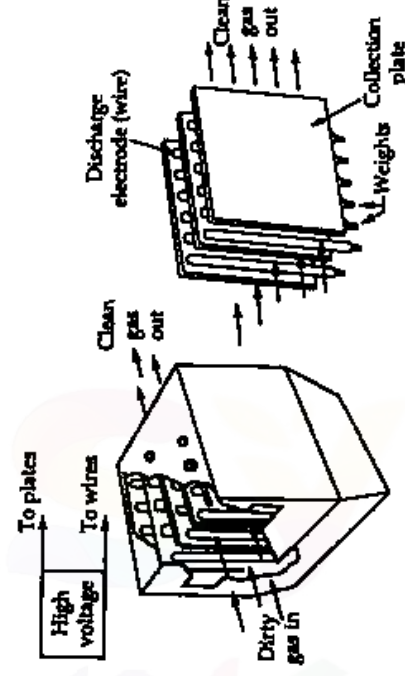


Fig. 18.16. (a) High Voltage Electrostatic Precipitator (plate type).

(2)	(3)	(4)	(5)	(6)	(7)
Fabric Filters (Fig. 18.17)	$< 1 \mu\text{m}$	$> 99\%$	(i) Fabric filters can give high efficiency, and can even remove very small particles in dry state. (ii) Performance decreases becomes visible, giving pre-warming.	(i) High temp. gases need to be cooled to the range $100-450^\circ\text{C}$, within which, the filters are stable. (ii) The flue gases must be dry, as otherwise, there is a risk of condensation inside the filter, which can cause clogging. (iii) The fabric is liable to chemical attack.	In such a system, the flue gas is allowed to pass through a woven or felted fabric, which filters out the particulate matter and allows the gas to pass. Small particles are retained on the fabric, initially through interception and electro-static attraction; and later on, when a dust mat is formed, the fabric starts collecting particles more efficiently. A baghouse filter unit, (Fig. 18.17), provided in an ordinary room of the factory, contains several vertically hanging fabric cylindrical bags (1.8 to 8 m long); the upper ends of the bags are closed, and lower ends are attached to a hopper, where also, the inlet of the flue gas is located. The upward moving gas drops out particulate matter in these bags, which settles down into the hopper, and cleaner gas goes out through the fabric filters. The framework, housing the hanging bags, is provided with an automatic shaking device for cleaning the bags of the collected dust.

Particulate Emission Control Device

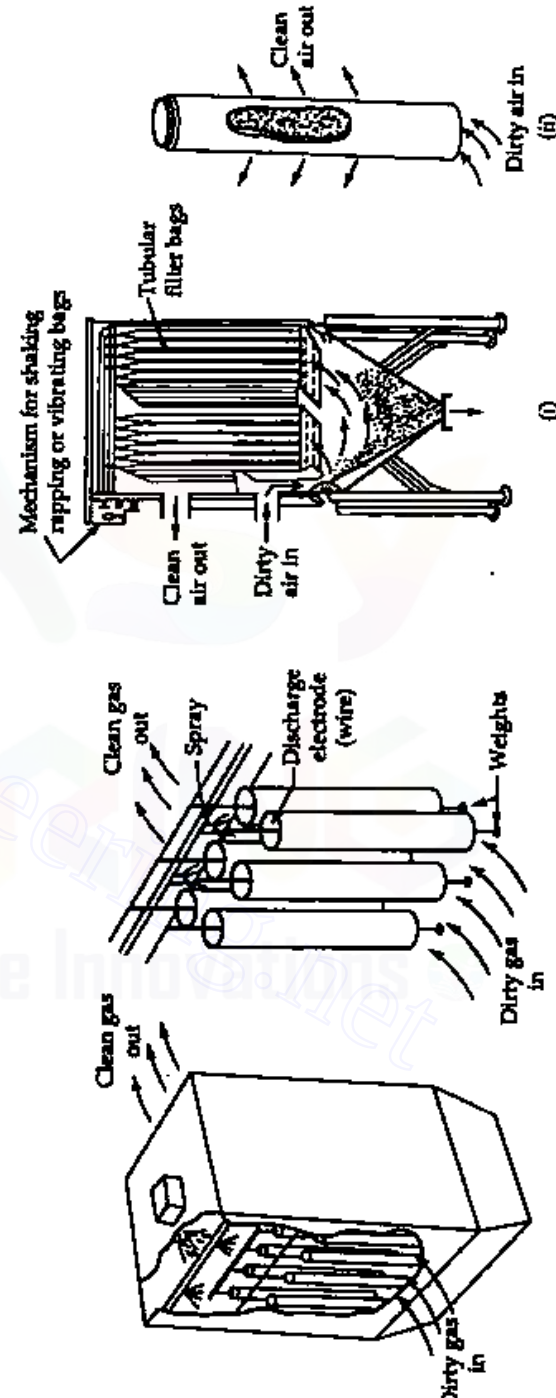


Fig. 18.16. (b) High Voltage Electrostatic Precipitator (Tube type).

Fig. 18.17. Bag house fabric filter unit.

18.10.2. Control of Gaseous Pollutants in Industries. The important devices, which are used to control emission of gaseous pollutants in industries, are:

(1) Absorption Units. Absorption units include : spray towers, plate towers, packed towers, and venturi scrubbers.

Out of these devices, spray towers and venturi-scrubbers can simultaneously be used for removing particulate pollutants, and have already been described in Table 18.4 (Figs. 18.13 and 18.15 respectively). Scrubbers are generally less effective in removing gaseous pollutants than towers, but then, towers get frequently clogged by particulate matter.

Other effective devices for removing gaseous pollutants, i.e. plate towers and packed towers, are shown below, in Fig. 18.18 and 18.19, respectively.

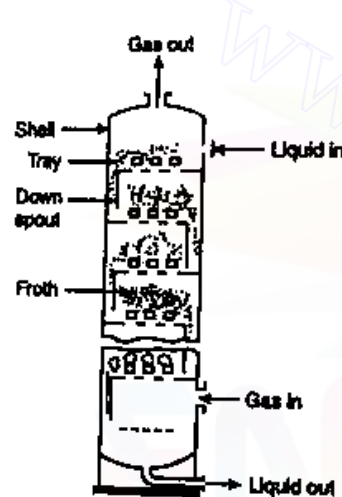


Fig. 18.18. Plate tower.

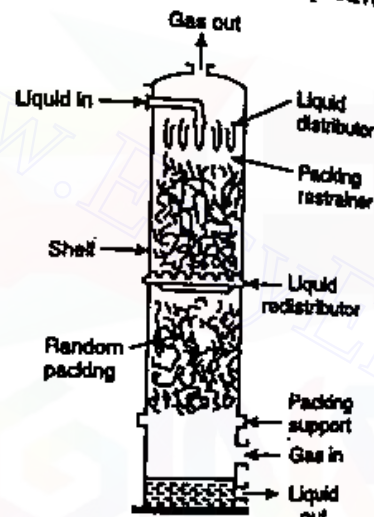


Fig. 18.19. Packed tower.

These absorption units work on the principle of transfer of the pollutants from the gas phase to the liquid phase. In other words, the pollutants from the dirty gas, get absorbed in the liquid, through which the gas is made to pass, in these units. Such absorption takes place by *diffusion* as well as *dissolution*.

The effectiveness of these devices, naturally, depends upon the solvent (liquid), through which the gas is made to pass. When water is used as the solvent, the removal is restricted only to a few inorganic gases, such as NH_3 , Cl_2 , and SO_2 .

All such absorbent units must be properly designed for the given conditions, before one of them is adopted. Care should also be taken to ensure that the pollutants transferred from air to water, may not cause heavy and uncontrollable water pollution.

(2) Adsorption Units. Absorption units use adsorbents like activated carbon, molecular sieves (dehydrated zeolites, i.e. alkali or metal silicates), activated alumina, silica gel, etc.

In adsorption units, the pollutants are adsorbed on the surface of the adsorbent beds.

removed. Activated carbon beds can very effectively catch hydrocarbons, H_2S and SO_2 .

One special form of molecular sieve can also capture NO_2 . A schematic sketch of such a unit is shown in Fig. 18.20.

The above adsorbents, except activated carbon, have the drawbacks of preferably capturing water, before catching any of the gaseous pollutants; and hence, water may have to be removed from the gas, before it is treated in such units.

Moreover, almost all the adsorbents are subject to destruction at moderately high temperatures (150°C for active carbon, 600°C for molecular sieves, 400°C for silica gel, and 500°C for activated alumina). Hence, they prove to be very inefficient for purifying industrial gases at such high temperatures.

(3) Combustion or Incineration Equipments may be used to purify polluted gases, when the pollutants in the gas streams are oxidisable to an inert gas. Pollutants, like hydrocarbons and carbon monoxide (CO) can be easily burnt, oxidised, and removed in such equipments.

Both, *Direct flame combustion* by afterburners (Fig. 18.21), and *catalytic combustion* (Fig. 18.22), have been used in commercial applications.

Catalytic incineration can be used when combustible materials in the waste polluted gas, are too low to make direct-flame incineration feasible. This generally happens when the energy of the polluted gas is lesser than 3.7 MJ/m^3 . At

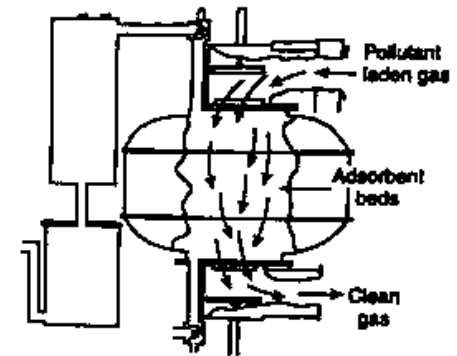


Fig. 18.20. Schematic sketch of an adsorption tower unit.

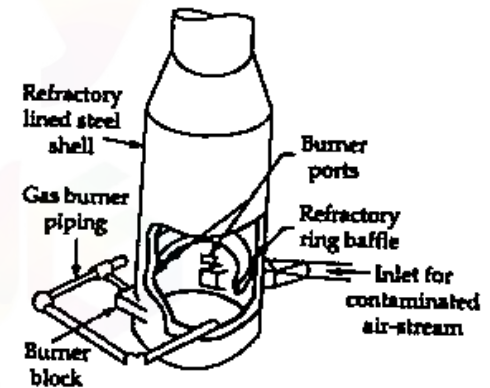


Fig. 18.21. Direct flame incineration.

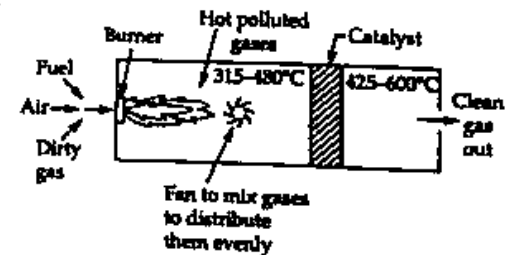


Fig. 18.22. Catalytic incineration.

all such energy contents, the gas burning becomes self supporting after initial ignition, thereby making possible the use of direct flame incinerators. Secondary supporting fuel may also sometimes be used to make such a method feasible.

It has also to be ensured that the final combustion product from the incinerator is easily disposable, and less toxic than the original gas pollutants, being removed. Direct flame incineration has been successfully used to purify the industrial gases in Varnish cooking, Meat smoke houses, and Paint bake oven industries.

When the combustible fuel value of the polluted gases are lower, some catalytic materials have been found to accelerate the rate of oxidation, without themselves undergoing a chemical change, thus reducing the incineration time, or making the incineration feasible even with low-energy polluted gases.

Costly Platinum or palladium compounds* have often been used as catalysts. Conventionally, such a catalytic compound is placed in a bed similar to absorption beds, and the supporting lattice is made of ceramic.

The old catalytic systems were effective only when the hot gases were being passed through them; and hence, pre-heating by pre-heaters (as shown in Fig. 18.22) was an absolute necessity. But in modern days, even cold catalytic systems, which work at ambient temperatures,* have been designed, thus eliminating the necessity of pre-heating.

Catalytic incinerators have often been successfully used to control SO_2 , NO_x , CO, hydrocarbons*, etc. Besides being costly, their major drawback is their susceptibility to poisoning by sulphur and lead compounds, even in trace amounts.

Catalytic combustion has successfully been used in purifying emissions from industries, like, Varnish cooking, Asphalt oxidation, Printing press, etc.

18.11. Controlling Air Pollution from Automobiles

Automobiles, chiefly emit carbon monoxide (CO), hydrocarbons (HC), and nitrogen oxides (NO_x). The contents of these pollutants in the smoke, emitted by the automobiles, may usually vary, as :

CO	—	0.5 to 8.4%
HC	—	300 to 1000 ppm
NO_x	—	500 to 3000 ppm,

depending upon the type and condition of the engine of the automobile.

An ideal internal combustion engine (I.C. engine), when gets stoichiometric mixture of Air and Fuel (14.7 : 1 ratio)** burns them up completely to CO_2 , water and nitrogen, without producing any CO. But in actual practice, two and three wheeler petrol engines receive high fuel content mixture (12 : 1 ratio), during cold start, idling, acceleration, and high speed cruising; and

*Vanadium pentoxide at high temperatures, has been used very effectively, for removing SO_2 ; platinum metals have been used for removing NO_x ; activated alumina impregnated with a metallic compound is found useful in removing hydrocarbons; palladium II (Pd II) and Cu (II) catalysts have been developed to effectively oxidise CO to CO_2 at ambient temperatures.

similarly diesel engines receive low fuel content mixture (16 : 1 ratio) when running at a medium speed. So in practice, the combustion of fuel in automobiles, is never complete. Naturally then, the exhaust gases from such engines, invariably contain products of incomplete combustion; i.e. CO, HC, H_2 , hundreds of oxygenated hydrocarbons, as well as small fractions of nitrogen oxides. These pollutants are highly dangerous to the overall environment, and to the life in general; and hence the automobiles are nowadays seen as a symbol of technological menace.

The emissions from petrol engines of two, three and four wheelers (including cars, having 4 stroke engines), contain heavier concentrations of HC and CO; whereas, the four stroke diesel engines of diesel vehicles (buses and trucks), contain heavier concentrations of NO along with thick smoke and particles. The auto emissions also contain gaseous pollutants, like SO_2 , and lead compounds, especially when lead containing fuel is used, as in India*.

In order to reduce lead menace, efforts are now on, in India, to reduce lead content in the gasoline, as it will take quite sometime before we are able to switch over completely to lead-free gasoline. Similarly, SO_2 emissions are caused in auto exhausts, because sulphur, or 'compounds of sulphur' are invariably present in the mineral oil. Efforts are also on, to reduce sulphur content, to as low a level as possible, in the gasoline.

Besides the above improvements required in the gasoline, the upkeep and maintenance of the auto engines, is also of utmost importance. The proper tuning of the engine and carburettor is very essential, in order to control pollutant emissions. Central Motor Vehicles Rules 1989, framed under Motor Vehicles Act, 1988, has therefore, stipulated permissible auto-emission levels. The maximum permissible CO emission, while idling is limited to 3.0% for cars, and 4.5% for two and three wheelers. Such stipulation for improved tuning and adjustment of the engines is only an initial step to limit the vehicular pollution; as in fact, there is no other choice left now, but to change the basic design of our automobiles, incorporating catalytic converters in their exhaust pipes, and to adopt multi-point fuel injection (MPFI) system with dual intake valves to limit the fuel intake exactly to the needs of the engine, with no excess fuel usage at any point.

The catalytic converters are usually made of noble metals, like platinum, palladium, etc., and help in oxidising CO and HC into their final end product of CO_2 , and also to reduce NO into nitrogen. These noble metal catalysts are highly active, and resist sulphur poisoning.

They may be made in pellets, or may be in the form of a monolithic one piece metal.

A catalytic converter is generally placed inside the tail exhaust pipe of the automobile, so as to pass through it the partially oxidised emissions, before they are let out into the atmosphere.

*Tetra Ethyl Lead (TEL) is still being used in India as octane booster; whereas, in advanced countries, like USA, Japan, etc., TEL has been replaced by (i) MTBE (Methyl Tertiary Butyl Ether) which does not contain any lead; and (ii) less toxic MMT (Methyl cyclopentadienyl Manganese Tricarbonyl).

In earlier years, two different catalytic metal beds were being used for oxidising CO and HC, and for reducing NO; but in modern days, catalysts have been designed, which catalyse both sets of reactions. These catalysts, popularly called three way catalysts, (P_t , P_d and R_k), have simplified the dual bed to a single bed catalytic convertor.

Presently, installation of such three way catalytic convertors (Fig. 18.23) is compulsory for all automobiles plying on the roads of USA and Japan. The auto manufacturers in India, have however, been avoiding the incorporation of catalytic convertors in the vehicles, primarily due



Fig. 18.23. Photoview of a typical Three way Catalytic Converter.

to the high cost of noble metals. These convertors will also necessitate certain changes in the basic design of the engines, as they tend to reduce the engine efficiency. Efforts are also being made at Indian Institute of Petroleum—Dehradun, Regional Research Laboratory—Bhubaneswar, and Projects and Development India Ltd.—Sindri, to develop an efficient catalytic system, using cheaper metals, like Mn, Cu, Cr-Cu, composite oxides.

Be that as it may, the Indian car manufacturers have now started fitting catalytic convertors in the new cars being released in our metro cities and the lead free petrol required to run such vehicles has been made available in all the metropolitan cities of India, since about the year 1996.

Whereas, there had been an improvement in the designs of petrol run cars, there had been a tendency on the part of auto manufacturers to change over to diesel run cars, due to lesser unit cost of diesel as compared to petrol. The diesel fumes have, however, been found to be more polluting than those of petrol, particularly in respect of toxic carcinogenic particulate matter being released by diesel vehicles. That is why, a case has been filled in the Hon. Supreme Court of India, requesting for a total ban on production and sale of diesel cars, particularly in Delhi, where air pollution has already reached intolerable levels. The ban on diesel cars has also been recommended by the Environmental Pollution (Prevention and Control) Authority (EPCA).

The Hon. Supreme Court of India, while dealing with this public interest litigation (PIL), has already ordered on 29.4.1999 that all the new cars (Petrol as well as diesel driven) to be sold in Delhi and its surrounding towns included in the National Capital Region (NCR) must confirm to the stricter international pollution control norms—EURO-I w.e.f 1.6.1999, and still more stricter norms—EURO-II w.e.f 1.4.2000. These European norms are already being followed in advance countries and are shown in table 18.5.

Table 18.5. Existing as well as Notified Euro I and Euro II Emission Norms

	CO (g/km)		HC + NO _x (g/km)		PM (g/km)	
	Petrol	Diesel	Petrol	Diesel	Petrol	Diesel
India 1996	8.68–12.40	5–9	3–4.36	2–4	–	–
India 2000	2.72	2.72–6.90	0.97	0.97–1.70	–	0.14–0.25
Euro I (Enforced in Europe in 1993)	2.72	2.72	0.97	0.97	–	0.14
Enforced in National Capital Region (NCR) of India from June 1, 1999						
Euro II (Enforced in Europe in 1996)	2.20	1.00	0.50	0.70–0.90	–	0.08–0.10
Enforced in NCR (India) from April 1, 2000						
Euro III (Enforced in Europe in 2000)	2.30	0.60	0.2–0.15	0.56	–	0.05

Another apex court judgement of July 1998, orders replacement of all pre-1990 autos and taxis in NCR with new vehicles running on cleaner fuels; no eight year old bus to ply except on compressed natural gas (CNG) or other clean fuels, and replacement of the entire Delhi Transport Corporation buses to CNG by 2001.

To comply with this order, several CNG buses have been purchased by Delhi Govt., to replace the old diesel buses. Several CNG filling station have also been opened all over Delhi and are being managed by Intraprasatha Gas Ltd.–IGL).

PROBLEMS

- Define air pollution, and differentiate between natural and man-made air pollutions.
 - Describe the historical background and causes of air pollution.
 - How does air pollution affects the different zones of the atmosphere?
- Differentiate between the primary and secondary air pollutants, and enumerate the various such pollutants of both the categories, explaining each in details.
- What is the difference between RSPM and TSPM in relation to air pollution?
 - What is photochemical smog and how is it formed?
 - How does air pollution affects human health?
- Enumerate the different major air pollutants, their characteristics, sources, and health effects on human beings in a tabular form.
 - How and which of the air pollutant(s) adversely affect the plant and animal life on Earth?

5. (a) Describe the harmful effects of important air pollutants on materials and services, as well as on aquatic life.
- (b) Enumerate the important local, regional and global impacts of air pollution.
6. (a) Differentiate between the environmental lapse rate (ELR) and adiabatic lapse rate (ALR). Also differentiate between ALR and Dry & wet ALRs.
- (b) Explain the stability of the ambient environment w.r. to relative positions of ELR line and ALR line.
7. (a) Differentiate and explain the terms : unstable, stable, and neutral environment.
- (b) Explain, negative lapse rate and temperature inversion conditions. How does inversion conditions affect pollution levels of the immediate environment of humans ?
8. Show that the lapse rate for dry adiabatic atmosphere can be given by

$$-\frac{dT}{dz} = \frac{g(k-1)}{\gamma T} \text{ where the notations have their usual meaning.}$$

9. (a) Differentiate between radiation inversion and subsidence inversion, bringing out their impacts on the resulting air pollution effects.
- (b) Enumerate the various factors which affect the dispersion of air pollutants into the atmosphere, and explain them briefly.
10. (a) What is double inversion ?
- (b) How do winds impact the dispersion of pollutants into the ambient air environment.
- (c) How and in what manner the environmental lapse rate (ELR) and adiabatic lapse rate (ALR) affect the dispersion of an air pollutant into the atmosphere. In this context, draw the various possible behaviours of the emitted plume.
11. (a) How will the existing atmospheric pressure and moisture prevalent in the atmosphere affect the dispersion of air pollutants into the ambient air atmosphere.
- (b) Write down the Gaussian distribution equation which is commonly used to predict the concentration of an air pollutant evolving from a source (factory) at any downwind point, and the location of the maximum pollution.
12. (a) What is meant by the effective height of a chimney and how is it computed ? What is its use ?
- (b) Write down the computing equations and other limiting standards which have been prescribed by CPCB for regulating the minimum chimney height of an air polluting source.
13. (a) Enumerate and describe the various natural properties which clean the ambient air (environment) over time by removing the various air pollutants.
- (b) Enumerate the engineering measures that are adopted to reduce emissions of air pollutants from (i) factories ; and (ii) automobiles, giving brief descriptions of various such measures.
14. Enumerate and describe in brief (with neat sketches) the various types of engineering devices that are used to control emissions of particulate matter from factories (stationary sources)
15. Enumerate and describe briefly (with neat sketches) the various engineering devices that are used to control the emissions of gaseous air pollutants from industries.
16. Write a note on air pollution caused by automobiles and its control.

17. Write notes on any four of the following :

- (i) Electrostatic precipitators
- (ii) Spray towers
- (iii) Venturi-scrubbers
- (iv) Catalytic incineration
- (v) Cyclone collectors
- (vi) Fabric filters
- (vii) Gravitational settling chambers
- (viii) Dynamic precipitators.

(c)g
These three issues are described below :

19.1. Acid Rain—A Regional Environmental Challenge


Normal clean rainfall through unpolluted environment is very slightly acidic, with its pH value just less than 7. This slight acidity is caused by the equilibrium reaction between water and CO_2 present in air, forming a weak carbonic acid solution. However, when the environment is polluted with *primary pollutants* like SO_2 and NO_x gases, the resultant rainfall tends to become more and more acidic, with the increasing concentration of these pollutants. This extra acidity in rain water is caused due to the formation of the *secondary pollutants*, like : sulphuric acid (H_2SO_4) and *nitric acid* (HNO_3) due to the reaction of water vapour with SO_2 and NO_x gases, respectively. The greater is the concentration of these primary pollutants, the greater would be the acidity, and, hence, lesser the pH value of the resultant rain. *It has been specified that when the pH of the rain water falls to 5.6 or below, the rain is specifically termed as acidic (Pl. refer Coloured Fig. 19.1).*

An acid rain does not spare any thing, which is exposed to it. What has taken mankind decades to build, and billions of years for the nature to evolve, is destroyed in a matter of few years—a *blink* in geological time scale.


Acid rain has the potential to *convert forests into wastelands by damaging trees, plants and crops ; acidify fresh waters of lakes, rivers, reservoirs, springs, wells, and underground sources ; induce respiratory illness in humans ; poison wild life ; and inflict irreversible damages on buildings to deface the old treasured monuments, like the one shown in Fig. 19.1.*

Acid rain is a versatile destroyer having regional implications at present, which may change to global ones, with the passage of time, if controlling measures are not taken. It has scourged much of the northern hemisphere in the last 30 years, and is now spreading to the industrialised regions of the south.

The primary pollutant, responsible for $\frac{2}{3}$ rd of the acid rains, is SO_2 , which is chiefly produced by the burning of coals and oils, largely used for generation

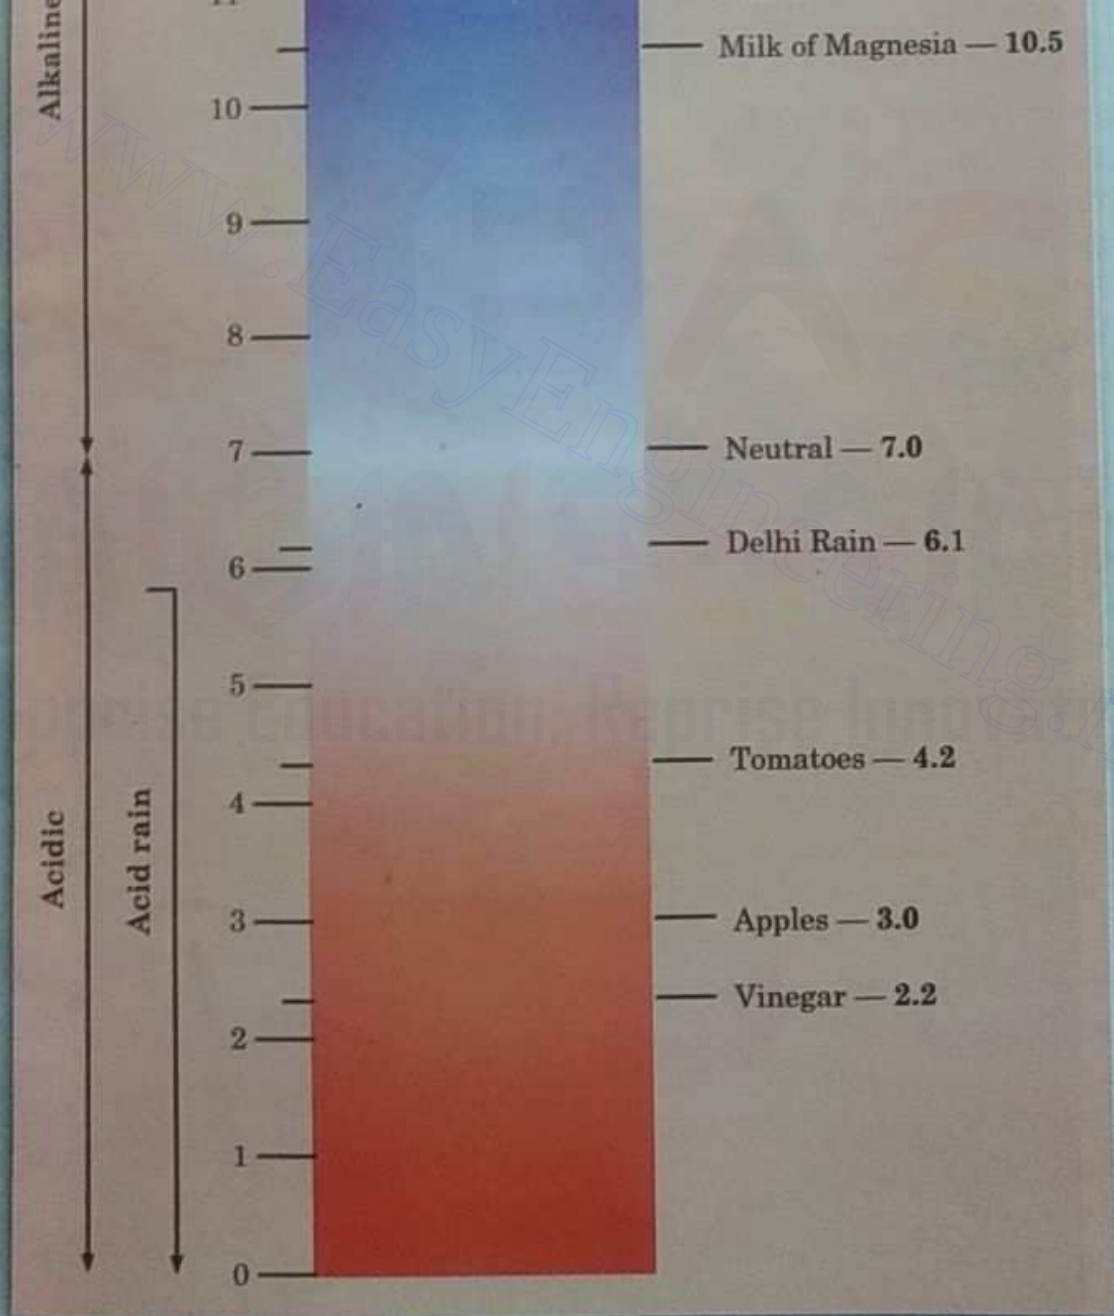

Coloured Fig. 19.1.

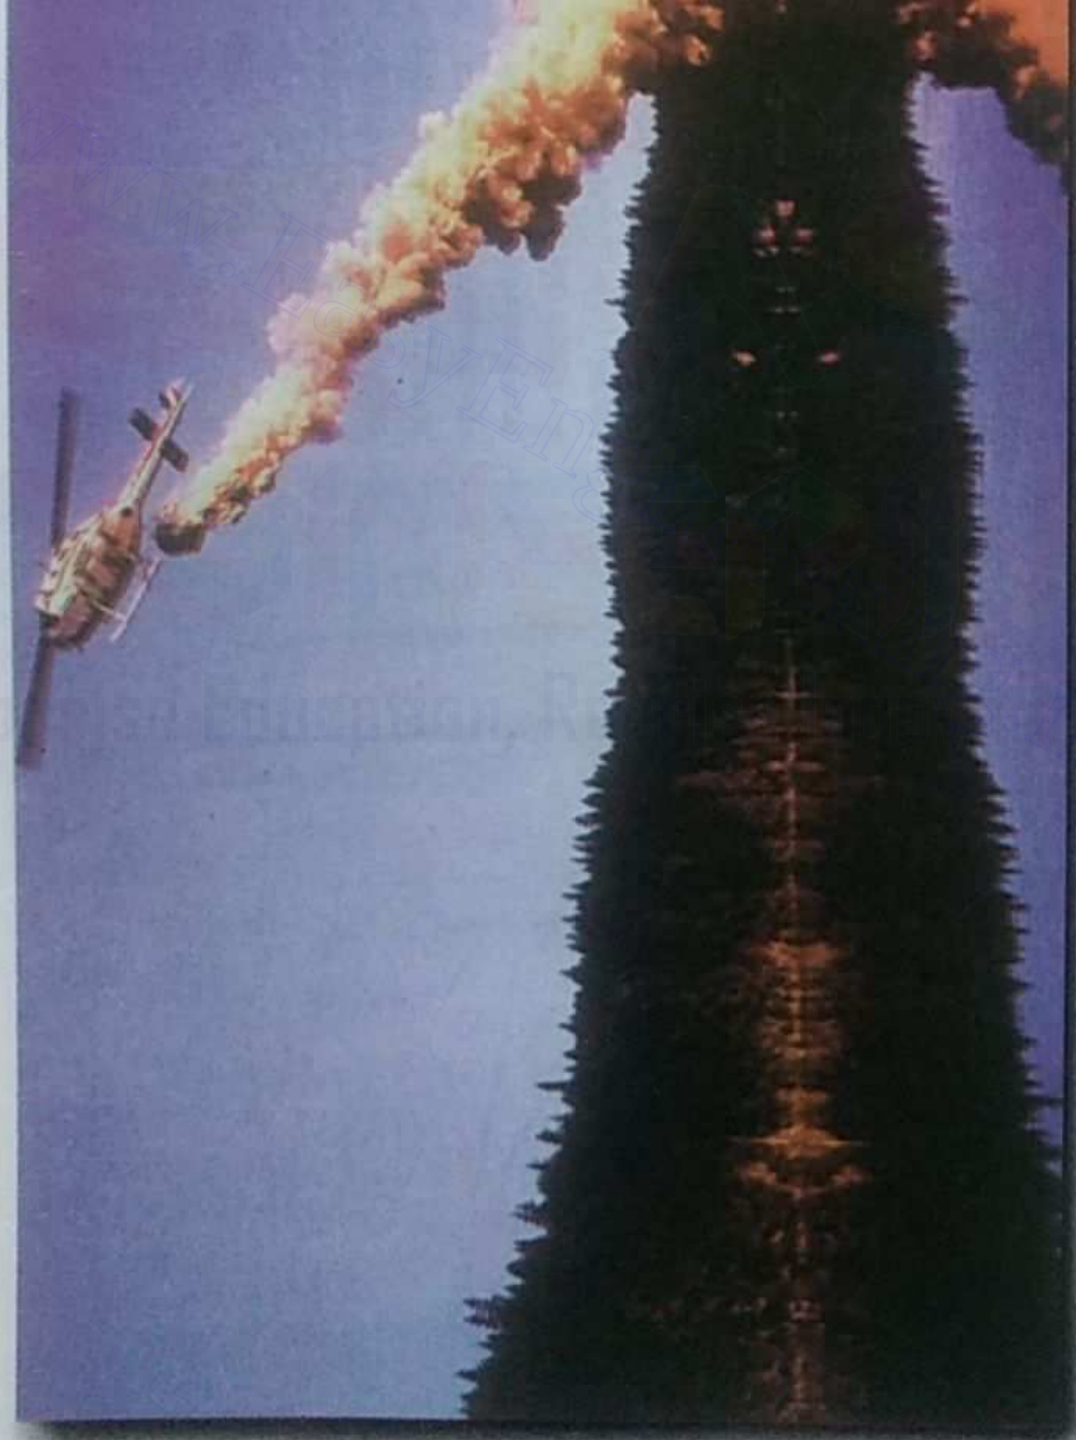

Coloured Fig. 19.2. On a war footing : a helicopter dumps lime into Lake Bergs
Spraying was undertaken to neutralise the acidic nature of water which was

forests, and a pollutant, as stated above, finally leads to HNO_3 acidity.

Some of the industries, may release hydrogen chloride gas (HCl) into the atmosphere, which may lead to HCl acidity ; but this is generally on a very small scale.




Fig. 19.1. An ancient statue eroded by acid rains in Sweden.

The extent of these primary pollutants, emitted into the atmosphere by the industries, is really staggering ; say for example, a single *nickel-copper smelting plant* in Canada is estimated to be throwing about 0.65 million tonnes of sulphur oxides (SO_x) each year. On an overall estimate, about 150 million tonnes of sulphur oxides and 40 million tonnes of nitrogen oxides, do enter annually into our environment from human actions alone, which approximately equals the natural emissions of these pollutants. The proportion of man-made emissions and the natural emissions is, however, as high as 9 : 1 in industrialised countries. Such huge man-made pollution is certainly going to pay us back in the same coin, and that is the story of the acid rain.

As stated above, rains having pH equal to or less than 5.6 (that are those which are about 20 or more times⁴ acidic than a neutral rain having pH = 7), are specifically called **acidic rains**. And, you must believe us, when we tell you that rains, as acidic as 1,00,000 times more acidic than a neutral one (i.e. those having pH = 2) have occurred at several places, particularly in north-eastern US and Scotland ; causing extensive damage to the forests.

An idea of the large scale damage, that has occurred due to acid rains, can be had when we inform you that in *Germany, Switzerland and Sweden*, half of the natural forests are dead or dyeing ; over 60% of all trees in *Britain* show signs of decay ; 80% of all lakes in *Norway* and 20% in *Sweden* are acidified, and many voided of fish and aquatic life. Damages by acidic environments to the world's most treasured monumental buildings, such as in *Rome, Venice, Athens ; London, Oxford*, and even in *India*, are quite visible.

$$\frac{10^7}{10^{5.6}} = 19.95 \approx 20.$$

In spite of such large scale damage to the biosphere, we have not learned lessons, simply because, there are no easy solutions to the problem. Moreover, the worst offenders, throwing SO_2 and NO_x in the air, are not always the worst sufferers, because these pollutants are, several times, carried away to the far off neighbouring countries, causing acid rains there. Say for example, SO_2 gases emitted by thermal power stations and other industries in Britain and West Germany, have been drifted away to northern European countries like Sweden, Norway, etc. causing acid rains in these Scandinavian countries. So much so that an estimated 75% of acid rain in Sweden and 90% of acid rain in Norway have been caused due to air pollution from other countries. Similarly, millions of tonnes of industrial wastes are thrown into the atmosphere by USA every year. These are carried away by strong winds to Canada, where they precipitate as acid rain. Even within the USA, it has been estimated that more than 50% of the deposition of acid rain in Central Ontario is caused due to air masses passing over the major sulphur-emitting sources in the mid western States of USA like Ohio and Indiana.

The problem of acid rain, in fact, was first of all detected in northern Europe, more than forty years ago, when the lakes of southern Sweden and Norway were found losing their fish population. In 70% of some 1500 lakes analysed in Norway, the pH values were found to be below 4.3, and they contained no fish at all. Soon scientist from other countries started reporting increased acidity in their water bodies. Nearly 200 lakes have since been found dead in North America and Canada, as the acid rains have killed fish, bacteria, and algae, causing complete collapse of the lakes into sterility, leaving crystal clear but ultimately dead lakes.

As far as India is concerned, the acid rains have so far prominently occurred in highly industrialised localities like Chembur in Maharashtra State, where acid rains occurred in 1970's and 1980's. The industries in this region had been using fuel with high sulphur content; and when on Govt's intervention, the industries started using cleaner fuel, the acid rains stopped. Lower pH levels of rains have also been reported from areas in Delhi, U.P., Maharashtra, Madhya Pradesh, Tamil Nadu, and even Andaman islands. (Please see Fig. 19.2). Although, these rains cannot be strictly called acidic, since in most of the cases, the pH levels were higher than 5.6, yet the stage has been set for acid rains, since pH levels nearing 5.6 have often been recorded in the past, as shown in table 19.1.

Table 19.1. pH Data Collected in 1974-84 from Certain Indian Towns where Monitoring Stations were Located

S. No.	Station	No. of observations	pH variations recorded
1.	Allahabad	56	6.34-9.00
2.	Kodailkanal	62	5.18-8.70
3.	Minicoy	66	6.52-8.90
4.	Mahanbari	42	5.50-8.30
5.	Port Blair	48	5.65-8.90
6.	Pune	76	5.65-8.90
7.	Srinagar	88	6.15-8.40

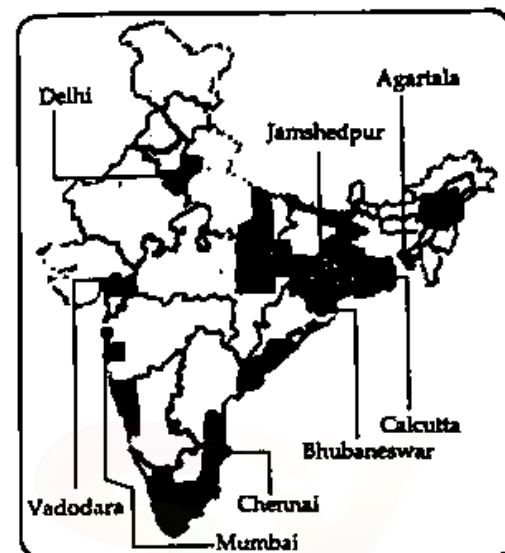


Fig. 19.2. Places where Acid Rains have occurred in India in the past.

Eventually, if the increasing air pollution emissions continue, particularly SO_2 emissions, primarily being caused by the use of diesel* vehicles, gen-sets, and other industries, then the days may not be too far off, when India may also face consequences of acid rains, which may cause irreparable damage to the country's biodiversity and even to the food chain.

Efforts have, however, started to provide *expensive scrubbers* in thermal power stations and other industries to check the emission of SO_2 and other gases; to provide *three way catalyst convertors* in automobiles to check the emissions of both SO_2 and NO_x ; to protect forests and lakes by taking emergency measures, such as *spreading of lime* on their surface (Coloured Fig. 19.2); by *fertilising the damaged trees* with calcium, potassium, magnesium, and so on.

All such corrective measures, of course, have a price, and are very costly, and may even cause other detrimental effects on the environment, such as the ones caused by the necessity of excessive quarrying of limestone mines for use in scrubbers. The environmental gains of such corrective measures have, therefore, to be weighted and balanced against their costs and associated detriments.

19.2. Ozone Depletion—The Most Dreaded Global Environmental Issue

Ozone depletion is the most dreaded aspect of air pollution, having wide spread implications, extending over the entire atmosphere. This problem is

*Indian diesel supplies contain about 0.5% sulphur by weight, except in Delhi and Agra where supplies contain about 0.25% sulphur. These sulphur contents are far higher than the sulphur content in diesel supplies in most other countries.

caused by the reduction of naturally available ozone layer in the atmosphere. Before we explain ozone depletion, we will like to summarise the contents of the gaseous atmosphere, that exists above the surface of the Earth.

The gaseous atmosphere extends to about 500 km beyond the Earth's surface, and consists of the following four major zones :

- (i) Troposphere ;
- (ii) Stratosphere or Ozonosphere ;
- (iii) Mesosphere ; and
- (iv) Thermosphere.] Ionosphere

These four zones of the atmosphere are shown in Fig. 19.3, and explained below :

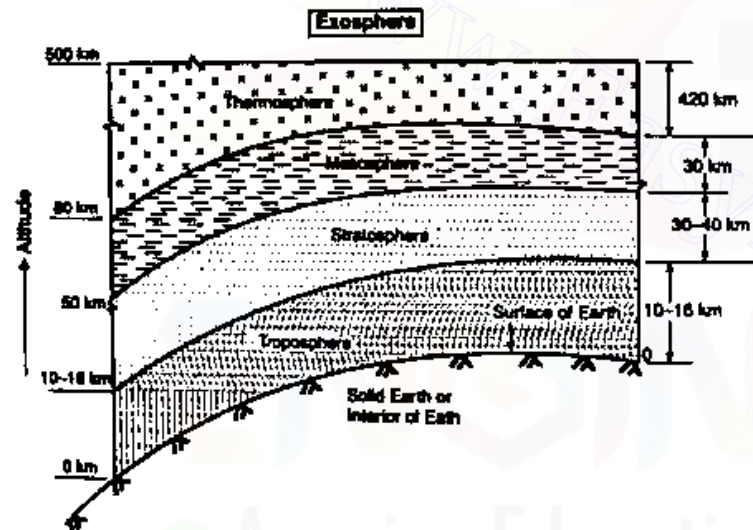


Fig. 19.3. Structure of the Atmosphere.

(i) **Troposphere.** It is the nearest gaseous zone extending from the surface of the Earth upto an average distance of about 11 km at the poles and 16 km at the equatorial regions.

Temperature decreases with height in the troposphere, since the main heat source is the solar radiation which is absorbed at the ground level. The rate of decrease of temperature, called the lapse rate is about 5°C/km . The troposphere contains most of the water vapour, clouds, and storms of the atmosphere. Winds tend to be the strongest at the tropopause (i.e., the top level of troposphere, indicated by point T in Fig. 19.4), the level of the jet streams. This is also the level at which the jet aircrafts cruise. The troposphere contains about three-fourth of the total weight of the atmosphere, and is responsible for most of the meteorological processes. Thus, it is the troposphere, in which winds are generated and clouds are formed.

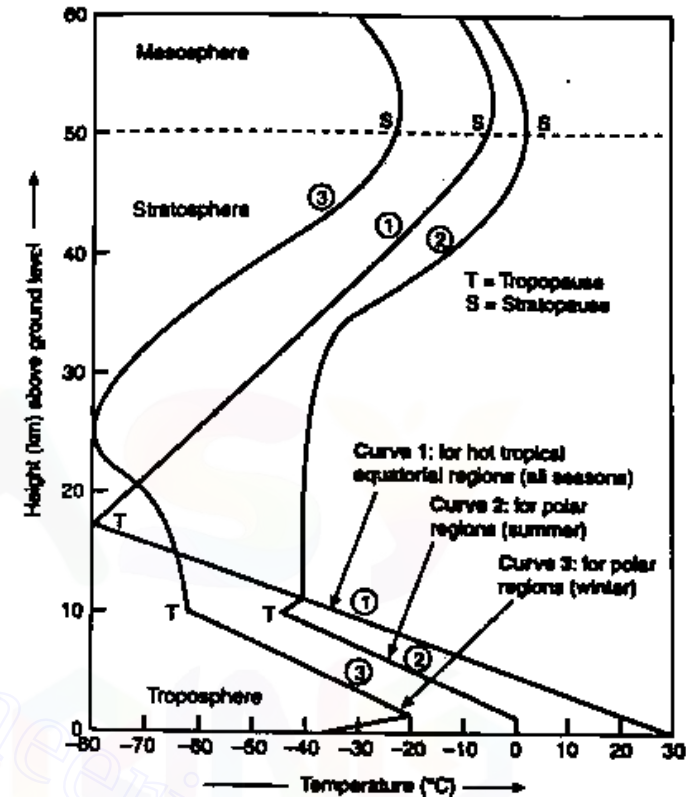


Fig. 19.4. Typical Temperature variation with height in a hot tropical region and polar region in summer and winter (T-marks the tropopause on each curve ; and S is the stratopause)

(ii) **Stratosphere.** Above the tropopause (at about 10–16 km altitude) lies another zone, called the stratosphere, extending up to about 50 km altitude, a point called the stratopause (represented by the latter S in Fig. 19.4). Between the tropopause (T) and stratopause (S), the temperature increases gradually with height, from about -80°C to about 0°C or so. At the stratopause (S), the temperature, in fact, is about as high as at the ground level. Its warmth is due to the absorption of ultraviolet radiation from the sun by oxygen and ozone. Most of the world's ozone is found in the stratosphere, where it may exceed 5 ppmv (parts per million by volume). Hence, stratospheric air is lethal to human beings. There is very little water vapour at these heights. Ozone (O_3) is, in fact, formed in this zone due to the splitting of an oxygen molecule (O_2) into the atomic oxygen (O), and its subsequent union with an oxygen molecule (O_2) to form O_3 (Ozone). Ozone is, however, destroyed naturally by ultraviolet radiations, as it helps in preventing UV radiations from reaching the ground. In the stratosphere, ozone is, thus, constantly being formed and destroyed, and is, therefore, in a state of dynamic equilibrium.

Since ozone is formed in the stratosphere, this zone is also sometimes called as the ozonosphere. The ozonosphere is of utmost importance to the life on the Earth, as it absorbs most of the U.V. radiations from the sun, which in its absence, would possibly have burnt all the life on Earth.

(iii) **Mesosphere.** The mesosphere extends from the stratopause (S) at about 50 km altitude and at about 0°C to another temperature minimum of about - 110°C at about 80 km altitude. This top boundary of mesosphere is called the mesopause. The atmosphere in this zone is windy and turbulent, but there is usually too little water vapour for clouds to form.

(iv) **Thermosphere.** Above the mesopause (80 km altitude) the temperature increases indefinitely upward into the thermosphere (i.e. the hot upper atmosphere), which zone may extend up to about 500 km altitude.

The mesosphere and the thermosphere zones contain many ions (electrically charged atoms and groups of atoms) and free electrons. Cosmic rays and radiations from the sun produces these ions. Both these zones together are, therefore, usually referred to as the ionosphere. *The ionosphere is a very light and rarefied mass, and as such, is very light in mass, despite having a large volume.* Different types of subzones, such as D-region (55-90 km altitude); E-region (90 to 145 km altitude); F₁-region (145 to 305 km altitude) and F₂-region (305 to 500 km altitude) have been differentiated within the ionosphere, depending upon the degree of ionisation.

The region of the atmosphere beyond about 500 km, is called the Exosphere, and till today, very little is known about it. It is perhaps a low density, *high temperature region*, with minimum atomic collisions.

As far as the chemical composition of the atmosphere is concerned, it has been found to be mainly a mixture of approximately 78% Nitrogen and 20% oxygen by volume. Other gases like carbon-dioxide, argon, neon, helium, ozone, and water-vapour will constitute the balance 2%. This composition is fairly constant in the regions of troposphere and a large part of the stratosphere. Dust particles and liquid droplets are also found present in the lower atmosphere and water vapour may be present in large variations.

The variation of temperature in the atmosphere is shown in Fig. 19.4.

Out of all the above described zones of the atmosphere, the second zone, i.e., the stratosphere, remains the most important to man, as it is the stratosphere which primarily contains ozone gas (O₃), chiefly in the layers between 25 and 40 km above the ground level. This ozone layer cuts off short wave length radiations (called ultraviolet radiations) from reaching the surface of the Earth. These ultraviolet (UV) radiations, having wave lengths shorter than about 290 nm (nano metre) are cut off by this ozone layer. These radiations, which are not allowed to cross below the ozone layer, produce warm conditions and raise the temperature in the stratosphere. This existing ozone layer in the stratosphere, thus, helps in absorbing the harmful ultraviolet (UV) radiations released by the sun rays. The sun light is thus, filtered out by the ozone molecules, before it reaches us on Earth.*

As a matter of fact, the ultraviolet radiations are extremely harmful to all kinds of life on Earth. Hence, if the filtering of the UV radiations is not done effectively and fully due to shortage of ozone thickness in the stratosphere, then naturally, the harmful U.V. radiations are likely to reach our planet, causing several adverse impacts on humans, animals, as well as the plant life existing on Earth.

The most dreaded adverse impact of UV radiations is to cause mutation in DNA, leading to skin cancers including the deadly melanoma. So much so, that a 10% overall depletion of ozone is estimated to cause 26% increase in the incidence of non-melanoma skin cancers, world-wide. UV radiations also affect our eyes leading to cataracts and ultimately to blindness, if not treated well in time. Excess UV radiations may also reduce the overall immune efficiency of our body, making us susceptible to infectious diseases. Moreover, UV radiations may interfere with the photosynthesis, leading to lower crop yields.

One of the most dangerous UV radiation, called UV-B, may even penetrate scores of metres into the oceans, killing phytoplanktons and krills, which constitute the very bottom of the ocean food chain, thereby causing food scarcity to larger animals like fishes, etc. and ultimately leading to shortage of marine food for humans.

Since 1985, it has been observed that the ozone layer is depleting in the stratosphere, due to its chemical action with chlorine atoms, being released by the dissociation of chlorofluorocarbons (CFCs), particularly in the presence of sunlight. The halons, which are compounds of bromine, also play similar role, as is played by the CFC's in depleting ozone; but their use in industrial world is very limited. Hence, when we speak of ozone depletion, we generally speak of CFCs only.

The first appreciable ozone depletion was noticed in the antarctic region (south polar region) in 1985. This depletion has been quite noticeable, particularly in the late winter and early spring. As much as 50% ozone loss has been noticed at the worst periods, in the antarctic region. Countries of this region, like Australia and Argentina have recorded increased incidence of skin cancers, which are curable only if detected early. People in these countries are advised to avoid sun-bathing during the particular periods, when ozone depletions are appreciable. Even in New Zealand, school children are advised and urged to stay out of sun between 10 AM to 3 PM, and to wear hats and eat their lunches in the shades of trees, to avoid sun exposure.

Initially, it was thought that the ozone shortage may be existing only in the colder antarctic region (south polar region); but later on, ozone depletions were confirmed even in the less cold arctic region (north polar region), detecting an overall 4 to 8% ozone depletion over the northern hemisphere in the last 10 years. Latest collected data further imply that the ozone layer over some regions, including the northern-most parts of the U.S., Canada, Europe and Russia, may deplete in the late winter and early spring, by as much as 40%. If such a huge ozone hole does not open up in a particular year, it may open up, say a few years later. The threat is much worse than what was thought of, initially. The countries situated south of 60° N latitude, are most

the above zone are : *Canada, British Isles, Scandinavia, the Netherland, large part of Belgium, Germany and Russia. All these countries may, thus, have to face ozone alerts and stern warnings to wear sun glasses and sun screens, in the coming future.*

Evidently, the polar regions are more prone to ozone depletions, because polar vortex* collects dust particles, CFC's, etc. and the super frigid night air of the polar region, causes the formation of tiny ice crystals high up in the stratosphere. When the CFC's breakdown, the resulting chemicals cling to the crystals, where they can decompose further into ClO, etc., And finally, when the sun rises after the long winter night, its light triggers a wholesale demolition of ozone by chlorine monoxide.

Evidently, if the polar vortex breaks in a particular year, before the sun rises after month's of darkness to trigger the reaction, there will be no ozone hole in that particular year.

The extent of ozone in the stratosphere has usually been found to be of the order of 3.5 mm to 2.5 mm in thickness; which is usually expressed in the units of Dobson. 1 Dobson Unit (DU) = 0.01 mm. The usual ozone thickness measured in the stratosphere thus, varies from 350 DU to 250 DU. The maximum ozone thickness of about 500 DU, however, is found just above the equator, while it is found to be of the order of 250 – 350 DU (average value = 300 DU) in the adjoining regions located between 15° to 60° latitude.

This usually available ozone thickness of 350 – 250 DU is, however, found to have decreased up to as low a value as about 150 DU in upper latitude colder regions, in and around the poles. *This phenomenon is noticeably found in the southern hemisphere at the start of spring season after long winters in about September.*

The falling of ozone thickness to this low level of about 150 DU, indicates alarming shortage of ozone, resulting in the creation of ozone hole. The ozone hole is getting bigger and bigger due to increasing concentrations of CFCs in the environment. The maximum area covered by the ozone hole (ozone concentration of the order of 150 DU) in the southern hemisphere was found to be about 29.4 million sq. km, and occurred in Sept. 2000. According to a recent announcement made by U.N. World Meteorological Organization (WMO), the area of the ozone hole has been measured to have very slightly increased to 29.5 million sq. km on September 25, 2006.

The scientists are now also becoming aware of the possible link between ozone depletion and climate change due to global warming. The increased concentrations of GhGs** leading to warmer climate at the Earth's surface, infact causes cooling effect at altitudes where the ozone layer is found. This cooling of the stratosphere (or ozonosphere) enhances the chemical reaction that destroys the ozone, leading to further ozone depletions. At the same time, the amount of water vapour in the stratosphere has been found to be


*A huge air mass, trapped for months at a time due to the blowing of winds in circular pattern over the ocean (surrounding the continent) formed.

increasing at the rate of about 1% per year. *A wetter and colder stratosphere means more polar stratospheric clouds, which is likely to lead to more severe ozone loss in both polar regions.*

Chlorofluoro carbons (CFCs), as pointed out above, are the chief agents of ozone destruction. They are largely used and subsequently released in modern world, in refrigeration, air-conditioning, fire extinguishers, as cleaning solvents in factories, as blowing agents to create certain kinds of plastics foams, and are spewed into the air in several countries as part of aerosol sprays.

These inert CFC's do not disintegrate in the lower atmosphere, and do rise several kilometres up into the stratosphere, where they release chlorine atoms in the presence of sun light.

Each chlorine atom from CFC's then reacts with an ozone molecule, forming ClO, as :



The ClO so formed, then reacts with another oxygen atom to form a new oxygen molecule and a chlorine atom. *The chlorine atoms, thus, replenished, can go on to break apart thousands and thousands of more ozone molecules, leading to large scale ozone deficits.*

Each atom of chlorine, infact, it is estimated, can destroy up to 1 lakh ozone molecules—at a faster rate than the gas is replenished naturally.

Unusually high concentrations of 1 to 1.5 ppb (parts per billion) of ClO*, found in the antarctic region, have confirmed that ozone depletion is certainly caused by CFCs. Naturally occurring nitrogen oxides in the environment, however, have been found to be helpful, as they tend to interfere and slow down the ozone-chlorine reactions.

What is most frightening about CFC's is that they remain in the atmosphere for decades, after they are first emitted. They are, infact, estimated to live for 100 years or even more.

This extraordinary long life of the already emitted CFC's poses a grave threat to the humanity, even if we reduce or stop their emissions in the coming future. But then, we have to wake up as quickly as possible, and stop CFC's usage, at least in the future.

Fortunately, India has thrown very less** CFC's in the world's environment, and the developed countries are the chief culprits on this account, Indians have started using the comforts of CFC's very late, and that is why, India initially refused to sign the Montreal Protocol*, which aimed at complete phasing out of the CFC's by the year 2000, and to change over to the

*World recorded concentration of ClO.

**Annual per capita CFC consumption in India had been only 0.0008 kg, as against 1

use of their costly substitutes. India's, well understood argument was that the developed countries, who had been largely benefitted in the past by the use of CFCs, must contribute and compensate the under-developed countries, for enabling them to change over to the use of costly CFC substitutes (which don't wipeout ozone). Why should poor nations like India, be forced to bear the cost of the mistakes committed by the developed countries, was the argument given by Indian politicians and diplomats. The Indian stand did force the developed world to agree to create a 240 million dollar special fund, to help developing nations switch to CFC-free technology, based on HCFCs (Hydro Chlorofluoro carbons)*, patented by DUPONT of U.S. USA, though initially not agreeing to ozone-aid, had finally bowed down to contribute 25% of the above fund on the condition that this will not become a precedent in solving other environmental issues. India finally signed this treaty on 17.09.1992.

U.S., Japan, and Europe, however, still need to set up a large separate fund to help the erstwhile Soviet Union and other east European countries, to wean them away from the CFCs. That will be difficult to do, during the existing hard economic times, but what is the alternative? No price is too high to protect the irreplaceable global atmosphere, shared by East and West, by south and North.

19.2.1. Montreal Protocol—An International Treaty for Controlling Global Ozone Depletion. Considering the very fact that the ozone depletion has been proved to be the most dangerous and dreaded global environmental problem, the international community became active to provide some international legal bindings on various countries of the world to prevent them from producing and using Ozone Depleting Substances (ODSs). Keeping in view the harmful effects of CFC's and halons to the ozone layer, and the health threats of ozone depletions, as expressed and proved by the scientific community, the representatives of certain developed countries met in 1985 to adopt the Vienna Convention, which, established an international legal frame work for action. Two years later, in 1987, the international negotiators met again in Montreal, to adopt some legally binding commitment, wherein the Montreal Protocol was adopted on 16.09.1987. This was followed by Helsinki meet in May 1989, and London conference (called Saving the Ozone Layer Conference) held in June 1990, to bring in certain amendments in the original protocol. The amendments made to the original protocol were called the London Amendments.

In order to persuade more countries to join the Montreal Protocol, the London Conference was followed by Copenhagen Meeting held in November 1992. Based on the decisions taken, certain amendments were again made in the Montreal Protocol, which were called the Copenhagen Amendments.

*HCFCs have an ozone depletion potential (ODP) of less than 1.

India signed the Montreal Protocol on 17.09.1992, about 2 months prior to the holding of the Copenhagen Meeting, when U.S.A. agreed to contribute 25% of the amount set out for creating a special fund worth 240 million dollars, to help developing nations switch to CFC-free technology based on the use of HCFCs (Hydro-chlorofluoro-carbons) patented by DUPONT of U.S.A.

In this Copenhagen meeting, the developed countries agreed to phase out the use of CFCs by 1995. It was also decided that there will be no compulsion of phase out time schedule for CFCs and Halons for the developing countries. India, by then, has signed the Montreal protocol and became a party to this protocol on September 17, 1992. It was required to phase out CFCs and other ODSs completely by 2010.

More amendments have also since been carried out twice in the Montreal Protocol, based on the meetings held in Montreal in 1997, and Beijing in 1999.

Beijing Amendments, however, could only be ratified by the minimum required number of countries (i.e., 20) only on 22.11.2001. The Beijing Amendments, thus, came into force w.e.f 25.02.2002, 90 days after the ratification instruments of 20 countries were deposited.

At present, 183 nations have become parties to the Montreal Protocol. A list of these countries, which have adopted and signed the Montreal Protocol is given in Appendix Table A-10 at the end of this book.

The salient points of the final revised treaty are indicated below :

- (i) The Protocol requires all parties (signatories to the treaty) to ban exports and imports of HCFCs (Hydrochloro fluoro carbons) i.e. substitutes to CFCs, to and from Non-Parties. This was adopted through Beijing Amendment effective from 25.2.2002.
- (ii) Production and consumption of CFCs, halons, and other ozone depleting chemicals have been phased out in industrialised countries. A time schedule to eliminate the use of methyl bromide, a pesticide and agricultural fumigant, is in place. Developing countries have been given a different phase out schedule to give them enough time before phase out measures would apply to them. This has been done by recognising their need for industrial development and their relatively small production and use of ODSs ;
- (iii) Developing countries have agreed to freeze most CFC's consumption as on July, 1, 1995 based on 1995-98 averages ; to reduce this consumption by 50% by Jan 1, 2005, and to fully eliminate these CFCs by Jan 1, 2010. Other control measures apply to ODSs, such as halons, carbon tetrachloride, and methyl chloroform. For methyl bromide, used primarily as fumigant, developed countries are to freeze their consumption at 1995 levels and will eliminate all use by 2005; while the developing countries have committed to freeze consumption by 2002 (based on average 1995-98 consumptive levels) and will eliminate all use by Jan 2015. The control measures are summarised in table 19.2 below :

Table 19.2. Control Measures as Agreed to in the Montreal Protocol

Substance	For Developed Countries		For Developing Countries	
	Consumption Freeze	Phase out	Consumption Freeze	Phase out
Chlorofluoro-carbons (CFCs)	1 July 1989	1 Jan., 1996	1 July 1999	1 Jan., 2010
Halons	—	1 Jan., 1994	1 Jan., 2002	1 Jan., 2010
Other Fully Halogenated CFCs	—	1 Jan., 1996	—	1 Jan., 2010
Carbon Tetra-chloride	—	1 Jan., 1996	—	1 Jan., 2010
Methyl Chloroform	1 Jan., 1993	1 Jan., 1996	1 Jan., 2003	1 Jan., 2015
Methyl Bromide	1 Jan., 1996	1 Jan., 2005	1 Jan., 2002	1 Jan., 2016
Hydrochlorofluoro-carbons (HCFCs)	1 Jan., 1996	1 Jan., 2030	1 Jan., 2016	1 Jan., 2040

Through the Beijing amendment, it was also agreed that the consumption and production of bromo-chloro-methane, which is an industrial solvent and a fire extinguisher under the name of Halons-1011, shall also be monitored.

19.3. Global Warming and Climate Change—A Global Environmental Challenge

During the past few years, Earth's climate has been noticed to be getting hotter and hotter, year after year. Say for example, in 1987, Stockholm had the warmest winter in 230 years; France had the hottest May ever recorded; Spain and Southern Italy sweltered under seemingly endless summer heat wave; Britain baked in the summer and bashed in winter during an unusually warm dry air. In the U.S.A., when one of the century's worst heat wave gripped the East coast and desiccated the Midwest in 1988, the scientist declared that the green house effect is changing our climate.

Green house gases* in the lower atmosphere, act like the glass of a green house, trapping some of the heat, as it radiates back from the Earth in to the space. Such gases and their heating effects, have in fact, survived life on Earth, as otherwise, temperature on Earth could well have been below freezing, like that on Mars. Excessive quantities of these gases, evidently, may cause excessive heat, again to make life impossible, like that on Venus, where CO_2 is found 60,000 times than that on Earth, giving it as high a temperature as 425°C .

*Carbon dioxide is considered to be the major green house gas, as it is responsible for about 60% of the total green house effect caused by all the green house gases. Other green house gases are: CH_4 , NO , chloro-fluorocarbons, per fluoro carbons, sulphur hexafluoride, and some other 26 gases. Although CH_4 produces about 21 times more heat than CO_2 , NO produces 300 times more heat than CO_2 , and chlorofluorocarbons produces 3500–7500 times more heat than CO_2 , yet CO_2 is chiefly responsible for increasing the heat on Earth, because of its largest quantity (it is about 300 times more than CH_4 in the air, as compared to NO and chlorofluorocarbons).

The continuous excessive burning of fossil fuels (coal, oil and natural gas) and large scale deforestation of forests (which absorb CO_2) by humans have increased the carbon dioxide gas in the atmosphere from an average annual value of about 316 ppmv (parts per million by volume) in 1959 to about 382 ppmv in 2008 giving an average increase of about 1.33 ppmv per year, during the 48 years period; with the largest single yearly jump of 2.87 ppmv recorded in 1997-98. The total increase of about 20% (in 50 years) gives an average increase of about 4% per decade (10 years period) or 0.4% per year.

The above mentioned values of carbon dioxide gas concentrations in the atmosphere have been taken from the values derived from insitu samples collected at Mauna Loa Observatory, Hawaii island, where the longest records of monthly and annual average values of carbon dioxide concentrations have been maintained since 1959. Because of the favourable site location, continuous monitoring and careful selection and scrutiny of data, the Mauna Loa record is considered to be precise and a reliable indicator of the regional trends in the concentrations of atmospheric CO_2 in the middle layers of the stratosphere. These observed values at Mauna Loa, for the last 48 years, are plotted in Fig. 19.5.

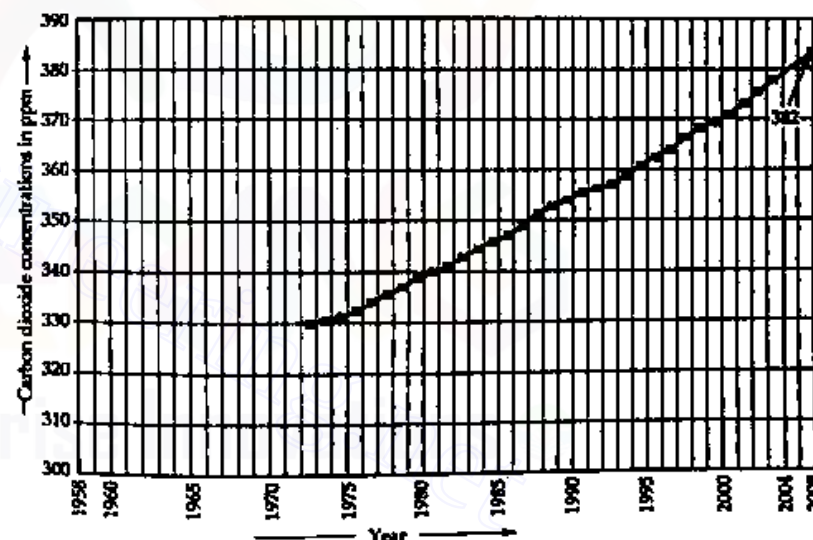


Fig. 19.5. Recorded mean annual values of atmospheric carbon dioxide at Mauna Loa Hawaii Island.

As a matter of fact, the excessive burning of fossil fuels has not only increased CO_2 gas in the atmosphere, but has also increased NO_2 in the air. Similarly, large scale decomposition of organic matter in swamps, rice paddies, livestock yards, cattle raising, etc. is estimated to have increased methane (CH_4) gas in the atmosphere.

The presence of CFCs, another green house gas, has also increased due to our modern life style of using refrigerators, air-conditioners, sprays, etc. An around increase in green house gases in the atmosphere, caused by large

scale industrial developmental activities, has already increased the heating effect on Earth, which is further likely to increase with the passage of time, with its consequential adverse impacts of melting of glaciers, rising of sea levels, and large scale changes in climate around the world.

A report written by more than 250 scientists and published in November 2004, on "The Arctic Climate Impact Assessment" has sounded alarm bells for the region. This report has brought out that the *Ilulissat glacier* in Greenland, the region. This report has brought out that the wonders of the world, has shrunk by a U.N. heritage site, considered one of the wonders of the world, has shrunk by over 10 km in just two to three years, after having been relatively stable since the 1960s, due to alarming effects of global warming in the Arctic region. This report has warned that in less than a century from now, the Arctic ice could melt completely during the summer, threatening many species and lifestyles of indigenous Inuit population.

The environmental scientists are, therefore, worried over the future prospects of global warming, and are making cautioning sounds to stop or to reduce activities, which may lead to emissions of increased green house gases into our biosphere.

Studies have, in fact confirmed that during the last 100 years, the Earth's temperature, on an average, has increased by 0.75°C . Due to this heating, the water level of oceans has gone up by 150 mm (15 cm) partly due to thermal expansion of water volume contained in the world ocean and partly due to melting of glaciers, giving an average sea level rise of 1.5 mm/yr over the last century. This rise, however, is found to be about 1.7 mm/year during the last about 50 years, and about 3 mm/yr during the last decade. This continuing and increasing global warming may also cause glaciers and ice caps of polar regions to melt, which will further contribute to the water volume contained in oceans. It has been estimated that uncontrolled global warming may cause the Earth's temperature to increase by 4 to 5°C during the next about 200 years (as against the present rise of 0.8°C above the pre-industrial years), which will melt all the polar ice caps and glaciers, leading to rise in sea levels by as much as about 7 metres (23 feet), submerging several island countries and low lying coastal regions.

A study carried out in 2000 by Gordon McGranhan of the U.K.-based International Institute for Environment and Development and others have estimated that *Low Elevation Coastal Zones (LECZs)* that are less than 10 metres above the current mean sea level include an area of about 2% of the world's total land area, and about 10% of the world's total population. About 55% population of Vietnam, 46% of Bangladesh, 38% of Egypt, 26% Thailand, 18% of Philippines, 11% of China, and 8% of India is found to be living within 10 m LECZs. All these LECZ areas are threatened by global warming.

Globally, 1998 was the warmest year, successively followed by years 2005, 2003, 2002, 2004, 2006, 2001, 1997, 1996, 1999, 1990, and 2000. These were the 12 warmest years, since the year 1700. Due to increased temperatures, many of the countries of the world have experienced increase in rainfall. This has especially been noticed in the countries situated in mid-high latitudes. Thus, while increased rainfall has occurred in some

in some other countries, such as in parts of Asia and Africa. All these incidents clearly reflect that the *Earth's climate is changing*, which will make it more difficult for humans to survive. The nature, in fact, is losing its equilibrium due to the imbalances created by unchecked human activities.

Future impacts and climate changes have also been assessed by IPCC* on the basis of a series of experiments made by computer based global climate models. These also account for factors like future population growth, and energy use. These studies and assessments have shown that the Earth's temperature is likely to rise by about $0.2^{\circ}\text{C}/\text{decade}$; which rise can be reduced to $0.1^{\circ}\text{C}/\text{decade}$ if the concentrations of all the GhGs is kept constant at the level of year 2000. This eventually means that if GhGs emissions continue to evolve at the current rates, then a 2°C further rise in temperature is expected during the 21st century (2001–2100). Since the temperature has already risen by about 0.8°C from the pre-industrial temperatures, the Earth's temperature by the year 2100 may go up about 2.8°C and water level of oceans by about 60 cm. The consequences of any further increase of temperature may be imagined by knowing the fact that about 1.25 lakh years ago, the Earth's polar temperatures were about 3.5°C higher than they are at present, mainly because of the differences in the Earth's orbit, which reduced the polar ice caps, leading to 4–6 m rise in sea levels. The catastrophe likely to be caused by the rising sea levels may be gauged by the fact that more than half of the world's population lives within 60 km of the seas. They are likely to be seriously affected by the submerged land and ingress of salt water, due to rising sea levels. Some of the most vulnerable regions to these impacts are the Nile delta of Egypt, the Ganges and Brahmaputra deltas in India and Bangladesh, and many small island countries including the Marshall islands and the Maldives.

Human society is also likely to be seriously affected by the changing climate, which will increase floods and droughts. The rainfall is likely to increase in higher altitude areas and decrease in lower levels. There will be increased frequency of droughts across the world. The frequency and intensity of tropical cyclones will increase with increase in the associated wind speeds and heights of storm surges. There will be more warm nights and fewer cold ones. The increasing retreat of glaciers will reduce the summer seasons streamflow in perennial rivers, causing shortage of water during summer seasons. A changing climate would bring about changes in the frequency and/or intensity of these extremes. The public health, to a large extent, depends upon factors such as safe drinking water, adequate food, secure shelter, and good climatic conditions, etc; and since all these factors are likely to be affected by the changing climate, it will seriously affect public health.

*IPCC (Intergovernmental Panel on Climate Change) is an intergovernmental body constituted in 1988 by the World Meteorological Organisation (WMO) and the United Nations Environmental Programme (UNEP), to assess the role of human activities in Nations Environmental Programme (UNEP), to assess the role of human activities in climate change. This body, at present, is headed by Dr. H.K. Pachauri, Director General TERI, New Delhi, INDIA. The IPCC is the co-winner of Nobel Peace Prize, 2007 alongwith Mr. Al Gore, for leading a campaign against global

The changing climates may reduce the availability of clean water reqd. for drinking and washing during droughts as well as floods. Water may possibly be contaminated and sewage systems damaged. The risk of spread of infectious diseases such as diarrheal diseases is likely to increase. Food production may be adversely affected in vulnerable regions directly due to warmer weather, and also indirectly through the increase in pests and plant or animal diseases. The local reduced food production may lead to starvation and malnutrition with long term health effects, especially for children. Food and water shortages may lead to conflicts in vulnerable regions. Climate change related impacts on human health may lead to large scale migration and displacement of a large number of people, creating environmental refugees, thereby disturbing international peace. Changes in climate may also increase the spread of vector born species, such as mosquitoes, which in turn, may increase the spread of diseases, such as malaria, filariasis, dengue, yellow fever, etc. All in all, severe climate changes may adversely affect human health quite severely, leading to large scale death and destruction.

The evil effects of the projected temperature increase of about 4°C by the year 2150, may be gauged by the simple estimate that about 1.6 million years ago, the Earth's temperature was about 5°C less than that of the present, and at that time—there used to be snow and snow all around. What will happen to our life, if the reverse happens, is any body's guess, but surely alarming.

In totality of the circumstances, and in view of the latest findings on melting of Arctic ice during the last 2 to 3 years, it can be concluded that the build up of green house gases is surely a cause for caution to take effective measures for reducing emissions of green house gases into the atmosphere besides identifying and implementing engineering measures to save low island States, to counteract the impacts of rising sea levels.

There is certainly no denying the fact that there exists an urgent necessity of reducing our consumption of fossil fuels, which even otherwise, is an exhaustible resource. What will happen after about 200-500 years, when all stocks of these fossil fuels get exhausted, is any body's guess. Another interesting question that one may ask in this context, is : as to what will happen to the Earth's temperature when we completely stop burning fossil fuels, as and when they become unavailable ; will the old cold icy conditions return on the Earth ?

19.3.1. Kyoto Protocol—An International Treaty to Control Global Warming and Climate Change. In order to discuss global warming and to initiate measures for reducing the green house gases in the atmosphere, an international conference was held during December 1 to 10, 1997, in Kyoto, an ancient capital of Japan.

On the last day of this conference an agreement was drawn on 11.12.1997, which was committed by the delegates of several countries. Under this agreement, many industrialised countries committed to a legally binding overall reduction of 5.2% in green house gases emissions below 1990 levels, by 2008-2012. Under this agreement, Japan was to reduce its emissions of green house gases by 6%, and the European Union (EU) by 8% by 2008-2012. It would be pertinent to mention here that India and China categorically

rejected the ideas of controlling their emissions of green house gases by preventing their growths and industrial developments. Both these countries suggested that the issue was too complex to be rushed through. USA also refused to accept this protocol.

Although several countries agreed and signed the initial agreement, called the Kyoto Protocol, it could not come into force for about 8 years, since it could not be ratified by the minimum required 55 countries. Inspite of the fact that United States, which alone accounts for 30% of the world's green house gases (primarily carbon dioxide gas)*, has not ratified the Kyoto Protocol, the protocol has come into force wef 16.2.2005, 90 days after the Russian ratification.

This protocol has been drafted keeping in view the fact that in today's carbon based, gas-guzzling global economy with few real alternatives, the fear is that reducing carbon emissions even by 5% might have drastic economic consequences. The flexible mechanism that has been built into the protocol is two fold ; viz (i) it is a case of Joint Implementation (JI), where the industrialised "Annex 1" countries can trade emissions (known as carbon trading) with each other ; and (ii) there is a provision of Clean Development Mechanism (CDM), whereby the industrialised nations can claim certified emission reductions from developing countries. The provision of CDM is built to encourage the industrialised nations to transfer technology to the developing countries that would reduce carbon emissions in those countries.

To explain as to how this is possible under CDM, let us consider an industrialised nation 'A', who finds that it is not able to meet its emission reduction target. It would then invest in a project in a developing country 'B', in a way that the project would reduce carbon emissions to a greater degree than in the normal course in country 'B'. What it means is that a high emission establishment working in country 'B', would be replaced by a low emission establishment with the financial and technological assistance provided by the industrialised country 'A'. The carbon saved in this manner can be claimed by country 'A' as its own emission reduction. In this way, the country 'A' can meet its target of reducing carbon emissions at a cheaper cost, since the developing economies tend to be cheaper.

The said trading of carbon dioxide emissions has come to be known by the name of carbon trading. One carbon credit or carbon point or certified emission reduction (CER) is equivalent to the reduction of one tonne of carbon dioxide gas (CO₂). These carbon points are being earned by organisations

*The annual per capita emission of carbon dioxide gas by U.S.A. is infact considerably higher than those of other countries, as shown below :

Country	Annual per capita CO ₂ emission in tonne
U.S.A.	20.01
Russian Federation	11.71
Japan	9.87
European Union (E.U.)	9.40
China	3.60
India	1.02

located in Third world countries, and traded with the developed countries at a good enough price. The price of one carbon credit in August 2008 in the international market was as much as 12-15 Euros; which has however, gone down to about 5 to 6 Euros at present in December 2011 due to uncertain future of the CDM route. Since the developed countries, who have to reduce their emissions, cannot do so of their own, they buy such certified carbon credit points from the developing countries. In this way, carbon credit points are being traded like the shares or units of a stock exchange, and brokers have started buying and hoarding the carbon points, to be sold when their price increases.

Many organisations and companies located in the Third world countries are, hence, earning carbon points by shifting to environment-friendly technologies and practices, such as: by reducing use of cement in concrete by using fly ash; or by adopting non-polluting energies like wind or solar energy to replace the thermal power that uses fossil fuels; or by providing mass transportation to replace the individual cars; or by adopting regenerative technology in trains that may save as much as 30% energy each time a break is applied; or by producing power from wastes by using the green house gases (CH_4 and CO_2) produced from a sanitary landfill for power generation; or by using energy efficient appliances including the use of CFL's (compact fluorescent lamps) in place of normally used incandescent lamps (bulbs); or by developing forests; etc.

Several companies, corporations and Private Equity (PE) investors such as Goldman Sachs, DEG Germany, Basemir Venture Partners, IDFC Private Equity, Olympus Capital, etc.) have entered or are trying to enter into such ventures to earn money and help reducing environmental pollution. However, the process of applying for and obtaining sanctions for the carbon credit projects is a time consuming process, because, first of all, a project needs approval from the Designated National Authority (DNA), which in India, is the Ministry of Environment and Forests (MoEF). The proposal is then to be sent to an international body—the UNFCCC's CDM Methodology Panel, which would ensure that the project protocols follow the approved methodology. Following this approval, the CDM Executive Board has to approve the project for its registration. Even after the registration of a project as a CDM project, the verification and auditing by independent agencies called the Designated Operational Entities (DOEs) will continue during the implementation phase of the project. The DOEs are the accredited agencies that monitor the projects, like the ISO (International Standards Organisation) and certify that the carbon savings have indeed taken place.

The CDM route, thus, surely earns profits, but is a complex, costly, and time consuming process. Still, however, many organisations are chasing this route, and several multinational consultants like the Cantor CO_2 , India Pvt. Ltd., Emergent Ventures India; etc. have come up to get the approvals accelerated. So far, India has already earned 46 million carbon credits (through 354 approved projects), as against 166 million carbon credits earned

by the entire world (through 1121 approved projects). Our earned carbon credits are just second to China.

It is the CDM that gives India an opportunity to attract foreign direct investments (FDIs) for replacements of its old high CO_2 emitting plants with low emission-high technology plants, since India, though a signatory to the Kyoto protocol, is not yet supposed to reduce its own emissions.*

However, since the Kyoto Protocol is valid only up to the year 2012, there is no guarantee of the continuation of the CDM route beyond the validity date of the Kyoto Protocol.

As a matter of fact, the international community has already started revisiting and reconsidering the entire issue of global warming to chalk out new measures for controlling emissions of GHGs. Accordingly, a 2 week summit was held at Copenhagen (the capital of Denmark) during Dec. 7-18, 2009, which was attended by the representatives of 192 U.N. member countries and several NGO's from over the world. Heads of more than 100 countries also attended the summit on the last two days to work out some viable treaty. This convention was the 15th Conference of Parties (COP) under UNFCCC.

There were heated debates in this summit, and no consensus could be reached. The 40 odd small island countries, who are most threatened by the future warming, wanted imposition of severe legally binding emission cuts, as to limit the warming of the Earth to 1.5°C over the pre-industrial years. The fast growing developing countries like India and China were against the imposition of any legally binding cuts on them, since they have to develop the living standards of huge portions of their undeveloped populations, and on the plea that their per capita emissions are quite low and that they are not responsible for the past emissions, which were generally released by the developed countries. The USA (not a signatory to Kyoto Protocol) was not too well disposed towards the Kyoto Protocol; and it was pointed out that many of the Annex-1 countries have not fulfilled their commitments under the said protocol.

Ultimately, the President of the USA, supported with several European and other countries, was able to forge an agreement with the group of four major developing countries, consisting of Brazil, South Africa, India, and China (together termed as BASIC countries) on the last hours of the summit. This agreement was termed as the Copenhagen Accord.

The salient provisions of this non-binding political Copenhagen Accord are listed below:

- (1) The global rise of temperature shall not be allowed to go above 2°C . In order to achieve this aim, the emissions of GHGs will have to be checked.

*It may however, be pointed out that although per capita carbon emissions of India is very low, yet due to its huge population, it becomes the 5th largest emitter of GHGs (Green house gases) in the world, behind China, USA, Russia and Indonesia. It is only because of its "developing country" status, and the fact that its per capita emissions of GHGs is low, that India has presently been spared from reducing its emissions; but this may not continue for too long, and ultimately, pressures will come from the international community on India for reducing its own GHGs emissions, irrespective of its per capita

for which there exists a common but differentiated responsibility to be born by various countries.*

- (2) The Accord speaks in favour of peaking of the carbon emissions as soon as possible, but recognises that the time frame for peaking for the developing countries will be longer.
- (3) A *Copenhagen Green Climate Fund* shall be created by contributions from the developed countries to support and finance the mitigation (control of emissions) and adaptation (bearing the impacts) measures of the developing countries. Initially, \$ 30 billion shall be provided collectively for the period 2010-2012, and the funding will rise to \$ 100 billion per year by 2020. Both the mitigation and adaptation measures shall be funded almost equally, although the adaptation funding shall be prioritized for the least developed and small island countries, and Africa. The Accord also decided to provide support to forestry, including reforestation and forest preservation. The developing countries with low emission economies shall also be provided incentives.
- (4) The developed countries who are Annex-1 parties to the Conference shall continue their emission control measures, and the targets for 2020 shall be intimated either individually or in groups in a specified format by 31st January, 2010.** The Annex-1 parties that are already parties to the Kyoto Protocol will, thus, further strengthen the emission reductions initiated by Kyoto Protocol. These emission reductions shall be measured, reported and verified in accordance with the existing or new guidelines adopted by the COP, and that there will be rigorous, robust and transparent accounting of the targets specified for emission control as well as for financing to be provided by these developed countries.
- (5) The Non-Annex-1 parties to the Convention shall give their emission targets in a given format by 31st January, 2010***. The least developed countries and small Island developing States may undertake actions voluntarily or on the basis of international support. The mitigation actions taken by non-annex-1 parties shall be subject to their domestic measurement and verification, and shall be reported to UN every 2 years with provisions for international consultations and analysis under clearly defined guidelines that will ensure that national sovereignty is respected. The mitigation actions undertaken with

*This is due to the fact that the developed industrialized countries, who have already occupied the environmental space with their past releases of GHGs, need to do more for initiating and implementing mitigation (control of emissions) and adaptation (bearing the impacts of released GHGs) measures.

**The emission targets already specified during the Copenhagen discussions include : 25% emission cut by Japan by 2020 below 1990 level, 20%—30% cut by European Countries (EU) by 2020 below 1990 level, and 17% cut in emissions by USA (not a Party to Kyoto Protocol) by 2020 below 2005 level.

***The voluntary target cuts already given during the summit included : 40—45% cut in carbon intensity i.e. cut in carbon emission rate and not in total carbon emissions by China by 2020 below 2005 level (about 2.8/1000 tons).

international support/finance shall, however, be subject to international measurements, reporting and verification.

- (6) The Accord also decides to pursue approaches including market opportunities to enhance cost effectiveness and to promote mitigation actions. This hints at continuation of carbon markets.
- (7) The Accord decides to establish a *green technology mechanism* to accelerate technology development and transfer for adaptation and mitigation of global warming based on circumstances and priorities of different Nations.
- (8) The Accord finally stipulates to assess the results of these actions by 2015, and to consider strengthening its long term goals for restricting the global temperature rise to 1.5°C.

Although this Accord was initially opposed by several developing countries, particularly the members of G-77 group and smaller island countries, but was accepted by some of them later, as a fate accompli. The continued opposition of this Accord by countries like Sudan, Cuba, Venezuela and a several others could not, however, permit the formal approval of the Accord. The COP15 was, thus, forced to merely "take note" of the Copenhagen Accord, without adopting or endorsing it.

The COP15, thus, in fact, ended with a lot of confusion, and left the world to continue discussions further, to work out details of various issues listed in this political accord, and to hammer out a generally acceptable legally binding treaty to control global warming.

The above mentioned Copenhagen accord has been followed by further discussions to decide on the future of Kyoto Protocol. A two weeks summit on the issue was held in Durban (South Africa), which ended on 11th December, 2011. After fierce discussions, the world seems to have agreed to extend the validity of the Kyoto protocol by another 5 years, and in the meantime to work out a "new legal regime" or "an agreed outcome with legal force". This new legal regime will legally bind all the countries (as against binding only the 37 industrialised countries under the Kyoto protocol) including the undeveloped or under-developed countries (including China and India) for reducing their emissions.

Such a new regime shall be implemented wef the year 2020, but will bind India to the legal bindings under the new regime, to be worked out in the coming years. This concession of pushing the new regime by 7-8 years could become possible by the forceful presentations made by China and India in the Durban Summit. This summit, however, decided to continue the emissions reduction initiatives started by the Kyoto Protocol, by agreeing to the continuation of the Kyoto Protocol for 5 more years. However, only after one day of the ending of this submit, Canada has decided to pull out of the Kyoto Protocol. It has been alleged that Canada along with Japan, Australia and other EU countries first tried to put an end to the Kyoto Protocol, and when it did not succeed, it has withdrew from this Protocol, particularly to avoid the \$13.6 billion penalty it would have had to pay for failing to meet the emission target that has been set for the next year. This conditional withdrawal is a big blow to the international efforts for containing climate change

The EU countries have still not left their opposition to the continuance of Kyoto Protocol, and are bent upon to move a draft of a new climate protocol containing target oriented *sustainable development goals* (SDGs), in the coming conference to be held in Rio (Brazil) from June 20, 2012. The EU countries want this new protocol to become effective wef 2012 itself, rather than continuing with the Kyoto Protocol upto the year 2020, as was earlier agreed to in the Durban submit. This new protocol, as the EU demands, will kickstart the processes to have a new global deal in three years that would bind India and other emerging nations to a similar level of legally binding commitments to reduce emissions while ignoring the principles of equity and differentiated responsibilities. India is likely to oppose this shifting stand of EU countries, which would set wheels in motion to end Kyoto Protocol even before the developed world provides its emission reduction targets under the 2nd phase of Kyoto Protocol, starting in 2013, as decided in Durban Summit.

Even if the Kyoto protocol gets extension, Indians should not forget that the climate changes likely to be brought in by the global warming will most badly impact their country due to increasing floods, cyclones, droughts, and water scarcity. Rich countries can always undertake preventive & adaptation measures, but it will be the poorer countries who will be the worst sufferers. A sleeping and lethargic approach from the Government on the issue may hence prove too costly for India in the long run.

PROBLEMS

1. Write detailed notes on any two of the following :
 - (i) Acid rains and their harmful effects on environment.
 - (ii) Ozone depletion and its dreaded effects on biotic as well as abiotic world.
 - (iii) Global warming and Green house gases.
 - (iv) Montreal Protocol
 - (v) Kyoto Protocol
 - (vi) Carbon trading and Clean Development Mechanism (CDM).

—20

Noise Pollution

20.1. Definition and Introduction

Sound in the environment is caused by vibrations in the air (or some other medium) that reach human ears and stimulate a sensation of hearing. When the sound becomes loud, or disagreeable, or unwanted, it becomes noise. Since the unwanted sound (i.e. noise) certainly produces several undesirable effects on our body health, it can be termed as an environmental pollutant. The Air (Prevention and Control of Pollution) Act 1981 of India, includes noise as one of the air pollutant.

Noise can, therefore, also be defined as that *unwanted sound pollutant, which produces undesirable physiological and psychological effects in an individual, by interfering with one's social activities like work, rest, recreation, sleep, etc.*

It may also be noted that when noise is defined as unwanted sound, then certainly it becomes a subjective definition, independent of the loudness of the sound, since a particular loudness may not be liked by one person, whereas the same loudness may be quite pleasant to another person. A particular sound being enjoyed by one person can, thus, become a noise pollution to another person.

The noise, as an air pollutant, in fact, differs from other pollutants in the sense that it is *transient* in nature, and is not a continuing or persisting phenomenon. When once the noise pollution stops, the environment becomes free of this pollutant, unlike other pollutants like gases and particulate matter, which continue to linger on, after once entering into the air atmosphere.

20.2. The Effects of Noise

The various effects of noise can be divided into the following categories :

1. Noise induced annoyance
2. Noise induced diseases
3. Sleeplessness
4. Communication interference
5. Noise induced hearing loss
6. Effect of noise on wild life.

These effects are discussed below :

(1) **Noise Induced Annoyance.** One of the most important effect of noise on humans is annoyance and irritation due to disturbance. A noise can be said

to be annoying when a person does not like the same, and hence wants the sound to be put off, or wish to leave the noisy area at the earliest.

(2) **Noise Induced Diseases.** Noise may produce several undesirable physiological and psychological diseases in human beings. These effects may vary depending upon the physical and mental condition of an individual. The diseases caused may include: anxiety, tenseness, nervousness, headaches, fatigue, nausea, insomnia, high blood pressure, high pulse rate, greater perspiration, gastric secretions, etc.

(3) **Sleeplessness.** The noise may induce sleep disturbances including shorter sleep durations, more frequent awakenings, etc. Sleep disturbances due to noise may depend upon the characteristics of the noise, such as its frequency, loudness (intensity), and continuity/intermittency.

(4) **Communication Interference.** Noise can badly disturb communication when a person is speaking on telephone; or when individuals are talking face to face. This may require greater speaking effort on the part of the speaker, and much more attentive care on the part of the listener, than what would have been needed, otherwise.

(5) **Noise Induced Hearing Loss.** Exposure of human ears to intense noise for a long enough duration may cause damage to the inner ear, thereby decreasing ones ability to hear. On lower scale, the damage may cause the individuals to complain of tinnitus in the ears, while longer exposure may lead to deafness/permanent loss of hearing.* It may be caused due to complete destruction of the organ of corti that transmits sound from ear to brain. WHO data suggests that around 5% of the school children suffer from varying degree of deafness. According to U.S. Public Health Service, more than 7 million people in USA are working where noise levels are high enough to damage hearing. No such data is, however, available for India, although noise is a major health hazard in industry, at airports, at railway stations, and at highways.

(6) **Effect of Noise on Wild Life.** Wildlife, like humans, is also badly affected by noise. Health of several zoo-animals, particularly those of deers, rhinos, lions, etc. are adversely affected by noise. They become inactive and dull under noisy conditions. Several migratory birds have stopped resting in habitats close to noisy cities. Musk-oxen, kangaroos, rats, grizzly bears have been noticed to have left their noisy habitats to move to calmer places. Such a change of habitat of wild life may sometimes alter their food habits, health, and mating behaviour, bringing about environmental imbalances.

The basic reason as to why 'noise' has so far not been regarded as a killer pollutant is the fact that so far noise has generally not exceeded to such levels, as to cause drastic adverse impacts on human beings. Except in industrial areas and big cities, noise pollution is not prominent, and hence has generally remained ignored from being treated as an environmental pollutant. However, with the increasing industrialisation and commercialisation of our society, and with consequential increase in noise producing auto-mobiles and machines, noise is becoming a slow poison, and is becoming more and more prominent as a pollutant. It of course remains an undisputed fact that several technological advancements, such as rapid transportation, labour saving

machines, and other recreational devices have been associated with increased noise production and consequential environmental pollution. But then the question arises as to whether we should accept the increased noise as a price for progress, or should shun the new technological advances all together to lead secluded life, or should devise and implement noise controlling techniques to avoid or reduce the adverse impacts of noise. So far we have been accepting the first choice, but we cannot continue with it much longer. The second choice of course may not be liked by anyone in the modern world, and, therefore, we are left with no other alternative but to choose the third choice of devising techniques for abatement and control of adverse impacts of noise. Before we discuss the suitable technology available to control different types of indoor and outdoor noises, it is essential to first understand the properties of sound including its tolerance levels, and the sources of noise including the degree of noise produced by all such sources.

20.3. Characteristics of Sound and its Measurement

By our knowledge of physics, we are aware that sound is produced in the environment by alternating pressure changes in the air, and is caused by the vibrations of solid objects or separation of fluids, as they pass over, around, or through holes in solid objects. These vibrations cause the surrounding air to undergo compression, then rarefaction, again compression, then rarefaction, and so on. Such alternating compression and rarefaction of the surrounding air produces sound waves which propagate in the form of sinusoidal path, as shown in Fig. 20.1 (a) and (b).

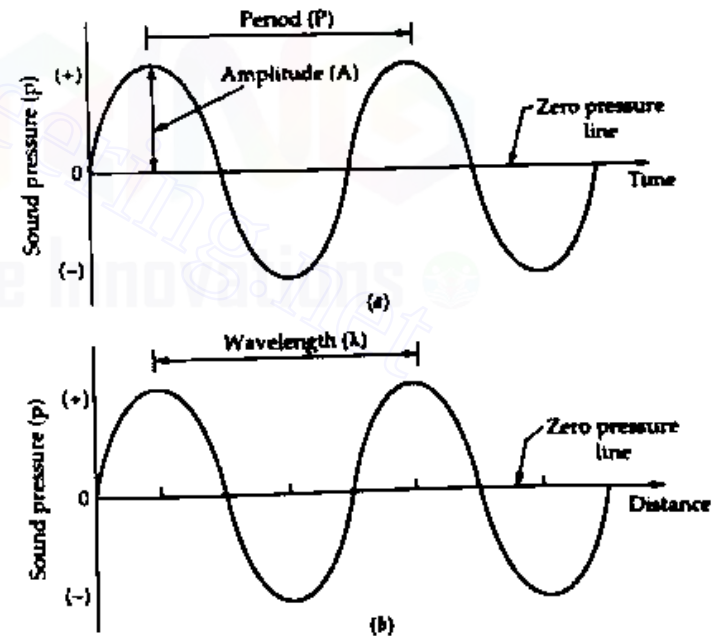


Fig. 20.1. Typical sinusoidal sound waves produced by alternating compression and rarefaction of air molecules

As indicated in Fig. 20.1 (a), the time between the successive peaks or troughs of oscillation is called the period (P), and its inverse, which represents the number of times a peak arrives in one second, is called the frequency (f). Hence

$$P = \frac{1}{f} \quad \dots(20.1)$$

Moreover, as shown in Fig. 20.1 (b), the distance between successive peaks or troughs is called the wavelength (λ), which is related to frequency (f) by the relation

$$\lambda = C \cdot \frac{1}{f} \quad \dots(20.2)$$

where C = the velocity of sound wave.

The amplitude (A) of the wave is the height of the peak sound pressure measured above or below the zero pressure line. The equivalent pressure of such a sine wave is represented by root mean square pressure (p_{rms}) as

$$p_{rms} = \sqrt{p_u^2} = \sqrt{\frac{1}{T} \cdot \int_0^T p_u^2 dt} \quad \dots(20.3)$$

where p_u = Pressure at any time t .

The r.m.s. sound pressure is, thus, obtained by adding the squares of amplitude values at small time intervals, and dividing the total by the averaging time, and finally taking the square root of the total. This works out

equal to $\frac{A}{\sqrt{2}}$ for a regular sine wave.

The sound pressure (p_{rms}) is further related to atmospheric pressure and barometric pressure by the equation

$$\text{Sound pressure} = \text{Total atmospheric pressure} - \text{barometric pressure} \quad \dots(20.4)$$

The power of sound (W) is defined as the rate of doing work by a travelling sound wave in the direction of the propagation of the wave. The energy transmitted by a sound wave in the direction of its propagation is thus, defined as its power, and is represented in watts in S.I. units.

In addition to sound pressure (p_{rms}), the sound intensity (I) is another important term which is used to measure sound. It is defined as the sound power averaged* over the time, per unit area normal to the direction of propagation of the sound wave. Intensity and power of a sound wave are related by the equation

$$I = \frac{W}{a} \quad \dots(20.5)$$

where I = Intensity of sound wave in watt/m²

W = Power of sound wave in watts (averaged over the time)

a = A unit area $\perp$ to the direction of wave motion.

Sound intensity (I) is further related to r.m.s. sound pressure by the equation

$$I = \frac{p_{rms}^2}{\rho C} \quad \dots(20.6)$$

where p_{rms} = r.m.s. sound pressure in pascals (Pa)

ρ = Density of air or medium in which sound wave is travelling in kg/m³

C = Velocity of sound wave in m/s.

The density of air (ρ) and the speed of sound (C) used in the above equation can be known if the temperature of air is known. In other words, given the temperature and pressure of air, the density of air can be determined from the standard tables; and the speed of sound in air at 101.325 kPa* may be determined by the equation

$$C = 20.05 \sqrt{T} \quad \dots(20.7)$$

where T is the absolute temperature in kelvin (K)

C is in m/s.

20.4. Levels of Noise

The sound pressure of the faintest sound that can be heard by a normal healthy individual is about 20 micro-pascal (μ -Pa). On the other hand, the loudest sound produced by a Saturn rocket at the lift off stage is about 200 Pa. This astronomical variation in sound pressure (varying from 20 μ -Pa to 200 Pa) is usually avoided by expressing sound pressure on a scale based on the log of the ratio of the measured sound pressure and a reference standard pressure. Measurements on this scale are called levels. The sound level (L) is, thus, represented as

$$L = \log_{10} \frac{Q}{Q_0} \text{ (bels)} \quad \dots(20.8)$$

where Q = Measured quantity of sound pressure, or sound intensity

Q_0 = Reference standard quantity of sound pressure, or sound intensity, as the case may be

L = Sound level in bels (B).

The unit of sound level obtained in Eq. (20.8) is bels (B), and since it turns out to be a rather large unit, a smaller unit of decibels (dB)** is generally used.

Hence, when sound level is expressed in decibels, the Eq. (20.8) reduces to

$$L \text{ in dB} = 10 \cdot \log_{10} \frac{Q}{Q_0} \quad \dots(20.9)$$

(i) The reference standard quantity Q_0 in the above equation is taken to be equal to 20 μ Pa, when sound pressure is measured. In that eventuality, Eq. (20.9) reduces to

*1 Atmospheric Pressure = 760 mm of Hg = 101.325 kPa

**1 dB = $\frac{1}{10}$ B

Sound pressure level (L_p) in dB

$$= L_p = 10 \cdot \log_{10} \left(\frac{p_{rms}}{20 \mu\text{Pa}} \right)^2 \quad \text{where } p_{rms} \text{ is in } \mu\text{Pa}$$

or
$$L_p \text{ in dB} = 20 \log_{10} \left(\frac{p_{rms}}{20 \mu\text{Pa}} \right) \quad \dots(20.10)$$

The sound pressure levels so measured are reported as dB re : 20 μPa .

(ii) Similarly, the reference standard quantity Q_0 in Eq. (20.9) is taken to be equal to 10^{-12} W/m^2 , when sound intensity level is measured. The sound intensity level is thus given as :

Sound intensity level (L_i) in dB

$$L_i \text{ in dB} = 10 \log_{10} \left(\frac{I}{10^{-12}} \right) \quad \dots(20.11)$$

where I is in W/m^2 .

Out of these two terms, i.e. sound pressure and sound intensity, sound pressure level on reference scale of 20 μPa , is usually adopted to express sound levels in decibels.

Note 1. It can thus, be seen that sound intensity varies as square of the sound pressure (rms of course)

Note 2. An increase of 20 dB in sound pressure level will correspond to the sound pressure (p_{rms}) or loudness of sound, increasing by 10 times.

Note 3. One dB is the faintest sound which can be perceived by human ear, and the maximum sound which can be tolerated by human ear is about 180 dB.

The co-relation of the two scales of sound measurement are shown in table 20.1.

A scale showing some common sound pressure levels is shown in Fig. 20.2.

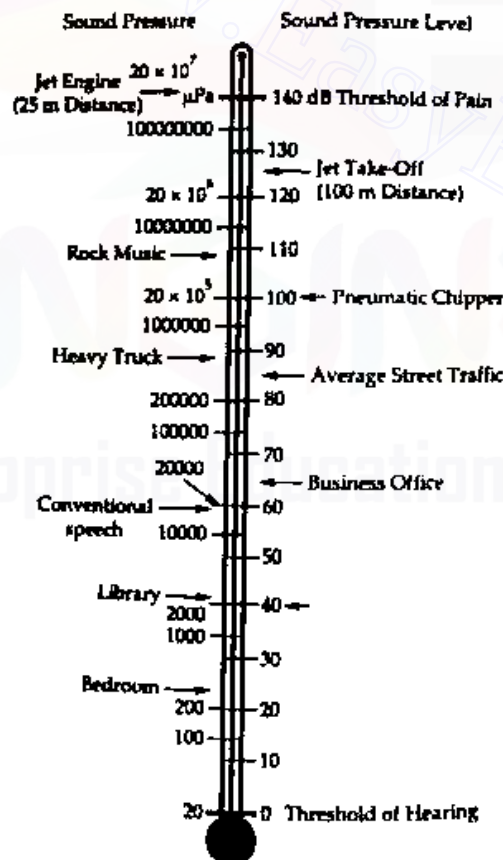


Fig. 20.2. Relative scale of sound pressure levels

Table 20.1. Co-relation of Sound Intensity, Sound Pressure and Sound Source

Sound Pressure Level dB (A)	Sound Pressure in μPa i.e. $\mu\text{N/m}^2$	Sound Intensity Level in W/m^2	Sound source
0	20	1×10^{-12}	Threshold of hearing
20	20×10^1	1×10^{-10}	Whisper
40	20×10^2	1×10^{-8}	Public Library
60	20×10^3	1×10^{-6}	Normal conversation at 1 m distance
80	20×10^4	1×10^{-4}	Loud voice
100	20×10^5	1×10^{-2}	Siren at 5 m distance
120	20×10^6	1	Pneumatic drill
140	20×10^7	100	Jet aircraft or Artillery fire

The addition of such sound levels cannot be done by simple arithmetic addition, because of the log scale involved. Hence, if you consider 50 decibel noise and want to add another 50 decibel noise, it will not make up 100 decibel noise, but will make up only 53 decibel noise, as calculated below :

$$50 \text{ decibel} = 20 \log_{10} \left(\frac{p_{rms}}{20} \right) \quad \text{where } p_{rms} \text{ is in } \mu\text{Pa}$$

$$\left(\frac{p_{rms}}{20} \right) = \text{Antilog} \left(\frac{50}{20} \right) = 316.227$$

or

$$p_{rms} = 6324.55 \mu\text{Pa}.$$

$$\therefore 50 \text{ decibel} + 50 \text{ decibel in r.m.s.}$$

$$= \sqrt{(6324.55)^2 + (6324.55)^2} = 8944.26 \mu\text{Pa}$$

$$= 20 \log_{10} \left(\frac{8944.26}{20} \right) \text{ dB} = 53 \text{ decibel. Ans.}$$

Although 'sound pressure level' mentioned above, gives a physical measurement of sound, yet it cannot be taken at face value as a perfect indication of loudness, because it does not account for the frequency of sound which has a lot to do with how loud a noise sounds to human ear. The frequency of noise, thus, becomes an important factor in measuring a sound.

The frequency of sound is defined as the number of vibrations per unit time, and its unit is hertz (Hz). One hertz is equal to 1 vibration per second. Although, humans can hear sound waves in the frequency range of 10 to 20,000 Hz*, but human ear is more sensitive to sounds of middle frequency (in the range of about 500 to 5000 Hz) as compared to the sounds of lower and higher frequencies in this audible range. Hence, while measuring the loudness of a sound, electronic filtering circuits (called weighting networks) are built into the sound pressure measuring meters, which filter out certain frequencies. Such circuits, therefore, permit the sound level meter to respond more to some frequencies than to others, with prejudice something like that of

*Many animals can hear sounds outside this range.

a human ear. Although three types of filtering circuits, i.e., A, B, and C types of are often used in sound meters, but A network is generally used in our day to day sound measurements. Hence, the measured sound in dB (decibel) is written as dB(A). The A-network largely filters out very low and very high frequencies below about 200 Hz and above about 10,000 Hz.

The measured sound, or strictly speaking sound pressure level, is usually represented by the symbol L_p . Thus, L_p at a place can be measured in dB (A) units, and may be represented by L_A . Different values of L_p will be measured at different times of the day, since the sound will vary throughout the day.

Characteristics of three weighting networks. As a matter of fact, very low frequencies are quite severely filtered out by the A network; moderately by the B network; and hardly at all by the C network. Therefore, if measured sound level on C network is much higher than that on A network, much of the noise is probably of low frequency.

Fig. 20.3 shows the basic characteristics of the three weighting networks (i.e., A, B and C). When such a network is used, the sound level meter electronically adds or subtracts the number of dB shown at each frequency in table 20.2 from the actual sound pressure level at that frequency. It then sums up all the resultant numbers by log addition to give a single reading. The readings taken on different networks A, B and C are designated as dB(A), dB(B), dB(C) respectively. They may also be notated by L_A , L_B and L_C .

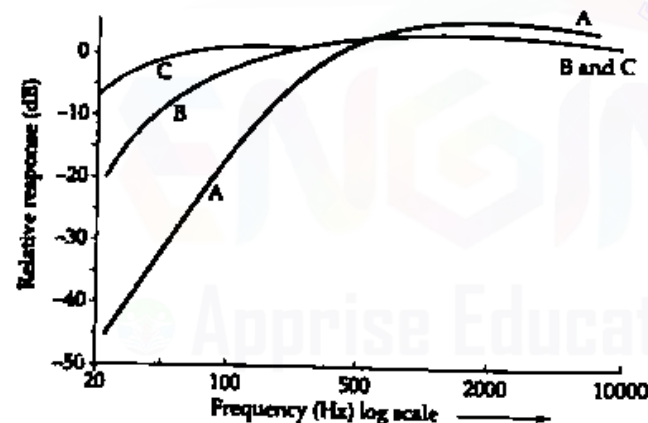


Fig. 20.3. Response characteristics of A, B and C types of weighting networks.

Readings taken when a network is in use are said to be "sound levels" rather than "sound pressure levels".

A perusal of the dB values of table 20.2 reflects that in low frequency range, the dB values to be subtracted are reducing from network A to C, and there is wide variation in their values. Hence for such low frequency noise, the resulting values of L_A , L_B and L_C will differ by wide margins and will be reducing from A to C. In other words $L_A > L_B > L_C$ by wide margins.

Table 20.2. Network Weighting Values of Sound Level Meters

Frequency (Hz)		Curve A (dB)	Curve B (dB)	Curve C (dB)
Low frequency range	10	-70.4	-38.2	-14.3
	20	-50.5	-24.2	-6.2
	50	-30.2	-11.6	-1.3
	100	-19.1	-5.6	-0.3
Mild-frequency range	200	-18.9	-2.0	0
	500	-3.2	-0.3	0
	1000	0	0	0
High frequency range	2,000	1.2	-0.1	-0.2
	6,000	0.5	-1.2	-1.3
	10,000	-2.5	-4.3	-4.4
	20,000	-9.3	-11.1	-11.2

Similarly, for mild frequency noise, these values will of course be in decreasing order, but with very little difference between them. On the other hand for high frequency noise, these values will be in increasing order, because the subtraction for C network is more than for B network, which is more than for A network. The difference will however be quite small.

A pair of such values as $L_A = 94$ dB, $L_B = 88$ dB, and $L_C = 80$ dB, therefore, reflects low frequency noise; and a pair of values such as $L_A = 94$ dB, $L_B = 93$ dB, and $L_C = 92$ dB, will thus reflect a mild-frequency noise; and similarly, a pair of values like $L_A = 96$ dB, $L_B = 97$ dB, and $L_C = 98$ dB will reflect a high frequency noise.

20.4.1. Octave Band Analysis and Sound Spectra. A noise can be fully characterised by breaking it down into its frequency components, called spectra. Normal practice is to consider 8 to 11 octave bands. An octave band is the frequency interval between a given frequency and twice that frequency. For example, for a given frequency of 22 Hz, the first octave band is from 22 Hz to 44 Hz. A second octave band would be from 44 Hz to 88 Hz, and so on. The standard octave bands and their geometric mean frequencies are given in table 20.3.

Table 20.3. Standard Octave Bands

Octave frequency range (Hz)	Geometric mean (centre band) frequency (Hz)
22-44	31.5
44-88	63
88-175	125
175-350	250
350-700	500
700-1400	1,000
1400-2800	2,000
2800-5600	4,000
5600-11200	8,000
11200-22400	16,000
22400-44800	31,500

An octave band analysis is usually sufficient for community noise control and for identifying violators; more refined analysis is required for corrective action and design. Such a refined analysis is usually provided by *one-third octave band analysis*. This improved resolution is generally sufficient for determining corrective action for community noise problems. More refined analysis like *narrow band analysis*, involving band widths down to 2 Hz, may, however, be justified only for instrument design and testing, or in trouble shooting industrial machine noise and vibrations.

A typical noise spectra of automobiles is shown in Fig. 20.4.

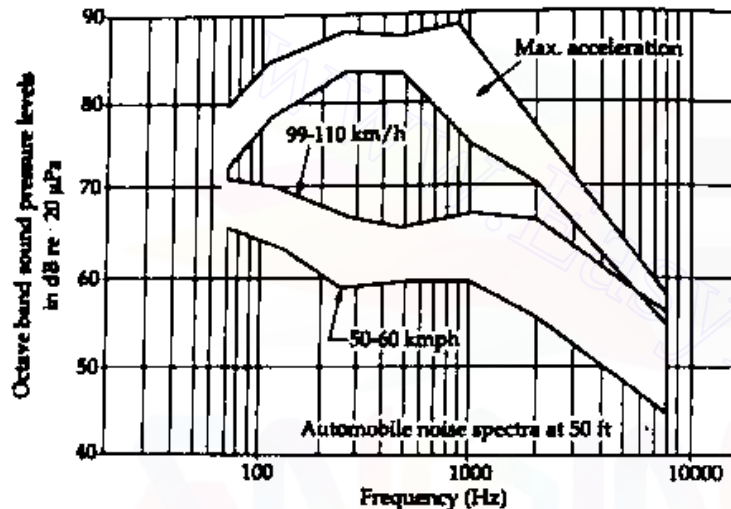


Fig. 20.4. Typical noise spectra of automobiles.

20.4.2. Averaging Sound Pressure Levels. The average value of the various recorded sound pressure levels (L_p) at a particular place over a given period cannot be computed by simple averaging due to log scale involved in their values. On the other hand, the following equation is used to compute average pressure level:

Average pressure level

$$\bar{L}_p = 20 \log_{10} \frac{1}{N} \sum_{n=1}^N (10)^{L_n/20} \quad \dots(20.12)$$

where $\bar{L}_p$ = Average sound pressure level in dB re : 20 μ Pa

N = Number of measurement readings.

L_n = n th sound pressure level in dB re. 20 μ Pa.

$n = 1, 2, 3, \dots, N$.

Say for example, the average of 4 measurement readings recorded as 40, 50, 62 and 72 dB re 20 μ Pa is computed to be 63 dB, in place of straight arithmetic average value of 56 dB.

$$\sum_{n=1}^N (10)^{L_n/20} = [(10)^{40/20} + (10)^{50/20} + (10)^{62/20} + (10)^{72/20}]$$

$$= [100 + 316.23 + 1258.92 + 3981.07] = 5656.22$$

and $\bar{L}_p = 20 \log_{10} \frac{1}{4} \times 5656.22 = 63 \text{ dB. Ans.}$

20.5. Noise Rating Systems

A noise may consist of *different types of sounds** with different pressure levels operating for different time intervals. The frequencies of these sounds may also vary. The combined resultant noise will infact be responsible for determining the human response and degree of annoyance caused by it. The combined impact of different sound pressures lasting for different periods is therefore attempted to be worked out by using some statistical measures, such as L_N and L_{eq} systems, discussed below :

The L_N concept. The parameter L_N is a statistical measure indicating how frequently a particular sound level is exceeded. The value of L_N will represent the sound pressure level that will exceed for $N\%$ of the gauging time. Say for example, the given 70 dB value of L_{60} will mean that the sound level will exceed 70 dB for 60% of the measuring time.

When L_N is plotted against N (where $N = 1, 2, 3, \dots, 100\%$), a *cumulative distribution curve*, as shown in Fig. 20.5, is obtained.

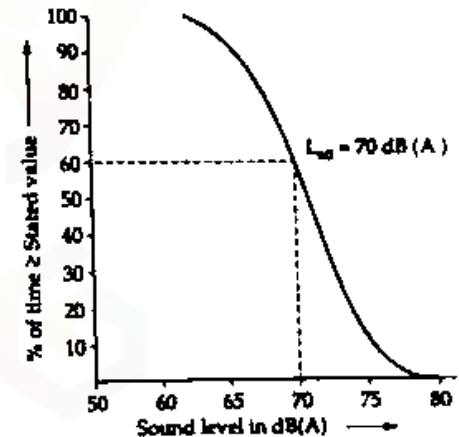


Fig. 20.5. Cumulative Distribution Curve.

The L_{eq} Concept. L_{eq} is that statistical value of sound pressure level that can be equated to any fluctuating noise level. Say for example, a sound of 80 dB lasting for 10 minutes, followed by a sound of 60 dB lasting for the next 80 minutes, and then followed by a sound of 100 dB for the next 5 minutes, will compose a fluctuating noise level, which can be represented by a certain dB

*Sound is usually divided into three types ; viz :

(i) *continuous* ; (ii) *intermittent* ; and (iii) *impulsive* ; as explained below

(i) **Continuous noise** is an uninterrupted sound level that varies less than 5 dB during the entire period of observation. A running fan is an example of such a sound

(ii) **Intermittent noise** is a noise which continues for more than 1 second and is then interrupted for more than 1 second. A drilling machine used by a dentist produces such type of sound.

(iii) **Impulse noise** is characterised by a change of sound pressure of atleast 40 dB within 0.5 second with a duration of less than one second. The noise produced from firing of

value which is indicative of producing the same effect over the entire time period of 10 min + 80 min + 5 min = 95 min, as the original fluctuating noise. This value is called the *Equivalent continuous equal energy level* or the *Equivalent Noise Level* (L_{eq}).

Thus, L_{eq} is defined as the constant noise level, which, over a given time, expands the same amount of energy, as is expanded by the fluctuating levels over the same time. This value is expressed by the equation :

$$L_{eq} = 10 \log \sum_{i=1}^{n+1} (10)^{\frac{L_i}{10}} \times t_i \quad \dots(20.13)$$

where n = Total number of sound samples;

L_i = The noise level of any i th sample

t_i = Time duration of i th sample, expressed as fraction of total sample time.

Using the above equation, L_{eq} value for fluctuating noise level of 95 minutes indicated earlier (i.e. the one with 80 dB lasting for 10 minutes, followed by 60 dB for 80 minutes, followed by 100 dB for 5 minutes) can be worked out as below :

$$\begin{aligned} \sum_{i=1}^3 (10)^{\frac{L_i}{10}} \times t_i &= \left[(10)^{\frac{80}{10}} \times \frac{10}{95} + (10)^{\frac{60}{10}} \times \frac{80}{95} + (10)^{\frac{100}{10}} \times \frac{5}{95} \right] \\ &= 1.053 \times 10^7 + 0.842 \times 10^8 + 0.52632 \times 10^9 \\ &= 10^6 [10.53 + 0.84 + 526.32] = 537.69 \times 10^6 \end{aligned}$$

$$L_{eq} = 10 \cdot \log_{10} (537.69 \times 10^6) = 87.3 \text{ dB. Ans.}$$

The above fluctuating sound with its equivalent energy level (L_{eq}) is represented graphically in Fig. 20.6, which reflects that high occasional sounds do influence the resultant equivalent value by a large extent.

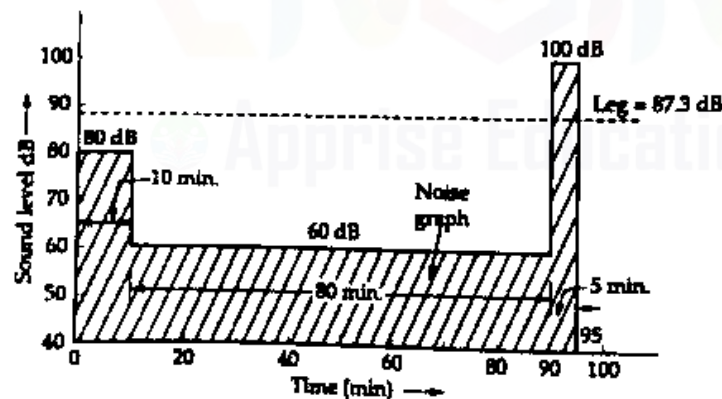


Fig. 20.6. Noise graph and its equivalent noise level.

The *equivalent noise level* (L_{eq}) constitutes an important parameter for evaluating the impact of fluctuating noises of all kinds, such as from aircraft,

street and road traffic, rail traffic, industrial machines, sports stadiums, play grounds, etc.

Moreover, the duration in hours, over which L_{eq} is worked out for a given site, is further mentioned in bracket, such as $L_{eq,1}$, which means that L_{eq} is based on 8-hour measurement; when, however, no such time is mentioned, then L_{eq} always corresponds to one hour measurement.

The equivalent noise level (weighted on A network) during 24 hour time period with + 10 dB (A) correction applied to measurements recorded during night time of 22 hr to 07 hr, is usually represented by L_{dn} .

20.8. Noise Level Standards

The prescribed noise standards generally put a limit either on L_{eq} or L_{10} values. Different such limiting values are then prescribed for different areas. Say for example, VIP and serene areas will impose lower limiting values as compared to those for commercial or industrial areas within a city. The usually prescribed limiting L_{eq} values for different areas of a city is of the order of 40 to 70 decibels.

Table 20.4 and 20.5 show two sets of noise standards, which have been laid down in USA. The first standards (table 20.4), developed by U.S. *Federal Highway Administration* are the levels prescribed for newly planned highways through different types of areas. These levels are above those that would be absolutely harmless, but are below those of many existing highways.

Table 20.4. Noise Standards laid down by U.S. Federal Highway Administration for Highways in New Developments

Land use category	Exterior design noise level dB(A)*		Description of land use category
	L_{eq}	L_{10}	
A	57	60	VIP and other protected areas, where serenity and quietness is to be maintained
B	67	70	Residences, hotels, schools, hospitals, picnic areas, play grounds, parks, etc
C	72	75	Developed lands and properties not included in A and B category, such as commercial and industrial areas.
D	No limit	No limit	Undeveloped lands
E	52 (interior)	55 (interior)	Public meeting halls, schools, libraries, churches, hospitals, etc.

*Either L_{eq} or L_{10} , based on 1 hour samples, is to be used, but not both. (L_{10} will evidently mean that the indicated dB will be exceeded for only 10% of the measuring time of 1 hr)

The other set of standards (table 20.5) has been evolved by U.S. *Environmental Protection Agency* and shows the limiting noise levels for different types of areas for indoor as well as outdoor noises, that should be maintained for adequately safeguarding public health over long periods (accounting annual average levels in L_{eq} values).

Table 20.5. Average yearly energy Levels (L_{eq}) Identified as requisite to protect public health and welfare with an adequate margin of safety

Types of areas	Measure	Indoor		To protect against both effects (b)	Outdoor		To protect against both effects (b)
		Activity interference	Hearing loss consideration		Activity interference	Hearing loss consideration	
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)
Residential with outside space and farm residences	L_{eq} $L_{eq(24)}$	45	70	45	55	70	55
Residential with no outside space	L_{eq} $L_{eq(24)}$	45	70	45			
Commercial	$L_{eq(24)}$	(a)	70	70(c)	(a)	70	70(c)
Inside transportation	$L_{eq(24)}$	(a)	70	(a)			
Industrial	$L_{eq(24)}$ (d)	(a)	70	70(c)	(a)	70	70(c)
Hospitals	L_{eq} $L_{eq(24)}$	45	70	45	55	70	55
Educational area	$L_{eq(24)}$ $L_{eq(24)}$	45	70	45	55	70	55
Recreational areas	$L_{eq(24)}$	(a)	70	70(c)	(a)	70	70(c)
Farm land and general unpopulated land	$L_{eq(24)}$				(a)	70	70(c)

Note. (a), (b), (c) and (d) are defined at the bottom of the table.
Code

(a) Since different types of activities appear to be associated with different levels, identification of a maximum level for activity interference may be difficult except in those circumstances where speech communication is a critical activity.

(b) Based on lowest level.

(c) Based only on hearing loss.

(d) An $L_{eq(24)}$ of 75 dB may be identified in these situations so long as the exposure over the remaining 16 hour per day is low enough to result in negligible contribution to the 24-hour average, that is, no greater than an L_{eq} of 60 dB.

Note. Explanation of identified level for hearing loss. The exposure period that results in hearing loss at the identified level is a period of 40 years.

The acceptable outdoor noise levels in different types of residential areas, as well as the acceptable indoor noise levels for various types of buildings, as recommended by Indian standard code IS : 4954—1968, are given in table 20.6

Table 20.6. Acceptable Noise Levels for Residential Areas, as per I.S. code 4954-1968

S. No.	Acceptable outdoor noise levels in residential areas		S. No.	Acceptable indoor noise levels for various types of buildings	
	Location	Noise levels dB(A)		Location	Noise levels dB(A)
1.	Rural areas	25—35	1.	Radio and TV studios	25—30
2.	Suburban areas	30—40	2.	Music rooms	30—35
3.	Urban Residential areas	35—45	3.	Hospitals, class rooms, auditoria	35—40
4.	Residential and business urban areas	40—50	4.	Apartments, hotels, homes	35—40
				Conference-rooms, small offices	
5.	City areas	45—55	5.	Court rooms, private offices, libraries	40—45
6.	Industrial areas	50—60	6.	Large public offices, banks, stores, etc.	45—50
			7.	Restaurants	50—55

In order to legally enforce control on noise levels, the GoI has notified the Noise Pollution (Regulation and Control) Rules 2000, under the Environment (Protection) Act, 1986. Under these Rules, Ambient Air Quality Standards in respect of Noise, have been specified in respect of different types of area uses (such as industrial area, commercial area, residential area and silence zones), as shown in Table 20.7.

Table 20.7. Ambient Air Quality Standards in Respect of Noise as Specified under the India's Environment Protection Act, 1986

Area Code	Category of Area / Zone	Limits in dB (A) Leq*	
		Day Time	Night Time
(A)	Industrial Area	75	70
(B)	Commercial Area	65	55
(C)	Residential Area	55	45
(D)	Silence Zone	50	40

Note : 1. Day time shall mean from 6.00 a.m. to 10.00 p.m.

2. Night time shall mean from 10.00 p.m. to 6.00 a.m.

3. Silence zone is an area comprising not less than 100 metres around hospitals, educational institutions, courts, religious places or any other area which is declared as such by the competent authority.

(Contd.)

4. Mixed categories of areas may be declared as one of the four above mentioned categories by the competent authority.

*dB(A) Leq denotes the time weighted average of the level of sound in decibels on Scale A which is relatable to human hearing. Day time specified values will, thus, be weighted values over 6 am to 10 pm, and night time specified values will be weighted values over 10 pm to 6 am.

A "decibel" is a unit in which noise is measured.

"A", in dB(A) Leq, denotes the frequency weighting in the measurement of noise and corresponds to frequency response characteristics of the human ear.

Leq. It is an energy mean of the noise level over a specified period.

The major highlights of the provisions of these Noise Pollution (Regulation and Control Rules, 2000) are indicated below :

- The State Government shall take measures for abatement of noise including noise emanating from vehicular movements and ensure that the existing noise levels do not exceed the ambient air quality standards (see Table 20.7) specified under these rules.
- All development authorities, local bodies and other concerned authorities while planning developmental activity or carrying out functions relating to town and country planning shall take into consideration all aspects of noise pollution as a parameter of quality of life to avoid noise menace and to achieve the objective of maintaining the ambient air quality standards in respect of noise.
- The noise levels in any area/zone shall not exceed the ambient air quality standards in respect of noise as specified in the Schedule (see Table 20.7).
- The authority shall be responsible for the enforcement of noise pollution control measures and the due compliance of the ambient air quality standards in respect of noise.
(Responsibility as to enforcement of noise pollution control measures)
- A person may, if the noise level exceeds the ambient noise standards by 10 dB(A) or more given in the corresponding columns against any area/zone, make a complaint to the authority.
- The authority shall act on the complaint and take action against the violator in accordance with the provisions of these rules and any other law in force.

[Note: You don't need to measure the noise. It has to be beyond the 'tolerable' level to have irritated you.]

Author's Note: Although quite stringent noise level standards have been prescribed by GoI, yet there is practically no enforcement of these standards even in the capital of Delhi, where the existing sound levels are as high as 83 dB during day time and 77 dB during night time, as compared to the highest permissible values of 75 and 70 dB, respectively.

20.7. Sources of Noise and their Noise Levels

Outdoor noise is usually produced by the following sources :

- (1) Traffic including air traffic, road traffic, and sea-shore and inland water traffic;

(2) Industries ; and

(3) Other miscellaneous activities ; as discussed below.

20.7.1. Traffic Noise. Traffic usually produces a lot of noise, particularly in big cities like Delhi, and is responsible for causing a lot of nuisance to the society. The amount and type of noise produced by traffic is largely dependent upon the type of traffic. Say for example, the noise produced will depend upon the type of aircraft or automobile used for the traffic. A jet aircraft produces more noise than a propeller type ; a diesel jeep or a truck produces more noise than a petrol car ; badly maintained automobiles produce more noise than new and good conditioned vehicles ; diesel and steam locomotives produce more noise than the electric trains ; badly designed and maintained rail tracks produce much more noise than those in good condition and constructed in deep cuts. Noise levels produced by different types of traffic are given in Table 20.8.

Table 20.8. Noise Levels of Different Sources of Traffic

S. No.	Source of Noise	Noise level in dB
1.	Air traffic (i) Jet aircraft at take off stage at about 300 m (ii) Propeller type aircraft at take off stage at about 300 m	100—110 90—100
2.	Rail traffic (at about 30 m)	90—110
3.	Heavy road traffic (highway)	80—90
4.	Medium road traffic (main streets)	70—80
5.	Light road traffic (side streets)	60—70

In order to ensure that the vehicles on roads do not produce excessive noise, the Union Environment Ministry has prescribed noise standards for different types of vehicles, as shown in Table 20.9.

Table 20.9. GoI Noise Standards for Different Types of Vehicles

S. No. (1)	Type of vehicles (2)	Noise level in dB (3)
1.	Two wheelers	80
2.	Cars	82
3.	Passenger or commercial vehicles	85
4.	(i) Upto 4 MT (Tonnes) (ii) Between 4 MT to 12 MT (iii) More than 12 MT	89 91

At present, the noise pollution level clearance for different brands of vehicles is only required at the manufacturer's level. However, by October 2004, all the 6 crore vehicles plying in the country were to meet the above norms or face prosecution. The owners of vehicles were to secure certificates that their vehicles meet the prescribed noise pollution norms.

However, there has been no implementation of these standards, since sufficient manpower and enough sound meters are not available as per the needs.

20.7.2. Industrial Noise. Noise is the essential by-product of industry; its intensity and nature being dependent upon the type of the industry. Industrial noises are usually produced by rotating, reciprocating or any other types of machinery, or by high pressure high velocity gases, liquids or vapour involved in the industrial processes. The usual noise level of the industries is of the order of 80 to 95 decibels.

20.7.3. Noise Produced by Other Sources. Several other human activities, such as blaring of loudspeakers and sirens, shouting of hawkers, playing of children, general life and activity, ringing of temple and church bells, etc. do produce noises of different levels, tones and spectra.

20.8. Noise Abatement and Control

Exposure of mankind to the day by day increasing noise nuisance must be reduced and abated, if its adverse effects on human health are to be controlled. The society must therefore be protected from the harmful effects of noise by devising and implementing ways and means for the abatement of noises.

There are certain noises which can be kept under control by legal laws and ordinances, and there are others which have to be dampened and attenuated by the use of good technology and town planning. For example, the noises produced by motor vehicles can be controlled to some extent by proper maintenance of vehicles, which can be ensured only by prescribing maximum permissible noise levels for different types of automobiles, through Motor Vehicles Act. Similarly, industrial noises, can be brought under the control of Factories Act by specifying maximum permissible noise levels and other checks. Similarly, public blaring of loudspeakers and plying of radio sets at loud levels can be prevented by general legal laws of public nuisance or laws specifically made for noise pollution. Yet however, there exist several other noises which have become part and parcel of our modern life. All such noises are to be reduced by better design technology to be used in the modern day gadgets like fans, air-conditioners, washing machines, refrigerators, mixers and grinders, etc.

Another very important method for abating noise effects on mankind is to use proper town planning techniques, and thus, to ensure construction of houses and offices away from the major sources of noise. Proper segregation, zoning and separation of residential complexes from the commercial and industrial ones, by means of physical barriers, roads, railway lines, parks or green belts, do constitute an important aspect of such good town-planning.

The noises produced by automobiles and trains, being the biggest noise nuisance in a modern city life, can be abated by construction of walls on both sides of roads and railway lines. Raising of such obstructions and barriers in between the noise sources (auto-mobiles) and residences, may considerably reduce the noise levels reaching the residences. Attenuation of upto 15

decibels is possible in this manner. The extent of attenuation achieved by raising of such a barrier wall, is shown in Fig. 20.7.

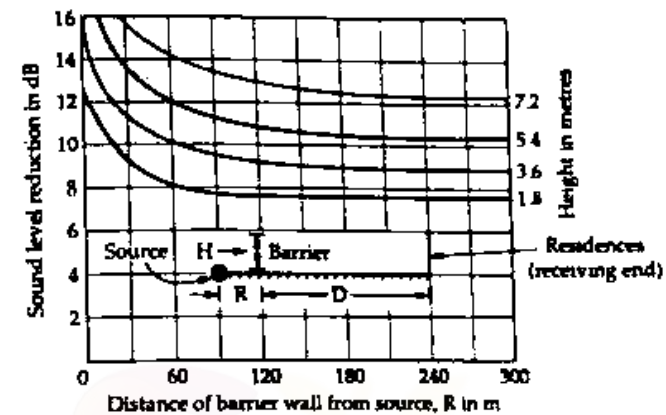


Fig. 20.7. Noise Reduction caused by Barrier wall raised between a noise source and the receiving end.

When $D \geq R$ and $R \gg H$, the noise reduction may also be calculated by the equation* :

$$\text{Noise reduction (dB)} = 10 \log_{10} \left(\frac{20H^2}{\lambda R} \right) \quad (20.14)$$

where H = Height of the barrier wall

λ = wavelength of sound

D = Distance between barrier and the receiving point

Raising of thick and high vegetation and trees growing along sides of roads and railway lines, offer cheaper barriers to cause such noise reductions.

Locating the noisy sources on the downwind side of the residences, may be another important consideration in good town planning, because noise will then travel farther in the downwind direction away from the residences.

Noise levels in residential buildings can be reduced to some extent by offsetting the building from the main or street roads by a suitable distance. The farther is this distance, the better will be the attenuation, because the intensity of noise gets reduced with increase in distance.

PROBLEMS

- (a) Define 'noise' and explain as to how and why it should be regarded as an environmental pollutant
- (b) Differentiate between L_w , L_{eq} and L_{dn} , in relation to expression of sound levels.

*This equation is generally found to be giving higher value than that observed in actual life.

2. (a) Differentiate between the terms "sound pressure levels" and "sound levels", bringing out clearly the basic characteristics of the three types of weighting networks.
- (b) 60 dB (A) re : 20 μ Pa noise is accompanied with another 60 dB (A) re : 20 μ Pa noise. What will be the total noise level. [Ans. 63 dB (A) re : 20 μ Pa]
3. (a) While recording A-weighted sound levels, 4 readings have been taken at a site at different times of a day. These readings are : 20, 56, 66 and 42 dB(A) re : 20 μ Pa. What is the average sound level ? [Ans. 56.85 dB (A) re : 20 μ Pa]
- (b) Mention typical values of acceptable sound levels as per I.S. code for :
 - (i) Rural areas ;
 - (ii) Urban residential areas ;
 - (iii) City areas ; and
 - (iv) Industrial areas.
4. (a) Explain in brief the major factors and actions that may help in noise abatement in a modern society.
- (b) Differentiate between continuous noise, intermittent noise, and impulse noise.
5. (a) Discuss in brief the various sources of noise, and their typical noise levels, in a modern society.
- (b) Write a brief note on noise abatement.
6. (a) 50 dB (A) noise lasting for 55 minutes is followed by 90 dB (A) noise lasting for 5 minutes. What is L_{eq} of this noise ? [Ans. 79.2 dB (A)]
- (b) Write brief but explanatory notes on any two of the following :
 - (i) Noise pollution, its causes, effects, and remedies,
 - (ii) Octave band analysis of noise and noise spectrum
 - (iii) Noise rating systems
 - (iv) Noise levels and their specified Indian standards.

—21

Environmental Impacts of Thermal Power Plants, Mining and River Valley Projects

21.1. Environmental Impact Assessment

Engineering projects involving development of thermal power, mining operations, and even river valley water resources developments, have been found to be causing certain adverse and negative impacts on our surrounding environment, which has forced us to make it compulsory to evaluate these adverse impacts in details, well before the project is cleared for execution. With this end in view, all project clearance cells do evaluate and examine the detailed environmental assessment report, which is prepared and submitted along with the DPR (Detailed Project Report) of every such project. Submission of such *Environmental Impact Assessments* or *Environmental Impact Statements (EIS)* have been made compulsory by the Indian Government for all projects, which are likely to cause harm to our surrounding environment. These statements are thoroughly examined by the concerned Ministries before giving *environmental clearance* to the project, without which, administrative and financial sanction to the project, will not be given.

All such impact assessments should thoroughly examine and discuss the various possible environmental damages, whether pertaining to *water pollution*, *air pollution*, *ground (land) pollution*, *noise pollution*, or any other kind of environmental pollution ; and their suggested remedial measures to prevent or to mitigate such hazardous environmental effects.

The environmental impacts which are likely to be caused by the three types of projects (i.e. thermal power plants, mining, and river valley development projects) are discussed here in the following articles, as they stand included in the syllabus of Civil Services Exam.

21.2. Environmental Impacts of Thermal Power Plants

Thermal power plants, generally use coal as the fuel for producing steam to run their turbines for production of electricity. Fuel oil is also sometimes used as fuel. Use of fuel gas is the most modern advancement in this field.

Fossil fuels, including coal as well as fuel oil, when used in the power plants, prove very harmful to the air environment, as they release very heavy amounts of pollutants into the atmosphere.

If coal is used, pollutants like *fly ash*, *sulphur dioxide*, and *nitrogen oxides*, are produced on a large scale. In case of oil, however, only *sulphur dioxide* and *nitrogen oxides* are produced, as the major pollutants. Coal, thus, proves to be a worse fuel, and is an important source responsible for particulate air

pollution. The amount of fly ash and sulphur dioxide produced by the coal depends upon its quality, and sulphur and ash content in it.

It has also been observed that the fly ash from a thermal power plant falls out, upto large distances from the plant. Heavy amount of fly ash has been observed to be falling even upto distances as large as 3 to 6 km. The fallout rates are found to increase in dry windy seasons.

The fallout rates of fly ash at the thermal power plant at Korba in Madhya Pradesh State has been found to be as high as 300–550 t/km²/month in the vicinity of the plant, about 130–550 t/km²/month at distances of about 2.5 km, and about 60–450 t/km²/month at distances of about 4 km.

Similarly, the Indraprastha and Rajghat power houses at Delhi near ITO, are responsible for polluting Delhi's air on a large scale. Dust and fly ash has been thrown by these plants even upto Karol Bagh, about 10 km away. However, the distances upto which, these dusts fall, have now been reduced with the commissioning of electrostatic precipitators at these plants, because the precipitators catch the particulate matter. Yet, however, the menace of disposal of huge quantity of fly ash caused a lot of worries to the Govt. of National Capital Territory of Delhi, which is now utilising the fly ash for making bricks.

In order to reduce the quantum of fly ash production and consequential air pollution, DVB (Delhi Vidhut Board) is also now planning to run these plants on fuel gas, in place of coal. A gas pipe line, existing between Hazira-Bijapur-Jagdishpur is being extended by the Gas Authority of India, for bringing fuel gas to these plants. This pipe line will also supply gas to an NTPC's power plant at Dadri, enroute to Delhi from Jagdishpur.

21.3. Environmental Impacts of Mining

Mining, as we know, is the extraction of minerals and ores from the Earth. It is a vital sector of our economy, just next to agriculture.

Mining helps us to extract costly resources from the Earth, which we fashion into countless goods of our daily and industrial uses. Mining provides us fuels for our energy requirements, metals for making machines and engines, the ores for making chemicals and fertilisers, the clays for making crockery, the rocks and stones for our buildings and dams, the gold, diamond and other precious stones for our jewellery making, and what not. Mining is, therefore, considered as an important industry, and it is necessary for any nation to ensure that this industry continues to flourish and develop. The total number of mines, strictly speaking open cast mines, in our country is around 5600; out of which, about 500 mines are producing coal, and the remaining are in the non-coal sector.

In general, mining activities are accompanied by a variety of environmental problems. The process of environmental degradation, which starts with the extraction of minerals resulting in land degradation and addition of pollutants in the air and water, continues even as the extracted mineral ore are further processed and developed for their ultimate uses.

The environmental impacts of mining can be broadly divided into four parts:

- (1) water pollution;
- (2) air pollution;
- (3) de-spoilation of land, including land subsidence, land degradation and deforestation; and
- (4) noise and ground vibrations; as discussed below:

(1) **Water pollution.** Mining causes water pollution in two ways. Firstly, mining causes discharge of acid-mine-waters into surface water bodies like ponds, rivers, etc.; and secondly, mining adds toxic radioactive substances like selenium, nickel, fluorine, etc. to the water bodies.

Mining is also responsible for changing the hydrology of an area in many ways. Say for example, sometimes, mining may change the river course and discharge, thereby affecting the agriculture and flora and fauna of the area. Similarly, sometimes, mining activities, may lower the water-table of the area.

(2) **Air pollution.** Mining causes air pollution in two ways. Firstly, it adds gaseous pollutants to the air; and secondly, it emits and adds dust particulates to the atmosphere.

The harmful gaseous pollutants, like sulphur dioxide, oxides of nitrogen, carbon monoxide, etc. are originated in mining activities from the waste dumps; whereas, the dust particulates are produced during ore/coal handling, blasting, and transportation.

Mine fires, which are largely associated with the underground mining and also in solid waste disposals, also do pollute the atmosphere on a large scale through smokes, etc. Such pollution has been caused on a large scale near Jharria in Bihar State of our country.

(3) **De-spoilation of Land.** The land degradation effects of mining can be divided into three parts, as discussed below:

(i) **Land Subsidence.** Due to underground mining, the land surface subsides, which not only causes damage to buildings and surface drains; but also, sometimes, damages the highways, bridges, water and sewage lines, etc. existing on the ground.

The incidents and threats of land subsidence have mainly been reported from areas of coal-mining; and to a lesser extent, from the areas where salt and gypsum have been mined on a large scale. There have been a few reports of subsidence arising from the extraction of limestone and other minerals. In recent times, land subsidence incidents have also been reported in some areas, which have been subjected to excessive mining of oil and natural gas.

Apart from causing the loss of buildings, agricultural land and other property, land subsidence has also taken a toll of several lives in many disasters and near disasters. Say for example, on 21.01.1960, in South Africa, as much as 3 sq. km of Coalbrook colliery collapsed at a depth of 143 metres below the ground, killing 437 underground miners. The disaster was reportedly caused by the failure of one single pillar, setting off a chain reaction. Similarly, in 1970, 38 persons were killed in Mefulira copper mines of Zambia, when about $\frac{1}{2}$ M. cum of mud entered the mine because of subsidence.

In India, the problem of land subsidence caused by coal mining has become most acute in *Raniganj Jharia Coal belt in eastern coal fields*. Such problems have, in fact, arisen due to unscientific practices followed in underground mining operations. The subsidence, though is a relatively slow process, extending over decades, eventually leads to drastic accidents such as disaster floods, failure of dams and levees on the rivers that flow on the ground over the underground mines, collapse of buildings, destruction of sewers, drains and canals. *The water of the Barak river often fills the depressed area with flood water in the Jharia coal fields.* The Chasmala tragedy of the 1978 that took a toll of 376 lives, is an eye-opening example of this kind of a hazard. According to a report of the Director General of Mines Safety, substantial parts of Asansol and Raniganj are in fact, facing serious threat of a collapse. Subsidence has already occurred in several localities of Asansol like Dhadka, Dhandadhi village near Parasa, Kendra, Dehargarh and Jamuria Bazar, etc. Some experts have pointed out that the town of Barkar is precariously perched on the water of Damodar river, as it is practically hollowed out by mining. The subsidence of coal fields, in fact, has been occurring in this region since 1920's, or so. As the pillars of the abandoned mines give way either through erosion by water accumulation, or because of vibrations caused by over-head rail traffic, or from blasting in neighbouring mines, the surface land subsides. In recognition of the problem, *sand stowing* (hydraulic stowing of sand) was made a statutory requirement after the report of the coalfields committee in 1922. But its provisions were virtually flouted by the private mining contractors and companies for over more than 50 years, leading to such precarious conditions. The menace of land subsidence, has, thus been looming large in the Raniganj Jharia coal fields in India for several decades.

(ii) **Land Degradation.** Open cast mining removes the top soils and causes deep and large excavations, pits and cuts. As such, large areas become unusable and denude of vegetation, causing continuous soil erosion and its ill effects like silting and degradation of streams and water bodies. Additionally and most importantly, the waste dumps, created by the open cast as well as underground mining could lead to erosion and slips (*land slides*), if not attended and treated timely and properly. Such land slides and flowing debris may sometimes cause serious damage to life and property, and may sometimes result in disasters or virtual disasters.

Say for example, on 21.10.1968, a 250 m high rain soaked tip of the mining waste, standing on the valley side above the town of Aberfen in South Wales, collapsed, and while flowing downwards, it engulfed a row of houses and a school, killing 144 people including 118 school children. A former Headmaster had given repeated warnings of this danger, which were just ignored. Similarly, a huge rock fall was caused by the systematic quarrying and removal of slate from the valley side of a cliff in Elm village of Switzerland, leading to the collapse of more than 10 M. cum of rock just within 20 minutes, killing 115 people. Similarly, a rockfall occurred at Frank Alberto Canada in the year 1903, which killed 70 people and buried a part of the Frank town. During investigation, it was concluded that careless coal mining was primarily responsible for this disaster.

In India, a disastrous land slide occurred at Hanibal in Mizoram on 09.08.1992, which should open ones eyes to the hazards of indiscriminate mining and quarrying. This land slide occurred in an area of large scale quarrying work, and was reportedly caused by the indiscriminate use of explosives during mining and removal of supports from the mined area. The unscientific and indiscriminate mining operations, in fact, are carried out unstopped, by the mining companies or contractors, who usually are influential people. *Such lease holders (miners) frequently undertake mining work without sufficient geological investigations, and ignore precautionary measures, like forming steps, minimising the use of dynamite (explosives), avoiding of under-cutting operations, reducing tree loss and planting more trees, or stabilising the land in other ways.* Such carefree attitude during mining of hills, often results in throwing of stones, dust and rubble at the villagers settled on the foot hills, destroying their fields, canals, forests and animals, besides causing imminent threats of some serious disasters like land slides and land subsidence.

(iii) **Deforestation.** Large scale felling of trees from the forest areas, may sometimes have to be adopted for extraction of valuable mineral deposits from those areas.

The thick tree cover to be felled in such operations, may either be found directly on the area to be mined or it may have to be destroyed for making in-roads in the mining area.

Moreover, during mining, dirt, dust and over-burden spreads on the nearby areas, thereby causing large scale damage to the nearby vegetations.

Several mining areas, such as near Mussorie, are getting bereft of thick forests, posing tremendous environmental problems.

Large scale deforestation, besides causing oxygen deficiency, drastically changes the climatic conditions, like rainfall, temperature, humidity, etc. of the area ; which may result in large scale deaths of wild animals and birds living in that forest, causing imbalance to the natural ecology of the area.

(4) **Noise and Ground Vibrations.** The large scale noise caused by mining operations, and the vibrations induced into the ground, have been established to be a major environmental hazard, as it interferes with the hearing and speech communication, causes distraction, annoyance, and ultimately *hearing loss*. It not only damages the ears, but may even cause headache and high blood pressure. Heavy ground vibrations, introduced by heavy blasting of areas, may also damage the nearby structures, buildings, etc. ; besides causing irritation to the residents.

Besides the above direct environmental impacts, mining operations may also cause adverse social and visual effects.

21.4. Environmental Impacts of River Valley Projects

A multipurpose river valley project, involving storage of river water by the construction of a dam across the river, can cause several effects on the environment of the area.

Some of these impacts may adversely affect the ecology and environment. While most others may prove beneficial to the environment, as discussed

21.4.1. Negative Impacts. Among the *adverse negative impacts*, the following effects may be examined and highlighted, while formulating the *environmental impact statement* for the project :

- (i) *Loss of wild life habitat.* Loss of wild life and possible extinction of some rare species of the flora and fauna of the area, likely to be caused by the submergence of the vast tract of the forested area, needs to be evaluated.
- (ii) *Loss of valuable forest land.* Loss of valuable forest land and the consequent loss of wood, particularly fuel wood should be evaluated.
- (iii) *Loss of agricultural land.* Loss of agricultural land due to submergence, and consequent loss of food and nonfood crops, and particularly those of vegetables of daily use, needs to be evaluated and analysed.
- (iv) *Loss of religious sites.* Loss of religious sites like mosques, temples, etc, needing shifting or relocation, need to be identified.
- (v) *Loss of adventure sports and river rafting.* Due to the construction of the dam, the original rapid flow of river may not remain available to the river-runners and rafters, thereby reducing their charm and adventure opportunities. Such impacts are to be analysed.
- (vi) *Displacement of people coming in the submergence zone of the dam.* The people living in areas coming under the submergence zone of the dam will have to be shifted and relocated, which may lead to overall misery, chaos, and public distress. This factor is extremely important, and must be well planned with compassion and liberal spendings.
- (vii) *Growing pressure of civilization and industrialization on nearby areas.* The increase in population due to dam construction is certainly likely to occur, when once the project is completed, because the project will ensure availability of water, power, and flood free land, inducing development of industries and other human activities.
Even during the construction period, there will occur heavy human activities in the area, including movements of heavy machineries, trucks, heavy labour forces, etc.
All such activities are likely to cause degradation of the overall environment of the area, and such activities may sometimes cause irreparable harm to the animals, birds and local populace living in the nearby areas.
- (viii) *Post project effects, like salinity and water-logging of irrigated land.* The water logging and consequent salinity of land, likely to be irrigated by the reservoir water, may be caused by over-irrigation in the irrigation command area of the project. This can however, be eliminated by proper control and conservative use of valuable water.
- (ix) *Reservoir induced seismicity.* The dam reservoir may increase the susceptibility of the area to the earthquakes. Its possible effects need be examined even on the dam design.
- (x) *Adverse impacts to fisheries.* Adverse impact may be caused to the fisheries, as the fish is not likely to find the original rapid flow and sea

and prevent the free up and down movements of the fish in the river. *Migratory anadromous fish*, like Hilsa, are surely going to be badly affected, and may perish in large numbers. Fish may also perish while passing through the turbines or through the sluiceways along with the water released downstream for power generation and other uses.

21.4.2. Positive Impacts. Among the *favourable positive impacts* of a dam project on environment, we may count and highlight the following beneficial effects :

- (i) *Net improvement in public health.* Net improvement in public health is caused due to the availability of ample domestic water supplies, leading to overall sanitation, cleanliness, and better living conditions.
- (ii) *The overall increase in wood production.* The overall increase in production of crops and wood is certain to occur after the implementation of the project, due to flourishing growth of trees and crops in the irrigated command area of the project. Such production may far exceed the loss of wood and crops, caused by the submergence of forests and agricultural land, probably 100 times greater. This may need evaluation.
- (iii) *Excellent habitat for fisheries and water loving birds.* The lake created by the dam on its upstream side, usually shall provide an excellent habitat for development of fisheries, and bird sanctuaries, which may properly be planned and evaluated.
- (iv) *Development of tourism and recreation.* Development of tourist spots can be made feasible by a dam reservoir. Brindavan gardens in Mysore is an excellent example of such facilities, which have been developed on the down-stream side of the Krishanaraja Sagar dam across the Krishna river. Boating facilities in the reservoir lake are also, sometimes, developed to increase and induce tourism and recreation, as to provide boost to the environment.
- (v) *Improved micro-climate.* Improved micro climate is caused in the adjoining areas due to evaporation from the open water surface of the reservoir and from the irrigated command area of the project. This can be evaluated and stipulated among the positive impacts of the project.
- (vi) *Overall improved oxygen production.* This is caused due to the increased photosynthetic rate from green crops and trees, likely to flourish in the irrigation command area of the project, and which is likely to far outweigh such losses from the inundation area.
- (vii) *Development of sanctuaries and wild life.* Development of wild life sanctuaries becomes feasible, when once adequate sweet water becomes available round the year by the implementation of the dam project. Sanctuaries can then be well planned and developed for the overall growth of wild life and promotion of tourism. Five such sanctuaries have been planned in the execution of the Sardar Sarovar multipurpose dam project, as discussed in the next article.

21.4.3. Conclusions. In totally, it can be stated that the multipurpose water resources projects, do not by themselves, cause any environmental degradation and do generally justify their nature of being in environmental-harmony

They also provide benefits and prosperity, and make available food and power, so very necessary for the development of a country. However, it is the haphazard and unplanned development and industrialisation, encouraged by the execution of such water-resources projects, which causes all round environmental degradation, and this must be checked.

We must, therefore, make attempts to stop and prevent such unplanned growths of human and industrial developments, rather than stopping and preventing the execution of the water-resources projects, which are the backbone of existence and prosperity of a nation, and that of the entire community as a whole.

The evaluation of large scale inundation and satisfactory resettlement of the effected people, however, remain the important adverse environmental impact of a water resources project.

Be that as it may, the Environmental Impact Assessment for each project shall be prepared to thoroughly study and examine the adverse impacts of the project on the environment, and to devise ways and means to reduce or minimise the environmental damages before a project is cleared from environment point of view.

In our next articles, we are giving a detailed description of the environmental impact studies of the Sarovar dam project, as to make this matter more elaborate.

ENVIRONMENTAL IMPACTS OF SARDAR SAROVAR DAM PROJECT—A CASE STUDY

21.5. Salient Features and Status of the Indira Sagar (Narmada Sagar) and Sardar Sarovar Dam Projects

The Narmada and Tapi are the two major west flowing river systems of India, which fall into the Arabian sea. These two river systems have so far remained undeveloped, while all the major east flowing river systems like Mahanadi, Godavari, Krishna and Kaveri have largely been harnessed for multiple uses of their water resources. In order to harness the water of the Narmada river, a committee was appointed in 1965 to develop a master plan for the basin, but its recommendations were not accepted by the riparian States of Gujarat, Madhya Pradesh and Maharashtra.

Even prior to the appointment of the committee for preparing a master plan for the development of the river, the Govt. of Gujarat had conceived the construction of a major dam across Narmada river near Navagam village, which is now called the Sardar Sarovar dam. The Sardar Sarovar dam was thus, in fact conceived in late forties, planned in fifties, and launched in early sixties. However, as pointed out above, the project could not be implemented due to inter-state dispute on sharing of waters of river Narmada between the riparian States of Madhya Pradesh, Gujarat and Maharashtra, through whose territories the river flows (or touches their boundaries). When the Govt. of India failed to resolve the dispute, it was referred to a Tribunal*, appointed by GoI under the provisions of the Inter-State Water Disputes Act, 1956*. The

*For details, please refer "International and Interstate River Water Disputes in India", written by the same author.

Narmada Water Disputes Tribunal (NWDT)*, after deliberating the issue for about 10 years, announced its award in Dec. 1979, allocating 18.25 MAF i.e. about 67% of total dependable** river flow to Madhya Pradesh and 9 MAF i.e. about 33% to Gujarat. 0.25 MAF was allocated to Maharashtra and 0.5 MAF to Rajasthan for drinking purposes. The Narmada Control Authority was then constituted by GoI to overlook proper implementation of the award, to create necessary storages and releases by the respective States, and for a coordinated development of the Narmada valley, especially Sardar Sarovar and Narmada Sagar dam projects.

The Narmada river, as you may be aware, is the largest west flowing river of India. It rises in Madhya Pradesh State from Vindhya mountain ranges at an elevation of about 900 m, from near a place known as Amarkantak. Passing down, it flows through the cities of Mandla, Jabalpur, Nashimpur, Barna, Hoshangabad and Omkareshwar (all in Madhya Pradesh). Between Hoshangabad and Omkareshwar, the Narmada Sagar dam is proposed to be built at village punasa in Khandwa District of Madhya Pradesh State.

After flowing through the Madhya Pradesh State, the river Narmada enters into the territory of Gujarat State, where Sardar Sarovar dam is proposed to be built across it, at a place known as Kevadia near Navagam. The river, after travelling for about 1312 km, ultimately falls into the Arabian sea through the Gulf of Khambhat (Combay) near Bharuch city. During its sojourn through the Gujarat State, the river on its left bank touches the Maharashtra State in some of its length, thereby making it an inter-state river between the States of Madhya Pradesh, Gujarat and Maharashtra.

The Narmada valley development plan includes the construction of 4 large dams; i.e. (i) Bargi dam; (ii) Narmada Sagar dam; (iii) Maheshwar dam; and (iv) Sardar Sarovar dam.

Out of these 4 mega dams, only the Bargi-dam had been completed way back in 1990; while Sardar Sarovar has been constructed only upto a height of 110.64 m (2005) as against its designed height to an elevation of 138.68 m (FRL). Work on Maheshwar dam (Hydroelectric project of 400 MW installed capacity), though being executed through a private entrepreneur—M/s. S. KUMARS, of suitings and shirtings fame, yet, is in its infancy, since the work at this dam has been frequently stopped by the activists of Narmada Bachao Andolan (NBA). The work on Narmada Sagar dam, on the other hand, has progressed well after September 2003, when this work was handed over to NHPC by the then CM of M.P. (Sh. Digvijay Singh), and the dam has already been raised to RL 245 m with installation of gates in progress as to achieve FRL of 262.13 m.

In addition to these 4 mega dams, several smaller dams are recommended for construction under the Narmada Development Project, that would redistribute the waters of river Narmada and its 41 tributaries into a series of reservoirs.

*I refer "International and Interstate River Water Disputes" by the same author

**75% dependable flow was worked out to be 28 MAF (MAF stands for million acre feet), which is the average flow of the river.

Regulated releases from the Narmada Sagar dam reservoir will enable a large block of power to be generated through a cascade of dams at *Narmada Sagar*, *Omkareshwar*, *Maheshwar* and *Sardar Sarovar* to the extent of over 2000 MW (installed capacity of 3000 MW), and will supplement withdrawals for irrigation from Sardar Sarovar dam. Omkareshwar and Maheshwar will be only lift dams without any significant storage ; while the *Narmada Sagar Project (NSP)* and *Sardar Sarovar Project (SPP)* will be multi-purpose projects. The benefits shall be shared by the States of Madhya Pradesh, Maharashtra, Gujarat and Rajasthan. Nearly half of the dependable flow of the Narmada river will be stored behind these two dams, but the quantum of regulated flows over the year will be nearly 2/3rd of the available dependable flow.

Prior to the execution of the Narmada Development Project, almost the entire flow of the Narmada river used to be run waste, causing devastating floods during the years of good and heavy rainfall ; and virtually famine conditions during the years of less and scanty rainfall. The famine years of 1999/2000, if had been seen by someone like the Authors of this book, in the entire Saurashtra region, including the major cities of the State of Gujarat, like Rajkot, Jamnagar, Gir Forests, Dwarka, etc., stood a mute witness to the urgent necessity of execution of these projects.

The *Sardar Sarovar dam*, which infact, has correctly been called to be the *life line of the people of Gujarat State*, was sanctioned as late as in October 1988 at a total cost of ₹ 64.06 billion (₹ 6,406 crores) at 1986-87 price level. This investment clearance was given by the planning commission of Govt. of India in Oct. 1988, after thoroughly examining the merits and demerits of the project along with its high B.C. Ratio ; and also after the environmental clearance to the project was given by the Ministry of Environment and Forests of GoI, in the year 1987, after thoroughly studying and debating the environmental impacts of the project, which will be discussed in the next article.

The *Sardar Sarovar dam* is, infact, designed as a concrete gravity dam, having a height upto FRL 138.68 and MWL of 140.20 m. The dam has been designed with the most exacting international standards for its safety in static as well as seismo-dynamic conditions. The irrigation canal system is to serve

* 1 MAF = 1230 M m³ = 1.23 Bm³ (billion cubic metres).

an irrigation command area of about 1.91 Mha. The canals will have a semi-automated operation with a controlled concept. The life of the reservoir, even if assumed most conservatively, would be about 200 years. Besides the main dam, the Sardar Sarovar Project (SSP) includes the construction of a 1200 MW underground river bed power house, a 250 MW canal head power house, a regulation weir downstream of Sardar Sarovar at Garudeshwar (for pump back operation), transmission lines, a water conveyance system including the Narmada main canal (450 km) to the Rajasthan border, branch and distributary canals to transport municipal and industrial water supplies as well as irrigation water, a water delivery and drainage network to serve an irrigation command area of about 1.91 Mha, groundwater development (both for augmenting surface water supplies and for drainage of excess ground water), and command area development works, such as, field supply and drainage channels, land levelling, and rural roads. The project also includes a hydrometeorological network covering the whole Narmada basin, seismic monitoring stations, and establishment of an effective organisation for operation and maintenance of project facilities.

The main direct benefits of this project consists of: (i) irrigation of 1.8 Mha of land in Gujarat, 0.076 Mha in Rajasthan, and 0.038 Mha in Maharashtra. Out of this irrigable command of 1.91 Mha, nearly 75% is drought prone. The project is also to generate 1450 M Watts of hydropower, which is to be shared in the ratio of 57% by Madhya Pradesh, 27% by Maharashtra, and 16% by Gujarat. *The project is also to provide drinking water to 8215 villages and 135 urban centres in Gujarat for the existing population of about 20 Million and the prospective population of over 30 million by the year 2021. It will also provide drinking water to two arid districts of Barmer and Jalore in the Rajasthan State.*

Although the Sardar Sarovar dam (being located in Gujarat State) will largely help the Gujarat State to meet the irrigation and drinking water needs of its own people, besides those of Maharashtra and Rajasthan, yet it will not be able to fulfil the targetted demands, unless it is supported with the regulated water releases from the upstream Narmada Sagar dam (to be located in Madhya Pradesh State). *For this reason, the Narmada Water Disputes Tribunal stated that the Narmada Sagar dam must be completed not later than the Sardar Sarovar dam.*

The early completion of Narmada Sagar Dam project in Madhya Pradesh is not only important for the downstream Gujarat State, but is also of a great significance for the Madhya Pradesh State itself. Since the project on completion, will meet the total power demand of Madhya Pradesh, besides benefitting the entire country by stabilising the power in the western grid. The annual energy generation from this 1000 MW power project will be of the order of 2700 GWh* for Stage I, 1850 GWh for Stage II, and 1515 GWh for Stage III. The project will also provide irrigation to 2.65 lakh hectares on a culturable command area of 1.23 lakh ha. This project, infact, was initially sanctioned by GoI as early as in 1989 at a cost of about ₹ 2000 crores, which has since been revised to ₹ 4355.57 crores (Sept. 2000 Price level). The concrete gravity dam to be constructed under the project will be 653 metres

*1 GWh (giga watt hr) = 10^9 W.h.

long and 92 metres high above the deepest foundation level with FRL of 263.35 m. The dam is divided into 36 blocks, out of which 20 will be overflow blocks of width 20 m each. The total length of ogee-shaped spillway will be 495 metres with a waterway of 400 metres to pass the design flood of 85,534 cumec. The surface power house to be situated on right bank of the river consists of a machine hall (202 m long, 23 m wide and 53 m high), a service way (42 m long, 23 m wide and 24 m high) and a transformer yard (202 m long, 20 m wide) to house 8 Francis type turbines of 125 MW capacity each. The water conductor system has to be a 530 m long, 75 m wide and 50 m deep head race channel with a discharge capacity of 2200 cumecs, leading the water to the power house from the dam reservoir. The water will enter into the power house turbines from the intake structure through 8 pen stocks of 8 m dia. and 157 m length each. The discharge capacity of each penstock is 275 cumecs. After the power is generated in the power house, the water will be discharged back into the Narmada river through a 850 m long tail race channel. The gross reservoir storage capacity of Indira Sagar Dam project is 12.22 billion cum, which is sufficient to meet the domestic water requirement of 100 crore people for the whole year. It will be the largest reservoir in India, and will be 1.25 times larger than the Bhakra reservoir.

The progress on this dam project, though initially was very slow, but has progressed well after the *National Hydro Power Corporation (NHPC) Ltd* was associated with this project to join hands with the Govt. of Madhya Pradesh to form the *Narmada Hydroelectric Development Corporation (NHDC) Ltd.* on April 1, 2000. This Company was entrusted with the task of construction of Narmada Sagar dam project (to generate 1000 MW by 2005) and Omkareshwar dam project (to generate 520 MW of power by 2007). NHDC Ltd is responsible for all aspects of both these projects, including planning, investigation, research, design, preliminary and detailed project reports, construction, operation and maintenance of hydroelectric power stations and projects, and sale of power generated to beneficiary States and release of water for irrigation and other needs in the basin.

This company has been able to expedite the work on the Narmada Sagar dam project, which is nearing completion, with electricity generation already started.

The progress on the Sardar Sarovar Dam being built in Gujarat State had, also, not been upto the mark till the year 2001, when the dam could be raised only upto an elevation (RL) of 90 m, as against the designed height upto elevation 138.68 m. The work on this dam and its associated canal network was infact started in right earnest in the year 1988, but there has remained a lot of opposition and heart burning on the issue of resettlement of the displaced people. The NGO's (Non Govt. Organisations), representing the people coming under the submergence zone of the dam, have been making a lot of hue and cry, opposing the construction of the dam above the height elevation of 80.3 m. *Ms Medha Patkar* of the Narmada Bachao Andolan (NBA) went on an indefinite fast unto death in 1994. The fast could be broken after 26 days, only when the Central Govt. ordered for the stoppage of the work at the dam site. Under such circumstances, the Hon. Supreme Court also granted an ad-interim injunction against the construction of the dam in the year 1995, in a suit filed by the NBA. At this time, the dam was constructed

only upto RL 80.8 m. The work at the dam, had then, remained stand still at RL 80.3 m for about 5 years till the year 1999.

The case of completion of the dam to its designed height was contested by the Gujarat Govt. in the Hon. Supreme Court of India against the NBA, which gave an interim judgement in Feb. 1999, granting permission to the Gujarat Govt. to raise the dam height up to elevation 85 m from the then existing level of 80.8 m. The court also appointed *Justice Desai Committee* to review the rehabilitation work in roughly 245 villages across the Madhya Pradesh, Maharashtra and Gujarat, that were likely to be partly or fully submerged.

Although the activists of the Narmada Bachao Andolan (NBA) had been able to stop the work on the SSP for about five years after they got an interim injunction from the Hon. Supreme Court of India since 1994, but then they lost the case in the final verdict announced by the Hon. Court on 18.10.2000. With this judgement, the work was restarted on this dam, and the dam has already been raised up to an elevation of 121.92 m* after the requisite permissions to raise it upto that level was given by the RR subgroup of Narmada Control Authority, as per the provisions made in this historic judgement of the Supreme Court of India.

By its 2-1 majority judgement, delivered on 18.10.2000 by Hon. justice Mr. B.N. Kripal and concurred by the then Hon. Chief Justice Mr. A.S. Anand, the Gujarat Govt. has in fact, been permitted to go ahead with the construction of the dam upto the height determined by the Narmada Tribunal award (i.e., upto FRL of 138.68 m). It, however, made it clear that the construction of the dam beyond 90 metres height (FRL) will be subject to the clearances from the environmental and rehabilitation subgroups in the Narmada Control Authority, and such clearances are, in fact, to be given for each 5 m rise in the dam height. In case of differences persisting even in the highest forum of the Narmada Control Authority (NCA), i.e. in its Review Committee**, the issue is to be arbitored by the Hon. Prime Minister of India. The court has also ordered for the creation of Grievance Redressal Authorities, headed by the retired judges. These authorities will be consulted by the Resettlement and Rehabilitation (R & R) Sub Group of the Narmada Control Authority before granting clearance for the work on the dam to progress for every 5 m increase

*Although the work on this dam upto RL 121.92 m is almost complete, and the State of Gujarat wants further permission to raise gates over the dam to increase its effective height up to RL 138 m, yet Ms. Madha Patkar of NBA has met Ms. Veena Chhotray—the Chairperson of the R&R sub-group of the NCA, to allege that the people likely to be affected by the storage of water up to RL 121.92 m have not been resettled and shifted by Madhya Pradesh State, although a deadline of March 31, 2007 was fixed by the Shungu Panel, while permitting work on the dam up to that height (i.e. RL 121.92 m). Gujarat is keen to install gates to further raise the dam height up to RL 138 m, as it will help to have an additional storage of 4300 M. cum, besides permitting running of turbines at full capacity for a longer duration. At 121.92 m storage, 11 turbines with a total hydropower capacity of 1450 MW can run to full capacity for only 4 1/2 months after monsoons. With 138 m storage level, it would be possible to run turbines to full capacity for about 6 months after monsoons. The increase of dam height will also help in controlling floods in Bharuch more effectively. But with the Madhya Pradesh, being slow in R&R work, permission to further raise the dam is difficult to come soon, as desired by Gujarat.

**The Review Committee of NCA is chaired by the Union Minister of Water Resources, and do have four Chief Ministers (i.e. CM's of MP, Gujarat, Maharashtra and Rajasthan)

in dam height, beyond the permitted elevation of 90 m*. With the above checks and balances, the majority judgement of the Hon. Supreme Court seems to be totally balanced and it can not be construed as a decision against the NBA or in favour of the Govt. of Gujarat, as has been made out by NBA or by some of our worthy politicians. The fact that the authorities have to seek clearance from the subgroups for environment and R & R for every increase in the dam height by 5 metres, speaks volumes about the excellent safety mechanism that has been built into the project by the Hon. Supreme Court.

In its above judgement, the Hon. Supreme Court has also pulled up the Govt. of Madhya Pradesh for not doing enough on the resettlement and rehabilitation work required for the people who are likely to be affected in Madhya Pradesh due to the back water effect of the reservoir storage. The plea extended by the M.P. Govt. that it does not have enough land for resettling the project affected people (PAP) did not appear to be true to the Hon. court, since the State is possessing the largest area and the density of population is not as high as in several other States. It is only a question of political will and the State Govt. getting its act together to acquire suitable land and make efforts to relocate and rehabilitate the PAP, which in any case has to be done at the cost of Gujarat**.

One thing can, however, be said with certainty that the R & R package for the SSP, definitely, is much better than the earlier adopted ones, in other water resources projects of the country, since it envisages proper resettlement or relocation and subsequent rehabilitation of the PAP rather than simply giving them monetary compensations, as in the past.

In its final verdict, the Hon. Supreme Court has also very rightly commented on the environmental impacts of large dams stating that "what is being constructed is a large dam. It is neither a nuclear establishment nor a polluting industry. The construction of the dam would undoubtedly result in the change of environment, but it will not be correct to presume that it will result in ecological disaster."

The Hon. Court in the judgement has also said that "The Experience does not show that the construction of a large dam is not cost effective, or leads to ecological or environmental degradation. On the contrary, there has been ecological upgradations with the construction of large dams."

The Hon. Supreme Court also commented on the past experience in regard to the living conditions of the people in developed and undeveloped areas,

*The majority judgement thus, means that the dam height could go upto FRL 138.68 m, subject to obtaining sanctions in stages from environment subgroup as well as R & R sub group of Narmada Control Authority. The dissenting Judge, Mr. Justice S.P. Bharucha however, felt that the project required reconsideration in view of the fact that proper environmental clearance had not been obtained in the late eighties when the project was cleared by the Centre. However, naturally this could not have been concurred by the majority of Judges, due to the fact that the dam had already been constructed up to RL 85 m, and permission already granted to go up to 90 m; and hence reconsideration of the entire project was neither feasible at this belated stage, nor it was felt necessary since the project was neither a polluting industry nor a nuclear establishment which could have caused environmental disasters.

**While the relocation cost of PAP in M.P. has to be borne by the Gujarat State, the land

when it wrote "A properly drafted R & R plan would improve the living standards of the displaced persons after displacement. For example, residents of villages around Bhakra Nangal Dam, Nagarjun Sagar Dam, Tehri, Bhilai Steel Plant, Bokaro and Bala Iron and Steel Plant, and numerous other developmental sites are better off than people living in villages in whose vicinity no development project came in".

Eventually, the highest court of the land has accepted that the living standards of the PAP as well as of other people living in the vicinity of the dam site will get improved after the construction of the dam, when once they start sharing the benefits of the project.

Some people, particularly those connected with the NBA, did, however, criticise the verdict. Ms Medha Patkar, the chief of NBA soon after judgement, even went to the Press to say that she will sacrifice her life and take to 'Jal samadhi', the day the height of the Sardar sarovar dam is raised even by an inch above 88 metres. She also announced that NBA would form suicide squads, and ask the people not to vacate their villages, come what may. Ms Patkar's emotional call given to the NBA activists soon after the Court Verdict, to be prepared for a "fight to finish", was a clear indication of her commitment for not allowing the construction of the dam, irrespective of the satisfaction with which the R & R work is done. It also showed that the NBA had no faith in arbitration, or the judiciary over whose decision the NBA was earlier rejoicing, when the interim injunction was granted in 1994 against the continuation of work on the dam. If NBA was not prepared to accept the verdict of the Supreme Court, then why at all, it filed a petition in that court? In view of the above facts, the statement of Ms Aurndhati Roy, another chief activist of NBA, calling the final judgement of the court as "disgraceful", could not be appreciated.

Eventually, the flight from NBA did not stop even after the clearcut verdict of the Hon. Supreme Court. Although the NBA activists remained somewhat dormant for about five years after the Hon. Supreme Court issued contempt notices to some of their activists, but they again intensified their agitation in March 06, when permission was given to the Gujarat government by the Narmada Control Authority on 8.03.2006 to further raise the dam height from RL 110.64 m to RL 121.92 m. The NBA again shouted to stop the work on the dam on the plea that proper R & R work of the families likely to be affected by raising of the dam height to RL 121.92 m has not been completed in Madhya Pradesh State. Ms Medha Patkar alongwith some other activists started a dharna at Jantar Mantar in New Delhi. Ms Patkar went on an indefinite fast unto death to pressurise the Central Govt. to order stoppage of work on the dam. The Union Govt., as a matter of fact, under pressure constituted a group of three cabinet ministers, which made a site visit to make an on the spot assessment of the R & R work. This group of Ministers (GoM) pointed out certain flaws in the R & R work. This forced the Chief Minister of Gujarat to sit on a 51 hr fast against stoppage of work on the dam. The case again came up for hearing in the Hon. Supreme Court on 17.04.2006, when the Hon. Court permitted the Gujarat Govt. to continue with the work on the dam, but made it clear to the involved States that if the

R & R work of the unfortunate oustees is not granted in true letter and spirit, the court will have no option but to stop the work on the dam. Notices were issued to the involved States to present their point of view in regard to flaws in R & R work. The Central Govt. during their hearing stated that it was in favour of the dam, but wanted proper completion of R & R work within 3 months time.

Ms Medha Patkar on the evening of 17.04.2006, called off her 20-day long hunger strike, but said that their struggle would continue. Expressing satisfaction over the Supreme Court order, the Gujarat CM Mr. Narendra Modi, who had gone on a hunger strike on 16.4.06 in favour of raising of the dam, also ended his fast, exactly 27 hours of its start.

Be that as it may, the fight from NBA is not yet over, and the construction of the dam upto its full designed height continues to get delayed.

While the NBA is continuing its agitation against the construction of the dam, and has been frequently causing the stoppage of work, the project costs are escalating. With over ₹ 21,000 crores (₹ 210 billion) already spent on Sardar Sarovar as against the original sanctioned cost of ₹ 6406 crore. The revised cost in 91-92 was ₹ 13,180 crores; which may, at present rates, go up to ₹ 30,000 crores, or even much higher. The infighting between the water-sharing States, and the undue interference by NGOs is, thus, causing a tremendous loss to the Nation. The agony and detriment of the people of Gujarat, as faced by them in the three consecutive drought years of 1985-1987*, and again in 1998-2000, also continues. As a matter of fact, Gujarat not only suffers in drought years but also suffers in flood years, such as in the year 1994, when huge damages to life and property occurred due to floods in the riverine reach over 100 km, comprising more than 200 villages and the city of Broach.

21.6. Environmental Impacts of Sardar Sarovar Project

The Sardar Sarovar and the Narmada Sagar dam projects were the first of the large multi-purpose water-resources projects of India, which were thoroughly studied for their environmental impacts, before granting them environmental clearance by the ministry of Environment and Forests-Gol, and the subsequent investment clearance by the Planning Commission GoI. These projects were cleared by the Ministry of Environment and Forests in 1987, after thoroughly discussing and debating the possible environmental impacts of the projects (good as well as bad), with the suggested environmental improvement measures to be taken by the project implementing States, either prior to or during the execution of the projects. We shall herein discuss the various environmental impacts of the Sardar Sarovar project, in particular.

* In these drought years, 1.6 million cattle along with shepherds had to migrate over 500 km in search of food and fodder. Thanks to the philanthropic communities of Gujarat that most of the cattle survived though thousands perished. Also during the same period, water to Rajkot city of Gujarat had to be supplied at the rate of ₹ 225 per kL (i.e. m³) which is more than twice the cost of desalination of sea water by reverse osmosis. Similar scenes occurred in 1999/2000, when even riots took place over the shortage of water.

The various possible adverse environmental impacts of the Sardar Sarovar project, including the post dam effects, can be discussed under the following heads:

- (1) Submergence causing loss of Agricultural and Forest land including displacement of people
- (2) Loss of wild life (Flora and Fauna)
- (3) Displacement of Tribals living in harmony with forests
- (4) Submergence of the Ancient Monuments
- (5) Water-logging and salinity of the land to be irrigated by the Dam Project
- (6) Sedimentation rate affecting the life of the reservoir
- (7) Seismic Effects of Reservoir
- (8) Health aspects and possible increase in Malaria and other water related Diseases.

All the above environmental impacts, in respect of Sardar Sarovar Dam project, are discussed below:

(1) **Submergence Causing Loss of Agricultural and Forest Land including Displacement of People.** As you know, the most important adverse environmental impact of a water-resources project, like the SSP and the NSP, relates to the loss of agricultural and forest land, coming under the submergence zone of the high dam, and the consequent displacement of the affected people. These adverse impacts will, in any case, have to be absorbed by adopting suitable mitigation measures, when other benefits of the project (like flood control, hydropower generation, storage of water for irrigation and water supply, etc.) outweigh these impacts and the execution of the project becomes much more useful and beneficial to the general public as a whole, as in the present case, when water supply to the thirsty Gujarat alone is enough to justify its execution.

However, in order to minimise the adverse effects of submergence, it becomes necessary to provide a very liberal and compassionate rehabilitation and resettlement package to the affected people, and to keep the submergence area of the dam to the minimum possible. In order to minimise the submergence zone of a dam, the dam height needs to be reduced. But then, the necessity of storage, puts a limit on the dam height, which cannot be reduced beyond a certain minimum value, under the considerations of optimum planning techniques, and requirements & availability of water supplies.

In the case of SSP, the dam height was earlier recommended to be upto FRL 152.44 m by the Khosla Committee in the year 1965. The State of Gujarat wanted to increase this recommended height of the dam, while the State of Madhya Pradesh wanted it to be reduced. Even when the entire dispute was discussed and debated before the Narmada Water Disputes Tribunal, the State of Gujarat pleaded that it may be allowed to construct SSP with a height upto FRL 161.6 m to have a storage of 22.2 km^3 ; but the tribunal after thoroughly examining various alternatives, decided for a dam of height upto FRL 138.68 m at this location, giving a live storage of

5.8 km^3 only. The Tribunal allowed this reduced height to reduce the submergence area, as to cause inconvenience to the minimum number of people. This height of FRL 138.68 m was declared by the Tribunal as the height, which would cause less hardships but would give larger benefits. Since the live storage of 5.8 km^3 with the dam height of FRL 138.68 m, would not have been sufficient, the Tribunal also provided for the construction of upstream Narmada Sagar dam of 125 m height with FRL of 262.13 m in the State of Madhya Pradesh, from which regulated water releases would compensate the water needs of the downstream States of Gujarat and Maharashtra. The State of Gujarat accepted the decision of the Tribunal in the best of the spirits, and did not plead for any changes in its decision. Although the decisions of the Tribunal are final and binding on the riparian States, yet the State of Madhya Pradesh continues to create controversies, by delaying the resettlement of the affected persons in its State; and by making appeals at political forums as well as at the Hon. Supreme Court of India, for reviewing the decision of the Tribunal, which though is final and binding till the year 2025. This inspite of the fact that the decision of the Tribunal cannot even be challenged in the Hon. Supreme Court in terms of the provisions of the Inter-State River Water Disputes Act.

With the above decided dam height of FRL 138.68 m of the Sardar Sarovar dam, the following submergences have been worked out.

Table 21.1. Submergence Details of SSP (138.68 m FRL)

State	Area of Submergence in hectares				No. of villages to be submerged	
	Agriculture land	Forest land	River bed / Waste land	Total land	Fully	Partly
Gujarat	1877	4523	1,069	7,469	3	16
Madhya Pradesh	7883	2737	10,208	20,828	—	193
Maharashtra	1519	3459	1,592	6,570	—	36
Total	11279	10719	12,869	34,867	3	245

The submergence in Madhya Pradesh in terms of number of villages appears to be very high in terms of figures (193 No) but out of these 193 villages, there are 116 villages, whose agricultural land coming under submergence is hardly 20 ha (as against the average agricultural land per village equalling 350 ha or so). Thus, only 77 villages are left with 2100 families, where private land going under submergence is more than 20 ha in a village, as can be seen from the data given in Table 21.2.

Table 21.2. Submergence Details of SSP (138.68 m FRL)
in Madhya Pradesh State Alone

Particulars	No. of villages submerged	Private land coming under submergence in ha	% of total Agricultural land coming under submergence	Families affected	Remarks
Total no. of villages affected	193	6700	12	14824	
Total no. of villages where less than 20 ha of land gets submerged	116	613	1.95	12724	Marginal submergence
Total no. of villages where more than 20 ha of private land gets submerged	77	6087	25.3	2100	Substantial submergence

More details of 77 villages, where substantial submergence is to be caused, are given in table 21.3, below :

Table 21.3. Degree of Submergence in 77 Villages which are Substantially Affected in Madhya Pradesh by SSP

Degree of Agricultural land affected in each village	No. of villages	Private land under submergence in ha	Submerged land % age of total Agricultural land
Less than 20%	31	1431	11.40%
between 20% to 40%	17	1821	28.76%
between 40% to 60%	17	1425	50.00%
between 60% to 80%	7	1023	68.40%
between 80% to 100%	5	387	88.60%
	77	6087	25.3%

It can be seen from table 21.1 that the total area coming under submergence of the Sardar Sarovar dam project will be 34,867 ha extending in three States of Gujarat, Madhya Pradesh and Maharashtra. This submergence would be only 1.82% of the total culturable command area (CCA) of about 1.91 Mha to be benefitted by the project in the three States of Gujarat, Maharashtra and Rajasthan.

The area submerged per unit volume of water stored (ha per $M m^3$) for SSP is further worked out in table 21.4 to be 6.01, as against the value of 2.15 for Bhakra (H.P.), 4.19 for Nagarjuna Sagar (A.P.), 8.67 for Gandhi Sagar (M.P.) 12.67 for Hirakud (Orissa), 9.86 for Maithon (W.B.), 9.80 for Tungabhadra

Table 21.4. Statement showing the Height, Live Storage, Submergence and Benefits of Some Major Water Resources Projects in India

Sr. No.	Name of the Project	State	Height (m)	Live storage (Mm^3)	Submergence (ha)	Irrigation (ha)	Power (MW)	Irrigation benefits (ha) per ha of submergence	Percentage of area submerged to area irrigated	Submergence per Mm^3 of storages (ha)	Irrigation per Mm^3 of power (ha)	Submergence per MW generation (ha)
1	Sardar Sarovar	Gujarat	183	5800	34867	1912150	1450	54.85	1.82	6.01	308.97	24
2	Narmada Sagar (Punase)	M.P.	125	9750	81300	256000	1000	2.804	35.86	9.36	26.25	91
3	Sardar Sarovar & Narmada Sagar Combined Complex	Gujarat & M.P.	—	15550	126167	2168150	2450	17.18	6.82	8.11	139.43	51
4	Tehri	U.P.	261	2615	4200	270000	1000	64.286	1.55	1.61	103.25	4
5	Kishau	U.P.	233	1230	2325	271000	—	118.559	0.86	1.89	220.32	—
6	Bhakra	H.P.	226	7800	16800	676000	1354	40.238	2.48	2.15	98.67	12
7	Idukki	Kerala	189	1459	6000	—	390	—	—	4.11	—	16
8	Srisailem	A.P.	143	4370	59600	—	770	—	—	13.62	—	77
9	Beas at Pong (H.E. Project)	H.P.	133	7290	28271	2100000	380	74.281	1.35	3.83	288.08	79
10	Nagarjuna Sagar	A.P.	125	8800	28500	896000	816.6	31.404	3.18	4.19	131.62	35
11	Koyana (Siveji Sagar) (H.E. Project)	Maharashtra	103	2680	31363	—	680	—	—	11.70	—	66
12	Rihand (H.E. Project)	U.P.	93	9000	46820	—	300	—	—	5.18	—	165
13	Utai	Gujarat	81	7200	80065	32000	300	5.32	18.78	8.35	44.44	200
14	Bhadra	Karnataka	72	1785	11251	106000	25	9.421	10.61	6.30	59.38	450
15	Mahai Bajaj Sagar	Rajasthan	65	1712	13300	80000	37	8.015	18.62	7.77	46.73	359

Contd...

Sr. No.	Name of the Project	State	Height (m)	Live storage (Mm ³)	Submergence (ha)	Irrigation (ha)	Power (MW)	Irrigation benefits per ha of submergence	Percentage of area submerged to area irrigated	Submergence per Mm ³ of storage (ha)	Irrigation per Mm ³ of power (ha)	Submergence per MW generation (ha)
1	2	3	4	5	6	7	8	9	10	11	12	13
6.	Lower Sileru (H.E. Project)	A.P.	67	376	2787	—	600	—	—	7.37	—	5
7.	Kadana	Gujarat	66	1203	17008	211700	240	12.447	8.03	14.14	176.98	71
8.	Gandhi Sagar	M.P.	64	7630	66186	603200	116	7.605	13.15	8.67	65.95	575
9.	Sharavathy (Jangamakki)	Karnataka	61	4260	33780	—	891	—	—	7.93	—	38
10.	Hikal	Karnataka	60	1387	7100	139000	23	19.577	6.11	6.12	100.22	254
11.	(Ghata Prabha)	Orissa	58	5830	73992	251150	270	3.399	29.42	12.67	43.08	274
12.	Hirakud	Karnataka	59	927	8500	263000	—	31.176	3.21	9.17	286.87	—
13.	Hemawathy	Maharashtra	61	1088	7760	94000	85	12.129	8.24	7.12	86.40	91
14.	Totladoh (Pench)	Bihar	56	736	7257	—	60	—	—	9.86	—	121
15.	G.H.E. Project	Bihar	49	392	5957	—	40	—	—	16.20	—	149
16.	Maithan	Karnataka	48	843	79000	—	160	—	—	93.71	—	494
17.	(Upper Krishna)	U.P.	46	770	13085	165750	31	12.657	7.99	16.99	215.26	422
18.	Matatila	Bihar	45	216	3160	30351	4	9.047	10.41	14.63	140.61	790
19.	Tilaiya	Karnataka	43	3860	37814	372000	36	9.836	10.16	9.80	96.37	1050
20.	Tungbhadra	A.P.	43	2322	44157	230879	36	5.224	19.14	19.02	89.34	1227
21.	Pochampad (Shriram Sagar)	Maharashtra	43	2171	35000	278000	12	7.943	12.59	16.12	128.05	2917

—Madhya Pradesh, U.P.—Uttar Pradesh, H.P.—Himachal Pradesh, A.P.—Andhra Pradesh

(Karnataka), and 19.02 for Pochampad i.e. Shriram Sagar (A.P.). [Pl. see col. (11) of table 21.4]

Similarly, the value of submergence per MW of hydro power produced (ha per MW) for SSP is worked out in Table 21.4 to be only 24, as against the figures of 12 for Bhakra (H.P.), 35 for Nagarjuna Sagar (A.P.), 575 for Gandhi Sagar (M.P.), 274 for Hirakud (Orissa), 121 for Maithan, 1050 for Tungbhadra (Karnataka), and 1227 for Pochampad (A.P.).

In the same manner, the value of submergence area as ratio of the irrigated area for SSP comes to about 1.82 as against the value of 2.48 for Bhakra, 3.18 for Nagarjuna Sagar, 13.15 for Gandhi Sagar, 29.42 for Hirakud, 10.16 for Tungbhadra, and 19.14 for Pochampad. These comparisons are shown in col. (10) of the calculation table 21.4.

It can thus, be seen that when compared to all other water resources projects of the country, the SSP is giving better returns, involving lesser submergence.

The strongest objection raised against the project was that the loss of about 11000 ha of valuable forest land would be too high and will cause a great loss of forest wealth, besides causing loss of wild life and displacing 1 lakh tribal population. It was clarified in this connection that virtually all of the 11000 ha (exact figure 10719 ha) of forest land to be submerged by Sardar Sarovar is severely degraded or denuded. It was also argued that the loss of about 11000 ha of forest is not a great loss, when compared to the annual loss of about 20,000 ha of forest trees in the country due to illegal felling of trees to quench the commercial, industrial and fuel wood needs of the society. However, while granting clearance to the project, compensatory afforestation was made mandatory by the GoI in the States, to plant new forests in an equivalent area to be submerged, or to plant new trees in an area twice as large if this afforestation is to be done on the existing denuded or degraded forest land. The points regarding loss of wild life and displacement of tribals is explained below :

(2) Loss of wild life (Flora and Fauna). Regarding loss of wild life, it was clarified that the project will neither cause any loss of flora and fauna of the area, nor any wild life sanctuary will come under the submergence area. On the other hand, the project will help to develop five sanctuaries by making the available water throughout the year. These five sanctuaries include the development of one new sanctuary for the Great Indian Bastard in Kachahh, besides helping in the development of 4 existing sanctuaries. One of these 4 existing sanctuaries include the existing wild life sanctuary known as *Dhumkhal Sloth Bear Sanctuary* on the left bank of the Narmada river in an area of about 150 sq km, which is to be extended upto reservoir shore line to provide access to water for the animals. The total area of this extended sanctuary will be about 447 sq km. The sanctuary is renamed as "*Shoolpaneshwar Wildlife Sanctuary*". With provision of fence and other conservation measures, this area will become a rich medium for preservation and protection of flora and fauna. The other existing sanctuaries in the command area of the project, which will be benefitted, include : the *Nal Sarovar Sanctuary*, famous for attracting 120 to 150 species of migratory birds ; *Wild Ass Sanctuary* in the little Rann of Kuchchh ; and the *Black Buck*

Another important benefit of the project, mentioned by the authorities, was in regard to the *development of fisheries*, which is planned for the benefit of the Project Affected Persons (PAP) and persons residing on the reservoir periphery, who are essentially tribals. The work plan includes 10 ha fish farm and hatchery, stocking of major crops and other commercial fish, providing infrastructure fish landing sites, cold storages and transportation, etc.

(3) **Displacement of Tribals Living in Harmony with Forests.** The argument of the anti dam lobby regarding displacement of tribals living in pristine forests in traditional manner as hunter gatherers in harmony with the forest environment, was called by the project formulators as a myth. The satellite imagery supported with field data has in fact confirmed that the tribals, at present, are farming barren, stoney and increasingly degraded hill sides, with a small and decreasing part of their income derived from the forest land. Most of them would welcome the opportunity to improve their lot in the more fertile and more sustainable command area of the project. A substantial proportion of tribals, appears to be seeing a little future in the increasingly degraded submergence area. Indeed, it is within this tribal group that there appears to be the least opposition to the dam. However, the greatest opposition to the dam is alleged to be from the wealthy non-tribal farmers and vested interests, who may lose their business of tree felling in the area coming under the submergence zone of the dam.

The statement that about 1 lakh tribals would be affected was also not accepted by the project proponents, as the magnitude of rehabilitation is much smaller, as already explained in tables 21.1 to 21.3. It was also stated that out of the total population to be affected by the dam, hardly 50% can be considered as tribals. Besides the tribals are now influenced by the culture and civilisation of the mainstream of the country's rural life.

The Sardar Sarovar dam with full designed height upto FRL 138.68 m, as a matter of fact, will submerge only 3 villages fully and 16 villages partially in Gujarat State. Thus, the submergence problem in Gujarat is not much. In Madhya Pradesh State also, though the number of villages affected appears to be more, yet it is confirmed that about 7000 families do not lose their agricultural land but only home steads. They are likely to be resettled in the nearby higher and safer areas in Madhya Pradesh. Additional 5724 families will have only marginal submergence, and they would also like to settle in Madhya Pradesh itself. Hardly 2000/3000 families may opt for rehabilitation in Gujarat. In majority of cases, local protection may be sufficient. The improved resources and prosperity after the fruits of the dam become available, will also help in the prosperity of the displaced people. *The rehabilitation work of the displaced persons will however, not be unmanageable, provided the affected States develop a will to implement the project.*

In addition to the above discussed major environmental losses like *submergence of forests and land, and displacement of people and wild life*, other environmental impacts which were studied in the Environmental Impact Statement/Assessment of the project are also briefly discussed below :

(4) **Submergence of the Ancient Monuments.** The survey of the villages likely to be submerged was carried out by the Directorate of Archaeology, and the following findings were given :

(1) *That no protected archaeological monument lies in the submergence area of Gujarat.* However, certain local temples and pilgrimage centres, which are likely to be affected in the 12 villages of Gujarat State include :

(i) A temple known as *Shoolpaneshwar Mahadev* at the village Supan in Nanded taluka of Bharuch district.

(ii) Small temples of surrounding areas, known as *Kamleshwar temple, Rajrajeshwar temple and Ranchhodi temple.*

(iii) *Hanfeshwar Mahadev temple* at village Harif, taluka Chhotoudepur in Vadodara district.

In the DPR, all such temples were promised to be shifted and relocated to suitable places.

(5) **Water-logging and Salinity of the Land to be Irrigated by the Dam Project.** One of the most adverse impact of a big dam project on its irrigated area, is caused by water-logging of the irrigated land, which reduces the crop yield. Water logging is a consequence of insufficient drainage, and is often caused by deep percolation of excess surface irrigation water over the years, leading to rise in water-table near the ground surface. In the extreme, water-logging leads to salinity.

Although the losses of surface irrigation water to the underground are unavoidable to a degree, yet proper field irrigation techniques can reduce them to a minimum. Moreover, such losses can be recovered in large part, through pumping of ground water (i.e. by recycling), which in any case, will help keep the water-table low, to avoid water-logging.

Conjunctive use of surface and ground water thus proves to be an effective means to increase the overall efficiency of water use, and also to provide sufficient (vertical) sub-surface drainage. Where such conjunctive use is not possible (because of saline ground water), pumping and dumping of groundwater may still be feasible. In other cases, other (horizontal) drainage arrangements can be chosen.

In order to prevent water logging and salinity, the anti water logging and anti salinity measures have been built in the planning, design, implementation and operation of the Sardar Sarovar project. Say for example, the water distribution system (i.e. canal network) is designed to achieve the highest efficiency of water use, with a very low Delta (Δ) in the field. This system is designed to supply irrigation water on volumetric basis, ensuring that the farmers get water in proportion to their actual land holdings. Conjunctive use of ground and surface water is also aimed at, with continued monitoring of rise in water-tables with the installation of more than 4000 piezometric or well observations.

The irrigation supplies are basically designed conservatively and conjunctively to provide 53 cm of surface water for one crop in a year (measured at the canal head) and 18-20 cm of ground water for each crop. The

ground surface, which causes water logging, and salinity with continued water-logging.

The main canal and branch canals are also proposed to be lined with concrete, and distribution system will be lined with bricks with LDP films wherever necessary. This will help in keeping percolation of water to the minimum.

The Sardar Sarovar Project also emphasised that varying irrigation doses have been fixed in the command area by studying the soil types and their water needs. Detailed soil surveys were hence carried out to find out soils which are not suitable for sustained irrigation, necessitating reduction in irrigation supplies. For this purpose, the entire command is divided into 13 zones.

In the distribution of water also, it is planned to hand over supplies to the farmer's cooperatives, which will be distributing water among their members according to well laid out principles, thereby achieving maximum saving in water. The operation and maintenance of the delivery system up to 8 ha blocks will be done by the project authorities; while the operation and maintenance of the distribution system below 8 ha blocks will be done by the beneficiaries. The system will be operated through a computerised control down to the channels of 8.5 m³/s. From this limit, down to a Village Service Area (VSA) of about 500 ha, the system will be operated by the project organisation. At VSA, the water will be handed over to the farmer's cooperatives for management at their level.

The water management through group cooperatives is likely to succeed in Gujarat, since Gujarat has the experience of successful working of cooperative societies in milk production, where it has become the world leader. The water cooperatives are, thus, likely to succeed like milk cooperatives.

Training programmes have also been drawn up for the project operation staff as well as the farmers for efficient water management and improved practices for irrigated agriculture. The State possesses one of the most advanced water and Land Management Institutes (WALM) in the country to help in conducting these trainings.

As stated above, the entire network of main and branch canals are to be lined with cement concrete. Not only that, but for the first time in India, mechanised and qualitatively well controlled concrete lining is adopted on such a large scale. This lining process is similar to the one being followed in advanced countries like U.S.A.

Moreover, the canal banks and their junctions with structures are designed to be constructed on the principles of conventional zoned earth dams, with an impervious core to prevent seepage through the canal banks. Very few canals in the world have been designed and constructed with such meticulous details and care.

Another special feature of this project was stated to be the *pari passu* development of surface drainage system with the construction of canals and distributaries. The earth required for building canal banks will be borrowed from the drains, new as well as existing, which have been planned after

detailed field surveys. The village tanks are proposed to be deepened for the same purpose, which will also help in recharging the ground water.

The Sardar Sarovar Project, thus, claims to have eliminated every source of water-logging, in the project formulation itself. There is, hence, no cause for worry on account of water-logging, although the ground water levels will have to be watched, and preventive measures, such as additional pumping of ground water, taken, if becomes necessary.

(6) Sedimentation Rate Affecting the Life of the Reservoir. One of the adverse view against the construction of big dams is considered to be the high siltation rate, which reduces the life of the reservoir. In the case of Sardar Sarovar also, certain people have alleged that the life of this reservoir will be hardly 60 years. The project authorities, however, clarified in their report that the life of the Sardar Sarovar will be much higher, say between 180 to 230 years, since the project is unique in respect of the availability of space for absorbing the incoming silt as discussed below.

The canal off takes at RL 91.46 m and the low water level from the point of view of power generation is 110.67 m. Thus, a very large dead storage of 3.66 km³ (2.97 MAF) is available for accumulation of silt before the silt deposits can have significant encroachment on the live storage capacity of the reservoir. The committee set up by the Govt. of India under the Chairmanship of U.N. expert Mr. M.L. Diwan to study the soil erosion in Narmada catchment area found that the siltation rate is likely to reach the danger level of 5 ham (0.05 km³) per 100 sq km. The calculation for the life of the SSP were, infact, made on the basis of silt generation of 5.34 ha. m (0.0534 km³) per 100 sq km of catchment, which is more than the likely siltation rate recommended by the Diwan Committee.

The rate of siltation in Sardar Sarovar will infact depend upon the construction of 29 reservoirs in the Narmada basin, as planned in Madhya Pradesh, especially the Narmada Sagar. All the assessments of useful life of the Sardar Sarovar show that, if these upstream reservoirs are built in a reasonable time, the life of the Sardar Sarovar will not be less than 233 years. In the worst case of Narmada Sagar project being inordinately delayed for 25 years after the Sardar Sarovar is completed, the life of the SSP may be reduced to 180 years.

Even with our past experience of siltation of existing dam reservoirs, it has been noticed that the sedimentation rates are not alarming, since the sedimentation rates, even though remain higher for the first 15-20 years, fall off significantly, thereafter. Even some of the reservoirs having completed their planned life are still continuing to serve and provide partial benefits.

The apprehensions about the low life of the reservoir are, thus, unfounded and not correct.

(7) Seismic Effects of the Reservoir. Seismicity and the potential for the reservoir induced seismicity for the Sardar Sarovar and Narmada Sagar dams have been studied by the Geological Survey of India, Roorkee University, and the National Geological Research Institute, Hyderabad. It has been concluded that the formation of water reservoirs in the area may cause

the seismic potential of the region, the dams have been designed to withstand earthquake shocks of magnitude 6.5 (Richter scale), with effective peak ground acceleration of 0.2 g. The proposed construction of the dams, therefore, does not pose any threat of enhanced earthquakes in the region, and the dams are likely to be totally safe in themselves.

Even otherwise, the international study of 425 large dams in different parts of the world has shown that only in case of 1.2% of dams, some cognisable seismic effects were observed, but they too were not reaching any destructive dimensions. World's highest dam, Nurek, in USSR (300 m high-earth dam), has already withstood a seismic shock of intensity 7 on Richter scale, having been situated in a highly seismic region.

Similarly, out of India's 3000 large dams, only Koyna and Bhatsa dams experienced some earthquakes but not at the time of reservoir filling. They were perhaps the normal earthquakes, just coinciding with the project location, by chance. Seismological observations established at the sites of other major Indian dams like Bhakra, Pong and Ramganga, etc., in the fragile Himalayan terrain, have not registered any increase in seismicity due to impounding of water.

Be that as it may, the risk posed by the triggered earthquakes if any, can be mitigated by careful control of the rate at which the water level in the reservoir is changed. The CWPRS, Pune, has been entrusted with the task of seismic surveillance of the area, for which a network of seismological observatories around the reservoir sites is being set up. There is, however, nothing much to worry on this ground.

While discussing the above impact, during environmental clearance debates, it was also pointed out that although the dam and its abutments have been checked to be safe against earthquakes, yet there was a need for conducting geomorphological studies on the stability of reservoir rim slopes, and to suggest and take appropriate engineering measures such as contour bunding, bench terracing, gully plugging etc., wherever required. The project proponents did promise to conduct such studies, which must have been completed by now.

(8) **Health Aspects and Possible Increase in Malaria and other Water Related Diseases.** The construction of a large water reservoir, and the large scale use of the stored water for perennial irrigation is claimed to be a potential factor for increasing diseases like malaria, schistosomiasis, etc. in the project area of a large dam reservoir project. Considering this, detailed surveys are usually carried out to determine the existing health status along with preparing a future plan to create proper authorities who can take suitable control measures along with doing continuous monitoring of the health of the general public of the area.

While discussing on the above environmental impact, it was clarified that the National Institute of Communicable Diseases had carried out detailed studies in the area of Gujarat, and concluded that the future irrigation facilities to be developed over 17 years period, are not likely to create any such risk in the area. Subsequent studies carried out by a team led by the Chief of

Schistosomiasis Division of W.H.O., have also concluded that the project area did not have any risk of schistosomiasis entering the area.

It was also stated by the Gujarat Govt. that there was no chance for any increase in the incidence of malaria by the reservoir storage, since the operation of the reservoir itself inhibits the proliferation of the malaria larvae; since while the reservoir builds up the storage during the monsoon rains, the larvae, which prefer to stay around the periphery, get drowned and thus, destroyed. Similarly, when the water is withdrawn for power generation and irrigation, the larvae are stranded and destroyed.

The various State Govts. also promised that their Directors of Health Services will be directed to monitor at intervals, the incidence of water borne diseases in their respective project areas, and the project authorities shall remain in touch with the Health authorities to ensure implementation of preventive measures, found necessary.

21.7. Assessment of Environmental Losses and Economic Viability of Sardar Sarovar and Narmada Sagar Projects

While assessing the environmental losses in monetary value, the total land lost in submergence was evaluated by the Deptt. of Environment and Forest, GoI, on a unit rate of ₹ 12.67 bn per ha of fully grown forest having tree density of 1, for 60 years. The density of forest coming under Sardar Sarovar was adopted as 0.4, as against the actual observed value of 0.1 for Sardar Sarovar worked out on actual enumeration of trees of 216 per hectare. The density for Narmada Sagar dam is however evaluated at about 0.48.

On the basis of the above hypothetical rate, the losses for Sardar Sarovar were computed to be ₹ 61 bn, and for the Narmada Sagar to be ₹ 253 bn, thereby computing the total loss to be ₹ 61 bn + ₹ 253 bn = ₹ 314 bn.

As against the above losses, the benefits were worked out as under :

(i) Irrigation benefits	₹ 469.1 bn
(ii) Power benefits	₹ 113.4 bn
Sub Total	₹ 582.5 bn

Allowing for the additional income in agricultural sector every year on account of additional agricultural employment potential of ₹ 105 bn, the total benefits were worked out to be ₹ 687.50 bn, which would outweigh the environmental losses of ₹ 314 bn. With this estimation, the B.C. ratio was worked out to be 2.19.

Economical appraisal of the project was, in fact, further conducted by an independent agency i.e. Tata Consultancy Services, in 1981-82. They have worked out a B.C. ratio of 1.84.

This project was further examined by the World Bank in 1985, at the time of sanctioning credit. They adopted the method of computing the "rate of internal return" for the project, and computed it to be 12%, as against the value of minimum internal rate of return recommended to be 9% for water resources projects in general, and 7% for drought prone and chronically flood

prone areas. These minimum limiting values of 9 & 7% for minimum internal rate of return, were infact recommended by a committee constituted by the Planning Commission GoI, under the chairmanship of Dr. Nitin Desai. Since the computed rate of internal return was more than the minimum specified value, World Bank termed the project to be economically beneficial and viable.

The B.C. ratio was again worked out by the Planning Commission in 1989, while granting clearance to the project, as 1.999.

21.8. World Bank's Views on Environmental Impacts of Sardar Sarovar Project

While clearing the World Bank credit* for the SSP in its initial stages, the environmental impacts of the Sardar Sarovar project were summed up by the World Bank, through their following observations :

"With respect to the environmental impacts, the project has both negative, positive, and mixed or neutral impacts".

Negative impacts, mainly include *loss of wild life habitat, loss of land classified as forest* (11,000 ha in the SSP reservoir, although much of it is very degraded and sometimes unrecognizable as forest or viable habitat), *loss of religious/cultural sites* (temples will be moved or protected) and *some increase in human and live stock pressure on surrounding areas*. It appears from survey that it is unlikely that any animal or plant species would be actually lost due to submergence.

Positive impacts mainly include : (1) a *net improvement in health*, since it seems probable that, although irrigation may result in some increase in certain types of water-related disease if prevention is not handled adequately, yet adequate supplies of domestic water are likely to give greater health improvement ; (2) an *increase in annual volume of wood production*, since after the project, wood production from the trees in the irrigation area will be far greater than the volume of wood presently produced in the submergence area, probably about 100 times greater ; (3) *improved habitat for waterfowl* ; (4) *improved microclimate* due to evaporation from the open water surface of the reservoir and from the irrigated command areas ; (5) *improved atmospheric carbon/oxygen balance*, since, firstly, the increased photosynthesis, and hence oxygen production from the crops and trees in the irrigation area will far outweigh the loss in the inundation area ; and secondly, carbon storage by trees in the command area will far outweigh those in the submergence area.

Mixed or neutral impacts can be expected in *fisheries*. A larger volume of water will be available, and the reservoir and command areas present considerable potential for *agriculture development*. However, part of the river below the dam will change seasonally from a salt water to a fresh water environment in a different pattern. The lowest flow into the seas is not expected to be lower

than the lowest present flow. *Flood damage will be reduced*. There is some uncertainty, currently under investigation, about whether there would be a negative impact on estuary prawns in about 30 years' time. Another mixed impact would be with respect to salinisation. Although there could be some risk of soil salination in the irrigation area, if the drainage and pumping provisions for some reason fail, there will be benefits from the recharge of fresh groundwater with respect to water depth in wells and, for the same reason, possibly some reduction of underground salt water intrusion in coastal areas.

As environmental issue, which related to the dam, but not caused by the dam, is *erosion in the catchment area* of the SSP. Arresting of soil erosion needs to be addressed with or without the dam. *Catchment treatment plans* have been prepared for priority areas, and work has commenced. *The life of the dam is estimated at 180-340 years without catchment treatment*. With catchment treatment and with more water storage in the upper basin, the life span shall greatly increase.

The imputed forest value of ₹ 12.6 bn per ha for submerged land i.e. about U.S. \$ 7,00,000 per ha, which has recently been quoted in Newspapers in India, warrants some comments here. It is based on a per tree valuation estimate which includes an estimate of the value of oxygen at a bottled oxygen price, an estimate at the cost of cleaning air artificially, as an alternative to the role of trees in filtering out pollution, the value of the reduced erosion in terms of the cost of applying manure by hand to achieve the same effect, the cost of pumping out of the ground, the equivalent amount of water transpired by a tree, the cost of rearing and looking after by hand, the animals and birds displaced by the loss of the tree, and, finally, the protein conversion from green matter in terms of the value of good meat. *The problem with using this estimate, apart from the sheer magnitude of the figures, is that the methodology is faulty, because it does not incorporate "with" and "without project" scenarios.*

A correct analysis using the same figures and following the same logic, infact, *would find the Sardar Sarovar project to have a massive economic rate of return* (equalling misleading, of course) for the following reasons : (1) The irrigation in the 1.91 M ha command area will result in very many more trees with much faster growth rate than in the dry degraded submergence zone with only a few thousand hectares of forest land ; therefore, pollution reduction if it occurs at all, will be much greater "with the project" than "without it" ; (2) The photosynthetic output of oxygen from the actively growing crops in the command area will far outweigh that, in the submergence zone, which is much smaller and large parts of which dry off for half the year (although the issue is, of course, net carbon

the reservoir plus the irrigated command area than from the dry land submergence zone (the area ratio being about 50 to 1); (4) No erosion will result under neath the reservoir surface due to the removal of the trees; and (5) There will be massively greater plant protein production for animals "with the project" than "without it" due to the irrigation by-products and field bund grazing in the command area.

Coefficients of the sorts quoted must be used for both the submergence and the command area, and the methodology must incorporate both "with" and "without" project situation.

No further clarification about the Activists' criticism in respect of economic evaluation of the environmental losses appear to be necessary.

The most important and vital benefit of drinking water supply has not been considered at all in the above benefit cost studies. Only on drinking water supply benefit, the project is economically and socially justified. Further, SSP with 1.91 M ha area under irrigation would release millions of tonnes of oxygen and absorb millions of tonnes of carbon dioxide and thus contribute towards lessening of global warming.

When the environmental activists and NGO's raised a hue and cry against the sanction of the above project, the costs and Benefits of the project were re-examined by the World Bank in July and December 1990. The following observations were then given by them, vide their letter dated December 17, 1990.

"The argument in favour of the SSP is that the benefits are so larger and sustained that they substantially over weigh the costs of the more immediate human and environmental disruption. Without the dam, the long term hardships for the people would be much greater, and the lack of an income source for future generations would put increasing pressure on the environment. If the waters of Narmada River continue to flow to the sea unused, there appears to be no alternative to escalating human deprivation, particularly in the dry areas of Gujarat. The project has the potential to feed as many as 20 million people, provide domestic and industrial water for about 30 million, employ about 1 million, and provide valuable peak electric power in an area with high unmet power demand (farm pumps often get power for only a few hours, a day). In addition, recent research shows substantial economic "multiplier" effects (investment and employment triggered by development) from irrigation development. Set against the figure of about 70,000 people to be affected by the SSP reservoir, even without the multiplier effect, the ratio of beneficiaries to affected persons will be 100 : 1. Furthermore, many of the persons officially classified as affected, live in villages that will be near the edge of the SSP reservoir, and the...

affected villages will have more than 20 ha of their land submerged, and in many marginally affected villages, farm land inundation will occur for very limited periods during the year".

"Regarding the economic viability of the project, the World Bank has viewed the original analysis done in 1984-85, taking into account an almost two year delay in project start up, lower than projected costs of the dam (after allowing for inflation), higher than projected settlement and environmental costs, certain environmental benefits previously not considered, and higher electric power benefits. The conclusion is that the original economic rate of return of about 12% is still correct".

—22

Preparing Environmental Impact Assessments of Polluting Developmental Projects in India

22.1. Environmental Impact Assessments (EIA) of Polluting Developmental Projects in India

In order to assess the adverse possible effects of a proposed developmental project on the environment surrounding the proposed project, a detailed analysis is required to be made. This report is known as the *Environmental Impact Assessment (EIA)*. As a matter of fact, the *Impact Assessment attempts to determine the effects of the installation of a development project on the existing relationship between the surroundings and its inhabitants.*

The practice of preparing an Environmental Impact Assessment (EIA) for a project, was in fact, first initiated on January 1, 1970, in the United States of America. Since then, more than 100 developing and developed nations, have either passed specific analogous laws or have adopted procedures used elsewhere.

As far as India is concerned, the Ministry of Environment and Forests (MoEF), GoI, for the first time, issued environmental guidelines for setting up specific types of industries in August 1985, relating to areas to be avoided for setting up industries and measures to be taken for site selection, as also the various aspects of environmental protection which should be incorporated during the implementation of the proposed industrial development project.

On 27th January 1994, the MoEF, GoI issued its first important notification, governing the need of submission of *Environmental Impact Assessment (EIA)* with *Environmental Management Plan (EMP)* for specified types of developmental projects, to the MoEF for obtaining its clearance, before the project can be got sanctioned for execution.

The first notification of January 27, 1994 has been superseded by a recent notification of September 14, 2006. This second notification, however, provides that all the applications submitted till 14.09.2006 under the provisions of the 1994 notification, shall be decided on the basis of the same notification.

The industries/activities which came within the preview of the 1994 notification are given in article 22.2; while details of 2006 notification are given in article 22.3.

22.2. India's Environmental Impact Assessment Notification, 1994

The original notification dated 27th January 1994, included 27 types of projects/industries, which were brought under the ambit of this notification.

but with the passage of time, 5 more categories were added, thereby bringing 32 types of projects within the ambit of this Act. Out of these 32 types of projects, 16 types of projects/industries were necessarily required to obtain environmental clearance irrespective of the cost of the project; 1 type of projects needed environment clearance if the project cost exceeded ₹5 crores; while 16 types of projects needed environmental clearance when project cost exceeded ₹50 crores, as listed below in categories (A), (B) and (C), respectively.

List of Projects Needing Environmental Clearance Under EIA Notification 1994

(A) List of projects requiring environmental clearance irrespective of the cost of the project

- (1) Pesticide (Technical).
- (2) Petrochemical complexes (Both Olefinic and Aromatic) and Petrochemical intermediates, such as DMT, Caprolactam, LAB, etc. and production of basic plastics, such as LLDP, HDPE, PP, PVC.
- (3) Bulk drugs and Pharmaceuticals.
- (4) Asbestos and Asbestos products.
- (5) Hydrocyanic acid and its derivatives.
- (6) Chloro alkali industry.
- (7) Integrated paint complex including manufacture of resins and basic raw materials required in the manufacture of paints.
- (8) Mining projects (major minerals) with lease more than 5 hectares.
- (9) Tarred roads in Himalayas and Forest areas.
- (10) Distilleries.
- (11) Raw skins and hides.
- (12) Dyes.
- (13) Foundries (individual).
- (14) Electroplating.
- (15) Meta amino phenol.

(B) List of projects needing environmental clearance when project cost exceeds ₹5 crores

- (1) All tourism projects between 200-500 metres of High Water Tide Line or at locations with an elevation of more than 1000 metres.

(C) List of projects needing environmental clearance when project cost exceeds ₹50 crores

- (1) Nuclear power and related projects, such as Heavy water plants, Nuclear fuel complex, rare earth.
- (2) River valley projects including hydel power, major irrigation*, and their combination including flood control.
- (3) Ports, Harbours, Airports (except minor ports and harbours).
- (4) Petroleum Refineries including crude and product pipelines.

*For major irrigation projects, the cost limit of projects requiring environmental clearance was raised to Rs. 100 crores, vide GoI (CWC) order dated 4.4.2002.

- (5) Chemical Fertilisers (Nitrogenous, and Phosphatic—other than single super phosphates).
- (6) Exploration for oil and gas and their production, transportation, and storage.
- (7) Synthetic rubber.
- (8) (a) Primary metallurgical industries (such as production of Iron and Steel, Aluminium, Copper, Zinc, Lead, and Ferro Alloys).
- (b) Electric arc furnaces (Mini Steel Plants).
- (9) Viscous staple fibre and filament yarn.
- (10) Storage batteries integrated with manufacture of oxides of lead and lead antimony alloy.
- (11) Thermal power plants.
- (12) Highway projects except projects relating to improvement work including widening and strengthening of roads with marginal land acquisition along the existing alignments, provided it does not pass through ecologically sensitive areas, such as National Parks, Sanctuaries, Tiger reserves, Reserve forests.
- (13) Pulp, paper and newsprint.
- (14) Cement.
- (15) New construction projects
- (16) New industrial Estates

22.3. India's Environmental Impact Assessment Notification, 2006

Under this new notification, all projects or activities which need environmental clearance from the regulatory authorities have been divided into two categories; i.e. category A; and category B. (Please see table 22.1)

Projects or activities falling in category A needs environmental clearance from the Central Government on the recommendations of the *Expert Appraisal Committee (EAC)*. Preparation of EIA is necessary for all such category A projects.

Projects or activities falling in category B shall, however, be further subdivided into two sub-categories; i.e. Category B-1 and Category B-2. Projects falling under category B-2 shall not require any EIA Report; while projects falling under B-1 category shall require EIA reports. In the original notification, only one type of activity given at S. No. 8(b) of Table 22.1 [i.e. Townships and Area Development Projects] has been notified as of category B-1. Thus, there will be no B-2 category in this type of projects. For the rest of the activities, the notification has authorized the MoEF to issue appropriate guidelines for dividing B-category projects into B-1 and B-2 categories.

The B-category projects/activities need environmental clearance from State level Environmental Impact Assessment Authority (SEIAA) to be constituted by the Central Govt.

The SEIAA shall grant environmental clearance to B-category projects on the recommendations of the State Expert Appraisal Committee (SEAC). In the absence of a duly constituted SEIAA or SEAC, a category B project shall be treated as category A project, needing clearance from MoEF (GoI).

These orders shall be applicable not only to all the New activities/projects of the listed types, but shall also include:

- (i) Expansion and modernization of existing projects or activities of the listed type with addition of capacity beyond the limits specified for the concerned sector (i.e. the projects or activities which cross the threshold limits given in the Schedule (Table 22.1) after expansion/modernisation; and
- (ii) Any change in product-mix in an existing manufacturing unit included in Schedule (Table 22.1) beyond the specified range.

An application for obtaining prior Environmental Clearance (EC) shall be made in *Form 1* (given in Appendix 1 to the original notification), after the project site has been identified, but before commencing any construction activity, or preparation of land at the site by the applicant. The applicant shall furnish, along with his application, copy of the *pre-feasibility project report*. In case of construction projects (item 8 of the Schedule—given in table 22.1), however, no pre-feasibility report is required, but some additional information is required to be submitted in *Form 1A* (given as Appendix II to the original notification) along with a copy of the *conceptual plan*.

22.3.1. Stages in the Environmental Clearance Process for New Projects Under the 2006 Notification. The environmental clearance process for new projects will comprise of a maximum of four stages, all of which may not apply to particular cases as set forth below in this notification. These four stages in sequential order are :

- Stage (1) Screening (Only for Category 'B' projects and activities)
- Stage (2) Scoping
- Stage (3) Public Consultation
- Stage (4) Appraisal

I. Stage (1)—Screening :

In case of Category 'B' projects or activities, this stage will entail the scrutiny of an application seeking prior environmental clearance made in *Form 1* by the concerned State Expert Appraisal Committee (SEAC) for determining whether or not the project or activity requires further environmental studies for preparation of an Environmental Impact Assessment (EIA) for its appraisal prior to the grant of environmental clearance, depending upon the nature and location specificity of the project. The projects requiring an Environmental Impact Assessment report shall be termed Category 'B-1' and remaining projects shall be termed Category 'B-2' and will not require an Environment Impact Assessment report. For categorization of projects into B-1 or B-2 except for item 8(b), the Ministry of Environment and Forests, shall issue appropriate guidelines from time to time.

II. Stage (2)—Scoping :

(i) "Scoping": refers to the process by which the Expert Appraisal Committee in the case of Category 'A' projects or activities, and State Expert Appraisal Committee in the case of Category 'B-1' projects or activities, including applications for expansion and/or modernization and/or change in product mix of existing projects or activities, determine detailed and comprehensive Terms Of Reference (TOR) addressing all relevant environmental concerns for the preparation of an Environmental Impact

Assessment (EIA) Report in respect of the project or activity for which prior environmental clearance is sought. The Expert Appraisal Committee or State Expert Appraisal Committee concerned shall determine the Terms of Reference on the basis of the information furnished in the prescribed application Form 1/Form 1A including Terms of Reference proposed by the applicant, a site visit by a sub-group of Expert Appraisal Committee or State Expert Appraisal Committee concerned (only if considered necessary by the Expert Appraisal Committee or State Expert Appraisal Committee concerned), and other information that may be available with the Expert Appraisal Committee or State Expert Appraisal Committee concerned.

All projects and activities listed as Category 'B' in Item 8 of the Schedule (i.e., Construction/Township/Commercial Complexes Housing) shall not require Scoping and will be appraised on the basis of Form 1/Form 1A and the conceptual plan.

(ii) The Terms of Reference (TOR) shall be conveyed to the applicant by the Expert Appraisal Committee or State Expert Appraisal Committee concerned within sixty days of the receipt of Form 1. In the case of Category A Hydroelectric projects [i.e. Item 1(c) (i) of the Schedule], the Terms of Reference shall be conveyed along with the clearance for pre-construction activities. If the Terms of Reference are not finalized and conveyed to the applicant within sixty days of the receipt of Form 1, the Terms of Reference suggested by the applicant in Form 1, shall be deemed as the final Terms of Reference approved for the EIA studies.

III. Stage (3)—Public Consultation

(i) All category 'A' and 'B1' projects except the following shall require *public consultation*, prior to their appraisal by the EAC or SEAC, as the case may be:

- (a) modernization of irrigation projects [item 1(c) (ii) of the Schedule].
- (b) all projects or activities located within industrial estates or parks [item 7(c) of the Schedule] approved by the concerned authorities, and which are not disallowed in such approvals.
- (c) expansion of Roads and Highways [item 7(f) of the Schedule] which do not involve any further acquisition of land.
- (d) all Building/Construction projects/Area Development projects and Townships [item 8].
- (e) all Category 'B2' projects and activities.
- (f) all projects or activities concerning national defence and security or involving other strategic considerations as determined by the Central Government.

"Public Consultation" refers to the process by which the concerns of local affected persons and others who have plausible stake in the environmental impacts of the project or activity are ascertained with a view to taking into account all the material concerns in the project or activity design as appropriate.

(ii) Public Consultation shall ordinarily have two components, comprising of:

(a) a public hearing at the site or in its close proximity—district wise, to be carried out in the manner prescribed in Appendix IV to the notification, for ascertaining concerns of local affected persons;

(b) obtain responses in writing from other concerned persons having a plausible stake in the environmental aspects of the project or activity.

(iii) The public hearing at, or in close proximity to, the site(s) in all cases, shall be conducted by the State Pollution Control Board (SPCB) or the Union Territory Pollution Control Committee (UTPCC) concerned, in the specified manner, who will forward the proceedings to the regulatory authority concerned within 45 days of a request to the effect from the applicant.

(iv) In case the State Pollution Control Board or the Union Territory Pollution Control Committee concerned does not undertake and complete the public hearing within the specified period, and/or does not convey the proceedings of the public hearing within the prescribed period directly to the regulatory authority concerned as above, the regulatory authority shall engage another public agency or authority which is not subordinate to the regulatory authority, to complete the process within a further period of forty five days..

(v) If the public agency or authority nominated under the sub paragraph (iii) above, reports to the regulatory authority concerned that owing to the local situation, it is not possible to conduct the public hearing in a manner which will enable the views of the concerned local persons to be freely expressed, it shall report the facts in detail to the concerned regulatory authority, which may, after due consideration of the report and other reliable information that it may have, decide that the public consultation in the case need not include the public hearing.

(vi) For obtaining responses in writing from other concerned persons having a plausible stake in the environmental aspects of the project or activity, the concerned regulatory authority and the State Pollution Control Board (SPCB) or the Union Territory Pollution Control Committee (UTPCC) shall invite responses from such concerned persons by placing on their website the Summary EIA report prepared in the format given in Appendix III and IIIA to the notification by the applicant along with a copy of the application in the prescribed form, within seven days of the receipt of a written request for arranging the public hearing. Confidential information including non-disclosable or legally privileged information involving Intellectual Property Right, source specified in the application shall not be placed on the web site. The regulatory authority concerned may also use other appropriate media for ensuring wide publicity about the project or activity. The regulatory authority shall, however, make available on a written request from any concerned person, the Draft EIA report for inspection at a notified place during normal office hours till the date of the public hearing. All the responses received as part of this public consultation process shall be forwarded to the applicant through the quickest available means.

(vii) After completion of the public consultation, the applicant shall address all the material environmental concerns expressed during this process, and make appropriate arrangements for addressing the same.

prepared, shall be submitted by the applicant to the concerned regulatory authority for appraisal. The applicant may alternatively submit a supplementary report to draft EIA and EMP, addressing all the concerns expressed during the public consultation.

IV. Stage (4)—Appraisal:

(i) Appraisal means the detailed scrutiny by the Expert Appraisal Committee or State Expert Appraisal Committee of the application and other documents like the Final EIA report, outcome of the public consultations including public hearing proceedings, submitted by the applicant to the regulatory authority concerned for grant of environmental clearance. This appraisal shall be made by Expert Appraisal Committee or State Expert Appraisal Committee concerned in a transparent manner in a proceeding to which the applicant shall be invited for furnishing necessary clarifications in person or through an authorized representative. On conclusion of this proceeding, the Expert Appraisal Committee or State Expert Appraisal Committee concerned shall make categorical recommendations to the regulatory authority concerned either for grant of prior environmental clearance on stipulated terms and conditions, or rejection of the application for prior environmental clearance, together with reasons for the same.

(ii) The appraisal of all projects or activities which are not required to undergo public consultation, or submit an Environment Impact Assessment report, shall be carried out on the basis of the prescribed application Form I and Form 1A as applicable, any other relevant validated information available, and the site visit wherever the same is considered necessary by the Expert Appraisal Committee or State Expert Appraisal Committee concerned.

(iii) The appraisal of an application shall be completed by the Expert Appraisal Committee or State Expert Appraisal Committee concerned within sixty days of the receipt of the final Environment Impact Assessment report and other documents or the receipt of Form I and Form 1A, where public consultation is not necessary and the recommendations of the Expert Appraisal Committee or State Expert Appraisal Committee shall be placed before the competent authority for a final decision within the next fifteen days.

The prescribed procedure for Appraisal is given in Appendix V to the original notification.

22.3.2. Prior Environmental Clearance (EC) Process for Expansion or Modernization or Change of Product mix in Existing Projects. All applications seeking prior environmental clearance for expansion with increase in the production capacity beyond the capacity for which prior environmental clearance has been granted under this notification or with increase in either lease area or production capacity in the case of mining projects or for the modernization of an existing unit with increase in the total production capacity beyond the threshold limit prescribed in the Schedule to this notification through change in process and or technology or involving a change in the product-mix shall be made in Form I and they shall be considered by the concerned Expert Appraisal Committee or State Expert Appraisal Committee concerned with due diligence.

necessary, including preparation of EIA and public consultation, and the application shall be appraised accordingly for grant of environmental clearance.

22.3.3. Grant or Rejection of Prior Environmental Clearance (EC)

(i) The regulatory authority shall consider the recommendations of the EAC or SEAC concerned and convey its decision to the applicant within forty five days of the receipt of the recommendations of the Expert Appraisal Committee or State Expert Appraisal Committee concerned or in other words within one hundred and five days of the receipt of the final Environment Impact Assessment Report, and where Environment Impact Assessment is not required, within one hundred and five days of the receipt of the complete application with requisite documents, except as provided below.

(ii) The regulatory authority shall normally accept the recommendations of the Expert Appraisal Committee or State Expert Appraisal Committee concerned. In cases where it disagrees with the recommendations of the Expert Appraisal Committee or State Expert Appraisal Committee concerned, the regulatory authority shall request reconsideration by the Expert Appraisal Committee or State Expert Appraisal Committee concerned within forty five days of the receipt of the recommendations of the Expert Appraisal Committee or State Expert Appraisal Committee concerned while stating the reasons for the disagreement. An intimation of this decision shall be simultaneously conveyed to the applicant. The Expert Appraisal Committee or State Expert Appraisal Committee concerned, in turn, shall consider the observations of the regulatory authority and furnish its views on the same within a further period of sixty days. The decision of the regulatory authority after considering the views of the Expert Appraisal Committee or State Expert Appraisal Committee concerned shall be final and conveyed to the applicant by the regulatory authority concerned within the next thirty days.

(iii) In the event that the decision of the regulatory authority is not communicated to the applicant within the period specified in sub-paragraphs (i) or (ii) above, as applicable, the applicant may proceed as if the environment clearance sought for has been granted or denied by the regulatory authority is terms of the final recommendations of the Expert Appraisal Committee or State Level Expert Appraisal Committee concerned.

(iv) On expiry of the period specified for decision by the regulatory authority under paragraph (i) and (ii) above, as applicable, the decision of the regulatory authority, and the final recommendations of the Expert Appraisal Committee or State Expert Appraisal Committee concerned shall become public documents.

(v) Clearances from other regulatory bodies or authorities shall not be required prior to receipt of applications for prior environmental clearance of projects or activities, or screening, or scoping, or appraisal, or decision by the regulatory authority concerned, unless any of these is sequentially dependent on such clearance either due to a requirement of law, or for necessary technical reasons.

(vi) Deliberate concealment and/or submission of false or misleading information or data which is material to screening or scoping or appraisal or

decision on the application shall make the application liable for rejection, and cancellation of prior environmental clearance granted on that basis. Rejection of an application or cancellation of a prior environmental clearance already granted, on such ground, shall be decided by the regulatory authority, after giving a personal hearing to the applicant, and following the principles of natural justice.

22.3.4. Validity of Environmental Clearance (EC). The "Validity of Environmental Clearance" is meant the period from which a prior environmental clearance is granted by the regulatory authority, or may be presumed by the applicant to have been granted under sub paragraph (iii) above, to the start of production operations by the project or activity, or completion of all construction operations in case of construction projects (item 8 of the Schedule), to which the application for prior environmental clearance refers. The prior environmental clearance granted for a project or activity shall be valid for a period of ten years in the case of River Valley projects (item 1(c) of the Schedule), project life as estimated by Expert Appraisal Committee or State Expert Appraisal Committee, subject to a maximum of thirty years for mining projects and five years in the case of all other projects and activities. However, in the case of Area Development projects and Townships [item 8(b)], the validity period shall be limited only to such activities as may be the responsibility of the applicant as a developer. This period of validity may be extended by the regulatory authority concerned by a maximum period of five years, provided an application is made to the regulatory authority by the applicant within the validity period, together with an updated Form 1, and Supplementary Form 1A, for Construction projects or activities (item 8 of the Schedule). In this regard, the regulatory authority may also consult the Expert Appraisal Committee or State Expert Appraisal Committee, as the case may be.

22.3.5. Post Environmental Clearance Monitoring

(i) It shall be mandatory for the project management to submit half-yearly compliance reports in respect of the stipulated prior environmental clearance terms and conditions, in hard and soft copies to the regulatory authority concerned, on 1st June and 1st December of each calendar year.

(ii) All such compliance reports submitted by the project management shall be public documents. Copies of the same shall be given to any person on application to the concerned regulatory authority. The latest such compliance report shall also be displayed on the web site of the concerned regulatory authority.

22.3.6. Transferability of Environmental Clearance (EC). A prior environmental clearance granted for a specific project or activity to an applicant may be transferred during its validity to another legal person entitled to undertake the project or activity on application by the transferee, or by the transferee with a written "no objection" by the transferor, to, and by the regulatory authority concerned, on the same terms and conditions under which the prior environmental clearance was initially granted, and for the same validity period. No reference to the Expert Appraisal Committee or State Expert Appraisal Committee concerned is necessary in such cases.

The schedule of activities coming within the preview of this notification is given in Table 22.1. The Appendix I to V attached to the original notification, being important documents in obtaining E.C., are also given subsequently in tables 22.2 to 22.7, respectively.

Table 22.1. Schedule Giving List of Projects Requiring Prior Environmental Clearance Under EIA Notification, 2006

S. No.	Project or Activity	Category with threshold limit		Conditions if any
		A	B	
(1)	(2)	(3)	(4)	(5)
1 Mining, Extraction of Natural Resources, and Power Generation (for a specified production capacity)				
1(a)	Mining of minerals	≥ 50 ha. of mining lease area Asbestos mining irrespective of mining area	< 50 ha and ≥ 5 ha. of mining lease area.	General Condition shall apply Note Mineral prospecting (not involving drilling) are exempted, provided the concession areas have got previous clearance for physical survey.
1(b)	Offshore and onshore oil and gas exploration, development and production	All projects	—	Note Exploration Surveys (not involving drilling) are exempted, provided the concession areas have got previous clearance for physical survey.
1(c)	River Valley projects	(i) ≥ 50 MW hydro-electric power generation; (ii) ≥ 10,000 ha. of culturable command area.	(i) < 50 MW and ≥ 25 MW hydro-electric power generation; (ii) < 10,000 ha. of culturable command area.	General Condition shall apply
1(d)	Thermal Power Plants	≥ 500 MW (coal/lignite/naphtha and gas based); ≥ 50 MW (Peat coke, diesel and all other fuels)	< 500 MW (coal/lignite/naphtha and gas based); < 50 MW & ≥ 5 MW (Peat coke, diesel and all other fuels)	General Condition shall apply.
1(e)	Nuclear power projects and processing of nuclear fuel	All projects	—	—

(1)	(2)	(3)	(4)	(5)
2 Primary Processing				
2(a)	Coal washeries	≥ 1 million ton/annum throughput of coal	< 1 million ton/annum throughput of coal	General Condition shall apply (If located within mining area, the proposal shall be appraised together with the mining proposal)
2(b)	Mineral beneficiation	≥ 0.1 million ton/annum mineral throughput	< 0.1 million ton/annum mineral throughput	General Condition shall apply (Mining proposal with Mineral beneficiation shall be appraised together for grant of clearance)
3 Materials Production				
3(a)	Metallurgical industries (ferrous and non ferrous)	(a) Primary metallurgical industry All projects	—	General Condition shall apply for Sponge manufacturing
		(b) Sponge iron manufacturing ≥ 200 TPD	Sponge iron manufacturing < 200 TPD	
		(c) Secondary metallurgical processing industry All toxic and heavy metal producing units ≥ 20,000 tonnes/annum	Secondary metallurgical processing industry (i) All toxic and heavy metal producing units < 20,000 tonnes/annum (ii) All other non-toxic secondary metallurgical processing industries > 5000 tonnes/annum	
3(b)	Cement plants	≥ 1.0 million tonnes/annum of production capacity	< 1.0 million tonnes/annum of production capacity. All stand alone grinding units	General Condition shall apply
4 Materials Processing				
4(a)	Petroleum industry	All projects	—	—

Contd...

(1)	(2)	(3)	(4)	(5)
4(b)	Coke oven plants	≥ 2,50,000 tonnes/annum	< 2,50,000 and ≥ 25,000 tonnes/annum	—
4(c)	Asbestos milling and asbestos based products	All projects	—	—
4(d)	Chlor-alkali industry	≥ 300 TPD production capacity; or a unit located outside the notified industrial area/estate	< 300 TPD production capacity; or a unit located within a notified industrial area/estate	Specific Condition shall apply No new Mercury Cell based plants will be permitted and existing units converting to membrane cell technology are exempted from this Notification
4(e)	Soda ash industry	All projects	—	—
4(f)	Leather/skin/hide processing industry	New projects outside the industrial area or expansion of existing units outside the industrial area	All new or expansion of projects located within a notified industrial area/estate	Specific condition shall apply
5 Manufacturing/Fabrication				
5(a)	Chemical fertilizers	All projects	—	—
5(b)	Pesticides industry and pesticide specific intermediates (excluding formulations)	All units producing technical grade pesticides	—	—
5(c)	Petro-chemical complexes (industries based on processing of petroleum fractions and natural gas and/or reforming to aromatics)	All projects	—	—
5(d)	Man-made fibres manufacturing	Rayon	Others	General Condition shall apply
5(e)	Petrochemical based processing (processes other than cracking and reformation and not covered under the complexes)	Located outside the notified industrial area/estate	Located in a notified industrial area/estate	Specific Condition shall apply

(1)	(2)	(3)	(4)	(5)
5(f)	Synthetic organic chemicals industry (dyes and dye intermediates; bulk drugs and intermediates excluding drug formulations; synthetic rubbers; basic organic chemicals, other synthetic organic chemicals and chemical intermediates)	Located outside the notified industrial area/estate	Located in a notified industrial area/estate	Specific Condition shall apply
5(g)	Distilleries	(i) All Molasses based distilleries (ii) All Cane juice/non-molasses based distilleries ≥ 30 KLD	— All Cane juice/non-molasses based distilleries < 30 KLD	General Condition shall apply
5(h)	Integrated paint industry	—	All projects	General Condition shall apply
5(i)	Pulp and paper industry, excluding manufacturing of paper from waste paper and manufacture of paper from ready pulp without bleaching	Pulp manufacturing and Pulp and Paper manufacturing industry	Paper manufacturing industry without pulp manufacturing	General Condition shall apply
5(j)	Sugar Industry	—	≥ 5000 tcd cane crushing capacity	General Condition shall apply
5(k)	Induction/arc furnaces/cupola furnaces 5 TPH or more	—	All projects	General Condition shall apply
6 Service Sectors				
6(a)	Oil and gas transportation pipeline (crude and refinery/ petrochemical products), passing through national parks/sanctuaries/ coral reefs/ecologically sensitive areas including LNG Terminal.	All projects	—	—

Contd..

(1)	(2)	(3)	(4)	(5)
6(b)	Isolated storage and handling of hazardous chemicals (As per threshold planning quantity indicated in column 3 of schedule 2 and 3 of MS/HC Rules 1989 amended 2000)	—	All projects	General Condition shall apply
7 Physical Infrastructure including Environmental Services				
7(a)	Air ports	All projects	—	—
7(b)	All ship breaking yards including ship breaking units	All projects	—	—
7(c)	Industrial estates/ parks/complexes/ areas, export processing Zones (EPZs), Special Economic Zones (SEZs), Biotech Parks, Leather Complexes	If at least one industry in the proposed industrial estate falls under the Category A, entire industrial area shall be treated as Category A, irrespective of the area. Industrial estates with area greater than 500 ha. and housing atleast one Category B industry.	Industrial estates housing atleast one Category B industry and area < 500 ha. Industrial estates of area > 500 ha. and not housing any industry belonging to Category A or B.	Special condition shall apply Note: Industrial Estates of area below 500 ha and not housing any industry of category A or B does not require clearance.
7(d)	Common hazardous waste treatment, storage and disposal facilities (TSDFs)	All integrated facilities having incineration and landfill or incineration alone	All facilities having landfill only	General Condition shall apply
7(e)	Ports, Harbours	≥ 5 million TPA of cargo handling capacity (excluding fishing harbours)	< 5 million TPA of cargo handling capacity and/or ports/harbours $\geq 10,000$ TPA of fish handling capacity	General Condition shall apply
7(f)	Highways	(i) New National Highways; and (ii) Expansion of National Highways greater than 30 km, involving additional right of way greater than 20 m involving land acquisition and passing through more than one State.	(i) New State Highways; and (ii) Expansion of National/State Highways greater than 30 km involving additional right of way greater than 20 m involving land acquisition.	General Condition shall apply

(1)	(2)	(3)	(4)	(5)
7(g)	Aerial ropeways	—	All projects	General Condition shall apply
7(A)	Common Effluent Treatment Plants (CETPs)	—	All projects	General Condition shall apply
7(i)	Common Municipal Solid Waste Management Facility (CMSWMP)	—	All projects	General Condition shall apply
B Building/Construction projects/Area Development projects and Townships				
8(a)	Building and Construction projects	—	≥ 20,000 sq. mtrs. of land area; and ≥ 1,50,000 sqm of built up area.	# (built up area for covered construction in the case of facilities open to the sky, it will be the activity area)
8(b)	Townships and Area Development projects	—	Covering an area ≥ 50 ha and or built up area ≥ 1,50,000 sq. mtrs.	**All projects under Item 8(b) shall be appraised as Category B1

Note I. General Condition (GC) :

Any project or activity specified in Category 'B' will be treated as Category A, if located in whole or in part within 10 km from the boundary of ; (i) Protected Areas notified under the Wild Life (Protection) Act, 1972 ; (ii) Critically Polluted areas as notified by the Central Pollution Control Board from time to time ; (iii) Notified Eco-sensitive area ; (iv) inter-State boundaries and international boundaries.

Note II. Special Condition (SC) :

If any Industrial Estate/Complex/Export processing Zones/Special Economic Zones/Bio-tech Parks/Leather Complex with homogeneous type of industries such as Items 4(d), 4(f), 5(e), 5(f), or those Industrial estates with pre-defined set of activities (not necessarily homogeneous, obtains prior environmental clearance, individual industries including proposed industrial housing within such estates/complexes will not be required to take prior environmental clearance, so long as the Terms and Conditions for the industrial estate/complex are complied with (Such estates/complexes must have a clearly identified management with the legal responsibility of ensuring adherence to the Terms and Conditions of prior environmental clearance, who may be held responsible for violation of the same throughout the life of the complex/estate).

Table 22.2, Appendix I to the 2006 Notification
FORM 1

(I) Basic Information

Name of the Project:

Location / site alternatives under consideration:

Size of the Project: *

Expected cost of the project:

Contact Information:

Screening Category:

(II) Activity

II(1) Construction, operation or decommissioning of the project involving actions, which will cause physical changes in the locality (topography, land use, changes in water bodies, etc.)

S. No.	Information / Checklist confirmation	Yes / No	Details thereof (with approximate quantities / rates, wherever possible) with source of information data
(1)	(2)	(3)	(4)
1.1	Permanent or temporary change in land use, land cover or topography including increase in intensity of land use (with respect to local land use plan)		
1.2	Clearance of existing land, vegetation and buildings?		
1.3	Creation of new land uses?		
1.4	Pre-construction investigations; e.g. bore houses, soil testing?		
1.5	Construction works?		
1.6	Demolition works?		
1.7	Temporary sites used for construction works or housing of construction workers?		
1.8	Above ground buildings, structures or earthworks including linear structures, cut and fill or excavations		
1.9	Underground works including mining or tunneling?		
1.10	Reclamation works?		

Contd...

*Capacity corresponding to sectoral activity (such as production capacity for manufacturing, mining lease area and production capacity for mineral production, area for mineral exploration, length for linear transport infrastructure, generation capacity for

(1)	(2)	(3)	(4)
1.11	Dredging?		
1.12	Offshore structures?		
1.13	Production and manufacturing processes?		
1.14	Facilities for storage of goods or materials?		
1.15	Facilities for treatment or disposal of solid waste or liquid effluents?		
1.16	Facilities for long-term housing of operational workers?		
1.17	New road, rail or sea traffic during construction or operation?		
1.18	New road, rail, air, waterborne or other transport infrastructure including new or altered routes and stations, ports, airports, etc?		
1.19	Closure or diversion of existing transport routes or infrastructure leading to changes in traffic movements?		
1.20	New or diverted transmission lines or pipelines?		
1.21	Impoundment, damming, culverting, realignment or other changes to the hydrology of watercourses or aquifers?		
1.22	Stream crossings?		
1.23	Abstraction or transfers of water from ground or surface waters?		
1.24	Changes in water bodies or the land surface affecting drainage or run-off?		
1.25	Transport of personnel or materials for construction, operation or decommissioning?		
1.26	Long-term dismantling or decommissioning or restoration works?		
1.27	Ongoing activity during decommissioning which could have an impact on the environment?		
1.28	Influx of people to an area in either temporarily or permanently?		
1.29	Introduction of alien species?		
1.30	Loss of native species or genetic diversity?		
1.31	Any other actions?		

II(3) Use of Natural resources for construction or operation of the project (such as land, water, materials or energy, especially any resources which are non-renewable or in short supply):

S. No.	Information / Checklist confirmation	Yes/ No	Details thereof (with approximate quantities/ rates, wherever possible) with source of information data
(1)	(2)	(3)	(4)
2.1	Land especially undeveloped or agricultural land (ha)		
2.2	Water (expected source and competing users) unit: KLD		
2.3	Minerals (MT)		
2.4	Construction material - stone, aggregates, sand / soil (expected source - MT)		
2.5	Forests and timber (source - MT)		
2.6	Energy including electricity and fuels (source, competing users) Unit: fuel (MT), energy (MW)		
2.7	Any other natural resources (use appropriate standard units)		

II(3) Use, storage, transport, handling or production of substances or materials, which could be harmful to human health or the environment or raise concerns about actual or perceived risks to human health.

S. No.	Information / Checklist confirmation	Yes/ No	Details thereof (with approximate quantities/ rates, wherever possible) with source of information data
(1)	(2)	(3)	(4)
3.1	Use of substances or materials, which are hazardous (as per MSHC rules) to human health or the environment (flora, fauna, and water supplies)		
3.2	Changes in occurrence of disease or affect disease vectors (e.g. insect or water borne diseases)		
3.3	Affect the welfare of people e.g. by changing living conditions?		
3.4	Vulnerable groups of people who could be affected by the project e.g. hospital patients, children, the elderly etc.		
3.5	Any other causes		

II(4) Production of solid wastes during construction or operation or decommissioning (MT/mo/yr)

S. No.	Information / Checklist confirmation	Yes / No	Details thereof (with approximate quantities / rates, wherever possible) with source of information data
(1)	(2)	(3)	(4)
4.1	Spoil, overburden or mine wastes		
4.2	Municipal waste (domestic and or commercial wastes)		
4.3	Hazardous wastes (as per Hazardous Waste Management Rules)		
4.4	Other industrial process wastes		
4.5	Surplus product		
4.6	Sewage sludge or other sludge from effluent treatment		
4.7	Construction or demolition wastes		
4.8	Redundant machinery or equipment		
4.9	Contaminated soils or other materials		
4.10	Agricultural wastes		
4.11	Other solid wastes		

II(5) Release of pollutants or any hazardous, toxic or noxious substances to air (kg/hr)

S. No.	Information / Checklist confirmation	Yes / No	Details thereof (with approximate quantities / rates, wherever possible) with source of information data
(1)	(2)	(3)	(4)
5.1	Emissions from combustion of fossil fuels from stationary or mobile sources		
5.2	Emissions from production processes		
5.3	Emissions from materials handling including storage or transport		
5.4	Emissions from construction activities including plant and equipment		
5.5	Dust or odours from handling of materials including construction materials, sewage and waste		

(1)	(2)	(3)	(4)
5.6	Emissions from incineration of waste		
5.7	Emissions from burning of waste in open air (e.g. slash materials, construction debris)		
5.8	Emissions from any other sources		

II(6) Generation of Noise and Vibration, and Emissions of Light and Heat:

S. No.	Information / Checklist confirmation	Yes / No	Details thereof (with approximate quantities / rates, wherever possible) with source of information data
(1)	(2)	(3)	(4)
6.1	From operation of equipment e.g. engines, ventilation plant, crushers		
6.2	From industrial or similar processes		
6.3	From construction or demolition		
6.4	From blasting or piling		
6.5	From construction or operational traffic		
6.6	From lighting or cooling systems		
6.7	From any other sources		

II(7) Risks of contamination of land or water from releases of pollutants into the ground or into sewers, surface waters, groundwater, coastal waters, or the sea:

S. No.	Information / Checklist confirmation	Yes / No	Details thereof (with approximate quantities / rates, wherever possible) with source of information data
(1)	(2)	(3)	(4)
7.1	From handling, storage, use or spillage of hazardous materials		
7.2	From discharge of sewage or other effluents to water or land (expected mode and place of discharge)		
7.3	By deposition of pollutants emitted to air or into land or into water		
7.4	From any other sources		
7.5	Is there a risk of long term build up of pollutants in the environment from these sources?		

II(8) Risk of accidents during construction or operation of the Project, which could affect human health or the environment

S. No.	Information / Checklist confirmation	Yes / No	Details thereof (with approximate quantities / rates, wherever possible) with source of information data
(1)	(2)	(3)	(4)
8.1	From explosions, spillages, fires etc from storage, handling, use or production of hazardous substances		
8.2	From any other causes		
8.3	Could the project be affected by natural disasters causing environmental damage (e.g. floods, earthquakes, landslides, cloudburst, etc.)?		

II(9) Factors which should be considered (such as consequential development) which could lead to environmental effects or the potential for cumulative impacts with other existing or planned activities in the locality

S. No.	Information / Checklist confirmation	Yes / No	Details thereof (with approximate quantities / rates, wherever possible) with source of information data
(1)	(2)	(3)	(4)
9.1	Lead to development of supporting ancillary development or development stimulated by the project which could have impact on the environment e.g.: • Supporting infrastructure (roads, power supply, waste or waste water treatment, etc.) • housing development • extractive industries • supply industries • other		
9.2	Lead to after-use of the site, which could have an impact on the environment		
9.3	Set a precedent for later developments		
9.4	Have cumulative effects due to proximity to other existing or planned projects with similar effects		

(III) Environmental Sensitivity

S. No.	Areas	Name / identify	Aerial distances (within 15 km) Proposed project location boundary
(1)	(2)	(3)	(4)
1	Areas protected under international conventions, national or local legislation for their ecological, landscape, cultural or other related value		
2	Areas which are important or sensitive for ecological reasons - Wetlands, water-courses or other water bodies, coastal zone, biospheres, mountains, forests		
3	Areas used by protected, important or sensitive species of flora or fauna for breeding, nesting, foraging, resting, over wintering, migration		
4	Inland, coastal, marine or underground waters		
5	State, National boundaries		
6	Routes or facilities used by the public for access to recreation or other tourist, pilgrim areas		
7	Defence installations		
8	Densely populated or built-up area		
9	Areas occupied by sensitive man-made land uses (hospitals, schools, places of worship, community facilities)		
10	Areas containing important, high quality or scarce resources (ground water resources, surface resources, forestry, agriculture, fisheries, tourism, minerals)		
11	Areas already subjected to pollution or environmental damage. (those where existing legal environmental standards are exceeded)		
12	Areas susceptible to natural hazard which could cause the project to present environmental problems (earthquakes, subsidence, landslides, erosion, flooding or extreme or adverse climatic conditions)		

FORM-1 A (only for construction projects listed under item 8 of the Schedule)**CHECK LIST OF ENVIRONMENTAL IMPACTS**

(Project proponents are required to provide full information and wherever necessary attach explanatory notes with the Form and submit along with proposed environmental management plan and monitoring programme)

1. Land Environment

(Attach panoramic view of the project site and the vicinity)

1.1. Will the existing landuse get significantly altered from the project that is not consistent with the surroundings? (Proposed landuse must conform to the approved Master Plan / Development Plan of the area. Change of landuse if any and the statutory approval from the competent authority be submitted). Attach Maps of (i) site location, (ii) surrounding features of the proposed site (within 500 meters) and (iii) the site (indicating levels and contours) to appropriate scales. If not available attach only conceptual plans.

1.2. List out all the major project requirements in terms of the land area, built up area, water consumption, power requirement, connectivity, community facilities, parking needs, etc.

1.3. What are the likely impacts of the proposed activity on the existing facilities adjacent to the proposed site? (Such as open spaces, community facilities, details of the existing landuse, disturbance to the local ecology).

1.4. Will there be any significant land disturbance resulting in erosion, subsidence and instability? (Details of soil type, slope analysis, vulnerability to subsidence, seismicity etc may be given).

1.5. Will the proposal involve alteration of natural drainage systems? (Give details on a contour map showing the natural drainage near the proposed project site)

1.6. What are the quantities of earthwork involved in the construction activity-cutting, filling, reclamation, etc. (Give details of the quantities of earthwork involved, transport of fill materials from outside the site, etc.)

1.7. Give details regarding water supply, waste handling, etc. during the construction period.

1.8. Will the low lying areas and wetlands get altered? (Provide details of how low lying and wetlands are getting modified from the proposed activity)

1.9. Whether construction debris and waste during construction cause health hazard? (Give quantities of various types of wastes generated during construction, including the construction labour and the means of disposal)

2. Water Environment

2.1. Give the total quantity of water requirement for the proposed project with the breakup of requirements for various uses. How will the water requirement met? State the sources and quantities and furnish a water balance statement.

2.2. What is the capacity (dependable flow or yield) of the proposed source of water?

2.3. What is the quality of water required, in case, the supply is not from a municipal source?

(Provide physical, chemical, biological characteristics with class of water quality)

2.4. How much of the water requirement can be met from the recycling of treated wastewater? (Give the details of quantities, sources and usage)

2.5. Will there be diversion of water from other users? (Please assess the impacts of the project on other existing uses and quantities of consumption)

2.6. What is the incremental pollution load from wastewater generated from the proposed activity? (Give details of the quantities and composition of wastewater generated from the proposed activity)

2.7. Give details of the water requirements met from water harvesting? Furnish details of the facilities created.

2.8. What would be the impact of the land use changes occurring due to the proposed project on the runoff characteristics (quantitative as well as qualitative) of the area in the post construction phase on a long term basis? Would it aggravate the problems of flooding or water logging in any way?

2.9. What are the impacts of the proposal on the ground water? (Will there be tapping of ground water; give the details of ground water table, recharging capacity, and approvals obtained from competent authority, if any)

2.10. What precautions/measures are taken to prevent the run-off from construction activities polluting land and aquifers? (Give details of quantities and the measures taken to avoid the adverse impacts)

2.11. How is the storm water from within the site managed? (State the provisions made to avoid flooding of the area, details of the drainage facilities provided along with a site layout indication contour levels)

2.12. Will the deployment of construction labourers particularly in the peak period lead to unsanitary conditions around the project site (Justify with proper explanation)

2.13. What on-site facilities are provided for the collection, treatment and safe disposal of sewage? (Give details of the quantities of wastewater generation, treatment capacities with technology and facilities for recycling and disposal)

2.14. Give details of dual plumbing system if treated waste used is used for flushing of toilets or any other use.

3. Vegetation

3.1. Is there any threat of the project to the biodiversity? (Give a description of the local ecosystem with its unique features, if any)

3.2. Will the construction involve extensive clearing or modification of vegetation? (Provide a detailed account of the trees and vegetation affected by the project)

3.3. What are the measures proposed to be taken to minimize the likely impacts on important site features (Give details of proposal for tree plantation, landscaping, creation of water bodies, etc along with a layout plan to an appropriate scale)

4. Fauna

4.1. Is there likely to be any displacement of fauna- both terrestrial and aquatic or creation of barriers for their movement? Provide the details.

4.2. Any direct or indirect impacts on the avifauna of the area? Provide details.

4.3. Prescribe measures such as corridors, fish ladders, etc to mitigate adverse impacts on fauna

5. Air Environment

5.1. Will the project increase atmospheric concentration of gases and result in heat islands?

(Give details of background air quality levels with predicted values based on dispersion models taking into account the increased traffic generation as a result of the proposed constructions)

5.2. What are the impacts on generation of dust, smoke, odorous fumes or other hazardous gases? Give details in relation to all the meteorological parameters.

5.3. Will the proposal create shortage of parking space for vehicles? Furnish details of the present level of transport infrastructure and measures proposed for improvement including the traffic management at the entry and exit to the project site.

5.4. Provide details of the movement patterns with internal roads, bicycle tracks, pedestrian pathways, footpaths, etc., with areas under each category.

5.5. Will there be significant increase in traffic noise and vibrations? Give details of the sources and the measures proposed for mitigation of the above.

5.6. What will be the impact of DG sets and other equipment on noise levels and vibra-

6. Aesthetics

6.1. Will the proposed constructions in any way result in the obstruction of a view, scenic amenity or landscapes? Are these considerations taken into account by the proponents?

6.2. Will there be any adverse impacts from new constructions on the existing structures? What are the considerations taken into account?

6.3. Whether there are any local considerations of urban form and urban design influencing the design criteria? They may be explicitly spelt out.

6.4. Are there any anthropological or archaeological sites or artifacts nearby? State if any other significant features in the vicinity of the proposed site have been considered.

7. Socio-Economic Aspects

7.1. Will the proposal result in any changes to the demographic structure of local population? Provide the details.

7.2. Give details of the existing social infrastructure around the proposed project.

7.3. Will the project cause adverse effects on local communities, disturbance to sacred sites or other cultural values? What are the safeguards proposed?

8. Building Materials

8.1. May involve the use of building materials with high-embodied energy. Are the construction materials produced with energy efficient processes? (Give details of energy conservation measures in the selection of building materials and their energy efficiency)

8.2. Transport and handling of materials during construction may result in pollution, noise and public nuisance. What measures are taken to minimize the impacts?

8.3. Are recycled materials used in roads and structures? State the extent of savings achieved?

8.4. Give details of the methods of collection, segregation and disposal of the garbage generated during the operation phases of the project.

9. Energy Conservation

9.1. Give details of the power requirements, source of supply, backup source, etc. What is the energy consumption assumed per square foot of built-up area? How have you tried to minimize energy consumption?

9.2. What type of, and capacity of, power back-up do you plan to provide?

9.3. What are the characteristics of the glass you plan to use? Provide specifications of its characteristics related to both short wave and long wave radiation?

9.4. What passive solar architectural features are being used in the building? Illustrate the applications made in the proposed project.

9.5. Does the layout of streets and buildings maximise the potential for solar energy devices?

Have you considered the use of street lighting, emergency lighting, and solar hot water systems for use in the building complex? Substantiate with details.

9.6. Is shading effectively used to reduce cooling/heating loads? What principles have been used to maximize the shading of walls on the East and the West and the Roof? How much energy saving has been effected?

9.7. Do the structures use energy-efficient space conditioning, lighting and mechanical systems? Provide technical details. Provide details of the transformers and motor efficiencies, lighting intensity and air-conditioning load assumptions? Are you using CFC and HCFC free chillers? Provide specifications.

9.8. What are the likely effects of the building activity in altering the micro-climates? Provide a self assessment on the likely impacts of the proposed construction on creation of heat island and inversion effects?

9.9. What are the thermal characteristics of the building envelope? (a) roof; (b) external walls; and (c) fenestration? Give details of the material used and the U-values or the R values of the individual components.

9.10. What precautions and safety measures are proposed against fire hazards? Furnish details of emergency plans.

9.11. If you are using glass as wall material, provide details and specifications including emissivity and thermal characteristics.

9.12. What is the rate of air infiltration into the building? Provide details of how you are mitigating the effects of infiltration.

9.13. To what extent the non-conventional energy technologies are utilized in the overall energy consumption? Provide details of the renewable energy technologies used.

10. Environment Management Plan

The Environment Management Plan would consist of all mitigation measures for each item wise activity to be undertaken during the construction, operation and the entire life cycle to minimize adverse environmental impacts as a result of the activities of the project. It would also delineate the environmental monitoring plan for compliance of various environmental regulations. It will state the steps to be taken in case of emergency such as accidents at the site including fire.

Table 22.4. APPENDIX III to the 2006 Notification
Generic Structure of Environmental Impact Assessment Document

S. No.	EIA structure	Contents
(1)	(2)	(3)
1.	Introduction	• Purpose of the report • Identification of project and project proponent • Brief description of nature, size, location of the project and its importance to the country, region • Scope of the study – details of regulatory scoping carried out (As per Terms of Reference)
2.	Project Description	• Condensed description of those aspects of the project (based on project feasibility study), likely to cause environmental effects. Details should be provided to give clear picture of the following: • Type of project • Need for the project • Location (maps showing general location, specific location, project boundary and project site layout) • Size or magnitude of operation (incl. Associated activities required by or for the project) • Proposed schedule for approval and implementation • Technology and process description • Project description. Including drawings showing project layout, components of project etc. Schematic representations of the feasibility drawings which give information important for EIA purpose

(1)	(2)	(3)
		• Description of mitigation measures incorporated into the project to meet environmental standards, environmental operating conditions, or other EIA requirements (as required by the scope) • Assessment of New and untested technology for the risk of technological failure
3.	Description of the Environment	• Study area, period, components and methodology • Establishment of baseline for valued environmental components, as identified in the scope • Base maps of all environmental components
4.	Anticipated Environmental Impacts and Mitigation Measures	• Details of Investigated Environmental impacts due to project location, possible accidents, project design, project construction, regular operations, final decommissioning or rehabilitation of a completed project • Measures for minimizing and / or offsetting adverse impacts identified • Irreversible and Irretrievable commitments of environmental components • Assessment of significance of impacts (Criteria for determining significance, Assigning significance) • Mitigation measures
5.	Analysis of Alternatives (Technology and Site)	• In case, the scoping exercise re-results in need for alternatives: • Description of each alternative • Summary of adverse impacts of each alternative • Mitigation measures proposed for each alternative and • Selection of alternative
6.	Environmental Monitoring Program	• Technical aspects of monitoring the effectiveness of mitigation measures (incl. Measurement methodologies, frequency, location, data analysis, reporting schedules, emergency procedures, detailed budget and procurement schedules)
7.	Additional Studies	• Public Consultation • Risk assessment • Social Impact Assessment, R&R Action Plans
8.	Project Benefits	• Improvements in the physical infrastructure • Improvements in the social infrastructure • Employment potential—skilled; semi-skilled and unskilled • Other tangible benefits
9.	Environmental Cost Benefit Analysis	If recommended at the Scoping stage

(1)	(2)	(3)
10.	EMP	• Description of the administrative aspects of ensuring that mitigative measures are implemented and their effectiveness monitored, after approval of the EIA
11.	Summary and Conclusion (This will constitute the summary of the EIA Report)	• Overall justification for implementation of the project • Explanation of how, adverse effects have been mitigated
12.	Disclosure of Consultants engaged	• The names of the Consultants engaged with their brief resume and nature of Consultancy rendered

Table 22.5. Appendix III A to the 2006 Notification

Contents of Summary Environmental Impact Assessment

The Summary EIA shall be a summary of the full EIA Report condensed to ten A-4 size pages at the maximum. It should necessarily cover in brief the following Chapters of the full EIA Report:

1. Project Description
2. Description of the Environment
3. Anticipated Environmental impacts and mitigation measures
4. Environmental Monitoring Programme
5. Additional Studies
6. Project Benefits
7. Environment Management Plan

Note. Recently in October 2011, the MOEF has issued a notification stating that if the EIA report of a project is copied from other reports, then the same will be rejected. The project proponent will then have to start the process afresh, and that includes public hearing.

Table 22.6. Appendix IV A to the 2006 Notification

Procedure for Conduct of Public Hearing

1.0 The Public Hearing shall be arranged in a systematic, time bound and transparent manner ensuring widest possible public participation at the project site(s) or in its close proximity District-wise, by the concerned State Pollution Control Board (SPCB) or the Union Territory Pollution Control Committee (UTPCC).

2.0 The Process:

2.1 The Applicant shall make a request through a simple letter to the Member Secretary of the SPCB or Union Territory Pollution Control Committee, in whose jurisdiction the project is located, to arrange the public hearing within the prescribed statutory period. In case the project site is extending beyond a State or Union Territory, the public hearing is mandated in each State or Union Territory in which the project is sited and the Applicant shall make separate requests to each concerned SPCB or UTPCC for holding the public hearing as per this procedure.

2.2 The Applicant shall enclose with the letter of request, at least 10 hard copies and an equivalent number of soft (electronic) copies of the draft EIA Report with the generic structure given in Appendix III including the Summary Environment Impact Assessment report (Appendix III A) in English and in the local language, prepared strictly in accordance with the Terms of Reference communicated after Scoping (Stage-2). Simultaneously the applicant shall submit to the concerned SPCB or UTPCC, one hard and one soft copy of the same.

Report along with the Summary EIA report to the Ministry of Environment and Forests and to the following authorities or offices, within whose jurisdiction the project will be located:

- (a) District Magistrate/s
- (b) Zila Parishad or Municipal Corporation
- (c) District Industries Office
- (d) Concerned Regional Office of the Ministry of Environment and Forests

2.3 On receiving the draft Environmental Impact Assessment report, the above mentioned authorities except the MoEF, shall arrange to widely publicize it within their respective jurisdictions requesting the interested persons to send their comments to the concerned regulatory authorities. They shall also make available the draft EIA Report for inspection electronically or otherwise to the public during normal office hours till the Public Hearing is over. The Ministry of Environment and Forests shall promptly display the Summary of the draft Environmental Impact Assessment report on its website, and also make the full draft EIA available for reference at a notified place during normal office hours in the Ministry at Delhi.

2.4 The SPCB or UTPCC concerned shall also make similar arrangements for giving publicity about the project within the State/Union Territory and make available the Summary of the draft Environmental Impact Assessment report (Appendix III A) for inspection in select offices or public libraries or panchayats, etc. They shall also additionally make available a copy of the draft Environmental Impact Assessment report to the above five authorities/offices viz, Ministry of Environment and Forests, District Magistrate, etc.

3.0 Notice of Public Hearing:

3.1 The Member-Secretary of the concerned SPCB or UTPCC shall finalize the date, time and exact venue for the conduct of public hearing within 7(seven) days of the date of receipt of the draft Environmental Impact Assessment report from the project proponent, and advertise the same in one major National Daily and one Regional vernacular Daily. A minimum notice period of 30(thirty) days shall be provided to the public for furnishing their responses;

3.2 The advertisement shall also inform the public about the places or offices where the public could access the draft Environmental Impact Assessment report and the Summary Environmental Impact Assessment report before the public hearing.

3.3 No postponement of the date, time, venue of the public hearing shall be undertaken, unless some untoward emergency situation occurs and only on the recommendation of the concerned District Magistrate. The postponement shall be notified to the public through the same National and Regional vernacular dailies and also prominently displayed at all the identified offices by the concerned SPCB or Union Territory Pollution Control Committee;

3.4 In the above exceptional circumstances, fresh date, time and venue for the public consultation shall be decided by the Member-Secretary of the concerned SPCB or UTPCC only in consultation with the District Magistrate and notified afresh as per procedure under 3.1 above.

4.0 The Panel

4.1 The District Magistrate or his or her representative not below the rank of an Additional District Magistrate assisted by a representative of SPCB or UTPCC, shall supervise and preside over the entire public hearing process.

5.0 Videography

5.1 The SPCB or UTPCC shall arrange to video film the entire proceedings. A copy of the videotape or a CD shall be enclosed with the public hearing proceedings while forwarding it to the Regulatory Authority concerned.

6.0 Proceedings

6.1 The attendance of all those who are present at the venue shall be noted and annexed with the final proceedings.

6.2 There shall be no quorum required for attendance for starting the proceedings.

6.3 A representative of the applicant shall initiate the proceedings with a presentation on the project and the Summary EIA report.

6.4 Every person present at the venue shall be granted the opportunity to seek information or clarifications on the project from the Applicant. The summary of the public hearing proceedings accurately reflecting all the views and concerns expressed shall be recorded by the representative of the SPCB or UTPCC and read over to the audience at the end of the proceedings explaining the contents in the vernacular language and the agreed minutes shall be signed by the District Magistrate or his or her representative on the same day and forwarded to the SPCB/UTPCC concerned.

6.5 A Statement of the issues raised by the public and the comments of the Applicant shall also be prepared in the local language and in English and annexed to the proceedings:

6.6 The proceedings of the public hearing shall be conspicuously displayed at the office of the Panchayats within whose jurisdiction the project is located, office of the concerned Zila Parishad, District Magistrate, and the SPCB or UTPCC. The SPCB or UTPCC shall also display the proceedings on its website for general information. Comments, if any, on the proceedings which may be sent directly to the concerned regulatory authorities and the Applicant concerned.

7.0 Time period for completion of public hearing

7.1 The public hearing shall be completed within a period of 45 (forty five) days from the date of receipt of the request letter from the Applicant. Therefore the SPCB or UTPCC concerned shall sent the public hearing proceedings to the concerned regulatory authority within 8(eight) days of the completion of the public hearing. The applicant may also directly forward a copy of the approved public hearing proceedings to the regulatory authority concerned along with the final Environmental Impact Assessment report or supplementary report to the draft EIA report prepared after the public hearing and public consultations.

7.2 If the SPCB or UTPCC fails to hold the public hearing within the stipulated 45(forty five) days, the Central Government in the Ministry of Environment and Forests for Category 'A' project or activity and the State Government or Union Territory Administration for Category 'B' project or activity at the request of the SEIAA, shall engage any other agency or authority to complete the process, as per procedure laid down in this notification.

Table 22.7. Appendix V to the 2006 Notification

Procedure Prescribed For Appraisal

1. The applicant shall apply to the concerned regulatory authority through a simple communication enclosing the following documents where public consultations are mandatory:

- Final Environment Impact Assessment Report (20(twenty) hard copies and 1 (one) soft copy)
- A copy of the video tape or CD of the public hearing proceedings
- A copy of final layout plan (20 copies)
- A copy of the project feasibility report (1 copy)

2. The Final EIA Report and the other relevant documents submitted by the applicant shall be scrutinized in office within 30 days from the date of its receipt by the concerned Regulatory Authority strictly with reference to the TOR and the inadequacies noted shall be communicated electronically or otherwise in a single set to the Members of the EAC / SEAC enclosing a copy each of the Final EIA Report including the public hearing proceedings and other public responses received along with a copy of Form-1 or Form 1A and scheduled date of the EAC /SEAC meeting for considering the proposal.

3. Where a public consultation is not mandatory and therefore a formal EIA study is not required, the appraisal shall be made on the basis of the prescribed application Form 1 and a pre-feasibility report in the case of all projects and activities other than Item 8 of the Schedule. In the case of Item 8 of the Schedule, considering its unique project cycle, the

clearance. As and when the applicant submits the approved scheme/building plans complying with the stipulated environmental clearance conditions with all other necessary statutory approvals, the EAC/SEAC shall recommend the grant of environmental clearance to the competent authority.

4. Every application shall be placed before the EAC/SEAC and its appraisal completed within 60 days of its receipt with requisite documents/details in the prescribed manner.

5. The applicant shall be informed at least 15 (fifteen) days prior to the scheduled date of the EAC/SEAC meeting for considering the project proposal.

6. The minutes of the EAC/SEAC meeting shall be finalised within 5 working days of the meeting and displayed on the website of the concerned regulatory authority. In case the project or activity is recommended for grant of EC, then the minutes shall clearly list out the specific environmental safeguards and conditions. In case the recommendations are for rejection, the reasons for the same shall also be explicitly stated.

22.4. General Details Constituting an Environmental Impact Assessment

In general, an Environmental Impact Assessment report should contain atleast the following details :

- (1) *Input information ;*
- (2) *Plant operation details ;*
- (3) *Details of waste streams ; and*
- (4) *Environmental Management Planning, including Disaster Management Plan.*

All these factors are discussed below :

(1) **Input Information.** The input information w.r.to the location of the industry or the project, shall cover the following factors :

- (i) *Location and layout of the plant / project ;*
- (ii) *Meteorology of the area ;*
- (iii) *Demography and socio-economics of the area ;*
- (iv) *Important monuments existing in the area ;*
- (v) *Water-resources of the area ;*
- (vi) *The nature and type of existing soils in the area ;*
- (vii) *Land use pattern of the area ;*
- (viii) *Cropping pattern of the area ; and*
- (ix) *Forests and species of the area.*

These factors are briefly discussed below :

(i) **Location and layout of the plant.** Location and layout of the proposed plant or project is of primary importance, in terms of its geographical location, topography and importance of the area in national context. These factors need be discussed here.

(ii) **Meteorology of the area.** Meteorology of the area, where the proposed plant or industry is proposed to be located, plays a vital role in the dissipation of the produced pollutants in air and water, both. Thus, a project or an industry which may prove to be harmless in an arid area may prove to be quite dangerous in tropical or other areas, and *vice versa*. Hence, detailed discussion of meteorology of the area is required in an EIA.

(iii) **Demography and socio-economics of the area.** Demography and socio-economic structure of the nearby localities in the

industry, plays an important role, in terms of its culture and population. Say for example, installation of a sophisticated plant in a rural area may require migrated urban population to work and man the plant in the rural area, that may often lead to social breakdown or displacement of local population. Such details should therefore be investigated and discussed in an EIA.

(iv) **Important monuments existing in the area.** If a polluting industry is allowed to be established near the vicinity of important monuments or structures, then such monuments are likely to get defaced or spoiled by the acidic fumes caused by the polluted air emissions, likely to be released by the proposed plant. The harmful effects caused to the Taj Mahal by the Mathura Refinery is an example of such adverse environmental effects. The monuments or important buildings and structures existing in the area of the proposed industry or the project, should therefore be thoroughly studied, and the possible effects of the project on them, should be thoroughly examined and discussed in the EIA.

(v) **Water resources of the area.** The existing water resources like the lakes or the rivers of the area of the proposed industry or the project will have an immediate effect in terms of its relative availability and possible contamination by the proposed project. Moreover, excessive usage of water results in the lowering of the sub-soil water-table or reduced availability of irrigation water, leading to many harmful consequences. All such possibilities should be thoroughly examined and discussed in the E.I.A.

(vi) **The nature and types of existing soils in the area.** The types of soils in the area of the proposed project will have an immediate effect in terms of percolation of pollutants and possible contamination of underground water. Its capacity to receive toxic pollutants and convert them chemically, is also very important. Hence, these impacts must be thoroughly studied and described in the EIA.

(vii) **Land use pattern of the area.** The land use pattern of the area of the proposed project needs to be studied and discussed in an environmental impact assessment. For example, the agricultural land may allow for recycling of various components of the polluted water or air emissions, likely to be released by the plant ; whereas, the urban areas has very little capacity to absorb any additional emissions or depositions.

(viii) **Cropping pattern of the area.** The crops and their nature are directly connected to the *green belt* concept surrounding the large plants. Some crops are more sensitive to particular pollutants and are also economically more important than others. Hence, a judicial consideration of the impacts of the proposed plant on the crops of the area has to be examined and discussed in the E.I.A.

(ix) **Forest and species of the area.** The existing biological environment of the area, consisting of the flora and fauna, including the *trees, grasses, fishes, birds, and mammals*, etc., must be thoroughly studied, along with the possible impacts of the proposed industry (or the plant) on them. Specific description must be made of the plants and animal species or their habitats, which are likely to be lost by the construction and operation of the proposed project. General biological features, such as the species diversity and over-all eco-

(2) **Plant Operation Details.** The environmental impact of an industry or a project, ultimately depends on the *processes* to be adopted and used in the plant. It also depends on the raw materials used and the finished products produced. The storage, handling and accidental spillage of raw materials, or sometimes even of the finished products, may cause prominent impact on the environment. Hence, all these factors must be thoroughly studied and described in the Environmental Impact Assessment.

(3) **Waste Streams.** The solid, liquid and air wastes, generated by the proposed project, will evidently affect the environment to a large extent, as summarised below :

(i) **Solid wastes.** The impacts of solid wastes can generally be ascertained and checked, in a comparatively easier manner, than those of liquid and air wastes. The solid wastes from the process plant and also from the various domestic and commercial activities of the plant, will need to be studied and analysed. These may require different disposal techniques. Depending on the mode of disposal and chemical composition, the impact of solid waste on soil and land would need to be ascertained.

In certain specific projects, like the project of a thermal power plant, the problem of disposal of solid waste generated as *fly ash*, may pose great problems and environmental hazards, since it may need huge land area for storage/disposal, which may not be available, and may also pose adverse air and land pollution.

(ii) **Liquid wastes.** There is every possibility of the water pollution being caused by a project or an industry, either through the discharge of wastewaters of the industrial processes, in the water bodies, like the lakes or rivers ; or of the contamination of the underground water by the seepage of polluted wastewater from the plant. The extent of pollution load likely to be contained in the effluents of the plant (even after recycling, etc.) and the manner of its disposal with reference to the quality and capacity of the receiving water body, will determine the adverse impact on the quality of the water bodies. The possibility of causing *thermal pollution* will also need assessment. These details must be very thoroughly analysed and discussed in the Environmental Impact Assessment.

(iii) **Air Emissions.** The polluted air emissions likely to be released by the plant will need a thorough evaluation and analysis. In case of air emissions, the impact on environment may be local as well as over long distances. These impacts will largely depend on the atmospheric conditions and meteorology of the area. While long range environmental effects may attract a little bit lesser attention, it will be very essential to analyse and assess the local impacts to determine the pollutant levels on the ground level surrounding the plant, where the majority of human population or vegetation may be affected. The dispersion and distribution of air-pollutants can be analysed by Gaussian plume distribution, as discussed in article 18.7. The correlation (Eq. 18.3) gives the max. concentration in the windward direction for a relatively short period of exposure. Correction factors based on wind and atmospheric data can be prescribed for 8 and 24 hours, respectively. These values are quite important, because of relevance of the threshold limits of tolerance.

More long term annual average (geometric mean or arithmetic mean) can be calculated...

This helps in determining the G.I.C. at all important localities surrounding the plant. Sophistication of this exercise can further be achieved by exact day to day wind data and allowing for the contribution of wind movement in other directions also.

The above exercises lead to the *concentration profiles*. If there are multiple sources within the close vicinity, they can be added together for the cumulative effect. These exercises locate the worst affected areas and also inform the pollution levels in highly sensitive areas. Such exercises were infact carried out in the case of Mathura Refinery to study its effects on the Taj Mahal.

The information on the G.I.C. values can, thus, be utilised to evaluate its impact on the human, vegetation and other flora and fauna in the area. Accordingly, it may become necessary to modify the control mechanisms in the plant to reduce such adverse impacts.

(4) **Environmental Management Planning.** A detailed environmental management planning has to be drawn and submitted with EIA, for formulation, implementation, and monitoring of the environmental protection measures, during and after commissioning of the proposed project.

The *environmental management plan* for commissioning of the plant will ensure that resources are used with maximum efficiency to minimise generation of wastes, by adequately treating the residuals, recovering by-products, and adopting recycling techniques to the maximum possible extent. Such an overall strategy would not only cut down pollution control costs, but also results in savings in the cost of production.

The *post-project management plan* has also to be drawn for being executed during the operational phase of the project. It is necessary to monitor both the development and subsequent operational activities, if the investment in EIA is not to be wasted. *Post Project Monitoring (PPM)* will secure an immediate advantage in environmental management. It will indicate whether the conditions imposed on an entrepreneur, such as specific mitigation measures, have been adopted. In the longer term, post project monitoring may help to find and implement remedial measures for unexpected future adverse impacts, and also to relax some stringent conditions imposed, while clearing a project if found to be unnecessary during the operation of the project.

The *Disaster Management Plan (DMP)* should also be worked out with the Environmental Impact Assessment of each project, since the environmental risks are inherent in the construction and operation of each complex industrial plant, particularly the refineries, or chemical or pharmaceutical units. Any major failure or even minor failures in the system could lead to a disaster, resulting in heavy toll of human life and devastating losses to ecology and property. A comprehensive and scientific approach to risk assessment and management decisions is considered essential, in view of the increase in the number and magnitude of environmental risks. Based on the findings of the risk assessment, the following two disaster management plans, should be prepared :

(a) **Disaster Management Plan (DMP)** for the management of various disasters...

(b) Emergency Preparedness Plan (EPP) for co-ordination with various offsite agencies during emergencies likely to affect the outside environment.

22.5. Methodology for Preparing Environmental Impact Assessment

A nicely prepared Environmental Impact Assessment (EIA) may also establish quantitative values for selected parameters, which indicate the quality of the environment before, during, and after the proposed developmental activity.

EIA essentially involves three steps, i.e. (i) *identification*, (ii) *prediction*, and (iii) *evaluation* of impacts, as discussed below :

(i) *Impact identification* may be carried out with the help of checklists, matrices or networks. Checklists merely present a list of environmental parameters to be investigated for possible impacts. Matrices are two dimensional checklists in which cause-effect relationships are established by listing possible project activities along one axis and potentially impacted environmental characteristics or conditions along the other. Networks illustrate cause-condition effect linkages as also temporal dimensions, and, therefore, provide the most comprehensive methodology for impact identification.

(ii) *Prediction of environmental impacts* requires the greatest degree of scientific application. This step involves projecting the baseline environmental setting into the future, with and without the project, and then performing the necessary calculations for predicting real impacts of the proposed development. Whereas, fairly accurate models are available for prediction with respect to air and water components, predictions of biological, socio-economic and cultural impacts are very often subject to uncertainty. The degree of uncertainty could, however, be ascertained mathematically or indicated in qualitative terms while presenting prediction results.

(iii) *The evaluation of impacts* in an EIA calls for conversion of the predicted values for various environmental parameters to a comparable set of units using some system of normalisation. Ideally, the environmental impacts should be expressed in monetary units for easy and objective comparison with other costs and benefits of the project. The major problem, however, lies in assigning monetary values to intangible parameters. Methods involving numerical rating and ranking, or weighting and scaling of environmental impacts are, therefore, commonly used. The latter are preferred as the weighted scores can be added to yield an aggregate score, representing the net environmental impact of a particular alternative. The scores for various alternatives could be compared for determining the environmentally preferred alternative.

The weighting and scaling technique, however, offers only a 'yes' or 'no' choice, whereas consideration of impacts on an individual basis or according to common categories permits more flexibility in the decision-making process. It is, therefore, desirable that numerical scores be accompanied with a summary of interpretation in a decision table, while communicating the evaluation results. Table 22.8 summarizes the various techniques used for impact assessment.

Table 22.8. Impact Evaluation Methodologies

S. No.	Name	Salient features
1.	<i>McHarg overlay approach</i>	Involves mapping an area and the environmental impacts of the project. A shading system indicates the degree of impact. The transparent maps are overlaid to identify visually, the project location giving least impacts. Computerised overlays could also be used.
2.	<i>Leopold matrix method</i>	Uses matrix of human action and environmental factors. Significant impacts are shown placing a diagonal line in appropriate cell of the matrix. Magnitude and importance of impacts are evaluated on a 1-10 scale and placed on either side of the diagonal. The values indicated in the matrix cells are not equitable. A written description of significant impacts as well as activities or environmental factors, for which many interactions occur, must be presented to enable overall assessment.
3.	<i>Battelle environmental evaluation system</i>	This method is based on checklist of 78 environmental parameters. Predicted value of each parameter is converted to a 0-1 scale of environmental quality (EQ) using value function graphs. Each environmental parameter is assigned a weight out of 1000 parameter importance units (PIU) by ranked pairwise comparison. EQ value is multiplied by PIU to provide environmental score. The final score of the alternative is the difference between the sum of the scores, with and without the project. These scores of alternatives are then compared to find the best alternative. It provides a useful technique for comparing the alternatives from environmental angle. However, numerical scores do not allow comparison with project costs and benefits, which are in monetary units.
4.	<i>Adaptive environmental assessment and management</i>	A workshop comprising groups of experts is held to consider and define variables, such as objectives, indicators, time and spatial boundaries, alternate actions, etc. The core group of experts then develops an explicit computer model of the system, which is later subjected to validity testing and used to develop resilient policies to avoid adverse impacts. Since model is based on understanding of the process as well as components, it simulates behaviour over time and is responsive to different modes of management.
5.	<i>Economic valuation input-output modelling</i>	It stimulates the effects of introducing a project on the economy and the environment, using a two-sector model. One sector is the standard economic input-output model for tracing direct and indirect impacts on an economy of injection of or reduction in expenditure. The other sector is the environmental sector with flows of ecological commodity inputs and outputs as well as those associated with the final demand. Feedback from environment to economic sector is also incorporated.
6.	<i>Cost-benefit analysis</i>	As applicable to EIA, the technique involves monetary valuation of environmental components and natural resources through surrogate markets, direct questioning, or voting. These values are used along with the values of commodities consumed by individuals as well as their direct and indirect

A methodology developed by taking advantage of the best features of all the available methodologies, uses *cause condition-effect networks* for impact identification, mathematical models for impact prediction, and *Battelle Environmental Evaluation System* (BEES) adopted for industrial projects for evaluation.

22.6. Role of an Environmental Engineering/Consulting Firm in Obtaining Environmental Clearance for a Project

To carry out the many tasks required for environmental assessment and to successfully negotiate in the approval process, an applicant must decide whether to do the job internally or whether to hire an environmental engineering/consulting firm. Consideration of credibility and objectivity are very important. An EIA prepared internally without the help of a credible consultant, may usually be termed as non-objective and self servicing, by the Govt. experts, while examining an EIA for its clearance.

Similarly, if you get into the public hearings or into the court, the defensibility of your environmental data is of prime importance. They will be defensible if they are complete, of high quality, responsive to adverse impacts, responsive to alternatives, and if they can be vouchsafed by some recognised expert witnesses.

Also the matter of availability of appropriate and necessary in-house expertise gives rise to a set of questions :

- (i) Are all the necessary environmental disciplines available in-house ?
- (ii) Are there areas of special analysis required ?
- (iii) Are there special monitoring requirements ?

Generally, the environmental impact process is an infrequent or one-time experience for the applicant. However, prior-experience and familiarity with regulations and agency requirements is necessary for the speedy conclusion of the process. The group undertaking environmental aspects of a project must be aware of all relevant environmental regulations ; they must be experienced in doing EIA studies ; they must have the ability to interpret agency requirements to define the appropriate level of effort for EIA studies ; and they must understand the implications of study efficiencies, scheduling and agency relationships.

An applicant's ability to devote proper personnel to the project for the necessary time interval to carry forward environmental studies is frequently a serious problem. The size of a project and its complexity determines the range of skills, the time duration and the agencies involved. If a project is simple, chances that the applicant make the necessary in-house skills available are pretty good. If the project is complex, it is unlikely that these resources would be available in their entirety or could be devoted to the project for the time needed.

Depending upon the applicant's resources and relevant corporate mandate, the entire environmental study work can be performed in-house, or it can be performed with the assistance of a consultant, or a Consultant may be

22.7. Role of Regulatory Agencies and Control Boards in Obtaining Environmental Clearance for a Project

Interfacing with regulatory agencies and Pollution Control Boards who have to clear the project, is an evolving and continuing process that should be started as early as possible. The applicant must also recognise that the relationship with agencies will be on different levels at different stages of development.

Basic interaction with the regulatory agencies revolves around approvals. Once the required construction and operation approvals are identified, the applicant must develop an efficient strategy for obtaining the needed approvals.

At early conceptual stages (when feasibility is still a consideration), the applicant may not have a full definition of the project and may be concerned, constrained or apprehensive about how much to reveal to regulatory agencies (or to the public) about plans. However, some information must be revealed to regulatory agencies in order to get useful information in return. For example, at this stage, you will want to know what approvals will be required and you will want to know what attitudes agency personnel will have towards projects similar to yours. You will want to know about environmental problems or constraints of particular concern to each regulatory agency. Some of this information may be readily obtained without having to be too explicit, but the more explicit you can be, the better and more useful will be the responses or information from the regulatory agencies. Experience shows that regulatory agencies are willing to be helpful and are generally respectful of the proprietary nature of your corporate project plans.

Likewise, the more willing you are to talk to regulatory agency personnel about potential plans or options, the more responsive and trustful they will be. This is not to say that they do not have their own viewpoints about control technology etc. They have their mandates and objectives, which may represent views counter to yours.

The objective of discussions at the early stages should be to determine if the proposed project has reasonable potential for complying with the environmental regulations, and whether the project has reasonable chances of obtaining all necessary approvals without incurring undue difficulties or delays (for example, public controversy, expensive control measures, lengthy permitting procedures, etc.). Information obtained at an early stage can be helpful in overall project planning and scheduling, in preparing design schedules, plans for ordering equipment, and preparation of construction schedules, etc.

Contact with regulatory agencies at an early stage of project development is usually one portion of an environmental review. The other major portion of an environmental review is concurred with a rapid survey or screening of potential sites in order to identify site-related environmental problems that would also become potential difficulties in obtaining approvals. The information needed to complete an environmental review is most often

Government regulatory agencies, and can be obtained without any reference to a particular project.

Dealing with regulatory agencies at later stages of the project will require an even greater degree of interaction and may require even more details to describe the project. For example, the next distinct step is the active search for (and evaluation of) potential sites. Discussions at this stage will likely require interaction with agencies not previously contacted. Further, determining compatibility of a project with a specific site will require having more detailed information about the project and revealing more about the project to the concerned agencies.

Selection of a site next leads to detailed studies necessary for impact assessment. At this stage, the applicant should be prepared to discuss the project with the regulatory agencies openly and in detail. These discussions commence with definition of the scope of the environmental monitoring progress, and EIA studies that will be required by the concerned agencies.

One often-voiced concern is that such discussions can lead to exorbitant demands by agencies monitoring the impact studies. Another concern is that revealing areas of potential environmental problems may adversely influence agency attitudes towards the project. These concerns must be referenced to the fact that the EIA report is to be a full disclosure document. In the absence of adequate information about a project, agencies may very well have a tendency to ask for more information rather than less.

It is recommended that the applicant should be fully apprised of the extent of potential problems and defines a study programme adequate to examine these problems. Further, it is recommended that developed work programmes be taken to the agencies for comments and approval, rather than simply asking the personnel to specify a work programme. If the applicant has been open, and has established credibility with the agencies by acknowledging potential problems, it is highly likely that some mutual agreement will be reached upon a work programme, that is not excessive.

It is dangerous not to acknowledge or reveal potential environmental problems early-on, in the in-house discussions with the agencies. Such problems, usually come to light eventually, and it is a far better strategy to identify them, before an outside agency or an NGO or an intervenor does. Early identification underscores the fact that you are aware of the problems and are trying to do something about them. In addition, legal entanglements over EIA are almost always the results of not having described the potential problems and impacts of the project, rather than the result of revealing adverse impacts.

By the time you begin the EIA study programme, your project will most likely be known to the public and will begin to be watched closely by the interested individuals and groups. Thus, throughout the conduct of EIA studies, it is advisable to maintain frequent and close communication with the regulatory Govt. agencies, so that no "surprises" are presented to agencies upon submission of the EIA report, which they have to review and approve.

22.8. Role of the General Public in Environmental Clearance

It is evident that a large degree of latitude exists for interaction with the public at various stages of a project. Recognising that the EIA is a full disclosure document and that it will ultimately be made public, and further recognising that a project which impacts a community will be of public interest, the EIA must be written in simple and effective manner, as to be appreciated by public man.

Perhaps, the greatest concern of Corporations is how to interact with the public in the early stages of project development prior to the preparation of an EIA. There are strategies which may be employed ranging from a very elaborate and highly visible public relations programme to a very low profile. The degree of such interactions and the amount of information given about the project, is largely a matter of Corporate choice.

Moreover, if desired, techniques such as surveys can be employed to sample public attitudes, and thus provide some basis for determining how best to interact with the public. Regardless of which strategy a Corporation chooses to employ, the following general points should be taken into account :

- (i) Prepare in advance, the type and amount of information you choose to release to the public.
- (ii) Make sure the information released is consistent with the action of the Corporation that are observable by the public.
- (iii) Make sure that the information given by various Corporate sources is consistent between the sources.
- (iv) Be prepared to discuss your project in a manner that is responsive, and which will not be viewed as evasive.
- (v) Do not oversell the project or avoid discussion of potential problems, but remain prepared to give a positive response about what you are doing about public concerns.

—23

Chapterwise Objective Multichoice Questions

Chapter 1 : Introduction to the Subject

- Q. 1. The liquid wastes originating from residential and industrial buildings, are collectively called :
 (a) domestic sewage (b) combined sewage
 (c) sanitary sewage (d) none of these.
- Q. 2. The sewer which transports the sewage to the point of treatment, is called :
 (a) house sewer (b) main sewer
 (c) outfall sewer (d) none of these.
- Q. 3. A combined sewerage system, collectively carries :
 (a) domestic sewage and industrial sewage
 (b) storm sewage and domestic sewage
 (c) storm sewage and industrial sewage
 (d) storm sewage and sanitary sewage.
- Q. 4. The sewerage system originates from :
 (a) outfall sewer (b) main sewer
 (c) house sewer (d) none of these.
- Q. 5. A sewer which receives the discharge from a number of independent houses, is called :
 (a) house sewer (b) intercepting sewer
 (c) lateral sewer (d) none of these.
- Q. 6. A sewer pipe carrying sewage from a building to the point of its immediate disposal, is called :
 (a) intercepting sewer (b) lateral sewer
 (c) house sewer (d) none of these.
- Q. 7. When rainy season is confined to a few months, like that in India, the preferred sewerage system would be :
 (a) combined system (b) separate system
 (c) partially separate system (d) none of these.
- Q. 8. The suitable system of sanitation for an area having uniformly distributed mild rains throughout the year, like that in England, is :
 (a) separate system (b) combined system
 (c) partially separate system (d) partially combined system.

- Q. 9. The water carriage system of collection of waste products is preferred to dry conservancy system, because :
 (a) it is cheaper in initial cost
 (b) it does not require treatment before disposal
 (c) it is more hygienic in nature
 (d) it is easier to maintain.
- Q. 10. The wastewater coming from kitchens and bath rooms is popularly known as :
 (a) domestic sewage discharge (b) sludge discharge
 (c) drainage discharge (d) none of these.
- Q. 11. In a city drainage system, having drainage to sewage ratio as 20, the peak dry weather flow would amount to :
 (a) 20% of the design discharge
 (b) 5% of the design discharge
 (c) slightly less than 5% of the design discharge
 (d) slightly more than 5% of the design discharge.

Chapter 2 : Estimating the Design Sewage Discharge

- Q. 12. For the design of sewers in India, the percentage of sewage discharge, is assumed as :
 (a) 25—30% of water supplied from water works
 (b) 75—80% of water supplied from water works
 (c) 100% of water supplied from water works.
 (d) none of these.
- Q. 13. The sewer pipes have to be designed and checked for :
 (a) only maximum flow
 (b) only minimum flow
 (c) both maximum and minimum flows
 (d) none of them.
- Q. 14. Sewage treatment works are normally designed for a design period of :
 (a) 40—50 years (b) 30—40 years
 (c) 15—20 years (d) 5—10 years.
- Q. 15. Sewage pumping plants are normally designed for a design period of :
 (a) 40—50 years (b) 30—40 years
 (c) 15—20 years (d) 5—10 years.
- Q. 16. For Indian cities, like Delhi or Calcutta, the per capita sewage production may be of the order of :
 (a) 500 litres (b) 200 litres
 (c) 100 litres (d) none of these.
- Q. 17. The peak design flows, expressed as number of times their average values, will be :
 (a) greater for smaller lateral sewers, as compared to these for larger trunk sewers

- (b) greater for larger trunk sewers, as compared to these for smaller lateral sewers
 (c) equal for all sizes and types of sewers.
- Q. 18. The ratio of maximum daily sewage flow to the average daily sewage flow for sewer mains of 0.6 to 1 m diameter, is generally taken as :
 (a) 1.5 (b) 2.0
 (c) 3.0 (d) none of these.
- Q. 19. The ratio of the maximum daily sewage flow to the average daily sewage flow for trunk sewers, above 1.25 m in diameter, is :
 (a) 1.5 (b) 2.0
 (c) 3.0 (d) 4.0.
- Q. 20. The ratio of the max. daily sewage flow to the average daily flow for small sewers and laterals up to say 0.25 m in diameter, is :
 (a) 1.5 (b) 2.0
 (c) 3.0 (d) 4.0.
- Q. 21. The ratio of the max. sewage flow to the average flow for branch sewers, up to say 0.5 m in diameter, is
 (a) 1.5 (b) 2.0
 (c) 3.0 (d) 4.0.
- Q. 22. The ratio of minimum hourly flow to the average flow of sewage, is :
 (a) $\frac{1}{3}$ (b) $\frac{1}{2}$
 (c) $\frac{2}{3}$ (d) 3.
- Q. 23. For moderate sized areas and sewers, say up to 1 m in diameter, the maximum hourly drafts may be considered as equal to :
 (a) 1.5 times the maximum daily
 (b) 3 times the maximum daily
 (c) $\frac{1}{3}$ times the maximum daily
 (d) none of the above.
- Q. 24. The peak flow for the design of sewers, has been connected to the average flow and the population of the city in thousands, by an empirical relation, given by
 (a) $Q = \frac{18 + \sqrt{P}}{4 + \sqrt{P}} Q_{av}$ (b) $Q = \frac{4 + \sqrt{P}}{18 + \sqrt{P}} Q_{av}$
 (c) $Q = \frac{18 + P}{4 + \sqrt{P}} Q_{av}$ (d) none of the above.
- Q. 25. Point out the wrong statement, in the following assumptions, generally made in the design of moderate sized sewers :
 (a) average daily flow = annual average daily flow
 (b) minimum daily flow = $\frac{2}{3}$ average daily flow
 (c) minimum hourly flow = $\frac{1}{3}$ average daily flow
 (d) maximum daily flow = 2 average daily flow

- (e) maximum hourly flow = 3 average daily flow
 (f) none of them.
- Q. 26. $\frac{1}{3}$ to $\frac{1}{2}$ space is left vacant in the design of sewer pipes at maximum discharge, due to :
 (a) possible low estimates of maximum and average flows
 (b) large scale possible infiltration of storm water
 (c) unexpected increase in population
 (d) all the above factors.
- Q. 27. The minimum and the maximum diameter of sewers, generally adopted in the designs, may be :
 (a) 15 cm and 100 cm (b) 15 cm and 300 cm
 (c) 25 cm and 450 cm (d) 60 cm and 300 cm.
- Chapter 3 : Estimating the Peak Drainage Discharge**
- Q. 28. The Rational formula, for evaluating peak drainage discharge, can be safely applied to catchments, up to :
 (a) 25 hectares (b) 500 hectares
 (c) 2000 hectares (d) up to any limit.
- Q. 29. The value of the coefficient of runoff for paved areas is of the order of :
 (a) zero (b) 0.5
 (c) 0.9 (d) greater than 1.
- Q. 30. The value of the coefficient of runoff for perfectly impervious areas, tend to :
 (a) zero (b) 0.5
 (c) 1.0 (d) infinity.
- Q. 31. Critical rainfall intensity would always be the hourly rainfall value, if T_c exceed 1 hr.
 (a) more than (b) less than
 (c) equal to.
- Q. 32. With the increase in its duration, the intensity of rainfall will :
 (a) decrease (b) increase
 (c) not change.
- Q. 33. The Rational formula for peak drainage discharge computations, was evolved by :
 (a) Kuichling (b) Fruhling
 (c) Lloyd David (d) all of them.
- Q. 34.* If the overland flow from the critical point to the mouth of a drain is 12 km, and the difference in levels between these points is 14.5 m, then the inlet time would be of the order of :
 (a) 2 hours (b) 4 hours
 (c) 6 hours (d) 8 hours.

- Q. 35. The drainage discharge of a town of 16 hectares area, consisting of 40% hard paved ($k = 0.80$), 30% unpaved ($k = 0.20$), and remaining as wooded ($k = 0.10$), with a max. rain intensity of 5 cm/hr, would be computed by Rational formula, as equal to :
- (a) 0.91 cumecs (b) 0.091 cumecs
(c) 9.1 cumecs (d) none of these.

Chapter 4 : Hydraulic Design of Sewers and S.W. Drain Sections

- Q. 36. Laying of sewers is usually done with the help of :
- (a) a theodolite (b) a compass
(c) a plane table (d) sight rails and boning rods.
- Q. 37. Pick up the incorrect statement :
- (a) sewer pipes carry sewage flow by gravity
(b) sewer pipe material has to withstand wear and tear due to abrasion
(c) sewer pipes should be designed for self-cleansing velocity of at least 0.45 m/sec at minimum discharge, or 0.8 m/sec at full design discharge
(d) sewer pipes can be carried up and down the hills and valleys
(e) none of the above.
- Q. 38.* The diameter of a R.C.C. sewer pipe is 300 mm ; the gradient required to generate self cleansing velocity would be of the order of :
- (a) 1 in 50 (b) 1 in 200
(c) 1 in 500 (d) 1 in 1000.
- Q. 39. The gradient required to generate self cleansing velocity in a circular sewer of 150 mm dia, is of the order of :
- (a) 1 in 30 (b) 1 in 100
(c) 1 in 200 (d) 1 in 250.
- Q. 40. The flow velocity in a circular sewer at minimum design discharge is about x times the full design velocity at maximum design discharge, where x is about :
- (a) 80% (b) 30%
(c) 90% (d) 100%.
- Q. 41. Minimum self cleansing velocity in sewers, calculated as 0.45 m/sec for ensuring non-settlement of 1 mm size sand and 6 mm size organics, should be checked, for a minimum discharge, equal to :
- (a) max design discharge (b) average discharge
(c) $\frac{1}{3}$ max design discharge (d) $\frac{1}{3}$ average discharge.
- Q. 42. Sewer pipes of dia less than 0.4 m, are designed at maximum flow, to be running at :
- (a) full depth (b) $\frac{1}{3}$ full depth
(c) $\frac{2}{3}$ full depth (d) $\frac{3}{4}$ full depth.

- Q. 43. Sewer pipes of dia 0.4 to 0.9 m, are designed at maximum flow, running at :
- (a) full depth (b) $\frac{1}{3}$ full depth
(c) $\frac{2}{3}$ full depth (d) $\frac{3}{4}$ full depth.
- Q. 44. Main trunk sewers, larger than 0.9 m in dia, are designed due to ventilation considerations, at max. discharge, running at :
- (a) full depth (b) $\frac{1}{3}$ full depth
(c) $\frac{2}{3}$ full depth (d) $\frac{3}{4}$ full depth.
- Q. 45. The most suitable section of a sewer in a separate sewerage system is :
- (a) rectangular (b) circular
(c) new egg-shape (d) parabolic.
- Q. 46. The most suitable section of a sewer in a combined sewerage system is :
- (a) rectangular (b) circular
(c) new egg-shape (d) parabolic.
- Q. 47. An egg-shaped sewer, when compared to a circular sewer, is :
- (a) economical (b) more stable
(c) easier to construct (d) provides better self-cleansing velocity at low discharges.
- Q. 48. The flow velocity in a sewer does not depend on :
- (a) its grade (b) its length
(c) its hydraulic mean depth (d) its roughness.
- Q. 49. The effect of increasing the diameter of a sewer, on the self-cleansing velocity, is :
- (a) to increase it (b) to decrease it
(c) not to cause any effect.
- Q. 50. Pick up the correct statement from the following :
With self cleansing velocity in sewers,
- (a) the silting occurs at the bottom
(b) the scouring occurs at the bottom
(c) the silting and scouring both occur at the bottom
(d) neither silting nor scouring occur at the bottom.
- Q. 51.* In a circular sewer of dia D , if the depth of flow is $\frac{1}{3} D$, the wetted perimeter will be equal to :
- (a) $\frac{\pi D}{4}$ (b) $\frac{\pi D}{2}$
(c) $\frac{\pi D}{3}$ (d) none of these.

- Q. 52. Two sewer sections, laid at the same grade, will be hydraulically equivalent, if :
- their discharging capacity, when running full, are equal
 - their flow velocities, when running full, are equal
 - their flow areas, when running full, are equal
 - all the above factors are equal.

Chapter 5 : Sewers, Their Construction, Maintenance and Required Appurtenances

- Q. 53. For trunk and outfall sewers, the type of section used to be preferred in olden days, was :
- Horse shoe shaped
 - parabolic shaped
 - egg-shaped
 - semi-elliptical shaped.
- Q. 54. Boussinesq's equation for computing unit pressure (p_t) at a depth H on the sewers, due to traffic load (P) is given by :
- $$(a) p_t = \frac{3H^3P}{2\pi Z^3} \quad (b) \frac{2H^3P}{3\pi Z^3}$$
- $$(c) p_t = \frac{3H^3P}{2Z^3} \quad (d) \frac{2H^3P}{3Z^3}$$
- where, Z is the slant height of the considered point from the load P .
- Q. 55. Pick up the incorrect statement :
- The pressure exerted by sewage, when running full in a pipe, is called the internal pressure ; and it may induce tensile stresses in the pipe material
 - The pressure exerted by back fill on an underground sewer, the self weight of sewer, and the superimposed traffic loads, may cause compressive stresses in the pipe material
 - Temperature stresses are usually computed on underground sewers, to avoid the cracking of their joints, by the formula $L \propto T$
 - Flexural stresses, caused by the beam action, are normally ignored, while designing underground sewer pipes.
- Q. 56. The most prominent force, acting on the underground sewer pipes, would be :
- compressive force
 - tensile force
 - bending force
 - all of these.
- Q. 57. Pick up the incorrect statement :
- Asbestos cement pipes are :
- light in weight
 - susceptible to corrosion by chemicals in sewage
 - available in different sizes, say 10—90 cm in dia
 - strong enough to withstand traffic and other compressive loads.
- Q. 58. Pick up the incorrect statement :
- R.C.C. pipes are very strong to withstand compressive forces
 - R.C.C. pipes are very strong to withstand tensile forces

- R.C.C. pipes are quite resistant to erosion and abrasion
 - R.C.C. pipes are not easily corroded by the hydrogen sulphide gas, produced by the flowing sewage.
- Q. 59. The longitudinal reinforcement on R.C. sewer pipes is $x\%$ of the cross-sectional area of concrete, where x is :
- 0.125
 - 0.25
 - 2.5
 - 25%.
- Q. 60. Branch and main sewers are widely made of :
- R.C.C.
 - P.C.C.
 - glazed stone-ware
 - cast iron.
- Q. 61. House connections and lateral sewers are widely made of :
- R.C.C.
 - P.C.C.
 - glazed stoneware
 - cast iron.
- Q. 62. Stoneware pipes are generally not used for sewer mains, because they are :
- weak in compression
 - weak in tension
 - hydraulically less efficient
 - less resistant to organic corrosion.
- Q. 63. The best sewer material to resist hydrogen sulphide corrosion, is :
- R.C.C.
 - brick masonry
 - glazed stoneware
 - asbestos cement.
- Q. 64. Sewers are generally laid, starting from their :
- off take point
 - outfall point
 - mid point
 - any point along the alignment.
- Q. 65. Sheet piling and bracing of excavation trench for laying sewers, will be more a necessity, in :
- clayey soils
 - silty soils
 - sandy soils
 - quick sands.
- Q. 66. Testing of sewer pipes may involve :
- water test
 - mirror test
 - ball test
 - all these tests.
- Q. 67. For joining smaller sewer pipes of dia less than 0.6 m or so, the preferable joint is :
- spigot and socket joint
 - collar joint
 - bandage joint
 - mechanical joint.
- Q. 68. For joining bigger sewer pipes of dia more than, say 0.6 m, the preferred joint is :
- socket and spigot joint
 - collar joint
 - bandage joint
 - mechanical joint.
- Q. 69. Asbestos cement pipes are normally joined by using :
- bell and spigot joint
 - simplex joint
 - lock joint
 - none of these.

- Q. 70.** The equipment used for checking the levels of the sewer inverts is :
 (a) dumpy level (b) boning rod
 (c) theodolite (d) none of these.
- Q. 71.** Manhole covers are made circular :
 (a) for architectural reasons
 (b) to strengthen the cover
 (c) to prevent falling of the cover into the manhole
 (d) to make the entry convenient.
- Q. 72.** Manholes are generally located
 (a) at all changes of direction of sewer
 (b) at all changes of gradient of sewer
 (c) at all junctions of different sewers
 (d) all of the above.
- Q. 73.** A manhole is generally classified as a deep manhole, if its depth is more than :
 (a) 0.9 m (b) 1.2 m
 (c) 1.5 m (d) 2 m.
- Q. 74.** A manhole is generally classified as a shallow manhole, if its depth is less than :
 (a) 0.9 m (b) 1.2 m
 (c) 1.5 m (d) 2 m.
- Q. 75.** The maximum spacing of manholes on sewers, having diameter more than 1.5 m, is :
 (a) 75 m (b) 150 m
 (c) 200 m (d) 300 m.
- Q. 76.** For very small sized sewers, of say upto 0.3 m diameter, the maximum manhole spacing, specified by Indian standards, is :
 (a) 30 m (b) 45 m
 (c) 75 m (d) 100 m.
- Q. 77.** A drop manhole may be provided along a sewer line :
 (a) when the sewer drops from a height of more than 0.6 m or so.
 (b) when a branch sewer outfalls into it from a height of more than 0.6 m or so.
 (c) to provide inspection chambers in the sewer line
 (d) for none of these.
- Q. 78.** Cleanouts help in :
 (a) admitting sewage into the sewer
 (b) cleaning the sewer
 (c) inspecting the sewer
 (d) none of these.
- Q. 79.** When a sewer line is dropped below the hydraulic gradient line to pass it through an obstruction, the arrangement is known as :
 (a) inverted syphon (b) sag pipe
 (c) depressed sewer (d) all of these.

- Q. 80.** Of the following, the most effective type of storm relief work to divert excess drainage in combined sewers, is :
 (a) leaping weir (b) overflow weir
 (c) siphon spillway (d) all of these.
- Q. 81.** Pick up the incorrect statement :
 (a) Small sewers are cleaned by flushing
 (b) Medium sewers are cleaned by cane rodding
 (c) Ventilation columns are provided to create airlocks in the sewers
 (d) Large sized sewers are cleaned by actually entering into the sewers.
- Q. 82.** The gas which is generally found present in sewers, is :
 (a) H_2S (b) CO_2
 (c) CH_4 (d) all of these.
- Q. 83.** When a sheet of paper moistened with lead acetate, held for 5 minutes in a manhole, turns black ; then the sewer certainly contains :
 (a) hydrogen sulphide gas (b) carbon dioxide gas
 (c) methane gas (d) petrol vapours.
- Q. 84.** Extinguishing of the flame of a miners safety lamp within 5 minutes, when held at the level of sewage in a manhole, indicates in the sewer, the presence of :
 (a) hydrogen sulphide gas (b) carbon dioxide gas
 (c) methane gas (d) petrol vapours.
- Q. 85.** Insertion of safety lamp in the upper portion of a manhole, causing flames, surely indicates in the sewer, the presence of :
 (a) hydrogen sulphide gas (b) carbon dioxide gas
 (c) methane gas (d) petrol vapours.
- Q. 86.** In a ventilating column, a cowl is provided :
 (a) to prevent entry of foul gases
 (b) to prevent entry of objects
 (c) to prevent the exit of heat
 (d) for none of these.
- Q. 87.** Ventilation columns, in sewers, are provided to :
 (a) help in escaping of foul gases
 (b) help in preventing spread of foul gases
 (c) to provide support to the sewers
 (d) none of these.
- Q. 88.** Ventilation columns are placed along a sewer line, at intervals of about :
 (a) 30—50 m (b) 75—100 m
 (c) 150—300 m (d) 500—750 m.

Chapter 6 : Pumps for Lifting Sewage

- Q. 89. The pump, which permits the sewage solids to pass out with liquid sewage, without clogging the pump, is a :
 (a) reciprocating pump (b) centrifugal pump
 (c) pneumatic ejector (d) none of these.
- Q. 90. A disintegrating pump, which breaks the sewage solids, while passing sewage through it, is a special type of :
 (a) centrifugal pump (b) reciprocating pump
 (c) air pressure pump (d) none of these.
- Q. 91. Pick up the incorrect statement :
 (a) centrifugal pumps are the most widely used type of pumps for lifting sewage
 (b) reciprocating pumps have become obsolete these days
 (c) centrifugal pumps are also known as air pressure pumps
 (d) none of them.
- Q. 92.* A cylindrical ejector having a height of 2 m fills after every 10 minutes with a peak sewage discharge of 0.0146 cumecs ; the diameter of the ejector could be chosen as :
 (a) 2.5 m (b) 2 m
 (c) 1.5 m (d) 1 m.
- Q. 93.* A $\frac{1}{2}$ cusecs pump, for a lift of 10 m (including losses), should have a horse power of about :
 (a) 1 (b) 3
 (c) 5 (d) 7.

Chapter 7 : Quality and Characteristics of Sewage

- Q. 94. The appropriate percentage of water in sewage is :
 (a) 90% (b) 99%
 (c) 99.9% (d) 99.99%
 (e) 100%.
- Q. 95. The specific gravity of sewage is : (GATE, 1990)
 (a) zero (b) slightly less than 1
 (c) equal to 1 (d) slightly greater than 1.
- Q. 96. Pick up the incorrect statement :
 (a) aerobic bacteria flourish in the presence of oxygen
 (b) anaerobic bacteria flourish in the absence of oxygen
 (c) facultative bacteria flourish in the presence as well as absence of oxygen
 (d) none of the above.
- Q. 97. Well oxidised sewage will contain nitrogen, largely in the form of :
 (a) nitrites (b) nitrates
 (c) free ammonia (d) all of these.

- Q. 98. Partially oxidised stale sewage will contain nitrogen mainly in the form of :
 (a) nitrites (b) nitrates
 (c) free ammonia (d) (a) and (c) both.
- Q. 99. Well oxidised sewage will contain sulphur, largely in the form of :
 (a) sulphites (b) sulphates
 (c) hydrogen sulphide (d) all of these.
- Q. 100. Gases, which are generally evolved during aerobic decomposition of sewage, are :
 (a) $\text{CO}_2 + \text{NH}_3 + \text{H}_2\text{S}$ (b) $\text{CO}_2 + \text{NH}_3 + \text{H}_2\text{S} + \text{CH}_4$
 (c) $\text{CO}_2 + \text{NH}_3 + \text{SO}_2$ (d) $\text{CO}_2 + \text{NH}_3 + \text{SO}_2 + \text{CH}_4$.
- Q. 101. Gases, which are generally evolved during anaerobic decomposition of sewage, are :
 (a) $\text{CO}_2 + \text{NH}_3 + \text{H}_2\text{S}$ (b) $\text{CO}_2 + \text{NH}_3 + \text{H}_2\text{S} + \text{CH}_4$
 (c) $\text{CO}_2 + \text{NH}_3 + \text{SO}_2$ (d) $\text{CO}_2 + \text{NH}_3 + \text{SO}_2 + \text{CH}_4$.
- Q. 102. Temperature variations affect the :
 (a) biological activity of bacteria in sewage
 (b) viscosity of sewage
 (c) solubility of gases in sewage
 (d) all of the above.
- Q. 103. 1000 kg of sewage is estimated to contain, approximately, total solids, equal to :
 (a) 0.5—1 kg (b) 2—5 kg
 (c) 5—10 kg (d) 10—20 kg.
- Q. 104. Imhoff cone is used to measure, in sewage :
 (a) total solids (b) total organic solids
 (c) total inorganic solids (d) settleable solids.
- Q. 105. The pH of fresh sewage is usually :
 (a) less than 7 (b) more than 7
 (c) equal to 7 (d) equal to zero.
- Q. 106. Acidity of sewage is indicated by a pH value of :
 (a) less than 7 (b) more than 7
 (c) equal to 7 (d) equal to 14.
- Q. 107. pH = 3, when compared to pH = 5, will be more acidic by :
 (a) 2 times (b) 20 times
 (c) 100 times (d) none of them.
- Q. 108. pH = 4, when compared to pH = 7, will be more acidic by :
 (a) 3 times (b) 300 times
 (c) 1000 times (d) none of them.
- Q. 109. Chlorine content in ordinary municipal sewage is :
 (a) more than the usual tolerable limit
 (b) less than the usual tolerable limit
 (c) equals the usual tolerable limit
 (d) very much high, necessitating its compulsory removal

- Q. 110. Methaemoglobinemia disease is caused in children, by :
 (a) conversion of nitrites to nitrates
 (b) conversion of nitrates to nitrites
 (c) reaction between haemoglobin and carbon dioxide
 (d) both due to (a) and (c).
- Q. 111. The solubility of oxygen in sewage, when compared to its solubility in distilled water, is :
 (a) 80% (b) 90%
 (c) 99% (d) 99.9%
- Q. 112. Pathogenic bacteria, enter wastewaters, primarily from :
 (a) industrial wastes
 (b) domestic wastes
 (c) both industrial as well as domestic wastes
 (d) infiltration in sewers from the surrounding soils.
- Q. 113. Biodegradable organics enter wastewaters, from :
 (a) industrial wastes
 (b) domestic wastes
 (c) both industrial and domestic wastes
 (d) infiltration from the surrounding soils.
- Q. 114. Soluble organics in domestic wastewaters, include :
 (a) carbohydrates (b) proteins
 (c) lipids (d) all of these.
- Q. 115. Chemical Oxygen Demand (COD) of sewage is the :
 (a) oxygen required to oxidise biologically active organic matter
 (b) oxygen required to oxidise biologically inactive organic matter
 (c) (a) and (b) both
 (d) none of these.
- Q. 116. Biochemical Oxygen Demand (BOD) of sewage is the :
 (a) oxygen required to oxidise biologically active organic matter
 (b) oxygen required to oxidise biologically inactive organic matter
 (c) (a) and (b) both
 (d) none of these.
- Q. 117. Minimum D.O. prescribed for a river stream, to avoid fish kills, is :
 (a) 2 ppm (b) 4 ppm
 (c) 8 ppm (d) 10 ppm.
- Q. 118. BOD_5 represents 5 days-biochemical oxygen demand at a temperature of :
 (a) 0°C (b) 20°C
 (c) 30°C (d) none of these.
- Q. 119. Standard 5 day BOD at 20°C, when compared to ultimate BOD, is about :
 (a) 58% (b) 68%
 (c) 98% (d) none of these.

- Q. 120. If the depletion of oxygen is found to be 2 mg/l after incubating 3 ml of sewage diluted to 300 ml, at 20°C for 5 days, then the BOD_5 of the sewage would be :
 (a) 200 mg/l (b) 300 mg/l
 (c) 600 mg/l (d) none of these.
- Q. 121. While testing for COD of sewage, organic matter is oxidised by $K_2Cr_2O_7$ in the presence of :
 (a) HCl (b) H_2SO_4
 (c) HNO_3 (d) none of these.
- Q. 122. The microbial utilisation of organics is a :
 (a) first order reaction (b) second order reaction
 (c) third order reaction. (d) none of these.
- Q. 123. Between BOD and COD, the greater of the two, is
 (a) BOD
 (b) COD
 (c) both are equal
 (d) depends on sewage characteristics.
- Q. 124. The average BOD_5 of domestic sewage is :
 (a) 80 kg/day/person (b) 8 kg/day/person
 (c) 0.8 kg/day/person (d) 0.08 kg/day/person.
- Q. 125. The graphical representation of BOD (Y) exerted against time in days (t) is given by :

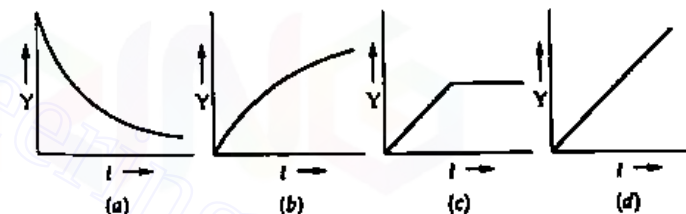


Fig. 23.1

- Q. 126. The graph between the amount of organic matter left in sewage, and time elapsed in days, is :
 (a) linear (b) parallel to time axis
 (c) exponential (d) none of these.
- Q. 127. If a 2% solution of sewage sample is incubated for 5 days at 20°C, and the dissolved oxygen depletion is 10 mg/l, then the BOD of the sewage would be :
 (a) 50 mg/l (b) 200 mg/l
 (c) 500 mg/l (d) 5000 mg/l.
- Q. 128. The relative stability of a sewage sample, whose D.O. equals the total oxygen required to satisfy its BOD, is :
 (a) zero (b) 1%
 (c) 100% (d) infinity.

Chapter 8 : Disposing of the Sewage Effluents

- Q. 129. Notwithstanding any legal by laws, the sewage can generally be disposed of without any specific treatment, in a water body, if the dilution factor available, is :
- (a) more than 100 (b) more than 300
(c) more than 500 (d) none of these.
- Q. 130. Complete thorough treatment should generally be given to sewage, before its disposal in a stream, if the dilution factor available is :
- (a) less than 350 (b) less than 250
(c) less than 150 (d) none of these.
- Q. 131.* Dissolved oxygen in streams is :
- (a) max. at noon (b) min. at noon
(c) max. at midnight
(d) same throughout the day.
- Q. 132. Algae dies out, though fish life may survive, in a river zone, known as :
- (a) zone of degradation (b) zone of active decomposition
(c) zone of recovery (d) none of these.
- Q. 133. D.O. concentration may fall to zero, causing anaerobic conditions in a river reach, called :
- (a) zone of degradation (b) zone of active decomposition
(c) zone of recovery (d) none of these.
- Q. 134. If a sewer drain carrying a discharge of 2 cumecs, outfalls into a river carrying a discharge of 10 cumecs, and having DO equal to 8.4 mg/l, the resultant DO of the mix. will be equal to :
- (a) 5 mg/l (b) 7 mg/l
(c) 10.5 mg/l (d) none of these.
- Q. 135. As compared to fresh river water, sea water contains :
- (a) 10% more oxygen (b) 20% more oxygen
(c) 10% less oxygen (d) 20% less oxygen.
- Q. 136. Disposal of sewage causes formation of sludge banks in :
- (a) river waters (b) sea waters
(c) lake waters (d) none of these.
- Q. 137. The most common method of wastewater disposal is :
- (a) evaporation (b) dilution in surface water
(c) rapid infiltration (d) application in irrigation.
- Q. 138. The phenomenon by virtue of which a soil is clogged with sewage matter, is called
- (a) sewage farming (b) sewage sickness
(c) sewage bulking (d) none of these.
- Q. 139. Most of the bacteria in sewage are :
- (a) anaerobic (b) parasitic
(c) saprophytic (d) pathogenic.

- Q. 140. Disposal of sewage for sewage farming will be most favourable, where :
- (a) rivers run with very low flows during summer
(b) climate is wet and rate of evaporation is low
(c) area is hilly
(d) all of these.
- Q. 141. Sewage disposal by dilution is most preferred, where :
- (a) the sewage arriving at outfall point is fresh and nonseptic
(b) there are strong forward currents
(c) discharge in water body is not low
(d) all of these.
- Q. 142. The natural process, under which the flowing river water gets cleaned, is known as :
- (a) oxidation (b) self-purification
(c) photosynthesis (d) none of these.
- Q. 143. When the sewage is distributed over a level area surrounded by dikes, for sewage farming, the method is known as :
- (a) surface irrigation (b) free flooding
(c) furrow irrigation (d) none of these.

Chapter 9 : Treatment of Sewage

+

Chapter 10 : Process Design of a Complete Treatment Plant

+

Chapter 11 : Treatment of Industrial Waste Waters

- Q. 144. During preliminary treatment of sewage :
- (a) oils and greases are removed by skimming tanks
(b) floating materials are removed by screening
(c) grit and sand are removed by grit chambers
(d) all of the above are correct.
- Q. 145. Sewage treatment units are generally designed for :
- (a) maximum flow only
(b) minimum flow only
(c) average flow only
(d) maximum and minimum flow both.
- Q. 146. If the sewage contains greases and fatty oils, they are removed in :
- (a) grit chambers (b) detritus tanks
(c) sedimentation tanks (d) skimming tanks
(e) aeration tanks (f) none of these.
- Q. 147. The detention period adopted for grit chambers is of the order of :
- (a) 1 minute (b) 5 minutes
(c) 2—4 hours (d) 12 hours.

- Q. 148. The detention period adopted for sewage sedimentation tanks is of the order of :
- (a) 1—2 hours (b) 4—8 hours
(c) 8—16 hours (d) 24—36 hours.
- Q. 149. The detention period adopted for oxidation ponds is of the order of :
- (a) 24—36 hours (b) 2—4 days
(c) 1—2 weeks (d) 2—6 weeks.
- Q. 150. The detention period in a septic tank is of the order of :
- (a) 2—6 hours (b) 4—8 hours
(c) 12—36 hours (d) 2—4 days.
- Q. 151. Primary treatment of sewage is meant for :
- (a) removal of larger suspended matter
(b) removal of fine suspended organic matter
(c) removal of dissolved organic matter
(d) removal of pathogenic bacteria.
- Q. 152. The spacing of bars in coarse screens is generally more than :
- (a) 6 mm or so (b) 10 mm or so
(c) 25 mm or so (d) 50 mm or so.
- Q. 153. The settling velocity of a spherical body in still water is given by :
- (a) Lacey's formula
(c) Darcy's law
(c) Hazen William's formula
(d) Stoke's law.
- Q. 154. The ratio of 'flowing through period' to 'detention period' in a sedimentation tank, is called :
- (a) surface loading (b) displacement efficiency
(c) theoretical efficiency (d) settling velocity.
- Q. 155. The BOD_5 of the effluents obtained from septic tanks, is of the order of :
- (a) zero—5 mg/l (b) 10—20 mg/l
(c) 100—200 mg/l (d) 500—2000 mg/l.
- Q. 156. The detention period in Imhoff tanks is of the order of :
- (a) 30 min—1 hour (b) 1—2 hours
(c) 2—4 hours (d) 6—12 hours.
- Q. 157. The short-circuiting occurring in a sedimentation tank is represented by :
- (a) surface loading (b) displacement efficiency
(c) recirculation ratio (d) detention time.
- Q. 158. Surface loading for a rectangular sedimentation tank of length L , width B , and height H , is given by :
- (a) $\frac{Q}{B \cdot H}$ (b) $\frac{Q}{B \cdot L}$
(c) $\frac{BLH}{Q}$ (d) none of them.
- (where Q is the design discharge)

- Q. 159. The ratio of the design discharge to the surface area of a sedimentation tank is known as its :
- (a) surface loading (b) overflow velocity
(c) overflow rate (d) all of these.
- Q. 160. Normal values of surface loading for primary sewage sedimentation tanks, ranges between :
- (a) 10—15 cum/m²/day (b) 25—30 cum/m²/day
(c) 40—50 cum/m²/day (d) none the these.
- Q. 161. Normal values of surface loading for secondary sewage sedimentation tanks, ranges between :
- (a) 10—15 cum/m²/day (b) 25—30 cum/m²/day
(c) 40—50 cum/m²/day (d) none the these.
- Q. 162. A grit chamber, having higher detention period (about 3—4 times), is called a :
- (a) grit basin (b) detritus tank
(c) vacuator (d) grit channel.
- Q. 163. The sewage treatment units, which work on anaerobic decomposition of organic matter, are :
- (a) oxidation ponds (b) septic tanks
(c) activated sludge plants (d) (b) and (c) both.
- Q. 164. The sewage treatment units, which work on aerobic decomposition of organic matter, are :
- (a) trickling filters (b) imhoff tanks
(c) sludge digestion tanks (d) none of these.
- Q. 165. Activated sludge treatment plants are normally preferred for :
- (a) towns and smaller cities (b) medium sized cities
(c) large sized cities (d) all of them.
- Q. 166. Trickling filter plants are preferred for sewage treatment for :
- (a) towns and smaller cities (b) medium sized cities
(c) large sized cities (d) (a) and (b) both.
- Q. 167. To exclude the floating debris from sewage, screens are used and fixed :
- (a) parallel to the direction of flow.
(b) perpendicular to the direction of flow
(c) at an angle 30°—60° to the direction of flow
(d) orientation is immaterial.
- Q. 168. The grit chambers of a sewage treatment plant, normally need cleaning :
- (a) every hour (b) every day
(c) every fortnight (d) every year.
- Q. 169. For a grit channel, if the recommended flow velocity is 0.25 m/sec, and the detention period is 1 minute, then the length of the tank is :
- (a) 15 m (b) 25 m
(c) 240 m (d) none of these.

- Q. 170. In the design of grit chambers in sewage treatment :
- baffles are essential
 - temperature control is an important factor
 - the maximum flow velocity should be of the order of 0.3 m/sec
 - the detention period should at least be 10 minutes.
- Q. 171. The working conditions in Imhoff tanks are :
- aerobic only
 - anaerobic only
 - aerobic in lower compartment and anaerobic in upper compartment
 - anaerobic in lower compartment and aerobic in upper compartment.
- Q. 172. The secondary treatment of sewage is caused by :
- bacteria
 - algae
 - coagulants
 - none of them.
- Q. 173. Chlorine is sometimes used in sewage treatment :
- to aid flocculation
 - to increase biological activity of bacteria
 - to avoid bulking of activated sludge
 - to help in grease separation.
- Q. 174. The anaerobic secondary treatment of sewage is essentially a process of :
- dehydration
 - reduction
 - oxidation
 - none of these.
- Q. 175. The gas, which is evolved in a sludge digestion tank, is mainly composed of :
- nitrogen
 - ammonia
 - hydrogen sulphide
 - methane.
- Q. 176. The rate of sludge accumulation in a septic tank is generally of the order of :
- 10 litres/person/yr
 - 20 litres/person/day
 - 30 litres/person/day
 - 100 litres/person/day.
- Q. 177. The flowing through velocity in an Imhoff tank should not exceed :
- 0.1 m/min.
 - 0.3 m/min.
 - 0.7 m/min.
 - 1.0 m/min.
- Q. 178. Quantity of solids removed by screening depends on the :
- length of vertical bars
 - thickness of vertical bars
 - screen opening size
 - none of these.
- Q. 179. Oxygen-utilisation rate in biological reactors is a function of :
- wastewater characteristics only
 - reactor characteristics only
 - both (a) and (b)
 - atmospheric characteristics.

- Q. 180. Dissolved organic solids in wastewater treatment may be removed by :
- coagulation
 - hypochlorination
 - reverse osmosis
 - none of them.
- Q. 181. A reactor, in which the randomly packed solid medium provides the surface area for biofilm growth, is :
- an oxidation pond
 - a bio-tower
 - a trickling filter
 - an anaerobic sewage lagoon.
- Q. 182. The effluent of a septic tank is :
- fit for discharge into any open drain
 - highly foul, containing large amount of suspended solids, needing sedimentation
 - as good as that from a complete treatment plant
 - none of the above.
- Q. 183. In a shallow waste stabilisation pond, the sewage is treated by :
- aerobic bacteria only
 - algae only
 - dual action of aerobic bacteria and algae
 - sedimentation.
- Q. 184. Which of the following units work on the principle of anaerobic decomposition :
- sedimentation tanks
 - trickling filters
 - sludge digestion tanks
 - activated sludge plant.
- Q. 185. The maximum efficiency of BOD removal is achieved in :
- oxidation ditch
 - oxidation pond
 - aerated lagoon
 - trickling filter.
- Q. 186. A septic tank is :
- a settling tank
 - a digestion tank
 - both (a) and (b)
 - none of these.
- Q. 187. Composting and lagooning are the methods of :
- filtration
 - sedimentation
 - sludge digestion
 - sewage disposal.
- Q. 188. For satisfactory working of a sludge digestion unit, the pH range of digested sludge should be maintained in the range of :
- 3 to 5
 - 6.5 to 8
 - 8.5 to 10
 - any of these.
- Q. 189. The gas coming out from a sludge digestion tank is :
- methane only
 - carbon dioxide only
 - 70% methane and 30% carbon dioxide
 - 30% methane and 70% carbon dioxide.

Q. 190. For the same solids content, if the quantity of sludge with moisture content of 97% is x litres, then the quantity of sludge with moisture content of 94% will be :

- (a) $\frac{x}{2}$ litres (b) $\frac{x}{3}$ litres
(c) $2x$ litres (d) $3x$ litres.

Q. 191. A given sludge with 98% moisture is x times more bulky than with 95% moisture, where x is :

- (a) 6 (b) 2.5
(c) 3 (d) none of these.

Q. 192. When there is no recirculation of treated sewage in high rate biological filtration of sewage, then the recirculation factor is :

- (a) 1 (b) 0
(c) infinity (d) none of the above.

Q. 193.* When the recirculation ratio in a high rate trickling filter is unity, then the recirculation factor is :

- (a) 1 (b) more than 1
(c) less than 1 (d) zero.

Q. 194. Activated sludge is the :

- (a) aerated sludge in the aeration unit
(b) sludge settled in the humus tank
(c) sludge in the secondary tank after aeration and rich in microbial mass
(d) sludge in the secondary tank after aeration and rich in nutrients.

(GATE, 1993)

Q. 195. In a conventional activated sludge plant, the oxygen demand is highest near the :

- (a) inlet end of the aeration tank
(b) outlet end of the aeration tank
(c) inlet end of the clarifier
(d) outlet end of the clarifier.

Q. 196. A conventional activated sludge plant involves a mixing regime, which is essentially of :

- (a) plug flow type (b) completely mixed type
(c) both (a) and (b) (d) none of the above.

Q. 197. Lower F/M value in a conventional activated treatment plant will mean :

- (a) lower BOD removal (b) higher BOD removal
(c) no effect on BOD removal (d) none of the above.

Q. 198. The aeration process adopted in an activated sludge plant, which ensures optimal utilisation of air, is known as :

- (a) conventional process (b) step aeration
(c) activated aeration (d) tapered aeration.

Q. 199. The term sludge age is associated with :

- (a) sedimentation (b) aeration
(c) sludge drying (d) none of these.

Q. 200. High COD to BOD ratio of an organic pollutant represents :

- (a) high biodegradability of the pollutant
(b) low biodegradability of the pollutant
(c) presence of free oxygen for aerobic decomposition
(d) presence of toxic material in the pollutant.

(GATE, 1993)

Chapter 12 : Excreta Disposal in Unsewered and Rural Areas

Q. 201. The minimum horizontal distance for locating a privy pit, from a well or a hand pump, is :

- (a) 10 m (b) 30 m
(c) 100 m (d) 500 m.

Q. 202. The minimum vertical distance between the bottom of the privy pit and the ground watertable is :

- (a) 0.3 m (b) 1 m
(c) 3 m (d) none of them.

Q. 203. The most economical and hygienic rural privy is :

- (a) an aqua-privy (b) a privy pit
(c) a cess pool (d) a soak pit.

Chapter 13 : Sewage Collection from Houses and Buildings

Q. 204. An intercepting trap is provided at the junction of :

- (a) a house sewer and a municipal sewer
(b) an unfoul house drain and a foul house drain
(c) any two house drains
(d) none of these.

Q. 205. A gully trap is provided at the junction of :

- (a) a house sewer and a municipal sewer
(b) an unfoul roof or room drain and a foul bath or a kitchen drain
(c) any two house drains
(d) none of these.

Q. 206. A nahni trap is provided :

- (a) at the head of each house drain
(b) at the outfall end of each house drain
(c) at the junction of two house drains
(d) none of these.

Q. 207. The waste pipe in house plumbing, which carries the discharge from sanitary fittings like bath rooms, etc. ; is called :

- (a) waste pipe (b) soil pipe
(c) anti-siphonage pipe (d) vent pipe.

- Q. 208. A pipe which is installed in house drainage, to preserve the water seal of traps, is called :
 (a) vent pipe (b) waste pipe
 (c) soil pipe (d) antisiphonage pipe.
- Q. 209. Two pipe system of providing building drainage consists of :
 (a) one soil pipe + one waste pipe + one vent pipe + one sullage pipe
 (b) one soil pipe + one waste pipe + two vent pipes
 (c) two soil pipes + two waste pipes
 (d) two soil pipes only.
- Q. 210. A pipe installed in house drainage for ventilation purposes is called a :
 (a) soil pipe (b) antisiphonage pipe
 (c) vent pipe (d) none of these.
- Q. 211. The pipe in buildings, through which human excreta flows, is called :
 (a) soil pipe (b) waste pipe
 (c) vent pipe (d) none of these.
- Q. 212. Ventilation of house drainage is required to :
 (a) dilute the foul air in the drain
 (b) reduce the obnoxious effects of foul air
 (c) relieve the pressure of foul gases
 (d) all of the above.
- Q. 213. In one pipe system of plumbing, wastewater is carried down in soil pipe from :
 (a) water-closets (b) kitchens and bath rooms
 (c) wash basins and sinks (d) all of the above.
- Q. 214. In one pipe system of building drainage, we provide :
 (a) one soil pipe
 (b) one waste pipe
 (c) one soil pipe and one vent pipe
 (d) one waste pipe and one vent pipe.
- Q. 215. In single stack drainage system in houses, we provide :
 (a) one soil pipe only
 (b) one soil pipe and one vent pipe
 (c) one sullage pipe only
 (d) one soil pipe and one sullage pipe.
- Q. 216. In house plumbing system, the leakage of different pipes is tested by :
 (a) smoke test (b) air test
 (c) water test (d) all of these.
- Q. 217. Point out the incorrect statement, in connection with building drainage :
 (a) a floor trap prevents the evolution of foul gases
 (b) an antisiphonage pipe provides the basic water seal of W.C.'s and bath rooms.

- (c) a vent pipe removes foul gases into the atmosphere above the roof level
 (d) soil and waste pipes carry down the sewage, produced in the house fixtures.

Chapter 14 : Disposal of Municipal and Industrial Solid Wastes

- Q. 218. The anaerobic method of mechanical composting, as practised in India, is called the :
 (a) Indore method (b) Mangalore method
 (c) Bangalore method (d) none of these.
- Q. 219. The method of refuse disposal, involving burial in trenches, is called :
 (a) incineration (b) pulverisation
 (c) composting (d) none of these.
- Q. 220. The aerobic method of mechanical composting, as practised in India, is called the :
 (a) Bangalore method (b) Nagpur method
 (c) Bhopal method (d) Indore method.
- Q. 221. Sanitary landfills may cause troubles during :
 (a) peak summers (b) peak winters
 (c) peak monsoons (d) none of these.
- Q. 222. Leachate is a coloured liquid, that comes out of :
 (a) septic tanks (b) sanitary landfills
 (c) compost plants (d) aerated lagoons.
- Q. 223. The quantity of refuse produced in an average Indian city or a town is of the order of :
 (a) $\frac{1}{4} - \frac{1}{5}$ t/c day (b) 2 - 5 t/c day
 (c) 4 - 5 t/c day (d) none of these.

Chapter 15 : Disposal of Environmentally Hazardous Biomedical, Radioactive, and E-Wastes

- Q. 224. Biomedical wastes consist of :
 (a) solid wastes (b) liquid wastes
 (c) both (a) and (b) (d) none of these.
- Q. 225. The approximate quantity of biomedical waste generated in Indian hospitals per patient per day approximates to :
 (a) 0.5 kg (b) 0.75
 (c) 1.45 kg (d) 4.0 kg.
- Q. 226. Biomedical waste (*Management and Handling Rules*) were enacted in India under Environment Protection Act, 1986, in the year :
 (a) 1986 (b) 1989
 (c) 1998 (d) 2000.
- Q. 227. Which of the following is not a provision of the Biomedical Waste (*Management and Handling Rules*) :

- (a) All the health care institutes are reqd. to make arrangements to ensure that their produced wastes are handled and managed without causing any adverse health effects
- (b) It is necessary to segregate the various types of biomedical wastes by collecting the wastes into yellow, red, and black coloured containers.
- (c) Sharp wastes should be handled with extra-ordinary care and placed in puncture-resistance containers or should be mutilated at the point of generation by some needle destroyer.
- (d) The offenders cannot be punished.
- Q. 228. For proper disposal of biomedical wastes, all infected, soiled, pathological, human and sharp wastes should be marked as cytotoxic wastes, by using the symbol :
- (a)  (b) 
 (c)  (d) none of them.
- Q. 229. Which of the following methods is generally not adopted for safe disposal of biomedical wastes ?
- (a) Shredding after disinfection (b) Hydroclaving
 (c) Incineration (d) Landfilling.
- Q. 230. Incineration can be adopted for disposal of biomedical wastes of the type :
- (a) solid wastes (b) liquid wastes
 (c) both (a) and (b) (d) none of them.
- Q. 231. Which of the following statements is incorrect in relation to auto-claving for disposal of biomedical wastes ?
- (a) Auto-claving is a high heat thermal process
 (b) Auto-claving is a low heat thermal process
 (c) Auto-claving is meant for disposal of solid wastes only
 (d) After auto-claving, the wastes are shredded and disposal off suitably.
- Q. 232. Liquid biomedical wastes should be disposed off :
- (a) by disinfection and discharge into sewers
 (b) by incineration into liquid waste incinerators
 (c) both (a) and (b)
 (d) none of the above.
- Q. 233. Throughout the world, rotary kiln incinerators are being widely used for burning and disposing off biomedical wastes of the type :
- (a) solid wastes (b) liquid wastes
 (c) glass wastes (d) none of the above.
- Q. 234. A conventional rotary kiln incinerator is provided with an induced draft fan to :
- (a) maintain a negative pressure

- (b) ensure that all leakages from the kiln occur into the system rather than out of it
- (c) both (a) and (b)
- (d) none of the above.
- Q. 235. Which of the following statements in relation to a conventional rotary kiln incinerator is incorrect ?
- (a) An induced draft fan is provided into the system, and sized to maintain a negative pressure in the entire system
- (b) The horizontal kiln is mounted on a slight incline of 2 to 4% slope, with higher end at the feed end of the kiln.
- (c) The kiln designed for incinerating liquid wastes may not have any longitudinal slope or may have a negative slope
- (d) None of the above.
- Q. 236. Which of the following statements is incorrect ?
- (a) The cell damaging capacity of different types of radioactive radiations is compared by relative biological effectiveness (RBE).
- (b) The RBE for alpha particles is 20, while electrons have RBE of 1.
- (c) (b) above means that the dense track of ions formed by alpha particles causes about 20 times as much damage to a biological body as is caused by a thin ion trail generated by electrons.
- (d) None of the above.
- Q. 237. The commonly used unit of absorbed radiation is defined as that dose of ionizing radiation that imparts 1 Joule of energy to 1 kg of absorbing material. This unit is known as :
- (a) rad (b) gray (Gr)
 (c) rem (d) silvert.
- Q. 238. The biological damage produced in a human body by different types of radiations is obtained by multiplying the radiation dose in rad with RBE of the radiation type. This damage is then measured in units of :
- (a) rem (b) silvert
 (c) gray (d) none of them.
- Q. 239. The relation between the old and new units of absorbed radiation is :
- (a) $1 \text{ rad} = \frac{1}{100} \text{ gray}$ (b) $1 \text{ rad} = 100 \text{ gray}$
 (c) $1 \text{ rad} = 1 \text{ gray}$ (d) none of them.
- Q. 240. The relation between the old and new units of biological damage produced in a human body by radiations is given as :
- (a) $1 \text{ rem} = \frac{1}{100} \text{ silvert}$ (b) $1 \text{ rem} = 100 \text{ silvert}$
 (c) $1 \text{ rem} = 1 \text{ silvert}$ (d) none of these.
- Q. 241. Radiation sickness may be produced by radiation dose of about :
- (a) 100 rem (b) 50 rem
 (c) 20 rem (d) 5 rem.

Q. 242. The relation between rem and rad is given as :

- (a) $\text{rem} = \text{rad} \times \text{RBE}$ (b) $\text{rem} = \frac{\text{rad}}{\text{RBE}}$
 (c) $\text{rem} = \frac{\text{RBE}}{\text{rad}}$ (d) none of the above.

Q. 243. An ordinary chest X-ray subjects human body to radiation of 5 rad, and if RBE of X-rays is 1, then the biological damage in radiation terms of rem will be equal to :

- (a) 5 (b) $\frac{1}{5}$
 (c) $\log_{10} 5$ (d) $\log_{10} \frac{1}{5}$.

Q. 244. Exposure of human body to radiation of x rems may cause severe changes in blood cells and hemorrhage, where x may be about

- (a) 50 (b) 100
 (c) 300 (d) 1000.

Q. 245. The no. of rems of radiation exposure of a human being, which may cause hair loss and loss of body's ability to fight infections, usually resulting in death, is about :

- (a) 50 rem (b) 100 rem
 (c) 300 rem (d) 600 rem.

Q. 246. The aquatic animals which are most badly affected by radioactive radiations are :

- (a) fish (b) mollusks
 (c) algae (d) none of them.

Q. 247. The most common impacts of radioactive radiations, which appear late in life are :

- (a) shortened life span and increased probability of developing cancers and cataracts
 (b) damage to genes, causing dangerous mutagenic effects leading to birth of abnormal offsprings
 (c) both (a) and (b)
 (d) none of them.

Q. 248. Which of the following radio isotope is capable to contaminate the milk of cows and other animals, due to their exposure to the radiation caused by that isotope ?

- (a) Strontium-90 (b) Cesium-137
 (c) Iodine-131 (d) none of them.

Q. 249. Radioactive radiations may cause mutagenic effects in :

- (a) humans (b) animals
 (c) both (a) and (b) (d) none of them.

Q. 250. Trees are very badly affected by longer exposure to :

- (a) α -rays (b) β -rays
 (c) γ -rays (d) none of them.

Q. 251. Which of the following is a natural source of radioactivity in the environment ?

- (a) cosmic rays
 (b) radioactive rocks and minerals
 (c) radio nuclides present within the bodies of organisms
 (d) all of the above.

Q. 252. Radiation sickness may be caused by as low a radiation dose as about :

- (a) 25 rem (b) 50 rem
 (c) 100 rem (d) none of them.

Q. 253. Which among the following is not a man-made source of radioactivity in the environment ?

- (a) nuclear power plants (b) nuclear explosions
 (c) cosmic rays (d) none of the above.

Q. 254. High level radioactive wastes are those which have radio-activities measured in terms of :

- (a) curies per litre (b) millicuries per litre
 (c) micro-curies per litre (d) none of the above.

Q. 255. Low level radioactive wastes are those which have radio-activities measured in terms of :

- (a) curies per litre (b) millicuries per litre
 (c) micro-curies per litre (d) none of the above.

Q. 256. High level radioactive wastes generated in a nuclear power plant in the form of spent fuel remain a great hazard for several thousands of years, because it contains Plutonium-239 which has a very long half life of about :

- (a) 5,000 years (b) 10,000 years
 (c) 14,000 years (d) 24,000 years.

Q. 257. Which of the following is not a stage in disposal of High Level liquid wastes ?

- (a) Storage for about 5 years in leak proof underground depositories.
 (b) Solidification by using advanced technological methods.
 (c) Burial of solidified wastes into permanent deep disposal sites.
 (d) None of the above.

Q. 258. The quantum of high level wastes, annually generated by the world's 442 nuclear power plants and reactors, is about :

- (a) 4000 t (b) 8000 t
 (c) 12000 t (d) 20000 t.

Q. 259. The country which is not having any permanent site for disposal of high level wastes is :

- (a) USA (b) Russia
 (c) India (d) none of them.

Chapter 16 : Ventilation of Buildings for Controlling Indoor Air Pollution

- Q. 260.** Air changes for ventilation of occupied rooms and halls in a building is mainly required to :
- keep carbon dioxide content under control
 - dissipate body heat
 - increase oxygen content
 - reduce body odours.
- Q. 261.** Fresh air is required to be supplied to an occupied hall at the rate of :
- 0—10 cum/c/hr
 - 15—30 cum/c/hr
 - 50—100 cum/c/hr
 - none of these.
- Q. 262.** Number of air changes required per hour to ensure good ventilation of kitchens, is of the order of :
- 10—40
 - 6—10
 - 2—5
 - 3.
- Q. 263.** Number of air changes required per hour to ensure sufficient ventilation of offices and libraries, is of the order of :
- 10—40
 - 6—10
 - 2—5
 - 3.
- Q. 264.** Number of air changes required per hour to ensure sufficient ventilation of cinema halls, is of the order of :
- 10—40
 - 6—10
 - 2—5
 - 3.
- Q. 265.** The ventilation of kitchens by exhaust fans, as adopted in India, is a method of mechanical ventilation, called :
- the plenum system
 - the vacuum system
 - the A.C. system
 - none of these.
- Q. 266.** The ventilation of public halls, by means of air-coolers and exhaust fans, is known as :
- the plenum system
 - the vacuum system
 - the A.C. system
 - none of these.
- Q. 267.** The most wholesome ventilation of buildings is provided by :
- natural ventilation
 - plenum system of ventilation
 - A.C. system of ventilation
 - vacuum system of ventilation.
- Q. 268.** A cooling room-air-conditioner, modifies the moisture content of the air, before letting it out, by :
- reducing humidity
 - increasing humidity
 - optimally reducing as well as increasing humidity
 - none of these, as it does not modify humidity.
- Q. 269.** Point out the incorrect statement :
- a summer A.C. uses a de-humidifier
 - a winter A.C. uses a humidifier

- recirculation of room air takes place in a summer A.C. as well as in a winter A.C.
- all the above are correct.

Chapter 17 : The Environment, Its Pollution, and Present Status

- Q. 270.** The zone on Earth, where alone life exists, is called :
- hydrosphere
 - lithosphere
 - biosphere
 - troposphere.
- Q. 271.** Point out the incorrect statement :
- new species are born due to disturbances in the ecological balance of biosphere
 - carnivorous animals are non-veg animals, like lions
 - CO₂ gas produces heating effects on earth
 - Bangalore is the most polluted Indian city, as far as air pollution is concerned.
- Q. 272.** The polluting gas, which is primarily responsible for causing the green house effect and global warming, is :
- sulphur dioxide
 - hydrogen sulphide
 - carbon dioxide
 - none of them.
- Q. 273.** According to the WHO's reports of 1992, the most polluted city in the world, is :
- Delhi
 - Bangkok
 - Newyork
 - Tokyo.

Chapter 18 : Engineering of Air Pollution, Its Control and Monitoring

- Q. 274.** The average consumption of air by an adult human being is of the order of :
- 5 kg
 - 12 kg
 - 25 kg
 - none of them.
- Q. 275.** Air pollution causes harmful effects on :
- biotic world
 - abiotic world
 - both (a) and (b)
 - none of these.
- Q. 276.** Air pollution may be caused by :
- human activities
 - natural disastrous events
 - both (a) and (b)
 - none of them.
- Q. 277.** Which of the following is not an anthropogenic cause of air pollution ?
- Burning of fossil fuels
 - Burning of firewood
 - Agricultural activities
 - Burning of forests due to lightening.
- Q. 278.** 'London smog' was primarily caused by :
- burning of coal
 - burning of oil

- Q. 279.** A major disaster, known as 'London smog', occurred in the British city of London in the year :
 (a) 1942 (b) 1962
 (c) 1962 (d) 1972.
- Q. 280.** Which of the following statements is incorrect ?
 (a) Air pollution causes local, regional, as well as global adverse impacts on the environment
 (b) Air pollution has been in existence at some places even in the ancient times
 (c) Air pollution does not cause adaptations and environmental imbalances in biological species
 (d) None of the above.
- Q. 281.** The factor which is primarily responsible for causing air pollution in modern days is :
 (a) industries and automobiles (b) dust storms
 (c) forest fires (d) none of them.
- Q. 282.** About 90% of world's air pollution is caused by :
 (a) primary air pollutants (b) secondary air pollutants
 (c) volcanism (d) none of them.
- Q. 283.** The primary air pollutant which is formed due to incomplete combustion of organic matter is :
 (a) methane (b) sulphur dioxide
 (c) ozone (d) carbon monoxide.
- Q. 284.** Among the following, the only secondary pollutant is :
 (a) sulphur dioxide (b) hydrocarbons
 (c) ozone (d) sulphur tetraoxide.
- Q. 285.** Which among the following is not a secondary air pollutant ?
 (a) sulphuric acid (b) formaldehyde
 (c) peroxyacyl nitrate (d) none of the above.
- Q. 286.** Which among the following is not a primary air pollutant ?
 (a) oxides of nitrogen
 (b) volatile organic compounds like hydrocarbons
 (c) suspended particulate matter
 (d) PAN.
- Q. 287.** Which among the following statements is incorrect ?
 (a) Secondary air pollutants are formed from a simple chemical reaction between two primary pollutants
 (b) The sun light plays an important role in the formation of secondary pollutants
 (c) The photochemical reaction is responsible for the formation of secondary pollutants
 (d) No secondary pollutant was involved in 'London Smog' that occurred in 1952 killing more than 4000 people.

- Q. 288.** In 1929, several deaths occurred in a fire in a clinic in Cleveland (USA) due to burning of X-ray films, due to evolution of :
 (a) sulphur dioxide (b) sulphur trioxide
 (c) nitrogen dioxide (d) PAN.
- Q. 289.** More than 4000 people died in December 1952 in 'London smog', which was caused by :
 (a) fog in the city
 (b) evolution of smoke containing sulphur dioxide in the city
 (c) arrival of anticyclone in the city
 (d) all of the above.
- Q. 290.** Hairs of human nose can remove all particles of size greater than :
 (a) 1 mm (b) 1 micron
 (c) 10 micron (d) 100 micron.
- Q. 291.** The chemical compounds which are responsible for production of photochemical smog are :
 (a) hydrocarbons (b) oxides of nitrogen
 (c) both (a) and (b) (d) none of them.
- Q. 292.** The poisonous gas responsible for causing the catastrophic Bhopal gas tragedy in 1984 in India was :
 (a) sulphur dioxide
 (b) methyl isocyanate
 (c) carbon monoxide and methane both
 (d) laughing gas.
- Q. 293.** Which of the following is not a major constituent of a photochemical smog ?
 (a) PAN (b) CO
 (c) HC (d) O₃.
- Q. 294.** The major photochemical oxidant is :
 (a) hydrogen peroxide (b) ozone
 (c) nitrogen oxides (d) peroxy acetyl nitrate (PAN).
- Q. 295.** The secondary pollutant among the following is :
 (a) sulphur dioxides (b) methane
 (c) carbon dioxide (d) peroxy acetyl nitrate.
- Q. 296.** The particles in cigarette smoke are usually smaller than :
 (a) 1 micron (b) 10 micron
 (c) 25 micron (d) 100 micron.
- Q. 297.** The most hazardous gaseous air pollutant for human health is :
 (a) carbon dioxide (b) oxygen
 (c) nitrogen (d) sulphur dioxide.
- Q. 298.** The maximum permissible average annual specified standard of SO₂ for residential areas in the New Revised National Ambient Air Quality Standards in India is :
 (a) 30 µg/m³ (b) 50 µg/m³

- Q. 299. During temperature inversion in atmosphere, air pollutants tend to :
 (a) accumulate above inversion layer
 (b) accumulate below inversion layer
 (c) disperse laterally
 (d) disperse vertically. (GATE, 1993)
- Q. 300. The primary air pollutant, which is formed due to incomplete combustion of organic matter, is :
 (a) methane (b) sulphur dioxide
 (c) ozone (d) carbon monoxide.
- Q. 301. Electrostatic precipitators remove :
 (a) sulphur dioxide (b) particulate matter
 (c) both (a) and (b) (d) none of them.
- Q. 302. Among the following, the only secondary pollutant, is :
 (a) sulphur dioxide (b) ozone
 (c) hydrocarbons (d) sulphur tetroxide.
- Q. 303. The percentage of particles emanating from cigarette smoking, which get deposited in lungs, is about :
 (a) 10% (b) 25%
 (c) 65% (d) 100%.
- Q. 304. The Respiratory Suspended Particulate Matter (RSPM) concentration includes all particles in an air mass of size up to
 (a) 10 μ (b) 25 μ
 (c) 50 μ (d) none of them.
- Q. 305. The RSPM is also designated as
 (a) PM 2.5 (b) PM 10
 (c) PM 25 (d) none of them.
- Q. 306. The monitoring of the particles of size lesser than 10 micron (PM 10) or even lesser than 2.5 micron (PM 2.5) is a better indicator of air pollution, because :
 (a) such smaller particles tend to be deposited in nasopharyngeal region, causing serious health problems
 (b) such smaller particles are mostly deposited in trachea bronchial and pulmonary region causing bronchitis and other lung diseases
 (c) both (a) and (b)
 (d) none of them.
- Q. 307. The air pollutant which causes sever damage to plants, even at much lower concentrations than what may be harmful to human health, is :
 (a) fluorine (b) ozone
 (c) PAN (d) none of them.
- Q. 308. The air pollutant which does not cause any major adverse impacts on the cattle is :
 (a) fluorine (b) arsenic
 (c) lead (d) none of them.

- Q. 309. The max. permissible average annual standard for NO₂ for residential, industrial and other areas under the new revised NAAQS in India is :
 (a) 30 $\mu\text{g}/\text{m}^3$ (b) 40 $\mu\text{g}/\text{m}^3$
 (c) 60 $\mu\text{g}/\text{m}^3$ (d) 120 $\mu\text{g}/\text{m}^3$.
- Q. 310. Sulphur dioxide exposures to quantities higher than permissible in ambient air may cause :
 (a) breathing and respiratory illnesses
 (b) hay fever
 (c) typhoid
 (d) malaria.
- Q. 311. High lead exposures in humans through inhalations or food may cause :
 (a) mental retardation
 (b) disorder of central nervous system
 (c) high blood pressure
 (d) all of the above.
- Q. 312. Higher exposures of humans to nitrogen oxides may cause :
 (a) bronchitis (b) pneumonia
 (c) allergies and viral attacks (d) all of the above.
- Q. 313. Carbon monoxide is hazardous to health, because :
 (a) it causes loss of sense of smell
 (b) it is carcinogenic in nature
 (c) it reduces oxygen carrying capacity of blood
 (d) it may cause conjunctivitis.
- Q. 314. Longer exposure to NO₂ even in small concentrations may cause diseases pertaining to :
 (a) liver (b) lung
 (c) kidneys (d) heart.
- Q. 315. Heavy loading of pollen grains in air may cause :
 (a) anaemia (b) typhoid
 (c) hayfever (d) influenza.
- Q. 316. The permissible TSPM (annual average) standard for residential areas, under the Pre-revised National Ambient Air Quality Standards in India, is :
 (a) 60 $\mu\text{g}/\text{m}^3$ (b) 140 $\mu\text{g}/\text{m}^3$
 (c) 200 $\mu\text{g}/\text{m}^3$ (d) 360 $\mu\text{g}/\text{m}^3$.
- Q. 317. The permissible PM 2.5 (annual average) ambient air quality standard for residential, rural and industrial areas in India is :
 (a) 40 $\mu\text{g}/\text{m}^3$ (b) 60 $\mu\text{g}/\text{m}^3$
 (c) 80 $\mu\text{g}/\text{m}^3$ (d) 100 $\mu\text{g}/\text{m}^3$.
- Q. 318. The permissible annual average standard of PM 10 (RSPM) ambient air quality standard for residential areas in India is :
 (a) 20 $\mu\text{g}/\text{m}^3$ (b) 30 $\mu\text{g}/\text{m}^3$
 (c) 40 $\mu\text{g}/\text{m}^3$ (d) 50 $\mu\text{g}/\text{m}^3$.

- Q. 319.** The permissible RSPM (annual average) ambient air quality standard for industrial areas under the Pre-revised NAAQS of India is :
- (a) $60 \mu\text{g}/\text{m}^3$ (b) $120 \mu\text{g}/\text{m}^3$
(c) $140 \mu\text{g}/\text{m}^3$ (d) $360 \mu\text{g}/\text{m}^3$.
- Q. 320.** The permissible SO_2 (annual average) ambient air quality standard for residential and industrial areas in India is :
- (a) $30 \mu\text{g}/\text{m}^3$ (b) $50 \mu\text{g}/\text{m}^3$
(c) $60 \mu\text{g}/\text{m}^3$ (d) $80 \mu\text{g}/\text{m}^3$.
- Q. 321.** The permissible NO_2 (annual average) ambient air quality standard for residential areas under the old pre-revised NAAQ Standards in India is :
- (a) $50 \mu\text{g}/\text{m}^3$ (b) $60 \mu\text{g}/\text{m}^3$
(c) $80 \mu\text{g}/\text{m}^3$ (d) $120 \mu\text{g}/\text{m}^3$.
- Q. 322.** The most significant primary gaseous pollutant, found in vehicular emissions, is :
- (a) CO (b) CO_2
(c) SO_2 (d) O_3 .
- Q. 323.** The device, which can be used to control gaseous as well as particulate pollutants in the industrial emissions, is known as :
- (a) cyclone (b) spray tower
(c) dynamic precipitator (d) fabric filter.

Chapter 19 : Global Environmental Issues

- Q. 324.** The region most affected by acid rains, is :
- (a) India and China (b) Europe and North east America
(c) Africa (d) South America.
- Q. 325.** The acid rains are more prominent in :
- (a) temperate regions (b) tropical regions
(c) arid regions (d) equally prominent in all regions.
- Q. 326.** A rainfall is generally classified as acidic, if its pH is less than equal to :
- (a) 5.6 (b) 6.5
(c) 7 (d) 7.5.
- Q. 327.** An ordinary rain, will generally be :
- (a) slightly acidic (b) slightly alkaline
(c) neither acidic nor alkaline.
- Q. 328.** The important gaseous pollutants, contributing to acid rains, are :
- (a) SO_2 and NO_2 (b) CO_2 and H_2S
(c) NO_2 and O_3 (d) none of these.
- Q. 329.** The most significant environmental issue, threatening human health, is :
- (a) global warming (b) acid rain
(c) ozone hole

- Q. 330.** Man-made emission of chloro fluorocarbons (CFCs), is likely to deplete the ozone layer in the troposphere, leading to increase in :
- (a) radioactivity (b) heat
(c) sound (d) ultra violet radiations
- Q. 331.** Two third of acid rains are caused by sulphur dioxide gas (SO_2) which is chiefly produced by the burning of :
- (a) coals (b) oils
(c) both (a) and (b) (d) none of the above.
- Q. 332.** The fossil fuels responsible for causing acid rains are used in :
- (a) industries (b) domestic cooking and heating
(c) automobiles (d) all of the above.
- Q. 333.** One third of acid rains are caused by nitrogen oxides (NO_x) which are chiefly produced by :
- (a) auto and industrial emission
(b) nitrogenous fertilizers
(c) forests and grasslands on fire
(d) all of the above.
- Q. 334.** How many times more acidic a rain having pH = 5.6 will be in comparison to a neutral rain having pH = 7 ?
- (a) $\frac{7}{5.6} = 1.25$ (b) $\frac{7^2}{5.6^2} = 1.56$
(c) $\frac{10^7}{10^{5.6}} = 20$ (d) none of them.
- Q. 335.** Which one of the following statements is incorrect ?
- (a) To neutralise the acidic nature of lake waters, lime is sprayed on lake waters.
(b) The damage caused to trees by acidic rains is countered by fertilising the damaged trees with calcium, potassium, magnesium, etc.
(c) Electro-static precipitators are installed in thermal power plants to check emission of SO_2 and NO_x gases, to reduce acid rains.
(d) None of the above.
- Q. 336.** Which of the following statements is incorrect in relation to checking and controlling acid rains ?
- (a) Expensive scrubbers are installed in industries and thermal power stations.
(b) Catalytic convertors are installed in cars.
(c) Use of petrol cars is promoted by discouraging the use of diesel cars.
(d) None of the above.
- Q. 337.** The ozone depletion in the stratosphere (outer atmosphere) is chiefly caused by the release of :
- (a) chlorofluorocarbons (CFCs) (b) carbon dioxide (CO_2)

- Q. 338.** The chlorofluorocarbons (CFCs) are released into the environment by humans, as they are largely used :
- in refrigeration and air-conditioning
 - as cleaning solvents in factories
 - in aerosol sprays
 - as blowing agents to create certain kinds of plastic foams
 - all of the above.
- Q. 339.** Depletion of ozone layer in the outer atmosphere is likely to increase the incidence of :
- skin cancer
 - lung cancer
 - bronchitis
 - none of them.
- Q. 340.** Pollution by depletion of ozone layer in stratosphere, threatening the environment, is caused due to reaction of ozone with :
- carbon monoxide
 - chlorine
 - sulphur dioxide
 - nitrous oxide.
- Q. 341.** The most significant environmental issue, causing serious diseases in humans, is :
- acid rain
 - ozone hole
 - global warming
 - none of these.
- Q. 342.** The chances of development of an ozone hole are more at :
- arctic and antarctic regions
 - equatorial regions
 - regions of mid latitudes
 - none of the above.
- Q. 343.** The ozone hole appears in Antarctica during
- early winter
 - peak summer
 - late winter
 - autumn.
- Q. 344.** Which of the following is crucial for the formation of anthropogenic (man-made) ozone hole ?
- chlorides and bromides in the stratosphere
 - solar radiation and thin ice crystals in the stratosphere
 - (a) and (b) both
 - none of the above.
- Q. 345.** Harmful U.V. radiations emanating from the sun are prevented from reaching the Earth by the presence of ozone in the :
- thermosphere
 - mesosphere
 - stratosphere
 - troposphere.
- Q. 346.** The ozone layer thickness is measured in :
- Decibels (dB)
 - Dobson Units (DU)
 - Becquerel (Bq)
 - None of them.
- Q. 347.** One Dobson Unit (DU) is equal to :
- 1 mm
 - 0.1 mm
 - 0.01 mm
 - 0.001 mm.

- Q. 348.** The normal average thickness of stratospheric ozone across the globe is :
- 150 DU
 - 350 DU
 - 500 DU
 - none of them.
- Q. 349.** The possible substitutes of CFCs are :
- HCFs
 - ODSs
 - Halons
 - all of the above.
- Q. 350.** The thickness of stratospheric ozone, particularly above the polar regions, have been noticed to have fallen to as low a value as :
- 250 DU
 - 150 DU
 - 100 DU
 - none of them.
- Q. 351.** The depletion of stratospheric ozone thickness to as low a value as about 150 DU (1.5 mm) as against the usual value of 350 DU (3.5 mm) to 250 DU (2.5 mm), creates ozone hole, the area of which in the southern hemisphere has been observed to be maximum in Sept. 2000 and Sept. 2006, equalling about :
- 29 million sq. km
 - 19 million sq. km
 - 9 million sq. km
 - none of them.
- Q. 352.** In order to control depletion of ozone in the stratosphere, it is necessary to reduce CFC's and other such substances which release chlorine atoms, which, in turn, react with ozone to convert it into ClO and O₂, thereby reducing ozone (O₃). To achieve this objective, an international treaty was signed in 1987, imposing bans on the use of substances which release CFC's. This treaty is known as :
- Geneva Convention
 - London Amendment
 - Kyoto Protocol
 - Montreal Protocol.
- Q. 353.** The ozone strongly absorbs ultraviolet light in the region having wave length in the range of :
- 360–460 nm
 - 220–330 nm
 - 135–200 nm
 - none of the above.
- Q. 354.** High altitude aircrafts lead to :
- destruction of oxygen
 - destruction of ozone
 - formation of ozone
 - none of the above.
- Q. 355.** The world ozone day is celebrated on :
- 16th September
 - 31st December
 - 14th January
 - 22nd June.
- Q. 356.** The major green house gas which is responsible for causing about 60% of the green house effect on Earth, among the following, is :
- carbon monoxide
 - methane
 - NO_x
 - carbon dioxide.
- Q. 357.** Increased concentration of carbon dioxide in the Earth's atmosphere :
- leads to cooling on Earth
 - leads to warming on Earth

- Q. 358.** The green house effect causes :
 (a) cooling of the Earth
 (b) warming of the Earth
 (c) both (a) and (b) depending upon the season
 (d) none of the above.
- Q. 359.** Had there been no or little carbon dioxide in the Earth's atmosphere, the temperature on Earth would have been below freezing as that existing on :
 (a) Mars (b) Venus
 (c) Moon (d) none of them.
- Q. 360.** Had there been too much quantity of carbon dioxide in the Earth's atmosphere, the temperature on Earth would have been much higher to make life impossible, as that existing on :
 (a) Mars (b) Venus
 (c) Moon (d) none of them.
- Q. 361.** The concentration of carbon dioxide in the Earth's atmosphere used to be about 316 ppmv (parts per million by volume) in the year 1959, which has now (2008) increased to a value of about :
 (a) 330 ppmv (b) 350 ppmv
 (c) 380 ppmv (d) 480 ppmv.
- Q. 362.** The average annual rate of increase of carbon dioxide in the Earth's atmosphere, has over the last five decades, been observed to be of the order of :
 (a) 0.01% (b) 0.04%
 (c) 0.4% (d) 4%.
- Q. 363.** The carbon dioxide in Earth's atmosphere, has during the last about 50 years, increased by about :
 (a) 1% (b) 5%
 (c) 10% (d) 20%.
- Q. 364.** The warming of the Earth's atmosphere due to increasing concentration of Green house gases (GhGs) is not likely to cause :
 (a) increased heat conditions leading to warmer weather and long summers on Earth
 (b) melting of snow of glaciers and of the poles, and rise in sea levels
 (c) severe climate changes
 (d) none of the above.
- Q. 365.** Which one of the following statements is incorrect ?
 (a) Continued global warming due to increasing concentrations of GhGs at its present rate, is likely to increase the Earth's temperature during the 21st century by about 2°C ; and by about 1°C even if the concentrations of all GhGs and aerosols is kept constant at year 2000 level
 (b) Continued global warming due to increasing concentration of CO₂ in the ambient air is likely to cause severe climate changes, leading to more floods, droughts, and

- (c) The rising sea levels due to global warming may submerge the coastal habitats and spoil the ground water by the ingress of the salty sea water towards the presently habited land areas
 (d) None of the above.
- Q. 366.** Greenhouse effects are produced due to :
 (a) absorption of infrared radiation in the atmosphere
 (b) absorption of long range radiation in the atmosphere
 (c) (a) and (b) both
 (d) none of the above.
- Q. 367.** 80% of carbon dioxide, annually emitted into the atmosphere, comes from :
 (a) rotting vegetation
 (b) methane release from cattle sheep and termites
 (c) landfills
 (d) fossil fuels.
- Q. 368.** How much carbon dioxide can a tree remove annually from the air ?
 (a) 1 kg (b) 5 kg
 (c) 15 kg (d) 50 kg.
- Q. 369.** If all the world's ice caps and glaciers were to melt due to continued global warming, approximately what percentage of land area is likely to be submerged ?
 (a) 5% (b) 10%
 (c) 20% (d) 35%.
- Q. 370.** The reason(s) for rise of water levels in the world's seas and oceans due to global warming is/are :
 (a) melting of glaciers
 (b) thermal expansion of water volume contained in the world ocean
 (c) both (a) and (b)
 (d) none of the above.
- Q. 371.** The international treaty which aims at reducing global warming is :
 (a) Montreal Protocol (b) Kyoto Protocol
 (c) Ramsar Convention (d) CITES.
- Q. 372.** Emission Trading and Clean Development Mechanism (CDM) are an inbuilt mechanism of an international treaty for controlling :
 (a) ozone depletion (b) global warming
 (c) acid rains (d) none of the above.
- Q. 373.** What percentage of the total GhGs emissions into the world's atmosphere is being released by USA ?
 (a) 10% (b) 15%
 (c) 20% (d) 30%.
- Q. 374.** The country which releases a lot of GhGs into the world's atmosphere, but has refused to sign the international treaty for controlling GhGs emissions to avoid global warming, is :

Chapter 20 : Noise Pollution

- Q. 375.** Noise is :
 (a) loud noise (b) constant sound
 (c) unwanted sound (d) sound of high frequency.
- Q. 376.** Noise is measured in units of :
 (a) hertz (b) decibel
 (c) ddbson (d) bacqueral.
- Q. 377.** Which of the following is not an effect of noise on humans ?
 (a) general annoyance (b) sleeplessness
 (c) high blood pressure (d) hearing loss
 (e) gastric secretions (f) none of the above.
- Q. 378.** Which of the following is not an effect of noise on wild life ?
 (a) inactiveness/dullness (b) change of habitat
 (c) environmental imbalances (d) none of the above.
- Q. 379.** 10 decibel (dB) increase in sound level will increase the loudness of sound by :
 (a) 2 times (b) 5 times
 (c) 10 times (d) none of them.
- Q. 380.** The maximum sound level, beyond which it is certainly regarded as a pollutant, is :
 (a) 20 dB (b) 40 dB
 (c) 45 dB (d) 80 dB.
- Q. 381.** The unit for measuring the frequency of sound is :
 (a) decibel (dB) (b) hertz (Hz)
 (c) ddbson Unit (DU) (d) none of the above.
- Q. 382.** Although human ear can hear sound of all frequencies varying from 20 to 20,000 Hz, but it is most sensitive to frequencies in the range of :
 (a) 100 to 500 Hz (b) 500 to 5000 Hz
 (c) 5000 to 10,000 Hz (d) 10,000 to 20,000 Hz.
- Q. 383.** The weighting network that is usually used to filter out certain frequencies of sound in our day to day sound measurement is of :
 (a) A type (b) B type
 (c) C type (d) none of the above.
- Q. 384.** A-network that is generally fitted in our sound measuring meters of day to day use, severely filters out sound of :
 (a) low frequency ranging between 10 to 200 Hz
 (b) medium frequency ranging between 200 to 2000 Hz
 (c) high frequency ranging between 2000 to 10,000 Hz
 (d) none of the above.
- Q. 385.** Fluctuating noise levels from various sources at a place over a period of time can be represented by a constant value over that entire time period, by a value of sound, known as :
 (a) equivalent noise level (b) average noise level
 (c) both (a) and (b) (d) none of the above.

- Q. 386.** Acceptable noise level for residential and business urban areas as per IS : 4954-1968 is :
 (a) 25-35 dB (b) 40-50 dB
 (c) 50-60 dB (d) 70-80 dB.
- Q. 387.** The maximum average permissible noise level during day time hours (6 am to 10 pm) in residential areas, according to specified ambient air quality standards laid down under the Environment Protection Act in India, is :
 (a) 30 dB (b) 45 dB
 (c) 50 dB (d) 55 dB.
- Q. 388.** Which of the following is not a cause/source of noise ?
 (a) Traffic
 (b) Industrial and commercial activities
 (c) Religious places
 (d) Schools
 (e) none of the above.
- Q. 389.** Which of the following will not help in abating noise pollution ?
 (a) Raising of thick and high vegetation and trees
 (b) Specifying and implementing noise standards for industrial activities and motor vehicles
 (c) Imposing ban on public against blaring of loudspeakers and plying of radiosets
 (d) Zoning and segregation of residential complexes from the commercial and industrial areas
 (e) None of the above.
- Q. 390.** What type of noise can be abated by providing lining on walls and ceiling with sound absorbing material ?
 (a) Source noise (b) Reflection noise
 (c) Structural noise (d) Direct air-borne noise.

Chapter 22 : Preparing Environmental Impact Assessments of Polluting Industrial Projects

- Q. 391.** The idea of sustainable development was defined for the first time by the World Commission on Environment and Development (i.e. the Brundtland Commission) in the year :
 (a) 1985 (b) 1987
 (c) 1989 (d) 1991.
- Q. 392.** EIA is the abbreviated form for :
 (a) Energy Impact Assessment (b) Ecological Impact Assessment
 (c) Environmental Impact Assessment
 (d) Emission Impact Assessment.
- Q. 393.** Environmental Impact Assessment is prepared for :
 (a) every specified polluting developmental project
 (b) every specified polluting developmental project on its adverse impacts on

- (c) both (a) and (b)
(d) none of the above.
- Q. 394.** An Environmental Impact Assessment is intended to identify the environmental, social and economic impacts of a proposed development :
- (a) prior to the decision to sanction a project is taken
(b) during the execution of a project
(c) after the execution of a project to assess its beneficiaries
(d) none of the above.
- Q. 395.** An Environmental Impact Statement should include :
- (a) description of the project with location, design, size, etc.
(b) description of its significant effects on environment and society
(c) mitigating measures to reduce the possible adverse impacts
(d) all the above.
- Q. 396.** The purpose of 'screening' during the EIA process under Indian EIA notification 2006 is to :
- (a) decide as to whether an environment impact assessment is required for the project
(b) decide as to whether for proposed project falls under category 'A' or 'B'
(c) (a) and (b) both
(d) none of the above.
- Q. 397.** The 'scoping' during EIA process under Indian EIA Notification 2006 is applicable to :
- (a) 'A' category of projects (b) 'B1' category of projects
(c) 'B2' category of projects alone
(d) (a) and (b) both
(e) (a), (b) and (c) all.
- Q. 398.** During the EIA process under Indian EIA Notification 2006, no public consultation is required for :
- (a) All 'A' category of projects (b) All 'B1' category of projects
(c) All 'B2' category of projects (d) none of them.
- Q. 399.** During the EIA process under India's EIA notification 2006, public consultation is a must for :
- (a) all 'A' category projects
(b) all 'A' category projects except for a few exceptional ones
(c) all 'B1' category projects
(d) all 'A' and 'B1' category projects except for a few exceptional ones.
- Q. 400.** The type of project categorised in 'A' category in the Schedule attached with EIA notification 2006 of India needs environmental clearance (before starting any work at site) from :
- (a) the Central Govt. on the recommendation of the Expert Appraisal Committee
(b) the Central Govt. without the recommendation of the Expert Appraisal Committee

- (c) Govt. of the State in which the given project is to be located on the recommendation of the State Expert Appraisal Committee
(d) none of the above.
- Q. 401.** The type of project categorised in 'B' category in the Schedule attached with EIA notification 2006 of India needs environmental clearance (before starting any work at site) from the :
- (a) Central Govt. without the recommendation of the Expert Appraisal Committee
(b) State Govt. on the recommendation of State Expert Appraisal Committee
(c) State Environmental Impact Assessment Authority on the recommendation of State Expert Appraisal Committee
(d) None of the above.
- Q. 402.** Under the Indian EIA notification 2006, preparation of EIA is not at all required for projects falling in category :
- (a) A (b) B-1
(c) B-2 (d) none of these.
- Q. 403.** The type of projects, which among the following, will require public consultation under EIA process to be carried out under Indian EIA notification 2006, is :
- (a) building/construction/area development/township projects
(b) expansion of roads and highways which do not involve any further land acquisition
(c) projects concerning national defence and security
(d) nuclear power projects.

Answers For the Objective Questions

1. (c)	2. (c)	3. (d)	4. (c)	5. (c)
6. (c)	7. (b)	8. (b)	9. (c)	10. (b)
11. (c)	12. (b)	13. (c)	14. (c)	15. (d)
16. (b)	17. (a)	18. (b)	19. (a)	20. (d)
21. (c)	22. (a)	23. (a)	24. (a)	25. (f)
26. (d)	27. (b)	28. (b)	29. (c)	30. (c)
31. (b)	32. (a)	33. (d)	34. (c)	35. (a)
36. (d)	37. (d)	38. (b)	39. (b)	40. (a)
41. (d)	42. (b)	43. (c)	44. (d)	45. (b)
46. (b)	47. (d)	48. (b)	49. (a)	50. (d)
51. (c)	52. (a)	53. (a)	54. (a)	55. (c)
56. (a)	57. (d)	58. (d)	59. (b)	60. (a)
61. (c)	62. (b)	63. (c)	64. (b)	65. (d)
66. (d)	67. (a)	68. (b)	69. (b)	70. (b)
71. (d)	72. (d)	73. (c)	74. (a)	75. (d)
76. (b)	77. (b)	78. (b)	79. (d)	80. (c)
81. (c)	82. (d)	83. (a)	84. (b)	85. (c)

91. (c)	92. (a)	93. (b)	94. (c)	95. (d)
96. (d)	97. (b)	98. (d)	99. (b)	100. (a)
101. (b)	102. (d)	103. (a)	104. (d)	105. (b)
106. (a)	107. (c)	108. (c)	109. (b)	110. (b)
111. (b)	112. (b)	113. (c)	114. (d)	115. (c)
116. (a)	117. (b)	118. (b)	119. (b)	120. (a)
121. (b)	122. (a)	123. (b)	124. (d)	125. (a)
126. (c)	127. (c)	128. (c)	129. (c)	130. (c)
131. (a)	132. (a)	133. (b)	134. (b)	135. (d)
136. (b)	137. (b)	138. (b)	139. (c)	140. (a)
141. (d)	142. (b)	143. (b)	144. (d)	145. (c)
146. (d)	147. (a)	148. (a)	149. (d)	150. (c)
151. (a)	152. (d)	153. (d)	154. (b)	155. (c)
156. (c)	157. (b)	158. (b)	159. (d)	160. (c)
161. (b)	162. (b)	163. (b)	164. (a)	165. (c)
166. (d)	167. (c)	168. (c)	169. (a)	170. (c)
171. (d)	172. (a)	173. (d)	174. (d)	175. (d)
176. (c)	177. (b)	178. (c)	179. (c)	180. (c)
181. (c)	182. (d)	183. (c)	184. (c)	185. (a)
186. (c)	187. (d)	188. (b)	189. (c)	190. (a)
191. (b)	192. (a)	193. (b)	194. (c)	195. (a)
196. (a)	197. (b)	198. (d)	199. (b)	200. (b)
201. (b)	202. (b)	203. (a)	204. (a)	205. (b)
206. (a)	207. (a)	208. (d)	209. (b)	210. (c)
211. (a)	212. (d)	213. (d)	214. (c)	215. (a)
216. (d)	217. (b)	218. (c)	219. (c)	220. (d)
221. (c)	222. (b)	223. (a)	224. (c)	225. (c)
226. (c)	227. (d)	228. (a)	229. (d)	230. (c)
231. (a)	232. (c)	233. (a)	234. (c)	235. (d)
236. (d)	237. (a)	238. (a)	239. (a)	240. (a)
241. (a)	242. (a)	243. (a)	244. (c)	245. (d)
246. (a)	247. (c)	248. (a)	249. (c)	250. (c)
251. (d)	252. (c)	253. (c)	254. (a)	255. (c)
256. (d)	257. (d)	258. (c)	259. (c)	260. (b)
261. (b)	262. (a)	263. (d)	264. (b)	265. (b)
266. (a)	267. (c)	268. (a)	269. (d)	270. (c)
271. (d)	272. (c)	273. (b)	274. (b)	275. (c)
276. (c)	277. (d)	278. (a)	279. (b)	280. (c)
281. (a)	282. (a)	283. (d)	284. (c)	285. (d)
286. (d)	287. (d)	288. (c)	289. (d)	290. (c)
291. (c)	292. (b)	293. (b)	294. (c)	295. (d)
296. (a)	297. (d)	298. (b)	299. (b)	300. (d)
301. (b)	302. (b)	303. (b)		

306. (b)	307. (a)	308. (d)	309. (b)	310. (a)
311. (d)	312. (d)	313. (c)	314. (b)	315. (c)
316. (b)	317. (a)	318. (a)	319. (b)	320. (b)
321. (b)	322. (a)	323. (b)	324. (b)	325. (a)
326. (a)	327. (a)	328. (a)	329. (c)	330. (d)
331. (c)	332. (d)	333. (d)	334. (c)	335. (c)
336. (d)	337. (a)	338. (e)	339. (a)	340. (b)
341. (b)	342. (a)	343. (c)	344. (c)	345. (c)
346. (b)	347. (c)	348. (b)	349. (a)	350. (b)
351. (a)	352. (d)	353. (b)	354. (b)	355. (a)
356. (d)	357. (b)	358. (b)	359. (a)	360. (b)
361. (c)	362. (c)	363. (d)	364. (d)	365. (d)
366. (c)	367. (d)	368. (c)	369. (c)	370. (c)
371. (b)	372. (b)	373. (d)	374. (b)	375. (c)
376. (b)	377. (f)	378. (d)	379. (c)	380. (d)
381. (b)	382. (b)	383. (a)	384. (a)	385. (a)
386. (b)	387. (d)	388. (e)	389. (e)	390. (b)
391. (b)	392. (c)	393. (a)	394. (a)	395. (d)
396. (c)	397. (d)	398. (c)	399. (d)	400. (a)
401. (c)	402. (c)	403. (d)		

Hints For Solving Starred Questions

Q. 34. Use Eqn. (3.2).

Q. 38. Assume 0.8 m/sec as minimum self cleansing velocity at full discharge and $N = 0.015$, and compute S as :

$$0.8 = \frac{1}{0.015} \times \left(\frac{0.3}{4} \right) \cdot S^{1/2}$$

$$\text{or } S = \frac{1}{219} ; \text{ or say 1 in 200. Ans.}$$

Q. 51. Use Eq. (4.12), and find $\theta = 120^\circ$.

Then use Eq. (4.15), as :

$$p = \pi D \left(\frac{120^\circ}{360^\circ} \right) = \frac{\pi D}{3}.$$

Q. 92. Refer example 6.1.

Q. 93.

$$\begin{aligned} \text{HP} &= \frac{wQH}{75} \cdot \frac{1}{\eta} \\ &= \frac{1000 \times 10}{75 \times 2 \times 354} \times \frac{1}{0.65} = 2.89 = 3. \text{ Ans.} \end{aligned}$$

Q. 131. Plants give oxygen during day time, much more than what they require ; activity being maximum at mid noon, due to sun's effects on photosynthesis.

Test Paper on Objective Questions

- Q. 1*** The correct ratio of the diameter of a circular sewer to the side of a hydraulically equivalent square section of a sewer, is :
- (a) 1 (b) 0.9
(c) 0.925 (d) 1.095.
- Q. 2** A circular sewer section loses most of its merits, when the sewage depth becomes :
- (a) less than $\frac{3}{4}$ full (b) less than $\frac{2}{3}$ full
(c) less than $\frac{1}{2}$ full (d) none of the above.
- Q. 3** The usual mix adopted for cement concrete for R.C.C. pipes is :
- (a) 1 : 2 : 4 (b) 1 : 1.5 : 3
(c) 1 : 3 : 6 (d) 1 : 4 : 8.
- Q. 4** Manhole covers are made circular :
- (a) to strengthen the cover
(b) to make the entry convenient
(c) for architectural reasons
(d) to prevent falling of the cover into the manhole.
- Q. 5*** If in the relative stability test on sewage, the period of incubation at 20°C is 15 days, the relative stability is :
- (a) 95.95% (b) 96.05%
(c) 98.86% (d) 100%.
- Q. 6*** If the period of incubation at 37°C is 15 days in the relative stability test on sewage, the relative stability is :
- (a) 99% (b) 99.9%
(c) 99.99% (d) 100%.
- Q. 7** If 10 ml of raw sewage is diluted to 250 ml, the dilution factor is :
- (a) 24 (b) 25
(c) 1/25 (d) none of these.
- Q. 8*** If 10 ml of raw sewage is diluted to 250 ml, and the dissolved oxygen content of the diluted sample changes from 9 mg/l to 5 mg/l after incubation at 20°C for 5 days, BOD₅ of raw sewage is :
- (a) 0.16 mg/l (b) 4 mg/l
(c) 10 mg/l (d) 100 mg/l.

*Hints are given for starred questions.

- Q. 9*** 2 ml of sewage, having BOD₅ = 500 mg/l, is diluted to 200 ml, and incubated for 5 days at 20°C. If the D.O. content after 5 days is found to be 5 mg/l, what was the initial D.O. content of the diluted sample ?
- (a) 10 mg/l (b) 5 mg/l
(c) 1 mg/l (d) none of the above.
- Q. 10** The oxygen utilisation rate of micro-organisms depends on the characteristics of :
- (a) the reactor only
(b) the wastewater only
(c) the wastewater and the reactor both
(d) none of the above.
- Q. 11** The BOD removal in an oxidation pond may be upto :
- (a) 100% (b) 97%
(c) 94% (d) 90%.
- Q. 12** A reactor, in which the surface area for growth of biofilm is provided by randomly packed solid forms, is called :
- (a) activated sludge reactor (b) trickling filter
(c) stabilisation pond (d) mixed reactor.
- Q. 13** The depth of biofilters varies between :
- (a) 0.6 to 1.0 m (b) 1.2 to 1.5 m
(c) 1.5 to 1.8 m (d) none of the above.
- Q. 14** The flowing through velocity for Imhoff tank, should, generally not exceed :
- (a) 0.3 m/min (b) 3 m/min
(c) 30 m/min (d) none of the above.
- Q. 15** As a result of the stabilisation of sewage effluent, the most appropriate end product produced is :
- (a) chloride (b) plant nutrients
(c) hardness (d) alkalinity.
- Q. 16** When chlorine is added to sewage both at the beginning as well as at the end of the treatment process, the phenomenon is called :
- (a) post chlorination (b) super chlorination
(c) split chlorination (d) none of the above.
- Q. 17** The liquid that has percolated through the solid waste, and has extracted dissolved or suspended materials from it, is called :
- (a) refuse (b) leachate
(c) sewage (d) particulate
(e) none of the above.
- Q. 18** The end product formed, after separation and anaerobic bacterial digestion of organic municipal solid wastes, is called :
- (a) compost (b) humus
(c) leachate (d) ashes.
- Q. 19** The process by virtue of which the heat transfer occurs in the

- (a) conduction
(b) convection
(c) evaporation-condensation cycle of water
(d) green house effect
(e) all of these.
- Q. 20. The transfer of heat from the earth to the atmosphere by direct physical contact between the earth and the air, is called :
(a) convection (b) conduction
(c) green house effect (d) tropospheric heating.
- Q. 21. The one among the following, which is not an elemental property of the atmosphere, is :
(a) heat (b) pressure
(c) wind (d) wind speed
(e) moisture.
- Q. 22. The study of earth's atmosphere and its changes, is called :
(a) environmental engineering (b) ecology
(c) meteorology (d) philology.
- Q. 23. The effect of earth's rotation on wind velocity and direction, is called :
(a) Coriolis effect (b) Vander waal's effect
(c) gravitational effect (d) centrifugal effect.
- Q. 24. The permissible TSPM (annual average) standard in industrial areas, under the pre-revised standards, in India, is :
(a) $100 \mu\text{g}/\text{m}^3$ (b) $140 \mu\text{g}/\text{m}^3$
(c) $380 \mu\text{g}/\text{m}^3$ (d) $1000 \mu\text{g}/\text{m}^3$.
- Q. 25. The process of heating a solid waste and splitting its organic substances by thermal cracking and condensation, is called :
(a) gasification (b) pulverisation
(c) incineration (d) pyrolysis.
- Q. 26. Partial combustion of a carbonaceous fuel to generate a combustible fuel gas, rich in carbon monoxide and oxygen, is called :
(a) gasification (b) composting
(c) pyrolysis (d) Bangalore method.
- Q. 27. The temperature gradient of ambient air, is called :
(a) adiabatic lapse rate (b) super adiabatic lapse rate
(c) environmental lapse rate (d) dry adiabatic lapse rate.
- Q. 28. The taste threshold of sulphur dioxide is about :
(a) 0.1 ppm (b) 0.3 ppm
(c) 0.5 ppm (d) 3 ppm.
- Q. 29. The odour threshold of sulphur dioxide, is about :
(a) 0.1 ppm (b) 0.3 ppm
(c) 0.5 ppm (d) 3 ppm.
- Q. 30. Heavy loading of pollen grains in air, may cause :
(a) anaemia (b) typhoid
(c) hayfever (d) influenza.

- Q. 31. Hairs of our nose can remove all particles of size, greater than :
(a) 1 mm (b) 1 micron
(c) 10 micron (d) 100 micron.
- Q. 32. A shallow sewage treatment pond, in which dissolved oxygen is present at all depths, may be called :
(a) oxidation pond (b) aerobic pond
(c) un aerated lagoon (d) facultative pond.
- Q. 33. The chemical compounds, which are essentially responsible for production of smog, are :
(a) hydrocarbons (b) oxides of nitrogen
(c) oxides of sulphur (d) (a) and (b) both
(e) all of (a), (b) and (c).
- Q. 34. The major photochemical oxidant is :
(a) hydrogen peroxide (b) ozone
(c) nitrogen oxides (d) peroxy acetyl nitrate (PAN).
- Q. 35. When the ambient lapse rate exceeds the adiabatic lapse rate, the ambient lapse rate, is called the :
(a) super adiabatic lapse rate
(b) dry adiabatic lapse rate
(c) saturated adiabatic lapse rate
(d) sub adiabatic lapse rate.
- Q. 36. Carbon monoxide is hazardous to health, because :
(a) it causes loss of sense of smell
(b) it is carcinogenic in nature
(c) it reduces oxygen carrying capacity of blood
(d) it may cause conjunctivitis.
- Q. 37. Particles of around 1 micron (10^{-6} m) size are best removed by :
(a) filtration (b) plain sedimentation
(c) chemical coagulation (d) chemical precipitation.
- Q. 38*. If a sample of air is analysed at standard temperature and pressure, and is found to contain 0.3 ppm of sulphur dioxide, the equivalent SO_2 concentration in mg/m^3 will be :
(a) 8000 (b) 800
(c) 80 (d) 0.8.
- Q. 39. Subsidence inversion can be related to a :
(a) cyclone (b) anticyclone
(c) radiation (d) tornado.
- Q. 40. The minimum specified height of a chimney for evolution of industrial gases other than those in thermal power plants, in the absence of data for the evolved gases, is :
(a) 10 m (b) 30 m
(c) 100 m (d) 220 m.
- Q. 41. Carbon monoxide concentration of 9 ppm at 20°C and 1 atmospheric

- (a) 1 mg/l (b) 10 mg/l
(c) 100 mg/l (d) 1000 mg/l
- Q. 42. Longer exposure to NO_2 even in small concentrations, may cause diseases pertaining to :
(a) liver (b) lung
(c) kidneys (d) heart.
- Q. 43. The average NO_2 concentration in tobacco is approximately :
(a) 1 ppm (b) 5 ppm
(c) 10 ppm (d) 50 ppm.
- Q. 44. The specified ambient air quality standard for NO_2 is about $40 \mu\text{g}/\text{m}^3$, which in ppm approximates :
(a) 0.01 (b) 0.02
(c) 0.1 (d) 0.5.
- Q. 45. The secondary air pollutant among the following is :
(a) sulphur dioxide (b) methane
(c) carbon monoxide (d) peroxy acetyl nitrate (PAN).
- Q. 46. The most threatening aspect of the pollution of the environment, is :
(a) global warming (b) acid rain
(c) ozone deficit (d) none of the above.
- Q. 47. The minimum size of the particulate matter of sp. gravity 2.0 that will get removed by a 100% efficient settling chamber of 10 m length and 1.5 m height, if the viscosity of hot emission is $1.7 \times 10^{-5} \text{ kg/m sec}$ and horizontal velocity into the chamber is 0.3 m/sec, will be :
(a) 5.2 μm (b) 52 μm
(c) 520 μm (d) 52 mm.
- Q. 48. A decrease in the radius of a cyclone collector will :
(a) increase its efficiency (b) decrease its efficiency
(c) not affect its efficiency.
- Q. 49. The filter system which filters out the gaseous emissions, is called a :
(a) trickling filter (b) moving bed filter
(c) baghouse filter (d) none of the above.
- Q. 50. Electrostatic precipitators are now-a-days installed in thermal power plants, to remove from its gaseous emissions, the :
(a) flyash (b) SO_2
(c) both (a) and (b) above (d) none of the above.
- Q. 51. While examining the impact of sewage discharge into a river, the Deoxygenation Rate (K_D) is increased, by keeping all other parameters to be the same. This will :
(a) increase the D.O. deficit and displace the critical point upstream
(b) increase the D.O. deficit and displace the critical point downstream
(c) decrease the D.O. deficit and displace the critical point upstream
(d) decrease the D.O. deficit and displace the critical point downstream.

- Q. 52. While examining the impact of sewage discharge in to a river, the Reaeration rate (K_R) is increased, by keeping all other parameters to be the same. This will :
(a) increase the D.O. deficit and displace the critical point upstream
(b) increase the D.O. deficit and displace the critical point downstream
(c) decrease the D.O. deficit and displace the critical point upstream
(d) decrease the D.O. deficit and displace the critical point downstream.
- Q. 53. The deoxygenation rate constant (K_D) for a river differs from the BOD rate constant (K), because there are physical and biological differences between a river and a BOD bottle. The value of K_D is always more than the value of K , because :
(a) BOD is exerted more rapidly in river than in the bottle
(b) BOD is exerted less rapidly in river than in the bottle
(c) BOD is exerted at equal rates in the river and the bottle
(d) none of the above.
- Q. 54. Bosco has developed the following equation :

$$K = K' + \frac{v}{y} \cdot \eta$$

where v = average vel. of river stream

H = average depth of river

η = bed activity coefficient of the river.

In this equation :

- (a) K is the Deoxygenation rate and K' is the BOD rate
(b) K is the BOD rate and K' is the Deoxygenation rate
(c) K is the Deoxygenation rate and K' is the Re-aeration rate
(d) K is the Re-aeration rate and K' is the Deoxygenation rate.
- Q. 55. The re-aeration rate of a river depends upon the degree of turbulent mixing. It however does not depend upon the :
(a) velocity in the river
(b) depth of water in the river
(c) temperature of water in the river.
(d) none of the above.
- Q. 56. Ultimate BOD of a given sewage depends upon its :
(a) temperature (b) initial organic matter
(c) flow velocity (d) all of the above.
- Q. 57. The BOD rate equation is represented as

$$\text{BOD}_t = L [1 - 10^{-K_D t}]$$

where BOD_t is the BOD of sewage after t days from the start of oxidation of wastes, by consumption of oxygen

K_D is the deoxygenation constant

t is the time in days.

In the above equation :

- (a) L and K_D both depend upon temperature
- (b) only L depends upon temperature
- (c) only K_D depends upon temperature
- (d) L and K_D both are independent of temperature.

Answers For Test Paper

1. (d)	2. (c)	3. (b)	4. (b)	5. (c)
6. (b)	7. (b)	8. (d)	9. (a)	10. (c)
11. (d)	12. (b)	13. (b)	14. (a)	15. (d)
16. (c)	17. (b)	18. (b)	19. (e)	20. (b)
21. (d)	22. (c)	23. (a)	24. (c)	25. (d)
26. (a)	27. (c)	28. (b)	29. (c)	30. (c)
31. (c)	32. (b)	33. (e)	34. (c)	35. (a)
36. (c)	37. (c)	38. (b)	39. (b)	40. (b)
41. (b)	42. (b)	43. (b)	44. (b)	45. (d)
46. (c)	47. (b)	48. (a)	49. (c)	50. (a)
51. (a)	52. (c)	53. (a)	54. (a)	55. (d)
56. (b)	57. (c)			

Hints For Solving Starred Questions of The Test Paper

- Q. 1. $Q_1 = Q_2$
 or $A_1 R_1^{2/3} = A_2 R_2^{2/3}$ (S and N being the same)
 or $\frac{\pi}{4} D^2 \left(\frac{D}{4}\right)^{2/3} = b^2 \left(\frac{b}{4}\right)^{2/3}$
 or $\frac{D}{b} = \left(\frac{4}{\pi}\right)^{3/5} = 1.095$

Q. 5. Use Eqn. (7.22) as :

$$S = 100 [1 - (0.794)^{15}] = 96.86\%$$

Q. 6. Use Eqn. (7.23) as :

$$S = [100 - (0.630)^{15}] = 99.9\%$$

Q. 8. Use Eqn. (7.11) and determine :

$$\begin{aligned} \text{BOD}_5 &= \text{DO lost in sample} \times \text{dilution factor} \\ &= (9 - 5) \text{ mg/l} \times \text{dilution factor} \\ &= 4 \text{ mg/l} \times \left(\frac{250}{10}\right) = 100 \text{ mg/l.} \end{aligned}$$

Q. 9. Use Eqn. (7.11), as :

$$\text{BOD}_5 = \text{D.O. lost in sample} \times \text{dilution factor}$$

$$\text{or } 500 = (x - 5) \frac{200}{2} \quad \text{or } x = 10 \text{ mg/l.}$$

Q. 37. Plain Sedimentation or Filtration alone is ineffective in removing micro-organisms, like bacteria, virus, etc. Hence, all such micron sized bacteria and colloids (10^{-6} m to 10^{-3} m) need to be increased in size by chemical coagulation for subsequent sedimentation, filtration and removal.

Chemical precipitation is the term, which is generally used to mention precipitation of hardness by lime-soda process, etc., which thus, covers the removal of dissolved micro impurities and is not the case here.

$$\begin{aligned} \text{Q. 38. } \text{SO}_2 \text{ in } \mu\text{g/m}^3 &= \frac{\text{SO}_2 \text{ in ppm} \times 64000}{24.04} \\ &= \frac{0.3 \times 64000}{24} = 800. \end{aligned}$$

Q. 47. Use Eqn. (18.14) as :

$$d = C \cdot \sqrt{\frac{18\mu \cdot v_A \cdot H}{g \cdot L \rho_f}} \quad \text{where } C = 2$$

$$\begin{aligned} \therefore d &= 2 \times \sqrt{\frac{18 \times (1.7 \times 10^{-6}) \text{ kg/ms} \times 0.3 \text{ m/s} \times 1.5 \text{ m}}{9.81 \text{ m/s}^2 \times 10 \text{ m} \times 2000 \text{ kg/m}^3}} \\ &= \frac{2}{10^4} \times (0.28) \text{ m} = \frac{0.52}{10^4} \text{ m} = 52 \mu\text{m.} \end{aligned}$$

Q. 48. Eqn. (18.15) says that centrifugal force $F_c \propto \frac{1}{R}$. Hence, decrease in R will increase F_c , and consequently increase the efficiency of dust collection.

—25

Objective Question of the Combined Engineering Services (CES) Exams

Year 1993

- Q. 1.* Match List I with List II and select the correct answer using the codes given below the lists :

List I
(Treatment units)

- A. Grit chamber
B. Primary sedimentation
C. Activated sludge
D. Sludge digestion

List II
(Detention time)

1. Six hours
2. Two minutes
3. Two hours
4. Twenty days

Codes	A	B	C	D
(a)	3	1	4	2
(b)	2	3	1	4
(c)	2	1	3	4
(d)	1	2	3	4

- Q. 2.* Which one of the following statements is true of trickling filter sludge?

- (a) It has a comparatively low sludge volume index.
(b) It is more difficult to dewater than activated sludge.
(c) It has a comparatively low concentration of sludge solids.
(d) It is bulky.

- Q. 3. Match List I with List II and select the correct answer using the codes given below the lists :

List I

(Pipe material)

- A. Concrete sewer
B. Stone ware sewer
C. Cast iron sewer
D. Steel sewer

List II

(Property of material)

1. Cannot withstand high external load
2. Corrosion resistance in most natural soils
3. Resistant to corrosion from most acids
4. Unsuitable where soil contains excessive sulphates

Codes	A	B	C	D
(a)	1	2	3	4
(b)	4	3	2	1
(c)	4	1	2	3
(d)	2	1	3	4

- Q. 4. BOD is preferred to COD as an index of sewage concentration, because :

- (a) BOD represents both carbonaceous and nitrogenous organic matter, while COD may indicate carbonaceous matter only.
(b) BOD test is easier to perform and gives more reliable results.
(c) BOD relates specifically to putrescible organic matter which is the most objectionable sewage constituent.
(d) COD relates to the impurities which can only be removed by chemical treatment which is expensive.

- Q. 5.* Under Indian conditions, the average per capita contribution of BOD is :

- (a) 10 to 20 gm/d
(b) 20 to 35 gm/d
(c) 35 to 50 gm/d
(d) 50 to 70 gm/d.

- Q. 6. Match List I with List II and select the correct answer using the codes given below the lists :

List I

- A. Waste pipe
B. Soil pipe
C. Vent pipe
D. Antisiphonage pipe

List II

1. Carries waste water.
2. Carries liquid wastes that do not include human excreta.
3. Preserves the water seal of traps through access to atmospheric air.
4. Carries liquid wastes including human excreta.
5. Provides flow of air to or from drainage system in order to prevent vacuum pressures and excessive pressure and provides escape for foul gases.

Codes	A	B	C	D
(a)	2	4	5	3
(b)	3	5	1	2
(c)	4	5	1	2
(d)	1	4	5	3

- Q. 7. Match List I with List II and select the correct answer using the codes given below the lists :

List I

(Cause)

- A. Carbon monoxide
B. Carbon dioxide
C. Methane
D. Sulphur dioxide

List II

(Effect)

1. Acid rain
2. Explosion
3. Asphyxiation
4. Green house effect

*Hints for solving the starred Questions are given at the end of the chapter.

Codes	A	B	C	D
(a)	2	3	1	4
(b)	3	4	2	1
(c)	1	3	4	2
(d)	4	2	1	3

Q. 8. Sewage sickness relates to :

- toxicity of sewage interfering with response to treatment.
- destruction of aquatic flora and fauna due to gross pollution of receiving bodies of water by sewage.
- reduction in the waste purifying capacity of the soil.
- clogging of pores in soil due to excessive application of sewage to land, obstructing aeration and leading to septic conditions.

Q. 9*. Under natural conditions of flow, an unpolluted river would contain

- more dissolved oxygen in summer than in winter.
- less dissolved oxygen in summer than in winter.
- more or less the same amount of dissolved oxygen in winter and summer.
- the least amount of dissolved oxygen during the floods.

Year 1994

Q. 10*. Consider the data presented in the following table :

Temperature in °C	BOD reaction rate constant (K)
20	0.01
30	0.02
10	0.005

In the data presented above, the value of K

- should have remained constant
- should have decreased with increase in temperature
- should have remained the same at 20°C and 30°C
- has followed the correct trend.

Q. 11. For the combined sewerage system, egg-shaped sewers are preferred because :

- their construction is economical
- they are structurally more stable
- their maintenance is easier
- they offer good flow velocity during the dry weather flow condition.

Q. 12. Match List I with List II and select the correct answer using the codes given below the lists :

List I

(Terms / Description)

- Sludge volume index
- Thickening of sludge
- Scum removal
- Recycling of effluent

List II

(Treatment operation / process)

- Settling primary sedimentation tank
- Settling in secondary sedimentation tank
- Filtration in trickling filter
- Activated sludge process

Codes	A	B	C	D
(a)	2	4	1	3
(b)	4	2	3	1
(c)	2	4	3	1
(d)	4	2	1	3

Q. 13. An aeration basin with a volume of 400 m³ contains mixed liquor with suspended solid concentration of 1000 mg/l. The amount of mixed liquor suspended solids in the tank is

- 500 kg
- 250 kg
- 600 kg
- 400 kg

Q. 14*. The following reactions take place during anaerobic digestion of organics :

- Methane production
- Alkaline fermentation
- Acid fermentation
- Acid regression

The correct sequence of these reactions is

- 3, 4, 2, 1
- 4, 3, 2, 1
- 3, 4, 1, 2
- 4, 3, 1, 2

Q. 15. Traps are used in household drainage systems to :

- prevent entry of foul gases in the houses
- restrict the flow of water
- provide a partial vacuum
- trap the solid wastes.

Q. 16*. Modern coal-based thermal power stations pollute the atmosphere by adding :

- NO_x and SO₂
- NO_x, SO₂ and SPM
- NO_x, SO₂, SPM and CO
- NO_x, SPM and CO.

Q. 17. Consider the following statements :

Excessive growth of water weeds in a water body is attributed to the :

- increase in the benthic organisms including bacteria
- imbalance in aquatic ecosystem
- excessive inflow of nutrients

Of these statements

- 1, 2 and 3 are correct
- 1 and 2 are correct
- 1 and 3 are correct
- 2 and 3 are correct.

- Q. 18. Area method of land filling is most suitable when :
 (a) area is unsuitable for excavation of trenches.
 (b) adequate depth of cover material is available at the site
 (c) the water-table is near the surface
 (d) natural or artificial depressions exist in the vicinity.
- Q. 19. Various unit operations exist in a sewage treatment plant. These would include :
 1. screening
 2. grit removal
 3. secondary sedimentation
 4. aeration
 5. primary sedimentation
 The correct sequence of these operations is
 (a) 1, 2, 3, 4, 5 (b) 1, 2, 5, 4, 3
 (c) 2, 1, 4, 5, 3 (d) 2, 1, 4, 3, 5.

Year 1995

- Q. 20.* In transition of sewers from smaller diameter sewers to larger diameters sewers, the continuity of sewers is maintained at the :
 (a) bottom of the concrete bed of sewers
 (b) inverts of the sewers
 (c) crowns of the sewers
 (d) hydraulic gradients of the sewers.
- Q. 21. The slope of a 1.0 m diameter concrete sewer laid at a slope of 1 in 1000 develops a velocity of 1 m/s, when flowing full. When it is flowing half full, the velocity of flow through the sewers will be :
 (a) 0.5 m/s (b) 1.0 m/s
 (c) $\sqrt{2}$ m/s (d) 2.0 m/s.
- Q. 22.* Match List I with List II and select the correct answer using the codes given below the lists :

List I (Process)		List II (Biological agent)	
A. Oxidation ditch		1. Facultative bacteria	
B. Waste stabilisation pond		2. Anaerobic bacteria	
C. Imhoff tank		3. Aerobic bacteria (suspended culture)	
D. Rotating Biological Contractor (RBC)		4. Aerobic bacteria (attached culture)	
Codes	A B C D		
(a)	4 1 2 3		
(b)	3 1 2 4		
(c)	1 2 3 4		
(d)	3 4 1 2		

- Q. 23.* One litre of sewage, when allowed to settle for 30 minutes gives sludge of 27 cm³. If the dry weight of sludge is 3.0 gm, then its sludge volume index will be :
 (a) 9 (b) 24
 (c) 30 (d) 81.
- Q. 24. An industrial wastewater enters a stream having a BOD concentration of 10 mg/l and flow of 20 m³/s. If the flow of wastewater is 1.5 m³/s and its BOD concentration is 250 mg/l, then the BOD concentration in the stream at a point downstream of the point of confluence of wastewater with the stream will be :
 (a) 2.67 mg/l (b) 12.09 mg/l
 (c) 13.00 mg/l (d) 26.74 mg/l.
- Q. 25. A polluted stream undergoes self purification in four distinct zones :
 1. Zone of clear water 2. Zone of active decomposition
 3. Zone of degradation 4. Zone of recovery
 The correct sequence of these zones is :
 (a) 3, 4, 2, 1 (b) 2, 3, 4, 1
 (c) 2, 4, 3, 1 (d) 3, 2, 4, 1.
- Q. 26. Match List I with List II and select the correct answer using the codes given below the lists :

List I		List II	
A. Soil pipe		1. Ventilating pipe	
B. Intercepting trap		2. Wash basin	
C. p-trap		3. Water closet waste	
D. Cowl		4. House drainage	
Codes	A B C D		
(a)	3 4 1 2		
(b)	3 4 2 1		
(c)	4 3 2 1		
(d)	4 3 1 2		

- Q. 27. Match List I with List II and select the correct answer using the codes given below the lists :

List I (Pollutants)		List II (Effect produced)	
A. CO		1. Green house effect	
B. CO ₂		2. Acid rains	
C. SO ₂		3. Acute toxicity	
D. NO _x		4. Ozone liberation at ground level	
Codes	A B C D		
(a)	3 4 1 2		
(b)	3 4 2 1		
(c)	4 3 2 1		
(d)	4 3 1 2		

1. Mesosphere
2. Stratosphere
3. Thermosphere
4. Troposphere
- The correct sequence of these layers starting from the surface of earth upwards is :
- (a) 2, 4, 1, 3
(b) 4, 2, 1, 3
(c) 4, 2, 3, 1
(d) 2, 4, 3, 1
- Q. 29. Which one of the following solid waste disposal methods is socially most acceptable ?
- (a) Sanitary land fill
(b) Incineration
(c) Composting
(d) Pyrolysis.

Year 1996

- Q. 30. The waste stabilisation ponds can be :
- (a) aerobic
(b) anaerobic
(c) facultative
(d) any of the above.
- Q. 31. Which of the following pairs is not correctly matched ?
- (a) BOD—Strength of sewage
(b) Methane—Product of anaerobic decomposition
(c) COD—Biodegradability of wastewater
(d) Nitrate—Methemoglobinemia.
- Q. 32. The following are the sewage treatment processes :
1. Primary sedimentation
2. Screening
3. Grit removal
4. Secondary sedimentation
- When only preliminary treatment is to be given for sewage, what the required treatment processes including their correct sequence from the codes given below :
- Codes :
- (a) 2, 3
(b) 2, 3, 1
(c) 1, 2, 3, 4
(d) 3, 1, 2, 4.
- Q. 33. The formulation for BOD assimilation in a stream should include
- (a) BOD rate constant
(b) Sedimentation of organic matter
(c) BOD rate constant and sedimentation of organic matter
(d) Pathogenic bacterial decay coefficient.
- Q. 34. When was the Water (Prevention and Control of Pollution) Act enacted by the Indian Parliament ?
- (a) 1970
(b) 1974
(c) 1980
(d) 1985.
- Q. 35. The entry of foul smelling gases into the house coming from the

- (b) providing water seals for all the fixtures and a vent pipe in the plumbing system
(c) providing efficient vent pipes in the plumbing system
(d) exhaust fans.
- Q. 36. Ringlemann's scale is used to :
- (a) measure CO
(b) measure CO₂
(c) grade density of smoke
(d) grade automobile exhaust gas.
- Q. 37. Eutrophication of water bodies is caused by the :
- (a) discharge of toxic substances
(b) excessive discharge of nutrients
(c) excessive discharge of suspended solids
(d) excessive discharge of chlorides.
- Q. 38. Non disposal of solid waste may cause the spread of :
- (a) malaria
(b) rodents related plague
(c) typhoid
(d) dysentery.

Year 1997

- Q. 39. Self cleansing velocity is :
- (a) the minimum velocity of flow required to maintain a certain amount of solids in the flow
(b) the maximum velocity of flow required to maintain a certain amount of solids in the flow
(c) such flow velocity as would be sufficient to flush out any deposited solids in the sewer
(d) such flow velocity as would be sufficient to ensure that sewage does not remain in the sewer.
- Q. 40. The following steps are involved in laying a sewer in a trench :
1. Transferring the centre line of the sewer to the bottom of the trench
2. Setting sight rails over the trench
3. Driving pegs to the level of the invert line of the sewer
4. Placing the sewer in the trench.
- The correct sequence of these steps is :
- (a) 1, 2, 3, 4
(b) 2, 3, 4, 1
(c) 4, 2, 3, 1
(d) 2, 3, 1, 4.
- Q. 41. A grit chamber of dimensions 12.0 m × 1.50 m × 0.80 m liquid depth has a flow of 720 m³/hr. Its surface loading rate and detention time are, respectively :
- (a) 40,000 m³/hr/m² and 1.2 minute
(b) 40,000 lph/m² and 40 minutes
(c) 40 m³/hr/m² and 12 minutes
(d) 40,000 lph/m² and 1.2 minutes.

- Q. 42.** Match List I (Impurities to be removed from sewage) with List II (Treatment unit used) and select the correct answer using the codes given below the lists :

List I		List II	
A. Large floating matter		1. Trickling filter	
B. Suspended inorganic matter		2. Primary clarifier	
C. Suspended organic matter		3. Grit chamber	
D. Dissolved organic matter		4. Screens.	

Codes	A	B	C	D
(a)	3	4	2	1
(b)	3	4	1	2
(c)	4	3	2	1
(d)	4	3	1	2

- Q. 43.*** Which of the following are claimed as advantages in respect of aerobic sludge digestion as compared to anaerobic sludge digestion ?

1. Lower BOD concentration in supernatant liquor
2. Production of a sludge with excellent dewatering propensity
3. Greater production of methane
4. Lesser operating cost
5. Lesser capital cost.

Select the correct answer using the codes given below :

Codes :

- (a) 1, 2 and 4 (b) 2, 3, 4 and 5
(c) 3, 4 and 5 (d) 1, 2 and 5.

- Q. 44.** The following data pertain to a sewage sample :

Initial D.O.	= 10 mg/l
Final D.O.	= 2 mg/l
Dilution	= 1%

The BOD of the given sewage sample is

- (a) 8 mg/l (b) 10 mg/l
(c) 100 mg/l (d) 800 mg/l.

- Q. 45.** Match List I with List II and select the correct answer using the codes given below the lists :

List I		List II	
A. Sludge disposal		1. Seeding	
B. Sludge digestion		2. Biofilters	
C. Aerobic action		3. Lagooning	
D. Recirculation		4. Contact bed	

Codes	A	B	C	D
(a)	3	1	4	2
(b)	3	1	2	4
(c)	1	3	2	4
(d)	1	3	4	2

- Q. 46.** Which one of the following would help to prevent the escape of foul sewer gases from a water closet ?

- (a) Air gap (b) Vent pipe
(c) Gully trap (d) None of the above.

- Q. 47.** Sewage sickness occurs when :

- (a) sewage contains pathogenic organisms
(b) sewage enters the water supply system
(c) sewers get clogged due to accumulation of solids
(d) voids of soil get clogged due to continuous application of sewage on a piece of land.

- Q. 48.** In the design of storm sewers, "time of concentration" is relevant to determine the :

- (a) rainfall intensity (b) velocity in the sewer
(c) time of travel (d) area served by the sewer.

- Q. 49.** Self purification of running streams may be due to :

- (a) sedimentation, oxidation and coagulation
(b) dilution, sedimentation and oxidation
(c) dilution, sedimentation and coagulation
(d) dilution, oxidation and coagulation.

- Q. 50.** Which of the following waste disposal tasks are achieved by a septic tank with its dispersion trench ?

1. Aerobic sludge digestion
2. Settling and anaerobic sludge digestion
3. Anaerobic sewage stabilisation
4. Biooxidation of effluent.

Codes :

- (a) 1 and 3 (b) 3 and 4
(c) 2 and 4 (d) 1 and 4.

- Q. 51.** Which of the following air pollutants is/are responsible for photochemical smog ?

1. Oxides of nitrogen
2. Ozone
3. Unburnt hydrocarbons
4. Carbon monoxide

Codes :

- (a) 1 alone (b) 2, 3 and 4
(c) 1, 3 and 4 (d) 1 and 3.

- Q. 52.** Match List I (Equipment) with List II (Pollutants removed) and select the correct answer using the codes given below the lists :

List I		List II	
A. Electrostatic precipitators		1. Coarse particles	
B. Cyclones		2. Fine dust	
C. Wet scrubbers		3. Gas	
D. Absorbers		4. Sulphur dioxide	

Codes	A	B	C	D
(a)	1	2	3	4
(b)	2	1	3	4
(c)	2	1	4	3
(d)	1	2	4	3

Q. 53.* Which of the following pairs is/are correctly matched?

1. Eutrophication Nutrient accumulation leading to ecosystem change occurring in impounded water
2. Autotrophism Utilization, rearrangement and decomposition of complex materials predominate
3. Heterotrophism Predominance of fixation of light energy, use of simple inorganic substances and built up complex substances.

Select the correct answer using the codes given below:

Codes:

- (a) 1, 2 and 3 (b) 1 alone
(c) 2 and 3 (d) 1 and 3.

Q. 54. The typical density in kg/cu m (insitu) of well compacted municipal solid waste in landfill is in the range of:

- (a) 100 to 300 (b) 310 to 500
(c) 550 to 850 (d) 900 to 1100.

Q. 55.* Which of the following materials are used as landfill sealants for the control of gas and leachate movements?

1. Lime
2. Sand
3. Bentonite
4. Fly ash
5. Butyl rubber

Select the correct answer using the codes given below:

- (a) 1, 2 and 3 (b) 4 and 5
(c) 3 and 5 (d) 1, 2 and 4.

Q. 56.* Two sources generate noise levels of 90 dB and 94 dB respectively. The cumulative effect of these two noise levels on the human ear is:

- (a) 184 dB (b) 95.5 dB
(c) 94 dB (d) 92 dB.

Year 1998

Q. 57. The maximum flow occurs in an egg shaped sewer when the ratio of depth of flow to vertical diameter is:

- (a) 0.33 (b) 0.50
(c) 0.95 (d) 1.00.

Q. 58. The following three stages are known to occur in the biological action involved in the process of sludge digestion:

1. Acid fermentation
2. Alkaline fermentation.
3. Acid regression.

The correct sequence of these stages is:

- (a) 1, 2, 3 (b) 2, 3, 1
(c) 3, 1, 2 (d) 1, 3, 2.

Q. 59. Fresh sludge has moisture content of 99% and, after thickening, its moisture content is reduced to 96%. The reduction in volume of sludge is:

- (a) 3% (b) 5%
(c) 75% (d) 97.5%.

Q. 60. Match List-I (Nature of the solids) with List-II (Unit operation or process connected with its removal) and select the correct answer using the codes given below the lists:

List-I

- A. Dissolved solids
- B. Colloidal solids
- C. Volatile solids
- D. Settleable solids

List-II

1. Sedimentation
2. Reverse osmosis
3. Coagulation
4. Digestion

Codes	A	B	C	D
(a)	2	3	4	1
(b)	3	2	4	1
(c)	2	3	1	4
(d)	3	2	1	4

Q. 61. In the oxidation ditch, the excess sludge is taken to:

- (a) anaerobic digester (b) aerobic digester
(c) drying beds (d) incinerator.

Q. 62. The flow sheet of the liquid stream of a sewage treatment scheme consists of:

1. Trickling filter
2. Primary settling tank.
3. Grit chamber
4. Screen chamber
5. Secondary settling tank.

The correct sequence of these units in the sewage treatment scheme of a liquid stream is

- (a) 3, 4, 1, 2, 5 (b) 3, 4, 2, 1, 5
(c) 4, 3, 2, 1, 5 (d) 4, 3, 1, 2, 5.

Q. 63. Which one of the following pairs is NOT correctly matched?

- (a) Activated sludge aeration
(b) Trickling filters attached growth system
(c) Oxidation ditch algae
(d) Channel grit chamber proportional weir

Q. 64. The two main gases liberated from an anaerobic sludge digestion tank would include:

- (a) ammonia and carbon dioxide
(b) carbon dioxide and methane

- (c) methane and hydrogen sulphide
(d) ammonia and methane.
- Q. 65. Which one of the following sewage treatment units has a parallel flume?
(a) Trickling filter (b) Oxidation ditch
(c) Grit chamber (d) Aerated lagoon.
- Q. 66. Which one of the following principal types of reactors is related to trickling filter?
(a) Plug flow (b) Complete-mix
(c) Packed-bed (d) Fluidized-bed.
- Q. 67. Which one of the following is LEAST important in the activated sludge process?
(a) Proper proportion of the return sludge from the secondary settling tank
(b) Adequate aeration in the biological reactor, so as to maintain certain minimum dissolved oxygen
(c) Proper food to micro-organisms (F : M) ratio
(d) The sludge volume index of the return sludge to be less than 200
- Q. 68. Sludge bulking can be controlled by:
(a) chlorination (b) coagulation
(c) aeration (d) denitrification.
- Q. 69. The following zones are formed in a polluted river:
1. zone of clear water 2. zone of active decomposition
3. zone of recovery 4. zone of pollution.
The correct sequence in which these zones occur progressively downstream in a polluted river is:
(a) 4, 2, 1, 3 (b) 4, 2, 3, 1
(c) 2, 4, 3, 1 (d) 2, 4, 1, 3.
- Q. 70. Match List-I (Pollutants) with List-II (Sources) and select the correct answer using the codes given below the lists:
- | List-I | | List-II | |
|------------------|--|--------------------------|--|
| A. Acid water | | 1. Volcanoes | |
| B. SO_2 | | 2. Automobiles | |
| C. CO | | 3. Thermal power station | |
| D. Fly ash | | 4. Mining | |
Codes	A	B	C	D
(a)	4	1	2	3
(b)	4	1	3	2
(c)	1	4	3	2
(d)	1	4	2	3

- Q. 71. Aerosol is :
(a) carbon particles of microscopic size
(b) dispersion of small solid or liquid particles in gaseous media
(c) finely divided particles of ash
(d) diffused liquid particles.
- Q. 72. Which one of the following methods can be employed for plastic and rubber waste disposal?
(a) Composting (b) Incineration
(c) Sanitary landfill (d) Pyrolysis.
- Year 1999
- Q. 73. Consider the following statements :
Ventilation of sewer lines is necessary to :
1. avoid building up of sewer gases
2. ensure atmospheric pressure in the waste water surface
3. ensure the safety of sewer maintenance people
4. provide oxidation facility to sewage.
Which of these statements are correct?
(a) 1, 2 and 4 (b) 1, 3 and 4
(c) 2, 3 and 4 (d) 1, 2 and 3.
- Q. 74. For a colony of 10,000 persons having sewage flow rate of 200 l/capita/day, BOD of applied sewage of 300 mg/l and organic loading of 300 kg/day/hectare, the area of an oxidation pond required for treating the sewage of the colony is :
(a) 0.2 hectares (b) 1 hectare
(c) 2 hectares (d) 6 hectares.
- Q. 75. The second stage BOD as shown in the figure below is due to :

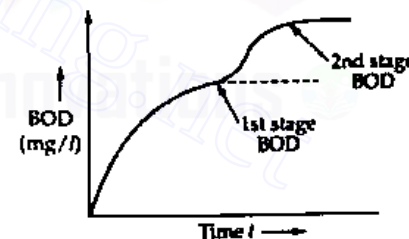


Fig. 25.1

- (a) experimental error
(b) increased activity of bacteria
(c) nitrification demand
(d) interference by certain chemical reaction.
- Q. 76. The purpose of a proportional weir at the effluent end of a channel type grit removal unit is to :

- (a) provide easy passage of solid particles
 (b) measure the rate of flow in the channel
 (c) keep the depth of flow in the channel above a certain value
 (d) maintain constant mean velocity in the channel.
- Q. 77. The correct sequence of the sludge digestion steps is :
 (a) Acid formation, hydrolysis, methane formation.
 (b) Methane formation, acid formation, hydrolysis.
 (c) Hydrolysis, methane formation, acid formation.
 (d) Hydrolysis, acid formation, methane formation.
- Q. 78. For fish habitat in a river, the minimum dissolved oxygen required is :
 (a) 2 mg/l (b) 4 mg/l
 (c) 8 mg/l (d) 10 mg/l.
- Q. 79. Sewage sickness is a term used for :
 (a) persons who become sick after drinking polluted water
 (b) a treatment plant which does not function properly
 (c) a stream where the flora and fauna die due to sewage flow
 (d) the condition of land where sewage is applied continuously for a long period.
- Q. 80. The trap used for a water closet is called :
 (a) gully trap (b) p-trap
 (c) intercepting trap (d) anti-siphon trap.
- Q. 81. In a design of storm sewer, if the time taken by rain water to flow from the farthest point of the watershed to the sewer inlet is t_i , and the time of flow of water from the sewer inlet to the point in the sewer that is under consideration is t_f , then the time of concentration will be :
 (a) t_i (b) t_f
 (c) $t_i + t_f$ (d) t_i or t_f whichever is greater.
- Q. 82. A circular sewer of diameter 1 m carries storm water to a depth of 0.75 m. The hydraulic radius is approximately :
 (a) 0.3 m (b) 0.4 m
 (c) 0.5 m (d) 0.6 m.
- Q. 83. Consider the following statements about waste stabilization ponds :
 1. The pond has a symbiotic behaviour of waste stabilization through algae on one hand and bacteria on the other.
 2. The oxygen in ponds is provided by algae through photosynthesis.
 3. The detention period for waste stabilization pond is of the order of two to three days.
 4. The bacteria which develop in the pond, are aerobic bacteria.

Which of these statements are correct ?

- (a) 1, 2 and 3 (b) 1, 3 and 4
 (c) 2 and 4 (d) 1 and 2.

- Q. 84. Match List I with List II and select the correct answer using the codes given below the lists :

List I (Air Pollution)	List II (Environmental effect)
A. Carbon dioxide	1. Respiratory distress for living beings
B. Particulate matter	2. Chemical reaction with haemoglobin in blood
C. Nitrogen oxides	3. Reduction in visibility and aero allergens
D. Sulphur dioxide	4. Photochemical smog in atmosphere
Codes	A B C D
(a)	2 3 1 4
(b)	3 2 4 1
(c)	2 3 4 1
(d)	3 2 1 4

- Q. 85.* If carbon monoxide is released at the rate of $0.03 \text{ m}^3/\text{min}$ from a gasoline engine and 50 ppm is the threshold limit for an 8 hour exposure, the quantity of air which dilutes the contaminant to a safe level will be :

- (a) $60 \text{ m}^3/\text{min}$ (b) $600 \text{ m}^3/\text{min}$
 (c) $600 \text{ m}^3/\text{s}$ (d) $60 \text{ m}^3/\text{s}$.

- Q. 86. Consider the following statements associated with water pollution parameters :

- One of the primary indicators of the degree of water pollution is the concentration of organic matter
- Total organic carbon (TOC), chemical oxygen demand (COD) and biochemical oxygen demand (BOD) are important parameters of water pollution
- Generally $\text{TOC} > \text{COD} > \text{BOD}$.

Which of these statements are correct ?

- (a) 1, 2 and 3 (b) 1 and 2
 (c) 1 and 3 (d) 2 and 3.

- Q. 87. Match List I (Methods of solid wastes disposal) with List II (Terms pertaining to the methods) and select the correct answer using the codes given below the list :

List I	List II
A. Incineration	1. Requires presorting, grinding and turning
B. Sanitary land fill	2. Limited to special wastes and selected materials
C. Composting	3. High operational and maintenance cost
D. Salvage by sorting	4. Tractor
	5. Rat and fly breeding

Codes	A	B	C	D
(a)	2	5	4	3
(b)	1	4	2	3
(c)	3	4	1	2
(d)	3	5	4	2

Q. 88.* The sound pressure level for a jet plane on the ground with sound pressure of 2000 m bar should be :

- (a) 60 decibel (b) 100 decibel
(c) 140 decibel (d) 180 decibel.

Q. 89. Examine the 'Assertion A' and 'Reason R', and decide if the assertion A and the reason R are individually true, and if so, whether the reason is a correct explanation of the Assertion ; then mark your choice using the codes given below :

Codes :

- (a) Both A and R are true and R is the correct explanation of A
(b) Both A and R are true and R is not a correct explanation of A
(c) A is true but R is false
(d) A is false but R is true.

(i) Assertion (A) : Vent should be provided over both the septic tank and the seepage pit.

Reason (R) : The vent pipes remove the gases that are generated due to bacterial action and avoid building up of pressure.

(ii) Assertion (A) : Sanitary land fills can no longer be used for the disposal of solid wastes in India.

Reason (R) : The leachates from sanitary landfills may pollute the ground water.

Year 2000

Q. 90. In which one of the following tests is the organic matter in the waste water used as food by micro-organisms ?

- (a) BOD (b) Most probable number
(c) COD (d) chlorine demand.

Q. 91. The function of algae in an oxidation pond is to :

- (a) provide a mat over the surface of the oxidation pond so as to prevent evaporation of water
(b) provide oxygen for bacteria to degrade organic matter
(c) provide a greenish appearance to the pond
(d) prevent the odour nuisance.

Q. 92. At an incubation temperature of 20°C, if initial D.O. (dissolved oxygen) and final D.O. values after 5 days incubation period on a 2% sample of sewage, are 8.5 mg/l and 5.5 mg/l, respectively, then the B.O.D. will be :

- (a) 50 mg/l (b) 150 mg/l
(c) 250 mg/l (d) 350 mg/l

Q. 93. Consider the following pairs of treatment units and impurities removed :

1. Grit chamber	Sand and silt
2. Detritus tank	Organic matter
3. Primary sedimentation tank	Suspended impurities
4. Aeration tank of activated sludge process plant	Oil and grease

Which of these pairs are correctly matched ?

- (a) 1 and 2 (b) 1, 2, 3 and 4
(c) 2, 3 and 4 (d) 1 and 3.

Q. 94. When a sewage is disposed off in a river, the rate of depletion of dissolved oxygen of the river mainly depends on :

- (a) biochemical oxygen demand of the sewage
(b) chemical oxygen demand of the sewage
(c) total organic carbon present in the sewage
(d) dissolved oxygen present in the sewage.

Q. 95. For a waste water, the 5-day BOD at 20°C is found to be 200 mg/l. For the same waste, 5-day BOD at 30°C will be :

- (a) less than 200 mg/l
(b) more than 200 mg/l
(c) 200 mg/l
(d) zero, as the bacteria cannot withstand such a high temperature.

Q. 96. The ultimate BOD value of a waste :

- (a) increase with temperature
(b) decreases with temperature
(c) remains the same at all temperatures
(d) doubles with every 10°C rise in temperature.

Q. 97. For the design of a storm sewer in a drainage area, if the time of concentration is 20 min, then the duration of rainfall will be taken as :

- (a) 10 min. (b) 20 min.
(c) 30 min. (d) 40 min.

Q. 98. From ecological considerations, the minimum level of dissolved oxygen (D.O.) necessary in the rivers and streams is :

- (a) 1 mg/l (b) 2 mg/l
(c) 4 mg/l (d) 8 mg/l.

Q. 99. The role of the bed material in a "packed tower" used for removing particulate matter from gaseous emissions is to :

- (a) act as a filter bed to capture the particulates within the pores
(b) provide a large surface area on which the particulate matter can be collected
(c) reduce the flow of gas
(d) uniformly distribute the spray of water.

- Q. 100. Which one of the following plume behaviours occurs when atmospheric inversion begins from the ground level and continues?
 (a) Looping (b) Fumigation
 (c) Coning (d) Fanning.
- Q. 101. Which one of the following pollutants or pairs of pollutants is formed due to photochemical reactions?
 (a) CO alone (b) O_3 and PAN
 (c) PAN and NH_3 (d) NH_3 and CO.
- Q. 102. In the context of basic concept of an ecological system, the most appropriate definition of ecology is that it is a study of the:
 (a) inter-relationship between organisms and the environment
 (b) relationship of human species with the industry
 (c) relationship of human species with natural resources
 (d) relationship of human species with air.
- Q. 103. Organisms that mineralise organic matter in an ecosystem are called:
 (a) producers (b) consumers
 (c) decomposers (d) carnivorous.
- Q. 104. Aerobic method of composting practised in India is called:
 (a) Bangalore method (b) Nagpur method
 (c) Delhi method (d) Indore method.
- Q. 105. Which of the following statements related to C/N (Carbon/Nitrogen) ratio is not correct?
 (a) Lower initial C/N ratio leads to loss of nitrogen and slows down the rate of decomposition
 (b) Higher initial C/N ratio leads to cell destruction to obtain nutrition
 (c) Higher initial C/N ratio leads to lower conservation of nitrogen in the finished compost
 (d) An initial C/N ratio of 30 to 50 is optimal for composting.
- Q. 106. Which one of the following sets of processes is a part of self-purification of streams?
 (a) Settling, bio-degradation and desalination
 (b) Settling, bio-degradation and aeration
 (c) Flotation, ion exchange and desalination
 (d) Desalination, ion exchange and reverse osmosis.
- Q. 107. When sewage enters a flowing river, the rapid depletion of dissolved oxygen is due to:
 (a) change in temperature of river water
 (b) the suspended particles in river and waste
 (c) respiratory activity of aquatic plants
 (d) microbial activity.

- Q. 108. Consider the following advantages:
 1. Lower BOD concentration in supernatant liquor
 2. Production of sludge with excellent dewatering capacity
 3. Recovery of methane gas
 4. Lower operation cost
 Which of these are the advantages of anaerobic digestion over aerobic digestion?
 (a) 1 and 4 (b) 1 and 2
 (c) 2, 3 and 4 (d) 1, 2 and 3.
- Q. 109.* The MLSS concentration in the aeration tank of extended aeration activated sludge process is 400 mg/l. If one litre of sample settled in 30 minutes and the measuring cylinder showed a sludge volume of 200 ml, then the sludge volume index would be nearly:
 (a) 200 (b) 150
 (c) 100 (d) 50.
- Q. 110. Examine Assertion (A) and Reason (R) and select your answer using the codes given below:
 (a) Both A and R are true and R is the correct explanation of A
 (b) Both A and R are true but R is NOT the correct explanation of A
 (c) A is true but R is false
 (d) A is false but R is true.
 (A) Assertion A : Sewers are not allowed to flow full.
 Reason R : Reserve space in the sewer takes care of fluctuations in the sewage flow.
 (B) Assertion A : In recent years, there has been a progressive increase in the percentage of solar ultraviolet rays reaching the Earth's surface.
 Reason R : In the last few years, there has been a progressive increase in the percentage of carbon dioxide in the Earth's atmosphere.
- Year 2001
- Q. 111. Match List I (Unit) with List II (Purpose) and select the correct answer using the codes given below the lists:
- | List I
(Unit) | List II
(Purpose) |
|--------------------|---|
| A. Leaping weir | 1. To prevent grit, sand, debris etc. from entering the storm sewer |
| B. Gutter inlet | 2. To carry the sewer below a stream or railways line |
| C. Inverted syphon | 3. To drain rain water from roads to the storm sewer |
| D. Catch basin | 4. To separate storm water and the sanitary sewage |

Codes	A	B	C	D
(a)	4	3	1	2
(b)	4	3	2	1
(c)	3	4	2	1
(d)	3	4	1	2

- Q. 112. Match List I (Treatment Units) with List II (Types of processes) and select the correct answer using the codes given below the list :

List I		List II		
(Treatment units)		(Types of processes)		
A. Trickling filter		1. Symbiotic		
B. Activated sludge process		2. Extended aeration		
C. Oxidation ditch		3. Suspended growth		
D. Oxidation pond		4. Attached growth		
Codes	A	B	C	D
(a)	3	4	2	1
(b)	4	3	1	2
(c)	3	4	1	2
(d)	4	3	2	1

- Q. 113.* If the moisture content of a sludge is reduced from 98% to 96%, the volume of sludge will decrease by :

- (a) 2% (b) 20%
(c) 25% (d) 50%.

- Q. 114.* In a high rate Trickling filter, the problem of ponding can be solved by :

- (a) flooding and raking (b) chlorination and supply of air
(c) raking and chlorination (d) flooding and supply of air.

- Q. 115. Consider the following statements :

The process of activated sludge can be explained as :

1. a physical action whereby the finer suspended particles of sewage form a sublayer for a bacterial film at the surface.
2. a chemical action whereby the finer suspended particles and colloidal solids are combined into masses of large bulk.
3. a biochemical action whereby the sludge flocs so formed act as vehicle for aerobic bacteria oxidising the organic matter.

Which of these statements are correct ?

- (a) 1, 2 and 3 (b) 1 and 2
(c) 2 and 3 (d) 1 and 3.

- Q. 116. Sewage may be disposed of without treatment into a water body if the available dilution is not less than

- (a) 150 (b) 250
(c) 400 (d) 500.

- Q. 117. A certain waste has a BOD of 162 mg/l and its flow is 1000 cubic metre per day. If the domestic sewage has a BOD of 80 gram per capita, then the population equivalent of the waste would be :

- (a) 20.25 (b) 1296
(c) 2025 (d) 12960.

- Q. 118. In a sanitary plumbing of buildings, a two pipe system signifies :

- (a) separate soil-pipe and waste pipe without vent pipes
(b) a soil cum waste pipe and a ventilating pipe
(c) separate soil and waste pipe and a common ventilating pipe
(d) separate soil pipe and waste pipe, each with its own vent pipe.

- Q. 119. Which of the following are storm water regulators ?

1. Side weir 2. Leaping weir
3. Syphonic spillway 4. Float actuated gates or valves
5. Inverted syphon.

Select the correct answer using the codes given below :

Codes :

- (a) 1, 2, 3 and 4 (b) 1, 3 and 5
(c) 2, 3, 4 and 5 (d) 1, 2, 4 and 5.

- Q. 120. When waste water is disposed of into a running stream, four zones are formed. In which one of the following zones will the minimum level of dissolved oxygen be found ?

- (a) zone of degradation (b) zone of active decomposition
(c) zone of recovery (d) zone of clear water.

- Q. 121. The least expensive and most suitable excreta disposal unit for rural areas would be the :

- (a) soak pit (b) pit privy
(c) leaching cesspool (d) septic tank.

- Q. 122. Which of the following pairs are correctly matched ?

1. Ringelmann chart ... To grade density of smoke
2. Pneumoconiosis ... Disease caused due to coal dust
3. PAN ... Secondary air pollutant.

Select the correct answer using the codes given below :

Codes :

- (a) 2 and 3 (b) 1 and 2
(c) 1 and 3 (d) 1, 2 and 3.

- Q. 123.* Which one of the following terms correctly describes 'Biomagnification' ?

- (a) Reproduction of micro-organisms
(b) Observation of micro-organisms under a microscope
(c) Ability of micro-organisms to form zooccal film
(d) Concentration of toxic materials in the food chain.

- Q. 124. Which one of the following comprehensive classifications is used for different types of solid waste ?
- Residential, commercial and treatment plant wastes
 - Food, demolition and construction wastes
 - Municipal, industrial and hazardous wastes
 - Rubbish, special wastes and wastes from open areas.
- Q. 125. Which one of the following methods would be the best suited for disposal of plastic and rubber waste ?
- Composting
 - Incineration
 - Pyrolysis
 - Sanitary land fill.
- Q. 126.* Which of the following pairs are correctly matched ?
- Reverberation time ... Time required to reduce noise by 60 dB
 - NIPTS ... Responsible for permanent hearing loss
 - Sound foci ... Formed when sound waves are reflected from convex surface
 - TTS ... Responsible for temporary hearing loss.
- Codes :
- 2, 3 and 4
 - 1, 3 and 4
 - 1, 2 and 4
 - 1, 2 and 3.

Year 2002

- Q. 127. The correct statement of comparison of ultimate BOD (BOD_u), COD , Theoretical oxygen demand ($ThOD$) and 5-day BOD (BOD_5) is
- $BOD_u > COD > ThOD > BOD_5$
 - $COD > ThOD > BOD_u > BOD_5$
 - $ThOD > COD > BOD_u > BOD_5$
 - $COD > BOD_u > BOD_5 > ThOD$.
- Q. 128. At a sewage treatment plant for a flow of $3 \text{ m}^3/\text{s}$, the cross-sectional area of grit chamber will be about
- 3 m^2
 - 10 m^2
 - 25 m^2
 - 30 m^2 .
- Q. 129. Match List I (Different forms of nitrogen in water) with List II (Inferences) and select the correct answer using the codes given below the lists :
- | | |
|---|--------------------------------------|
| List I
(Different forms of
nitrogen in water) | List II
(Inferences) |
| A. Nitrate nitrogen | 1. Unsatisfactory microbial activity |
| B. Total nitrogen | 2. Satisfactory microbial activity |
| C. Nitrite nitrogen | |

Codes	A	B	C	D
(a)	3	2	1	4
(b)	1	4	3	2
(c)	3	4	1	2
(d)	1	2	3	4

- Q. 130. Match List I (Standards of sewage effluents for the discharge in surface water sources) with List II (Tolerance limits) and select the correct answer using the codes given below the lists :

List I (Standards of sewage effluents for the discharge in surface water sources)	List II (Tolerance limits)
A. BOD_5 , (mg/l)	12.5
B. COD , (mg/l)	23.0
C. Oil and grease, (mg/l)	32.0
D. Total suspended solids, (mg/l)	41.0

Codes	A	B	C	D
(a)	3	4	1	2
(b)	2	4	1	3
(c)	3	1	4	2
(d)	2	1	4	3

- Q. 131. In the preliminary treatment of wastewater, skimming tanks are often included in the treatment scheme. Various features of skimming tanks are that these :

- can remove general floating matter.
- can remove oily and greasy matter.
- have detention time of 30 min.
- employ compressed air blown through diffusers.

Which of these statements are correct ?

- 1 and 3
- 2 and 4
- 2 and 3
- 1 and 2.

- Q. 132.* The following is a well known formula for estimating the plume rise :

$$\Delta h = \frac{V_s d}{u} \left(1.5 + 0.0096 \frac{Q_h}{V_s d} \right)$$

where the letters have their usual meaning. The estimated plume rise (by the above formula) with a stack gas having heat emission rate 2000 kJ/s , the wind speed 4 m/s , stack gas speed 8 m/s inside a stack diameter of 1 m at the top is

- 7.8 m
- 8.7 m
- 3.15 m
- $\frac{8000}{\pi} (1.5 + 0.0024\pi)$.

- Q. 133. In sampling of stack gases for measurement of concentration of Suspended Particulate Matter (SPM), the flue gases are sucked at the instrument at
- any rate of flow from mid diameter of chimney
 - any point of chimney cross-section and at any rate of flow
 - a constant rate of flow but at four equidistant points along the diameter
 - controlled positions and controlled velocities along the chimney diameter to get isokinetic conditions.

- Q. 134. Match List I (Air pollutants) with List II (Harmful effects) and select the correct answer using the codes given below the lists:

List I

(Air pollutants)

- A. SPM
B. NO
C. CO
D. SO₂

Codes	A	B	C	D
(a)	3	4	1	2
(b)	1	2	3	4
(c)	3	2	1	4
(d)	1	4	3	2

List II

(Harmful effects)

1. Blood haemoglobin
2. Vegetation
3. Respiratory system
4. Building materials

- Q. 135. Match List I (Air pollutants) with List II (Emitted mainly by) and select the correct answer using the codes given below the lists:

List I

(Air pollutants)

- A. Hydrocarbons
B. Particulates and gases
C. Sulphur dioxide
D. Carbon monoxide

Codes	A	B	C	D
(a)	3	4	2	1
(b)	4	3	2	1
(c)	3	4	1	2
(d)	4	3	1	2

List II

(Emitted mainly by)

1. Coal burning
2. Gasoline fuel
3. Tyres
4. Carburettor

- Q. 136. 'Air binding' may occur in :

- (a) Sewers
(c) Aerator

- (b) Artesian well
(d) Filter.

- Q. 137.* The description of solid waste collected is as follows :

Night soil	—	35 t
Rubbish	—	40 t
Debris	—	55 t

The organic solids in the above composition is :

- (a) 35 t (b) 80 t
(c) 100 t (d) 75 t.

- Q. 138. In a sanitary landfill, decomposition and chemical changes within organic content of the solid waste goes on. Consequential changes within landfill can be :

- Temperature changes within landfill.
- Production of gases like H₂S, CO, CO₂ and CH₄.
- Destruction of pathogens.
- Production of other gases like SO₂ and NO₂.

Which of these statements are correct ?

- (a) 1, 2, 3 and 4 (b) 1, 2 and 3
(c) 1 and 4 (d) 2 and 3.

- Q. 139. Direction. The following 4 items [S. No. (i) to (iv)] consist of two statements, one labelled the 'Assertion A' and the other labelled the 'Reason R'. You are to examine these two statements carefully and decide if the Assertion (A) and the Reason (R) are individually true and if so, whether the Reason is a correct explanation of the Assertion. Select your answers to these items using the codes given below and mark your Answer Sheet accordingly.

Codes :

- (a) Both A and R are true and R is the correct explanation of A
(b) Both A and R are true but R is not a correct explanation of A
(c) A is true but R is false
(d) A is false but R is true.

- (i) Assertion (A) : U.K. Royal Commission on Sewage Disposal of 1898-1915 classified British rivers on the basis of 65°F, 5-day BOD.

Reason (R) : British rivers do not have flow time to open sea more than 5 days.

- (ii) Assertion (A) : Settled sewage is subjected to biological treatment.

Reason (R) : Any biological treatment is proceeded by a settling tank.

- (iii) Assertion (A) : The surface of sea water is on the rise.

Reason (R) : A thick layer of gases developing the Earth does not allow heat to pass into space from the Earth at a rate which is as much as the rate at which the heat coming from space penetrates it towards the Earth.

- (iv) Assertion (A) : Wet scrubber removes particulates from a gaseous stream.

Reason (R) : In the wet scrubber, water droplets come into contact with the particulates.

Year 2003

- Q. 140. A sewer is commonly designed to attain self-cleansing velocity at:
 (a) Peak hourly rate of flow
 (b) Average hourly rate of flow
 (c) Minimum hourly rate of flow
 (d) Sewer running half full.
- Q. 141. Sewage sickness signifies:
 (a) Diseases caused by sewage
 (b) Soil pores getting clogged and preventing free circulation of air when sewage is continuously applied on land
 (c) Raw sewage is applied and used for irrigating vegetables which are eaten raw
 (d) Disposal of septic sewage on land.
- Q. 142.* Consider the following data in the design of grit chamber:
 1. Sp. gravity of grit = 2.7
 2. Size of grit particle = 0.21 mm
 3. Viscosity of water = 1.0×10^{-2} cm²/s
 The settling velocity (cm/s) of the grit particle will be
 (a) 1 to 2.5 (b) 2.6 to 5.0
 (c) 5.1 to 7.8 (d) > 7.8.
- Q. 143. Amongst the various sewage treatment methods, for the same discharge, the largest area is needed for:
 (a) Trickling filter (b) Anaerobic pond
 (c) Oxidation ditch (d) Oxidation pond.
- Q. 144. Consider the following treatment steps in a conventional wastewater treatment plant:
 1. Primary sedimentation 2. Grit removal
 3. Disinfection 4. Secondary sedimentation
 5. Screening 6. Secondary treatment unit
 The correct answer of these steps is
 (a) 5-2-1-6-4-3 (b) 1-2-4-5-3-6
 (c) 2-3-4-5-6-1 (d) 6-5-4-3-2-1.
- Q. 145. In an activated sludge process, the sludge volume index can be controlled by
 (a) Aeration (b) Adding chlorine
 (c) Reducing recycling
 (d) Increasing the depth of aeration tank.
- Q. 146. A primary sedimentation tank is not required for
 (a) Activated sludge system (b) Extended aeration system
 (c) Trickling filtration system
 (d) Tapered activated sludge process using pure oxygen for aeration

- Q. 147. In urban air pollution, the most poisonous gas is supposed to be carbon monoxide. It is hazardous because:
 (a) It affects our sense of smell
 (b) It is carcinogenic in nature
 (c) It combines with haemoglobin
 (d) It causes blindness.
- Q. 148.

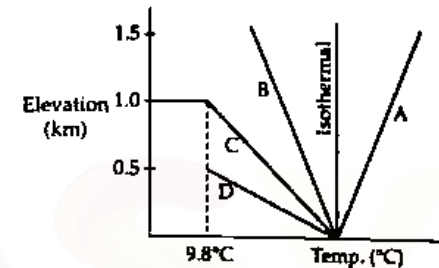


Fig. 25.2

The above graph shows the relationship of ambient lapse rates to the dry adiabatic lapse rate under different conditions of stability. Match stability situations A, B, C and D (as given in the graph) with the classes of stability as follows:

1. Superadiabatic
2. Dry adiabatic
3. Subadiabatic
4. Inversion.

Select the correct answer using the codes given below:

Codes	A	B	C	D
(a)	3	4	1	2
(b)	4	3	2	1
(c)	3	4	2	1
(d)	4	3	1	2

- Q. 149. The term 'Refuse' generally does not include:
 (a) Putrescible solid waste (b) Excreta
 (c) Non-putrescible solid waste (d) Ashes.
- Q. 150. Bangalore method and Indore method of disposing solid wastes are:
 (a) Identical
 (b) Different as Bangalore method is an anaerobic method
 (c) Different as Bangalore method does not contain human excreta
 (d) Different as Indore method is an incineration method.
- Q. 151. Which one of the following statements explains the term pyrolysis?
 (a) Solid waste is heated in closed containers in oxygen free atmosphere
 (b) Solid waste is incinerated in the presence of oxygen

- (c) Wastewater is treated with oxygen
 (d) Dissolved solids from water are removed by glass distillation.
- Q. 152.** Directions : The following item [S. No. (i)] consists of two statements, one labelled as the 'Assertion A' and the other labelled as 'Reason (R)'. You are to examine these two statements carefully and select the answers to these items using the codes given below :
 Codes :
 (a) Both A and R are individually true and R is the correct explanation of A
 (b) Both A and R are individually true but R is not the correct explanation of A
 (c) A is true but R is false
 (d) A is false but R is true.
- Assertion (A) :** Most important activity in sewer line construction is to start constructing it from the tail end and to check levels with a boning rod.
Reason (R) : Construction of sewer line from tail end is recommended because required number of pumping stations may be incorporated in sewer network design.

Year 2004

- Q. 153.** Consider the following statements :
 1. The velocity of flow in the rising main should not be less than 0.8 m/s at any time.
 2. Maximum velocity of flow is generally limited to 1.8 m/s and never allowed to exceed 3.0 m/s.
 In the design of large sewage pumping stations, which of the above conditions must be satisfied ?
 (a) 1 only (b) 2 only
 (c) Both 1 and 2 (d) Neither 1 nor 2.
- Q. 154.** Which one of the following statements is correct ? If a sewer X is to be designed to generate equivalent self-cleansing action as in sewer Y, then
 (a) Velocity in sewer X must be equal to velocity in sewer Y
 (b) Slope of sewer X must be equal to slope of sewer Y
 (c) Tractive force intensity generated in sewer X must be same as that in sewer Y
 (d) The roughness coefficient of X sewer material should be same as that of Y sewer material.
- Q. 155.** Consider the following statements regarding building manholes :
 1. They must be provided at every change of alignment, gradient or diameter.
 2. They must be provided at the head of all sewers.
 3. They must be provided at every junction of two or more sewers.
 4. They must be provided at every 100 m of straight runs of sewer.

Which of the statements given above are correct ?

- (a) 1, 2, 3 and 4 (b) 1, 3 and 4
 (c) 1, 2 and 3 (d) 2 and 4.

- Q. 156.** Which of the following pairs is correctly matched ?

- (a) $\frac{BOD}{COD} = 0$ Waste-water is toxic
 (b) $\frac{BOD}{COD} \leq 0.20$ Acclimatization of seed is necessary
 (c) $\frac{BOD}{COD} \geq 0.6$ Waste-water is non-biodegradable
 (d) $BOD = COD = 0$ Waste-water is devoid of organic matter.

- Q. 157.** In aerobic conditions, the microbial decomposition of organics results in the formation of which one of the following ?

- (a) Stable and objectionable end products
 (b) Unstable and objectionable end products
 (c) Unstable and acceptable end products
 (d) Stable and unobjectionable end products.

- Q. 158.** A waste water sample of 2 ml is made upto 300 ml in BOD bottle with distilled water. Initial DO of the sample is 8 mg/l and after 5 days it is 2 mg/l. What is its BOD ?

- (a) 894 mg/l (b) 900 mg/l
 (c) 300 mg/l (d) 1200 mg/l.

- Q. 159.** An industry manufacturing urea produces waste-water, which largely contains urea and ammonia. The treatment plant consists of the following units for effective control of nitrogen :

1. Nitrification followed by denitrification
 2. Hydrolysis unit
 3. Ammonia stripping by air
 4. Lime dosing and mixing unit.

Which one of the following is the correct sequence of above unit operations in the treatment plant ?

- (a) 3-2-1-4 (b) 2-3-1-4
 (c) 2-4-3-1 (d) 4-2-3-1.

- Q. 160.*** Which one of the following procedures is used for sampling of flue gas in a chimney for SPM ?

- (a) Isothermal sampling (b) Isokinetic sampling
 (c) Adiabatic sampling (d) Variable rate of sampling.

- Q. 161.** Which one of the following units is employed for the removal of particulate matter above 50 μ in size ?

- (a) Gravity settling chamber (b) Cyclone
 (c) Fabric filter (d) Electrostatic precipitator.

- Q. 162. Which one of the following Acts/Rules has a provision for "No Right to appeal" ?
 (a) Environment (Protection) Act, 1986
 (b) The Hazardous Waste (Management and Handling) Rules, 1989
 (c) Manufacture, Storage and Import of Hazardous Chemical Rules, 1989
 (d) Environment (Protection) Rules, 1992.
- Q. 163.* Which one of the following reactors can create a problem of short circuiting due to density currents ?
 (a) Batch (b) Complete mix
 (c) Plug flow (d) Fluidized bed.
- Q. 164. Consider the following statements :
 The basic difference between water pipes and sewer pipes is :
 1. in the material used for pipes
 2. in the pressure of the liquid flow
 3. in the suspended solids they carry
 Which one of the statements given above is/are correct ?
 (a) 1 and 3 (b) 1 only
 (c) 2 and 3 (d) 1, 2 and 3.
- Q. 165. Which one of the following statements is correct ?
 In dissolved oxygen sag curve, the sag results because :
 (a) it is a function of a rate of addition of oxygen to the stream
 (b) it is a function of a rate of addition of oxygen from the stream
 (c) it is a function of both addition and depletion of oxygen from the stream
 (d) the rate of addition of oxygen is linear, but the rate of depletion is non-linear.
- Q. 166. Which one of the following statements is correct ?
 A combined sewer is one, which transports domestic sewage and :
 (a) storm water (b) industrial wastes
 (c) overhead flow (d) industrial wastes and storm water.

Year 2005

- Q. 167. Directions : The following item consist of two statements, one labelled as the 'Assertion (A)' and the other as 'Reason (R)'. You are to examine these two statements carefully and select the answers to these items using the codes given below :
 (a) Both A and R are individually true and R is the correct explanation of A
 (b) Both A and R are individually true but R is not the correct explanation of A
 (c) A is true but R is false
 (d) A is false but R is true

- Assertion (A) : Composting is the most commonly used process for the decomposition of the organic components of municipal solid wastes.
 Reason (R) : Bangalore method is a common anaerobic method used for biological conversion of organic components of municipal solid wastes.
- Q. 168. Which type of light energy is effectively absorbed by CO_2 in the lower boundary of the troposphere ?
 (a) X-rays (b) UV-rays
 (c) Visible light (d) Infra-red rays.
- Q. 169. Which one of the following is the correct sound-intensity expression with usual notations ?
 (a) $\text{dB} = 10 \log_{10} (III/I_0)^2$ (b) $\text{dB} = 10 \log_{10} (III/I_0)$
 (c) $\text{dB} = 10 \log_{10} (I - I_0)^2$ (d) $\text{dB} = 10 \log_{10} (I - I_0)$.
- Q. 170. What type of noise can be abated by providing lining on walls and ceiling with sound absorbing material ?
 (a) Source noise (b) Reflection noise
 (c) Structural noise (d) Direct air-borne noise.
- Q. 171. In which type of lakes, does a perfect ecological equilibrium among the producers, decomposers, and consumer groups of organisms exist ?
 (a) Senescent lakes (b) Mesotrophic lakes
 (c) Oligotrophic lakes (d) Eutrophic lakes.
- Q. 172.* A municipal sewage has BOD_5 of 200 mg/l. It is proposed to treat it and dispose off into a marine environment. For what minimum efficiency should the sewage treatment plant be designed ?
 (a) 85% (b) 60%
 (c) 50% (d) 33.67%.
- Q. 173. Which one of the following types of settling phenomenon can be analysed by the classic sedimentation laws of Newton and Stokes ?
 (a) Discrete settling (b) Flocculent settling
 (c) Hindered settling (d) Compression settling.
- Q. 174. Match List I (Treatment Process) with List II (Related Terms) and select the correct answer using the code given below the Lists :

List I

List II

A. Lagoons

1. Attached growth system

B. Trickling filter

2. Algae-bacteria symbiotic relationship

C. Oxidation ponds

3. Extended aeration

D. Activated sludge process

4. Low cost treatment method

Codes A B C D

(a) 4 3 2 1

(b) 2 1 4 3

(c) 4 1 2 3

(d) 2 3 4 1

- Q. 175. Which of the following pairs is *not* correctly matched ?
- | | |
|------------------------|---|
| <i>Plume Behaviour</i> | <i>Atmospheric Condition</i> |
| (a) Looping | : Stable |
| (b) Fumigation | : Inversion above and lapse below the stack |
| (c) Fanning | : Inversion |
| (d) Trapping | : Inversion above and below the stack with lapse in between |
- Q. 176. Which is the major pollutant present in photochemical smog ?
- | | |
|---------|---------------------|
| (a) PAN | (b) SO ₂ |
| (c) HC | (d) NO ₂ |
- Q. 177. Consider the following statement :
In solid waste management :
1. Density separation of solid wastes can be accomplished by air classifiers.
 2. Iron recovery from solid wastes can be done by magnetic separators.
 3. Aluminium separation from solid wastes can be accomplished by eddy current separators.
- Which of the statements given above are correct ?
- | | |
|-------------|-----------------|
| (a) 1 and 2 | (b) 2 and 3 |
| (c) 1 and 3 | (d) 1, 2 and 3. |
- Q. 178. Which of the following statement is *not* correct ?
- (a) Settling and sludge digestion occurs in septic tanks in one compartment
 - (b) Settling and sludge digestion occurs in imhoff tank in different compartments
 - (c) Septic tank is a low-rate anaerobic unit whereas an imhoff tank is a high rate anaerobic unit
 - (d) The rate of sludge accumulation in septic tank is approximately 40-70 litres/capita/year.
- Q. 179. Consider the following statements in regard to aerobic and anaerobic treatment processes :
1. Biomass production in the aerobic treatment process is more as compared to the anaerobic treatment process.
 2. Start-up period is more in the aerobic treatment process as compared to the anaerobic treatment process.
 3. Energy consumption and production is more in the aerobic treatment process as compared to the anaerobic treatment process.
- Which of the statements given above is/are correct ?
- | | |
|-------------|-------------|
| (a) 1 and 2 | (b) 2 and 3 |
| (c) Only 2 | (d) Only 1. |

- Q. 180. What is 5 days 20°C BOD equal to ?
- | | |
|---------------------|----------------------|
| (a) 3 days 27°C BOD | (b) 4 days 30°C BOD |
| (c) 6 days 32°C BOD | (d) 7 days 36°C BOD. |
- Q. 181. Match List I (Parameter) with List II (General Standard for Discharge into the Inland surface Water in mg/l(max)) and select the correct answer using the code given below the list :
- | | |
|---------------------|----------------|
| <i>List I</i> | <i>List II</i> |
| A. BOD (5 day 20°C) | 1. 250 |
| B. COD | 2. 100 |
| C. Oil and grease | 3. 20 |
| D. Suspended Solids | 4. 10 |
| | 5. 30 |
<i>Codes</i>	<i>A</i>	<i>B</i>	<i>C</i>	<i>D</i>
(a)	2	1	4	5
(b)	5	4	3	2
(c)	2	4	3	5
(d)	5	1	4	2
- Q. 182.* When the recirculation ratio in a high rate trickling filter is unity, then what is the value of the recirculation factor ?
- | | |
|---------|-----------|
| (a) 1 | (b) > 1 |
| (c) < 1 | (d) Zero. |
- Q. 183.* Presence of nitrogen in a waste water sample is due to the decomposition of:
- | | |
|-------------------|---------------|
| (a) Carbohydrates | (b) Proteins |
| (c) Fats | (d) Vitamins. |
- Year 2006
- Q. 184. Which one of the following is the range of ozonosphere in atmosphere ?
- | | |
|---------------------------------|---------------------------------|
| (a) Troposphere to Stratosphere | (b) Tropopause to Stratopause |
| (c) Tropopause to Mesosphere | (d) Stratosphere to Mesosphere. |
- Q. 185. Which one of the following pairs is *not* correctly matched ?
- | | |
|---------------------|---|
| (a) Coriolis effect | : The effect of Earth's rotation on wind direction and velocity |
| (b) PAN | : Found during photochemical smog |
| (c) Cyclone | : Employed for particulate matter removal |
| (d) Wind rose | : Employed in forecast of pollutant dispersion in ambient air. |
- Q. 186. In context of water polluted with sewage, what does BOD signify?
- | |
|-----------------------------------|
| (a) Biological oxygen demand |
| (b) Bacteriological oxygen demand |
| (c) Biochemical oxygen demand |
| (d) Biology of degradation. |

Q. 187.* Match List-I with List-II and select the correct answer using the codes given below the Lists :

List-I (Process/Bacteria)	List-II (Energy/Material)
A. Anabolism	1. Providing energy for the synthesis of new cells and maintenance of other cell functions
B. Autotrophs	2. Obtaining energy and material for growth from organic sources
C. Catabolism	3. Providing the material for growth from organic sources
D. Heterotrophs	4. Obtaining energy and material for growth from inorganic sources

Codes	A	B	C	D
(a)	1	4	3	2
(b)	3	2	1	4
(c)	1	2	3	4
(d)	3	4	1	2

Year 2007

Q. 188. Which among the following brings about the Hazardous Waste Management and Handling Rules in India ?

- (a) Central Pollution Control Board
- (b) Ministry of Environment and Forests
- (c) Ministry of Urban Development
- (d) Ministry of Rural Development.

Q. 189. In conventional activated sludge process, MLSS is generally kept in which range ?

- (a) < 100 mg/l
- (b) 1000-2000 mg/l
- (c) 2000-3000 mg/l
- (d) 3000-5000 mg/l.

Q. 190. Which one of the following methods of solid waste management conserves energy most efficiently in the form of gas or oil ?

- (a) Incineration with heat recovery
- (b) Composting
- (c) Fluidized-bed incineration
- (d) Pyrolysis.

Q. 191. Match List-I with List-II and select the correct answer using the code given below the Lists :

List-I (Contaminant)	List-II (Environmental significance)
A. Suspended solids	1. May cause eutrophication
B. Nutrients	2. Toxic, may interfere with effluent reuse
C. Heavy metals	3. May interfere with effluent reuse
D. Dissolved inorganic	4. Cause sludge deposits

Codes	A	B	C	D
(a)	4	1	2	3
(b)	2	3	4	1
(c)	4	3	2	1
(d)	2	1	4	3

Q. 192. Match List-I with List-II and select the correct answer using the codes given below the Lists :

List-I (Physical properties of filtering material for trickling filters)	List-II (Limiting Value)
A. Crushing strength, N/mm ²	1. 12.0
B. Hardness	2. 100.0
C. Per cent wear	3. 4.0
D. Specific gravity	4. 2.6

Codes	A	B	C	D
(a)	3	1	2	4
(b)	2	4	3	1
(c)	3	4	2	1
(d)	2	1	3	4

Q. 193. What is eutrophication of lakes primarily due to ?

- (a) Multiplication of bacteria
- (b) Excessive inflow of nutrients
- (c) Increase in benthic organisms
- (d) Thermal and density currents.

Q. 194. The daily cover of MSW landfills consists of which one of the following ?

- (a) Compacted soil
- (b) Geomembrane
- (c) Geotextile
- (d) Geocomposite.

Q. 195. Match List-I with List-II and select the correct answer using the codes given below the Lists :

List-I (Air Pollutant)	List-II (Impact on Human Health)
A. Particulates	1. Impairs transport of O ₂ in bloodstream
B. Carbon monoxide	2. Irritation of mucous membranes of respiratory tract
C. Sulphur oxides	3. Causes coughing, shortness of breath, headache, etc.
D. Photochemical oxidants	4. Causes respiratory illness

Codes	A	B	C	D
(a)	2	3	4	1
(b)	4	1	2	3
(c)	2	1	4	3
(d)	4	3	2	1

- Q. 196. Which type of plume may occur during winter nights?
 (a) Looping (b) Inversion
 (c) Coning (d) Lofting.
- Q. 197. A machine in a steel plate fabricating industry is found to be producing a sound level of 50 dB. In the expansion plans, one more such machine needs to be added. What will be the combined sound level?
 (a) 80–100 dB (b) 101–150 dB
 (c) 51–70 dB (d) 40–50 dB.
- Q. 198. Which one of the following is the correct statement?
 A heterotroph is an organism that obtains
 (a) its cell carbon from an inorganic source
 (b) its energy from the oxidation of simple inorganic compounds
 (c) its cell carbon as well as its energy from organic matter
 (d) its energy from a natural ecosystem.
- Q. 199. The term 'biological magnification' indicates which one of the following?
 (a) Likelihood of increasing size of animals during evolution
 (b) Magnification pertaining to microscopy
 (c) Accumulation of pollutants in soil
 (d) Accumulation of pollutants in successive consumers.

Year 2008

- Q. 200. In the design consideration of sewerage system, the sewers must have which one of the following?
 (a) Maximum velocity of flow
 (b) Only 50 percent of maximum velocity of flow
 (c) Minimum velocity of not less than cleaning velocity of flow
 (d) High pressure at all times.
- Q. 201. Which one of the following is considered as the thermophilic range of sludge digestion?
 (a) 60°C to 70°C (b) 50°C to 57°C
 (c) 29°C to 40°C (d) 20°C to 30°C.

- Q. 202. Consider the following statements :

In context of sludge volume index (SVI)

1. the SVI is expressed as the volume (in cu. cm.) of the activated sludge for one gram of dry weight of the sludge.

- Which of the statements given above is/are correct?
 (a) 1 only (b) 2 only
 (c) Both 1 and 2 (d) Neither 1 nor 2.
- Q. 203. Which one of the following can fix atmospheric nitrogen?
 (a) Green algae (b) Blue green algae
 (c) Red algae (d) Brown algae.
- Q. 204.* An industry has sewage plant which produces sludge with a moisture content of 98%. With the solid content remaining the same, the sludge is thickened so that the moisture content now is 96%. If the original quantity of sludge is P , what is the quantity of the thickened sludge?
 (a) $0.98 P$ (b) $3 P/4$
 (c) $2 P/3$ (d) $P/2$.
- Q. 205. In a well operating activated sludge process unit, what is the value of sludge volume index?
 (a) < 50 (b) 100–150
 (c) 200–300 (d) < 300 .
- Q. 206. What does the presence of excess nitrates in river water indicates?
 (a) Recent pollution of water with sewage
 (b) Past pollution of water with sewage
 (c) Intermittent pollution of water with sewage
 (d) No pollution of water with sewage.
- Q. 207. What is the depth of water seal in the traps?
 (a) < 2.5 cm (b) 2.5–7.5 cm
 (c) 7.5–12.5 cm (d) Not less than 15 cm.
- Q. 208. Bangalore and Indore process of composting are which of the following?
 (a) Both anaerobic processes
 (b) Both aerobic processes
 (c) Anaerobic process and aerobic process, respectively
 (d) Aerobic process and anaerobic process, respectively.
- Q. 209. A solid waste sample has been segregated and one of the components has been subjected to elemental analysis. The result of analysis in percent by mass revealed C(40%), H(8.0%), O(44%), N(0.3%). What is the likely waste component?
 (a) Food waste (b) Paper and cardboard waste
 (c) Plastic waste (d) Leather waste.
- Q. 210. Pneumoconiosis is caused due to inhalation of which one of the following?
 (a) Silica (b) NO_x
 (c) Lead (d) Cadmium.

- Q. 211. Which one of the following conditions of automobile gives maximum unburned hydrocarbons ?
 (a) Idling (b) Cruise
 (c) Acceleration (d) Deceleration.
- Q. 212. Electrostatic precipitator is most useful for which one of the following industries ?
 (a) Tannery
 (b) Hydroelectric power generation
 (c) Thermal power generation
 (d) Textile factory.
- Q. 213. What will be the resultant decibel level when two sources make noise of equal decibels ?
 (a) Decibel level will be the same
 (b) Decibel level will increase by 3 decibels
 (c) Decibel level will decrease by 3 decibels
 (d) Decibel level will be equal to the sum of decibels of the two sources.
- Q. 214. Match List-I with List-II and select the correct answer using the code given below the lists :
- | List-I
(Air Pollutant) | | List-II
(Effect) | |
|---------------------------|---------|----------------------|--|
| A. CO | | 1. Acid rain | |
| B. CO ₂ | | 2. Acute toxicity | |
| C. SO ₂ | | 3. Ozone liberation | |
| D. NO ₂ | | 4. Greenhouse effect | |
| Codes | A B C D | | |
| (a) | 4 3 1 2 | | |
| (b) | 4 3 2 1 | | |
| (c) | 2 4 1 3 | | |
| (d) | 3 4 1 2 | | |
- Q. 215. Biological magnification of pesticides takes place through which of the following ?
 (a) Population pyramids (b) Hydrologic cycle
 (c) Food chains (d) Air cycle.
- Year 2009
- Q. 216. Effluent from a wastewater treatment plant (flow rate = 1.2 m³/s, temperature = 25°C), is discharged to a surface stream (flow rate = 8640 m³/s, temperature = 15°C). What is the temperature of the stream after mixing ?
 (a) 10°C (b) 15.77°C
 (c) 20°C (d) 24.99°C.

- Q. 217. Match List-I with List-II and select the correct answer using the code given below the lists :

List-I (Water/Wastewater treatment)	List-II (Operating problem)
A. Trickling filter	1. Negative head
B. Activated sludge process	2. Fly-breeding
C. Rapid gravity filter	3. Sludge bulking
D. Anaerobic sludge digester	4. pH reduction
Codes	A B C D
(a)	4 3 1 2
(b)	2 3 1 4
(c)	4 1 3 2
(d)	2 1 3 4

- Q. 218. Which of the following pollutants are generally not removed in a sewage treatment plant ?
 (a) Inorganic suspended solids (b) Dissolved organic solids
 (c) Oil and grease (d) Dissolved inorganic solids.
- Q. 219.* What is the theoretical oxygen demand of 300 mg/L glucose solution ?
 (a) 300 mg/L (b) 320 mg/L
 (c) 350 mg/L (d) 400 mg/L.
- Q. 220. Which one of the following types of samples is relevantly employed for the design of wastewater treatment plant ?
 (a) Grab sample (b) Composite sample
 (c) Integrated sample (d) Any sample.
- Q. 221.* A drain carrying sewage of BOD = 200 mg/L and flow rate of 50 m³/s joins a river whose upstream BOD is 8 mg/L and flow rate is 500 m³/s. Assume immediate and complete mixing of drain with the river. What is the estimated downstream BOD of the river flow ?
 (a) 20.4 mg/L (b) 25.4 mg/L
 (c) 104.4 mg/L (d) 70.4 mg/L.
- Q. 222.* A 12.5 mL sample of treated wastewater requires 187.5 mL of odor-free distilled water to reduce the odor to a level that is just perceptible. What is the threshold odor number (TON) for the wastewater sample ?
 (a) 0.07 (b) 1.07
 (c) 15 (d) 16.
- Q. 223. Which one of the following parameters is not included in the routine characterization of solid waste for its physical composition ?
 (a) Moisture content (b) Density
 (c) Particle size analysis (d) Energy value.
- Q. 224. Which one of the following toxic gases has physiological action as asphyxiant ?
 (a) SO₂ (b) NO₂
 (c) Cl₂ (d) CO.

- Q. 225. Assuming annual travel for each vehicle to be 20000 km, what is the quantity of NO_x produced from 50000 vehicles with emission rate of 2.0 g/km/vehicle?
 (a) 1800 tonnes (b) 1900 tonnes
 (c) 2000 tonnes (d) 2100 tonnes.
- Q. 226. What are the air pollutants responsible for acid rain within and downwind areas of major industrial emissions?
 (a) Hydrogen sulfide and oxides of nitrogen
 (b) Sulfur dioxide and oxides of nitrogen
 (c) Carbon dioxide and hydrogen sulfide
 (d) methane and hydrogen sulfide.
- Q. 227. Consider the following air pollutants :
 1. NO_x 2. PAN
 3. CO_2 4. CO
 Which of the above air pollutants is/are present in an auto exhaust gas?
 (a) 1 only (b) 1 and 2
 (c) 2 and 3 (d) 1, 3 and 4.

Answers

1. (b)	2. (a)	3. (b)	4. (c)	5. (d)
6. (a)	7. (b)	8. (d)	9. (b)	10. (d)
11. (d)	12. (d)	13. (d)	14. (a)	15. (a)
16. (b)	17. (d)	18. (b)	19. (b)	20. (c)
21. (b)	22. (b)	23. (a)	24. (d)	25. (d)
26. (b)	27. (c)	28. (b)	29. (c)	30. (d)
31. (c)	32. (a)	33. (a)	34. (b)	35. (b)
36. (c)	37. (b)	38. (b)	39. (c)	40. (d)
41. (d)	42. (c)	43. (d)	44. (d)	45. (a)
46. (d)	47. (d)	48. (a)	49. (b)	50. (c)
51. (d)	52. (b)	53. (b)	54. (b)	55. (c)
56. (b)	57. (c)	58. (d)	59. (c)	60. (a)
61. (c)	62. (c)	63. (c)	64. (b)	65. (c)
66. (c)	67. (d)	68. (a)	69. (b)	70. (a)
71. (b)	72. (b)	73. (d)	74. (c)	75. (c)
76. (d)	77. (d)	78. (b)	79. (d)	80. (b)
81. (c)	82. (a)	83. (d)	84. (c)	85. (b)
86. (b)	87. (c)	88. (c)	89. (i) (d)	89. (ii) (d)
90. (a)	91. (b)	92. (b)	93. (d)	94. (a)
95. (b)	96. (c)	97. (b)	98. (c)	99. (d)
100. (d)	101. (b)	102. (a)	103. (c)	104. (d)

105. (d)	106. (b)	107. (b)	108. (c)	109. (d)
110. A (c)	110. B (c)	111. (b)	112. (d)	113. (d)
114. (c)	115. (a)	116. (d)	117. (c)	118. (d)
119. (a)	120. (b)	121. (b)	122. (d)	123. (d)
124. (c)	125. (b)	126. (a)	127. (c)	128. (b)
129. (a)	130. (b)	131. (b)	132. (a)	133. (d)
134. (c)	135. (d)	136. (d)	137. (d)	138. (a)
139. (i) (b)	139. (ii) (b)	139. (iii) (a)	139. (iv) (a)	140. (c)
141. (b)	142. (d)	143. (d)	144. (a)	145. (c)
146. (b)	147. (c)	148. (b)	149. (b)	150. (b)
151. (a)	152. (c)	153. (c)	154. (a)	155. (a)
156. (d)	157. (d)	158. (b)	159. (d)	160. (b)
161. (a)	162. (b)	163. (c)	164. (d)	165. (c)
166. (d)	167. (b)	168. (c)	169. (b)	170. (b)
171. (c)	172. (c)	173. (a)	174. (b)	175. (a)
176. (a)	177. (a)	178. (c)	179. (d)	180. (b)
181. (d)	182. (b)	183. (b)	184. (b)	185. (d)
186. (c)	187. (a)	188. (b)	189. (c)	190. (a)
191. (a)	192. (d)	193. (b)	194. (a)	195. (c)
196. (b)	197. (c)	198. (c)	199. (d)	200. (c)
201. (b)	202. (b)	203. (b)	204. (d)	205. (b)
206. (b)	207. (b)	208. (c)	209. (a)	210. (a)
211. (a)	212. (c)	213. (b)	214. (c)	215. (c)
216. (b)	217. (b)	218. (d)	219. (b)	220. (a)
221. (b)	222. (d)	223. (d)	224. (b)	225. (c)
226. (b)	227. (d)			

Hints For Solving Starred Objective Questions

Q. 1. The usually adopted values of detention times for different treatment units, as given in our Text, are :

- (A) grit chambers = 1 min
 (B) primary sedimentation = 1—2 hr.
 (C) activated sludge = 4—8 hr.
 (D) digestion = 1 month.

The nearest choices available in the given choices of 6 hr, 2 min, 2 hr, and 20 days, fits well respectively to units at S. No. (C), (A), (B) and (D) respectively. Hence correct choice code is C-1, A-2, B-3 and D-4 ; i.e. at choice (b).

Q. 2. Trickling filter sludge contains lesser water than the activated sludge, and is therefore, less bulky. Choices (b), (c) and (d) are all reverse to this fact. The only choice left is (a), which, as a matter of fact, is a correct choice

because sludge volume index reflects the volume of 1 gm of settled sludge, and hence is less for less bulky sludge.

Q. 5. The average BOD of domestic sewage produced per person has been considered by us to be 0.08 kg/day, (Refer article 7.5). This factor being 80 gm/d, the nearest choice available in the given choices is (d) i.e. 80 gm/d, and hence is the correct choice.

Q. 9. An unpolluted river will have its D.O. equal to the saturation D.O., and since the saturation D.O. reduces with the increase in temperature (Refer Appendix Table A-3 at the end of the book), an unpolluted stream would contain less D.O. in summer. Hence, choice (b) is correct. *Ans.*

Q. 10. BOD reaction rate constant, K_D , varies with temperature ($T^\circ\text{C}$) by the equation

$$K_{D(T)} = K_{D(20^\circ)} [1.047]^{T-20^\circ}$$

When T is more than 20°C , $(1.047)^{T-20^\circ}$ is more than 1.047; and hence $K_{D(T)}$ will be more than $K_{D(20^\circ)}$. Similarly, when T is less than 20° , $(1.047)^{T-20^\circ}$ will be less than 1.047, and hence $K_{D(T)}$ will be less than $K_{D(20^\circ)}$. In other words, K_D values at temperatures more than 20°C will be more than the K_D value at 20°C ; and K_D values at temperatures lesser than 20°C will be lesser than the K_D value at 20°C ; which exactly is the trend reflected in the given values of K_D (0.02) and K_{10° (0.005) when compared to K_{20° (0.01). Hence, choice (d) is correct. *Ans.*

Q. 14. Pl. refer and study article 9.22 to ascertain the correct sequence, which is given in choice (a). *Ans.*

Q. 16. Coal based thermal power plants, as discussed under article 16.1, produce three major air pollutants, namely (i) Fly ash (SPM), (ii) SO_2 and (iii) NO_x . Although, due to incomplete combustion of coal, there may exist a possibility of emission of CO and unburnt carbon; yet however, the modern thermal power stations are generally provided with automatic combustion control systems, which eliminate the formation of these products. Hence, CO is not attributed to the thermal power stations. Hence, choice (b) is considered to be correct, and not choice (c), which many students may feel to be correct.

Q. 20. All changes in size, shape, alignment, flow volume, free and submerged discharge at the end of sewer lines, passing of flow through measuring or diversion devices and sewer junctions, etc. are known as sewer transitions. Manholes must be located at all such transitions.

The transition from larger dia sewer to smaller dia sewer should not be made. However, in other transitions, such as change from small dia sewer to large dia sewer or change of slope, etc., the crowns of sewers are always kept continuous. In no case, the hydraulic flow line (grade line) in the larger sewer should be higher than the incoming one.

Q. 21. Refer Table 4.8; and find

$$\text{for } \frac{d}{D} = 0.5 \frac{v}{V} = 1$$

Hence $v = V = 1.0 \text{ m/s}$. *Ans.*

Q. 22. The oxidation ditch, as described in the text, works under aerobic bacteria (suspended culture) of *activated sludge* type, which work on similar

aerobic (suspended culture) include: activated sludge process, oxidation pond, and sludge digestion tanks. A waste stabilisation pond works under facultative bacteria, and an Imhoff tank works under anaerobic bacteria, as discussed in the text.

The RBC's (Rotating Biological Contractors), as described in text, infact work on the aerobic bacteria (attached culture) like that of a trickling filter as discussed.

Based on this knowledge and without even knowing about RBC's, the correct choice can be marked, which indicate A-3, B-1, and C-2; i.e. the choice given at (b).

Q. 23. 3 gm of sludge occupies 27 cm^3 (27 ml) of volume in 1 litre of sewage settled for 30 min. Hence, 1 gm of such sludge will contain 9 cm^3 (i.e. 9 ml) of volume, which infact is nothing but SVI, as defined in article 9.38. Therefore, SVI is 9 ml/gm ; and hence the choice at (a) is a correct choice. *Ans.*

Q. 28. We have already stated in article 19.2 that the gaseous layers surrounding the earth up to a distance of about 500 km from the surface of earth, composes what is known as the atmosphere. Depending upon the distance from the earth, this atmosphere is divided into four zones, as detailed in the Table below:

Table 25.1

S. No.	Region / Zone	Approximate altitude range in km	Approximate temperature range in $^\circ\text{C}$
1.	Troposphere	0—11 to 16 km	15° to -80°C
2.	Stratosphere	11 to 16—50 km	-80° to 0°C
3.	Mesosphere	50—80 km	0° to -110°C
4.	Thermosphere	80—500 km	-110°C to 1200°C

The above sequence of layers is shown in choice (b), which is the correct choice. *Ans.*

Q. 41. $Q = 720 \text{ m}^3/\text{hr}$

$$\text{Surface area} = 12.5 \text{ m} \times 1.5 \text{ m} = 18 \text{ m}^2$$

$$\text{Surface loading} = \frac{720 \text{ m}^3/\text{hr}}{18 \text{ m}^2} = 40 \text{ m}^3/\text{hr}/\text{m}^2 = 40000 \text{ lph}/\text{m}^2$$

The detention time for Grit chambers is usually 40 to 60 secs or so. In the given choices, the nearest available is 1.2 minutes = 72 secs. Other choices are 12 minutes and 40 minutes, which are ignored.

Hence, the choice (d), which indicates correct surface loading of $40,000 \text{ lph}/\text{m}^2$ and 1.2 minute of detention time is correct. *Ans.*

Q. 43. Objective Questions can sometimes be solved very easily by using elimination technique, as we can do here:

As we know, methane gas is produced only in anaerobic digestion, and hence it cannot be claimed as advantageous to aerobic sludge digestion. The assertion at 3 should therefore not be there in the correct code. This eliminates choices (b) and (c). The choices left are only (a) and (d). Choice (a) includes 1,

2 and 4; whereas choice (d) includes 1, 2 and 5. Thus, 1 and 2 are correctly the characteristics (advantages) of aerobic sludge digestion. We have now to find whether characteristic 4 or 5 pertain to aerobic digestion. Characteristic 4 is "lesser operating cost", which certainly cannot belong to aerobic digestion, because aerobic digestion, compared to anaerobic one, requires continuous operation to ensure oxidation of sludge, whereas anaerobic digestion is carried out in closed tanks without any supply of oxygen, etc. This eliminates characteristic 4 from the correct choice, thus excluding choice (a). The choice thus left is (d), which can be marked as the correct choice. Ans.

Now, coming to the *aerobic sludge digestion*, which has not been described in the Text, it is stated that *aerobic sludge digestion is nothing but the stabilisation of sludge by long term aeration that biologically destroys the volatile solids. It is, thus, nothing more than a continuation of the activated sludge process.*

Aerobic sludge digestion is accomplished in an open tank resembling the aeration tank of an activated sludge plant. As in an activated plant, this *aerobic digester* must be followed by a *settling tank*, unless the sludge is to be disposed of on land in liquid form. Unlike that in an activated plant, the effluent from the clarifier is recycled back to the head end of the plant, as it is high in BOD (500 mg/L or 80) and S.S. (100–300 mg/L).

Such an aerobic digester is usually operated by continuously feeding raw sludge. The sludge undergoing digestion in the digester is continuously aerated during filling and for the specified design period after the tank is full. Aeration is then discontinued to allow the stabilised solids to settle down by gravity. The supernatant is decanted and returned to the head of the treatment plant, and a portion of the gravity thickened sludge is removed from the tank bottom for disposal.

In practice, aeration and settlement may be a daily cycle with feed applied early in the day, and the clarified supernatant decanted later in the day. Digested solids are withdrawn when the sludge in the tank does not gravity thicken to provide a supernatant of adequate clarity.

Q. 53. Eutrophication, as explained in article 8.4.5, is the natural process of gradual accumulation and cycling of nutrients in lakes (impounded waters) making them shallower and more productive; phosphorous being the decisive factor in eutrophication. This definition of eutrophication is correctly reflected in the definition given at S. No. 1. Hence, code 1 is certainly correct.

Autotrophism and Heterotrophism in fact represent the oxidation (aerobic) or degradation (anaerobic) of the inorganic and organic matter by bacteria (microorganisms) respectively, since the bacteria that oxidize inorganic matter are termed as autotrophic, and those that oxidize organic matter are called heterotrophic.

Heterotrophism, thus involves the use of organic matter, while in the definition given at S. No. 3, it is defined otherwise (i.e. uses inorganic substances). Hence, definition at S. No. 3 is incorrect. When we eliminate code containing 3 from correct choice, choices (a), (c) and (d) automatically get eliminated.

Q. 55. As stated in article 12.3.1, leachate has to be prevented from seeping underground, to prevent contamination of ground water. For this purpose, covers made of plastics or rubber may be used, and impermeable clay or earth or bentonite mud layers may be spread over the filled up land to avoid penetration of leachate below. Under-drain pipes are also laid to collect the leachate before it penetrates below to underground.

Hence, only impermeable soils like clay or bentonite, plastic or rubber covers and under-drains can be said to be the sealants used for preventing leachate and gas in sanitary land fills. The choice (c), which includes Bentonite and butyl rubber is therefore the correct choice.

Even by using elimination technique, we can exclude fly ash (code 4) and sand (code 2) being permeable soils. The choice (a), (b) and (d), all containing codes 2 or 4, thus automatically get excluded, leaving choice (c) only, as the correct choice. Ans.

Q. 56. As discussed in article 20.3

$$dB = 20 \log \left(\frac{P_{rms}}{20 \mu Pa} \right)$$

$$\therefore 90 \text{ dB} = 20 \log \left(\frac{P_{rms}}{20} \right)$$

$$\text{or } \frac{P_{rms}}{20} = \text{Antilog} \left(\frac{90}{20} \right)$$

$$\therefore 90 \text{ dB as } p_{rms} = 20 \times \text{Antilog} \left(\frac{90}{20} \right) = 6,32,455.53 \mu Pa$$

$$\text{Similarly, } 94 \text{ dB} = 20 \text{ Antilog} \left(\frac{94}{20} \right) = 10,02,374.47 \mu Pa$$

$$90 \text{ dB} + 94 \text{ dB} = \sqrt{(6,32,455.53)^2 + (10,02,374.47)^2}$$

$$= 11,85,223.43 \mu Pa$$

$$= 20 \log_{10} \left(\frac{11,85,223.43}{20} \right) \text{ dB}$$

$$= 95.46 \text{ dB ; say } 95.5 \text{ dB}$$

which is given in choice (b), which is the correct choice. Ans.

Q. 56. In addition to the Trickling filters and Rotating Biological Contractors (Fig. 9.44), still another *aerobic attached growth process* is a *packed-bed reactor*, used for the removal of carbonaceous BOD as well as biological nitrification* of wastewaters.

Typically, a packed bed reactor (Fig. 25.3) consists of a container (reactor) that is packed with a medium to which microorganisms can become attached. Wastewater is introduced from the bottom of the container through

*When wastewater containing ammonia is discharged into a stream, it consumes dissolved oxygen (DO) from the stream to convert ammonia into nitrate, thereby depleting D.O. This depletion of oxygen can be avoided, if the ammonia is oxidised to nitrate before it is discharged. Nitrification is the process used to accomplish this objective.

an appropriate under-drain system or inlet chamber. Air or pure oxygen necessary for the process is also introduced with the wastewater.

Such a reactor is thus, related to a trickling filter, which also represents an aerobic attached growth system and a packing medium.

The *plug flow* and *complete mix* reactors relate to the *suspended growth* activated sludge process, which is altogether different from the attached growth systems. Similarly, the *fluidized-bed reactor* is an anaerobic reactor and hence altogether different from an aerobic filter. Thus, the reactor which is related to a trickling filter, is the packed-bed one; and hence the choice (c) is correct. Ans.

Q. 74. Sewage produced

$$= 10,000 \times 200 \text{ l/day} = 2 \times 10^6 \text{ l/day}$$

$$\begin{aligned} \text{BOD produced} &= 2 \times 10^6 \text{ l/d} \times 300 \text{ mg/l} \\ &= 6 \times 10^8 \text{ mg/d} = 600 \text{ kg/d} \end{aligned}$$

$$\text{Area of oxidation pond} = \frac{600 \text{ kg/d}}{300 \text{ kg/d/ha}} = 2 \text{ ha. Ans.}$$

Q. 85. Air required to maintain 50 ppm of CO

$$= 0.03 \frac{\text{m}^3}{\text{min}} \times \left(\frac{10^4}{50} \right) = 600 \text{ m}^3/\text{min. Ans.}$$

Q. 88. The sound pressure level in dB (decibel) is given by Eq. (20.10) as

$$= 20 \log_{10} \left(\frac{p_{\text{rms}}}{p_{\text{std}} = 20 \mu\text{Pa}} \right)$$

where p_{rms} = measured sound pressure

$$= 2000 \mu\text{Pa}$$

$$= 2000 \times 10^6 \mu\text{Pa}$$

$$= 20 \times 10^7 \mu\text{Pa}$$

$$\left[\begin{array}{l} \text{Since} \\ 1 \text{ bar} = 100 \text{ kPa} \\ = 10^5 \text{ Pa} \end{array} \right]$$

$$\therefore \text{dB} = 20 \log_{10} \left(\frac{20 \times 10^7 \mu\text{Pa}}{20 \mu\text{Pa}} \right)$$

$$= 20 \times 7 = 140 \text{ dB. Ans.}$$

Q. 100. $X_1 = 4000 \text{ mg/l}$

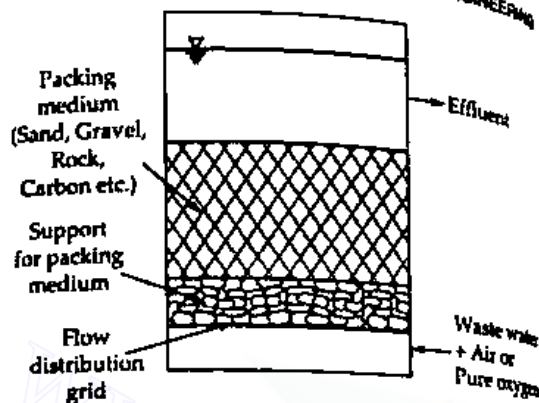


Fig. 25.3. Typical packed bed reactor.

$$\text{SVI} = \frac{200 \text{ ml}}{4 \text{ g}} = 50 \text{ ml/g. Ans.}$$

$$\text{Q. 113. } V_2 = V_1 \frac{(100 - 98)}{(100 - 96)} = \frac{V_1}{2} = 50\% V. \text{ Hence choice (d) is the correct}$$

answer.

Q. 114. Field problem of ponding in a biological sewage filter is caused by clogging of filter voids, due to fungi and algae. It may be caused by *excessive loading*, *inappropriate hydraulic loading* and *inadequate choice and packing of filter media*. The problem can be overcome by *raking or forking the filter surface*, *washing the filter by applying high pressure*, *steam of water at the surface*, *stopping the distributor to allow continuous heavy point by point dosing*, or by *light chlorination of influent* with a dose not exceeding 5 kg/100 m² of the filter area. Ponding is rarely a serious problem even in apparently over-loaded plants in hot climates. If overloading is the cause, then the only permanent solution is to provide more filter capacity.

Q. 123. Toxic chemicals particularly the organic metallic chemicals, like DDT, Dioxan, Minamata, Love canal, etc. have been found to be entering our food chain through their large scale use in our daily life, or through the consumption of plants and vegetables using pesticides eaten directly by humans, or through the consumption of milk and milk products obtained from animals grazing on such vegetables and grasses. The movement of such toxic chemicals through the environment, ultimately causes their *biotransformation*, *bioaccumulation* and *biomagnification** (large scale magnified effects through food chain), creating adverse effects on human, plant and animal health and on the environment in general.

Q. 126. NIPTS stands for Noise Induced Permanent Threshold Shift, which represents permanent hearing loss in human beings due to continued exposure to high noise over a long period. TTS stands for Temporary Threshold Shift, which represents temporary hearing loss by exposure to short time high noise. Since human ear has a tendency to recover in due course of time after the subject returns to a quiet environment, such loss in hearing sensitivity is only temporary and may be detected if the hearing loss test is performed immediately after the exposure within a standard interval of 2 minutes. TTS is also called NITTS i.e., *Noise induced temporary threshold shift*.

Reverberation time is the time required by a sound to die down fully, say up to zero dB, and not only for its decibel reduction by 60 dB. Hence, pair at 1 does not match, while pairs at 2, 3 and 4 do match. Hence, choice (a) is the correct answer.

Q. 132. Here V_s = stack gas velocity = 8 m/s

$$d = \text{inside exit dia. of stack} = 1 \text{ m}$$

$$u = \text{wind speed} = 4 \text{ m/s}$$

$$Q_A = \text{heat emission rate in kJ/s} = 2000 \text{ kJ/s.}$$

*Explained in details in authors' another book titled "Ecology and Environmental Studies".

Substituting values in the given formula, we get

$$\Delta t = \frac{8 \times 1}{4} \left[1.5 + 0.0096 \times \frac{2000}{8 \times 1} \right]$$

= 7.8. Hence choice (a) is correct. Ans.

Q. 137. The organic solids in the given solid waste shall be caused by Night soil (35 t) and Garbage (40 t) only, since Rubbish (40 t) and Debris (25 t) are non-organic solids. Hence, organic solids amount to 35 t + 40 t = 75 t. Hence, choice (d) is correct. Ans.

Q. 142. Here $G = 2.7$

$$d = 0.21 \text{ mm} = 0.21 \times 10^{-3} \text{ m}$$

$$\nu = 10^{-2} \text{ cm}^2/\text{s} = 10^{-6} \text{ m}^2/\text{s}$$

Using Eq. (9.5), we have the settling velocity (v_s) as :

$$\begin{aligned} v_s &= \left[\frac{g(G-1)d^{1.5}}{13.88 \nu^{0.5}} \right]^{0.714} \\ &= \left[\frac{9.81(2.7-1)}{13.88} \times \frac{(0.21 \times 10^{-3})^{1.5}}{(10^{-6})^{0.5}} \right]^{0.714} \\ &= \left[\frac{12016 \times 1.3048 \times 10^{-6}}{25119 \times 10^{-4}} \right]^{0.714} \\ &= [6.2412 \times 10^{-3}]^{0.714} \text{ m/s} \\ &= 0.02267 \text{ m/s} = 2.27 \text{ cm/s.} \end{aligned}$$

Check

The settling velocity v_s can also be computed from Eq. (9.7) as :

$$v_s = 60.6 \cdot d \cdot (G-1) \left(\frac{3T+70}{100} \right)$$

The value of viscosity ν becomes $1 \times 10^{-6} \text{ m}^2/\text{sec}$ at around 21°C (Pl. see Appendix Table A-6 at the end of the book)

$$\begin{aligned} v_s &= 60.6 \times 0.021 (2.7-1) \left(\frac{3 \times 21 + 70}{100} \right) \text{ cm/sec} \\ &= 2.27 \text{ cm/sec} \end{aligned}$$

Hence, choice (b) is correct. Ans.

Q. 160. The sampling procedures for air pollution studies have not been discussed in our text, as it is beyond the syllabus of under-graduate courses which involves only elementary study of Air Pollution. Hence, to know about sampling procedures and instruments used to collect samples of air/gas containing pollutants, including their measurements, readers may refer to "Air Pollution" by M.N. Rao and H.V.N. Rao, published by Tata McGraw Hill Publishing Company Ltd.

We may, however point out here that sampling of particulate matter must be carried out under conditions which are as isokinetic as possible, in order to eliminate the sources of errors that may be introduced due to agglomeration or breaking up of particulate matter. Hence, choice (b) is the correct answer. Ans.

Q. 163. The tanks or vessels or containers used for carrying out biological or chemical reactions for treatment of sewage, known as reactors, may be of the following types :

- (i) the batch reactor ;
- (ii) the plug flow reactor, also known as tubular-flow reactor ;
- (iii) the continuous flow stirred-tank reactor ; also known as complete mix reactor ;
- (iv) the arbitrary-flow reactor ;
- (v) the packed bed reactor ; and
- (vi) the fluidized bed reactor.

The classification of the first four reactors is based on their hydraulic characteristics. Homogeneous reactions are usually carried out in such reactors. Heterogeneous reactions are however, usually carried out in the latter two types of reactors (S. No. (v) and (vi)) above.

In a batch reactor, the flow neither enters nor leaves the reactor, such as in a BOD test bottle.

The plug flow reactor, in practice, is approximated by a very long rectangular tank, such as a *grit channel* or a *large sedimentation tank*. In some cases, these tanks exceed 180 m in length. To use space more effectively, such tanks are often folded in a serpentine fashion.

In a continuous flow stirred tank or a complete mix reactor, complete mixing occurs, when particles entering the tank are dispersed immediately throughout the tank. Such a mixing can be accomplished in circular or square or rectangular tanks, if the contents of the tank are uniformly and continuously redistributed.

An arbitrary flow reactor, is in between both the plug flow and continuous mixing type of reactors, involving *particle mixing*.


A packed bed reactor is filled with some type of packing material, such as rock, slag, ceramic, sand etc. With respect to flow, they can be completely filled (anaerobic filter) or intermittently dosed (trickling filter).

A fluidized-bed reactor is similar to the packed bed reactor in many respects, but the packing medium is expanded by the upward movement of the fluid (air or water) through the bed. The porosity of packing can be varied, thereby controlling expanded depth by controlling the flow rate of the fluid.


Plug flow, continuous flow and arbitrary flow reactors are the types of reactors, which are most commonly used in the field of waste water treatment. The most important practical considerations involved in reactor design is how to achieve the ideal conditions postulated in the analysis of their performance. For example, when a continuous flow stirred tank reactor is designed, the important issue would be to decide as to how the flow should be introduced to satisfy the requirement of instantaneous and complete dispersion. Properly

designed inlet and outlet arrangements are, hence, required to be provided. In practice, however, there is always some deviation from ideal conditions, and precautions have to be taken to minimize those effects that are important.

A common problem affecting reactor performance is *short circuiting*. If the incoming waste water is either colder or warmer than the liquid in the reactor, short circuiting in plug-flow reactors can be caused by density currents. (See Fig. 25.4a)

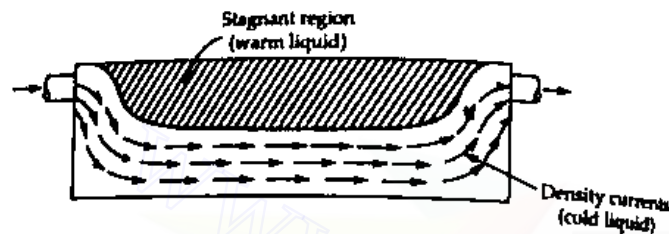

(a) Short circuiting caused by density currents in a plug flow reactor

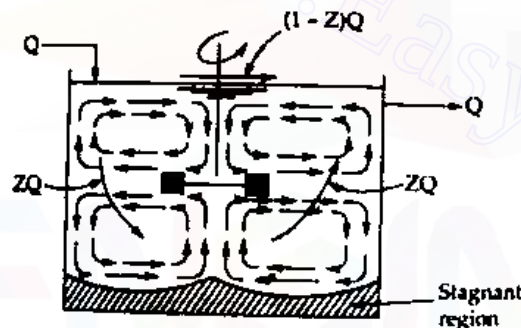

(b) Short circuiting caused by inadequate mixing in continuous flow stirred-tank reactor.

Fig. 25.4. Short circuiting reactors.

In warm climates, the performance of large sedimentation tanks can also be affected by density currents. Correction of short circuiting in plug-flow reactors may require the use of submerged deflection baffles located at either the top or bottom of the tank. Alternatively, some form of energy input may be required to equalize the temperature. Both mechanical mixers and diffused air have been used for this purpose.

Inefficient use of the reactor volume and short circuiting caused by inadequate mixing in a complete mix or continuous-flow stirred-tank reactor, as shown in Fig. 25.4 (b), can, similarly, cause problems, especially where rectangular tanks are used.

Q. 172. Max. BOD_5 allowed for discharge of sewage effluents in marine waters = 100 mg/l (Pl. see tables 8.3 and 8.6).
 BOD_5 of sewage = 200 mg/l

$$\text{Degree of treatment reqd.} = \frac{100}{200} \times 100\% = 50\%$$

Hence, choice (c) is the correct choice. Ans.

Q. 182. Pl. see Equation (9.33).

Q. 183. Pl. see Fig. 7.1 (a).

Q. 187. *Autotrophs* and *heterotrophs* (bacteria) are defined in the Hint given to solve Q. 53, as the bacteria that respectively use *inorganic* and *organic* matter for their growth.

Anabolism, as you may be knowing, is the process by which the food substances are changed into the tissues of a living animal or plant. This process thus, represents the constructive phase of metabolism.

Catabolism, on the other hand, is the process of breaking down of living tissues into simpler substances or waste matter, thereby producing energy. This process, thus, constitutes the destructive phase of metabolism.

With the above knowledge, you can easily mark the correct choice as (a), because B corresponds to 4, D to 2, A to 1, and C to 3.

Q. 204. Use Eq. (9.38) as

$$V = \frac{V_1(100 - p_1)}{100 - p}$$

Here $V_1 = P$, $p_1 = 98\%$, $p = 96\%$

$$\therefore V = \frac{P(100 - 98)}{(100 - 96)} = \frac{P}{2}$$

Hence, choice (d) is correct. Ans.

Q. 215. Pl. refer "Ecology and Environmental Studies" by the same author to know about magnification of pesticides.

Q. 219. Pl. refer Solved Example 7.1.

Q. 221. Use Eq. (8.1) as

$$C = \frac{C_R Q_R + C_S Q_S}{Q_S + Q_R}$$

or

$$C = \frac{200 \times 50 + 8 \times 500}{50 + 500} = 25.4 \text{ mg/L}$$

Hence, choice (b) is correct. Ans.

Q. 222. Use Eq. (7.8) as

$$\begin{aligned} \text{TON} &= \frac{V_s + V_D}{V_s} \\ &= \frac{12.5 + 187.5}{12.5} = 16 \end{aligned}$$

Hence, choice (d) is correct. Ans.

Objective Question of the AMIE (Section B) Exams

—26

Q. 1. Fill in the blanks :

- (i) For volatile solids determination, the dried sample is fired at temperature of $550 \pm 50^\circ\text{C}$ in a furnace.
- (ii) If BOD/COD ratio of a wastewater is more than, the wastewater is considered to be amenable to biological treatment.

Q. 2. Match the following sets :

Set A

- (i) Adiabatic lapse rate
- (ii) Algal-bacterial symbiosis
- (iii) Aromatic hydrocarbons
- (iv) Leaping weir
- (v) Algal bloom

Set B

- (a) Combined sewer
- (b) Automatic exhaust
- (c) Atmospheric stability
- (d) Oxidation pond
- (e) Nitrogenous waste-water

Q. 3. Choose the correct statement in the following :

- (i) Drop manholes are more frequently provided in the sewerage system, when the ground surface is :
 - (a) more or less flat
 - (b) undulating
 - (c) having a steep gradient.
- (ii)* Corrosion of concrete sewers are caused by :
 - (a) high flow velocity in sewers
 - (b) anaerobic decomposition of sewage solids
 - (c) high pH value of sewage
 - (d) aerobic oxidation of sewage solids.
- (iii)* Iron may be present in significant quantities in
 - (a) septic tank effluent
 - (b) irrigation return water
 - (c) rain water
 - (d) fresh water from deep tubewells.
- (iv) The grown algae is useful in the operation of :
 - (a) oxidation ponds
 - (b) slow sand filters
 - (c) sludge-digestion lagoons
 - (d) septic tanks.
- (v) Design of an appropriate velocity control device is an essential component in the design of :

OBJECTIVE QUESTIONS OF THE AMIE (SECTION B) EXAMS

913

- (a) activated sludge process
- (b) flow-equalisation tank
- (c) rapid sand filter
- (d) grit chamber.

Q. 4. Fill in the blanks :

- (i) Organic-nitrogen and ammonia-nitrogen, determined together, is usually known as nitrogen.
- (ii)* Permissible BOD of the sewage effluents, when discharged into the rivers, is mg/l.

Q. 5. Match the following sets :

Set A

- (i) Proportional weir
- (ii) Mottled teeth
- (iii) Muffle furnace
- (iv) Methemoglobinemia
- (v) Schmutzdecke

Set B

- (a) Nitrate
- (b) Slow sand filters
- (c) Grit chambers
- (d) Volatile solids
- (e) Fluoride.

Q. 6. Indicate whether the following statements are True or False :

- (i) Carbon dioxide is relatively transparent to shortwave ultraviolet light from the sun, but restricts the loss of heat by radiation from the ground surface.
- (ii) Contact stabilisation is a common variation of 'activated sludge process'.

Q. 7. Choose the correct statement in the following :

- (i)* BOD value of medium strength domestic sewage could be above :
 - (a) 12 mg/l
 - (b) 60 mg/l
 - (c) 120 mg/l
 - (d) 200 mg/l.
- (ii) The purpose of the wastewater solid digestion are :
 - (a) to decompose enough of the organic matter to avoid creating a nuisance
 - (b) to separate liquids from solids to facilitate drying
 - (c) to decrease the bulk of the wastewater solids to facilitate handling
 - (d) all of the above.

Q. 8. Choose the correct answer in the following :

- (i) Secondary treatment of sewage removes :
 - (a) suspended organic matter
 - (b) dissolved and colloidal organic matter
 - (c) harmful bacteria
 - (d) fats and grease.

Q. 9. Fill in the blanks :

- (i) The amount of oxygen consumed by sewage from potassium dichromate is termed as
- (ii) In stabilisation ponds, the strength of sewage is reduced by the principles of

Q. 10. Match the following sets :

- Group A**
- (i) Arithmetical increase method
 - (ii) Anaerobic treatment
 - (iii) Water bearing strata
 - (iv) Water borne diseases
 - (v) Electrostatic precipitators

- Group B**
- (a) Septic tank
 - (b) Old city
 - (c) Pathogenic bacteria
 - (d) Particulate matter
 - (e) Aquifer

Q. 11. Indicate whether the following statements are True or False :

- (i) Biochemical oxygen demand of safe drinking water is zero.
- (ii) 70 to 90% of suspended solids are removed in plain sedimentation of sewage.

Q. 12. Choose the correct statement in the following :

- (i) Ozone layer in the upper atmosphere is getting destroyed owing to its reaction with :
 - (a) carbon dioxide
 - (b) hydrogen peroxide
 - (c) oxides of nitrogen
 - (d) chlorofluorocarbons.
- (ii) The intensification of greenhouse effect is attributed to the increased level of :
 - (a) carbon dioxide
 - (b) carbon monoxide
 - (c) chlorofluorocarbons
 - (d) sulphur dioxides.

Q. 13. Fill in the blanks :

- (i) BOD/COD ratio in a typical domestic wastewater is

Q. 14. State whether the following statements are True or false :

- (i) Algal growth in the waste stabilization ponds is not desirable.

Q. 15. Match the following sets :

- Set A**
- (i) Recarbonation
 - (ii) Chlorination
 - (iii) Taste and odour
 - (iv) Temperature inversion

- Set B**
- (a) Activated carbon
 - (b) Trihalomethanes
 - (c) Lime soda process
 - (d) Smog

Q. 16. Choose the correct statement in the following :

- (i) A sloped floor of a manhole on both sides of and above a channel on which a man can stand for cleaning the sewers is called :
 - (a) Manhole stand
 - (b) Cleaning bench
 - (c) Benching
 - (d) Wash bench
 - (e) Sewer stand.
- (ii) Corrosion in sewer occurs due to :
 - (a) Methane
 - (b) Carbon dioxide
 - (c) Carbon monoxide
 - (d) Hydrogen sulphide
 - (e) All of the above.
- (iii) Bacteria which use carbon dioxide as a source of carbon are known as :

- (a) Micro bacteria
- (b) Autotrophic
- (c) Heterotrophic
- (d) Aerobic
- (e) Anaerobic.

(iv) Electrostatic precipitators are used as pollution control device for the separation of :

- (a) SO_2
- (b) NO_x
- (c) Hydrocarbon
- (d) Particulate matter

(v) In the analysis, muffle furnace is used to estimate :

- (a) Volatile fatty acids
- (b) Kjeldahl nitrogen
- (c) Volatile solids
- (d) Biodegradable solids
- (e) Non-biodegradable solids.

(vi) Pumping storm water is usually done by employing :

- (a) Submersible pump
- (b) Centrifugal pump
- (c) Axial flow pump
- (d) Turbine pump
- (e) Reciprocating pump.

(vii) Anaerobic biological treatment of high BOD wastes are suggested to :

- (a) Obtain end products having a fuel value
- (b) Yield least amount of sludge
- (c) Avoid high requirement of compressed air
- (d) All of the above.

(viii) Recirculation in 'Activated Sludge Process' is done to :

- (a) dilute the incoming sewage
- (b) dampen the effect of flow variation
- (c) operate the plant continuously
- (d) supply seed materials to the aeration tank.

Q. 17. Choose the correct statement in the following :

The rate of 5 day BOD exerted at any time is :

- (a) directly proportional to BOD satisfied
- (b) directly proportional to BOD remaining
- (c) inversely proportional to BOD remaining
- (d) inversely proportional of BOD satisfied.

Q. 18. Fill in the blank :

BOD reduction in oxidation pond is based on the principle of

Q. 19. State whether the following statements are true or false :

- (i) The major contributor to the depletion of ozone layer is chlorofluoro carbon.
- (ii) The treatment in sludge digestion tank is based upon aerobic degradation of organic matter.

Q. 20. Match the following sets :

Set A

- (i) Acidity
- (ii) Alum
- (iii) Cyclone
- (iv) Skimming

Set B

- (I) Particulate matter
- (II) Oils and greases
- (III) Flocculation
- (IV) Carbon dioxide

Q. 21. Choose the correct statement in the following :

- (i) Presence of higher algal content in water indicates that water is
 - (a) having high BOD
 - (b) free from oxygen
 - (c) saturated with oxygen
 - (d) obeying none above.
- (ii) In the design of inverted syphon, attempt is made to run all the pipes flowing :
 - (a) $\frac{1}{3}$ rd full
 - (b) $\frac{1}{2}$ full
 - (c) $\frac{2}{3}$ th full
 - (d) complete full.
- (iii) The optimum temperature for sludge digestion is :
 - (a) 10°C
 - (b) 25°C
 - (c) 37°C
 - (d) 55°C.
- (iv) For rural areas, VIP latrines mean
 - (a) Very important persons latrine
 - (b) Ventilated improved pit latrine
 - (c) Vault and inverted syphon pit latrines
 - (d) None as given in (a), (b) and (c).
- (v) For rural areas, most suitable solid waste disposal method is :
 - (a) Pyrolysis
 - (b) Incineration
 - (c) Land filling
 - (d) Composting.
- (vi) For conventional activated sludge process, the mixed liquor suspended solid should range between :
 - (a) 10 to 100 mg/l
 - (b) 150 to 300 mg/l
 - (c) 1500 to 3000 mg/l
 - (d) 5000 to 10000 mg/l.

Q. 22. Fill in the blanks :

- (i) Limestone surfaces are damaged by an aggressive air environment caused by the presence of gas
- (ii) Maximum concentration of oxygen (saturation concentration of dissolved oxygen) in water bodies at about 30°C is mg/l.

Q. 23. Choose the correct answer in the following :

- (i) In combined sewer system, storm waters are admitted through :
 - (a) leaping weirs
 - (b) storm regulators
 - (c) inlets
 - (d) intercepting weirs.
- (ii) Ozone layer in the upper atmosphere is getting depleted owing to its reaction with pollutants like
 - (a) hydrogen peroxide
 - (b) carbon monoxide
 - (c) chlorofluoro carbons
 - (d) volatile fatty acids.
- (iii) Corrosions of concrete sewers are generally caused by :
 - (a) high velocity of flow of sewage
 - (b) higher concentration of grits in sewage
 - (c) high pH of the sewage
 - (d) septic condition of the sewage.
- (iv) Pumping of storm water is usually done by employing :
 - (a) axial flow pump
 - (b) non-clog pump
 - (c) turbine pump
 - (d) submersible pump.

- (v) Electrostatic precipitators are used as pollution control device for the removal of :
 - (a) SO_2
 - (b) NO_x
 - (c) suspended particulate matter
 - (d) volatile organic substances.
- (vi) On mass basis, the largest fraction of the municipal solid wastes from a typical Indian city is made up of :
 - (a) salvageable substances
 - (b) combustible substances
 - (c) compostible substances
 - (d) toxic and hazardous substances.

Q. 24. Fill up the blanks :

- (i)* The bacteria which brings about sludge digestion in gober gas plant are
- (ii) Radioactive wastes can be disposed of by
- (iii) Stone-ware sewers are also known as

Q. 25. Choose the correct answer :

- (i) The colour of fresh domestic sewage is
 - (a) Dark brown
 - (b) Red
 - (c) Black
 - (d) Grey.
- (ii) What is the % of activated sludge mixed with the sewage in primary settling tanks ?
 - (a) 10 to 20
 - (b) 40 to 50
 - (c) 20 to 40
 - (d) 50 to 70.

Q. 26. Match the following :

Column A	Column B
(i) Aeration fountain	(I) Sullage
(ii) Flushing tank	(II) Removes odour and taste by exchange of gases
(iii) Finally divided aerosol particles resulting from incomplete combustion	(III) Biochemical reaction by bacteria takes place
(iv) Waste water from kitchen	(IV) Smoke
(v) Septic tank	(V) Produces self cleaning.

Q. 27. State whether true or false :

Strength of waste water is measured by pH.

Q. 28. Choose the correct answer :

- (i) Bacteria that obtain both energy and material from organic sources are called :
 - (a) autotrophs
 - (b) heterotrophs
 - (c) phototrophs
 - (d) protists.
- (ii) Laying of sewers is usually done with the help of :
 - (a) a compass
 - (b) a theodolite
 - (c) a plane table
 - (d) sight rails and boning rods.

- (iii) The specific gravity of sewage is :
 (a) 1 (b) slightly less than 1
 (c) slightly more than 1 (d) 2.65.
- (iv) The pipe installed in the house drainage to preserve the water seal is called :
 (a) waste pipe (b) soil pipe
 (c) vent pipe (d) antisiphonage pipe.
- (v) The gas from a sludge digester unit consists of
 (a) only methane (b) only carbon dioxide
 (c) about 70% methane (d) about 30% methane.
- (vi) The pH range to be maintained for proper functioning of a sludge digestion tank must be :
 (a) 3.5 (b) 6.5—8.5
 (c) 8.5—10.5 (d) no control needed.
- (vii) The sewage in a waste stabilisation pond is treated by
 (a) aerobic bacteria (b) algae
 (c) aerobic bacteria and algae
 (d) facultative bacteria.
- (viii) Which of the following is not a primary air pollutant ?
 (a) sulphur dioxide (b) nitrogen oxides
 (c) hydro carbons (d) ozone.
- Q. 29. Choose the correct answer :
 (i) Which prevents the entry of foul gas and allows ventilation ?
 (a) Intercepting trap (b) Fresh air inlet
 (c) Gully trap (d) Flushing cistern.
- (ii) The BOD test is an indirect measure of
 (a) dissolved solids (b) volatile acid content
 (c) organic matter (d) none of the above.
- (iii)* For self cleansing velocity of 0.90 m/s with a sewer gradient of 1 in 150, the pipe dia is
 (a) 15 cm (b) 30 cm
 (c) 75 cm (d) none of the above.
- Q. 30. Match the following :
 (i) Intercepting trap (a) Discharge into soil pipe through floor trap
 (ii) Gully trap (b) Cleans suddenly with a large volume of water
 (iii) Cow (c) Prevents nesting of birds, etc.
 (iv) Water closet (d) Prevents gases entering a house from public sewers
 (v) Flushing cistern (e) Receives human excreta directly.
- Q. 31. Fill in the blanks :
 (i) The leakage of sewage from sewers into the surrounding is known as

- (ii) Composting is a good method of solid waste disposal when waste is
- (iii) Air pollution can be minimised by
- (iv) Smog is a mixture of and smoke.
- Q. 32. Fill in the blanks :
 (i) The main yard stick for measuring strength of sewage is
 (ii) The stabilisation of sewage in oxidation pond takes place by symbiotic action of
- Q. 33. State whether the following statements are True or False :
 (i) The stable atmosphere helps in the dispersion of air pollutants.
 (ii) The Chemical Oxygen Demand (COD) is always lesser than the Biochemical oxygen demand (BOD).
- Q. 34. Match the following :

Column-I	Column-II
(i) Circular ring system	(a) Hydrocarbon, carbon monoxide, nitrous oxide
(ii) Depletion of oxygen in stream	(b) Mottling of teeth
(iii) Inverted sewer	(c) Carry sewage below road/pavement
(iv) Excess fluorides in water	(d) Fish killing
(v) Automobile exhaust	(e) Suitable layout of pipes for well planned city
- Q. 35. Choose the correct answer :
 (i)* For controlling the Algae, the most commonly used chemical is :
 (a) lime (b) bleaching powder
 (c) alum (d) copper sulphate.
- (ii) Which trap separates the municipal sewer from house drainage system ?
 (a) Gully trap (b) P-trap
 (c) S-trap (d) Intercepting trap.
- Q. 36. Choose the correct answer :
 (i) Sewage is known to contain a very good amount of water, and solid matter is only :
 (a) 10% (b) 1%
 (c) 0.1% (d) None of the above.
- (ii) The normal temperature of sewage than that of water supply is :
 (a) lower (b) higher
 (c) same (d) atmospheric.
- (iii) Septic tank is most suitable unit for :
 (a) hospitals (b) hotels
 (c) hostels (d) All of the above.
- (iv) The DO content in self-purification of stream is nearly to its saturation value in :
 (a) zone of active decomposition
 (b) zone of recovery

- (c) zone of degradation
(d) None of the above.
- (v) Indices of pollution in case of stream are :
(a) Colour and turbidity (b) DO and BOD
(c) Flora and Fauna (d) All of the above.
- (vi) The maximum damage to the 'Taj Mahal' is because of the gas :
(a) CO_2 (b) CO
(c) SO_2 (d) All of the above.
- (vii) The popular treatment method of solid waste in India is :
(a) Incineration (b) Landfill
(c) Pyrolysis (d) None of the above.
- (viii) The mixed liquor suspended solid concentration in the basin of aeration system is 2200 mg/L and sludge volume after settling in a one litre graduated cylinder is 200 ml, the sludge volume index is :
(a) 2400 mg/L (b) 200 ml/L
(c) 91 ml/g (d) 91 mg/L.
- (ix)* Determine the time of a waste stabilization pond of 1.5 m depth having a flow of 1.5 MLD and 300 mg/L BOD with a loading rate of 150 kg/hectare/day is in between (and how much ?)
(a) 10-40 hours (b) 1-4 days
(c) 10-40 days (d) None of the above.
- Q. 37. State whether the following statements are True or False :
(i) Increase in temperature with height in the atmosphere is known as lapse rate.
(ii) Anaerobic process of composting is known as Bangalore process, while aerobic process of composting is known as Indore process.
- Q. 38. Fill in the blanks :
(i) Sludge gas is produced in digestors due to action of
(ii) as a gaseous pollutant combines with haemoglobin in blood to cause toxic effects.
- Q. 39. State whether the following statements are True or False :
(i) Trickling filters in waste-water treatment are intended to remove dissolved organics
(ii)* High COD to BOD ratio for waste water indicates its high biodegradability
(iii)* Population equivalent of 2000 m^3/d of waste water with BOD of 200 mg/l at 50 gm/capita/day is 100000.
- Q. 40. Match the following :
- | | |
|-------------------------------|------------------------------|
| (i) Trickling filter | (a) Do not require oxygen |
| (ii) Nitrates | (b) Oxidation pond |
| (iii) Zeolites | (c) Attached growth process |
| (iv) Anaerobes | (d) Cause methemoglobinemia |
| (v) Bacterial algal symbiosis | (e) Remove hardness in water |

Q. 41. Select correct answer :

- Compared to the activated sludge process, trickling filter
(a) withstands shock loads better
(b) does not withstand shock loads better
(c) effluent is well stabilized
(d) is difficult to maintain.

Q. 42. Choose correct answer :

- (i) The recommended value of SVI in diffused aeration system should be :
(a) 5 to 10 (b) 10 to 25
(c) 25 to 55 (d) 55 to 150.
- (ii) Eutrophic conditions in lakes are due to :
(a) excess algae (b) excess of colour
(c) excess of turbidity (d) None of the above.
- (iii) Electronic precipitators are used to control :
(a) particulate matter (b) sulphur dioxide
(c) lead (d) None of the above.
- (iv) Methane formers are
(a) obligate aerobes (b) facultative bacteria
(c) obligate anaerobes (d) None of the above.

Q. 43. Fill in the blanks :

- (i) If the settling velocity of a particle is 1.4 mm/s and overflow rate is 0.056 mm/s, the percentage of solids removed in sedimentation tank is
(ii) A BOD_5 test is conducted on 4 ml of river water in 300 ml of BOD bottle. The initial DO is 7 mg/l and final DO is 0 mg/l. The BOD_5 of the waste water is
(iii) Pollutants in diesel exhaust are (given in the order as per quantity wise).
(iv) The sanitary fixture provided in water closet to prevent entry of foul gases into houses from septic tank is
(v) The type of settling which occurs in grit chamber is

Q. 44. State whether the following statements are True or False :

- (i) The concentration of BOD_5 of an industrial waste with high concentration of cyanides is zero.
(ii) Trickling filters are an example of suspended growth of aerobic biological treatment.

Q. 45. Match the following sets :

Set A

- (i) Autotrophic bacteria
(ii) Reflux valve
(iii) Septic tank
(iv) Streeter Phelps equation
(v) High volume sampler

Set B

- (a) Dissolved oxygen sag curve
(b) Anaerobic bacteria
(c) Suspended particulate matter
(d) Flow allows one direction only
(e) Utilize CO_2 as food carbon source.

Q. 46. Choose the correct answer :

- (i) The most commonly used disinfectant of wastewater is :
 (a) Chlorine dioxide (b) Chlorine
 (c) Ozone (d) U.V. radiation.
- (ii) Activated sludge process is used to remove :
 (a) settleable organic matter
 (b) soluble organic matter
 (c) pathogens
 (d) inorganic matter and toxic chemicals.
- (iii) Sewage contains a solid content of :
 (a) 1% (b) 0.5%
 (c) 0.1% (d) 5%.
- (iv) Major air pollutants from a thermal power station are :
 (a) Fly ash and PAN (b) Fly ash and ozone
 (c) Fly ash, hydrogen fluoride and H_2S
 (d) Fly ash and SO_2 .

Q. 47. Match the following :

(i) (a) Cyclone separators	(1) Automobiles
(b) Euglena	(2) Sulphides
(c) Pink sulfur bacteria	(3) Algae
(d) Benzopyrene	(4) Particulate matter
(ii) (a) Splash pad	(1) Grease removal
(b) Ether soluble solids	(2) Bulking of sludge
(c) SVI	(3) Activated sludge process

Q. 48. Choose the correct answer :

- (i) Pyrolysis is a process in :
 (1) Water treatment (2) Vehicular air pollution
 (3) Solid waste management (4) Industrial waste treatment.
- (ii) The hydraulic surface loading in a primary sedimentation tank is:
 (1) 2.5 m/h (2) 25 m/h
 (3) 0.5 m/h (4) 10 m/h.
- (iii) The electrostatic precipitators are used in :
 (1) waste water treatment (2) thermal power plant
 (3) automobiles (4) nuclear power plants.
- (iv) Vanadium pentoxide is used as a catalyst to treat :
 (1) Sulphur dioxide in exhausts
 (2) Carbon monoxide in exhausts
 (3) Arsenic in water
 (4) Chromium in waste water.
- (v) Desulpho vibrio is responsible for :
 (1) Denitrification (2) Nitrification
 (3) Sulphate reduction (4) None of the above.

(vi) $\overline{Gt}$ value is associated with :

- (1) Noise pollution (2) Crank case emission control
- (3) Flocculation (4) None of the above.

Q. 49. Choose the correct answers :

- (i) A sloped floor of a manhole on both sides of the channel on which a man can stand for cleaning the sewer, is called :
 (a) manhole stand (b) benching
 (c) wash stand (d) cleaning platform.
- (ii) Bacteria which use carbon dioxide as a source of carbon, are known as :
 (a) microbacteria (b) heterotrophic
 (c) aerobic (d) anaerobic.
- (iii) In ASP unit F/M ratio should be between :
 (a) 0.2 to 0.4 (b) 0.6 to 0.8
 (c) 0.8 to 1 (d) 1.1.
- (iv) The recommended value of SVI in diffused aeration system should be :
 (a) 5 to 10 (b) 20 to 30
 (c) 30 to 40 (d) 55 to 150.
- (v) For an average Indian city, solid waste generated per capita may be assessed as :
 (a) 0.1 kg (b) 0.4 kg
 (c) 1.0 kg (d) 2.0 kg.
- (vi) Silicosis is caused in the :
 (a) textile industries (b) sugar industries
 (c) storage battery industries
 (d) stone crushers.
- (vii) The sludge does not contain waste water from :
 (a) both rooms (b) wash basins
 (c) kitchen sinks (d) toilets.
- (viii) If q is the average sewage flow from a city of population P in thousand, the maximum sewage flow Q is :

$$(a) Q = \frac{4 + \sqrt{P}}{18 + \sqrt{P}} \cdot q$$

$$(b) Q = \frac{18 + P}{4 + P} \cdot q$$

$$(c) Q = \frac{18 + \sqrt{P}}{4 + \sqrt{P}} \cdot q$$

$$(d) Q = \frac{18 \cdot \sqrt{P}}{4\sqrt{P} + 1} \cdot q$$
- (ix) If D is the diameter of upper circular portion, the overall depth of standard egg-shaped sewer is :
 (a) D (b) $1.25D$
 (c) $1.50D$ (d) $2.0D$.
- (x) The first stage of sludge digestion process is :
 (a) acid fermentation (b) acid regression
 (c) alkaline fermentation (d) None of these.

- 48 (v)—(3) 48 (vi)—(3)
 49 (i)—(b) 49 (ii)—(b) 49 (iii)—(a) 49 (iv)—(d)
 49 (v)—(b) 49 (vi)—(d) 49 (vii)—(d) 49 (viii)—(c)
 49 (ix)—(c) 49 (x)—(a)
 50 (i)—(d) 50 (ii)—(c)
 51 (i)—(b) (ii)—(a)
 52 (iv)—(75 ml/g)

Hints For Solving Starred Questions

Q. 3. (ii) Concrete sewers are corroded by H_2S gas, that may be produced by anaerobic decomposition of sewage, when it becomes stale.

Q. 3. (iii) Large amount of iron is found in soils, and hence the possibility of its presence in deep tubewell water is high.

Q. 4. (ii) Pl. refer Col. (3) of Table 8.2.

Q. 7. (i) Pl. refer Table 7.3.

Q. 16. (ii) Corrosion of sewers, particularly at the crowns, is caused by the hydrogen sulphide gas, which is usually evolved when sewage becomes stale, particularly in sewers which are constructed on flat gradients in warm climates. The evolved H_2S gas is absorbed in the water condensed on the side walls and crowns of the sewer pipe. Here the *sulphur bacteria*, able to tolerate pH levels of less than 1.0, oxidise the weak acid H_2S to strong sulphuric acid (H_2SO_4) by using oxygen from air in the sewer. The sulphuric acid may react with concrete sewer, reducing its structural strength. When the sewer pipe gets sufficiently weakened, it may collapse under the heavy overburden loads. Use of corrosion resistant pipe materials such as vitrified clay, or PVC plastic, may offer protection from corrosion. In large sewers, where size and economics dictate the use of concrete sewers, crown corrosion can be reduced by ventilation, to help expel H_2S gas to reduce moisture of condensation. Protection of concrete pipe interior by providing coatings of coal tar, vinyl or epoxy may also sometimes be adopted to reduce corrosion.

Besides H_2S causing corrosion of upper portion of sewer pipe, corrosion of pipe bottom may be caused by the acidic industrial waste waters that may enter the municipal sewers. In such eventualities, the inflow of acidic wastewaters are either limited or excluded. Sometimes, corrosion resistant liners, such as vitrified clay plates, may be placed in the invert of the sewer for protection.

Q. 16. (iii) Depending upon their source of nutrients, bacteria are classified in the following two major groups :

- (1) heterotrophic ; and
- (2) autotrophic.

(1) Heterotrophic bacteria, also sometimes called as *saprophytes*, use organic matter as both an energy and a carbon source, for synthesis. These bacteria are further divided into : aerobic, non-aerobic, and facultative groups.

(2) Autotrophic bacteria oxidise inorganic matter for energy and use carbon dioxide as a carbon source. The three types of commonly found

autotrophic bacteria, are : (a) *Nitrifying bacteria* ; (b) *Sulphur bacteria* ; and (c) *Iron bacteria*.

The *nitrifying bacteria* oxidise Ammonium nitrogen into nitrates.

The *sulphur bacteria* cause crown corrosion in concrete sewers as explained in previous question.

The *iron bacteria* oxidise soluble inorganic ferrous iron to insoluble ferric iron. They thrive in water pipes, where dissolved iron is available as an energy source, and bicarbonates are available as a carbonate source. These bacteria die and decompose with time, releasing foul tastes and odours.

Q. 24 (i) The Bio-gas is popularly known as Gobar gas in India, mainly because cow dung has been the main material for its production. The cattle waste (gobar), piggery waste and poultry droppings are very effectively used in biogas generation. The biogas is produced by anaerobic digestion of wastes which is well discussed in the text, and contains about 65-70% methane and 30% carbon dioxide ; and the rest being the impurities (H_2 , H_2S and some N_2). Gobar gas plants are the most effective and useful tools for disposal of cattle and poultry wastes. Standard designs of various types of gobar gas plants are given in author's another book titled "*Ecology & Environmental Studies*", and may be referred to in special needs.

Q. 35 (i) Please read article 8.4.5.

Q. 38 (ix). Please see Solved Example 9.31 and compute as under :

$$Q = 1.5 \text{ MLD}$$

$$\text{BOD} = 3000 \text{ mg/l}$$

BOD load of sewage flow/day

$$= (1.5 \times 10^6 \times 3000) \text{ mg/d} = \frac{1.5 \times 10^6 \times 3000}{10^6} \text{ kg/d} = 4500 \text{ kg/d.}$$

Organic loading = 150 kg/ha/d

Surface area of oxidation pond reqd.

$$= \frac{4500 \text{ kg/d}}{150 \text{ kg/ha/d}} = 30 \text{ ha} = 30 \times 10^4 \text{ m}^2$$

If $L = 2B$, then $2B^2 = 30 \times 10^4 \text{ m}^2$

$$\text{or } B = \sqrt{15 \times 10^4} = 387.3 \text{ m ; } L = 2 \times 387.3 = 774.6 \text{ m}$$

Effective depth = $d = 1.5 \text{ m}$ (given)

$$\text{Capacity} = 387.3 \times 774.6 \times 1.5 = 45000 \text{ m}^3.$$

$$\text{Detention time in days} = \frac{\text{Capacity in cum}}{\text{Sewage flow in m}^3/\text{d}} = \frac{45000 \text{ m}^3}{1.5 \times 10^6 \text{ m}^3/\text{d}} = \frac{45000}{1500} \text{ d} = 30 \text{ days. Ans.}$$

Q. 39. (ii) For high biodegradability, BOD should be more ; then eventually $\frac{\text{COD}}{\text{BOD}}$ should be less. Hence, low value $\frac{\text{COD}}{\text{BOD}}$ ratio will represent high biodegradability. The given statement is, thus, false.

Q. 39. (iii) Use Eq. (7.20) :

BOD of industrial waste
= (P.E.) × Standard Domestic BOD per person per day

$$\therefore 2000 \frac{\text{m}^3}{\text{d}} \times 200 \text{ mg/l} = (\text{P.E.}) \times 50 \text{ gm/person/d}$$

$$\text{or } \text{P.E.} = \frac{2000 \times 10^3 \frac{1}{\text{d}} \times \frac{200 \text{ g}}{1000 \text{ l}}}{50 \text{ gm/person/d}}$$

$$= \frac{400 \times 10^3}{50} \text{ persons} = 8000.$$

Hence, the given answer of 100000 is false.

Q. 52. (i) Protozoa are motile, micro-scopic single cell animals, representing the simplest and lowest form of animal life. They can be directly counted under a microscope. The majority of protozoa are aerobic heterotrophs, although a few are anaerobic. Protozoa are, generally, in order of magnitude, larger than bacteria and often consume bacteria as an energy source. In effect, the protozoa act as polishers of the effluents from biological waste treatment processes by consuming bacteria and particulate organic matter. They thus, play an important role in activated sludge process (aerobic oxidation) by causing oxidation of organic matter, thereby helping in the treatment of waste water.

Q. 52. (iv) Use Eq. (9.52) as :

$$\text{SVI in } \frac{\text{mL}}{\text{g}} = \left[\frac{V_{\text{sa}} \text{ in } \frac{\text{mL}}{\text{l}}}{X_{\text{sa}} (\text{MLSS}) \text{ in } \frac{\text{mg}}{\text{l}}} \times 1000 \right]$$

$$= \frac{150}{2000} \times 1000 = 75 \text{ mL/g Ans.}$$

—27

Conventional Questions of the Civil Services (IAS) Exams for the Past Years

Year 1979 (Civil Services)

Q. 11. (b) Data from an unseeded domestic wastewater BOD test are : 5.0 ml of waste in 300 ml bottle, initial DO of 7.8 mg/l, and 5 day DO equal to 4.3 mg/l. Compute (i) the BOD, and (ii) the ultimate BOD, assuming a k-rate of 0.10 per day. (30)

[Note. Please refer solved example 7.18.]

Q. 12. (b) A dairy processing about 1,33,000 kg of milk daily produces an average of 246 cubic metre per day of wastewater with a BOD of 1400 mg/l. The principal operations are bottling of milk and making ice cream, with limited production of cheese. Compute the wastewater flow and BOD per 1000 kg of milk received, and the equivalent population of the daily waste discharge. (30)

[Note. Please refer solved example 7.19.]

Year 1980 (Civil Services)

Q. 16. (a) A dairy processing 1,13,000 kg of milk daily produces an average of 246 cum per day of wastewater with a BOD of 1400 mg/l. Compute :

- the wastewater flow per 1000 kg of milk received,
- BOD per 1000 kg milk received,
- the BOD equivalent population and the hydraulic equivalent population.

Assume 80 gm of BOD per person per day, and the wastewater at 400 litres per person per day.

[Hint: Please follow example 7.19 and determine :

- Waste per 1000 kg of milk received

$$= \frac{246}{1,13,000} \times 1000 \text{ cum} = 2.177 \text{ m}^3. \text{ Ans.}$$

- BOD per 1000 kg of milk

$$= 1400 \text{ mg/l} \times 2.177 \text{ m}^3$$

$$= \frac{1400 \times 1000}{1000 \times 1000} \times 2.177 \text{ kg}$$

$$= 30.478 \text{ kg. Ans.}$$

(iii) (a) BOD equivalent population

$$= \frac{(1.4 \times 246) \times 1000}{80} = 4305. \text{ Ans.}$$

(b) Hydraulic equivalent population

$$= \frac{246 \times 1000 \text{ l/day}}{400 \text{ l/day/person}} = 615. \text{ Ans.}$$

Q. 16. (b) A 450 mm sewer pipe, $n = 0.013$, is placed on a slope of 0.0025. At what depth of flow, the velocity is equal to 0.60 m/s.

Table of Hydraulic Elements of Sewers flowing full, $n = 0.013$

D (mm)	Slope (m/m)	Velocity (m/s)
500	0.0025	1.18
450	0.0025	0.90
400	0.004	1.40
300	0.0025	1.10

Table of Hydraulic Elements of Sewers Partially Full

d/D	v/V
0.20	0.60
0.23	0.67
0.28	0.70
0.41	0.80
0.41	2.90

(25)

[Hint :

For 450 mm ϕ sewer, $n = 0.013$, slope = 0.0025, the vel. at full depth is found from table as 0.90 m/sec.

Now, $V = 0.9$ m/sec and $v = 0.6$ m/sec (given)

$$\therefore \frac{v}{V} = \frac{0.6}{0.9} = 0.67$$

For this value of $\frac{v}{V}$, from 2nd table, $\frac{d}{D} = 0.23$

Hence, depth in 450 mm ϕ sewer

$$= 0.23 \times 450 \text{ mm} = 103.5 \text{ mm}$$

$$= 10.35 \text{ cm. Ans.}$$

Q. 17. Design an oxidation pond for treating domestic sewage contributed by 10,000 persons supplied with water at 200 litres per person per day. The BOD and suspended solids are 300 mg/l each.

Permissible organic loading for the pond is not less than 500 kg/ha/day. The detention period is not to exceed 6 days. Assume width to length ratio as 1 : 2, and operational depth as 1.2 m. Assume any other data not given. Sewage volume may be taken equal to water supply. (60)

[Solution : Please follow solved example 9.31, and determine :

Sewage flow in pond/day = Water supply per day

$$= 10,000 \times 200 \text{ litres} = 2 \text{ MI} = 2000 \text{ m}^3/\text{d}$$

$$\text{BOD/day} = 2 \times 10^6 \text{ l} \times 300 \text{ mg/l} = 600 \text{ kg.}$$

Assuming organic loading to be equal to 500 kg/ha/day (min. given value), we have

$$\begin{aligned} \text{Surface area of pond} &= \frac{600}{500} \text{ ha} = 1.2 \text{ ha} \\ &= 1.2 \times 10^4 \text{ m}^2 = 12000 \text{ m}^2 \end{aligned}$$

$$B/L = 1/2 \text{ (given)}$$

$$LB = 2 \cdot B^2 = 12000$$

$$\therefore B = \sqrt{6000} = 77.46 \text{ m} \approx 77.5 \text{ m}$$

$$L = 155 \text{ m.}$$

$$\text{Capacity} = 155 \times 77.5 \times 1.2 \text{ m}^3 = 14415 \text{ m}^3$$

Detention time

$$= \frac{14415 \text{ m}^3}{2000 \text{ m}^3/\text{d}} = 7.2 \text{ days} > 6 \text{ days (max value given)}$$

Hence, organic loading is to be more than 500, and needs revision as below :

Using Detention time = 6 days, we get

$$6 = \frac{\text{Capacity of tank}}{\text{Sewage flow per day}}$$

$$\therefore \text{Capacity in cum} = 6 \times 2000 \text{ cum} = 12000 \text{ cum}$$

$\therefore$ Surface area of tank

$$= \frac{12000}{1.2} \text{ m}^2 = 10,000 \text{ m}^2$$

[$\therefore$ Operational depth = 1.2 m]

$$\text{Using } 2B^2 = 10,000 \text{ m}^2, B = 70.7 \text{ m and } L = 141.4 \text{ m}$$

Organic loading will then be

$$= \frac{\text{BOD per day}}{\text{Surface area of pond}}$$

$$= \frac{600 \text{ kg/day}}{10,000 \text{ m}^2} = \frac{600 \text{ kg/day}}{1 \text{ ha}}$$

$$= 600 \text{ kg/ha/day, which is not less than 500 kg/ha/day.}$$

Hence, use a tank of dimensions 141.4 m $\times$ 70.7 m $\times$ 1.2 + 1 =

2.2 m, and a detention period of 6 days. Ans.]

Q. 19. (a) 'One of the most common problem in aerobic biological treatment is poor settleability of the activate sludge floc'. Explain the statement giving reasons.


(b) Explain the breakdown of organics by :

(i) aerobic bacteria ; and (ii) anaerobic bacteria.
Illustrate your answer by means of simplified equations.

(c) Fresh water containing nitrate ions, sulphate ions, and dissolved oxygen is placed in a sealed jar. In what sequence are these oxidised compounds reduced by the bacteria ? When would obnoxious odours appear ?

(d) Write an equation for photosynthesis. Why do plants perform this reaction ?

[Hint : The basic equation governing photosynthesis is available in Elementary Books of Biology, and is given as :

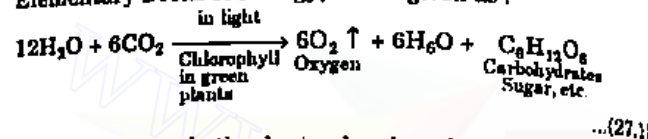

Green photosynthetic plants absorb moisture (from ground), light and carbon dioxide gas from the atmosphere, through the process of *photosynthesis*, to release oxygen. Infact, it was Van Niel, who postulated that the moisture (H_2O) absorbed by the plants from the ground is converted into oxygen by a green pigment, called *chlorophyll* (present in green photosynthetic plants) in the presence of light (particularly sunlight).

The light from sun, or from artificial light sources, contain energy, which is absorbed by such plants, although a part of it is also lost as *heat and fluorescence*. The absorbed light energy triggers the above *photochemical reaction*, that induces splitting of water, release of hydrogen and oxygen ; and the released hydrogen helping in the synthesis of a *reducing agent* which finally converts carbon dioxide (from the surroundings) into carbohydrates, etc. The photochemical reaction is shown in Fig. 27.1.

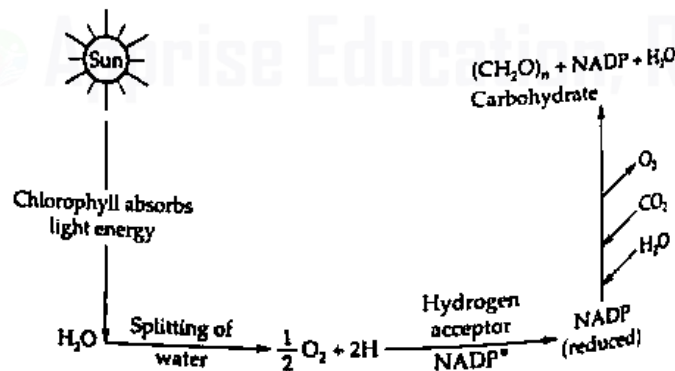


Fig. 27.1. Photosynthesis (reaction).

*NADP stands for Nicotinamide adenine dinucleotide phosphate.

In other words, the light energy (mainly solar energy) is converted into chemical energy in the form of carbohydrates, proteins, fats, etc., through the process of photosynthesis.

Ans.]

(e) What are the functions of water storage in a water distribution system ?
Year 1981 (Civil Services)

Q. 14. A wastewater effluent of 560 l/s with a BOD = 50 mg/l, DO = 3.0 mg/l and temperature of 23°C enters a river where the flow is 28 m³/sec and BOD = 4.0 mg/l, DO = 8.2 mg/l and temperature of 17°C, k_1 of the waste is 0.10 per day at 20°C. The velocity of water in the river downstream is 0.18 m/s and depth of 1.2 m. Determine the following after mixing of wastewater with the river water.

- (i) Combined discharge ; (ii) BOD ;
(iii) DO ; and (iv) Temperature. (60)

[Note. Please refer solved example 8.7.]

Q. 15. (a) Draw the flow diagrams of the following methods of sewage treatment plants and label its various parts :

- (i) Primary, (ii) Trickling filters,
(iii) Activated sludge, and (iv) Chemical treatment. (30)

(b) Discuss standard rate trickling filters under the following heads :

- (i) Construction details,
(ii) BOD and hydraulic loading,
(iii) Final effluent expected efficiency. (30)

Q. 16. (a) Discuss manhole of a sewerage system under the heads :
Diagram, Location, Design criteria, and Functions. (20)

(b) Discuss drop manholes of a sewerage system under the heads :
Diagram, Location, and Functions. (20)

Year 1982 (Civil Services)

Q. 13. (d) (i) Define "pollution" and classify the same.

(ii) Describe the three types of sewerage (drainage) systems indicating the conditions warranting the adoption of each system and the respective treatments. Also indicate the method of estimating the flow in a combined system. (15)

Q. 14. (c) Explain briefly the type of treatment achieved in septic tank. Describe the criteria used in their design. (15)

(d) Explain the concept of two stage digestion system and discuss why it is required. Describe in detail the salient features of this type of sludge digestion. (15)

Q. 15. (c) BOD (Biochemical oxygen demand at 20°C after 5 days) of a sewage sample has been found to be 250 mg/l. What is its value on the 15th day at 25°C ? Assume $k_{20} = 0.12$.

[Solution:

$$K_D(20^\circ) = 0.12$$

$$Y_5 = 250 \text{ mg/l (at } 20^\circ\text{C)}$$

$$Y_{15} \text{ at } 25^\circ\text{C} = ?$$

Using $Y_t \text{ at } (20^\circ) = L \left[1 - (10)^{-K_D(20^\circ) \cdot t} \right]$, we have

$$250 = L \left[1 - (10)^{-0.12 \times 5} \right] = L \left[1 - \frac{1}{(10)^{0.6}} \right]$$

$$0.7488 L = 250$$

$$\text{or } L = 333.86 \text{ mg/l}$$

$$\text{Now, } K_D(25^\circ) = K_D(20^\circ) [1.047]^{T-(20^\circ)}$$

$$= 0.12 [1.047]^{25-20}$$

$$= 0.12 \times 1.258 = 0.151$$

$$\text{Now, } Y_{15} \text{ at } 25^\circ = L \left[1 - (10)^{-K_D(25^\circ) \cdot t} \right]$$

$$= 336.86 \left[1 - (10)^{-0.151 \times 15} \right]$$

$$= 333.86 \left[1 - \frac{1}{(10)^{2.265}} \right]$$

$$= 332.08 \text{ mg/l. Ans.}$$

(d) A metropolitan authority has sanctioned a new suburban layout of 2000 sites essentially for middle income groups. Describe with dimensioned sketches design details of a stabilisation pond to treat the domestic sewage of this settlement. State clearly data assumed.

[Hint: Please follow solved example 9.31. Assume 4 persons per house site, and 8000 persons in all, each contributing 120 l/d of sewage having BOD of 300 ppm say.]

Q. 16. (a) Discuss the scope and importance of sanitary survey in a water supply scheme. (15)

(b) Estimate the total quantity of a sewage of a town (whose design population is 50,000). The water supply is 150 l/capita/day (average) and the estimated infiltration of ground water is 8000 l/km line per day. The proposed sewerage system will have 65 km of sewer line; out of which, nearly 50% will be below ground water table.

[Hint: Water supply = 50000 × 150 l/day = 7.5 ML/day

32.5 km of sewer line gets ground water infiltration

$$\text{Total sewage} = 80\% \times 7.5 + 0.26 = 6.26 \text{ ML. Ans.}$$

(assuming that 80% water supply comes back as sewage)

Year 1983 (Civil Services)

Q. 13. (a) Explain the principle and operation of an oxidation pond. List its merits and demerits. (20)

(b) The BOD of a sewage incubated for one day has been found to be 100 mg/l at 30°C. What will be the 5 day BOD at 20°C? (20)

[Solution:

$$Y_t = L \left[1 - (10)^{-K_D \cdot t} \right]$$

$$\text{Assume } K_D \text{ at } 20^\circ\text{C} = 0.1/\text{day}$$

$$\text{Now, } K_D \text{ (at } T^\circ\text{C)} = K_D \text{ at } 20^\circ [1.047]^{T-20^\circ}$$

$$\therefore K_D \text{ (at } 30^\circ\text{C)} = 0.1 [1.047]^{10} = 0.158$$

$$\therefore Y_1 \text{ at } 30^\circ\text{C} = 100 = L \left[1 - (10)^{-K_D \text{ at } 30^\circ \times 1} \right]$$

$$\text{or } 100 = L \left[1 - (10)^{-0.158 \times 1} \right]$$

$$\text{or } L = 327.89$$

$$\therefore Y_5 \text{ at } 20^\circ\text{C} = 327.89 \left[1 - (10)^{-K_D \text{ at } 20^\circ \times 5} \right]$$

$$= 327.89 \left[1 - (10)^{-0.1 \times 5} \right]$$

$$= 224.2 \text{ mg/l. Ans.}$$

(c) What is the importance of coliform test? Describe its procedure. (20)

Q. 14. (a) What are the design criteria for the Imhoff tank? Draw a neat sketch of an Imhoff tank. (30)

(b) Calculate the discharge of 1.25 m circular sewer laid at a slope of 1 in 360, when it is running half full. Assume n in Mannings formula as 0.011.

[Solution: $D = 1.25 \text{ m}, S = \frac{1}{360}, N = 0.011.$

$$\text{At } \frac{d}{D} = 0.5, \frac{q}{Q} = 0.5$$

where Q is the discharge when pipe runs full.

$$Q = \frac{1}{N} AR^{2/3} S^{1/2}$$

$$R = \frac{A}{P} = \frac{\pi D^2}{4 \cdot \pi D} = \frac{D}{4} = \frac{1.25}{4} \text{ m} = 0.3125$$

$$A = \frac{\pi}{4} D^2 = \frac{\pi}{4} \times (1.25)^2$$

$$Q = \frac{1}{0.011} \times \frac{\pi}{4} \times (1.25)^2 \times (0.3125)^{2/3} \times \frac{1}{\sqrt{360}}$$

$$= 2.70 \text{ m}^3/\text{sec.}$$

$$q = \frac{Q}{2} = \frac{2.70}{2} = 1.35 \text{ m}^3/\text{sec.} \quad \text{Ans.}$$

(c) Draw a neat sketch of an automatic flushing tank and explain its working. (20)

Q. 15. (a) What are the criteria to be used in deciding the material for sewer pipes? (10)

(b) Draw a neat sketch of a typical centrifugal pump installed for sewer pumping. (15)

(c) Draw a neat sketch of a sanitary well. (10)

Year 1984 (Civil Services)

Q. 13. (a) A population of 40,000 resides in a town covering an area of 75 hectares. Calculate the discharge for a combined system of sewers. Given:

(i) Coefficient of run off = 0.70,

(ii) Rain concentration = 40 minutes,

(iii) Water consumption = 120 l/d/person; and

(iv) 70% of wastewater reaches the sewers. (20)

[Solution: $K = 0.70$, $T_c = 40$ minutes = $\frac{40}{60}$ hr. and $A = 75$ hectares

Using rational formula,

$$Q = \frac{1}{36} \cdot K \cdot p_c \cdot A$$

$$= \frac{1}{36} \cdot K \cdot p_0 \left(\frac{2}{1 + T_c} \right) \cdot A$$

and assuming design value of $p_0 = 4$ cm/hr, we have

$$\text{Rain run off} = \frac{1}{36} \times 0.7 \times 4.0 \left(\frac{2}{1 + \frac{40}{60}} \right) = 7.00 \text{ m}^3/\text{sec.}$$

$$\text{Av. sewage discharge} = 0.70 \times \frac{120 \times 40,000}{1000} \text{ m}^3/\text{day}$$

$$= \frac{0.70 \times 120 \times 40}{24 \times 60 \times 60} \text{ m}^3/\text{sec} = 0.04 \text{ m}^3/\text{s.}$$

Peak rate of sewage = $3 \times 0.04 = 0.12 \text{ m}^3/\text{sec}$

Hence, total discharge in sewer

$$= 7.00 + 0.12 = 7.12 \text{ m}^3/\text{sec.} \quad \text{Ans.}$$

(b) Compare the dilution method of sewage disposal with the land disposal method of sewage disposal. (20)

Q. 14. (a) Determine the size of a high rate trickling filter. Given:

(i) Sewage flow = 50 Mld

(ii) Recirculation ratio = 1.4

(iii) BOD of raw sewage = 240 mg/l

(iv) BOD removed in primary tank 35%

(v) Final BOD of the effluent is less than 30 mg/l. (40)

[Hint: Please follow solved example 9.11, and determine:

Total BOD in raw sewage per day
= $50 \times 240 \text{ kg} = 12,000 \text{ kg/day}$

BOD removed in primary tank = 35%

BOD left and entering filter units

$$= 65\% \times 12,000 = 7800 \text{ kg/day}$$

BOD allowed in filter effluents

$$\leq 30 \text{ mg/l} \times 50 \text{ Ml} = 1500 \text{ kg/day}$$

$\therefore$ BOD removed in high rate filters

$$\geq 7800 - 1500 = 6300 \text{ kg/day}$$

$$\eta \text{ of filter} = \frac{\text{BOD removed}}{\text{BOD entering}} \times 100 = \frac{6300 \text{ or more}}{7800}$$

$$= 0.808 \text{ or more} = 80.8 \text{ or more}$$

$$\text{Also, } \eta = \frac{100}{1 + 0.0044 \sqrt{\frac{Y}{V \cdot F}}}$$

where Y = Total BOD applied to filter
= 7800 kg

$$F = \frac{1 + \frac{R}{I}}{\left[1 + 0.1 \frac{R}{I} \right]^2} = \frac{1 + 1.4}{(1 + 0.1 \times 1.4)^2}$$

$$= \frac{2.4}{(1.14)^2} = 1.85$$

$$\therefore 80.8 \text{ or more} = \frac{100}{1 + 0.0044 \sqrt{\frac{7800}{V \times 1.85}}}$$

$$\text{or } 1 + 0.0044 \sqrt{\frac{7800}{1.85 \cdot V}} = \frac{100}{80.8 \text{ or more}} = 1.238 \text{ or less}$$

$$\text{or } 0.286 \frac{1}{\sqrt{V}} = 0.238 \text{ or less}$$

$$\text{or } \frac{0.286}{\sqrt{V}} = 0.238 \text{ or less}$$

$$\text{or } \sqrt{V} = 1.2 \text{ or more}$$

$$\text{or } V = 1.441 \text{ ha. m or more ;}$$

$$\text{i.e., } = 14410 \text{ m}^3 \text{ or more}$$

Using 1.5 m depth of filter, we have

$$\text{Min. filter area reqd.} = \frac{14410}{1.5} = 9607 \text{ m}^2$$

$$\therefore \text{Min. dia of filter tank reqd.}$$

$$= \sqrt{\frac{9607}{\pi}} = 55.3 \text{ m}$$

Hence, use 56 m dia filter tank with 1.5 m depth of filter media. Ans.]

(b) Write the names of all possible types of treatments adopted for treating industrial wastes.

Q. 15. (a) A 350 mm dia sewer is to flow at 0.35 depth on a grade ensuring a degree of self cleansing equivalent of that obtained at full depth at a velocity of 0.8 m/sec. Find :

(i) the required grade (ii) associated velocity

(iii) the rate of discharge at this depth.

Given :

(i) Mannings rugosity co-efficient = 0.014

(ii) Proportionate area = 0.315

(iii) Proportionate wetted perimeter = 0.472

(iv) Proportionate HMD $\left(\frac{r}{R}\right) = 0.7705.$ (30)

[Note. Please refer solved example 4.3.]

(b) Explain how new pipe lines are tested. Also explain how leakage in the underground mains are detected by (i) water stethoscope ; and (ii) wastewater meter. (30)

Year 1985 (Civil Services)

Q. 13. (a) Explain briefly the principles involved in the orientation of buildings in India. Sketch a dimensioned plan of a house showing the best aspect for it, and the location of bed room(s) kitchen, and bathroom giving reasons in brief. Also describe how to ensure proper ventilation and circulation. (20)

(b) Suggest suitable (best) methods of sewage disposal for each of the following cases, critically evaluating relative merits of alternatives : (i) isolated residential building with fifteen users ; (ii) a small suburban colony of 3000 residents located on the bank of a big river ; (iii) an old town of 20000 (20)

(c) Distinguish between aerobic and anaerobic sludge digestion ; classify sewage treatment works based on this criteria and evaluate their relative merits and demerits. Also describe special processes required to treat industrial wastes. (20)

Q. 14. (d) How do Imhoff tanks differ from septic tanks ? Bring out two disadvantages of Imhoff tanks. (12)

Q. 15. (a) Discuss factors that cause air pollution and explain how air pollution can and does become a major health hazard. Listing the constituents of dust in cement factory, describe how to control the pollution. (15)

(b) The BOD₅ of a waste has been measured as 600 mg/l. If $k_1 = 0.23/\text{day}$ (base e), find the ultimate BOD_u of the waste. What proportion of BOD_u would remain unoxidised after 20 days ? Also comment on assuming BOD₂₀ as BOD_u. (20)

[Note. Pl. refer solved example 7.13.]

(c) You are to lay 200 mm water main in a street in which there are reported to be 500 mm storm sewer and a 250 mm sanitary sewer. By sketches of working drawing, indicate the locations of these pipe structures and explain the precautions in laying them. (10)

Year 1986 (Civil Services)

Q. 13. (c) Discuss the incineration and composting as aspects of refuse disposal in rural environmental sanitation. How are these achieved ? Explain the different methods, if any, under each. (20)

(d) Sketch a typical arrangement of sanitary fixtures in a public lavatory block, showing :

(i) one Indian type water closet ;

(ii) urinal-stall type-three numbers ;

(iii) wash basin-one number. (20)

Q. 14. (a) Discuss the stages of biological action, constituting sludge digestion. Explain the changes that occur in each stage. (15)

(b) Tabulate the differences in the characteristics of the standard rate filter vis-a-vis the high rate filter in case of trickling filters in sewage treatment. (15)

(c) What are the purposes achieved by chlorination of sewage ? What dosage ranges of chlorination in ppm are normally applied for different types of effluents ? In what respect can this be ineffective ? (15)

(d) What is the minimum self-cleansing velocity in domestic sewers ? What is the general proportion between the maximum flow and the dry weather flow ? What are the gradients and the minimum discharges for 100, 150 and 230 mm diameter sewer pipes, respectively ? What sizes of pipes are normally used for soil pipes, vent pipes and antisiphonage pipes ? (15)

Q. 15. (a) Design a septic tank for a small colony of 300 persons with average daily sewage flow of 85 litres per head. Detention period is 30 hours. Cleaning interval is 6 months. Draw a neat sectional sketch showing all details. (30)

[Solution : Please follow solved example 9.33, and determine :

$$\text{Qty. of sewage produced} = 0.8 \times 85 \times 300 \text{ l/day} \\ = 20,400 \text{ l/d}$$

Qty. of sewage produced during detention time of 30 hrs.

$$= \frac{20400}{24} \times 30 \text{ l} = 25500 \text{ l} = 25.5 \text{ m}^3.$$

Now, assuming sludge deposition in the tank @ 30 l/capita/yr—and cleaning period being 6 months, we have

$$\text{Sludge volume} = 30 \times 300 \times \left(\frac{6}{12}\right) = 4500 \text{ l} = 4.5 \text{ cum.}$$

∴ Total capacity reqd. = 25.5 + 4.5 = 30 cum.

Assuming 1.5 m depth,

$$\text{Surface area} = \frac{30}{1.5} = 20 \text{ m}^2$$

Using $L = 3 B$, we have

$$B = \sqrt{20/3} = 2.58 \text{ m}$$

and $L = 3 \times 2.58 = 7.75 \text{ m}$.

Say, provide $B = 2.6 \text{ m}$.

Hence, use $7.75 \text{ m} \times 2.6 \text{ m} \times (1.5 + 0.3) \text{ m}$ sized septic tank. **Ans.]**

Year 1987 (Civil Services)

Q. 13. (a) (i) What are the main causes or sources of dampness in buildings? What are the defects caused in buildings due to dampness? (12)

(ii) Briefly list the several methods and materials in each method for damp proofing against the above causes. (8)

(b) Discuss the several sewer appurtenances for diverting part of the stream water flow away from sewers during severe storms. Draw illustrative sketches.

Q. 14. (a) (i) What are the effects of occupancy in an enclosed space? How do these effects come about? How does ventilation help in alleviation of these effects? How do these effects affect humans?

(ii) Indicate the number of air changes per hour recommended for the following occupancies:

(1) General offices, (2) Restaurants and canteens, (3) Lavatories (4) Assembly Halls, (5) Factories and Workshops, (6) Living rooms in residences, (7) Kitchens, (8) Cinema Halls. (10)

(b) (i) What is BOD in sewage and what is the process involved in satisfying sewage? (10)

(ii) If the two day BOD of a sample of sewage is 200 mg/litre at 25°C what will be its 5 days 30°C BOD? (10)

[Solution :

$$Y_t = L (1 - 10^{-K_D t})$$

Use $K_D = 0.1/\text{day}$, at 20°C

$$\text{or } K_{D(25^\circ\text{C})} = K_{D(20^\circ\text{C})} [1.047]^{T-20}$$

$$\therefore K_{D(25^\circ\text{C})} = 0.1 [1.047]^5 = 0.128$$

$$\text{and } K_{D(30^\circ\text{C})} = 0.1 [1.047]^{10} = 0.158$$

$$Y_2 \text{ at } 25^\circ = L [1 - (10)^{-0.128 \times 2}]$$

$$\text{or } 200 = L \left[1 - \frac{1}{(10)^{0.256}} \right]$$

$$\text{or } L = 454.3 \text{ mg/l}$$

$$Y_3 \text{ at } 30^\circ = 454.3 [1 - (10)^{-0.158 \times 5}]$$

$$= 380.6 \text{ mg/l. Ans.}]$$

Q. 15. (b) (i) Discuss the stages of decomposition of sewage and indicate the several units for sewage treatment through each stage. (12)

(ii) Draw the figure of the Nitrogen cycle. (No explanations need be given). (8)

Q. 16. (b) Explain the several methods of sludge disposal indicating process, end use, and any demerits involved. (15)

(c) What are the primary considerations in the design of building drainage? (15)

(d) Draw the sketch of a two pipe system of house drainage, showing the appurtenances also. (12)

Year 1988 (Civil Services)

Q. 13. (c) Compare the conservancy and the water carriage systems of sanitation indicating the merits and demerits of each. (20)

(d) State the characteristics of a good ventilating system. Describe the natural system of ventilation. (20)

Q. 14. (a) Write explanatory notes on the causes of dampness in buildings indicating the defects caused in buildings. (20)

Q. 15. (a) State the merits and demerits of the separate system and the combined system of sewerage. (20)

(b) Explain the necessity of providing manhole in a sewer line. Draw a neat sketch of the sectional elevation and the sectional plan of a manhole. (20)

Q. 16. (a) Design the section of a combined circular sewer from the data given below:

Population of the locality is 50,000.

Maximum permissible velocity is 3.2 m/sec.

Time of entry is 5 minutes.

Time of flow is 20 minutes.

Rate of water supply is 270 litres/day/capita.

Impermeability factor is 0.45.

Usual values may be assumed for additional data.

[Hint:

Please follow exactly similar solved example 4.12 and determine:

Maximum sewage discharge = 0.375 cumecs; and

$p_c = 7.06 \text{ cm/hr}$ (assuming $p_o = 5 \text{ cm/hr}$)

Maximum drainage discharge (i.e. storm water flow)

$$= \frac{1}{36} \times 7.06 \times 0.45 \times 150 = 13.24 \text{ cumecs.}$$

Combined sewage discharge = 13.615 cumecs

$$\text{Area of sewer reqd.} = \frac{13.61}{3.2} = 4.25 \text{ m}^2$$

$$\text{Dia of sewer} = D = \sqrt{4.25 \times \frac{4}{\pi}} = 2.32 \text{ m dia. Ans.}$$

If such a large dia sewer is not easily available, then we may use 2 No. sewer pipes, laid side by side, each having a dia

$$= \sqrt{\frac{4.25}{2} \times \frac{4}{\pi}} = 1.65 \text{ m, Say 1.7 m. Ans.}$$

Year 1989 (Civil Services)

Q. 13. (b) (i) List the approximate reasonable range of values of BOD removal, suspended solids removal, and bacterial load removal, each as a percentage of the original, in the following sewage treatment units or processes: Grit chambers; Plain sedimentation tank; Chemical flocculation and Sedimentation; Oxidation pond. (12)

Q. 13. (c) With the help of neat sketches, describe briefly (i) two pipe system; and (ii) one pipe system, of plumbing for drainage in multi-storey building. (20)

Q. 14. (b) A wastewater treatment plant disposes of its effluent into a stream at a point A. Characteristics of the stream at a location fairly upstream of A and of the effluent are as below:

Item	Units	Effluent	Stream
Flow	m ³ /s	0.20	0.60
Dissolved oxygen	mg/l	2.00	8.0
Temperature	°C	2.6	22
BOD ₅ at 20°C	mg/l	40	3

Assume that the deoxygenation constant k_1 at 20°C (base e) = 0.20 d⁻¹ and the re-aeration constant k_2 at 20°C (base e) = 0.40 d⁻¹ for the mixture. Equilibrium concentration of dissolved oxygen C_s for the fresh water is as follows:

Temperature °C	18	20	22	23	24	25	26
C_s (mg/l)	9.54	9.17	8.99	8.83	8.63	8.38	8.22

The velocity of the stream downstream of the point A is 0.2 m/s. Determine the critical oxygen deficit and its location.

Use temperature coefficients of 1.04 for k_1 and 1.02 for k_2 . (30)

[Note. Please refer solved example 8.9.]

Q. 15. (a) Describe with the aid of appropriate sketches the purpose, construction, and operation of trickling filters used in sewage treatment. (20)

Q. 15. (b) What are the common sources of radioactive waste products? Explain briefly the treatment and disposal methods of these wastes. (20)

Q. 15. (c) Describe the process of composting of refuse. Explain the different methods of composting adopted in India. (20)

Q. 16. (a) Describe briefly the possible environmental impact of thermal power plants. What is an Environmental Impact Statement (EIS)? List, with brief descriptions, the aspects that should be covered by a proper EIS of a thermal power plant. (20)

Q. 16. (b) What is the mechanism of waste treatment in an oxidation pond? Describe a typical oxidation pond suitable for use in a community of 3000 population. List the advantages and disadvantages of oxidation ponds in the Indian context. (20)

Year 1990 (Civil Services)

Q. 13. (i) What is BOD of sewage and how is the BOD of a sewage sample determined? (10)

(ii) The 5 day BOD of a sewage sample is determined to be 180 mg/l at 20°C. The K value is known to be 0.25 per day. What would be the 8 day BOD if the tests were run at 30°C? What is the value of ultimate BOD? (10)

[Hint: Please follow exactly similar solved example 7.9, and

determine, $Y_u = 252.4 \text{ mg/l}$; and $Y_{u, 30^\circ} = 241.7 \text{ mg/l}$. Ans.]

Q. 13. (d) (ii) Briefly describe the hydraulic testing of pipe sewers. (10)

Q. 14. (b) Write brief notes on:

(i) Flushing cistern

(ii) Traps.

Q. 14. (c) List the various methods of disposal of excreta in unsewered areas. Describe briefly the construction and operation of a septic tank. (20)

Q. 15. (a) Describe briefly the various methods adopted in final disposal of wastewater. (20)

- Q. 16. (b) Describe the various aspects involved in collection, sorting and disposal of solid wastes in an urban area. (20)
- Q. 16. (c) Describe the possible environmental impact of mining operation. (30)

[Hint : Please refer article 21.3.]

Year 1991 (Civil Services)

- Q. 13. (a) List the functional requirements of ventilation systems. Describe briefly the methods of achieving good ventilation in buildings through use of mechanical devices. (20)
- Q. 13. (b) Write short notes on : (20)
- Pumping of sewage,
 - Oxygen sag curve.
- Q. 14. (a) Discuss the possible environmental impact of a proposed coal based large size thermal power station in the neighbourhood of a metropolitan city. (30)
- Q. 15. (a) Explain the process of anaerobic digestion of sludge. Describe a conventional anaerobic sludge digester. (30)
- Q. 16. (a) What is the purpose of primary treatment of municipal wastes? Write a flow diagram of a typical primary treatment system and indicate the various units. (10)
- Q. 16. (b) Explain briefly the salient features and performance of primary sedimentation tanks used in wastewater treatment. (20)

Year 1992 (Civil Services)

- Q. 13. (a) Mention the three prime components of domestic solid waste management. How would you like to get the domestic solid waste transferred to the transfer system? Describe the methods of solid waste disposal by incineration. (20)
- Q. 13. (c) Discuss the merits and demerits of biological methods of sewage treatment. Briefly describe any one of these methods. (20)
- Q. 13. (d) What are the objectives of environmental impact assessment of a project? Describe how you would proceed to make such an assessment for a coal based thermal power project. (20)
- Q. 15. (a) Draw a flow diagram in schematic form of a waste water treatment plant consisting of secondary treatment by trickling filter, sludge digestion and disposal. Explain how the performance of the trickling filter is assessed. (30)
- Q. 15. (b) What are the common sources of radioactive waste products? Explain briefly the treatment and disposal methods of these wastes? (24)
- Q. 16. (a) Specify the qualities of material for a good sewer pipe. (15)
- (b) Draw a neat sketch of a drop manhole and indicate where it is used. (15)
- (c) How do you estimate the quantities of storm water runoff and sanitary waste water in order to design storm sewer and sanitary sewer, separately. (15)

Year 1993 (Civil Services)

- Q. 13 is compulsory.
- Q. 13. (a) (i) Classify air pollutants on the basis of their physical state. Write the units to express their concentrations. (10)
- (ii) Under low wind condition, thermal inversion frequently develops during evening hours especially in winter season. Explain this phenomenon and discuss its effect on dispersion of gaseous emissions. (8 + 12 = 20)
- Q. 13. (b) Discuss with neat sketches : (20)
- Crown corrosion in sewers.
- Q. 13. (c) Explain the mechanism of waste treatment in an oxidation pond. Describe a typical oxidation pond suitable for a community of 4000 population. (20)
- Q. 13. (d) Write short notes on the following : (5)
- Nitrogenous oxygen demand
 - Disposal of radioactive waste.
- Q. 14. (a) Discuss the advantages and limitations of Sanitary Land Fill method of solid waste disposal. (15)
- Q. 14. (b) A 25 cm diameter sewer with an invert slope of 1 in 400 is running full. Calculate the velocity and rate of flow in the sewer. Is it self-cleansing? Take $n = 0.015$. (15)

[Note : Please refer solved example 4.14.]

- Q. 14. (c) A treated wastewater is discharged at the rate of $1.5 \text{ m}^3/\text{sec}$ into a river of minimum flow $5 \text{ m}^3/\text{sec}$. The temperature of river flow and wastewater flow may be assumed as 25°C . The BOD removal rate constant K_1 is $0.12/\text{d}$ (base 10). The BOD_5 at 25°C of the wastewater is 200 mg/l , and that of the river water upstream of the wastewater outfall is 1 mg/l . The efficiency of wastewater treatment is 80%.

Evaluate the following :

- BOD_5 at 25°C if river water receives untreated wastewater.
- BOD_5 at 25°C if river water receives treated wastewater.
- Ultimate BOD of the river water after it receives treated wastewater. (30)

[Note : Please refer solved example 8.10.]

- Q. 16. (a) Explain why wasting of sludge is necessary in an activated sludge process. How would you calculate SVI and utilize it to determine the return sludge concentration and flow rate. (20)
- Q. 16. (b) Design a household septic tank including effluent disposal system for 40 users with a probable peak discharge of 60 litres/min. Provide a plan area of 0.92 m^2 for every 10 lpm of peak flow. Assume any missing data. Give a neat dimensioned sketch showing all details. (40)

Year 1994 (Civil Services)

- Q. 13 is compulsory.
- Q. 13. Answer any three sub divisions :
- Assuming that the surface on which the rain falls in a district is as follows...

20% of the area consists of roofs with runoff ratio as 0.90, 25% of the area consists of pavements for which the runoff ratio is 0.85, 50% of the area consists of lawns and gardens for which runoff ratio is 0.10, and the remaining 5% of the area is wooded for which the runoff ratio is 0.05. Determine the runoff coefficient.

If the total area of the district is 1.5 hectares and the maximum intensity is taken as 60.5 mm/hr, what is the total runoff for the district. (20)

[Hint: Please follow exactly similar solved example 3.1 and determine

$$K = 0.445; Q = 0.112 \text{ cumecs. Ans.}]$$

(b) Write short notes on:

(i) Population equivalent (ii) Sampling of sewage. (20)

(c) What is meant by 'Biological Oxygen Demand'? What does it indicate? Why does it become a special parameter in industrial waste effluent? Discuss a process to determine BOD. (20)

(d) What are the various treatment methods for solid wastes of a town? Describe any one in details. (20)

Q. 14. (b) With the aid of a schematic sketch, give a flow diagram of a wastewater treatment plant consisting of secondary treatment by trickling filter, sludge digestion and disposal. Can you assess the performance of the filter? If so, how? (30)

Q. 15. (a) What is anaerobic biological treatment? Describe the mechanism of anaerobic decomposition. Discuss, how has this been effectively used in the treatment of distillery effluent. (25)

(b) Design an oxidation pond for a colony of 2000. (20)

Q. 16. (a) Design a septic tank for a small colony of 200 persons with average daily sewage flow of 100 litres per head per day. Also design provision for disposal of septic tank effluent. Draw sketches with designed dimensions. Assume suitable data. (35)

(b) Sketch systems of wastewater plumbing used in buildings. What do you understand by self siphonage and induced siphonage? (25)

Year 1995 (Civil Services)

Question 13 is compulsory. Answer any three subdivisions.

Q. 13. (a) Define a perfect Riverain System. Discuss the concept of natural purification of streams. (30)

Q. 13. (c) What is Environmental Impact Assessment (EIA)? Describe how would you proceed to make such an assessment for a glass manufacturing unit. (20)

Q. 14. (a) Describe the fundamentals of anaerobic treatment of wastewater by clearly emphasising on Acid and Methane fermentation. Also discuss temperature dependence and composition of gases evolved during such (30)

Q. 14. (b) Define BOD equation. Also discuss significance of each parameter of the equation. If a 3 day 20°C BOD of sewage is 400 mg/l, find its 5 day 20°C BOD. Assume value of $k_{20} = 0.1/\text{day}$ (base e). (30)

[Hint:

Please refer article 7.4.9 and derive eqn. (7.16).

For solving the numerical question, use eqn. (7.14) and (7.16), and compute

$$K_{D(20^\circ)} \text{ on base } 10 = \frac{k_{20} \text{ on base } e}{2.3} = 0.434 k_{20}$$

$$= 0.434 \times 0.1 = 0.0434$$

Now, $Y_{3 \text{ at } 20^\circ} = 400 \text{ mg/l}; Y_{5 \text{ at } 20^\circ} = ?$

Using $Y_t = L [1 - (10)^{-K_D t}]$, we get

$$Y_{3 \text{ at } 20^\circ} = L [1 - (10)^{-K_D \times 3}]$$

$$\text{or } 400 \text{ mg/l} = L \left[1 - \frac{1}{(10)^{0.0434 \times 3}} \right]$$

$$\text{or } L = 1544.22 \text{ mg/l}$$

$$\text{Again } Y_{5 \text{ at } 20^\circ} = L [1 - (10)^{-K_D \times 5}]$$

$$= 1544.22 [1 - (10)^{-0.0434 \times 5}]$$

$$= 607.29 \text{ mg/l. Ans.}]$$

Q. 16. (a) What are septic and Imhoff tanks? Where are these used? How their effluent is disposed off? (20)

Q. 16. (b) Design a septic tank including effluent disposal system for a hostel having 50 students with probable peak discharge of 63 litres/min. Assume suitable data. Draw neat sketches and the design should conform to IS code. (40)

Year 1996 (Civil Services)

Question 13 is compulsory. Answer any three subdivisions.

Q. 13. (a) What type of ecosystem would you expect in a perfect riverain system? How does pollution adversely affect the system? (20)

Q. 13. (b) Draw a flow diagram of a sewage treatment plant for a medium sized town. (20)

Q. 13. (d) Enumerate the various systems adopted in plumbing of drainage work in a building. Sketch a partially ventilated single pipe system. (20)

Q. 14. (b) Enumerate the various causes of environmental degradation. Describe any two of them in details. (25)

[Hint:

Environmental degradation may be caused by: (i) air pollution; (ii) water pollution; (iii) land pollution and (iv) noise pollution.

Any two of them may be discussed here as desired in the Question.)

Q. 15. (b) Design a circular sewer for a town for the following data :

- Area of colony = 36 hectare
- Population = 8000
- Per capita water consumption = 170 l/day
- Critical rainfall design intensity = 4 cm/hour
- General available ground slope = 1 in 900
- Coefficient of runoff for the area = 0.55
- Assume any other data, if required.

(Note. Please refer solved question 4.15. This question was set from this book.)

Q. 16. (a) A septic tank including effluent disposal system has to be provided for a hostel of 250 inmates. Design a suitable system adopting norms as provided by I.S. code. Also give a dimensional schematic sketch. Assume average daily sewage flow as 120 litres/capita/day, and other needed data suitably. (35)

Q. 16. (b) (i) State the points of contrast in the design and working of settling tank used in water and wastewater treatment.

(ii) Sewage system is designed for maximum and minimum flows ; whereas the treatment units for average flow. Give reasons. (10)

Year 1997 (Civil Services)

Q. 13. (d) Why is it necessary to provide ventilation in buildings ? What arrangements are usually made to obtain ventilation by natural means ? Illustrate your answer by suitable sketches and explain the merits and demerits of the different arrangements. (20)

Q. 14. (a) The 5 day BOD at 20°C of waste water is found to be 250 mg/l. Taking $k_1 = 0.15 \text{ day}^{-1}$, find the ultimate BOD. Also determine the 8 day BOD at 15°C. Also discuss the parameters of pollution and ecological balance of large streams. (30)

[Hint : Please follow exactly similar solved example 7.9 and determine

$$Y_{5(20^\circ)} = 250 \text{ mg/l}, \quad k_1 = K_{D(20^\circ)} = 0.15/\text{day}$$

$$Y_u = L = ?, \quad Y_{8(15^\circ)} = ?$$

Using $Y_t = L [1 - (10)^{-K_D \cdot t}]$, we get

$$Y_{5(20^\circ)} = L [1 - (10)^{-0.15 \times 5}] = 250 \text{ mg/l}$$

or $L = 340 \text{ mg/l}$. Ans.

Now, we have to find $K_{D(15^\circ)}$

$$K_{D(T)} = K_{D(20^\circ)} [1.047]^{T-20^\circ}$$

$$\text{Now, } Y_{8(15^\circ)} = 340 [1 - (10)^{-0.119 \times 8}]$$

$$= 302 \text{ mg/l. Ans.}]$$

(b) Explain the significance of the following tests as carried out at the sewage treatment and disposal works.

- (i) Suspended and total solids
- (ii) BOD and COD
- (iii) Chlorides and Residual chlorine. (30)

Q. 16. (a) Sketch and describe the construction and working of a septic tank. (25)

(b) Design the absorption field system for the disposal of septic tank effluent for a population of 100 persons with sewage flow rate of 135 lpcd. The percolation rate for the percolation test carried out at the site of the absorption field may be taken as 3 minutes. (35)

[Note : Please refer solved example 9.36.]

Year 1998 (Civil Services)

Question 13 is compulsory

Q. 13. (c) What is BOD ? Deduce an expression for BOD with time. State the factors on which the deoxygenation constant (k) depends. (20)

Q. 13. (d) What is meant by 'recycling of waste water' ? When is it practised ? State the principle involved and possible uses of recycled waste water. (20)

Q. 14. (b) Design the section of a combined circular sewer from the following data :

- Area to be served = 120 ha
- Population of the locality = 35,000
- Maximum permissible velocity = 3.0 m/s
- Time of entry = 5 min.
- Time of flow = 25 min.
- Rate of water supply = 180 lpcd
- Impermeability factor = 0.5
- Assume suitably any other data, if necessary. (20)

[Note. Follow exactly similar solved Example 4.12. Assume design value of p_0 ; i.e., one hour rainfall at the design rain frequency of 2 to 5 yrs = 5 cm/hr (say) ; since it is not given in the question, but is required to compute storm water or drainage discharge by rational formula.

Finally, compute dia of sewer = 2.2 m. Ans.]

Q. 14. (c) Write short notes on :

- (i) Sources of air pollution, and
- (ii) Rural sanitation. (20)

Q. 15. (c) What is meant by 'self purification of streams'? Describe different factors which affect self-purification of streams. (20)

Q. 16. (c) Write short notes on :

- Ecological balance ; and
- Environmental Impact Assessment.

Year 1999 (Civil Services)

Q. 13 is compulsory.

Q. 13. (b) Why is a grit chamber designed for a constant velocity? Draw a typical cross-section of a grit chamber provided in a sewage treatment plant with large variations in the flow of sewage. (20)

Q. 13. (c) Briefly describe a common method of aeration in activated sludge process. What is meant by sludge bulking? What are the probable causes of sludge bulking? (20)

Q. 14. (c) What are conservancy and water carriage systems of waste disposal? Sketch and describe bore-hole and pit latrines. Briefly discuss problems of rural sanitation.

Q. 15. (b) (i) Define BOD and COD. Which one of these is a better parameter for determining the strength of sewage? Why?

(ii) The 5 days 20°C BOD of domestic sewage is 250 mg/l . Estimate the three day BOD at 20°C . The reaction constant $k = 0.1$. (20)

[Solution : $Y_{5(20^{\circ})} = 250 \text{ mg/l}$

$$Y_{3(20^{\circ}\text{C})} = ?$$

$$k = K_D = 0.1/\text{day}$$

Using $Y_t = L [1 - (10)^{-K_D \cdot t}]$, we get

$$250 = L [1 - (10)^{-0.1 \times 5}] = L \left[1 - \frac{1}{(10)^{0.5}} \right]$$

$$= 0.6837 L$$

$$\text{or } L = 365.62 \text{ mg/l}$$

$$\text{Now, } Y_{3(20^{\circ})} = L [1 - (10)^{-0.1 \times 3}]$$

$$= 365.62 \left[1 - \frac{1}{(10)^{0.3}} \right] = 182.38$$

$$\text{or } Y_{3(20^{\circ})} = 182.38 \text{ mg/l. Ans.}$$

Q. 15. (c) Why is digestion of sludge necessary? Briefly describe the principles of anaerobic digestion of sludge. Compare it with aerobic digestion. (20)

Q. 16. (b) What is meant by ecological balance? How is it maintained in a river system? Briefly describe suitable methods for the disposal of radioactive wastes. (20)

Q. 16. (c) What is the difference between a sedimentation tank and a septic tank? Discuss why a septic tank is not considered an efficient method of sewage treatment. How will you dispose off the effluent from a septic tank? (20)

Year 2000 (Civil Services)

(Section B on Water Resources and Env. Engg.)

Question 5 is compulsory for answering five parts.

Q. 5. (d) Define sludge volume index. Indicate the range of the index for Indian conditions in an aerated tank for treating domestic sewage. (12)

Q. 5. (e) Briefly state essential features of Air Pollution Control Act. (12)

Q. 6. (b) Draw flow diagram of an activated sludge plant for the treatment of sewage. Discuss the role of return sludge. Compare a conventional activated sludge plant with the extended aeration plant. (20)

Q. 7. (b) Calculate the dimensions of an oxidation pond and determine the detention time for treating sewage from a residential colony in the Southern State with a population of 10000 persons. Assume that the sewage to be treated is at the rate of 135 lpcd ; the 5 day BOD of sewage is 300 ppm , and specific gravity of organic load is one. (20)

[Note : Pl. follow similar Solved Example 9.31.]

Q. 8. (b) Discuss the principles of composting. Give a layout of a compost plant. Explain briefly the aspects of feasibility in deciding upon composting. (20)

Year 2001 (Civil Services)

(Section B on Water Resources and Env. Engg.)

Q. 5 is compulsory for answering five parts.

Q. 5. (e) These days a lot is said about air pollution and water pollution. What are the acts by law by Government of India for prevention and control of water and air pollution? Mention in brief the provisions therein. (12)

Q. 5. (f) For the control of velocity of flow of sewage in grit chamber, in sewage treatment plant, discuss the cross-sections used for the channel of the chamber. How do these channels function? Give the hydraulic aspect of the flow in the grit chamber. (12)

Q. 7. (b) What is sludge? What is sludge volume index? How is it useful in treatment and disposal of sludge for domestic waste from an Indian city? (20)

Q. 8. (a) What do you understand by 'conventional' biological treatment methods for sewage and waste waters? Discuss the principle involved in these methods. In Indian conditions, which methods are more suitable and why? (20)

Q. 8. (b) What is meant by self-cleansing velocity in sewer pipes? What is the purpose of insisting on self-cleansing velocity while designing sewers? Discuss sewer design. (20)

Year 2002 (Civil Services)

(Section B on Water Resources and Env. Engg.)

Q. 5 is compulsory for answering five parts.

Q. 5. (d) Describe a commonly used form of septic tank. Explain its operating principle. (12)

Q. 6. (a) With the help of a neat sketch describe the characteristics of oxygen sag curve of a stream. What are the limitations of the oxygen sag curve obtained by basic mathematical model? (20)

Q. 8. (b) Describe the operation principles and specific features of (i) simple grit chamber, and (ii) aerated grit chamber. (20)

A grit chamber is to be designed for removal of particles having settling velocity in the range of 0.018 m/s to 0.022 m/s. A flow through velocity of 0.3 m/s is to be maintained by a proportional weir at the end of the chamber. Determine the dimensions of the grit chamber for a maximum wastewater flow of 10,000 m³/day. (Assume appropriate data, if necessary, as per standard design practice). (20)

[Hint: Pl. refer Solved Example 9.2(a).]

Year 2003 (Civil Services)

Q. 7. (c) (i) Outline the major legislative measures brought about in India for the management of environment. (10)

(ii) Outline the salient functions of the Apex Body in the country related to prevention and control of water pollution (10)

[Hint: Apex body is Central Board for Control of Water and Air Pollution.]

Q. 8. (a) (i) List the various effects on the environment emerging out from an irrigation (water resources) project. (10)

(b) A primary sedimentation sludge has a moisture content of 95% and 65% of the dry solids are volatile. Assuming the specific gravity of the volatile solids as 1.00 and that of fixed solids as 2.2, find (i) the specific gravity of the total dry solids; and (ii) the specific gravity of the sludge. (20)

[Solution: Assume 100 kg of sludge

m.c. of sludge = 95%

∴ Wt. of total sludge solids = 5 kg

Wt. of water in sludge = 95 kg

5 kg of total solids contain 65% of volatile solids

Wt. of volatile solids = 65% × 5 kg = 3.25 kg

∴ Wt. of fixed solids = 5 - 3.25 = 1.75 kg

Sp. gr. of volatile solids = 1.00

Sp. gr. of fixed solids = 2.2

∴ Sp. gr. of total solids

$$= \frac{3.25 \times 1.00 + 1.75 \times 2.2}{5} = 1.35 \quad \text{Ans.}$$

Sp. gr. of wet sludge

$$= \frac{95 \text{ kg} \times \text{sp. gr. of water} + 5 \text{ kg} \times \text{sp. gr. total solids}}{100 \text{ kg}}$$

$$= \frac{95 \times 1.00 + 5 \times 1.35}{100} = 1.0175 \quad \text{Ans.}$$

Q. 8. (c) (i) Briefly enumerate the reasons due to which Indian rivers continue to remain polluted in the context of special situations prevailing in India. (10)

(ii) Briefly outline a fool proof strategy through which Indian rivers can be kept pollution free. (10)

[Hint: (i) The entire sewage and industrial wastes must be pre-treated up to the specified standards before its disposal into rivers.
(ii) Flood plains of rivers should not be used for agricultural activities and human settlements.
(iii) Flood plain-zoning bills for rivers must be enacted and strictly implemented.]

Year 2004 (Civil Services)

Q. 5. (f) Describe with a sketch the storm water relief weir for a sewerage system. (12)

Q. 7. (b) (i) What are oxidation ponds? What are their merits and demerits? (10)

(b)(ii) Design an oxidation pond for a colony of 2000 persons, where from the sewage flow is 150 lpd/head with a 5-day BOD of 300 ppm, providing a BOD loading of 200 kg/day/ha. (10)

[Hint: Pl. follow similar Solved Example 9.31. Here organic loading rate for pond is given as 200 kg/d/ha, while this value was assumed in the solved example.]

Q. 7. (c) (i) Find the requisite size of a combined circular sewer serving an area of 100 ha with a population of 60,000 persons and supplied with water at 250 lpd/head. Take time of entry and time of flow of rain water to be 5 and 15 minutes, respectively. Run off coefficient in rational formula is 0.45. Permissible velocity in the sewer is 3 m/sec. (10)

[Hint: Pl. refer exactly similar solved example 4.12. However, the maximum hourly rainfall for the area for the design frequency

has not been given, which will have to be assumed at a value of about 5.0 cm/hr for a place like Delhi for 5 yr. frequency.]

Q. 7. (c) (ii) What do you understand by "Limiting Velocity" in sewer design? State the methods by which such a velocity is maintained. (10)

Q. 8. (b) (ii) What are the sources of radio-active wastes and the localities where they are incident generally? What methods can be used for handling them to avert hazards to the public? What are the chance factors in the failure of such preventive handling and disposal methods? (10)

Q. 8. (c) Describe the practices adopted in India for Industrial Zoning to control air pollution at the planning stage? Within the industrial units individually, what are the methods to be enforced for control of industrial pollution? (20)

Year 2005 (Civil Services)

Q. 5. (f) State the salient points pertinent to the design of sewage treatment system for an average township. (12)

Q. 7. (b) (i) Explain the concept and the role of self-cleansing velocity of sewage flow. (5)

(ii) Determine the capacity of a combined sewer and the minimum velocity of flow required, given the following data: (15)

Area of locality served	: 50 sq. km
Population of the locality	: 200 heads / ha
Average rate of sewage flow	: 300 lpcd
Maximum rate of flow	: 1.5 times of the average
Runoff from rainfall	: 15 mm/24 hr
Diameter of sand particles carried by the flow	: 1 mm
Specific gravity of sand	: 2.65
For solids in suspension	: $k = 0.04$
Friction factor	: 0.012.

[Solution: Follow exactly similar solved example 4.4, and compute as:

$$\begin{aligned}\text{Population} &= 200 \text{ heads/ha} = 200 \times (5000) = 10^6 \\ \text{Average sewage flow} &= 300 \text{ l/cd} = 300 \times (200 \times 5000) \text{ l/d} \\ &= \frac{300 \times 10^6}{10^3 \times 24 \times 60 \times 60} \text{ m}^3/\text{s} = 3.47 \text{ m}^3/\text{s}\end{aligned}$$

$$\begin{aligned}\text{Max. sewage flow} &= 1.5 \times 3.47 = 5.21 \text{ m}^3/\text{s} \\ \text{Storm water flow}\end{aligned}$$

$$(5.21 + 0.68) \times \left(\frac{15}{100}\right) \times \left(\frac{1}{100}\right) = 8.68 \text{ m}^3/\text{s}$$

$$\begin{aligned}\text{Total max. flow of the combined sewer} \\ &= 5.21 + 8.68 = 13.89 \text{ m}^3/\text{s}.\end{aligned}$$

$$\begin{aligned}\text{Hence, the capacity of the sewer} \\ &= 13.89 \text{ m}^3/\text{s. Ans.}\end{aligned}$$

Minimum velocity of flow reqd. to transport the given size and type of sand; i.e. self-cleansing velocity is given by Eq. (4.10) as:

$$V_s = \sqrt{\frac{8k}{f'}} (G - 1) \cdot g d'$$

$$\text{Here } f' = 0.012$$

$$k = 0.04$$

$$G = 2.65$$

$$d' = \text{dia. of grain} = 1 \text{ mm} = \frac{1}{10 \times 100} \text{ m}$$

$$\begin{aligned}\therefore V_s &= \sqrt{\frac{8 \times 0.04}{0.012} (2.65 - 1) \times 9.81 \times \frac{1}{10 \times 100}} \\ &= 0.657 \text{ m/s say } 0.66 \text{ m/s. Ans.}\end{aligned}$$

Q. 7. (c) Under what circumstances is land treatment method of sewage disposal suitable? Explain the term "Sewage sickness of land" and discuss how this can be forestalled. (20)

Q. 8. (c) List the sources of solid waste in urban areas. Discuss, together with suitability, the following methods of solid waste disposal: (20)

- Dumping into sea
- Sanitary landfills
- Incineration
- Composting.

Year 2006 (Civil Services)

Q. 5. (f) Define air pollution, mention effects of topography and meteorology on dispersion of air pollutants. (12)

Q. 6. (c) (i) Why is it preferred to digest sludge anaerobically in a conventional sewage treatment plant? (10)

(ii) Design a septic tank for a colony of 150 persons with sewage flow of 135 l.p.c.d. (10)

Q. 7. (b) (i) What is meant by 'symbiosis' as applied to an oxidation pond? Which micro-organisms are responsible for the symbiotic relationship? How does the purification take place in a facultative oxidation pond? (10)

Q. 7. (c) (i) Enumerate various modifications of Conventional Activated Sludge Process and describe a process suitable to treat wastewater having high CIN ratio. (10)

(ii) Name the methods of solid waste disposal. Describe pyrolysis in detail. (10)

Q. 8. (b) (ii) Explain the following :

- (1) Greenhouse effect
- (2) Photochemical smog.

Q. 8. (c) Write notes on :

- (i) Environmental Impact Assessment
- (ii) Recirculation in Trickling Filter.

Year 2007 (Civil Services)

Q. 5. (e) What is an 'oxidation pond'? Briefly explain the purifying action of an oxidation pond with the help of a diagram. (12)

Q. 5. (f) Briefly mention the functional elements of activities involved in the solid waste management from generation to disposal viewpoint. (12)

Q. 7. (b) Write briefly on the trench method of landfilling with suitable diagram for solid waste disposal. (20)

Q. 8. (b) (ii) The 5-day BOD of a waste water has been found to be 150 mg/litre at 20°C, and the reaction constant K is given as 0.20 per day. Determine the 8-day BOD value if the tests were run at 15°C. (10)

[Solution : Follow similar Solved example 7.9, and compute as follows :

At 20°C

$$K_D = 0.434 K = 0.434 \times 0.20 = 0.0868$$

$$\text{BOD}_5 = 150 \text{ mg/l}$$

$$Y_t = [1 - (10)^{-K_D \cdot t}]$$

$$\text{or } Y_5 = L [1 - (10)^{-K_D \cdot 5}] \text{ where } Y_5 = \text{BOD}_5$$

$$\text{or } 150 = L [1 - (10)^{-5 \times 0.0868}]$$

$$\text{or } 150 = L \left[1 - \frac{1}{(10)^{0.434}} \right] = L \left[1 - \frac{1}{2.718} \right]$$

$$\text{or } L = \frac{150}{0.6319} = 237.9 \text{ mg/l}$$

Now, find K_D value at 15°C

$$K_{D(15^\circ)} = K_{D(20^\circ)} [1.047]^{T-20}$$

$$\text{or } K_{D(15^\circ)} = 0.0868 [1.047]^{-5}$$

$$= 0.0868 \left[\frac{1}{(1.047)^5} \right] = 0.069$$

Now, to determine 8 days BOD at 15°C (Y_8), again use

$$Y_t = L [1 - (10)^{-K_D \cdot t}]$$

where Y_t is BOD of t days

$$\begin{aligned} \text{or } Y_8 &= L [1 - (10)^{-K_D \cdot 8}] \\ &= 237.9 [1 - (10)^{-0.069 \times 8}] \\ &= 237.9 \left[1 - \frac{1}{(10)^{0.552}} \right] \\ &= 171.16 \text{ mg/l. Ans. } \end{aligned}$$

Q. 8. (c) Briefly explain the principles governing the design of plumbing system in a building for waste water disposal. (10)

Year 2008 (Civil Services)

Q. 5. (f) (i) Briefly discuss the implications of temperature variation on anaerobic digestion of sludge. Briefly discuss the merits and demerits of the aerobic digestion of sludge. (8)

(ii) Briefly enumerate the various steps required for the construction of a sewer line. (8)

Q. 7. (c) (i) Determine the diameter of a storm sewer based on the following data :

(a) Sewer length = 1 km to be laid at a slope of 0.001.

(b) Catchment area of the sewer = 50 hectares of which the coefficient of runoff is 0.9, 0.80 and 0.20 for 30% (roof area), 20% (pavements) and 50% (open land) of the area, respectively.

(c) Velocity of full flow = 1.5 m/sec

(d) Manning's $n = 0.013$

(e) Time of entry = 3 min.

(f) Intensity of rainfall in cm/hr = $\frac{75}{5 + \text{Time of concentration in minutes}}$ (15)

[Solution :

$$K = \frac{K_1 A_1 + K_2 A_2 + K_3 A_3}{A_1 + A_2 + A_3}$$

$$= \frac{0.9 \times (30\% \times 50 \text{ ha}) + 0.8(20\% \times 50 \text{ ha}) + 0.20(50\% \times 50 \text{ ha})}{50 \text{ ha}}$$

$$\text{or } K = \frac{13.5 + 8.0 + 5.0}{50} = 0.27 + 0.16 + 0.10 = 0.53$$

$$\text{or } K = 0.27 + 0.16 + 0.10 = 0.53$$

$$\text{Now, } p_c = \frac{75}{5 + T_c (\text{min.})}$$

$$\text{where } T_c = T_i + T_f$$

$$\text{where } T_i = 3 \text{ min}$$

$$T_f = \frac{1000 \text{ m}}{1.5 \text{ m/s}} = \frac{1000}{1.5}$$

$$= \frac{1000}{1.5 \times 60} \text{ min}$$

$$= \frac{1000}{90} = 11.11 \text{ min.}$$

$$\therefore T_r = 3 + 11.11 = 14.11 \text{ min}$$

$$\therefore p_r = \frac{75}{5 + 14.11} = \frac{75}{19.11} = 3.92 \text{ cm/hr}$$

$$\text{Now, } Q_p = \frac{1}{36} \times K \cdot p_r \cdot A$$

$$\text{where } A = 50 \text{ ha, } p_r = 3.92 \text{ cm/hr, } K = 0.53$$

$$= \frac{1}{36} \times 0.53 \times 3.92 \times 50 = 2.889 \text{ m}^3/\text{s}$$

$$\text{Now, } Q = \frac{1}{n} A R^{2/3} \sqrt{S}$$

$$2.889 = \frac{1}{0.013} \times \left(\frac{\pi}{4} \cdot D^2 \right) \left(\frac{D}{4} \right)^{2/3} \cdot \sqrt{0.001}$$

$$\text{or } \frac{2.889 \times 0.013 \times 4 \times (4)^{2/3}}{\sqrt{0.001}} = D^2 \cdot D^{2/3} = D^{8/3}$$

$$\text{or } 11.97 = D^{8/3}$$

$$\text{or } D = (11.97)^{3/8} = (11.97)^{0.375} = 2.54 \text{ m. Ans.}$$

Q. 8. (b) (i) Taking W and W_s as the weight of water and dry solids respectively, derive an expression for the specific gravity (S) of sludge if S , represent the specific gravity of the dry solids present in the sludge, and p represents the percentage of moisture (water) (and $W = 1$). (5)

[Solution: If p is the percentage of water in the sludge, then $(100 - p)$ kg of solids will make = 100 kg of sludge.

$\therefore W_s$ kg of solids will make

$$= \frac{100 W_s}{(100 - p)} \text{ kg of sludge}$$

If S is the sp. gravity of sludge, then its

Unit wt. $\gamma_s = S \cdot \gamma_w$ (where γ_w = unit wt. of water)

$$\therefore \text{Vol. of } \frac{100 W_s}{(100 - p)} \text{ kg of sludge}$$

$$= \frac{100 W_s \times 1}{(100 - p) (S \cdot \gamma_w)}$$

But vol. of sludge = Vol. of dry solids + Vol. of water

$$= \frac{W_s}{\gamma_w \cdot S} + \frac{W}{\gamma_w} = \frac{1}{\gamma_w} \left[\frac{W_s}{S} + W \right]$$

Equating (i) and (ii), we get

$$\frac{100 W_s}{(100 - p) \cdot S \cdot \gamma_w} = \frac{1}{\gamma_w} \left[\frac{W_s + S_s \cdot W}{S_s} \right]$$

$$\text{or } \frac{100 W_s}{(100 - p) \cdot S} = \left[\frac{W_s + S_s \cdot W}{S_s} \right]$$

$$\text{or } S = \frac{100 W_s}{(100 - p)} \times \frac{S_s}{(W_s + S_s \cdot W)}$$

When $W = 1$, then

$$S = \frac{100 W_s \cdot S_s}{(100 - p) (W_s + S_s)} \text{ Ans.}$$

Q. 8. (b) (ii) Discuss the significance/implications of the size (coarse, medium, fine) of screens employed in sewage treatment, keeping regard to the prevailing Indian situations. (5)

(iii) Draw a line diagram of an Activated Sludge Process (ASP) and briefly describe the purpose of each unit employed in the process. (10)

Q. 8. (c) (i) Discuss the merits and elements of the various strategies for the collection and disposal of solid wastes. (10)

(ii) Discuss the ill effects of air pollution on (i) vegetation and (ii) animals. (10)

Year 2009 (Civil Services)

Q. 5. (e) How is the dissolved oxygen sag curve interpreted to indicate the critical point or the point of minimum D.O.? (12)

Q. 5. (f) What do you mean by hydraulically equivalent section? What are the parameters of which the cross-section of sewer would depend upon? (12)

Q. 6. (c) Explain the term BOD. Derive the equation for BOD relation.

Q. 7. (b) What are the various functional elements of a solid waste management system? Describe briefly the significance of each functional element. (20)

Q. 7. (c) Design a septic tank for a colony of 200 persons with daily sewage flow of 135 litres per person per day. Assume a detention period of 24 hours. Draw a neat sketch of the septic tank so designed. (20)

Q. 8. (a) Determine using the 'rational formula' with runoff co-efficient equal to 0.80, the peak storm runoff to be carried out by the underground drainage pipeline AB for the drainage basin area of 0.2 ha shown in the given figure (Fig. 27.2). (20)

Take the length of pipeline as 100 m and the level difference between A and B as 0.5 m. Assume initially a pipe diameter of 250

mm. Consider Darcy-Weisbach friction factor $f = 0.015$. The rainfall duration and rainfall intensity is furnished in tabular form below. Consider time of entry at end A as 2 min.

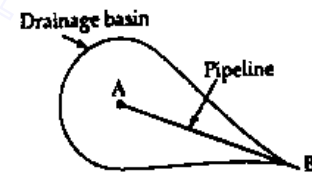


Fig. 27.2

Check whether the pipe size is adequate or not.

Duration (mins)	Rainfall intensity (mm/hr)
2.0	122
2.5	108
3.0	97
3.5	89
4.0	82
4.5	77

[Solution : $K = 0.80$, $A = 0.2$ ha, $L = 100$ m
 $H_L = 0.5$ m, $D = 250$ mm = 25 cm = 0.25 m
 $f = 0.015$
 $H_L = \frac{f \cdot LV^2}{2gD}$
or $0.5 \text{ m} = \frac{0.015 \times 100 \times V^2}{2 \times 9.81 \times 0.25}$
or $V = 1.279$ m/s.
Time of flow = $T_f = \frac{\text{Length of pipe}}{\text{Vel. of flow}} = \frac{100 \text{ m}}{1.279 \text{ m/s}}$
 $= 78.21 \text{ sec} = 1.3 \text{ min.}$
 $T_c = T_1 + T_f = 2 \text{ min.} + 1.3 \text{ min.} = 3.3 \text{ min.}$

Rainfall intensity (as per given table) :

For $T_1 = 3.0$ min. = 97 mm/hr

and for $T_2 = 3.5$ min. = 89 mm/hr

Interpolating, we get, p_c for T_c of 3.3 min.

$$= \left[97 - \frac{97 - 89}{0.5} \times 0.3 \right] = 92.2 \text{ mm/h} = 9.22 \text{ cm/h}$$

Now, $Q_p = \frac{1}{36} K p_c \cdot A$
 $= \left[\frac{1}{36} \times 0.80 \times 9.22 \times 0.2 \right] = 0.041 \text{ m}^3/\text{s}$

The capacity of the 0.25 m dia pipe

$$= V \cdot A = 1.279 \times \left(\frac{\pi}{4} \times 0.25^2 \right) = 0.062 \text{ m}^3/\text{s}$$

Since, capacity of pipe ($0.062 \text{ m}^3/\text{s}$) is more than the discharge ($0.041 \text{ m}^3/\text{s}$), the pipe dia. is adequate. Ans.]

Conventional Questions of the Engineering Services Exams for the Past Years

Year 1979 (Engg. Services)

Q. 6. (a) What are the factors affecting self purification of polluted streams ? What measures would you recommend to control stream pollution in India ?

(17)

Q. 7. (a) Explain briefly the functioning of a 'septic tank'.

(16)

Year 1981 (Engg. Services)

Q. 3. Stabilisation ponds for a town of 3000 population are provided to operate in series. The larger cell has an area of $60,000 \text{ m}^2$, and the smaller one $30,000 \text{ m}^2$. The average daily waste flow is $900 \text{ m}^3/\text{day}$ containing 200 kg of BOD ($= 222 \text{ mg/l}$).

(i) For series operation, calculate the BOD loadings based on both the total pond area and the larger cell only. (16)

(ii) Estimate the number days of winter storage available between 0.6 m and 1.5 m water levels assuming an evaporation and seepage loss of 2.5 mm of water per day. (18)

(iii) Draw a neat sketch plan of stabilization pond indicating the two cells, inlet and outlet positions. (6)

[Note : Pl. refer solved example 9.32.]

Q. 8. Using Rational method, rainfall intensity duration curves (Diagram I) and the data given on diagram II, compute the diameter of the outfall sewer. The length of lines, drainage areas, and inlet times are marked on diagram II itself.

Assume :

(i) Runoff coefficient for the entire area = 0.30 .

(ii) Velocity of flow in sewers flowing full = 0.75 m/sec .

(iii) 5 years average frequency curve may be used (Diagram II).

(iv) Table 1 gives the hydraulic elements for circular pipes flowing full.

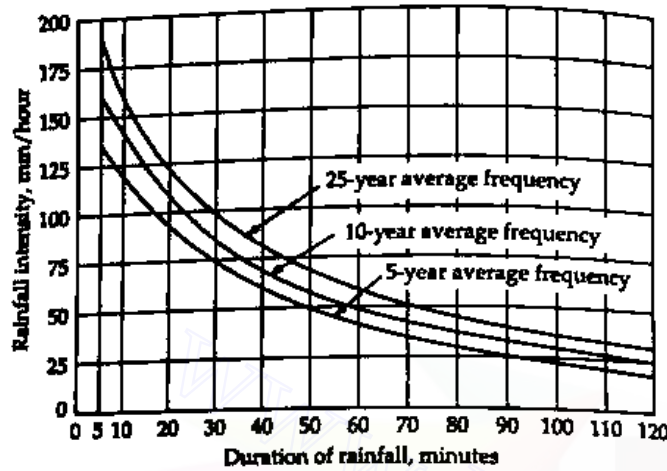


Diagram I (given)

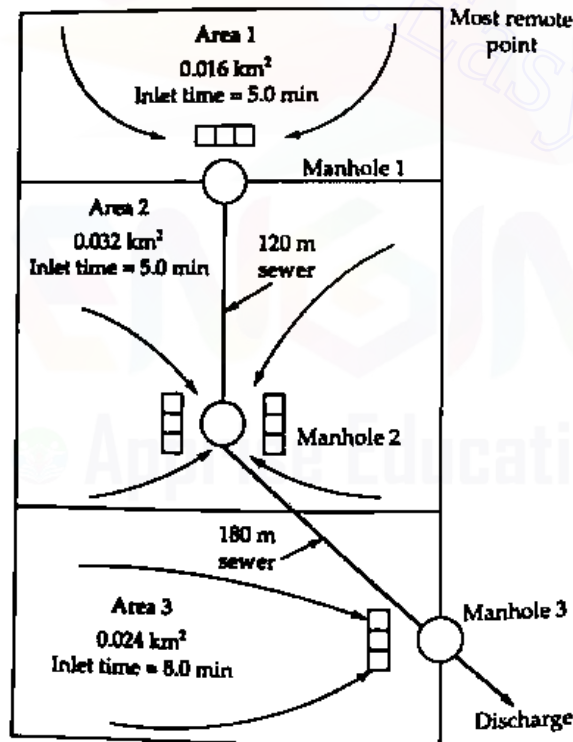


Diagram II (given)

Fig. 28.1

Table 1. Hydraulic Elements for a Circular Pipe Flowing Full

Quantity of flow l/m	Dia of pipe mm	Slope of pipe m/m	Velocity m/sec
400	450	0.025	2.7
600	625	0.020	2.8
690	1050	0.00065	0.75
1600	1350	0.001	1.55
2000	1450	0.001	1.20

(40)

[Note : Pl. refer solved example 4.13.]

Year 1982 (Engg. Services)

Q. 7. (a) How do Imhoff tanks differ from septic tanks in principle of operation ? (6)

(b) Mention two disadvantages of Imhoff tanks. (4)

Year 1983 (Engg. Services)

Q. 7. (a) With the aid of sketches, describe the principles involved in the design and construction of (i) Grit Chambers ; and (ii) Sludge digesters.

Year 1984 (Engg. Services)

Q. 6. (a) Compare and contrast Imhoff tanks with septic tanks in their scopes and functions. (16)

(c) Write short note on :

(ii) BOD. (6)

Year 1985 (Engg. Services)

Q. 5. (b) Explain decomposition of sewage and discuss the parts played by various agencies responsible for it. (8)

(c) Write short note on :

(iii) Common method of sewage treatment. (7)

Year 1986 (Engg. Services)

Q. 5. (a) Mention briefly the different methods of 'Municipal Sewage Disposal'. (8)

Q. 5. (b) Write short notes on :

(i) Significance of B. coli test. (8)

(ii) Contact Beds. (8)

Year 1987 (Engg. Services)

Q. 2. (c) Calculate the population equivalent of a city ; given (i) the average sewage from the city is 95×10^6 l/day ; and (ii) the average 5 day BOD is 300 mg/l. (10)

[Hint :

Average flow = 95 ML/day.

Average 5 day BOD = 300 mg/l i.e. 300 kg/ML.

$$\therefore \text{Average BOD load} = 300 \times 95 \text{ kg/day} \\ = 28,500 \text{ kg/day}$$

$$\text{Population equivalent} = \frac{28,500}{0.08} \\ = 3,56,250. \text{ Ans.}]$$

Q. 4. (b) 125 cumecs of sewage of a city is discharged in a perennial river, which is fully saturated with oxygen and flows at a minimum rate of 1600 cumecs with a minimum velocity of 0.12 m/sec. If the 5 day BOD of the sewage is 300 mg/l, find out where the critical DO will occur in the river. Assume:

- (i) the coefficient of purification of the river as 4.0.
- (ii) coefficient of DO is 0.10.
- (iii) the ultimate BOD is 125% of the 5 day BOD of the mixture of sewage and river water.

[Note. Pl. refer solved example 8.8.]

Year 1988 (Engg. Services)

Q. 1. (Compulsory) (a) If the period of incubation is 10 days at 20°C in the relative conductivity test on sewage, calculate the percentage relative stability.

[Note. Pl. refer solved example 7.7.]

Q. 4. (c) Calculate the dimensions of an oxidation pond and determine the detention time for treating sewage from a residential colony in the Southern State with a population of 8000 persons. Assume that the sewage to be treated is at the rate of 125 lpcd, the 5 day BOD of sewage is 325 ppm and specific gravity of organic load is one.

[Solution: Pl. follow example 9.31, and determine:

$$\text{Sewage qty. per day to be treated} \\ = 8000 \times 125 \text{ l} = 1 \text{ Ml} = 100 \text{ cum}$$

$$\text{BOD} = 325 \text{ ppm} = 325 \text{ l/Ml}$$

$$\therefore \text{BOD per day} = 325 \text{ litres}$$

$$\text{Sp. gravity of organic load} = 1 \text{ (given)}$$

$$\therefore \text{Wt. of BOD per day} = 325 \text{ kg/day.}$$

Now, for Southern States, climate is hot, and assume organic loading at 300 kg/ha/day.

$$\therefore \text{Surface area of pond} = \frac{325}{300} \text{ ha.} = 1.083 \text{ ha} = 10,830 \text{ m}^2$$

$$\text{Using } L = 2B$$

$$2B^2 = 10830$$

$$B = \sqrt{5415} = 73.6 \text{ m, say } 74 \text{ m}$$

$$L = 147.2 \text{ m; say } 148 \text{ m}$$

∴ Detention time in days

$$= \frac{\text{Capacity in cum}}{\text{Sewage flow per day in cum/day}} \\ = \frac{13142}{1000} = 13.14 \text{ days; say } 13 \text{ days. Ans.}]$$

Year 1989 (Engg. Services)

Q. 4. (a) The 3 days 15°C BOD of a sample of sewage is 150 mg/l. Draw a graph of 5 day BOD as a function of temperature in the range 10°C to 30°C in steps of 5°C.

[Note: Please refer solved example 7.20.]

Year 1990 (Engg. Services)

Q. 6. (a) In terms of wastewater treatment, indicate briefly the functions performed by the following units—after rearranging them in the sequence along the flow direction:

Flow equalisation; Flocculation; Sedimentation; Imhoff and Septic tanks; Chemical precipitation; Chlorination; Grit chambers; Precipitation; Rocks and Coarse screens; Skimming.

Year 1991 (Engg. Services)

Q. 6. (b) The colony of an industrial estate has population of 2600 persons. The sewage flow is 125 l/c/day. The 5 days BOD of the sewage is 360 ppm. Design the oxidation pond for the treatment of sewage.

[Hint: Please follow similar solved example 9.31.]

Year 1992 (Engg. Services)

Q. 1. (c) Calculate the diameter required for a single-stage trickling filter which is to yield an effluent BOD₅ of 20 mg/l when treating settled domestic sewage with a BOD₅ of 120 mg/l. The wastewater flow is 2200 m³/day and the recirculation is constant at 4000 m³/day. The filter depth is 1.5 m.

[Solution: BOD₅ of sewage entering the filter = 120 mg/l

$$\text{BOD}_5 \text{ of sewage leaving the filter} = 20 \text{ mg/l}$$

$$\text{BOD}_5 \text{ of sewage removed in filter} = 100 \text{ mg/l}$$

$$\text{Total sewage flow being treated}$$

$$= 2200 \text{ m}^3/\text{day} = 2200 \times 1000 \text{ l/d}$$

$$\therefore \text{BOD removed from sewage/day}$$

$$= (2200 \times 1000) \times 100 \text{ mg/day} = 220 \text{ kg/day}$$

Assuming an organic loading for this single stage filter (which must be a conventional one) to be 1500 kg/ha/day (between 900—2200 kg of BOD₅ per ha), we have

$$\text{Filter volume required} = \frac{\text{Total BOD removed}}{\text{Organic loading}}$$

$$\begin{aligned}
 &= \frac{220 \text{ kg/day}}{1500 \text{ ham/day}} \\
 &= \frac{220}{1500} \times 10000 \text{ m}^3 = 1467 \text{ m}^3.
 \end{aligned}$$

Filter depth = 1.5 m (given)

$$\therefore \text{Area of filter required} = \frac{\text{Volume}}{\text{Depth}} = \frac{1467}{1.5} = 978 \text{ m}^2.$$

If d is the dia of the filter, then

$$\frac{\pi}{4} \cdot d^2 = 978$$

$$\text{or } d = \sqrt{\frac{978 \times 4}{\pi}} = 35.2 \text{ m}$$

Hence, use 35 m dia circular filter unit. **Ans.**

Check for hydraulic loading

Area of filter provided

$$= \frac{\pi}{4} \cdot (35)^2 = 962 \text{ m}^2.$$

If a hydraulic loading of 28 Ml/hr/day is adopted (between 22–44; normally 28)*, then filter area required

$$\begin{aligned}
 &= \frac{2200 \times 1000 \text{ l/day}}{28 \times 10^6 \text{ l/ha/day}} \\
 &= \frac{2.2}{28} \times 10^4 \text{ m}^2 = 786 \text{ m}^2.
 \end{aligned}$$

Since the area provided is 962 m², which is more than the above requirement of 786 m², the adopted area or dia is safe.

Hence, use 35 m dia trickling filter. **Ans.**

[Note. The given quantity of recirculation of 4000 m³/day, will of course affect the efficiency of the filter and design of the distributors but will not affect the filter volume, or the filter area, as discussed in article 9.22.2. Hence, the above value is not required, and is simply given to confuse the students.

Year 1993 (Engg. Services)

Q. 5. (a) A sewage containing 200 mg/l of suspended solids is passed through primary settling tank. The solids from the primary settling tank are digested to recover the gas. Find the likely volume of methane and carbon dioxide produced in the digestion of the sludge from 10,000 m³ of sewage. Calculate the fuel value of the gas produced. State clearly the assumptions made. (20)

[Note. Pl. refer solved example 9.27. This question was set from this book.]

Q. 7. (c) 2.5 ml of raw sewage has been diluted to 250 ml and the D.O. concentration of the diluted sample at the beginning of the BOD test was 8 mg/l, and 5 mg/l after 5 day incubation at 20°C, determine BOD of raw sewage. (10)

[Note. Pl. refer solved example 7.2. This question was set from this book.]

Year 1994 (Engineering Services)

Q. 4. (c) Explain the term 'Biochemical Oxygen Demand'. Derive the BOD rate equation :

$$BOD_t = L (1 - 10^{-Kt})$$

If the BOD₅ of a waste water is 75 mg/L and the K is 0.015 day⁻¹, what is the ultimate BOD ? (10)

[Note : Derivation of the above equation is given under article 7.4.9.

The numerical is easy and computed as

$$75 = L (1 - 10^{-0.015 \times 5})$$

$$\text{or } L = 762 \text{ mg/L. Ans.}]$$

Q. 8. (a) Explain Eckenfelder trickling filter equation. Determine the BOD₅ of the effluent from a low rate trickling filter that has a diameter of 35 m and a depth of 1.5 m, if the hydraulic loading is 1900 m³/day and the influent BOD₅ is 150 mg/L. Assume the rate constant as 1.89 d⁻¹ and $\eta = 0.67$. (20)

[Note. Pl. refer solved example 9.15.]

Year 1995 (Engineering Services)

Q. 4. (a) The treated domestic sewage of a town is to be discharged in a natural stream. Calculate the percentage purification required in the treatment plant with the following data :

Population = 50,000,

BOD contribution per capita = 0.07 kg/day,

BOD of stream on U/s side = 3 mg/lit,

Permissible maximum BOD of stream on D/s side = 5 mg/lit,

Dry weather flow of sewage = 140 litres per capita per day,

Minimum flow of stream = 0.13 m³/sec,

Explain graphically the process of self purification of natural waters when sewage is discharged therein. (15)

[Solution : Total BOD of raw domestic sewage

$$= 50000 \times 0.07 \text{ kg/day} = 3500 \text{ kg/day}$$

$$Q_s = \text{Sewage discharge} = 140 \times 50,000 \text{ l/day}$$

$$= 7000 \text{ m}^3/\text{d}$$

$$= \frac{7000}{24 \times 60 \times 60} \text{ m}^3/\text{s} = 0.081 \text{ m}^3/\text{s}$$

$$Q_R = \text{River discharge} = 0.13 \text{ m}^3/\text{s}$$

$$\text{BOD of mix} = 5 \text{ mg/l}$$

$$\text{BOD of river} = 3 \text{ mg/l}$$

$$\text{BOD of treated discharged sewage} = C_S$$

$$\text{BOD of mix} = \frac{\text{BOD of treated discharged sewage} \times \text{Sewage flow} + \text{BOD of river} \times \text{River flow}}{\text{Sewage flow} + \text{River flow}}$$

$$\text{or } 5 = \frac{C_S \times 0.081 + 3 \times 0.13}{0.081 + 0.13}$$

$$\text{or } C_S = \frac{5 \times 0.211 - 0.39}{0.081} = 8.21 \text{ mg/l}$$

$$\text{Max. permissible BOD of discharged treated sewage} \\ = C_S = 8.21 \text{ mg/l}$$

$$\text{BOD of untreated sewage}$$

$$= \frac{(3500 \times 10^6) \text{ mg/d}}{(7000 \times 1000) \text{ l/d}} = 500 \text{ mg/l}$$

$$\% \text{age treatment required}$$

$$= \frac{\text{BOD of raw sewage} - \text{Max. permissible BOD of discharged sewage}}{\text{BOD of raw sewage}}$$

$$= \frac{500 \text{ mg/l} - 8.21 \text{ mg/l}}{500 \text{ mg/l}} \times 100$$

$$= 98.36\% \text{ Ans.}$$

Q. 6. (b) Consider the case where a noise level of 90 dBA exists for five minutes and is followed by a reduced noise level of 60 dBA for 50 minutes. What is the equivalent continuous equal energy level (L_{eq}) for the 55 minute period? Assume a five minute sampling period. Write the concepts of L_{eq} (15)

[Solution: Using eqn. (20.14), we get

$$\begin{aligned} L_{eq} &= 10 \log \sum (10)^{\frac{L_i}{10}} \times t_i \\ &= 10 \log \left[(10)^{\frac{90}{10}} \times \frac{5}{55} + (10)^{\frac{60}{10}} \times \frac{50}{55} \right] \\ &= 10 \log [9.0909 \times 10^7 + 9.0909 \times 10^5] \\ &= 10 \log [(10^5)(909.09 + 9.0909)] \end{aligned}$$

$$\begin{aligned} &= 10 \log [918.1809 \times 10^5] \\ &= 79.829 \text{ dBA. Ans.} \end{aligned}$$

Year 1996 (Engineering Services)

Q. 1. (b) A circular sewer of 45 cm diameter was designed for a town of population of 30,000. The sewer was designed to carry 3.5 times of the dry weather flow. What slope should be provided to the sewer when running full? Value of $n = 0.012$ in Manning's equation. Assume other relevant data suitably. (20)

[Hint: Please follow solved example 4.9, and compute:

Assuming average water supply = 135 l/d, and that 80% of it becomes sewage, we have

Av. quantity of sewage produced

$$= [30,000 \times 135 \text{ l/d} \times 0.80] = 3.24 \times 10^6 \text{ l/d}$$

$$\therefore \text{D.W.F.} = 3.24 \times 10^6 \text{ l/d}$$

$$= \frac{3.24 \times 10^6}{10^3 \times 24 \times 2400} \text{ m}^3/\text{s} = 0.0375 \text{ m}^3/\text{s}$$

Design discharge

$$= 3.5 \times 0.0375 \text{ m}^3/\text{s} = 0.131 \text{ m}^3/\text{s}$$

Using Manning's formula, we have

$$Q = \frac{1}{N} \cdot A \cdot R^{2/3} \cdot \sqrt{S}$$

$$\text{or } 0.131 = \frac{1}{0.012} \times \left(\frac{\pi}{4} \times 0.45^2 \right) \left(\frac{0.45}{4} \right)^{2/3} \sqrt{S}$$

$$\text{or } S = 1.8007 \times 10^{-3} = \frac{1}{555} \text{ Ans.}$$

Q. 5. (a) Determine the dimensions of a high rate trickling filter for the following data:

(i) Sewage flow = 3.0 mld

(ii) Recirculation ratio = 1.5

(iii) BOD of raw sewage = 250 mg/l

(iv) BOD removal in primary tank = 25%.

(v) Final effluent BOD desired = 30 mg/l.

By what % the diameter of the filter will have to be modified if it is to be designed as a standard rate trickling filter for the above requirement. (20)

[Hint: Please follow exactly similar solved example 9.11 and compute as follows:

Total BOD in raw sewage per day
 $= 3 \text{ ML} \times 250 \text{ mg/l} = 750 \text{ kg}$

BOD removed in primary tank
 $= 25\%$

BOD entering per day in filter
 $= 0.75 \times 750 \text{ kg} = 562.5 \text{ kg}$

Permissible BOD conc. in the effluent
 $= 30 \text{ mg/l.}$

BOD load per day allowed to go in the effluent
 $= 3 \text{ ML} \times 30 \text{ mg/l} = 90 \text{ kg}$

BOD load to be removed by filter per day
 $= 562.5 - 90 = 472.5 \text{ kg}$

$$\text{Efficiency of filter} = \frac{\text{BOD removed}}{\text{Total BOD entering}} \times 100 = \frac{472.5}{562.5} = 84\%$$

Also $\eta = \frac{100}{1 + 0.0044 \sqrt{\frac{Y}{V \cdot F}}}$ (i.e. eqn. 9.34)

where $Y = \text{Total BOD applied to filter per day in kg} = 562.5 \text{ kg}$
 $V = \text{Filter vol in ha.m}$

$$F = \frac{1 + \frac{R}{I}}{\left(1 + 0.1 \frac{R}{I}\right)^2} \quad (\text{i.e. Eq. 9.33})$$

$$= \frac{1 + 1.5}{(1 + 0.1 \times 1.5)^2}$$

$$\therefore \frac{R}{I} = \text{Recirculation ratio}$$

$$= 1.5 \text{ given}$$

$$\therefore 84 = \frac{100}{1 + 0.0044 \sqrt{\frac{562.5}{V \times 1.89}}}$$

$$V = 0.1588 \text{ ha.m} = 1588 \text{ m}^3$$

Using 1.5 m depth of filter, we have dia. of filter tank

$$= \sqrt{\frac{1588 \times 4}{1.5 \times \pi}} = 36.7 \text{ m. Ans.}$$

For an equivalent standard rate filter, $F = 1$

$$\therefore 84 = \frac{100}{1 + 0.044 \sqrt{\frac{562.5}{V \times 1}}}$$

$$\text{or } V = 0.3 \text{ ha.m} = 3000 \text{ m}^3$$

Using 1.5 m depth, we have $A = 2000 \text{ m}^2$

$$\text{Dia. reqd.} = d' = \sqrt{\frac{2000 \times 4}{\pi}} = 50.5 \text{ m}$$

% increase in dia. of standard rate filter, over the high rate filter, each using 1.5 m depth

$$= \frac{50.5 - 36.7}{36.7} \times 100$$

$$= (+) 37.6\% \text{ Ans.}]$$

Q. 7. (c) The following observations were made on a 4% dilution of wastewater :

Dissolved oxygen (D.O.) of the aerated water = 3 mg/l

used for dilution

Dissolved oxygen (D.O.) of the diluted sample = 0.8 mg/l

after 5 days incubation

Dissolved oxygen (D.O.) of original sample = 0.6 mg/l.

Calculate the BOD of 5 days and ultimate BOD of the sample assuming that the de-oxygenation coefficient at test temperature is 0.1. (20)

[Hint : Please follow exactly similar solved example 7.14 and compute the answers as :

$$\text{BOD}_5 = 52.6 \text{ mg/l}$$

$$\text{BOD}_\infty = 76.93 \text{ mg/l. Ans.}]$$

Year 1997 (Engineering Services)

Q. 2. (a) An environmental survey for a town with population of 30,000 revealed the following :

Domestic sewage produced at the rate of 240 litres per capita per day. The per capita BOD of the domestic sewage being 72 g/day.

Industrial wastes produced were estimated as 4 million litres per day with BOD of 1500 mg/l.

The sewage effluents can be discharged into a river with a minimum dry weather flow of 4500 litres/s and a saturation dissolved oxygen content of 7 mg/l. It is necessary to maintain a dissolved oxygen content of 4 mg/l in the stream. For designing a sewage treatment plant, determine the degree of treatment required to be given to the sewage. Assume :

$K_D = \text{Deoxygenation coefficient} = 0.1$ and $K_R = \text{Reoxygenation coefficient} = 0.3$ (20)

An overall expansion factor of 10% be provided.

[Hint : Please follow similar solved example 8.5, and compute :

BOD of all wastewaters

$$= \frac{7.2 \text{ ML} \times 300 \text{ mg/l} + 4 \text{ ML} \times 1500 \text{ mg/l}}{7.2 \text{ ML} + 4 \text{ ML}} = 728.57 \text{ mg/l}$$

$$Q_s = \text{wastewater discharge with 10\% expansion}$$

$$= 1.1 \times \frac{11.2 \times 10^6}{24 \times 3600} \text{ l/s} = 142.6 \text{ l/s}$$

$$\text{Initial D.O. of saturated stream}$$

$$= 7 \text{ mg/l}$$

$$\text{D.O. of the mixture at start point}$$

$$= \frac{7 \times 4500 + 0 \times 142.6}{4500 + 142.6} = 6.785 \text{ mg/l}$$

$$\text{Initial D.O. deficit}$$

$$= D_o = 7 - 6.785 = 0.215 \text{ mg/l}$$

$$\text{Critical D.O. deficit}$$

$$= D_c = 7 - 4 = 3 \text{ mg/l}$$

Using eqn. (8.11), we get

$$\left(\frac{L}{D_c \cdot f} \right)^{f-1} = f \left[1 - (f-1) \cdot \frac{D_o}{L} \right]$$

$$\text{where } f = \frac{K_R}{K_D} = \frac{0.3}{0.1} = 3$$

$$\therefore \left(\frac{L}{3 \times 3} \right)^2 = 3 \left[1 - \frac{2 \times 0.215}{L} \right]$$

Solving, $L = 15.35 \text{ mg/l}$

Max. permissible BOD₅ of mix at mix temperature

$$Y_s = L \left[1 - (10)^{-0.1 \times 5} \right] \quad \because K_D \text{ at mix temp} = 0.1$$

$$= 0.684 L = 0.684 \times 15.35 = 10.5 \text{ mg/l}$$

Using eqn. (8.1) as

$$10.5 \text{ mg/l} = \frac{C_s \times 142.6 + 0 \times 4500}{142.6 + 4500}$$

where C_s = Max. permissible BOD of wastewater to be discharged after treatment

$$\text{or } C_s = 341.85 \text{ mg/l}$$

Degree of treatment reqd. to be given to wastewater having BOD of 728.57 mg/l

$$= \frac{728.57 - 341.85}{728.57} = 53\% \quad \text{Ans.}$$

Q. 6. (a) Estimate efficiency of a 30 m diameter and 1 m deep single stage high rate trickling filter for the following data :

(i) Sewage flow = 4.5 Mld (million litres/day)

(ii) Recirculation ratio = 1.4

(iii) BOD of raw sewage = 250 mg/l

(iv) BOD removed in primary clarifier = 25%

[Solution : The efficiency of a high rate single stage trickling filter is given by eqn. (9.34), as :

$$\eta\% = \frac{100}{1 + 0.0044 \sqrt{\frac{Y}{V \cdot F}}}$$

where Y = Total organic loading in kg/day

V = Filter vol. in ha.m

F = Recirculation ratio = 1.4 (given)

BOD to be removed in filter

= Total BOD of sewage

- BOD removed in primary clarifier

$$= 250 \text{ mg/l} - 25\% \times 250 \text{ mg/l}$$

$$= 250 \times 0.75 = 187.5 \text{ mg/l}$$

Y = Total organic loading

$$= 187.5 \text{ mg/l} \times 4.5 \text{ Mld} = 843.75 \text{ kg/d}$$

$$\text{Filter vol.} = \left(\frac{\pi}{4} \cdot d^2 \right) \times \text{depth} = \frac{\pi}{4} \times (30)^2 \times 1 \text{ m}^3$$

$$= 706.86 \text{ m}^3$$

$$V = \frac{706.86}{10^4} \text{ ha.m} = 0.070686 \text{ ha.m}$$

$$\eta = \frac{100}{1 + 0.0044 \sqrt{\frac{843.75}{0.070686 \times 1.4}}}$$

$$= 71.11\% \quad \text{Ans.}$$

Q. 8. (b) The surface water from airport road is drained to the longitudinal side drain from across one-half of a bituminous pavement surface of total width 7.0 m, shoulder and adjoining land of width 8.0 m on one side of the drain. On the other side of the drain, water flows across from reserve land with average turf and 2% cross slope towards the side drain, the width of this strip of land being 25 m. The inlet time may be assumed to be 10 min for these conditions. The runoff coefficients of the pavement, shoulder and reserve land with turf are 0.8, 0.25 and 0.35, respectively. The length of the stretch of land parallel to the road from where the water is expected to flow to the side drain is 400 m. Estimate the quantity of runoff flowing in the drain assuming 10 year frequency. The side drain will pass through clayey soil with allowable velocity of flow as 1.33 m/s. Intensity-duration chart for 10 year frequency is

Duration (mins)	5	10	15	20	30
Intensity (mm/hour)	160	150	125	110	95

[Note. Please refer solved example 3.6.]

Year 1998 (Engineering Services)

Q. 6. (c) What will be the maximum upper limit of BOD of a glucose solution of concentration 300 mg/l. (10)

[Note. Please refer solved example 7.5.]

Q. 8. (b) What is meant by solid waste management? Describe briefly the principles of design of a sanitary landfill for solid wastes disposal. (15)

Year 1999 (Engineering Services)

Q. 2. (b) (i) Compare 'trickling filter' and 'Recirculation with Bio-filters'.

(ii) Describe with a neat sketch the working of a 'sludge digestion tank with floating cover'. (15)

Q. 8. (c) (i) Define: MPN and C.I.

(ii) Explain: Membrane Filter Technique. (10)

Year 2000 (Engineering Services)

Q. 1. (b) How do imhoff tanks differ from septic tanks in principle and operation? Mention the advantages and disadvantages of imhoff tanks. (10)

Q. 3. (b) Explain briefly noise pollution, its causes, effects and remedies. (10)

Q. 6. (b) Design a sewer to serve a population of 36,000; the daily per capita water supply allowance being 135 litres, of which 80% finds its way into the sewer. The slope available for the sewer to be laid is 1 in 625 and the sewer should be designed to carry four times the dry weather flow when running full. What would be the velocity of flow in the sewer when running full? Assume $n = 0.012$ in Manning's formula. (15)

[Hint: Please refer solved example 4.9. This numerical question was

set from this book.]

Q. 7. (c) Explain the term 'refuse' and give its composition and classification. Describe briefly the various methods employed for the collection and disposal of the refuse. (10)

Year 2001 (Engineering Services)

Q. 3. (c) For a medium size town, organic waste is to be disposed of by the method of composting using trenches. Explain the salient points of this method. (10)

Q. 4. A waste water plant produces 1000 kg of dry solids per day at a

of 1.05 and the remaining are non-volatile with a sp. gr. of 2.5. Find the sludge volume after digestion, which reduces volatile solid content by 50 percent and decreases the moisture content to 90 percent. (15)

[Hint: Please refer solved example 9.24.]

Q. 5. (b) A trickling filter plant treats 1500 cum per day of sewage with a BOD₅ of 220 mg/l and SS of 250 mg/l. Estimate the total solid production assuming that primary clarification removes 30% of BOD and 60% of influent solids. Take the solid production in the trickling filter as @ 0.5 kg/kg of the applied BOD. (10)

[Hint: Please refer solved example 9.25.]

Year 2002 (Engineering Services)

Q. 2. (c) Explain the components of an ecosystem. Give a pictorial example of structure components of ecosystem.

Q. 3. (c) What is environmental impact assessment? Briefly describe different methodologies adopted for environmental impact assessment.

Q. 7. (b) (i) Population of a town is 20,000 with an assumed water supply of 150 litres per head per day. BOD of the waste water is 150 mg/l. Design the most suitable waste water treatment system (without power supply) for the town.

[Hint: May design an oxidation pond as in Solved Example 9.31.]

(ii) Which symbiotic system is applied in waste water treatment? Explain its principle and under what conditions the process may be found suitable for a community.

[Hint: Explain Algal-symbiosis, as described in article 9.45.]

Year 2003 (Engineering Services)

Q. 7. (c) A combined sewer of circular section is to be laid to serve an area of 100 ha with a population of 90,000, supplied with water at 200 litres per day. Assuming an impermeability factor of 0.5 and time of concentration of rainfall 'T' as 20 minutes, calculate the size of sewer when it has to run full with a velocity of 0.3 m/sec. Assume suitable coefficients for 'a' and 'b' in the equation for 'R', the intensity of rainfall relating to 'T', the time of concentration. (10)

[Solution: Av. sewage discharge = 80% of average water supply (assumed)

$$= 80\% [90,000 \times 200 \text{ L/day}]$$

$$= 0.8 \times 90 \times 200 \text{ m}^3/\text{d}$$

$$= \frac{0.8 \times 90 \times 200}{24 \times 3600} \text{ m}^3/\text{s} = 0.1667 \text{ m}^3/\text{s}$$

$$Q_1 = \text{Peak sewage flow} = 3 \times \text{Av. sewage flow}$$

$$= 3 \times 0.1667 = 0.5 \text{ cumec}$$

...(ii)

$$Q_2 = \text{Storm water flow} = \frac{1}{36} K \cdot P_e \cdot A$$

(Eq. 3.1)

$$\text{where } K = 0.5$$

$$A = 100 \text{ ha}$$

p_c is calculated from Eq. (3.6) as

$$p_c \text{ or } R = \frac{a}{T+b}$$

At $T = T_c = 20$ min, assume values of $a = 75$ and $b = 10$

$$\therefore p_c = \frac{75}{20+10} = 2.5 \text{ cm/sec.}$$

$$\therefore Q_2 = \frac{1}{36} \times 0.5 \times 2.5 \times 100 = 3.47 \text{ m}^3/\text{s}$$

$$Q = Q_1 + Q_2 = 0.5 + 3.47 = 3.97 \text{ m}^3/\text{s} \quad \dots(ii)$$

Area of circular sewer

$$= A = \frac{Q}{V} = \frac{3.97 \text{ m}^3/\text{s}}{0.3 \text{ m/s}}$$

$$= 13.23 \text{ m}^2 \quad (\because V = 0.3 \text{ m/s, as given})$$

$$\therefore \frac{\pi}{4} \cdot D^2 = 13.23 \text{ m}^2$$

$$\therefore \text{Dia. of sewer} = D = 4.1 \text{ m. Ans.}]$$

Q. 8. (b) Compute the effective stack height of a coal burning power plant with physical stack height of 200 m and stack diameter of 8 m, stack gas exit velocity of 18.3 m/sec, temperature of gas 140°C, when the ambient air temperature is 8°C, atmospheric pressure is 1000 millibars and average wind speed is 4.5 m/sec. Also compute the emission rate of sulphur dioxide of the plant assuming burning of 24000 tonnes of coal per day with a sulphur content of 4.2%. (15)

[Solution: We have to use Eq. (18.21) and (18.22) and follow Solved Example 18.3 to compute as under :

$$\text{Effective } Ht = H = h + \Delta h \quad \dots(i.e. \text{ Eq. 18.21})$$

where h = actual ht of stack = 200 m

Δh = Plume ht given by Eq. (18.22) as :

$$\Delta h = \frac{v_s \cdot D}{u} \left[1.5 + 2.68 \times 10^{-3} P \cdot D \left(\frac{T_s - T_a}{T_a} \right) \right]$$

where v_s = stack gas exit velocity in m/s = 18.3 m/s

D = Inside exit dia of stack in m = 8 m

u = wind speed in m/s = 4.5 m/sec

P = Atmospheric pressure in millibars = 1000 m.b.

T_s = stack gas temp in K = 140°C = 140 + 273 = 413K

T_a = Air temp in K = 8°C

$$= 8 + 273 = 281K$$

$$\therefore \Delta h = \frac{18.3 \times 8}{4.5} \left[1.5 + 2.68 \times 10^{-3} \times 1000 \times 8 \left(\frac{413 - 281}{413} \right) \right]$$

$$= 271.73 \text{ m}$$

$$\text{Eff. Ht} = H = 200 + 271.73 = 471.73 \text{ m. Ans.}$$

Emission rate of SO_2 is calculated as below : [Follow Example 18.1] :


Coal burnt per day = 24000 t/d

Sulphur content of coal = 4.2%

Sulphur produced per day

$$= 24000 \times \frac{4.2}{100} = 1008 \text{ t}$$

The produced sulphur produces SO_2 as :



Since the molecular mass of both S and O_2 is 32 and they combine on one to one mass basis, 1008t of S will combine with 1008t of O_2 to produce 2016t of SO_2 .

Hence, SO_2 produces per day = 2016 t/day

$\therefore$ Emission rate of SO_2 per second

$$= \frac{2016 \text{ t}}{24 \times 3600 \text{ sec}} = \frac{2016 \times 1000 \text{ kg}}{24 \times 3600 \text{ sec}}$$

$$= 23.33 \text{ kg/sec. Ans.}]$$

Year 2004 (Engineering Services)

Q. 1. (c) Classify the solid wastes, giving suitable examples of each of them. Also explain the different methods of disposal of solid wastes. (10)

Q. 2. (a) A combined sewer of circular section is to be designed in a sewage system for a city with a population of one lac in an area of 100 ha. The mean flow of sewage from the city is 250 litres/capita/day. The rainfall intensity in the area is 4 cm/hour. The coefficient of run-off for the area is 0.48. The ratio of peak to average sewage flow is 2.0. The Mannings's roughness coefficient is 0.012 and the Hazen-William's coefficient is 85. Using Manning's equation and Hazen-William's expression, determine the gradient of the sewer to carry the peak flow with a velocity of 1.2 m/sec. (15)

[Solution: Pl. follow similar Solved Example 4.15 and compute as under :

Average sewage discharge

$$= \frac{1,00,000 \times 250}{1000 \times 24 \times 3600} \text{ m}^3/\text{s} = 0.2894 \text{ m}^3/\text{s}$$

Peak sewage discharge

$$= 2 \times 0.2894 = 0.579 \text{ m}^3/\text{s}.$$

Storm run off

$$= \frac{1}{36} K \cdot p_c \cdot A \quad \dots (\text{i.e. Eq. 3.1})$$

$$= \frac{1}{36} \times 0.48 \times 4 \times 100 = 5.333 \text{ m}^3/\text{s}$$

Total combined discharge

$$= 0.579 + 5.333 = 5.912 \text{ m}^3/\text{s}$$

Assuming that the sewer while flowing full, carries 10% extra capacity, we have

$$\text{The design discharge } Q = 5.912 \times 1.1 = 6.5 \text{ m}^3/\text{s}.$$

(i) Using Manning's formula, we have

$$V = \frac{1}{N} \cdot R^{2/3} \sqrt{S} = \frac{1}{N} \left(\frac{D}{4} \right)^{2/3} \cdot \sqrt{S}$$

$$\text{Also } \frac{Q}{A} = V \text{ or } \frac{6.5}{\left(\frac{\pi}{4} D^2 \right)} = 1.2 \text{ (given)}$$

$$\text{or } D = 2.63 \text{ m}$$

$$\therefore 1.2 = \frac{1}{0.012} \left(\frac{2.63}{4} \right)^{2/3} \cdot \sqrt{S}$$

$$\text{or } S = \frac{1}{2750}. \text{ Ans.}$$

(ii) Using Hazen William equation, we have

$$V = 0.85 C_H \cdot R^{0.63} \cdot S^{0.54}$$

[Pl. see Eq. (6.12) in "Environmental Engg. Vol. I, Water Supply Engg."]

Substituting values, we get

$$1.2 = 0.85 \times 85 \times \left(\frac{2.63}{4} \right)^{0.63} S^{0.54}$$

$$\text{or } S = 8.256 \times 10^{-4} = \frac{1}{1211}. \text{ Ans.}$$

Note. It can, thus, be seen that Hazen William formula gives result, much different from that obtained by Manning's formula. Hazen-William formula is usually not adopted for pipes carrying sewage, and is used only for pipes carrying water. Here also, now a days, it has been replaced by the Modified Hazen-William's formula due to its various

limitations, as explained in "Water Supply Engg."

Q.4. (a) Explain the different local and global effects of air pollution. Support your answer with suitable examples. (10)

Year 2005 (Engineering Services)

Q. 2. (a) Define EIA. Discuss the various components of EIA for developing a thermal power plant. (10)

Q. 5. (b) Explain the importance of self cleansing velocity and how it affects the design of sewers? (5)

Q. 7. (c) (i) Explain the procedure of estimating BOD of a given sample of sewage. (5)

(ii) The five day BOD at 20°C of a given sample is 450 mg/l. Calculate the ultimate BOD at 35°C given the deoxygenation constant at 20°C as 0.1 per day.

[Solution : $Y_{(20^\circ)} = 450 \text{ mg/l.}$

$$\text{Using } Y_{(20^\circ)} = L [1 - (10)^{-K_d \cdot t}]$$

$$\text{we get } 450 = L [1 - (10)^{-0.1 \times 5}] = 0.684 L$$

$$\text{or } L = 657.9 \text{ mg/l}$$

Since the ultimate BOD (Y_u) is not affected by temperature, and always equals to L , the desired ultimate BOD at 35°C will

$$\text{be } = 657.9 \text{ mg/l. Ans.}]$$

Q. 8. (b) (i) Enumerate the different types of waste storage facilities. Discuss their advantages and disadvantages. (7)

(ii) What arrangements are made in a landfill to collect and control the movement of leachate produced? What preventive measures to be taken to prevent contaminating ground water from the landfills? (8)

Year 2006 (Engineering Services)

Q. 2. (a) Find out the volume of an anaerobic digestion tank for 5 MLD of domestic wastewater treatment plant having 60% suspended solids removal efficiency of primary clarifier and 250 mg/L suspended solids in wastewater based on sludge volume reduction in digester. Moisture content of influent sludge is 96%; initial volatile solids content in sludge is 70%; volatile solids destroyed is 65%; digested sludge solid concentration is 8.0%; specific gravity of primary sludge is 1.03; specific gravity of digested sludge is 1.04; density of water is 1000 kg/m³; mean cell residence time is 15 days. (20)

[Solution : Study Solved Examples 9.20 and 9.24, and compute as under :

$$\text{Sewage per day} = 5 \text{ ML}$$

$$\text{Total S.S. in sewage} = 250 \text{ mg/L}$$

$$\therefore \text{Mass of S.S. in 5 ML of sewage (entering daily)} \\ = 5 \times 10^6 \text{ L} \times 250 \text{ mg/L}$$

$$= \frac{5 \times 10^6 \times 250}{10^6} \text{ kg} = 1250 \text{ kg.}$$

S.S. removed in primary clarifier = 60%
 Mass of solids removed daily in primary clarifier
 $= 60\% \times 1250 \text{ kg} = 750 \text{ kg}$
 M.C. of fresh primary sludge = 96%
 $\therefore 4 \text{ kg of dry solids will make}$
 $= 100 \text{ kg of fresh primary wet sludge}$
 or $750 \text{ kg of dry solids will make}$
 $= \frac{100}{4} \times 750 \text{ kg}$
 $= 18750 \text{ kg of fresh primary wet sludge}$
 Specific gravity of fresh (raw) wet sludge = 1.03
 $\therefore$ Density of fresh (raw) wet sludge = 1030 kg/m^3
 $\therefore$ Volume of fresh influent sludge produced daily (V_1)
 $= \frac{18750 \text{ kg}}{1030 \text{ kg/m}^3} = 18.2 \text{ m}^3 \quad \dots(ii)$

Now, we have to calculate the Vol. of digested sludge (V_2) as follows :

Mass of solids in raw sludge = 750 kg
 Volatile solids = 70%
 $\therefore$ Mass of volatile solids = $70\% \times 750 \text{ kg} = 525 \text{ kg}$
 Mass of non-volatile solids = $750 - 525 = 225 \text{ kg}$
 Volatile solids removed/destroyed in sludge digestion = 65%
 $\therefore$ Mass of volatile solids destroyed
 $= 65\% \times 525 \text{ kg} = 341.25 \text{ kg}$
 Mass of volatile solids left
 $= 525 - 341.25 = 183.75 \text{ kg}$
 Mass of non-volatile solids left
 $= 225 \text{ kg}$ (as in original influent sludge)
 Total mass of solids in digested sludge
 $= 183.75 + 225 = 408.75 \text{ kg}$
 But the digested sludge is said to contain 8% solids.
 Thus $8 \text{ kg of solids make} = 100 \text{ kg of digested sludge}$
 $1 \text{ kg of solids make} = \frac{100}{8} \text{ kg of digested sludge}$
 $408.75 \text{ kg of solids make}$

$= \frac{100}{8} \times 408.75 \text{ kg of digested sludge}$
 $= 5109.375 \text{ kg of digested sludge}$
 Density of digested sludge = $1.04 \times 1000 \text{ kg/m}^3$ (given)
 $= 1040 \text{ kg/m}^3$

$\therefore$ Vol. of digested sludge
 $= \frac{5109.375}{1040} \text{ m}^3$
 $= 4.91 \text{ m}^3 \quad \dots(ii)$
 Capacity of digestion tank
 $= \left[V_2 - \frac{2}{3} (V_2 - V_1) \right] t$; where $t = 15 \text{ d}$ (given)
 $= \left[18.2 - \frac{2}{3} (18.2 - 4.91) \right] 15$
 $= 140.1 \text{ m}^3 \text{ Ans.}$

Q. 3. (c) Explain different processes for composting of solid waste. Explain important design considerations for one of the composting processes. (10)

Year 2007 (Engineering Services)

Q. 1. (c) What is self-cleansing velocity? A 20 cm diameter sewer with invert slope of 1 in 500 is running full. Calculate the rate of flow in the sewer. Compare the velocity with self-cleansing velocity. Assume Manning's $n = 0.012$. (8)

[Solution : $V = \frac{1}{n} A R^{2/3} \sqrt{S}$
 $= \frac{1}{0.012} \times \left(\frac{0.2}{4} \right)^{2/3} \times \frac{1}{\sqrt{500}} = 0.51 \text{ m/s}$

$$Q = A \cdot V = \frac{\pi}{4} \times (0.2)^2 \times 0.051$$

$$= 1.589 \times 10^{-3} \text{ m}^3/\text{s} = 1.589 \text{ l/s}$$

Self cleansing velocity (V_s) from Eq. (4.10)

$$= \frac{1}{n} \cdot R^{1/6} \cdot \sqrt{kd' (G - 1)}$$

Thus, V_s for removing inorganic sand particles of dia 1 mm (d') and specific gravity 2.65 (G) having $k = 0.04$ (assumed)

$$= \frac{1}{0.012} \left(\frac{0.2}{4} \right)^{1/6} \sqrt{\left(0.04 \times \frac{1}{1000} \right) (2.65 - 1)}$$

$$= 50.58 \times 8.124 \times 10^{-3} = 0.41 \text{ m/s}$$

Hence, the velocity generated in the sewer (0.51 m/s) is self cleansing, since it is more than the reqd. minimum velocity for

self cleansing (0.41 m/s).]

Q. 3. (c) Work out the hydraulic characteristics of a circular sewer section running partially full. (8)

Q. 4. (c) Mention the operational troubles of a standard rate trickling filter and their remedies. (8)

Q. 5. (c) Why is processing of solid waste required for solid waste management. Discuss various processing techniques used in solid waste management.

(8)

Q. 5. (d) A river before its entry into a town had a discharge of 100 l/sec, and 20 mg/l as the concentration of a conservative parameter. The town's waste water outfall having 200 mg/l (two hundred mg/l) concentration of the same conservative parameter raised the river concentration to 50 mg/l, after a complete mix with the river water. Determine the dilution ratio resulting from the discharge of the said waste water outfall.

(8)

[Solution : Q_R = River discharge = 100 l/s
 C_R = Concentration of conservative parameter in river flow = 20 mg/l
 Q_s = Sewage discharge = ?
 C_s = Conc. of parameter in town's sewage outfall = 200 mg/l
 C = Conc. of parameter in river after complete mix = 50 mg/l

Using Eq. (8.1), we have

$$C = \frac{C_s \cdot Q_s + C_R \cdot Q_R}{Q_s + Q_R}$$

$$\text{or } 50 = \frac{200Q_s + 20 \times 100}{Q_s + 100}$$

$$50Q_s + 5000 = 200Q_s + 2000$$

$$150Q_s = 3000$$

$$\text{or } Q_s = 20 \text{ l/s}$$

Thus, 20 l/s of sewage flow is mixed with 100 l/s of river flow,

thereby diluting the sewage flow by $\frac{100+20}{20} = 6$ times.

Hence, dilution ratio = 6. Ans.]

Q. 6. (c) What are different methods used for land filling in dry areas? Discuss them.

(8)

Q. 7. (c) Briefly discuss the environmental implications of pathological laboratory cum nursing home situated along a town pond, also used for the religious rites of a significant population of the town.

(8)

Q. 8. (c) Population of a town is 50,000 and area is 90 hectares. Calculate the discharge for which the sewers of a proposed combined system will be designed for the town, if the average coefficient of run-off for this area is 0.65 and the time of concentration of the design rain is 20 minutes. Assume any data required.

(8)

Year 2008 (Engineering Services)

Q. 2. (d) Estimate the moisture content of a solid waste sample with the following composition :

Component	Per cent by mass	Moisture (%)
Food wastes	20	70
Paper	40	6
Cardboard	10	5
Plastics	5	2
Garden trimmings	5	60
Wood	5	20
Tin cans	5	3

(10)

[Solution : Let the total mass of the waste sample be 100 M. Then

Moisture (%) of the sample

$$= \left[\frac{20M \times 70\% + 40M \times 6\% + 10M \times 5\% + 5M \times 2\% + 5M \times 60\% + 5M \times 20\% + 5M \times 3\%}{100M} \right] \times 100$$

$$= (14 + 2.4 + 0.5 + 0.1 + 3 + 1 + 0.15) \frac{M}{M}$$

$$= 21.15\% \text{ Ans.}]$$

Q. 4. (a) Design a septic tank for 200 persons with a water supply of 125 litre per capita per day. Assume any other data and mention it.

(10)

[Hint : Pl. refer exactly similar Solved Question 9.33.]

Q. 5. (b) Discuss the microbial growth pattern in waste water.

(10)

[Hint :

Growth pattern of Micro-organisms

When a small number of a viable bacterial cell (i.e. bacteria) contained in sewage are placed in a closed vessel (such as during sewage treatment) containing sufficient food supply in a suitable environment ; conditions get established in which unrestricted growth of the micro-organism cell takes place. However, growth of an organism does not go indefinitely, and after a characteristic size is reached, the cell divides (due to hereditary and interval limitations) becoming two. Assuming an adequate food supply, the cells then grow and divide again, like the original cell. Every time a cell splits*, approximately every 20 to 30 minutes, a new generation occurs. This growth is known as the exponential or logarithmic growth phase. At the exponential growth rate, the largest number of cells are

produced in the shortest period of time. In nature, this growth cannot be maintained indefinitely, simply because the optimum environment of growth cannot be maintained. The amount of growth is the function of two variables, i.e. environment and food. The pattern which actually results is known as the *bacterial growth rate curve*, such as the one shown in Fig. 28.2.

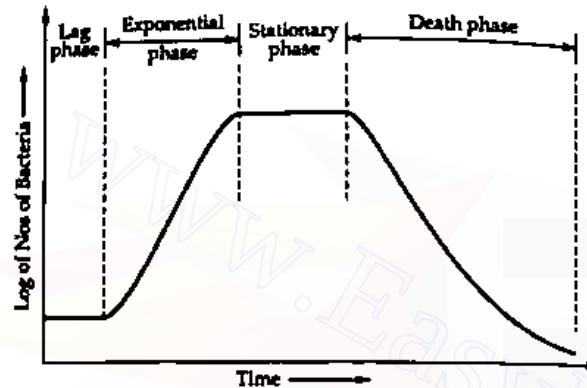


Fig. 28.2. Bacterial growth rate curve.

Such a bacterial growth pattern curve may be divided into the following four well defined phases:

- (i) *Lag phase* ;
- (ii) *Exponential or Logarithmic phase* ;
- (iii) *Stationary phase* ; and
- (iv) *Death phase*.

These phases are briefly discussed below :

- (i) *Lag phase* : During this initial lag phase, the bacteria adapt themselves to growth conditions. It is the period in which the individual bacteria are maturing and not yet able to divide. During this phase of the bacterial growth cycle, synthesis of RNA, enzymes and other molecules occurs.
- (ii) *Exponential or Log phase* : This phase is characterized by cell doubling. The number of new bacteria appearing per unit time is proportional to the present population. If growth is not limited, doubling will continue at a constant rate, and, thus, the number of bacterial cells and the rate of population increase, both doubles with each consecutive time period. For this type of economical growth, plotting the natural logarithm of cell numbers against time produces a straight line. The slope of this line represents the growth rate of the

organisms, which is a measure of the number of divisions per cell per unit time. The actual rate of this growth ; (i.e. the slope of the line in Fig. 28.2) depends upon the growth conditions, which affect the frequency of cell division events and the probability of both daughter cells surviving. Under controlled conditions, cyano bacterial can double their population four times a day. However, exponential growth cannot continue indefinitely, because the medium is soon depleted of nutrients and enriched with wastes.

- (iii) *Stationary phase* : During the stationary phase, the growth rate slows down due to nutrient depletion and accumulation of toxic products. This phase is reached as the bacteria begin to exhaust the resources that are available to them. This phase is almost a constant value of the number of bacteria, since the rate of bacterial growth equals the rate of bacterial death.
- (iv) *Death phase* : In this last phase, the bacteria starts to die, as they run out of nutrients, ultimately reaching a nil value.

The most widely used expression for the growth rate of micro organisms is given by Monod as:

Total rate of microbial growth

$$\frac{dx}{dt} = \frac{\mu_m \cdot X \cdot S}{K_s + S} \quad \dots(28.1)$$

where μ_m = maximum specific growth rate

X = micro organism concentration

S = substrate concentration

K_s = substrate concentration at one half the maximum growth rate

Similarly, rate of substrate utilization,

$$\frac{dS}{dt} = \frac{k \cdot X \cdot S}{K_s + S} \quad \dots(28.2)$$

where k = maximum specific substrate utilization rate

Maintenance as Endogenous Respiration

Net growth rate of micro organisms is computed by subtracting from the total growth rate, the rate of micro organisms endogenously decayed to satisfy maintenance energy requirement. Therefore,

Net rate of microbial growth

$$= \frac{\mu_m \cdot X \cdot S}{K_s + S} - k_d \cdot X \quad \dots(28.3)$$

where k_d = endogenous decay coefficient

(c) A large stream has a reoxygenation constant of 0.4 per day. At a velocity of 0.85 m/s; and at the point at which an organic pollutant is discharged, it is saturated with oxygen at 10 mg/L ($D_0 = 0$). Below the outfall, the ultimate demand for oxygen is found to be 20 mg/L and the deoxygenation constant is 0.2 per day. What is the dissolved oxygen at 48.3 km downstream? (10)

[Solution : $K_R = 0.4/\text{day}$

$$K_D = 0.2/\text{day}$$

$$D_s = \text{Saturation DO} = 10 \text{ mg/L}$$

$$D_0 = \text{Initial D.O. deficit} = 0$$

$$L = Y_u = \text{Ultimate BOD of the mix} = 20 \text{ mg/L}$$

We have to compute the D.O. Deficit created by the sewage flow at a point 48.3 km downstream. Since the flow velocity of the stream is 0.85 m/s, the sewage discharged will reach this point after time t , given by

$$S = \text{Velocity} \times \text{Time}$$

$$48.3 \text{ km} = 0.85 \text{ m/s} \times \text{Time (t)}$$

$$\text{or Time (t)} = \frac{48.3 \times 1000 \text{ m}}{0.85 \text{ m/s}}$$

$$\text{or } t = \frac{48.3 \times 1000}{0.85} \times \frac{1}{3600 \times 24} \text{ days} = 0.6577 \text{ days}$$

The D.O. deficit after t day (D_t) is now given by Eq. (8.3) as :

$$D_t = \frac{K_D L}{K_R - K_D} \left[(10)^{-K_D t} - (10)^{-K_R t} \right] + \left[D_0 \times (10)^{-K_R t} \right]$$

$$\text{or } D_t = \left[\frac{0.2 \times 20}{0.4 - 0.2} \right] \left[(10)^{-0.2 \times 0.6577} - (10)^{-0.4 \times 0.6577} \right] + \left[0 \times (10)^{-0.4 \times 0.6577} \right]$$

$$\text{or } D_t = 20 \left[\frac{1}{(10)^{0.13154}} - \frac{1}{(10)^{0.26308}} \right]$$

$$= 20 [0.76 - 0.546] = 4.29 \text{ mg/L}$$

The D.O. left = Initial DO - DO deficit

$$= 10 - 4.29 = 5.71 \text{ mg/L. Ans. }]$$

Q. 3. (c) Design a rectangular grit chamber for a flow of 40 MLD. Specific gravity = 2.65 and size to be removed is 0.2 mm.

Find the

(a) settling velocity of 0.2 mm particles,

(b) critical horizontal velocity of flow, and

(c) size of the grit chamber

Assume kinematic viscosity of the liquid = $1.0 \times 10^{-2} \text{ cm}^2/\text{s}$. (10)

[Hint : Pl. refer Solved Example 9.2 (a).]

Q. 4. (b) 1200 m long storm sewer collects wastewater from a catchment area of 50 hectare, where 35% area is covered by roof ($I = 0.9$), 20% area is covered by pavements ($I = 0.8$) and 45% area is covered by open land ($I = 0.13$). Determine the average I , and diameter of storm sewer line assuming

(i) the time of entry = 3 min

(ii) velocity of full flow = 1.50 m/s

(iii) $n = 0.013$ and slope = 0.001

I = runoff ratio. (10)

[Solution : $A = 50 \text{ ha}$

K = (or I here) varies, and hence

Average K (or I)

$$= \frac{K_1 A_1 + K_2 A_2 + K_3 A_3}{A}$$

$$= \frac{0.9 \times 0.35A + 0.8 \times 0.20A + 0.13 \times 0.45A}{A}$$

$$= [0.9 \times 0.35 + 0.8 \times 0.20 + 0.13 \times 0.45]$$

$$= 0.5335. \text{ Ans.}$$

Now, velocity of full flow in sewer = 1.5 m/s.

$$\text{But } V = \frac{1}{n} R^{2/3} \sqrt{S} \text{ (Mannings formula)}$$

$$\therefore 1.5 = \frac{1}{0.013} R^{2/3} \sqrt{0.001}$$

$$\text{or } R^{2/3} = \frac{1.5 \times 0.013}{\sqrt{0.001}} = 0.6166$$

$$\text{or } \left(\frac{D}{4} \right)^{2/3} = 0.6166$$

$$\text{or } \frac{D}{4} = (0.6166)^{3/2} = 0.484$$

$$\text{or } D = 1.94 \text{ m. Ans. }]$$

Q. 7. (b) Draw and discuss the single stack system of plumbing. (10)

Appendix Table A-1. Density of Dry Air in kg/m^3 at Different Temperatures and Different Pressures

°C	Pressure—kPa									
	110.0	100.0	90.0	80.0	70.0	60.0	50.0	40.0	30.0	20.0
0	1.4029	1.2754	1.1478	1.0203	0.8928	0.7652	0.6377	0.5102	0.3826	0.2551
1	1.3978	1.2707	1.1437	1.0165	0.8895	0.7624	0.6354	0.5083	0.3812	0.2541
2	1.3927	1.2661	1.1386	1.0129	0.8863	0.7597	0.6331	0.5064	0.3798	0.2532
3	1.3877	1.2615	1.1354	1.0092	0.8831	0.7569	0.6308	0.5046	0.3785	0.2523
4	1.3827	1.2570	1.1313	1.0056	0.8799	0.7542	0.6285	0.5028	0.3771	0.2514
5	1.3777	1.2525	1.1272	1.0020	0.8767	0.7515	0.6262	0.5010	0.3757	0.2505
6	1.3728	1.2480	1.1232	0.9984	0.8736	0.7488	0.6240	0.4992	0.3744	0.2496
7	1.3679	1.2435	1.1192	0.9948	0.8705	0.7461	0.6218	0.4974	0.3731	0.2487
8	1.3630	1.2391	1.1152	0.9913	0.8674	0.7435	0.6195	0.4956	0.3717	0.2478
9	1.3582	1.2347	1.1112	0.9878	0.8643	0.7408	0.6174	0.4939	0.3704	0.2469
10	1.3534	1.2303	1.1073	0.9843	0.8612	0.7382	0.6152	0.4921	0.3691	0.2461
11	1.3486	1.2260	1.1034	0.9808	0.8582	0.7356	0.6130	0.4904	0.3678	0.2452
12	1.3439	1.2217	1.0995	0.9774	0.8552	0.7330	0.6109	0.4887	0.3665	0.2443
13	1.3392	1.2174	1.0957	0.9740	0.8522	0.7305	0.6087	0.4870	0.3652	0.2435
14	1.3345	1.2132	1.0919	0.9706	0.8492	0.7279	0.6056	0.4853	0.3640	0.2426
15	1.3299	1.2090	1.0881	0.9672	0.8463	0.7254	0.6045	0.4836	0.3627	0.2418
16	1.3253	1.2048	1.0843	0.9638	0.8434	0.7229	0.6024	0.4819	0.3614	0.2410
17	1.3207	1.2007	1.0806	0.9605	0.8405	0.7204	0.6003	0.4803	0.3602	0.2401
18	1.3162	1.1965	1.0769	0.9572	0.8376	0.7179	0.5983	0.4786	0.3590	0.2393
19	1.3117	1.1924	1.0732	0.9540	0.8347	0.7155	0.5962	0.4770	0.3577	0.2385
20	1.3072	1.1884	1.0695	0.9507	0.8319	0.7130	0.5942	0.4753	0.3565	0.2377
21	1.3028	1.1843	1.0659	0.9475	0.8290	0.7106	0.5922	0.4737	0.3553	0.2369
22	1.2984	1.1803	1.0623	0.9443	0.8262	0.7082	0.5902	0.4721	0.3541	0.2361
23	1.2940	1.1763	1.0587	0.9411	0.8234	0.7058	0.5882	0.4705	0.3529	0.2353
24	1.2896	1.1724	1.0551	0.9379	0.8207	0.7034	0.5862	0.4690	0.3517	0.2345

USEFUL DATA AND TABLES

Pressure—kPa

°C	110.0	100.0	90.0	80.0	70.0	60.0	50.0	40.0	30.0	20.0	10.0
25	1.2853	1.1694	1.0516	0.9348	0.8179	0.7011	0.5842	0.4674	0.3505	0.2337	0.1168
26	1.2810	1.1645	1.0481	0.9316	0.8152	0.6987	0.5823	0.4658	0.3494	0.2329	0.1165
27	1.2767	1.1607	1.0446	0.9285	0.8125	0.6964	0.5803	0.4643	0.3482	0.2321	0.1161
28	1.2725	1.1568	1.0411	0.9254	0.8088	0.6941	0.5784	0.4627	0.3470	0.2314	0.1157
29	1.2683	1.1530	1.0377	0.9224	0.8071	0.6918	0.5765	0.4612	0.3459	0.2306	0.1153
30	1.2641	1.1492	1.0343	0.9193	0.8044	0.6896	0.5746	0.4597	0.3448	0.2298	0.1149
31	1.2599	1.1459	1.0309	0.9163	0.8018	0.6872	0.5727	0.4582	0.3436	0.2291	0.1145
32	1.2558	1.1416	1.0275	0.9133	0.7991	0.6850	0.5708	0.4567	0.3425	0.2283	0.1142
33	1.2517	1.1379	1.0241	0.9103	0.7965	0.6827	0.5690	0.4542	0.3414	0.2276	0.1138
34	1.2476	1.1342	1.0208	0.9074	0.7939	0.6805	0.5671	0.4537	0.3403	0.2268	0.1134
35	1.2436	1.1305	1.0176	0.9044	0.7914	0.6783	0.5653	0.4522	0.3392	0.2261	0.1131
36	1.2396	1.1269	1.0142	0.9015	0.7888	0.6761	0.5634	0.4507	0.3381	0.2254	0.1127
37	1.2356	1.1232	1.0109	0.8986	0.7863	0.6739	0.5616	0.4493	0.3370	0.2246	0.1123
38	1.2316	1.1196	1.0077	0.8957	0.7837	0.6718	0.5598	0.4479	0.3359	0.2239	0.1120
39	1.2276	1.1160	1.0044	0.8928	0.7812	0.6696	0.5580	0.4464	0.3348	0.2232	0.1116
40	1.2237	1.1125	1.0012	0.8900	0.7787	0.6675	0.5562	0.4450	0.3337	0.2225	0.1112
41	1.2198	1.1089	0.9980	0.8872	0.7763	0.6654	0.5545	0.4436	0.3327	0.2218	0.1109
42	1.2160	1.1054	0.9949	0.8843	0.7738	0.6633	0.5527	0.4422	0.3316	0.2211	0.1105
43	1.2121	1.1019	0.9917	0.8815	0.7713	0.6612	0.5510	0.4408	0.3306	0.2204	0.1102
44	1.2083	1.0984	0.9886	0.8788	0.7689	0.6591	0.5492	0.4394	0.3295	0.2197	0.1098
45	1.2045	1.0950	0.9855	0.8760	0.7665	0.6570	0.5476	0.4380	0.3285	0.2190	0.1095
46	1.2007	1.0916	0.9824	0.8732	0.7641	0.6549	0.5458	0.4365	0.3275	0.2183	0.1092
47	1.1970	1.0882	0.9793	0.8705	0.7617	0.6529	0.5441	0.4353	0.3264	0.2176	0.1088
48	1.1932	1.0848	0.9763	0.8678	0.7593	0.6509	0.5424	0.4339	0.3254	0.2170	0.1085
49	1.1895	1.0814	0.9733	0.8651	0.7570	0.6486	0.5407	0.4326	0.3244	0.2163	0.1081

Pressure—kPa

°C	110.0	100.0	90.0	80.0	70.0	60.0	50.0	40.0	30.0	20.0	10.0
0	1.1859	1.0780	0.9702	0.8624	0.7546	0.6468	0.5390	0.4312	0.3234	0.2156	0.1078
1	1.1822	1.0747	0.9673	0.8598	0.7523	0.6448	0.5374	0.4299	0.3224	0.2149	0.1076
2	1.1786	1.0714	0.9643	0.8571	0.7500	0.6429	0.5357	0.4286	0.3214	0.2143	0.1071
3	1.1750	1.0681	0.9613	0.8545	0.7477	0.6409	0.5341	0.4273	0.3204	0.2136	0.1068
4	1.1714	1.0649	0.9584	0.8519	0.7454	0.6389	0.5324	0.4259	0.3195	0.2130	0.1065
5	1.1678	1.0616	0.9555	0.8493	0.7431	0.6370	0.5308	0.4247	0.3185	0.2123	0.1062
6	1.1642	1.0584	0.9526	0.8467	0.7409	0.6350	0.5292	0.4234	0.3176	0.2117	0.1058
7	1.1607	1.0552	0.9497	0.8442	0.7386	0.6331	0.5276	0.4221	0.3166	0.2110	0.1055
8	1.1572	1.0520	0.9468	0.8416	0.7364	0.6312	0.5260	0.4208	0.3156	0.2104	0.1052
9	1.1537	1.0488	0.9440	0.8391	0.7342	0.6293	0.5244	0.4195	0.3147	0.2098	0.1049
10	1.1503	1.0457	0.9411	0.8365	0.7320	0.6274	0.5228	0.4183	0.3137	0.2091	0.1046
11	1.1468	1.0426	0.9383	0.8340	0.7298	0.6255	0.5213	0.4170	0.3128	0.2085	0.1043
12	1.1434	1.0394	0.9355	0.8316	0.7276	0.6237	0.5197	0.4158	0.3118	0.2079	0.1039
13	1.1400	1.0364	0.9327	0.8291	0.7255	0.6218	0.5182	0.4145	0.3109	0.2073	0.1036
14	1.1366	1.0333	0.9300	0.8266	0.7233	0.6200	0.5166	0.4133	0.3100	0.2067	0.1033
15	1.1333	1.0302	0.9272	0.8242	0.7212	0.6181	0.5151	0.4121	0.3091	0.2060	0.1030
16	1.1299	1.0272	0.9245	0.8218	0.7190	0.6163	0.5136	0.4109	0.3082	0.2054	0.1027
17	1.1266	1.0242	0.9218	0.8193	0.7169	0.6145	0.5121	0.4097	0.3073	0.2048	0.1024
18	1.1233	1.0212	0.9191	0.8169	0.7148	0.6127	0.5106	0.4085	0.3064	0.2042	0.1021
19	1.1200	1.0182	0.9164	0.8146	0.7127	0.6109	0.5091	0.4073	0.3056	0.2036	0.1018
20	1.1167	1.0152	0.9137	0.8122	0.7107	0.6091	0.5076	0.4061	0.3046	0.2030	0.1015
21	1.1135	1.0123	0.9110	0.8098	0.7086	0.6074	0.5061	0.4049	0.3037	0.2026	0.1012
22	1.1103	1.0093	0.9084	0.8076	0.7065	0.6066	0.5047	0.4037	0.3028	0.2019	0.1009
23	1.1071	1.0064	0.9058	0.8051	0.7045	0.6039	0.5032	0.4026	0.3019	0.2013	0.1006
24	1.1039	1.0036	0.9032	0.8028	0.7025	0.6021	0.5018	0.4014	0.3011	0.2007	0.1004

USEFUL DATA AND TABLES

Pressure—kPa

°C	110.0	100.0	90.0	80.0	70.0	60.0	50.0	40.0	30.0	20.0	10.0
75	1.1007	0.0006	0.9006	0.8005	0.7004	0.6004	0.5003	0.4003	0.3002	0.2001	0.1001
76	1.0976	0.9978	0.8980	0.7982	0.6984	0.5987	0.4989	0.3991	0.2993	0.1996	0.0998
77	1.0944	0.9949	0.8954	0.7959	0.6965	0.5970	0.4975	0.3980	0.2985	0.1990	0.0995
78	1.0913	0.9921	0.8929	0.7937	0.6945	0.5953	0.4960	0.3968	0.2976	0.1984	0.0992
79	1.0882	0.9893	0.8904	0.7914	0.6925	0.5936	0.4946	0.3957	0.2968	0.1979	0.0989
80	1.0851	0.9865	0.8878	0.7892	0.6905	0.5919	0.4932	0.3946	0.2959	0.1973	0.0986
81	1.0821	0.9837	0.8853	0.7870	0.6886	0.5902	0.4918	0.3935	0.2951	0.1967	0.0984
82	1.0790	0.9809	0.8828	0.7847	0.6868	0.5886	0.4905	0.3924	0.2943	0.1962	0.0981
83	1.0760	0.9782	0.8804	0.7825	0.6847	0.5869	0.4891	0.3913	0.2935	0.1956	0.0978
84	1.0730	0.9754	0.8779	0.7803	0.6828	0.5853	0.4877	0.3902	0.2926	0.1951	0.0975
85	1.0700	0.9727	0.8754	0.7782	0.6809	0.5836	0.4864	0.3891	0.2918	0.1945	0.0973
86	1.0670	0.9700	0.8730	0.7760	0.6790	0.5820	0.4850	0.3880	0.2910	0.1940	0.0970
87	1.0640	0.9673	0.8706	0.7738	0.6771	0.5804	0.4836	0.3869	0.2902	0.1935	0.0967
88	1.0611	0.9646	0.8682	0.7717	0.6752	0.5788	0.4823	0.3859	0.2894	0.1929	0.0965
89	1.0582	0.9620	0.8658	0.7696	0.6734	0.5772	0.4810	0.3848	0.2886	0.1924	0.0962
90	1.0552	0.9593	0.8634	0.7674	0.6715	0.5756	0.4797	0.3837	0.2878	0.1919	0.0959
91	1.0523	0.9567	0.8610	0.7653	0.6697	0.5740	0.4783	0.3827	0.2870	0.1913	0.0957
92	1.0495	0.9541	0.8587	0.7632	0.6678	0.5724	0.4770	0.3816	0.2862	0.1908	0.0954
93	1.0466	0.9514	0.8563	0.7612	0.6660	0.5709	0.4757	0.3806	0.2854	0.1903	0.0951
94	1.0437	0.9489	0.8540	0.7591	0.6642	0.5693	0.4744	0.3795	0.2847	0.1898	0.0949
95	1.0409	0.9463	0.8517	0.7570	0.6624	0.5678	0.4731	0.3785	0.2839	0.1893	0.0946
96	1.0381	0.9437	0.8493	0.7550	0.6606	0.5662	0.4719	0.3775	0.2831	0.1887	0.0944
97	1.0353	0.9412	0.8471	0.7529	0.6588	0.5647	0.4706	0.3765	0.2824	0.1882	0.0941
98	1.0325	0.9386	0.8448	0.7508	0.6570	0.5632	0.4693	0.3755	0.2816	0.1877	0.0939
99	1.0297	0.9361	0.8425	0.7489	0.6553	0.5617	0.4681	0.3744	0.2808	0.1872	0.0936
100	1.0270	0.9336	0.8402	0.7469	0.6535	0.5602	0.4668	0.3734	0.2801	0.1867	0.0934

Source: Robert J. List, Smithsonian Meteorological Tables.

Properties of Air at Standard Conditions
and 298° K Temperature)

M	28.97
$R = \frac{R_u}{M_u}$	287 J/kg . K
c_p	1.005 J/kg . K
c_v	718 J/kg . K
ρ	1.185 kg/m ³
μ	1.8515×10^{-5} Pa . s
ν	1.5624×10^{-5} m ² /s
k	0.0257 W/m . K
k	1.3997
Pr	0.720

Important Properties of Water

Vapour pressure kN/m ²	Viscosity	
	Dynamic (μ) in N-sec/m ²	Kinematic (ν) in m ² /sec $\nu = \frac{\mu}{\rho}$
(4)	(5)	(6)
0.611	17.97×10^{-4}	1.78×10^{-6}
0.872	15.17×10^{-4}	1.518×10^{-6}
1.225	13.06×10^{-4}	1.310×10^{-6}
1.703	11.25×10^{-4}	1.124×10^{-6}
2.334	10.03×10^{-4}	1.009×10^{-6}
3.1609	8.02×10^{-4}	0.804×10^{-6}
4.2600	6.52×10^{-4}	0.654×10^{-6}
5.6938	4.70×10^{-4}	0.478×10^{-6}
7.383	3.56×10^{-4}	0.368×10^{-6}
9.502	2.82×10^{-4}	0.295×10^{-6}

USEFUL DATA AND TABLES

Appendix Table A-7. Frequently used Constants

Standard atmospheric pressure	P_{atm}	101.325 kPa = 101.325 N/m ²
Standard gravitational acceleration	g	9.8067 m/s ²
Universal gas constant	R_u	8.314 J/kilo . mol . K
Electrical permittivity constant	ϵ_0	8.85×10^{-12} C/V . m
Electron charge	q_e	1.60×10^{-19} C
Boltzmann's constant	k	1.38×10^{-23} J/K
Joule's constant	J_u	4.184 J/cal
Farraday's constant	F	9.6487×10^7 C/kilo mole
Molecular mass of air	M_u	28.904 kg/kilo mole
Specific gas constant dry for air (R)	$= \frac{R_u}{M_u}$	$= \frac{8314}{28.904} = 287$ J/kg.K
Specific gas constant for water	$= R_u$	$= \frac{R_u}{M_u} = \frac{8314}{18}$ = 462 J/kg.K
Mathematical constants	e $\log_e 10 = \ln 10$ π	= 2.71828 = 2.30259 = 3.14159

Appendix Table A-8. Modern Periodic Table of the Elements

1A		2A		3A		4A		5A		6A		7A		8A		9A		10A		11A		12A		13A		14A		15A		16A		17A		18A		19A		20A		21A		22A		23A		24A		25A		26A		27A		28A		29A		30A		31A		32A		33A		34A		35A		36A		37A		38A		39A		40A		41A		42A		43A		44A		45A		46A		47A		48A		49A		50A		51A		52A		53A		54A		55A		56A		57A		58A		59A		60A		61A		62A		63A		64A		65A		66A		67A		68A		69A		70A		71A		72A		73A		74A		75A		76A		77A		78A		79A		80A		81A		82A		83A		84A		85A		86A		87A		88A		89A		90A		91A		92A		93A		94A		95A		96A		97A		98A		99A		100A		101A		102A		103A		104A		105A		106A		107A		108A		109A		110A		111A		112A		113A		114A		115A		116A		117A		118A		119A		120A																																																																																																																																																																																																																																																																																																																																																																																																																																																																																			
1	H	2	He	3	Li	4	Be	5	B	6	C	7	N	8	O	9	F	10	Ne	11	Na	12	Mg	13	Al	14	Si	15	P	16	S	17	Cl	18	Ar	19	K	20	Ca	21	Sc	22	Ti	23	V	24	Cr	25	Mn	26	Fe	27	Co	28	Ni	29	Cu	30	Zn	31	Ga	32	Ge	33	As	34	Se	35	Br	36	Kr	37	Rb	38	Sr	39	Y	40	Zr	41	Nb	42	Mo	43	Tc	44	Ru	45	Rh	46	Pd	47	Ag	48	Cd	49	In	50	Sn	51	Sb	52	Te	53	I	54	Xe	55	Cs	56	Ba	57	La	58	Ce	59	Pr	60	Nd	61	Pm	62	Sm	63	Eu	64	Gd	65	Tb	66	Dy	67	Ho	68	Er	69	Tm	70	Yb	71	Lu	72	Hf	73	Ta	74	W	75	Re	76	Os	77	Ir	78	Pt	79	Au	80	Hg	81	Tl	82	Pb	83	Bi	84	Po	85	At	86	Rn	87	Fr	88	Ra	89	Ac	90	Th	91	Pa	92	U	93	Np	94	Pu	95	Am	96	Cm	97	Bk	98	Cf	99	Es	100	Fm	101	Md	102	No	103	Lr	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																			
1.00794		4.00260		6.941	9.01218	22.98977	24.3050	26.98154	27.97693	28.97648	30.97376	31.97207	32.006	35.453	39.948	40.078	44.95591	47.88	50.9415	51.9961	54.9380	55.9349	58.9332	58.969	63.546	65.38	68.9259	72.61	74.92159	78.96	83.80	87.62	88.90585	91.224	92.90638	95.94	97.9072	101.07	102.90550	106.42	107.8682	112.411	114.82	118.710	127.60	126.90447	131.29	132.90543	137.327	140.90768	158.92534	162.5023	173.0447	174.967	180.9479	186.934	188.9059	198.906	197.04	200.9706	208.9804	209.98686	223.0197	227.0278	227.0337	232.0377	238.02891	244.04094	247.0703	252.083	257.1037	262.1098	268.1072	270.1047	280.1064	285.1064	289.1064	293.1064	297.1064	301.1064	305.1064	309.1064	313.1064	317.1064	321.1064	325.1064	329.1064	333.1064	337.1064	341.1064	345.1064	349.1064	353.1064	357.1064	361.1064	365.1064	369.1064	373.1064	377.1064	381.1064	385.1064	389.1064	393.1064	397.1064	401.1064	405.1064	409.1064	413.1064	417.1064	421.1064	425.1064	429.1064	433.1064	437.1064	441.1064	445.1064	449.1064	453.1064	457.1064	461.1064	465.1064	469.1064	473.1064	477.1064	481.1064	485.1064	489.1064	493.1064	497.1064	501.1064	505.1064	509.1064	513.1064	517.1064	521.1064	525.1064	529.1064	533.1064	537.1064	541.1064	545.1064	549.1064	553.1064	557.1064	561.1064	565.1064	569.1064	573.1064	577.1064	581.1064	585.1064	589.1064	593.1064	597.1064	601.1064	605.1064	609.1064	613.1064	617.1064	621.1064	625.1064	629.1064	633.1064	637.1064	641.1064	645.1064	649.1064	653.1064	657.1064	661.1064	665.1064	669.1064	673.1064	677.1064	681.1064	685.1064	689.1064	693.1064	697.1064	701.1064	705.1064	709.1064	713.1064	717.1064	721.1064	725.1064	729.1064	733.1064	737.1064	741.1064	745.1064	749.1064	753.1064	757.1064	761.1064	765.1064	769.1064	773.1064	777.1064	781.1064	785.1064	789.1064	793.1064	797.1064	801.1064	805.1064	809.1064	813.1064	817.1064	821.1064	825.1064	829.1064	833.1064	837.1064	841.1064	845.1064	849.1064	853.1064	857.1064	861.1064	865.1064	869.1064	873.1064	877.1064	881.1064	885.1064	889.1064	893.1064	897.1064	901.1064	905.1064	909.1064	913.1064	917.1064	921.1064	925.1064	929.1064	933.1064	937.1064	941.1064	945.1064	949.1064	953.1064	957.1064	961.1064	965.1064	969.1064	973.1064	977.1064	981.1064	985.1064	989.1064	993.1064	997.1064	1001.1064	1005.1064	1009.1064	1013.1064	1017.1064	1021.1064	1025.1064	1029.1064	1033.1064	1037.1064	1041.1064	1045.1064	1049.1064	1053.1064	1057.1064	1061.1064	1065.1064	1069.1064	1073.1064	1077.1064	1081.1064	1085.1064	1089.1064	1093.1064	1097.1064	1101.1064	1105.1064	1109.1064	1113.1064	1117.1064	1121.1064	1125.1064	1129.1064	1133.1064	1137.1064	1141.1064	1145.1064	1149.1064	1153.1064	1157.1064	1161.1064	1165.1064	1169.1064	1173.1064	1177.1064	1181.1064	1185.1064	1189.1064	1193.1064	1197.1064	1201.1064	1205.1064	1209.1064	1213.1064	1217.1064	1221.1064	1225.1064	1229.1064	1233.1064	1237.1064	1241.1064	1245.1064	1249.1064	1253.1064	1257.1064	1261.1064	1265.1064	1269.1064	1273.1064	1277.1064	1281.1064	1285.1064	1289.1064	1293.1064	1297.1064	1301.1064	1305.1064	1309.1064	1313.1064	1317.1064	1321.1064	1325.1064	1329.1064	1333.1064	1337.1064	1341.1064	1345.1064	1349.1064	1353.1064	1357.1064	1361.1064	1365.1064	1369.1064	1373.1064	1377.1064	1381.1064	1385.1064	1389.1064	1393.1064	1397.1064	1401.1064	1405.1064	1409.1064	1413.1064	1417.1064	1421.1064	1425.1064	1429.1064	1433.1064	1437.1064	1441.1064	1445.1064	1449.1064	1453.1064	1457.1064	1461.1064	1465.1064	1469.1064	1473.1064	1477.1064	1481.1064	1485.1064	1489.1064	1493.1064	1497.1064	1501.1064	1505.1064	1509.1064	1513.1064	1517.1064	1521.1064	1525.1064	1529.1064	1533.1064	1537.1064	1541.1064	1545.1064	1549.1064	1553.1064	1557.1064	1561.1064	1565.1064	1569.1064	1573.1064	1577.1064	1581.1064	1585.1064	1589.1064	1593.1064	1597.1064	1601.1064	1605.1064	1609.1064	1613.1064	1617.1064	1621.1064	1625.1064	1629.1064	1633.1064	1637.1064	1641.1064	1645.1064	1649.1064	1653.1064	1657.1064	1661.1064	1665.1064	1669.1064	1673.1064	1677.1064	1681.1064	1685.1064	1689.1064	1693.1064	1697.1064	1701.1064	1705.1064	1709.1064	1713.1064	1717.1064	1721.1064	1725.1064	1729.1064	1733.1064	1737.1064	1741.1064	1745.1064	1749.1064	1753.1064	1757.1064	1761.1064	1765.1064	1769.1064	1773.1064	1777.1064	1781.1064	1785.1064	1789.1064	1793.1064	1797.1064	1801.1064	1805.1064	1809.1064	1813.1064	1817.1064	1821.1064	1825.1064	1829.1064	1833.1064	1837.1064	1841.1064	1845.1064	1849.1064	1853.1064	1857.1064	1861.1064	1865.1064	1869.1064	1873.1064	1877.1064	1881.1064	1885.1064	1889.1064	1893.1064	1897.1064	1901.1064	1905.1064	1909.1064	1913.1064	1917.1064	1921.1064	1925.1064	1929.1064	1933.1064	1937.1064	1941.1064	1945.1064	1949.1064	1953.1064	1957.1064	1961.1064	1965.1064	1969.1064	1973.1064	1977.1064	1981.1064	1985.1064	1989.1064	1993.1064	1997.1064	2001.1064	2005.1064	2009.1064	2013.1064	2017.1064	2021.1064	2025.1064	2029.1064	2033.1064	2037.1064	2041.1064	2045.1064	2049.1064	2053.1064	2057.1064	2061.1064	2065.1064	2069.1064	2073.1064	2077.1064	2081.1064	2085.1064	2089.1064	2093.1064	2097.1064	2101.1064	2105.1064	2109.1064	2113.1064	2117.1064	2121.1064	2125.1064	2129.1064	2133.1064	2137.1064	2141.1064	2145.1064	2149.1064	2153.1064	2157.1064	2161.1064	2165.1064	2169.1064	2173.1064	2177.1064	2181.1064	2185.1064	2189.1064	2193.1064	2197.1064	2201.1064	2205.1064	2209.1064	2213.1064	2217.1064	2221.1064	2225.1064	2229.1064	2233.1064	2237.1064	2241.1064	2245.1064	2249.1064	2253.1064	2257.1064	2261.1064	2265.1064	2269.1064	2273.1064	2277.1064	2281.1064	2285.1064	2289.1064	2293.1064	2297.1064	2301.1064	2305.1064	2309.1064	2313.1064	2317.1064	2321.1064	2325.1064	2329.1064	2333.1064	2337.1064	2341.1064	2345.1064	2349.1064	2353.1064	2357.1064	2361.1064	2365.1064	2369.1064	2373.1064	2377.1064	2381.1064	2385.1064	2389.1064	2393.1064	2397.1064	2401.1064	2405.1064	2409.1064	2413.1064	2417.1064	2421.1064	2425.1064	2429.1064	2433.1064	2437.1064	2441.1064	2445.1064	2449.1064	2453.1064	2457.1064	2461.1064	2465.1064	2469.1064	2473.1064	2477.1064	2481.1064	2485.1064	2489.1064	2493.1064	2497.1064	2501.1064	2505.1064	2509.1064	2513.1064	2517.1064	2521.1064	2525.1064	2529.1064	2533.1064	2537.1064	2541.1064	2545.1064	2549.1064	2553.1064	2557.1064	2561.1064	2565.1064	2569.1064	2573.1064	2577.1064	2581.1064	2585.1064	2589.1064	2593.1064	2597.1064	2601.1064	2605.1064	2609.1064	2613.1064	2617.1064	2621.1064	2625.1064	2629.1064	2633.1064	2637.1064	2641.1064	2645.1064	2649.1064	2653.1064	2657.1064	2661.1064	2665.1064	2669.1064	2673.1064	2677.1064	2681.1064	2685.1064	2689.1064	2693.1064	2697.1064	2701.1064	2705.1064	2709.1064	2713.1064	2717.1064	2721.1064	2725.1064	2729.1064	2733.1064	2737.1064	2741.1064	2745.1064	2749.1064	2753.1064	2757.1064	2761.1064	2765.1064	2769.1064	2773.1064	2777.1064	2781.1064	2785.1064	2789.1064	2793.1064	2797.1064	2801.1064

**Appendix Table A-9. The Basic Units Used
in Radiation and Radioactivity**

(i)	1 Roentgen unit of ionizing radiation (r or R)	2.58×10^4 calories per kg of energy.
(ii)	1 Grey (Gy)	Radiation with transfer of 1 joule of energy per kg of absorbing medium. Unit of dose to human body.
(iii)	1 rem (roentgen)	Dose in rad $\times$ R.B.E. (Relative biological effectiveness for gamma and X radiations = 1 approximately) = 1 rad.
(iv)	1 Curie (Ci)	3.7×10^{10} disintegrations per second (dps) of the radioactive material.
(v)	1 Pico Curie = 1 pCi = 10^{-12} Ci	0.037 dps = 0.037 Bq
(vi)	1 Becquerel (Bq)	One disintegration per second (dps) $= \frac{1}{0.037}$ pCi = 27 pCi
(vii)	1 AMU or 1 amu (atomic mass unit)	931 MeV $= \frac{1}{12}$ mass of C-12 atom $= \frac{1}{12} \frac{12}{\text{Avogadro's No.}} = \frac{1}{12} \left[\frac{12}{6.022 \times 10^{23}} \right]$ $= 1.6606 \times 10^{-24}$ gm
(viii)	1 MeV	10^6 eV
(ix)	1 G. eV	10^9 eV

Appendix Table A-10. List of 163 Countries who have Signed the Montreal Protocol

S. No. (1)	Name of Country (2)	S. No. (1)	Name of Country (2)
1.	Albania	37.	Democratic Republic of the Congo
2.	Algeria	38.	Republic of the Congo
3.	Angola	39.	Costa Rica
4.	Antigua Barbuda	40.	Cote d'Ivoire
5.	Argentina	41.	Croatia
6.	Armenia	42.	Cuba
7.	Australia	43.	Cyprus
8.	Austria	44.	Czech Republic
9.	Azerbaijan	45.	Denmark
10.	Bahamas	46.	Djibouti
11.	Bahrain	47.	Dominica
12.	Bangladesh	48.	Dominican Republic
13.	Barbados	49.	Ecuador
14.	Belarus	50.	Egypt
15.	Belgium	51.	El Salvador
16.	Belize	52.	Estonia
17.	Benin	53.	Ethiopia
18.	Bolivia	54.	European Union
19.	Bosnia and Herzegovina	55.	Fiji
20.	Botswana	56.	Finland
21.	Brazil	57.	France
22.	Brunei	58.	Gabon
23.	Bulgaria	59.	Gambia
24.	Burkina Faso	60.	Georgia
25.	Burma	61.	Germany
26.	Burundi	62.	Ghana
27.	Cambodia	63.	Greece
28.	Cameroon	64.	Grenada
29.	Canada	65.	Guatemala
30.	Cape Verde	66.	Guinea
31.	Central African Republic	67.	Guyana
32.	Chad	68.	Haiti
33.	Chile	69.	Honduras
34.	People's Republic of China	70.	Hungary
35.	Colombia	71.	Iceland
36.	Comoros		

Contd...

S. No. (1)	Name of Country (2)	S. No. (1)	Name of Country (2)
72.	India	110.	Monaco
73.	Indonesia	111.	Mongolia
74.	Iran	112.	Morocco
75.	Ireland	113.	Mozambique
76.	Israel	114.	Namibia
77.	Italy	115.	Nauru
78.	Jamaica	116.	Nepal
79.	Japan	117.	Netherlands
80.	Jordan	118.	New Zealand
81.	Kazakhstan	119.	Nicaragua
82.	Kenya	120.	Niger
83.	Kiribati	121.	Nigeria
84.	North Korea	122.	Norway
85.	South Korea	123.	Oman
86.	Kuwait	124.	Pakistan
87.	Kyrgyzstan	125.	Palau
88.	Laos	126.	Panama
89.	Latvia	127.	Papua New Guinea
90.	Lebanon	128.	Paraguay
91.	Lesotho	129.	Peru
92.	Liberia	130.	Philippines
93.	Libya	131.	Poland
94.	Liechtenstein	132.	Portugal
95.	Lithuania	133.	Qatar
96.	Luxembourg	134.	Romania
97.	Republic of Macedonia	135.	Russia
98.	Madagascar	136.	Rwanda
99.	Malawi	137.	Saint Kitts and Nevis
100.	Malaysia	138.	Saint Lucia
101.	Maldives	139.	Saint Vincent and the Grenadines
102.	Mali	140.	Samoa
103.	Malta	141.	Sao Tome and Principe
104.	Marshall Islands	142.	Saudi Arabia
105.	Mauritania	143.	Senegal
106.	Mauritius	144.	Serbia and Montenegro
107.	Mexico	145.	Seychelles
108.	Federated States of Micronesia	146.	Sierra Leone
109.	Moldova	147.	Singapore

Contd...

S. No. (1)	Name of Country (2)	S. No. (1)	Name of Country (2)
148.	Slovakia	166.	Trinidad and Tobago
149.	Slovenia	167.	Tunisia
150.	Solomon Islands	168.	Turkey
151.	Somalia	169.	Turkmenistan
152.	South Africa	170.	Tuvalu
153.	Spain	171.	Uganda
154.	Sri Lanka	172.	Ukraine
155.	Sudan	173.	United Arab Emirates
156.	Suriname	174.	United Kingdom
157.	Swaziland	175.	United States
158.	Sweden	176.	Uruguay
159.	Switzerland	177.	Uzbekistan
160.	Syria	178.	Vanuatu
161.	Tajikistan	179.	Venezuela
162.	Tanzania	180.	Vietnam
163.	Thailand	181.	Yemen
164.	Togo	182.	Zambia
165.	Tonga	183.	Zimbabwe

Appendix Table A-11. Useful Conversion Factors

Length (m)	
1 inch (in)	= 0.0254 m
1 foot	= 0.3048 m
1 mile	= 1.609 km
1 micron (m)	= 10^{-6} m
1 Angstrom (Å)	= 10^{-10} m
Mass (kg)	
1 ounce	= 28.35 g
1 ounce	= 0.02835 kg
1 pound	= 0.4536 kg
1 ton	= 1000 kg
Area (m²)	
1 in ²	= 6.4516 cm ²
1 ft ²	= 929.03 cm ²
1 ft ²	= 0.0929 m ²
1 Acre	= 4046.85 m ²
1 Acre	= 0.4046 hectare
1 mile ²	= 2.59 km ²

Volume (m³)	
1 inch ³	= 16.387 cm ³
1 inch ³	= 0.01639 l
1 ft ³	= 0.0283 m ³
1 ft ³	= 28.316 l
1 gallon (U.S.)	= 3.785 l
1 gallon (U.S.)	= 0.003785 m ³
1 litre	= 10^{-3} m ³
Energy (J = N.m)	
1 joule	= 1 kg-m ² /s ²
1 erg	= 1 g-cm ² /s ²
1 joule	= 10 ⁷ ergs
1 cal	= 4.184 J
1 ft-lb _y	= 1.3558 J
1 Btu	= 1.055 × 10 ³ J
1 hp-hr	= 2.6845 × 10 ⁶ J
1 kW-hr	= 3.600 × 10 ⁶ J
Power (W = J/s)	
1 hp	= 745.7 W
1 Btu/s	= 1055 W
1 ft-lb/s	= 1.3558 W
1 kW	= 1.341 hp
Pressure (Pa = N/m²)	
1 kg/m.s ²	= 1 N/m ²
1 lb _f /ft ²	= 47.88 Pa
1 atm	= 1.0133 × 10 ⁵ Pa
1 mm Hg	= 1.3332 × 10 ³ Pa
1 in Hg	= 3.3864 × 10 ³ Pa
1 bar	= 10 ⁵ Pa
1 mm H ₂ O	= 9.806 Pa
1 in H ₂ O	= 249.09 Pa
Density (kg/m³)	
1 g/cc	= 10 ³ kg/m ³
1 mg/l	= 10 ⁻³ kg/m ³
1 lbm/ft ³	= 16 kg/m ³
Viscosity (N.s/m²)	
1 kg/m.s	= 1 N.s/m ²
1 cP	= 10 ⁻³ N.s/m ²
1 lbm/ft.s	= 1.488 N.s/m ²
1 lbm/ft.hr	= 4.1338 N.s/m ²
Thermal conductivity (W/m K)	
1 cal/s.cm.K	= 418.4 W/m K (K for Kelvin)
1 kcal/hr.m.K	= 1.1623 W/m K
1 Btu/hr.ft. °F	= 1.7307 W/m K

Bibliography

General Publications

1. *Water and Waste-water Engineering Vol. I & Vol. II* : G.M. Fair & J.C. Geyer
(John Wiley & Sons, New York)
2. *Water Supply and Waste Disposal* : W.A. Hardenbergh and E.B. Rodie
(Allied Publishers Pvt. Ltd., New Delhi)
3. *Public Health Engineering* : P.C.C. Issac
(C.E. & FN Spon, London)
4. *Sewerage and Sewage Treatment* : H.E. Babil and E.R. Baumann
(John Wiley & Sons, New York)
5. *Water Supply and Sewerage* : E.W. Steel & Terence J. McGhee
(McGraw Hill Book Co., New York, 1985)
6. *Public Health Engineering Vol. I & Vol. II.* : E.B. Phelps in Collaboration with C.J. Velj
(John Wiley & Sons, New York)
7. *Waste water Engineering—Treatment, Disposal and Reuse* : Metcalf and Eddy
(McGraw Hill Book Co., New York, 1979)
8. *Introduction to Environmental Engineering* : Mackenzie L. Davis and David A. Cornwell
(McGraw Hill Book Co., New York, 1991)

Special Publications

Chapter 1 & 2 : Introduction to the Subject ; Estimating the Design Sewage Discharge

9. *Elements of Water Supply and Waste-water Disposal* : G.M. Fair and J.C. Geyer
(John Wiley & Sons, New York)
10. *Sewerage and Sewage Treatment* : S.R. Kshirsagar
(Roorkee Publishing House, Civil Lines, Roorkee)

Chapter 3 : Estimating the Peak Drainage Discharge

11. *Design and Construction of Sanitary Storm Sewers* : American Society of Civil Engineers
Manual of Practice 37, New York, 1960
12. *Hydrology and Water Resources Engineering* : Santosh Kumar Garg
(Khanna Publishers, Delhi)
13. *Handbook of Hydrology* : Govt. of India's Publication
(Ministry of Agr. & Irr., New Delhi, India)

Chapter 4 : Hydraulic Design of Sewers and S.W. Drain Sections

14. *A Treatise on Applied Hydraulics* : Addison & Harbert

15. *Design of Sewers to Facilitate Flow* : Comp. T.R.

(Sewage Works, Journal, 18.3, 1946)

Chapter 5 : Sewers, Their Construction, Maintenance and Required Appurtenances

16. *Sewers, Their Theory, Design, Specifications and Construction* : Bevan and Rees
17. *Water Supply and Sewerage* : Terence McGhee
(McGraw Hill Book Co., New York)
18. *A Text-book of Sanitary Engineering* : R.S. Deshpande
(United Book Corporation Poona, India)
19. *Manual on Sewerage and Sewage Treatment* : Expert Committee Constituted by Govt. of India
(Central Public Health & Env. Engg. Organisation, Ministry of Urban Dev. New Delhi, 1983)
20. *IS : 4111 (Part 1) : 1986 Code of Practice for Ancillary Structures in Sewerage System Part 1 : Manholes* : B.I.S. Code
(Bureau of Indian Standards, New Delhi)
21. *IS : 4111 (Part 3) 1985 ; Part 4-1968 ; Part 5-1993, Code of Practice for Ancillary Structures in Sewerage System Part 3 : Inverted Siphon, Part 4 : Tidal Outfalls, Part 5 : Tidal Outfalls* : B.I.S. Codes
(Bureau of Indian Standards, New Delhi)
22. *IS : 7740-1985, Code of Practice for Construction & Maintenance of Road Gullies* : B.I.S. Code
(Bureau of Indian Standards, New Delhi)
23. *IS : 11972-1987, Code of Practice for Safety Precautions to be taken when Entering a Sewerage System* : B.I.S. Code
(Bureau of Indian Standards, New Delhi)
24. *IS : 13496-1992, General Requirements of Suction Machines for Cleaning Sewers, Man-holes and Ancillary Structures Provided on Sewer Lines and Closed Storm Water Mains* : B.I.S. Code
(Bureau of Indian Standards, New Delhi)
25. *IS : 11387-1985 Requirements for High Pressure Jetting Machines for Sewer Cleaning* : B.I.S. Code
(Bureau of Indian Standards, New Delhi)
26. *IS : 10595-1983, Requirements for Power Driven Bucket Type Sewer Cleaning Machines* : B.I.S. Code
(Bureau of Indian Standards, New Delhi)

27. IS : 11117-1984, Requirements for Power Driven Rodding Machine for Sewers : B.I.S. Code (Bureau of Indian Standards, New Delhi)
28. IS : 11397-1985, Specification for Attachment Tools for Power Driven Rodding Machine for Sewers : B.I.S. Code (Bureau of Indian Standards, New Delhi)
29. IS : 10552-1983, Specifications for Buckets to be used in Power Driven Bucket Type Sewer Cleaning Machine : B.I.S. Code (Bureau of Indian Standards, New Delhi)
30. IS : 9110-1979, Specifications for Hand Operated Augers for Cleaning Water Closets, Pipes and Sewer : B.I.S. Code (Bureau of Indian Standards, New Delhi)
31. IS : 11931-1987, Specifications for Sewer Cleaning Metal Rods : B.I.S. Code (Bureau of Indian Standards, New Delhi)

Chapter 8 : Pumps For Lifting Sewage

32. Pump Application Engineering : Hicks, Tyler G & Theodore W. Edwards (McGraw Hill Book Co., New York, 1972)
33. Pump Selection and Application : T.G. Karassik (McGraw Hill Book Co., New York)
34. Centrifugal and Other Rotodynamic Pumps : Addison and Herbert (Chapman & Hall, London)

Chapter 7 : Quality Characteristics of Sewage

35. Laboratory Manual for Chemical & Bacterial Anal. of Water & Sewage : F.R. Theoroux (McGraw Hill Book Co., New York)
36. Biological Engineering : H.P. Schwar (McGraw Hill Book Co., New York)
37. Environmental Engineering : H.S. Peavy, D.R. Rowe, G. Tchobanoglous (McGraw Hill International Edition, 1986)
38. Standard Methods of Water and Sewage Analysis : An American Public Health Association's Publication
39. Chemistry for Sanitary Engineering : C.N. Sawyer and P.L. McCarty (McGraw Hill Book Co., New York)
40. Engineering Management and Water Quality : P.H. McGauhey (McGraw Hill Book Co., New York)
41. Microbiology for Sanitary Engineering : R.E. McKinney (McGraw Hill Book Co., New York)
42. A Guide to Study of Fresh Water Biology : J.C. Needham and P.R. Needham (San Francisco, Holden Day 1962)
43. Hydrology and Quality of Water Resources : M.J. Hammer & K.A. Mackichen (John Wiley & Sons, New York)
44. Guide to Sanitation and Natural Disasters : M. Assar (WHO Publication, Geneva, 1971)
45. IS : 7232-1974, Method for

Chapter 8 : Disposing of the Sewage Effluents

46. Scientific Stream Pollution Analysis : Nemerow, Nelson Leonard (McGraw Hill Book Co., New York)
47. Stream Sanitation Engineering : E.B. Phelps (John Wiley & Sons, New York)
48. Water Pollution and Disposal of Wastewater on Land : U.N. Mahida (Tata McGraw Hill Publishing Company Ltd., New Delhi, 1981)
49. IS : 4764-1973, Tolerance Limits for Sewage Effluent Discharge into Surface Water Sources : B.I.S. Code (Bureau of Indian Standards, New Delhi, India)
50. IS : 2490-1974, Tolerance Limits for Industrial Effluent Discharge into Inland Surface Waters : B.I.S. Code (Bureau of Indian Standards, New Delhi, India)
51. IS : 3306-1974, Tolerance Limits for Industrial Effluent Discharge into Public Sewers : B.I.S. Code (Bureau of Indian Standards, New Delhi, India)
52. IS : 3307-1965, Tolerance Limits for Various Polluting Constituents of Waste-water Effluents for Their Discharge on Land for Irrigation : B.I.S. Code (Bureau of Indian Standards, New Delhi, India)
- Chapter 9 and 10 : Treatment of Sewage ; Process Design of a Complete Sewage Treatment Plant
53. Biological Waste Treatment : W.W. Eckenfelder and D.J.O. Connor (Pergamon Press, New York)
54. The Chemistry of Water and Sewage Treatment : A.M. Bassett (Chemical Catalog Co., New York)
55. Municipal and Rural Sanitation : V.M. Ehlers and E.W. Steel (McGraw Hill Book Co., New York)
56. Operation and Maintenance of Waste-water Collection Systems : WPCF Manual of Practice No. 7 (Water Pollution Control Federation, Washington D.C., 1971)
57. Theory and Practice of Water and Waste-water Treatment : Ronald L. Droste (John Wiley & Sons, New York, 1997)
58. Water and Waste-water Technology : Mark J. Hammer (John Wiley & Sons, New York, 1986)
59. Sewage Treatment-Imhoff Tanks : V. Surya Prakash (Journal of Institution of Engineers India, June 1951)
60. Waste-water Treatment for Pollution Control : Soli J. Arcevala (Tata McGraw Hill Publishing Company Ltd., New Delhi, 1986)
61. Waste Treatment Plants : C.A. Saxtry, M.A. Hashim and P. Agamuthu (Narosa Publishing House, N. Delhi, 1995)

62. IS : 2470 (Part 1)-1985 and Part 2-1985, Code of Practice for Installation of Septic Tanks : B.I.S. Codes (Bureau of Indian Standards, New Delhi)
Part 1-Design Criteria & Construction
Part 2-Secondary Treatment and Disposal of Septic Tank Effluent
63. IS : 5611-1987, Code of Practice for Waste Stabilisation Ponds (Facultative Type) : B.I.S. Code (Bureau of Indian Standards, New Delhi)
64. IS : 8403-1977, Code of Practice for Construction of Clarifier Digester for Treatment of Sewage : B.I.S. Code (Bureau of Indian Standards, New Delhi)
65. IS : 6279-1971, Equipment for Grit Removal Devices : B.I.S. Code (Bureau of Indian Standards, N. Delhi)
66. IS : 7208-1992, Guidelines for Flocculator Devices : B.I.S. Code (Bureau of Indian Standards, N. Delhi)
67. IS : 7090-1985, Guidelines for Rapid Mixing Devices : B.I.S. Code (Bureau of Indian Standards, N. Delhi)
68. IS : 8413 (Part 1)-1977 and IS : 8413 (Part 2)-1982, Requirements for Biological Treatment Equipments, Part 1 : Trickling Filters, Part 2 : Activated Sludge Process and its Modifications : B.I.S. Code (Bureau of Indian Standards, New Delhi)
69. IS : 10361-1982, Requirements for Settling Tank (Clarifier Equipment) for Waste-water Treatment : B.I.S. Code (Bureau of Indian Standards, New Delhi)
70. IS : 10037 (Part 1)-1981, Part 2 and 3-1983, Requirements for Sludge Dewatering Equipment Part 1 : Sludge Drying Beds—Sand Gravel and Under-drains, - Part 2 : Vacuum Filtration Equipment, Part 3 : Centrifugal Equipment (Solid Bowl Type) : B.I.S. Code (Bureau of Indian Standards, New Delhi)
71. IS : 13166-1992, Guidelines for Evaluation and Testing of Mechanical Surface Aerators : B.I.S. Code (Bureau of Indian Standards, New Delhi)

Chapter 11 : Treatment of Industrial Wastewaters

72. Waste-water Treatment : M.N. Rao and A.K. Datta (O.S. M. ENR. Vol. 1, Pt. 1, 1987)

73. Pollution Control in Process Industries : S.P. Mahajan (Tata McGraw Hill Publishing Co., Ltd., New Delhi, 1987)
74. Industrial Water Pollution Control : W. Wesley Eckenfelder, Jr (McGraw Hill International Edition, 1967)

Chapter 12 : Excreta Disposal in Unsewered and Rural Areas

75. Water Treatment and Sanitation ; A Hand Book of Simple Methods for Rural Areas in Developing Countries : H.T. Mann and D. Williamson (Intermediate Technology Publications Ltd., London, 1973)
76. Excreta Disposal for Rural Areas and Small Communities : E.G. Wagner and J.N. Lenoir (WHO Monograph No. 39, 1958)
77. Sulabh Shauchalaya (Hand Flush Water Seal Latrine) : Bindeshwar Pathak, Chairman Sulabh International (Amola Prakashan, Patna)
78. Composting : H.B. Gotaas (WHO Monograph No. 31, 1956)

Chapter 13 : Sewage Collection from Houses and Buildings

79. Water Supply and Sanitary Installations Within Buildings : A.C. Panchadhari (Wiley Eastern Ltd., New Age International Ltd., 1995)
80. IS : 1742-1983, Code of Practice for Building Drawing : B.I.S. Code (Bureau of Indian Standards, New Delhi)
81. IS : 1172-1993, Code of Basic Requirements for Water Supply, Drainage and Sanitation (4th revision) : B.I.S. Code (Bureau of Indian Standards, New Delhi)
82. IS : 12183 (Part I)-1987, Code of Practice for Plumbing in Multi-storeyed Buildings : B.I.S. Code (Bureau of Indian Standards, New Delhi)
83. IS : 2064-1993, Code of Practice for Selection, Installation and Maintenance of Sanitary Appliances (Second Revision) : B.I.S. Code (Bureau of Indian Standards, New Delhi)
84. IS : 4111 (Part II), 1985 ; Code of Practice for Ancillary Structures in Sewerage System Part II : Flushing Tanks : B.I.S. Code (Bureau of Indian Standards, New Delhi)
85. IS : 12251-1987, Code of Practice for Drainage of Building Basements : B.I.S. Code (Bureau of Indian Standards, New Delhi)
86. IS : 5329-1983, Code of Practice for Sanitary Pipe Work above Ground for Buildings : B.I.S. Code (Bureau of Indian Standards, New Delhi)

87. IS : 2064-1993, Code of Practice for Selection, Installation and Maintenance of Sanitary Appliances : B.I.S. Code (Bureau of Indian Standards, New Delhi)
88. IS : 2963-1979, Specifications for Copper alloy Waste fittings for Wash Basins and Sinks : B.I.S. Code (Bureau of Indian Standards, New Delhi)
89. IS : 773-1998, Specifications for Enamelled Cast Iron Water Closets Railway Coaching Stock Type : B.I.S. Code (Bureau of Indian Standards, New Delhi)
90. IS : 3489-1985, Specifications for Enamelled Steel Bath Tubes : B.I.S. Code (Bureau of Indian Standards, New Delhi)
91. IS : 9785-1981, Specifications for Flush Valves and Fittings for Water Closets and Urinals : B.I.S. Code (Bureau of Indian Standards, New Delhi)
92. IS : 774-1984, Specifications for Flushing Cistern for Water Closets and Urinals (Other than Plastic Cistern) : B.I.S. Code (Bureau of Indian Standards, New Delhi)
93. IS : 772-1973, Specifications for General Requirements for Enamelled Cast Iron Sanitary Appliances : B.I.S. Code (Bureau of Indian Standards, New Delhi)
94. IS : 771-(Part 1 to 4 & 6 to 7), Specifications for Glazed Fire Clay Sanitary Appliances Part 1 : General Requirements Part 2 : Specific Requirements Kitchens and Laboratory Sinks Part 3 : Specific Requirements of Urinals Part 4 : Specific Requirements of Postmortem Slabs Part 6 : Specific Requirements of Bed-pan Sinks Part 7 : Specific Requirements of Slop Sinks : B.I.S. Codes (Bureau of Indian Standards, New Delhi)
95. IS : 13983-1994, Specifications for Stainless Steel Sinks for Domestic Purposes : B.I.S. Code (Bureau of Indian Standards, New Delhi)

Chapter 14 : Disposal of Solid and Industrial Wastes

96. Solid Wastes : Engineering—Principles and Management Issues : Tchobanoglous, G.H. Theisen, and R. Eliassen (McGraw Hill Book Co. New York, 1977)

BIBLIOGRAPHY

97. Sanitary Land-fill Design Hand Book : G. Noble (Technomic, West Port, Conn, 1976)
98. Solid Waste Collection Practice : American Public Works Association, Institute of Solid Wastes (American Public Works Association, Chicago, 1975, 4th ed.)
99. Environmental Pollution Control Engineering : C.S. Rao (Wiley Eastern Ltd., New Delhi, 1992)
100. Environmental Engineering : Arcadio P. Sincero and Gregoria A. Sincero (Prentice-Hall of India Pvt. Ltd. New Delhi (1999))
101. IS : 6924-1973, Construction of Refuse Chutes in Multi-Storeyed Buildings, Code of Practice : B.I.S. Code (Bureau of Indian Standards, New Delhi)
102. IS : 12314-1987, Code of Practice for Sanitation with Leaching Pits for Rural Community : B.I.S. Code (Bureau of India Standards, New Delhi)

Chapter 15 : Ventilation of Buildings for Controlling Indoor Air Pollution

103. Indoor Air Pollution Control : Godish (John Wiley & Sons, New York)
- Chapter 16 : The Environment, Its Pollution and Present Status
104. Man, Nature and Environmental Laws : G.S. Nathawet, Satish Shastri and J.P. Vyas (RBSA Publishers, Jaipur, 1988)

105. Global Environmental Monitoring System—Urban Air Pollution : WHO Publication, 1988

Chapter 17 : Disposal of Environmentally Hazardous Biomedical and Radioactive Wastes

106. Environmental Engineering : G.N. Pandey and G.C. Karney (Tata McGraw Hill Publishing Company Ltd., 1989)
107. Hazardous Waste Management : Charles A. Wentz (McGraw Hill International Edition, 1989)
108. Hazardous Waste Incineration : Calvin R. Brunner (McGraw Hill International Edition, 1989)

Chapter 18 : Engineering of Air Pollution, Its Control and Monitoring

109. Air Pollution : M.N. Rao and H.V. Rao (Tata McGraw Hill Publishing Company Ltd., New Delhi, 1989)

Chapter 19 : Global Environmental Issues

110. Environmental Science : S.H. Anderson, R.E. Beiswanger, and P.W. Purdom

111. *Air Pollution and Climate Change—The Biological Impact* : A. Wellburn
(Longman Scientific and Technical
Essex, U.K., 1994)

Chapter 20 : Noise Pollution

112. *Environmental Noise Control* : E.B. Magrab
(John Wiley & Sons, New York, 1976)
113. *Fundamentals of Industrial Noise Control* : L.H. Bell, Trumbull C.N.
(Harmony Publications, 1973)
114. *IS : 4954-1968, Recommendations for Noise Abatement in Town Planning* : B.I.S. Code
(Bureau of Indian Standards, New Delhi)
115. *IS : 7194-1973, Specifications for Assessment of Noise Exposure during work for Hearing Conservation Purposes* : B.I.S. Code
(Bureau of Indian Standards, New Delhi)
116. *IS 9779-1981, Specifications for Sound Level Meters* : B.I.S. Code
(Bureau of Indian Standards, New Delhi)
117. *IS : 9989-1981, Assessment of Noise with Respect to Community Response* : B.I.S. Code
(Bureau of Indian Standards, New Delhi)

Chapter 21 : Environmental Impacts of Thermal Power Plants, Mining and River Valley Projects

118. *Environmental Concepts and Strategies* : T.N. Khoshoo
(Ashish Publishing House, New Delhi, 1988)
119. *Environmental Impact Assessment Studies (Case Studies)* : Publication No 248
(Central Board of Irr. & Power New Delhi, 1995)
120. *Hydropower and River Valley Development—Environmental Management—Case Studies and Policy Issues* : R.S. Goel and R.N. Srivastava
(Oxford & IBH Publishing Co. Ltd., New Delhi)
121. *Booklet titled "Sardar Sarovar Project ; What it is and what it is not"* : Dr G.C. Patel Chairman,
Sardar Sarovar Narmada Nigam Ltd.
Released at International Conference on "What Future for Large Rivers",
Organised by MOE, Govt of France held at Orleans France, Sept. 1991)

Chapter 22 : Preparing Environmental Impact Assessments of Polluting Industrial Projects

122. *Environmental Impact Assessment* : Jain
(McGraw Hill, Inc, New York)
123. *Environmental Impact Assessment* : L.W. Kanter
(McGraw Hill, Inc New York)

Index

- A
- Absorption, 671
- Absorption trenches, Pl. see "Dis-persion trenches"
- Accelo filters, 302
- Acclimatisation, 439
- Acid rains, 690
- Activated sludge process, 346
- Adiabatic lapse rate, 647
- Adsorption, 439, 671
- Aerated grit channels, 243, 250, 260, 389
- Aerated lagoons, 388, 389
- Aeration periods, 356
- Aeration tanks, 348
- Aero allergens, 639
- Aero filters, 303
- Aerobic attached culture, 278, 379, 905
- Aerobic bacteria, 148, 174
- Aerobic decomposition of sewage, 148
- Aerobic stabilisation units, 390
- Aerobic suspended culture, 346, 380
- Aerodigestors, 366
- Aerosols, 638
- After burner, 339
- Air changes, 597
- Air conditioners,
Summer, 603
Winter, 605
- Air conditioning, 602
- Air polluting effects of incinerators, 561
- Air pollutants
Carbonmonoxides, 635
Hydrocarbons, 636
Lead, 640
Oxides of nitrogen, 636
Oxides of sulphur, 634
Photochemical smog, 640
Suspended particulate matter, 638
- Air Pollution,
Causes, 632
Definition, 631
Delhi's air environment, 630
Dispersion models and equations, 659
Dispersion of pollutants, 646
Effects on livestock animals, 645
Effects on human health, 641
Natural and manmade, 631
Effects on plants, 644
- Engineering devices to control, 672, 682
- General, 810
- History, 632
- National ambient air quality standards, 625-629
- National monitoring programme, 619
- Prevention and control of pollution, act, 1981, 612, 619
- Quality survey in India, 619-624
- Technical parameters for measuring pollution, 620
- Various pollutants, including primary and secondary pollutants, 633-641
- Air-stripping, 439
- Albuminoid nitrogen, 157
- Allergic agents, 639
- Alpha particles or radiations, 566
- Ambient air quality standards in India, 624-629
- Anabolism, 911
- Anaerobic bacteria, 148, 149, 174
- Anaerobic decomposition of sewage, 149
- Anaerobic stabilisation ponds, 390
- Anaerobic stabilisation units, 390
- Anemometer, 656
- Annual RSPM profile for 29 Indian cities, 622
- Anthropogenic particulates, 620
- Anticyclones, 655, 658
- Antisiphonage pipes, 486
- Aqua culture pond, 421
- Aqua privy, 460
- Aqueous waste, 556, 558
- Arbitrary flow reactor, 909
- Areal distribution factor, 20
- Atmosphere, 646, 903
- Atomic mass, 563, 566
- Atomic mass number, 563
- Atomic mass unit (amu), 563
- Atomic number, 563, 566
- Attached culture based
aerobic treatment methods, 278, 379
- Autoclaving, 553, 554
- Automatic rain gauges, 16
- Autotrophic bacteria, 904, 926
- Autotrophism, 904, 926
- Average daily flow, 10, 11, 12

B

Background radiation, 574
 Bacteriological characteristics of sewage, 173
 Bacteria in sewage, 173-178
 Baffles, 273
 Bangalore method of composting refuse, 519
 Bar screens, 238
 Basel Convention, 541
 Basic Countries, 709
 Basin or Bowl type urinals, 480
 Bath tube, 484, 485
 Becquerel (Bq), 580
 Bed agglomeration, 343
 Benthic zone, 215
 Beta radiations or particles, 567
 Betch reactor, 909
 Bhopal gas leakage disaster, 633
 Binary fission, 583
 Bioaccumulation, 907
 Biochemical oxygen demand (BOD)
 Carbonaceous, 162, 166
 Definition, 161
 First stage, 162, 166
 Laboratory determination, 161, 162
 Nitrogenous, 162, 166, 167
 Second stage, 162, 166
 Biodegradable, Pl. see 'Biologically active'
 Biodegradability, 927
 Biofilters, 301
 Biological filters for treating septic tank effluents, 398
 Biogas, 927
 Biological environment, 609
 Biological filter for disposal of septic tank effluents, 398
 Biologically active, 161
 Biologically inactive, 161
 Biomagnification, 907
 Biomedical wastes,
 Collection and treatment, 550
 Colour coding, 550
 Definition, 549
 Hazards to health, 549
 Labeling for identification, 552
 Legal laws to manage, 549
 Sharp wastes, 552
 Storage, 552
 Transportation to disposal sites, 553
 Treatment and disposal, 553
 Waste segregation, 550
 Yellow bin, red bin and black bin wastes, 551
 Biosorption process, 368
 Biosphere, 608, 610
 Biotransformation, 907
 BIS Standards for discharge of sewage and industrial effluent into

Public sewers, 190
 Surface water sources, 190
 Blue baby disease, 157
 BOD rate Constant, Pl. see 'Deoxygenation constant'
 BOD ratio, 170, 439
 COD
 BOD test bottles, 162
 Boring rod, 108
 Bore hole privy, 458
 Bulking of sludge, 355
 Burge's formula, 28
 Burkli Ziegler formula, 26
 C
 Carbonaceous BOD (CBOD), Pl. see "Bio-chemical oxygen Demand"
 Carbon cycle, 148, 151, 152
 Carbon monoxide in air, 635
 Carbon-Nitrogen ratio (C/N), 519
 Carbon trading, 707
 Carnivorous animals, 609
 Catabolism, 911
 Catalytic converters, 685
 Catch basins, 117
 Central air conditioning, 605
 Centrifugal collectors, Pl. see "Cyclone collectors"
 Centrifugal pumps, 135
 Channel flow time, 20
 Chasnala tragedy, 738
 Characteristics of domestic sewage, 167
 Chemical characteristics of sewage, 154
 Chemical coagulation, 438
 Chemical disinfection of biomedical wastes, 438
 Chemical oxidation, 438
 Chemical oxygen demand, 169
 Chemical precipitation, 439, 859
 Chemical treatment of wastewaters, 437
 Chernobyl atomic accident, 579
 Chezy's formula, 38
 Chimney height, minimum, 667
 Chlorides in sewage, 156
 Chlorination of sewage, 422
 Chlorofluoro carbons (CFCs), 699
 Chlorophyll, 216, 932
 Circular sewer sections, hydraulic characteristics, 47
 Clarigestors, 416
 Clean Development Mechanism (CDM), 707
 Clean outs, 116
 Climate changes due to global warming, 702, 705
 Coagulants in sewage treatment, 277
 Coagulation, 276, 276
 Coarse screens, 235, 236

INDEX

COD ratio, 170, 927
 BOD
 COD ratio, 171
 TOC
 Colloids or Colloidal solids, 154, 155
 Combined aeration, 351
 Combined gas law, 634
 Combined, separate, and partially separate sewerage systems, 9
 Communitors, 241
 Complete mix process of activated sludge plant, 368
 Complete mix reactor, 909
 Components of a sewerage scheme, Design periods there of, 9
 Composting, 242, 517
 Concrete vault privy, 460
 Coning plume, 657
 Conservancy sewerage system, 1
 Conservation of environment, 610
 Contact beds, 279
 Contact stabilisation process of activated sludge plant, 366
 Continuous flow stirred tank, 909
 Continuous flow settling tanks, 268
 Conventional trickling filters, 288
 Conventional rotary kiln incinerators, 556
 Cooling towers, 456
 Copenhagen accord, 709
 Copenhagen summit, 709
 Coriolis force, 655
 Corrosion of sewers, 926
 Cosmic rays, 575
 Critical rainfall duration, 14
 Critical scour velocity, 250
 Cultural eutrophication, 216
 Curie (Ci), 580
 Cyclone Collectors or Separators, 811, 814
 Cyclone Scrubbers, 674, 675
 Cyclones, 659
 D
 Damages for insufficient sewerage works, 5
 Dehumidification, 604
 Deionisation, 439
 Density currents, 910
 Deoxygenation coefficient, Pl. see 'Deoxygenation constant'
 Deoxygenation constant, 164, 165, 199
 Deoxygenation curve, 197
 Depositories for holding radioactive wastes, 581
 Design of sewer sections, 36-77
 Design of storm water drains, 77
 Destruction and Removal (DRE) efficiency

of incinerator, 344
 Destructive distillation, 525
 Detention time for
 Aerated grit channels, 260
 Aerated lagoons, 389
 Grit channels, 251
 Lagoons, 345
 Oxidation ditches, 388
 Oxidation ponds, 383
 Sedimentation tanks, 271
 Detritus tank, 283
 Diaphragm pump, 137
 Dickson's formula, 28
 Diffused air aeration, 348
 Digested sludge, 319
 Disposal, 333
 Digestion of screenings, 242
 Digestors, Pl. see 'Sludge digestion tank'
 Dilution factor, 162
 Dilution of air pollutants, 672
 Dilution or Disposal of wastewater in sea water, 217
 Dilution standards for disposal of sewage (waste water) in rivers, 189
 Disc type fine screens, 239
 Discrete particles, 243
 Dispersion equations, 659
 Dispersion factor, 20
 Dispersion models, 659
 Dispersion of air pollutants, 646
 Dispersion trenches, 395, 396
 Disposal of screenings, 242
 Disposal of sewage
 By dilution in water bodies, 188, 226
 On land, 219, 226
 Dissolved oxygen sag curve, 196
 Dissolved oxygen, 159
 Dissolved solids, 154, 155
 Dobson unit (DU), 698
 Double inversion, 655
 Drain's design, 77
 Drainage discharge
 Definition, 2
 Estimation, 14
 Dredge formula, 28
 Drum type fine screens, 240
 Dry latrine, Pl. see 'Bore hole privy'
 Dumping of screenings of a settling tank, 242
 Dunbar filters, 313
 Dynamic precipitators, Pl. see "Cyclone collectors"
 E
 Ecological balance, 609
 Ecology, 609
 Ecosystem, 609
 Effective height of a stack, 564

Efficiency of filters, 290
 Effluent irrigation, 224
 Egg shaped sewers, 72
 Electrodialysis, 438
 Electrostatic precipitators, 678, 679, 681
 Elutriation of sludge, 337
 Emergency reference level of radioactivity, 574
 Environment (Protection) Act, 1986, 613
 Environment Impact Assessment, 733, 768
 Environmental Impact Assessment of polluting developmental projects, 768
 Environmental impacts of
 Biomedical wastes, 549
 Mining, 734
 Radioactivity, 588
 River valley projects, 737
 Thermal power plants, 733
 Environmental lapse rate, 647
 Environmental pollution, 594, 610
 Environmental sanitation, 594
 Environmental stability, 648, 661
 Equalisation, 437
 Estimating peak storm runoff, 14
 Euphotic zone, 214
 Eutrophication of lakes, 216, 904
 Eutrophic lakes, 218
 Eukaryotes, 174
 Evolution of new species, 609
 E-waste
 Adverse environmental effects, 587, 588
 Classification, 587
 Definition, 587
 Informal Vs Formal recyclers, 590
 Menace in India, 589
 Management & Handling Rules, 2011, 591
 Exosphere, 696
 Extended aeration lagoons, Pl. see "Oxidation ditches".
 Extended aeration process, 369
F
 Fabric filters, 680, 681
 Facultative bacteria, 148
 Fan lights, 600
 Fanning plume, 658
 Fixed solids, 155
 Filter loadings, 290
 Filterable solids, 155
 Financing of sewerage projects, 5
 Fine screens, 239
 Fish pond, Pl. see "Aqua culture pond"
 Fission reaction, 565
 Fission fragments, 564, 565
 Flash type incinerators, 344

Flow velocity in
 Drains, 38
 Sewers, 38
 Flowing through period, 272
 Fluid-bed incinerators, 342
 Fluidized bed reactor, 909
 Fluorine in air, 644, 645
 Flushing cisterns, 481
 Flushing tanks, 117
 Foaming of sludge, 355
 Food to Micro organism ratio $\left(\frac{F}{M}\right)$, 357
 Free ammonia, 157
 Free board in S.W. for drain sections, 37
 Free board in sewers, 37
 Free radicals, 569
 Fresh air inlet, 115
 Frit, 580
 Fumigating plume, 658
 Fungi, 174
G
 Gamma radiations or rays, 568
 Gas production in sludge digestion, 331
 Gaussian distribution, 660
 Gene damage, 571
 Genetic changes/effects, 587
 Global warming, 702
 Gobar gas, 927
 Gobargas plants, 927
 Grab buckets, 261
 Grab sample, 173
 Gravitational settling chambers, 673
 Gravitational settling, 671
 Gray (Gy), 571
 Grease and oil traps, 119
 Green house effect, 611, 702
 Green house gases, 702
 Grit chambers Pl. see "Grit channels"
 Grit channels, 242, 249
 Constant velocity horizontal flow type of rectangular grit channels, 250
 Parabolic of V shaped channels, 251, 254
 Gullies, 116, 469
 Gully traps, 469
 Gustiness, 656
 Gutter flow time, 20
H
 Half life period, 563, 564
 Hazardous waste (management and handling) rules-1989, 530
 Helical, flow, 261
 Herbivorous animals, 609
 Heterotrophic bacteria, 904, 926
 Heterotrophism, 904

High level radioactive wastes, 580
 High rate anaerobic systems for sewage treatment, 416
 High rate trickling filters
 Comparison with Conventional filters, 298
 Definition, 288
 Efficiency, 300
 Recirculation of treated sewage in, 299
 Types, 301
 Holland's equation for plume height, 665
 Humus tanks, 314
 Hydraulic loading rate for trickling filters, 290
 Hydraulic retention time of aeration tanks, 356
 Hydraulic settling values of particles, 248
 Hydraulically equivalent circular sewer sections, 71, 72
 Hydrocarbons, 636
 Hydroclaving, 554
 Hydrogen sulphide gas, 158
 Hydrosphere, 608
I
 I.D. fan, 341
 Imhoff cone, 156
 Imhoff tanks, 406
 Incineration, 242, 338, 522, 555
 Incinerators
 For biomedical wastes, 555
 For municipal refuse or solid wastes, 338
 For sludges of water treatment plants, 242
 Indices of self purification, 197
 Indoor air pollution, 594
 Indore method of composting of refuse, 518
 Industrial solid waste, 526
 Industrial wastewaters,
 Definition, 436
 Different types, 441-455
 Treatments and processes, 436, 437
 Infra-red furnace, 344
 Inglis formula, 27
 In-hearths, 338
 Inlets and outlets in sedimentation tanks, 272
 Intensity of rain, 16
 Interceptors or Intercepting traps, 469
 Intermediate level wastes, 580
 Intermittent sand filters, 281
 Intermittent settling tanks, 265
 Inversion, 654, 655
 Inverted siphons, 121
 Iodine-131, 572
 Iodine tablets, 574
 Ionised radiations, 563
 Ionising characteristics, 563

Ionising particles, 563
 Ionosphere, 696, 903
 Iron bacteria, 927
 Irradiated fuel, 578
K
 Kitchen sinks, 485
 Kjeldahl nitrogen, 158
 Kutter's formula, 38, 39
 Kyoto Protocol, 706
L
 Lagoons for sludge disposal, 345
 Lakes,
 Biological zones, 214
 Controlling algal growth or eutrophication, 216, 217
 Disposal of wastewaters into, 212
 Eutrophication, 216
 Prime Pollutants of, 212
 Productivity, 215
 Stratification, 213
 Lamp holes, 115
 Land filling, 507
 Lapse rate, 647
 Leachate, 510, 513, 514, 905
 Lead in air, 640
 Leaping weir, 126
 Limnology, 213
 Liquid waste incinerators, 555
 Lithosphere, 576, 608
 Littoral zone, 215
 Lofting plume, 658
 London smog, 641
 Looping plume, 656
 Love Grove STP at Mumbai, disposing treated sewage in sea, 218
 Low level radioactive waste, 580, 582
M
 Magnetic filters, 313
 Manholes, 110
 Manning's formula, 40
 Mannings roughness coefficients, 39
 Maximum daily flow, 11
 Maximum hourly flow, 11
 Maximum velocities in sewers, 45
 Mechanical aeration, 350
 Mechanical ventilation systems; i.e. vacuum, plenum and air conditioning, 601
 Mechanically aerated lagoons, 388, 389
 Medium screens, 238
 Melanoma, 697
 Mesosphere, 696, 903
 Mesopause, 696
 Mesotrophic lake, 215
 Methaemoglobinemia, 157
 Methane formers, 151
 Methane forming bacteria, 151, 320

Micro waving of biomedical wastes, 555
 Micro-organisms in animal feces, 176
 Micro-organisms in human feces, 176
 Micro-organisms in raw waste waters, 176
 Minimum daily flow, 12
 Minimum hourly flow, 12
 Minimum velocities in sewers, 41
 Mixed flow regime in activated sludge plant, 364
 Mixed liquor suspended solids (MLSS), 357, 358
 Modified aeration process, 369
 Montreal protocol, 701, 998
 Motor vehicles rules, 1989, 614
 Motor vehicles act, 1988, 614
 Muffle furnace, 155
 Municipal solid waste (MSW), 499
 Municipal solid wastes (Management and Handling) Rules, 2000, 539
 Multiple hearth furnace (incinerator), 338
 Mutagenic or Mutation or Genetic effects, 570, 586

N

Nahni trap, 469
 Natural forces of purification in rivers, 193
 Natural particulates, 620
 Nawab Jung Bahadur formula, 28
 Negative lapse rate, 654
 Neutral plume, 657
 Neutralisation, 437
 Nitrate poisoning, 157
 Nitrates in sewage, 157
 Nitrification, 905
 Nitrifying bacteria, 927
 Nitrites in sewage, 157
 Nitrogen cycle, 149, 152
 Nitrogen in sewage, 157
 Nitrogen oxides, 636
 Nitrogenous BOD (NBOD), 166
 Nitrogenous oxygen demand or (NOD), Pl. see "Nitrogenous BOD"
 Noise Induced Permanent Threshold Shift (NIPTS), 907
 Noise Induced Temporary Threshold Shift (NITTS), 907
 Noise pollution
 Abatement and control, 730
 Ambient air quality standards, 727
 BIS standards, 727
 Characteristics, 715
 Definition, 713
 Health effects, 713
 Levels, 717
 Measurement, 715
 U.S. standards, 725

Non-recording rain gauges, 16
 Non-scouring limiting velocity in sewers, 46
 Nuclear explosions, 576
 Nuclear fission, 564, 565
 Nuclear power plants, 577
 Nuclear reaction, 568
 Nuclear reactors, 564
 Nuclear wastes and their disposal, 580
 Nuclear weapons, 564

O

Occupancy of space,
 Effects thereof, 595
 Odour, 153
 Oil and grease traps, 266
 Oils and greases, removal, 264
 Oligotrophic lakes, 215
 One hour rainfall, 21
 One pipe system of plumbing, 472
 Organic loading rate for trickling filters, 290
 Organic nitrogen, Pl. see 'Albuminoid nitrogen'.
 Out-hearths, 339
 Overflow rate, 270
 Overflow velocity, Pl. see "Overflow rate"
 Overflow weir, 126
 Oxidation ditches, 386, 387
 Oxidation ponds, 380-382
 Oxidation, 194
 Oxygen deficit curve, 198
 Oxygen deficit in a polluted river, 197
 Oxygen sag curve, Pl. see Oxygen deficit curve
 Ozone alerts, 698
 Ozone depletion in upper atmosphere, 693, 697
 Ozone gas in air (lower atmosphere), 640, 641
 Ozone hole, 698

P

Packed-bed reactor, 905, 909
 Parabolic grit channel with parshall flume, 254
 Parshall flume, 254
 Partially separate sewerage system, 3
 Particulate matter in air, Pl. see "Suspended particulate matter in air"
 Passover ditches, 386
 Pathogenic bacteria, 152, 174
 Pathogens, Pl. see pathogenic bacteria
 Pathogens in raw sewage, 176, 177
 Peak rate of run off
 Definition, 13
 Estimation, 14
 Percolating filters; Pl. see Trickling filters
 Percolation rate, 394

INDEX

Permissible standards of
 Air quality, 625-629
 Noise, 727
 Radiations, 574
 Water quality for surface sources, 615-618
 Peroxy-acetyl nitrate (PAN), 541
 pH value, 156
 Phosphorus in waste water and its control for avoiding algal growth in lakes, 216
 Photochemical air pollution, 640
 Photochemical smog, 640
 Photosynthesis, 194, 932, 933
 pico Curie (pci), 580
 Plasma arc systems, 560
 Plug flow reactor, 909, 910
 Plug flow regime in an activated plant, 364
 Plumbing system for sewage collection, 466
 Plume, 648, 656-658
 PM 2.5, 621, 627
 PM 10, 621, 626, 627, 639
 Pneumatic ejectors, 138
 Polar vortex, 698
 Pollution of air, Please see "Air pollution"
 Pollution of water, 611
 Ponding trouble in high rate filters, 289, 907
 Population equivalent, 171
 Population forecasts, 9, 10
 Post chlorination of sewage, 422
 Prechlorination of sewage, 422
 Primaries, 576
 Primary cosmic rays, Pl. see "Primaries"
 Primary air pollutants, 633
 Primary sedimentation, Pl. see 'Sedimentation'
 Proportional flow weir, 250-252
 Protozoa, 174, 928
 Prokaryotes, 173
 Pulverisation, 516
 Pumps for lifting sewage,
 Necessity of pumping, 134
 Pumping stations, 141
 Types of pumps, 135
 Pyrolysis, 525

Q

Quality factor (Q), Pl. see "Relative Biological Effectiveness"

R

Racks, 235
 Rad, 570
 Radiation dose, annual permissible values, 574
 Radiation inversion, 654
 Radiation sickness, 571
 Radioactive disintegration, 586

Radio-active (Nuclear) wastes
 Disposal, 580-587
 Natural Sources, 576
 Storage in vaults, 581
 Types, 580
 Volume reduction, 583
 Radioactive elements, 583
 Radioactive isotopes or nuclides, 582, 583, 584, 586
 Radioactive fallouts, 577
 Radioactive radiations, 586
 Radioactivity
 Impact on biological environment, 588
 Sources, 575
 Radionuclides, 582, 583, 584, 572, 573
 Rain gauges, 16
 Rain out, 671
 Rate of return sludge in an activated plant, 363
 Rational formula, 14, 15
 Raw sludge, 316
 Reciprocating pumps, 136
 Recirculation factor, 300
 Recirculation of treated sewage in high rate trickling filters, 299
 Recirculation ratio, 300
 Recycling a waste water from buildings, 494
 Reduction, 194
 Refrigeration plants, 604
 Refuse collection, removal, carriage, and disposal, 502
 Relative Biological Effectiveness (RBE), 570
 Relative stability, 172
 Rem, 571
 Removable receptacle privy, 458
 Reoxygenation coefficient, 199
 Reoxygenation curve, 197, 198
 Respirable suspended particulate matter (RSPM) i.e. PM10, 621, 626, 627, 639
 Return sludge ratios, Please refer Sludge recirculation rate
 Reverberation time, 907
 Reverse osmosis, 438
 Reynold number, 246
 Ridge and furrow aeration tank, 348, 349
 Ridge ventilator, 600, 601
 Roll velocity, 260
 Rotary distributors, 285, 292
 Rotating biological contractors (RBC's), 379
 Rotifers, 174
 Rules made under Environment (Protection) Act 1986
 The batteries (management and handling) rules 2001, 613
 The biomedical waste (management and handling) rules 1988, 613

- The chemical accidents (emergency planning, preparedness and response) rules 1986, 613
- The Env. (Protection) rules 1986, 613
- The hazardous wastes (management and handling) rules 1989, 613
- The manufacture, storage and import of hazardous chemicals rules 1989, 613
- The municipal solid wastes (management and handling) rules 2000, 614
- The noise pollution (regulation and control) rules 2000, 613
- The ozone depleting substances (regulation and control) rules 2000, 613
- The plastic manufacture, sale and usage rules 1989, 613
- The rules for manufacture, use, import, export and storage of hazardous micro-organisms/genetically engineered organisms or cells 1989, 613
- Run off
- Coefficient of, 15
 - Estimation of peak rate, 14
 - Process, 13
- Rural areas, excreta disposal, 457
- Ryve's formula, 26
- S**
- Sample collection for sewage testing, 173
- Sanitary land filling, 507
- Santo crimp tables, 58
- Saprophytes, 926
- Sardar Sarovar dam project-case study for environmental impacts, 740
- Screening, 235
- Secondaries, 575
- Secondary comic rays, Pl. see "Secondaries"
- Secondary air pollutants, 633, 740
- Secondary sedimentation tank for activated sludge plant, 352
- Secondary sedimentation tank for filters, 314
- Secondary sludge, 316
- Sedimentation (Primary)
- Aided with coagulation (Type 2), 275
 - Definition and principle, 276, 276
 - Necessity in treatment of waste waters, 266
 - Theory of type I sedimentation, 243
- Sedimentation (secondary), 314,
- Sedimentation tanks (secondary), 314, 352
- Sedimentation tanks, 266
- Types, 268
- Self cleansing properties of environment, 670
- Self cleansing invert slope in sewers, 43
- Self cleansing velocity in sewers, 41, 44
- Self purification constant, 200
- Self purification of rivers, 183
- Separate sewerage system, 3
- Septic tanks, 390
- Settleable solids, 155, 156
- Settling of discrete particles (Type I settling), 243
- Settling velocity of sewage solids in still liquids, 241
- For inorganic solids, 249
 - For organic matter, 249
- Sewage discharge estimation, 7
- Sewage farming, 219-228
- Sewage sickness, 225
- Sewage treatment plant, Complete process (hydraulic) design of a small STP, 427
- Sewage
- Characteristics and quality, 147
 - Definition, 1
 - Domestic and industrial, 1
 - Sanitary, 2
- Storm sewage/drainage, 2
- Sewerage plans of buildings, 475, 476
- Sewerage systems
- Components of, 4
 - Design of, 4
 - Types, 2, 3
- Sewerage, 1
- Sewers
- Appurtenances, 110
 - Cleaning of, 128
 - Construction and materials, 92-101
 - Corrosion, 926
 - Definition, 2
 - Designs, 36-77
 - Flow velocities, 38
 - Forces acting, 85
 - Laying, 108
 - Maintenance, 127
 - Testing, 109
 - Transitions, 902
 - Ventilation, 130
- Shield's formula for self cleansing velocity, 41
- Short circuiting in plug flow reactors, 910
- Short circuiting in sedimentation tanks, 271
- Shredder, 241
- Single stack plumbing system, 473
- Siphon spillway, 127
- Skimming tanks, 264-266
- Skimming troughs, 273
- Skimming, 437
- Sloughing, 284
- Sludge age, 358
- Sludge digestion tanks, 322
- Sludge digestion, 316, 318, 320
- Sludge drying beds, 333
- Sludge index or Sludge volume index (SVI),

- Sludge recirculation rate, 363
- Sludge recycle, 363
- Sludge removals from sedimentation tanks, 273
- Sludge retention time (SRT), 416
- Sludge thickness, 353
- Soak pit privy, Pl. see Bore hole privy.
- Soak pit, 394, 395
- Soil absorption system, 394
- Solids retention time, 358
- Solids, 154
- Colloids, 154, 155
 - Dissolved, 154, 155
 - Filterable, 155
 - Fixed, 155
 - Non-filterable, 154, 155, 156
 - Settleable, 155
 - Suspended or non-filterable, 154, 155, 156
 - Total, 154, 156
 - Volatile, 155, 156
- Speed of light, 575
- Split chlorination of sewage, 423
- Spray towers, 678, 677
- Sprinkling filters, Pl. see "Trickling filters"
- Stability of the environment, 648
- Stabilisation ponds (aerobic), pl. see "Oxidation ponds"
- Stabilisation ponds (anaerobic and facultative), 390
- Stack height design, 666
- Stack, effective height thereof, 664
- Stall or Slab type urinals, 481
- Standard rate trickling filters, pl. see "Conventional filters"
- Standards for discharge of waste waters on land for irrigation under BIS as well as under Environment (Protection) rules 1986, 223
- Standards for discharge of wastewaters into inland surface waters
- Under BIS standards, 190
 - Under Environment (Protection) rules 1986, 191
- Standards for discharge of wastewaters into public sewers
- Under BIS standards, 190
 - Under Environment (Protection) rules 1986, 191
- Standards for discharge of wastewaters into marine coasts in seas and oceans
- Under BIS standards 218
 - Under to Environment (Protection) rules, 191
- Step aeration process, 365
- Stoke's law, 244
- Storm drainage, 2
- Stratosphere, 608, 695, 903
- Streamline settling, 246
- Streeter Phelps equation, 199
- Subadiabatic lapse rate, 649
- Subsidence inversion, 655
- Sulabh Sauchalayas, 461-466
- Sulphate particulates, 623
- Sulphates in sewage, 158
- Sulphides in sewage, 158
- Sulphur bacteria, 927
- Sulphur cycles, 148, 150, 152
- Sulphur dioxide in air, 634
- Super adiabatic lapse rate, 648
- Surface loading, Pl. see "Overflow rate"
- Suspended culture based aerobic treatment methods, 346, 390
- Suspended solids, 154, 155
- Types, i.e. volatile and fixed, 155
- Suspended particulate matter in air
- Controlling devices, 672
 - Total (TSPM), 621, 625, 638
 - PM 2.5, 621, 627
 - PM 10 or Respirable (RSPM), 621, 626, 627, 639
 - Types, 638
- Sutro weir, 250
- T**
- Tapered aeration process, 365
- Temporary Threshold Shift (TTS), 907
- Theoretical oxygen demand, 159
- Thermal pollution, 456
- Thermal reduction, 439
- Thermal shock, 456
- Thermosphere, 696, 903
- Thomas graphical method for estimating K_p and L , 168
- Threshold odour number (TON), 153
- Three mile island (TMI) nuclear accident, 679
- Time of concentration
- Definition, 14
 - Estimation, 19, 20
- Total organic carbon (TOC), 160
- Total solids in sewage, 154
- Trapping flames, 658
- Traps,
- Definition, 467
 - Types including F, Q and S, 468
- Treatment of sewage
- Definition, 230
 - Preliminary, 230
 - Primary, 230
 - Secondary, 230, 278, 314, 316, 346
 - Tertiary, 231
- Trickling filters,
- Definition, 283

U.V. radiations, 696

Under drains to be laid below the filter bed, 287

Unstable nucleus, 563

Upflow anaerobic filters, for treating septic tank effluent, 400

Uranium enrichment, 578

Uranium fuel cycle, 577, 578

Uranium mill tailings, 577, 582

Urinals,

 Bowl or basin type, 480

 Stall or slab type, 481

V

Vacuators, 265

Vacuum filtration for sludge-dewatering, 336

Vacuum floatation, 265

Vaults for holding radio active wastes, 581

Velocity control sections, 251

Ventilating columns, 130

Ventilation of buildings, 594

Ventilation of sewers, 130

Ventri flume, Pl. see "Parshall flume"

Wasting of excess sludge in an activated sludge plant, 364

Water (prevention and control of pollution) act, 1974, 612, 743

Water (prevention and control of pollution) cess rules Act, 1977, 613

Water carried sewerage system, 1

Water pollution, monitoring and control, 614

Water quality profile for Ganga river, 614

Water quality profiles, 614

Wet scrubbers, Pl. see "Venturi-scrubbers"

William Hazen's formula, 40

Winkler test for DO, 159

Worms, 174

X

X-rays, 568

 Annual permissible radiations, 574

Z

Zone of active decomposition, 195

 Zone of cleaner water, 197

 Zone of degradation or pollution, 195

 Zone of recovery, 196

Zones of pollution in a river, 195

...ams have been discussed along with covering **Noise pollution**.
Environmental impacts of Thermal power plants, mining and water resources projects have also been discussed in detail, as to cover **environmental impact assessments**.

The text mater has further been supported by about 700 Objective Questions, and several Numerical Questions from various competitive exams, making the book highly useful for all the students of Civil, Environmental, Chemical engineering courses, and for those preparing for the various competetive and AMIE examinations.

The Author, **Santosh Kumar Garg**, retired as Superintending Engineer from the Irrigation & Flood Control Deptt. of the Govt. of Delhi, obtained his basic degree in civil engineering from the University of Delhi in 1969, securing a **First Rank at the university** with **Record breaking percentage of marks**, getting **Certificates of merit in seven subjects**. He since remained closely associated with the planning, design and maintenance of several water resources and drainage projects of the Delhi Govt., including the Preparation of the Master plan of Drainage.



Sh. S.K. Garg is, in fact, a veteran in the field of Civil and Environmental engineering, and has eight widely acclaimed books to his credit. His books on **Water Resources Engineering (Vol. I & II)**, and **Environmental Engineering (Vol. I & II)**, are being followed in almost all the engineering colleges in India, including the prestigious IITs and NITs, and also in various Asian and African countries. His three other publications titled, **Soil Mechanics & Foundation Engineering**, **Physical and Engineering Geology**, and **Ecology & Environmental Studies**, have also gained a lot of popularity with the students and teachers alike. His publication on **River Water Disputes** is also of interest to the academicians, field engineers, and serious students desirous of getting knowledge.

KHANNA PUBLISHERS

4575/15, Onkar House, Opp. Happy School,

Darya Ganj, New Delhi-110002

Phone : 23243042 ; Fax : 23243043

E-mail: khannapublishers@yahoo.in